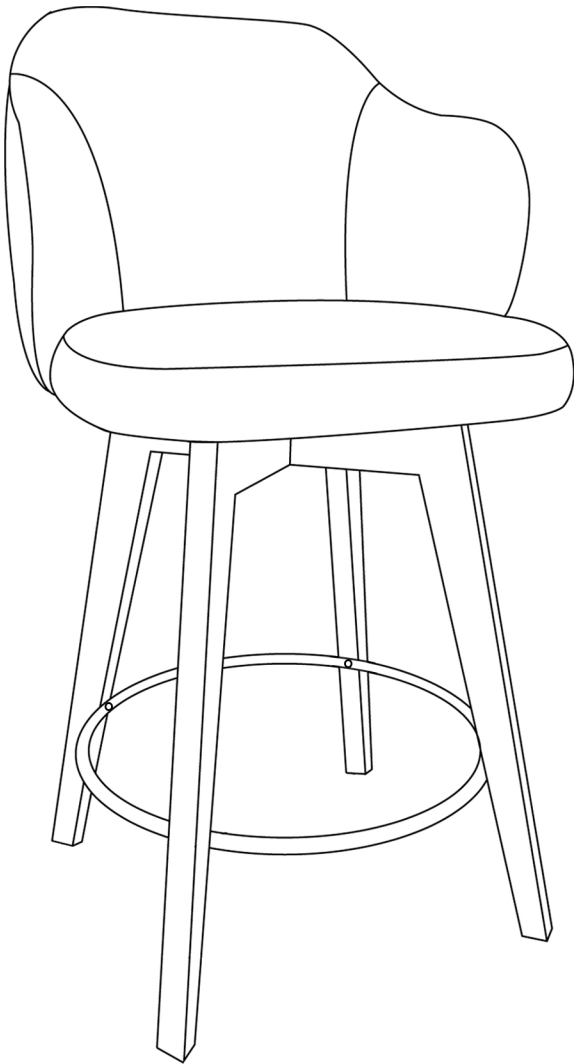


BAR STOOLS

ASSEMBLY INSTRUCTIONS



Need help? Contact us through the shopping platform.
Or email: service.furniture@outlook.com

HALF HOUR
ASSEMBLY TIME

2 PEOPLE
REQUIRED FOR ASSEMBLY

1 X 1 M
FLOOR SPACE REQUIRED

INSTALLATION SUGGESTIONS

PLEASE READ ALL THE INSTRUCTIONS CAREFULLY BEFORE ASSEMBLING AND USING THE PRODUCT.




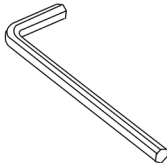
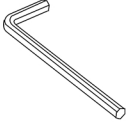
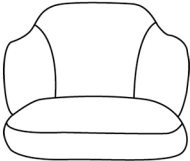
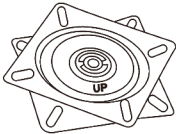
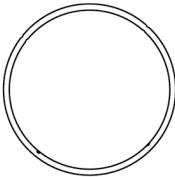

- 1. Please check whether all parts are complete according to the installation instructions.
- 2. Please ensure that the installation space is clean and flat to avoid dirt and damage to the product parts.
- 3. In each step, do not tighten bolts/screws completely until all bolts/screws are lined up and tightened 70% separately. Do not over tighten bolts/screws to avoid stripping.
- 4. We recommend that all assembled parts should be placed near the assembly location to avoid loss or forgetting while assembling.

TIPS FOR GIVING FEEDBACK

Please provide helpful information. We will give you feedback within 24h.

- 1. Describe your problem in detail and explain it with some clear multi-angle photos of the problem area.
- 2. Send your order ID and the letter number and quantity of the part in question from the parts list.
- 3. A clear photo of the side of the box that has the product information or the label on the bottom of the cushion.

PARTS AND HARDWARE LIST

 M6*55mm A*8	 M6*30mm B*4	 M6*16mm C*4	 D*8	 E*1	 F*1
 G*1	 H*4	 I*1	 J*1	 K*1	

ASSEMBLY STEPS

Assembly Tip: To ensure easy alignment, do not fully tighten any bolts until all parts are connected. Once aligned, tighten all bolts completely in a diagonal sequence to ensure stability.

Tightened to 70% STEP 1. Attach the Metal Plate (K) to the Wood Legs (H*4) using bolts (A*4).	Tightened to 70% STEP 2. Attach the Footrest (J) to the wood legs using bolts (B*4) in a diagonal sequence to ensure even tension.
Tighten all screws to 100% STEP 3. Ensure a secure fit by fully tightening the bolts in a diagonal sequence, starting with the Footrest (J) followed by the Metal Plate (K).	Note: Rotate the Swivel Plate (I) before installation. STEP 4. Attach the Swivel Plate (I) to the wood legs using a combination of bolts (A*4) and washers (D*4).
STEP 5. Attach the Swivel Plate (I) to the Seat (G) using a combination of bolts (C*4) and washers (D*4).	Tip: Leveling feet are adjustable to ensure stability on uneven surfaces. STEP 6. Congratulations! You' ve successfully assembled your premium barstool. It will add a touch of style and comfort to your space.

WARRANTY TERMS & CONDITIONS

- 1. We provide warranty for the product for one year.
- 2. The warranty period starts on the delivery date.
- 3. If the product has quality problems, contact us and we promise we will solve it for you.

CORRECT SITTING POSITION

