



ASSEMBLY INSTRUCTIONS

FULL FLOOR BED WITH SHELVES








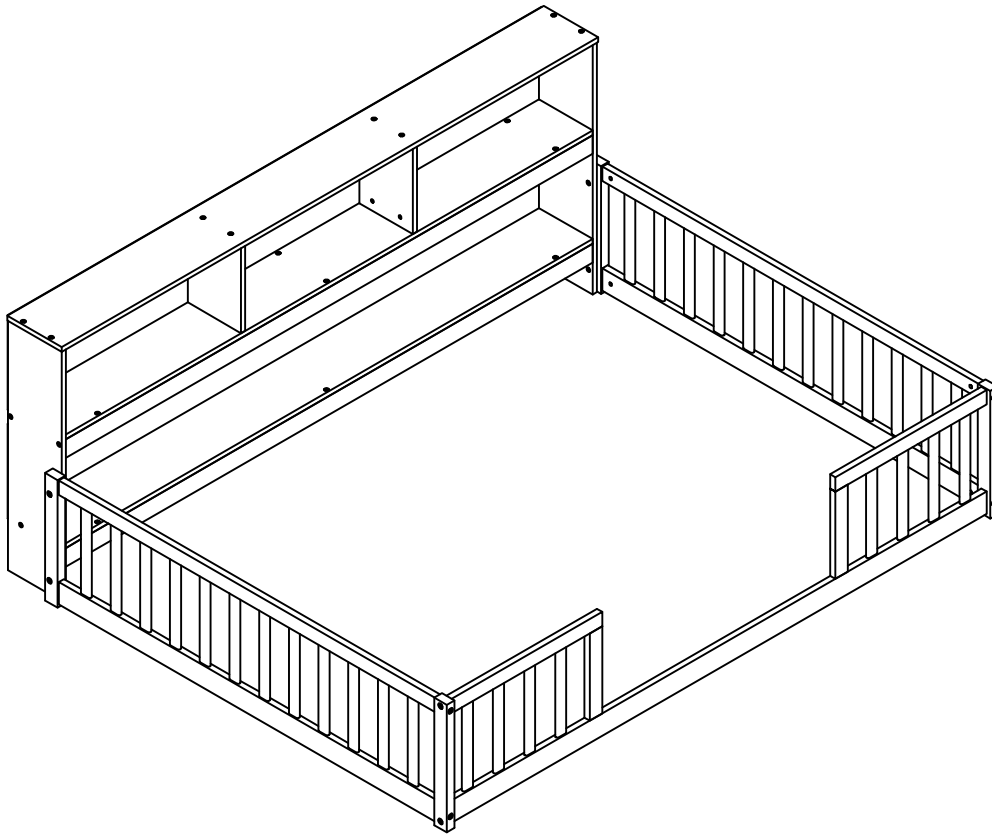


SA33821




Detail View

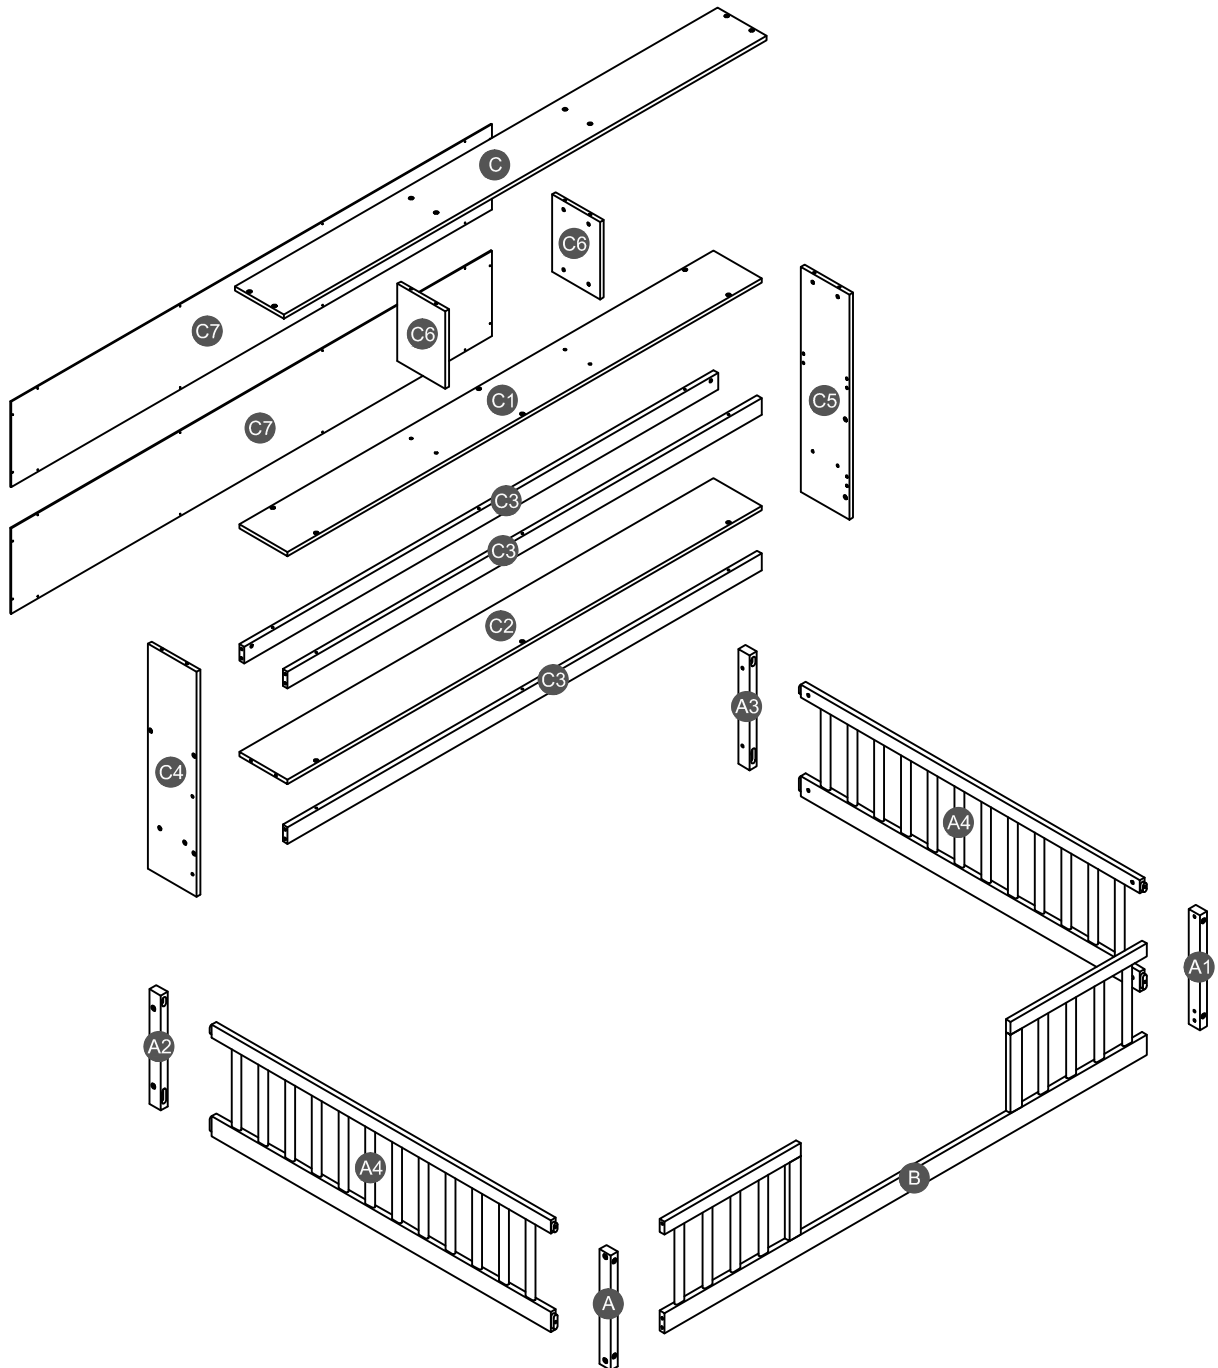


Part List

A  Leg (Left Front) - 1pc	A1  Leg (Right Front) - 1pc	A2  Leg (Left Back) - 1pc
A3  Leg (Right Back) - 1pc	A4  Frame HB/FB - 2pcs	B  Guard rail (Front) - 1pc
C  Top panel - 1pc	C1  Shelf panel - 1pc	C2  Bottom panel - 1pc
C3  Horizontal bar - 3pcs	C4  Side panel (Left) - 1pc	C5  Side panel (Right) - 1pc
C6  Divider panel - 2pcs	C7  Back panel - 2pcs	

Hardware List


1  Ø8*30mm Wood dowel (8pcs)	2  (Ø15)1/4"*80mm Hex-Head bolts (12pcs)	3  (Ø12)1/4"*60mm Hex-Head bolts (22pcs)
4  (Ø12)1/4"*40mm Hex-Head bolts (4pcs)	5  1/4"*15 (9.5mm) Horizontal-Hole bolts(34pcs)	6  (Ø12)1/4"*40mm Hex-Head bolts (9pcs)
7  Ø3.5*15mm Wood screws (24pcs)	8  (1/4")4.5*58mm Allen key (1pc)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

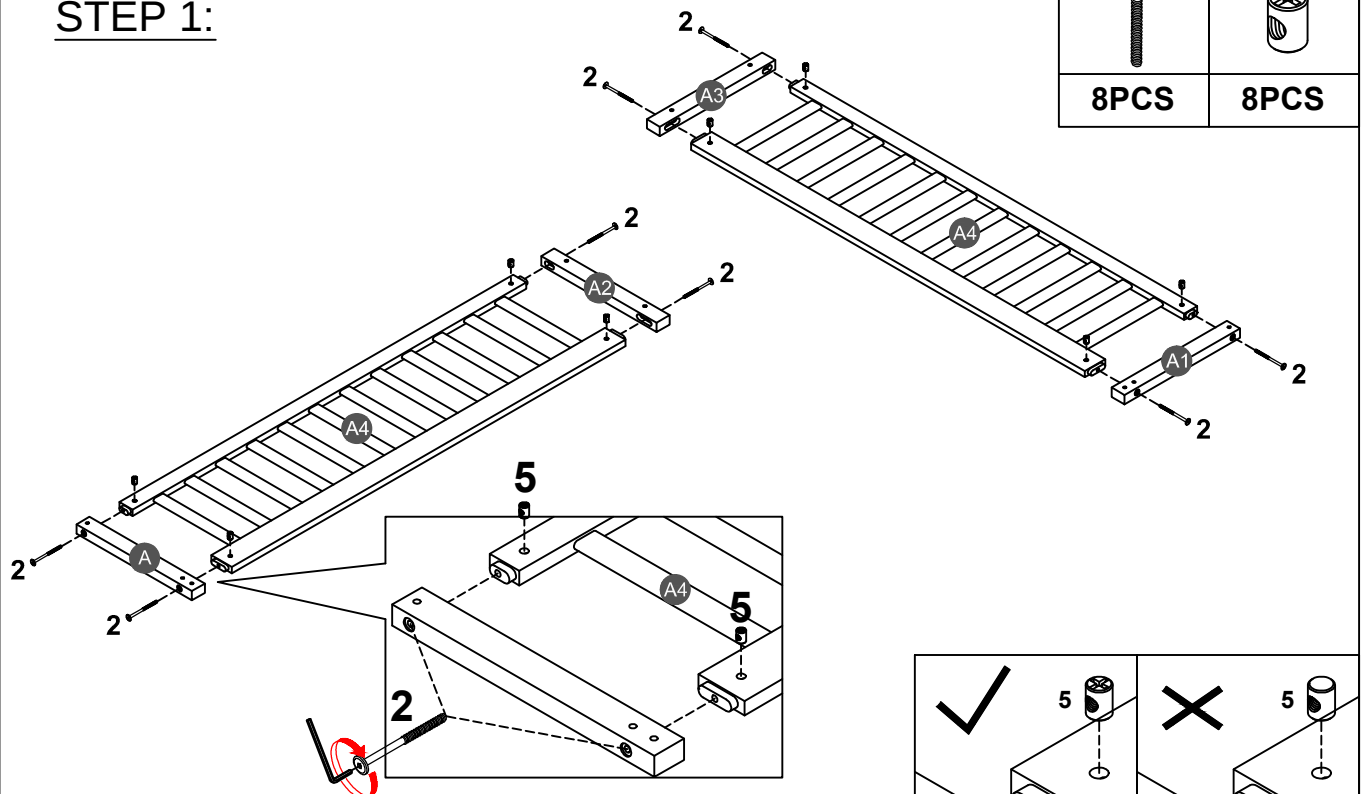

Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened

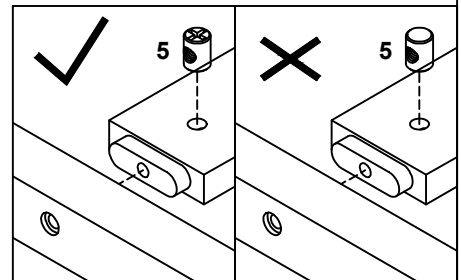


STEP 2:

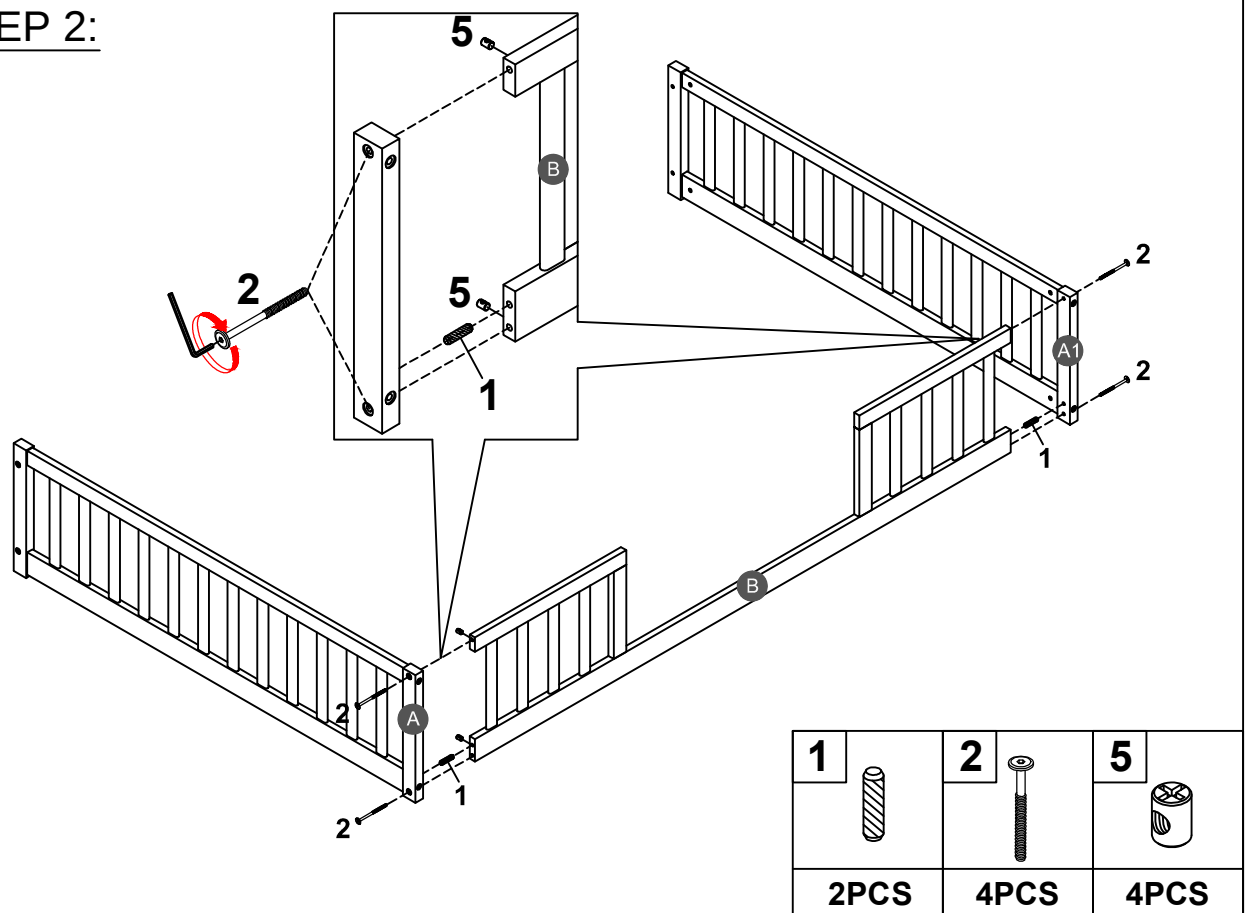


STEP 3:

1		3		5	
6PCS		10PCS		10PCS	

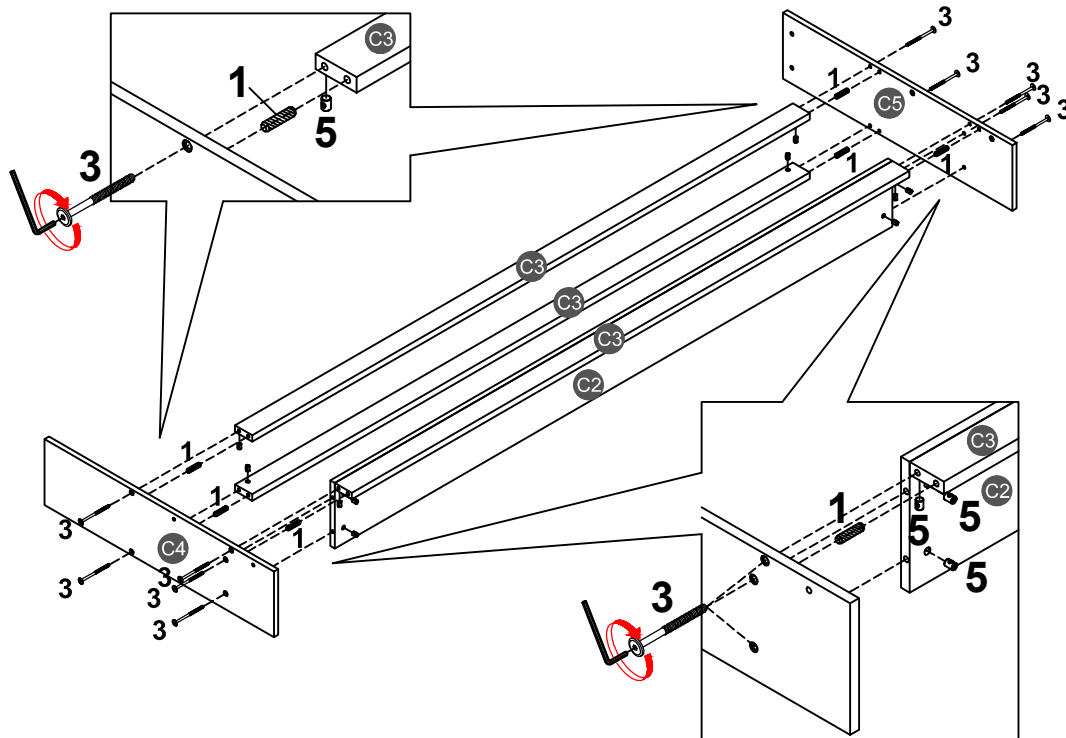

STEP 4:

6	
3PCS	

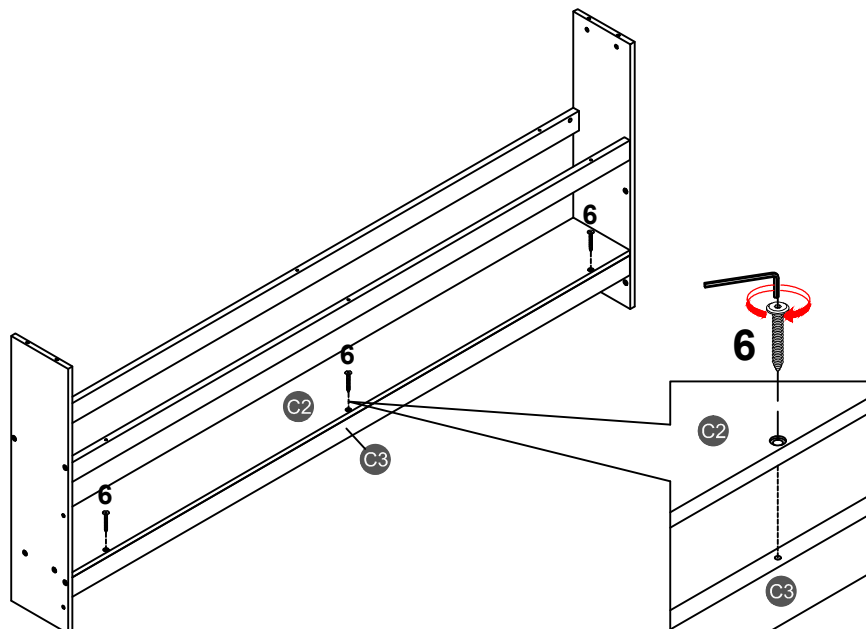


STEP 5:

6



6PCS

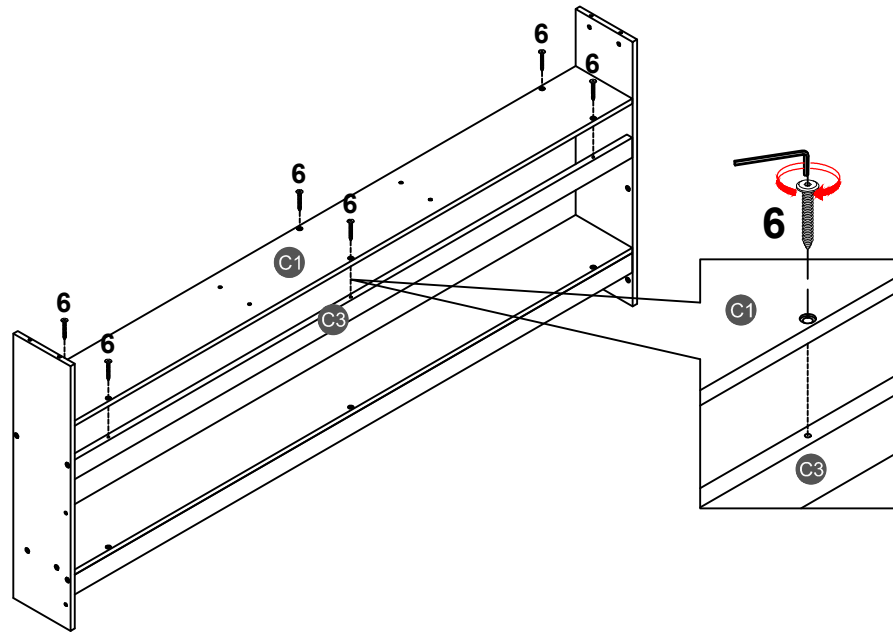

STEP 6:

3




4PCS


5



4PCS

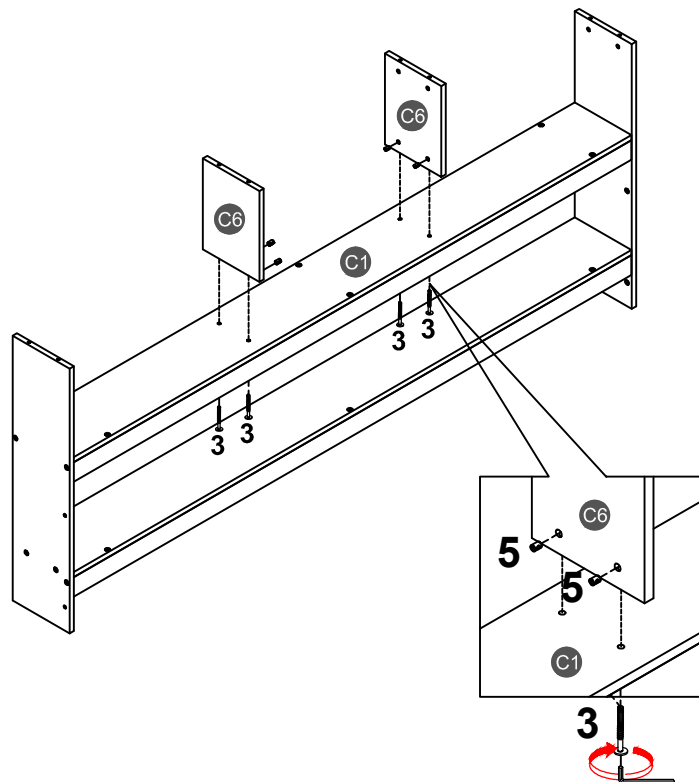


STEP 7:

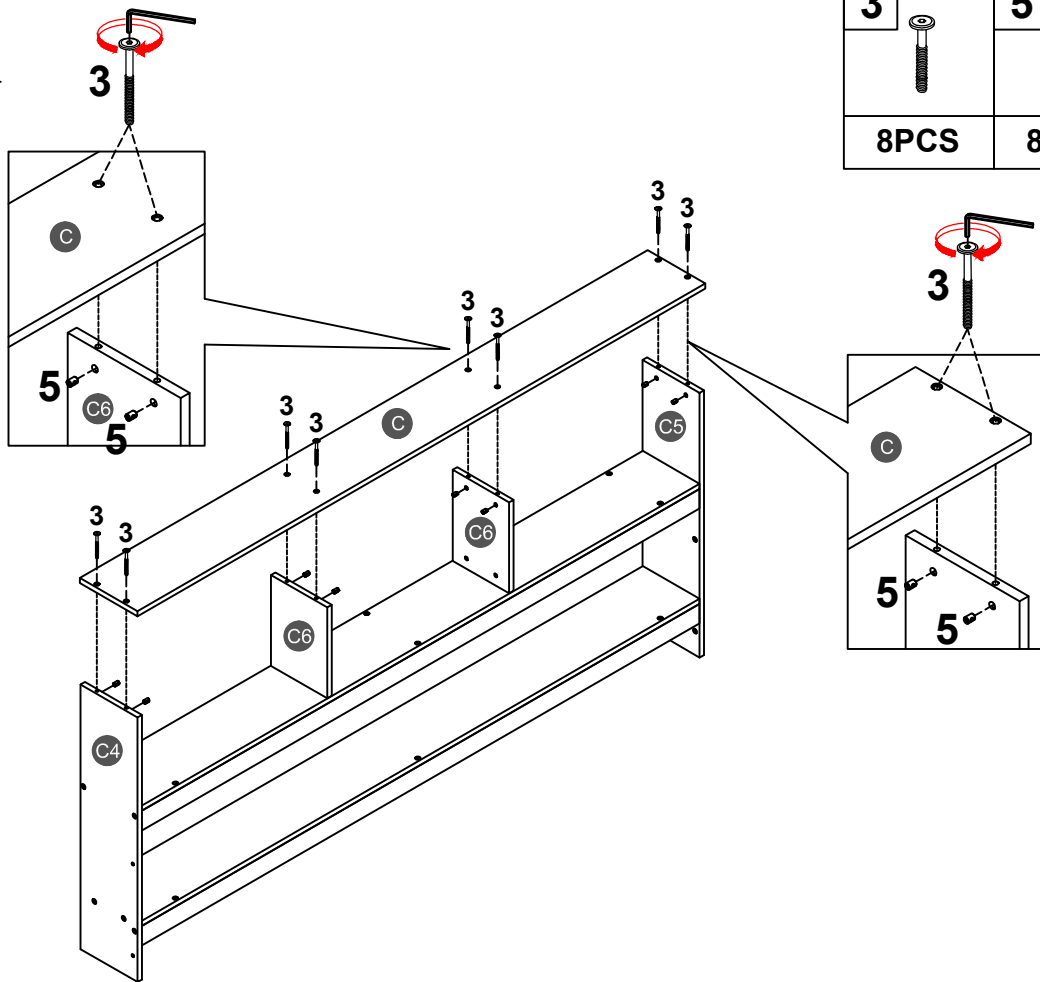

3	5
	
8PCS	8PCS


STEP 8:

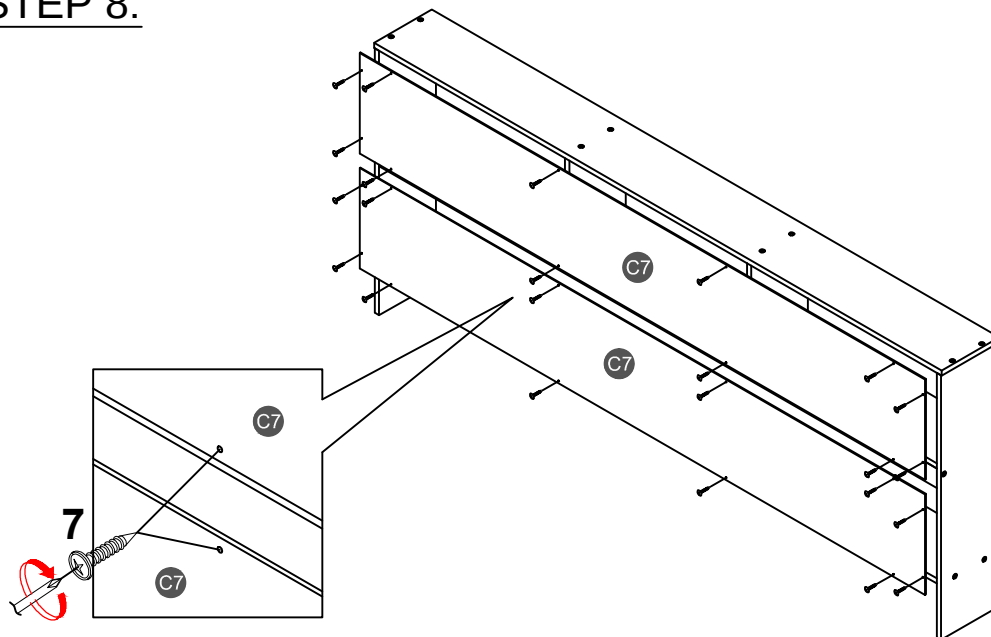


7

24PCS

STEP 9:

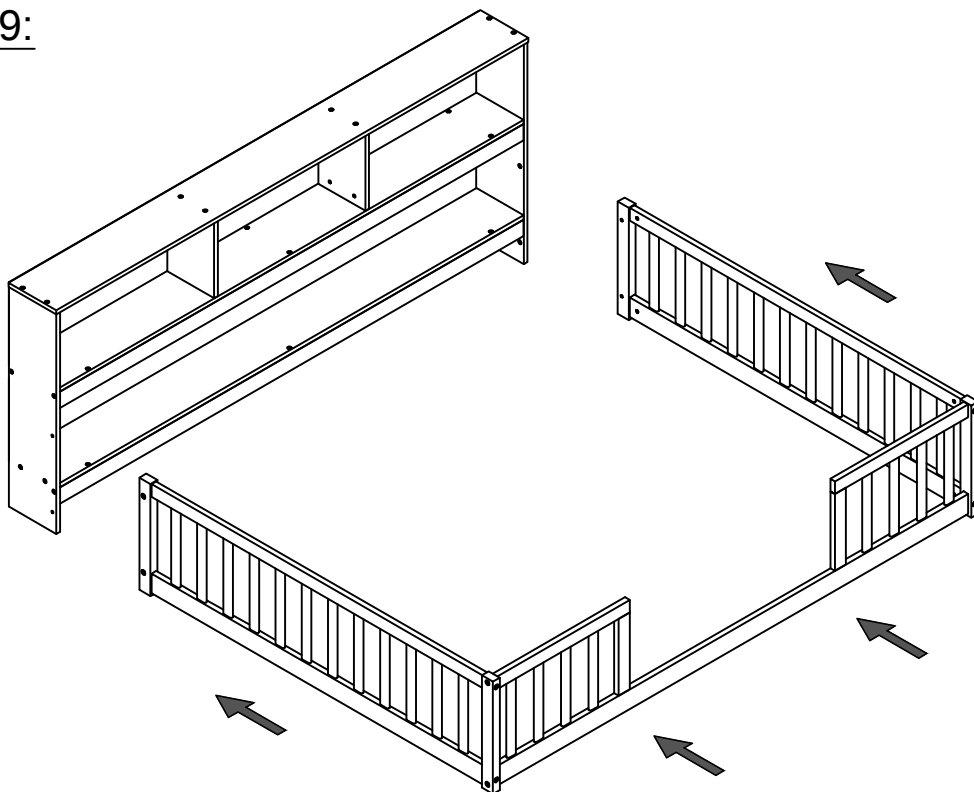

STEP 10:

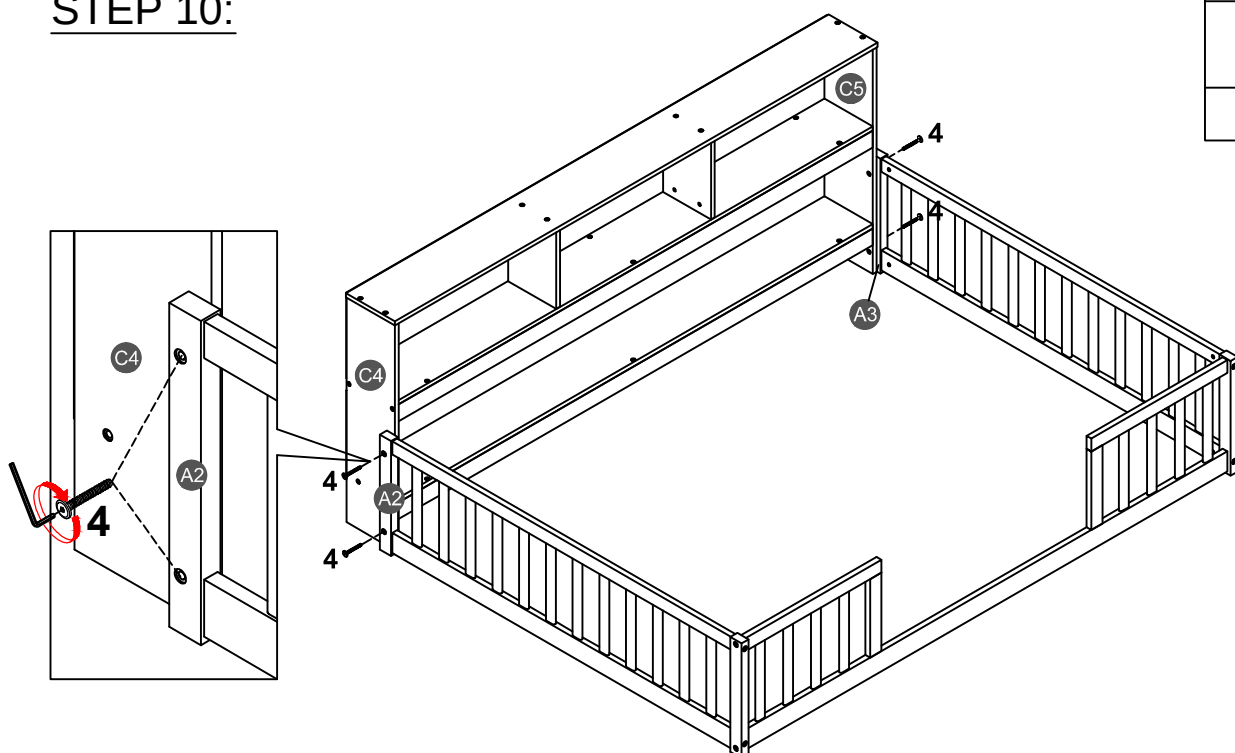

4



4PCS