


DINING CHAIR

2 PCS/CARTON

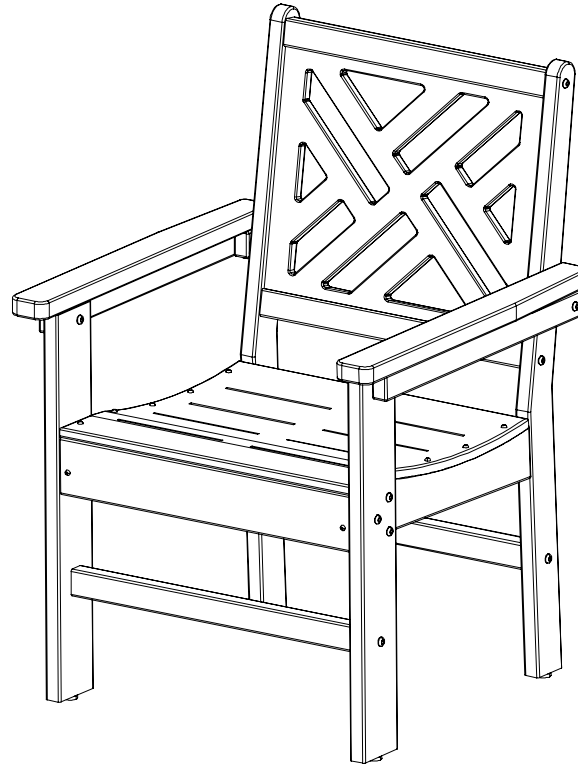

INSTALL MANUAL

MATERIAL:HDPE

After-sales mailbox : support@myvip.ink










If you have any questions, please contact our after-sales team by email. we will provide solutions asap.

IMPORTANT NOTICE


We recommend 1 or more people to install.


- Please follow the instruction manual and use a pad to avoid damage during assembly
- Fasten screws loosely during initial assembly. Do not firmly tighten the screws until the item completely assembled.
- Firmly secure all bolts, screws and knobs before use.
- We recommend wearing protective gloves.
- Be aware that some parts are heavy and have sharp edges.
- Keep away from fire and other heat sources.

PARTS LIST FOR A CHAIR

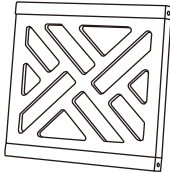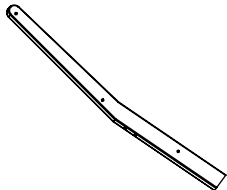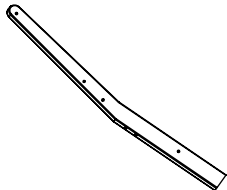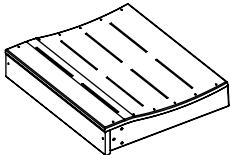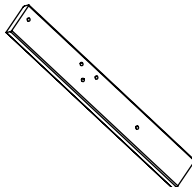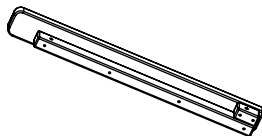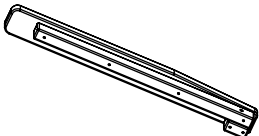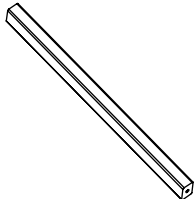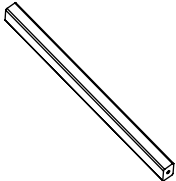
1 x 1pc backrest 	2 x 1pc left leg 	3 x 1pc right leg 	4 x 1pc seat 
5 x 2pcs front leg 	6 x 1pc left rail 	7 x 1pc right rail 	8 x 1pc front Rail 
9 x 1pc Back Rail 			

HARDWARE LIST FOR A CHAIR


A x16+1pcs M6 x 40mm 	B x2pcs M6 x 70mm 	C x4pcs M6 x 80mm 	D x1pc Allen Wrench 	E x4pcs Leveling Feet 
---	--	--	--	--

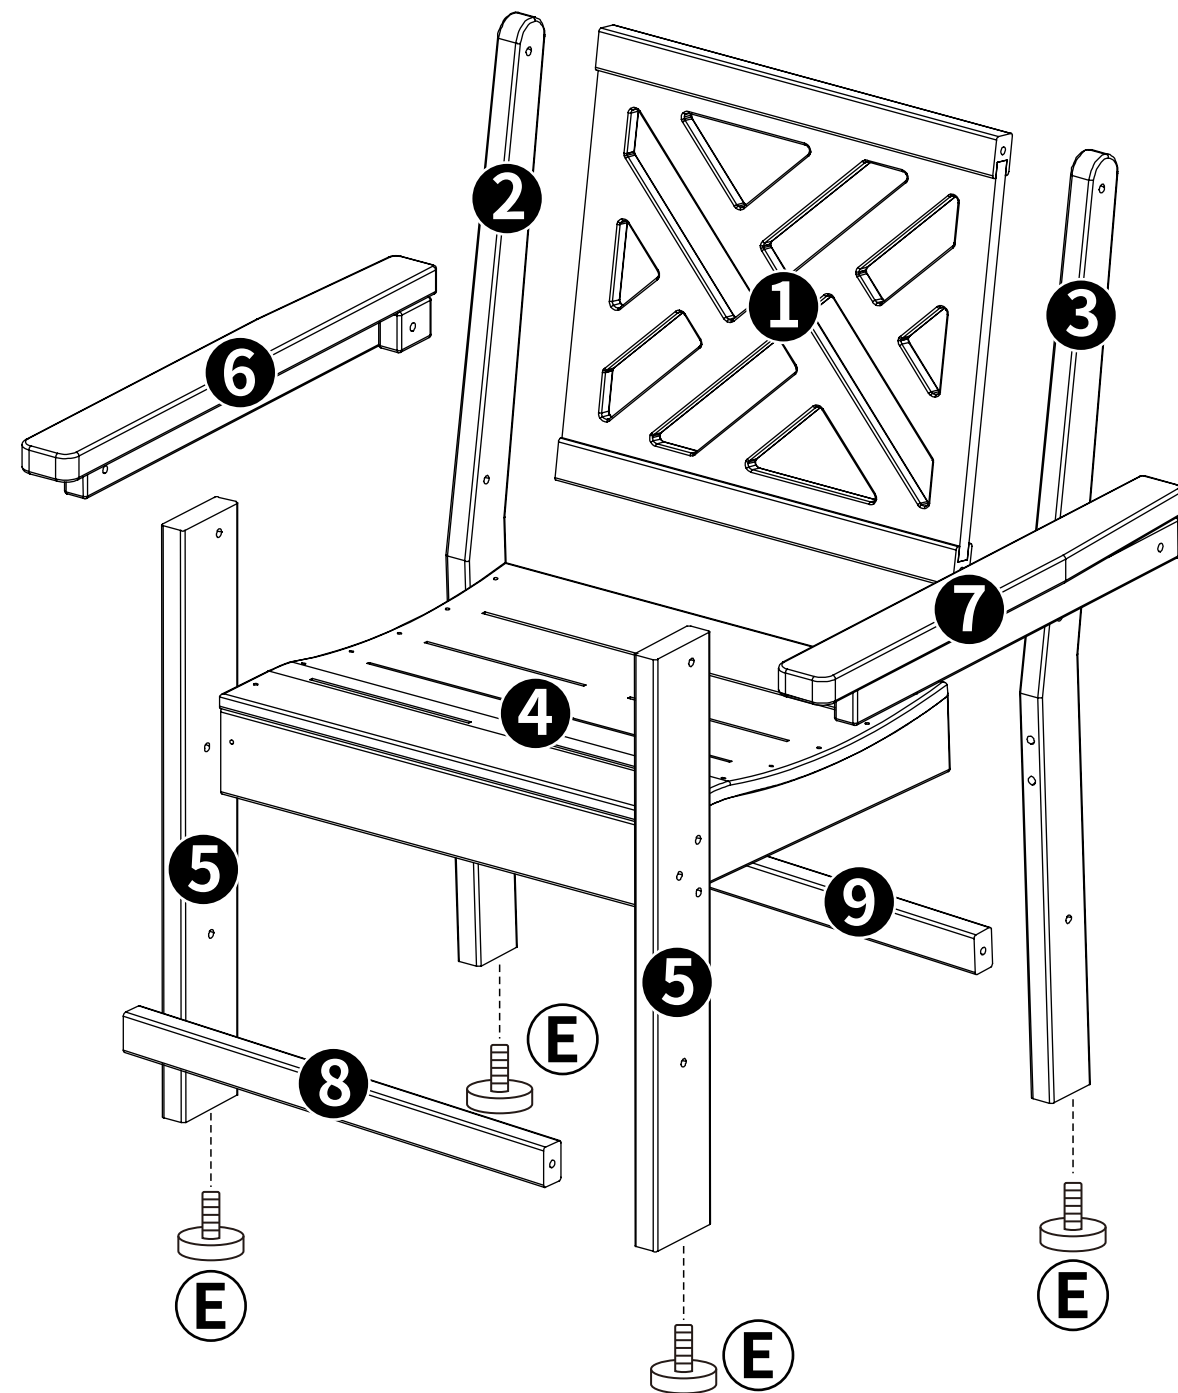

Weather
Resistant

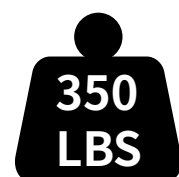

350 LBS
Load-bearing

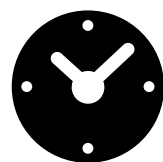


Install
Quickly

STEP 1


A — x 4

D — x 1

Tighten the screws
to 80%, not fully.



Note: The back of the label


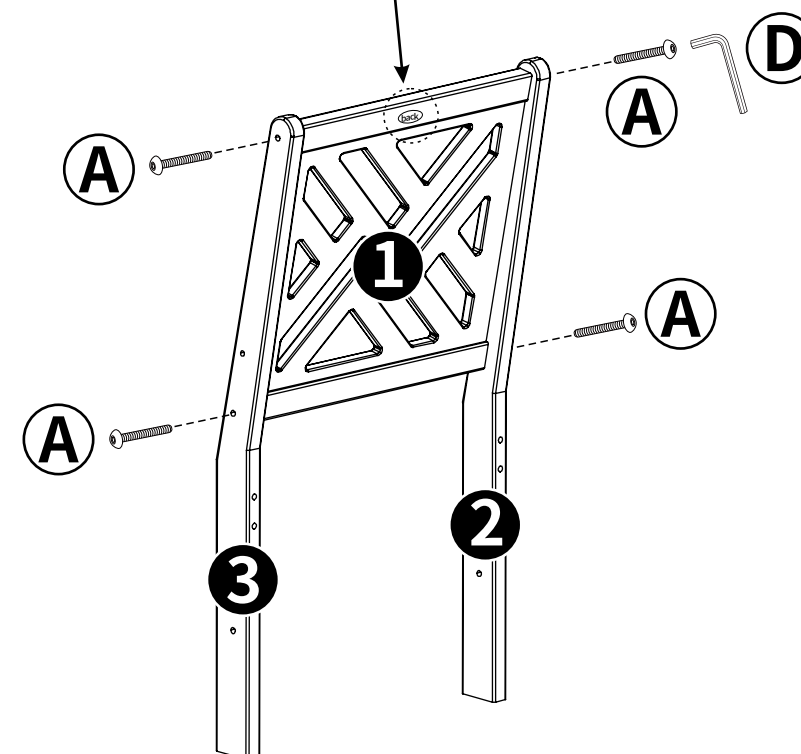


STEP 2

C — x 4

D — x 1



Tighten the screws
to 80%, not fully.

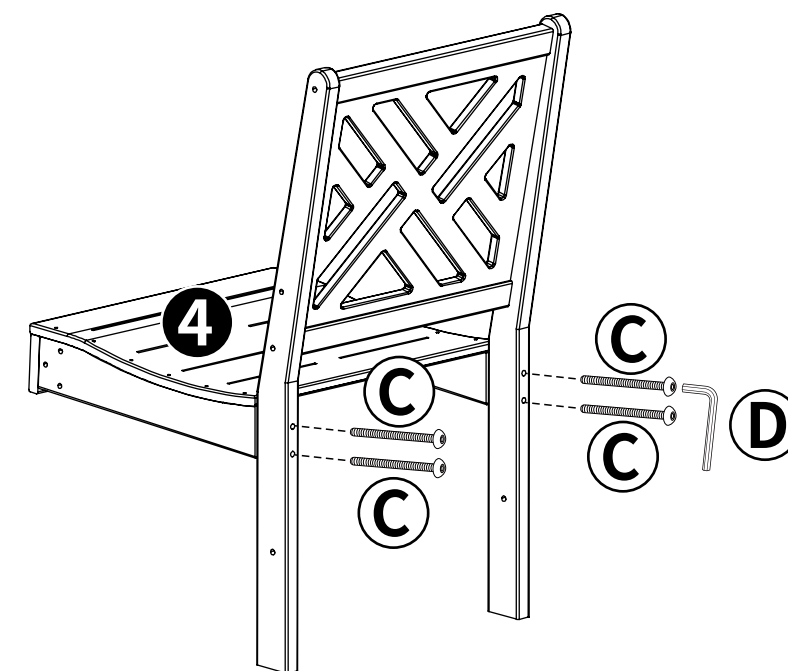

STEP 3

- A  x 6
- D  x 1



Tighten the screws to 80%, not fully.

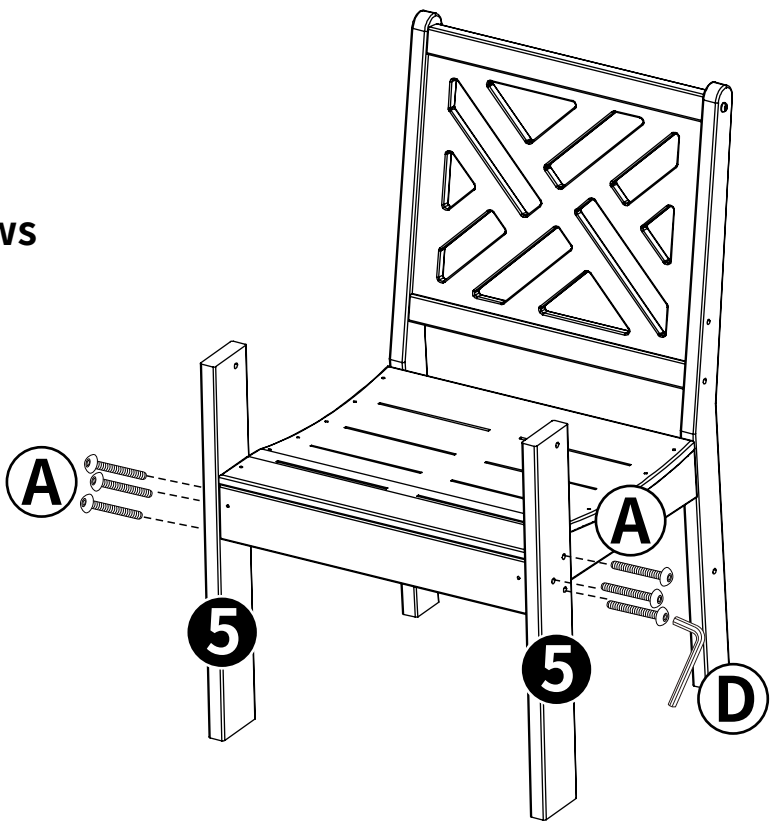

STEP 5

- A  x 4
- D  x 1

Tighten the screws to 80%, not fully.

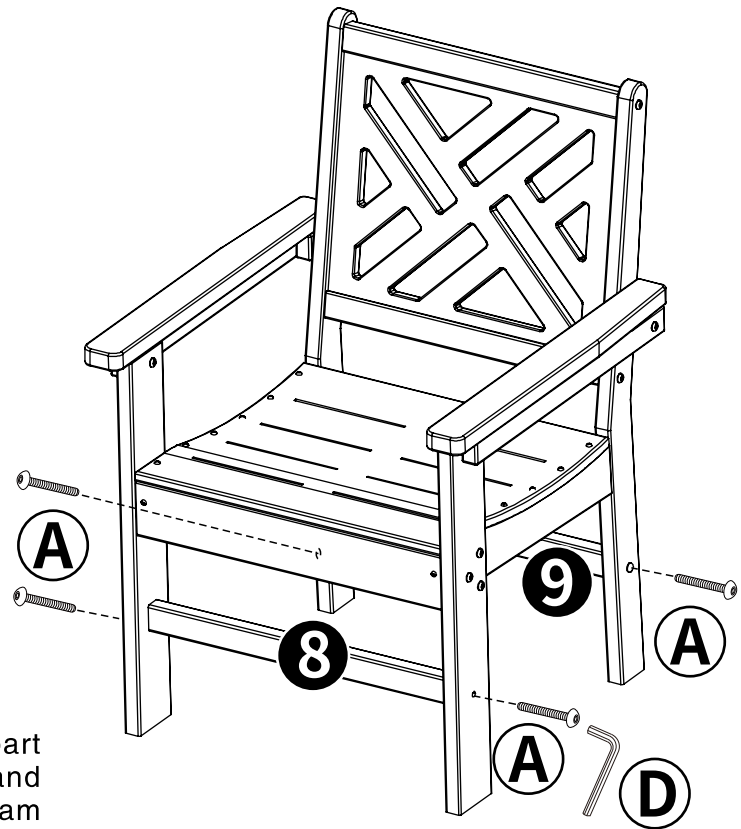



Part 8 (the front rail) is longer than part 9 (the back rail) When installing 8 and 9, make sure the wide side of the beam is facing vertically.

STEP 4

- A  x 2
- B  x 2
- D  x 1

Tighten the screws to 80%, not fully.

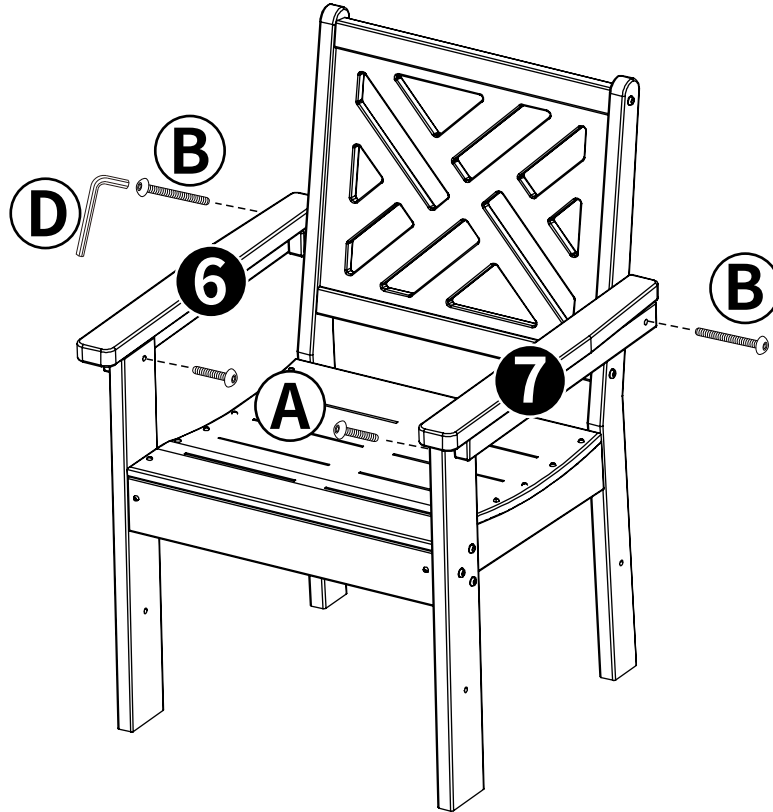



When installing the armrest, the wide end should face forward and the narrow end should face inward. The holes on the front side of the armrest should be installed from the inside to the outside.

STEP 6

- E  x 4

Tighten the screws to 80%, not fully.

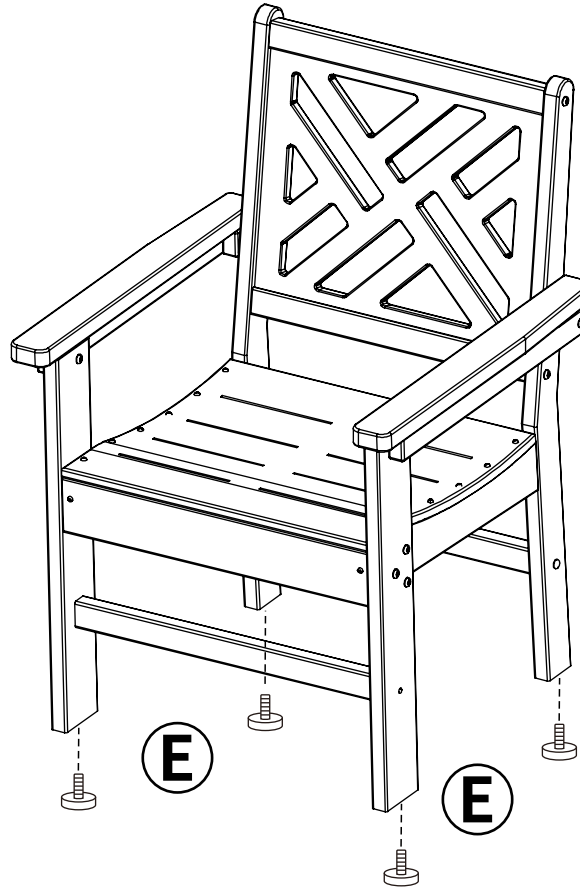

FINISHED
Tighten all screws fully in step 123456

