

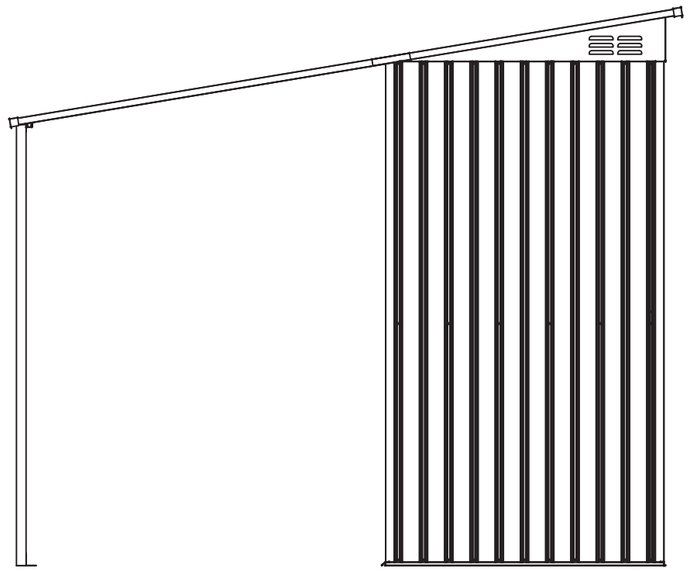


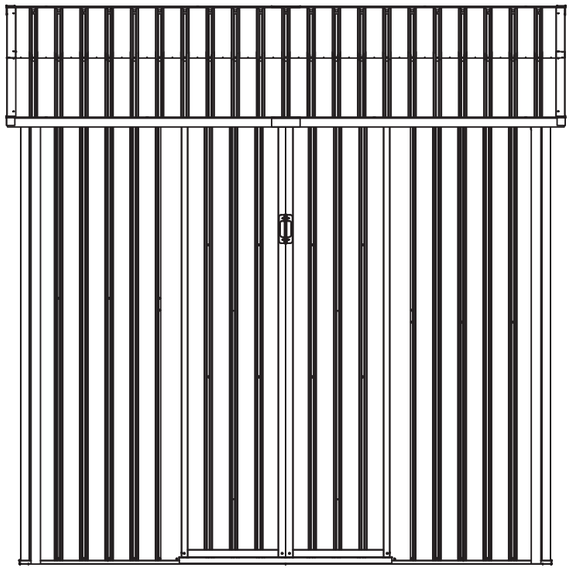

Storage Shed Installation_SS16614

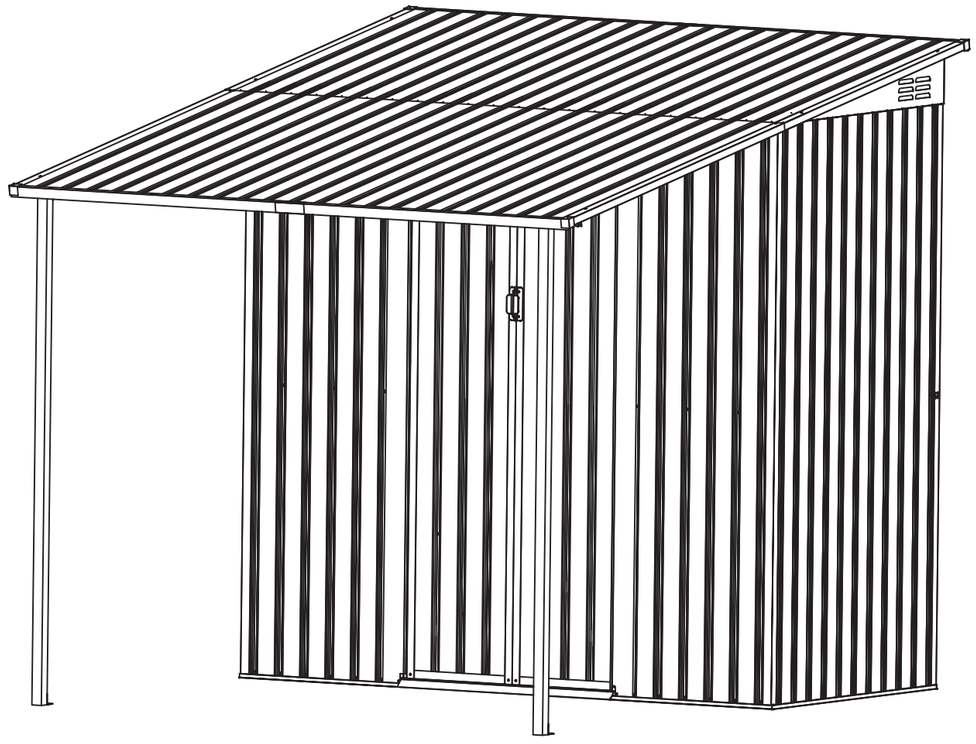


The product comes in two packages.
Please install after receiving all packages.

Please prepare below tools before installation.(Not Included)



Electric Screwdriver



+ Manual Screwdriver




Ladder

Package included Tools



Gloves x 1 Pair



Spanner x 1

ATTENTION:

Please read this instruction carefully before installation and follow it strictly during installation. Ensure that there are no problems later due to installation errors.

Installation Notes

Please check the quantity of all parts before installation (Please refer to the Parts Lists) and the appearance of the products. Please make sure the product is correct before installation. If there is any problem, please contact us directly.

Make sure the colored panels are facing outwards and all the holes match. The panels are textured, please install the panels in the order specified in the instructions. All lines and holes must be accurately matched to make the storage shed more stable. Please ensure that all screws are tightened to prevent the product from falling apart.

There is a protective film on the surface to protect the product, please tear it off after installation to get the final presentation. If you do not damage the film during installation, it can also remain on the product to protect the product.


Please place the product on a flat ground to prevent leaning and collapse. If the ground is uneven, the door may can't be closed.

⚠ Safety Precautions

We recommend two adults to complete the installation.Two adults installed together will make the installation process easier and safer.
The gloves must be carried to prevent hand cuts during installation.
Take care when using power tools near water the use of a residual current device(RCD) is advised.
Please use the electric driver carefully during screwing to prevent the screw from slipping and hurting your hand.(We recommend that beginners use a manual screwdriver for installation.)
Be careful not to fall when installing the roof. Please steady the ladder and make sure the product placed on a flat ground.

PLEASE KEEP THIS INSTRUCTION FOR FUTURE REFERENCE.

Part List

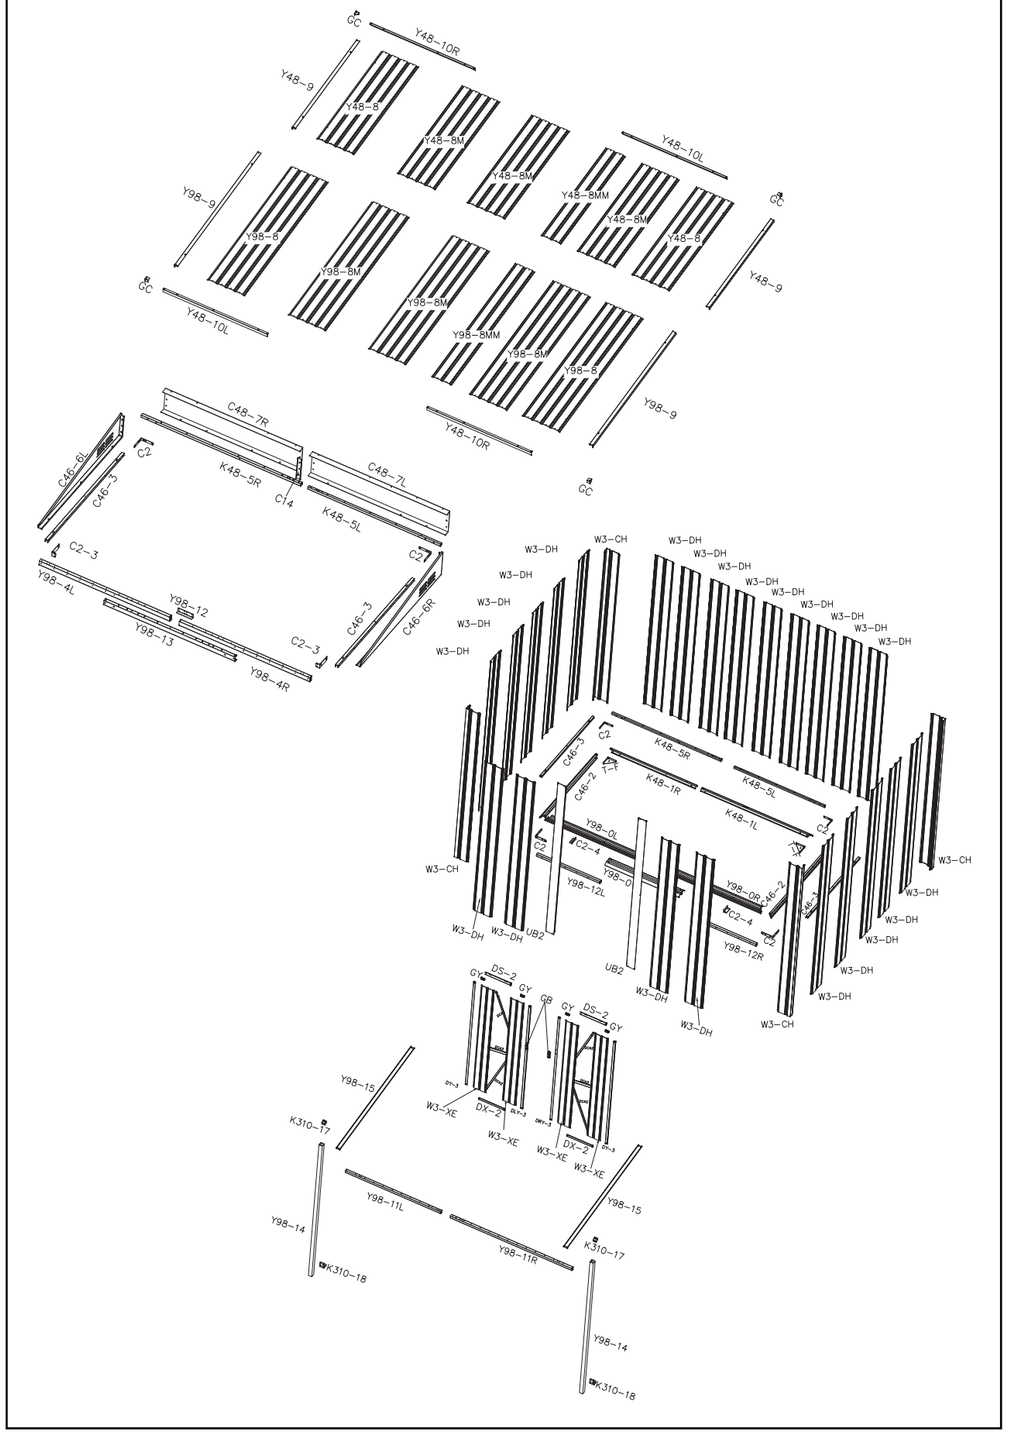

Part List (A)

PART	NO.	QTY.
	W3-CH	4
	W3-DH	23
	W3-XE	4
	Y98-14	2
	UB2	2
	DLY-3	1
	DRY-3	1
	DY-3	2

Part List (B)


PART	NO.	QTY.
	Y48-8	2
	Y48-8M	3
	Y48-8MM	1
	Y98-8	2
	Y98-8M	3
	Y98-8MM	1

PART	NO.	QTY.
	Y98-0	1
	Y98-0L	1
	Y98-0R	1
	K48-1L	1
	K48-1R	1
	C46-2	2

Part List (B)

PART	NO.	QTY.
	C46-3	4
	Y98-4L	1
	Y98-4R	1
	K48-5L	2
	K48-5R	2
	C46-6L	1
	C46-6R	1
	C48-7L	1
	C48-7R	1
	Y48-9	2
	Y98-9	2
	Y48-10L	2
	Y48-10R	2
	Y98-11L	1
	Y98-11R	1
	Y98-12L	1
	Y98-12R	1
	Y98-13	1
	Y98-15	2
	DS-2	2

PART	NO.	QTY.
	DX-2	2
	DCA2	4
	DCA3	2
	Y98-12	1
	T-F	2
	C2	6
	C2-3	2
	C2-4	2
	C14	1
	K310-17	2
	K310-18	2
	GC	4
	GY	4
	GB	2
	F1	381
	V2	81
	F2	15
	M4	1
	ST	2
	ø4.5*180 (PZ1)	4

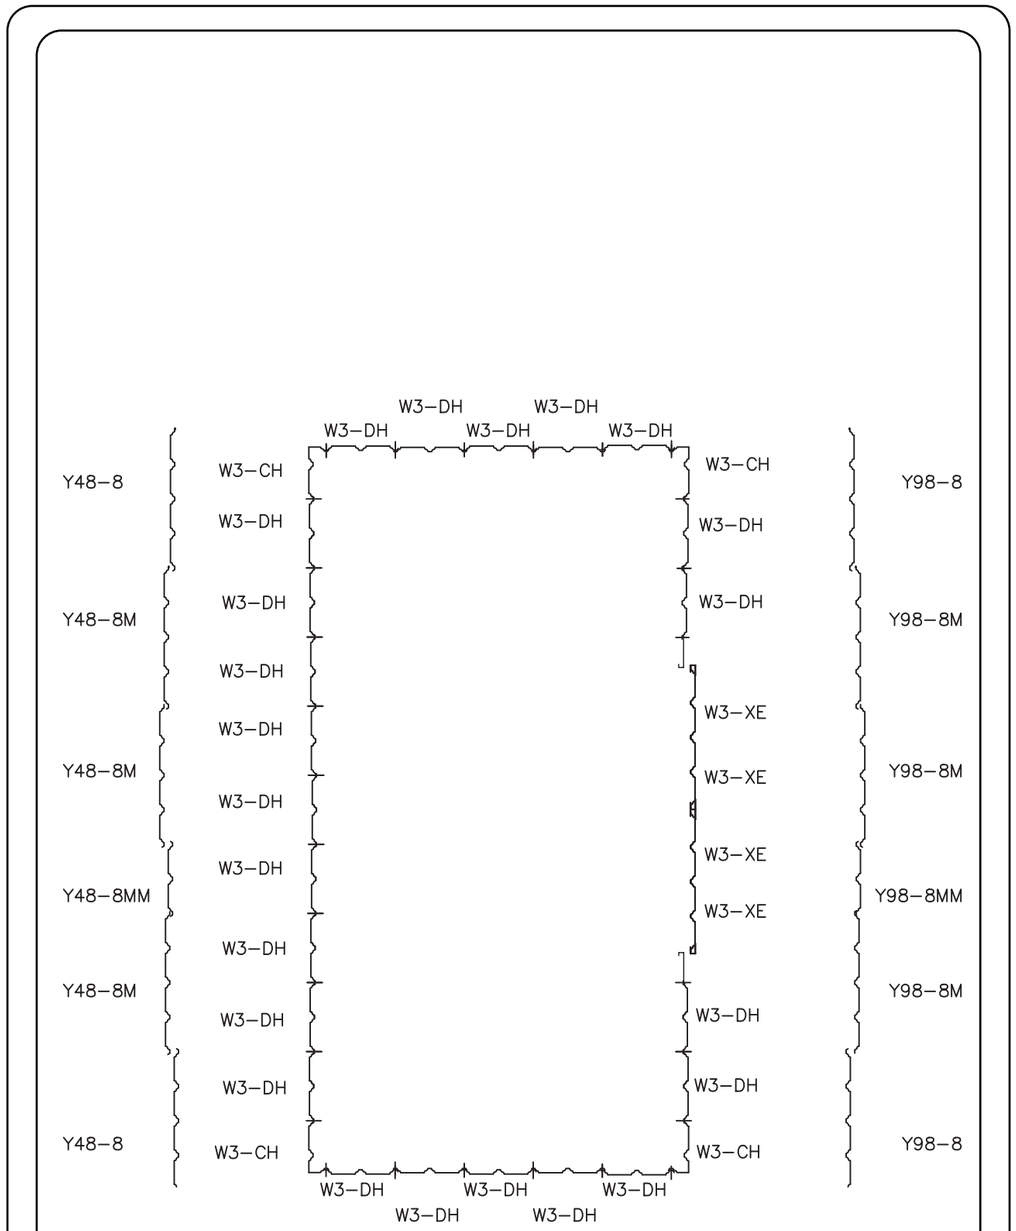


Shed Base Frame Assemble

PART	NO.	QTY.
	Y98-0	1
	Y98-0L	1
	Y98-0R	1
	K48-1R	1
	K48-1L	1
	C46-2	2
	C2-4	2
	T-F	2
	F1	27
F1:ST4.2*10		


Shed Side Panels Assemble

PART	NO.	QTY.
	W3-DH	2
	W3-CH	2
	F1	6
F1:ST4.2*10		

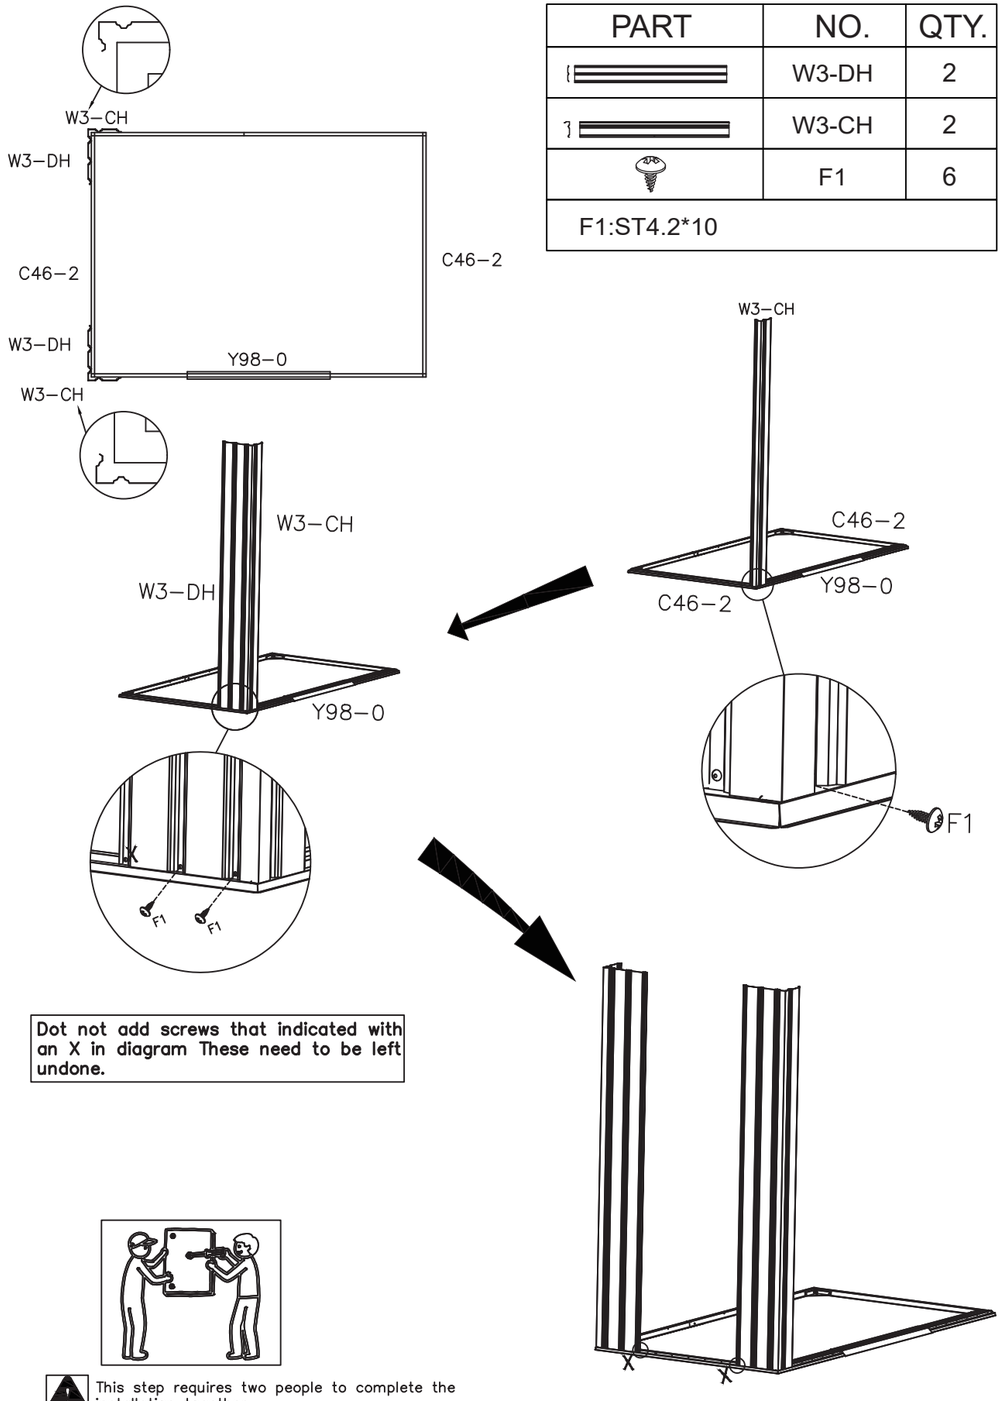


Dot not add screws that indicated with an X in diagram These need to be left undone.


This step requires two people to complete the installation together.

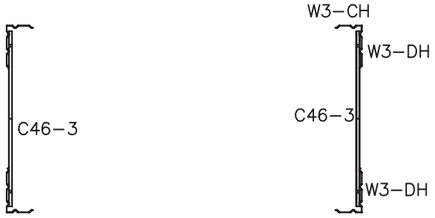


PART	NO.	QTY
	C46-3	2
	W3-DH	2
	W3-CH	2
	F1	10
F1:ST4.2*10		

Dot not add screws that indicated with an X in diagram These need to be left undone.

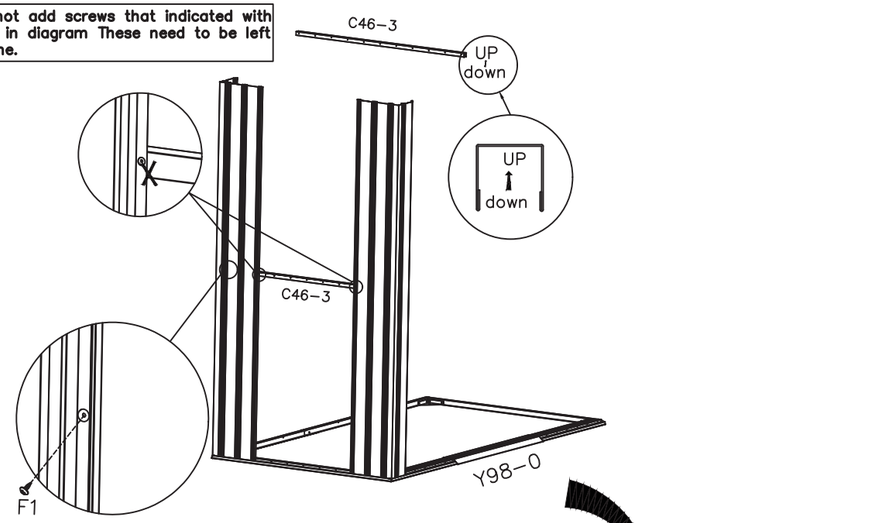

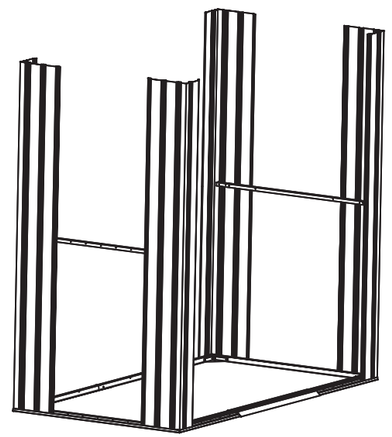


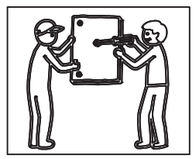


This step requires two people to complete the installation together.




PART	NO.	QTY
	K48-5R	1
	K48-5L	1
	C2	2
	F1	12
F1:ST4.2*10		

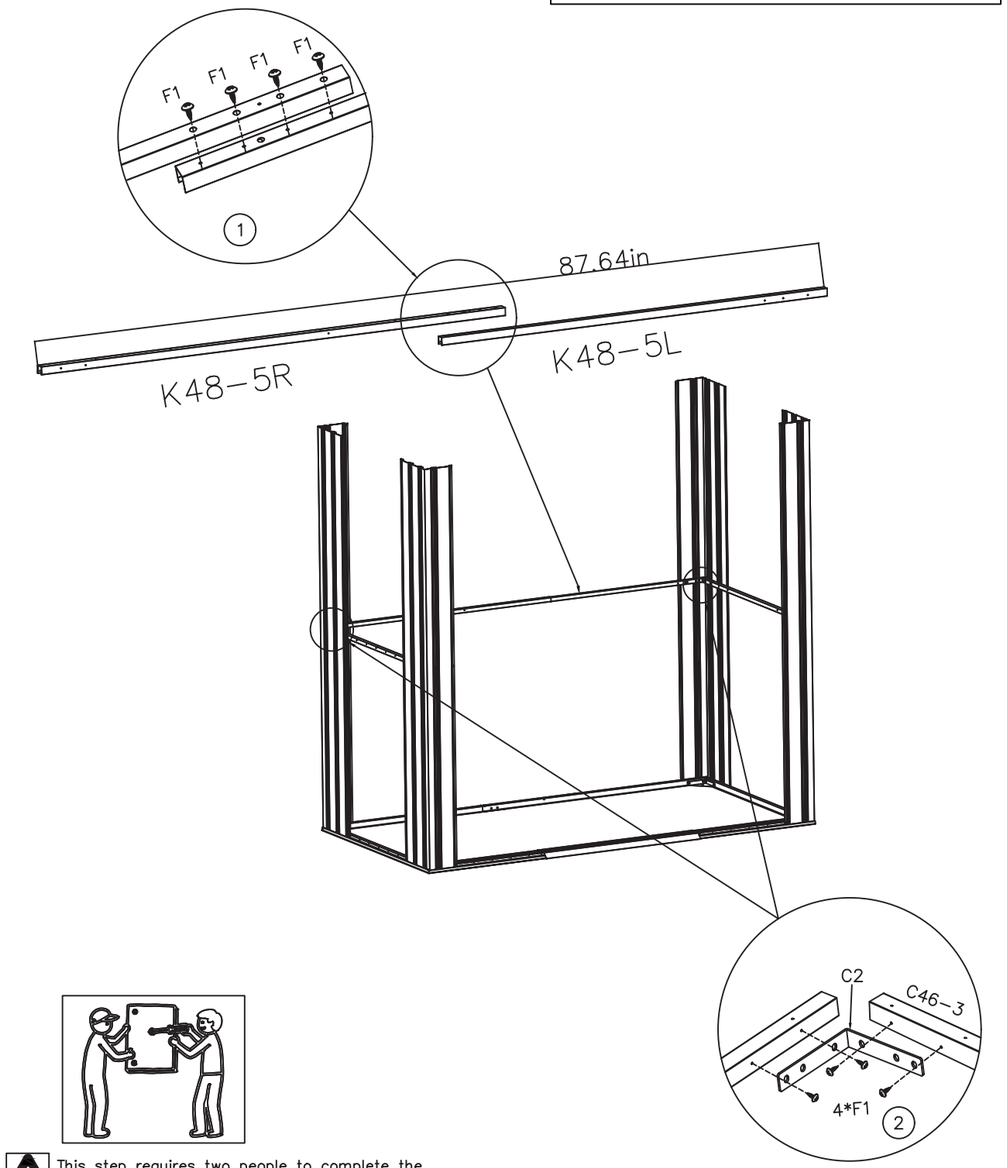


This step requires two people to complete the installation together.

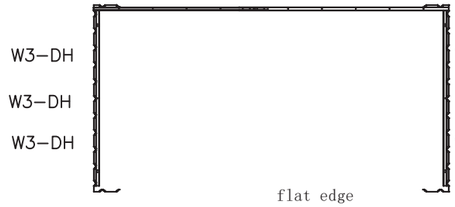



PART	NO.	QTY
	W3-DH	6
	F1	22
F1:ST4.2*10		

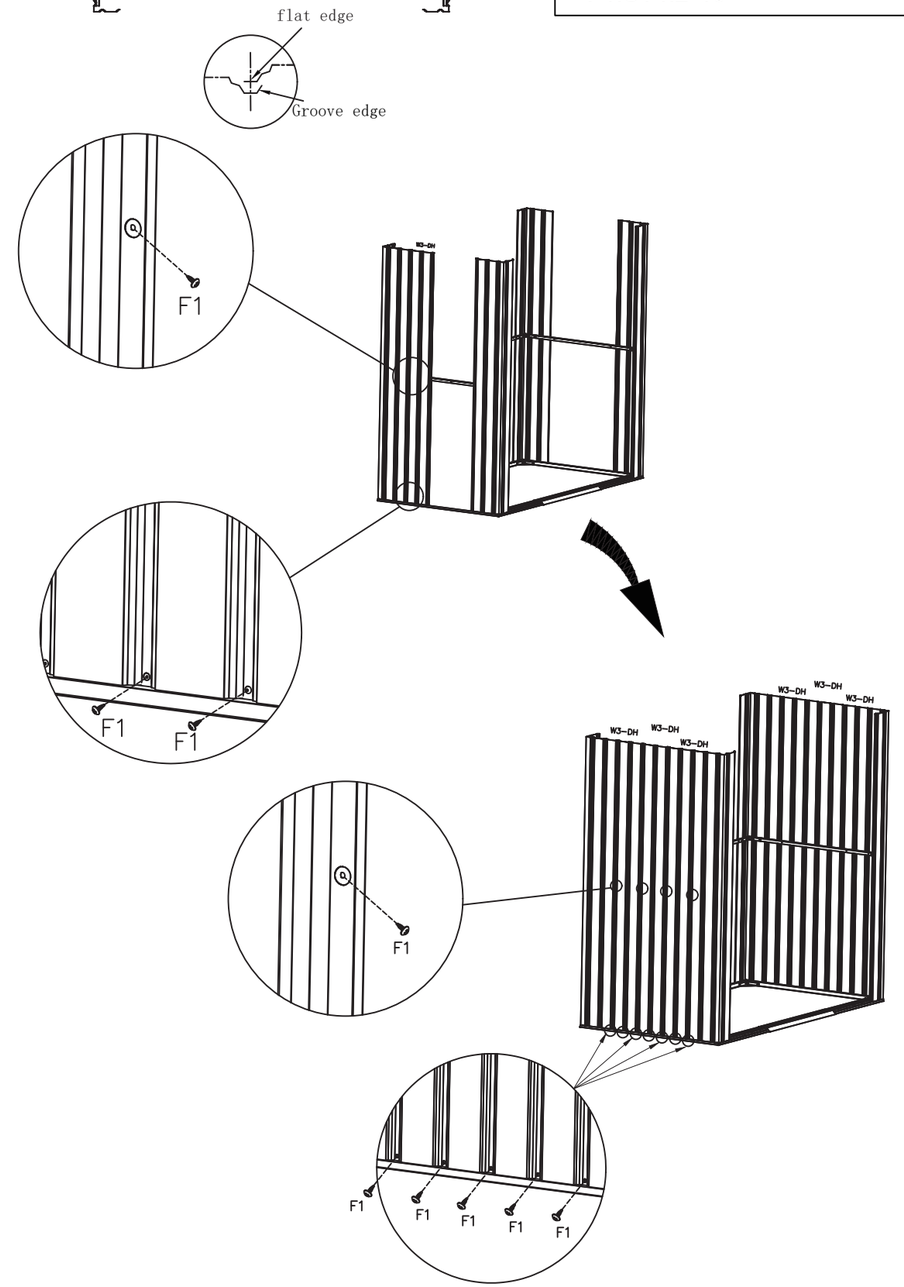


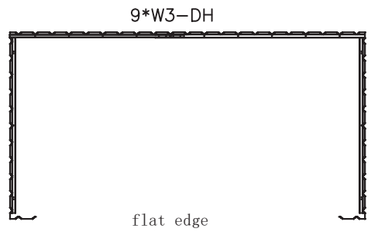


PART	NO.	QTY
	W3-DH	9
	F1	29
F1:ST4.2*10		

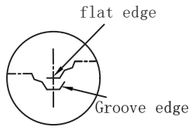

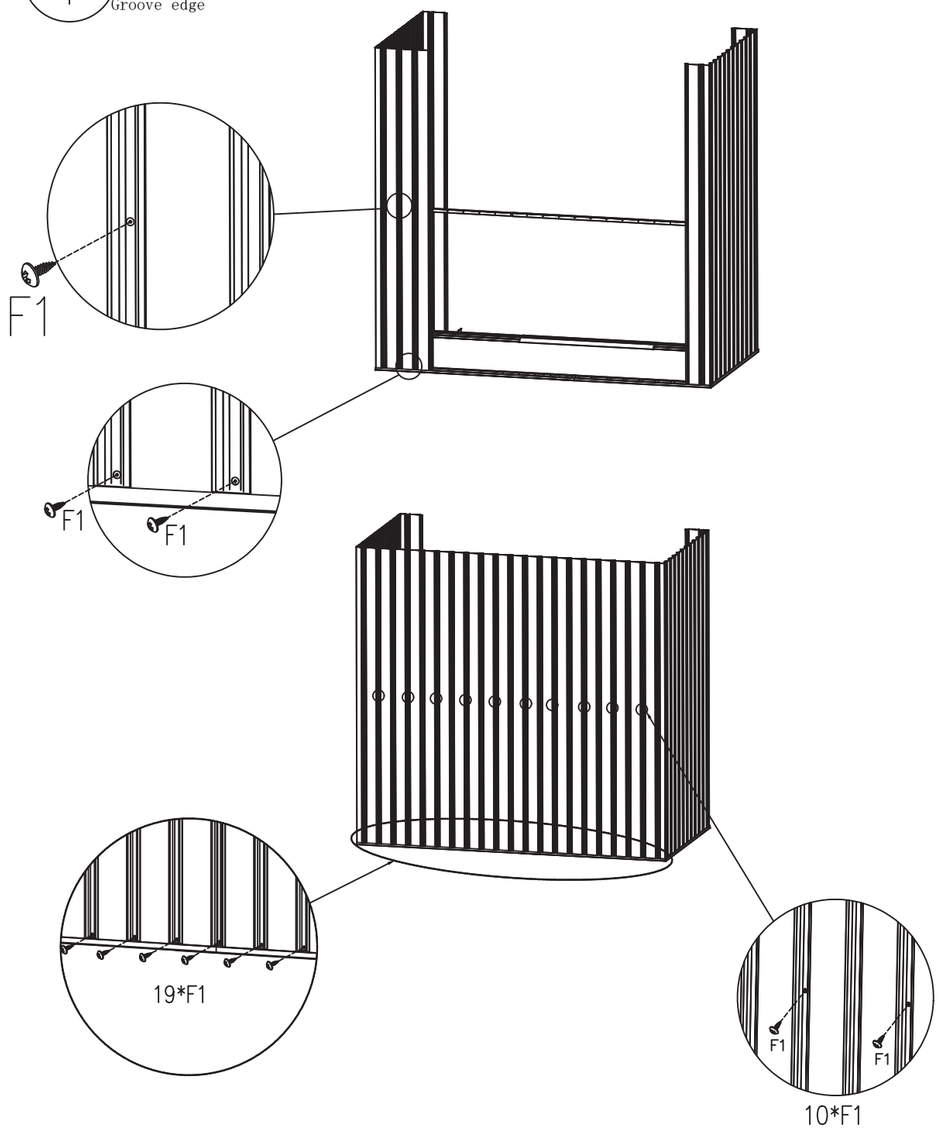

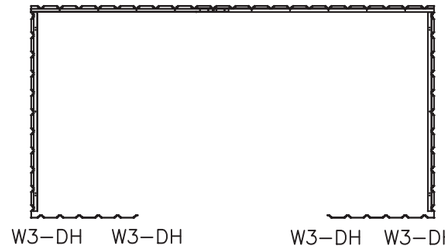



PART	NO.	QTY
	W3-DH	4
	F1	8
F1:ST4.2*10		

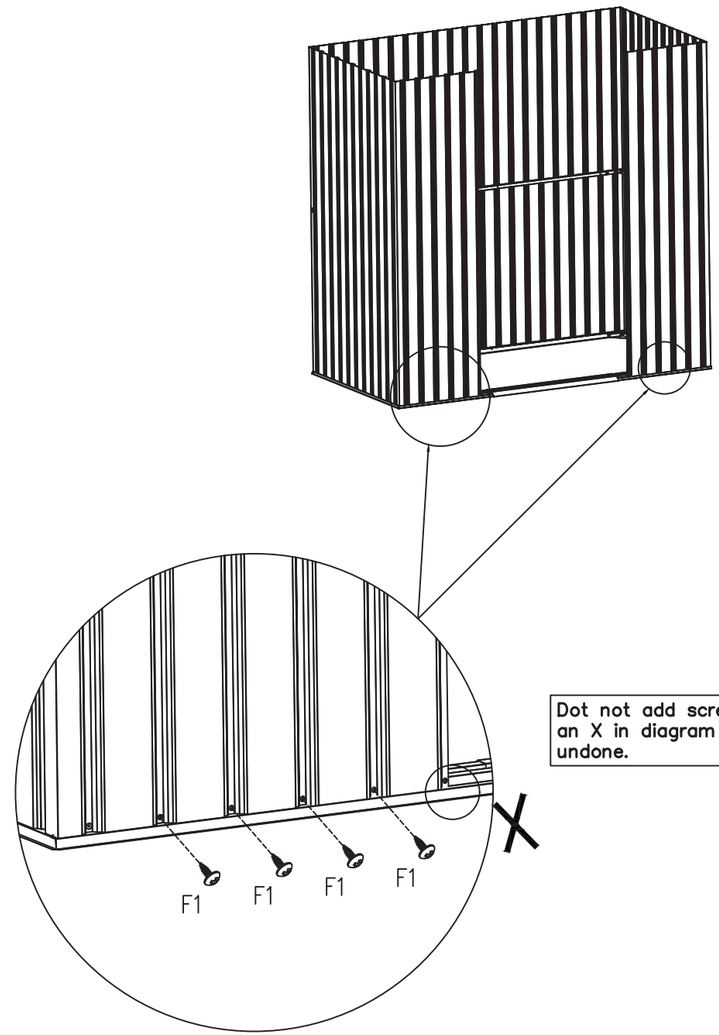


Dot not add screws that indicated with an X in diagram These need to be left undone.

PART	NO.	QTY
	Y98-12R	1
	Y98-12L	1
	C2	2
	F1	12
F1:ST4.2*10		

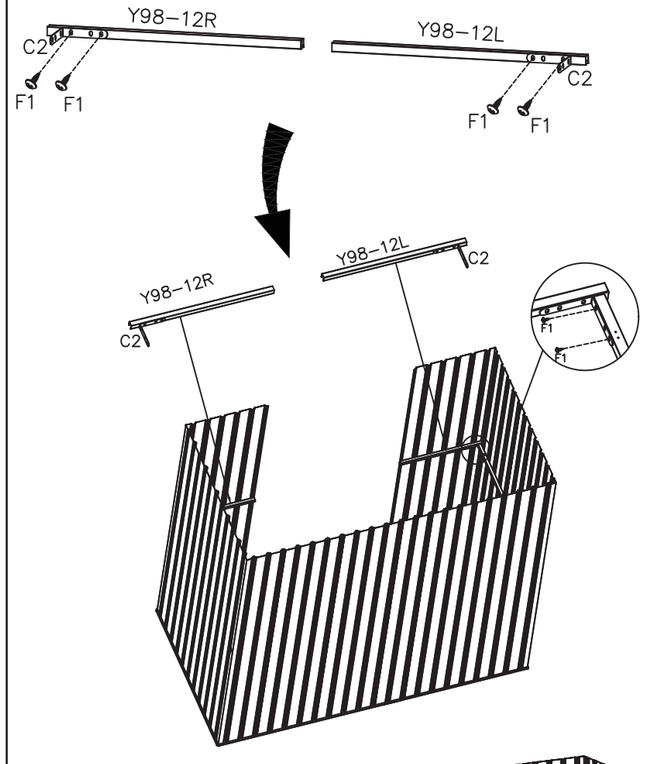


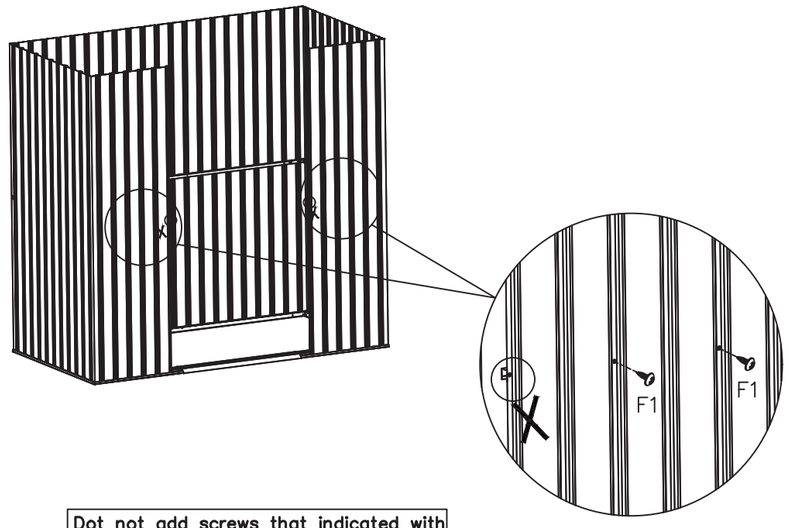

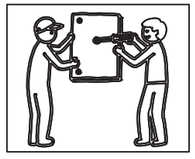


Dot not add screws that indicated with an X in diagram These need to be left undone.


This step requires two people to complete the installation together.

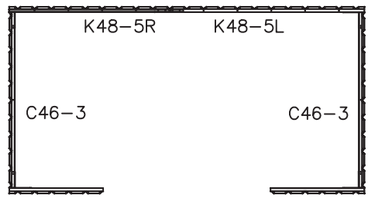

PART	NO.	QTY
	K48-5R	1
	K48-5L	1
	C46-3	2
	C2	2
	F1	55
F1:ST4.2*10		

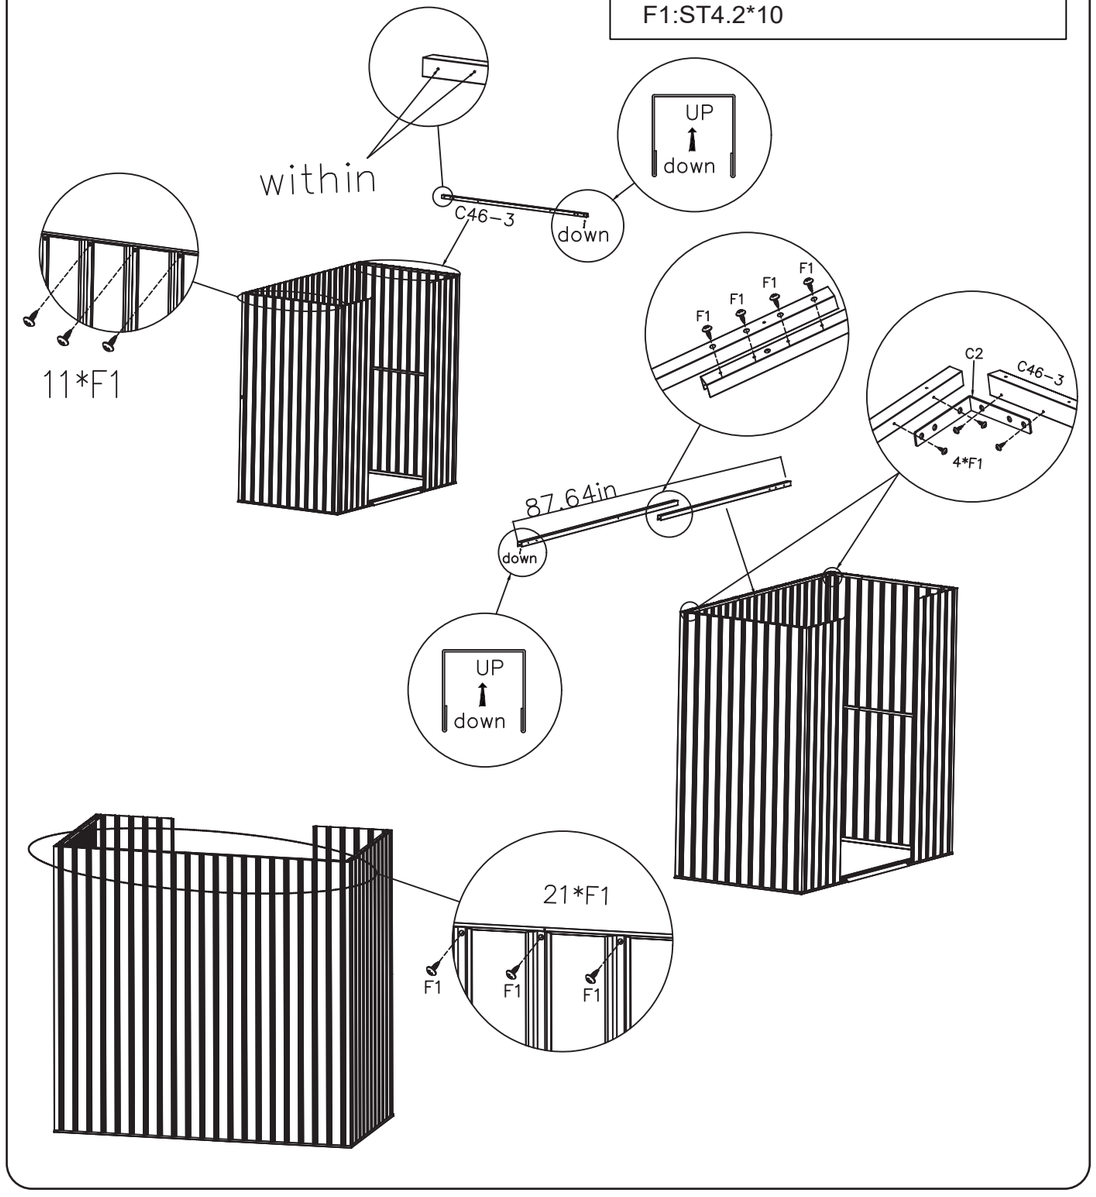


PART	NO.	QTY
	Y98-4L	1
	Y98-4R	1
	Y98-13	1
	Y98-12	1
	GY	4
	F1	20
F1:ST4.2*10		

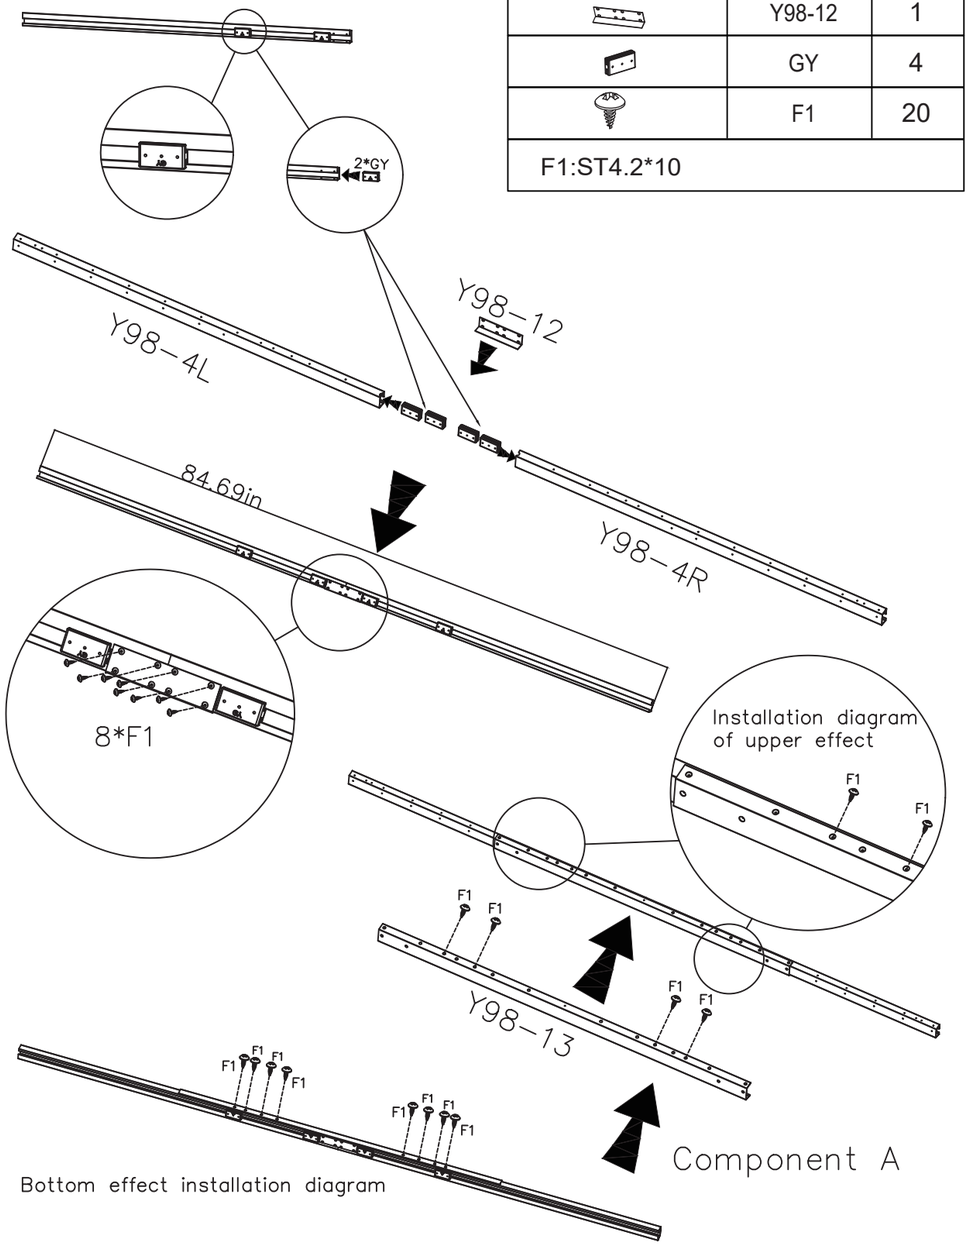


Bottom effect installation diagram

PART	NO.	QTY
	Component A	1
	F1	10
F1:ST4.2*10		

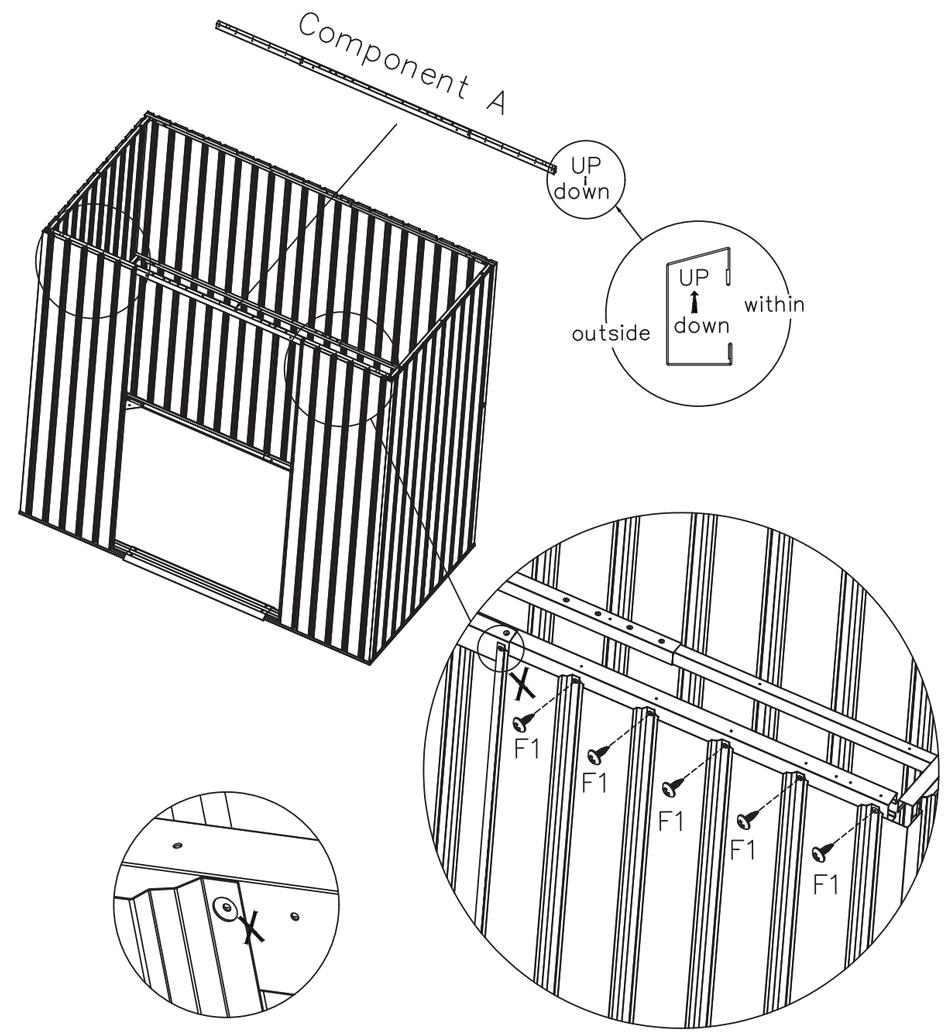


Dot not add screws that indicated with an X in diagram These need to be left undone.

PART	NO.	QTY
	UB2	2
	F1	10
F1:ST4.2*10		

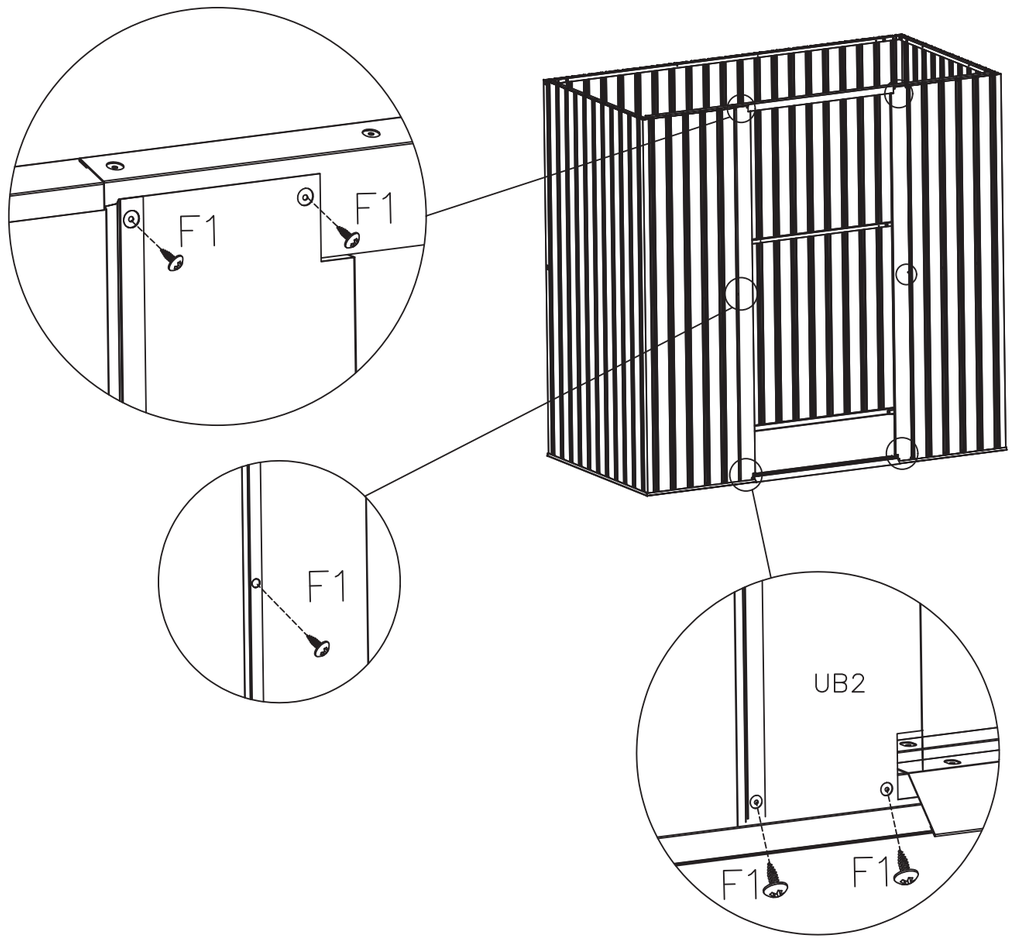


PART	NO.	QTY
	C46-6L	1
	C46-6R	1
	F1	6
F1:ST4.2*10		


Attention: Installation sequence of screws ① → ② → ③

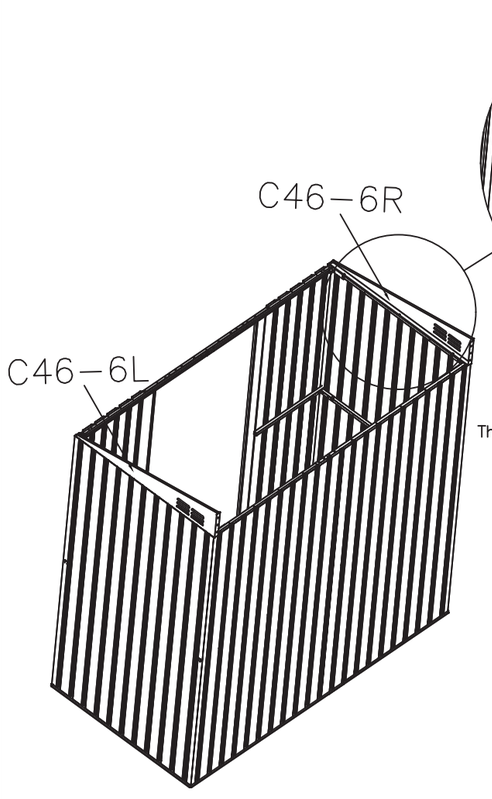


Assemble the ventilation board screws in the order shown in the diagram,Install the middle hole first to avoid misalignment.

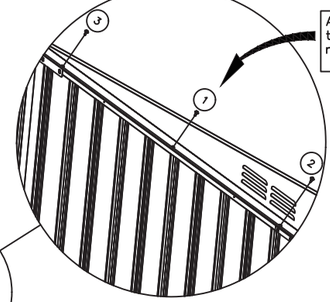



The small hole is centered.

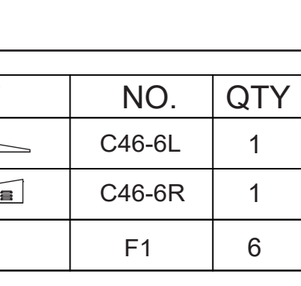

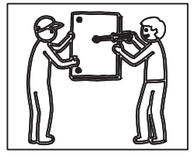



This step requires two people to complete the installation together.


PART	NO.	QTY
	C48-7L	1
	C48-7R	1
	C14	1
	F2	3
F2:M4*10		

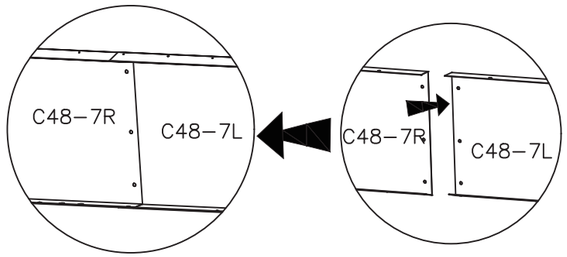



The width of C48–7R is relatively small, and it should be inserted into C48–7L. After aligning the holes, connect them with F2 screws.

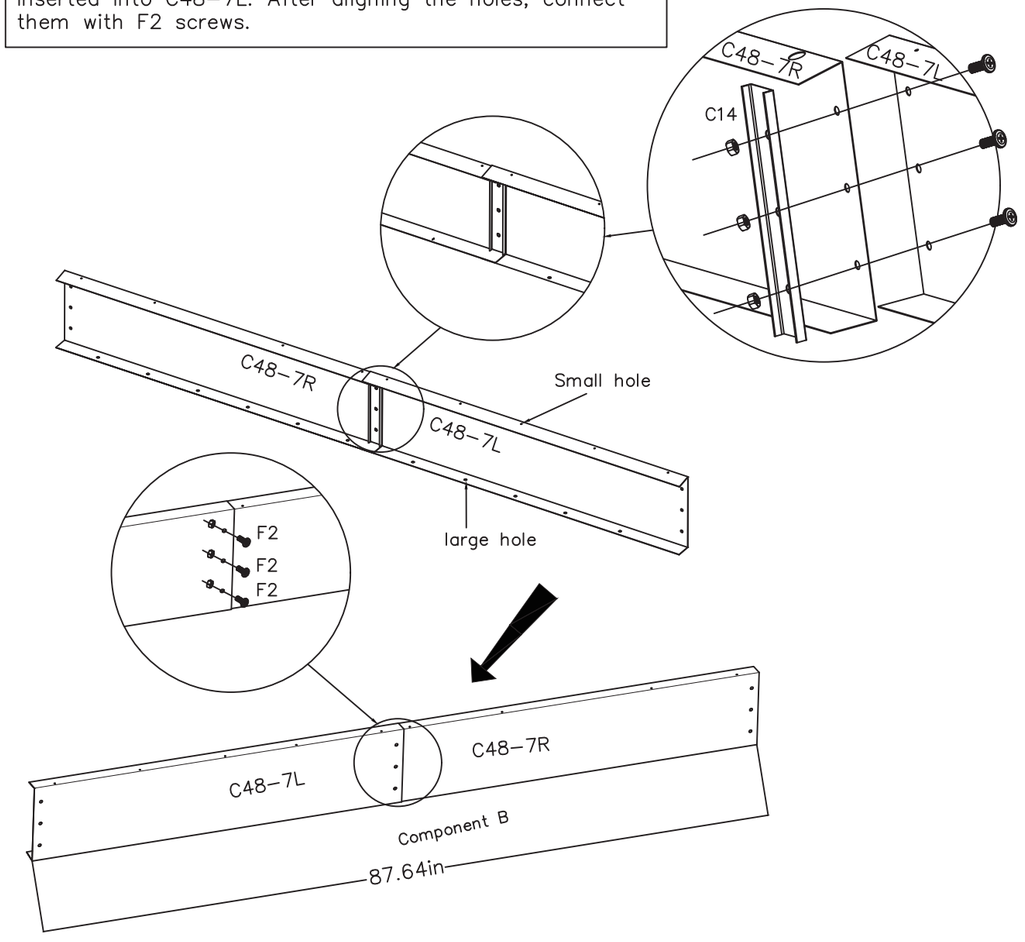


PART	NO.	QTY
	Component B	1
	F1	10
	F2	6
F1:ST4.2*10 F2:M4*10		

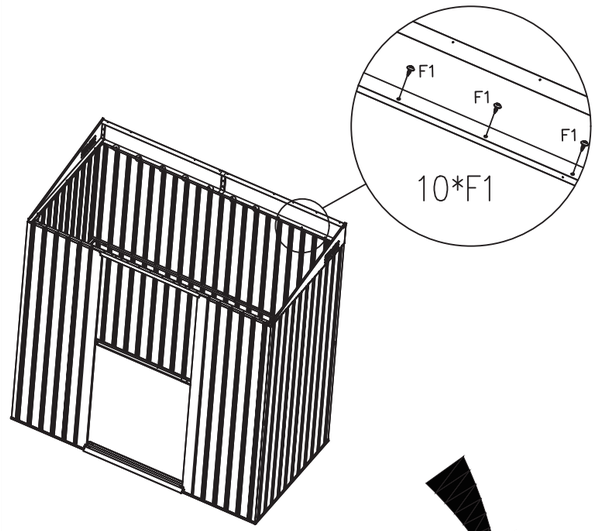

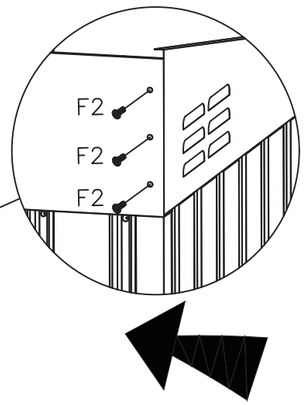

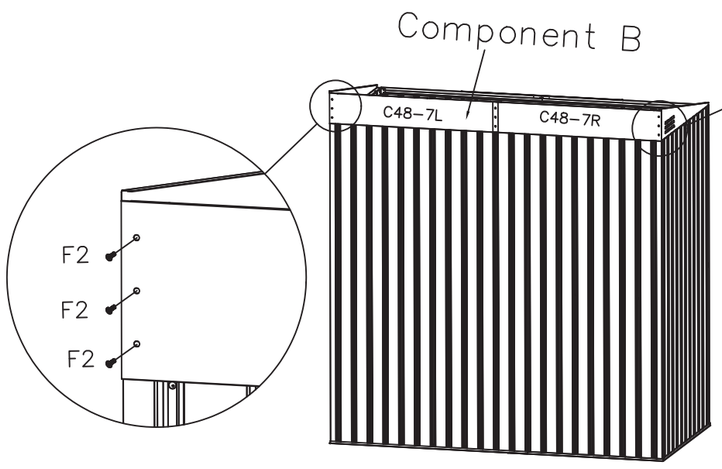


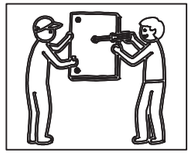



This step requires two people to complete the installation together.


Door Assemble

PART	NO.	QTY
	W3-XE	2
	DS-2	1
	DX-2	1
	DLY-3	1
	DY-3	1
	F1	4
F1:ST4.2*10		

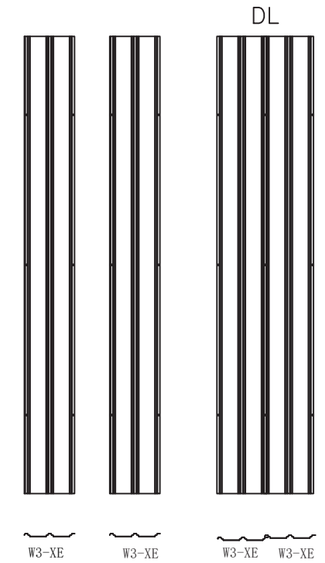

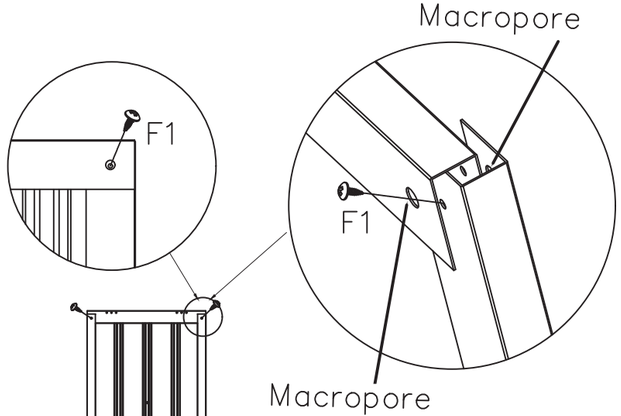


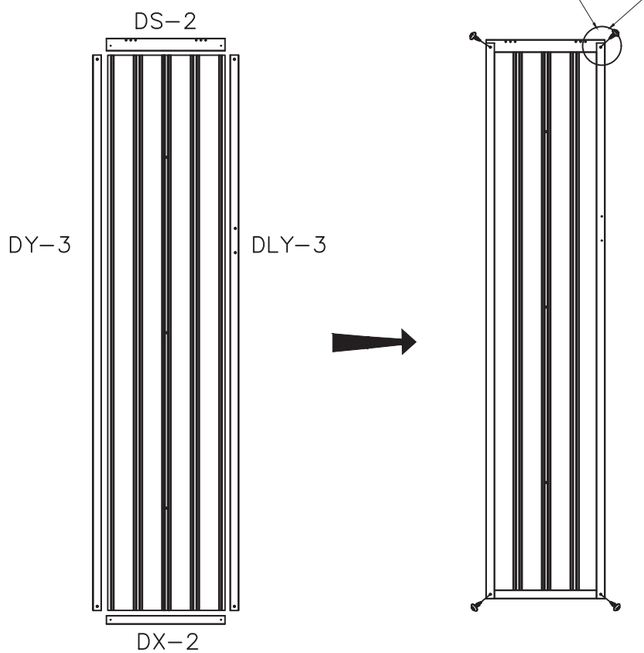


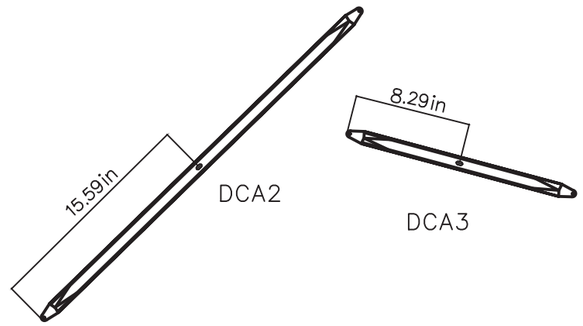


PART	NO.	QTY
	DCA2	2
	DCA3	1
	F1	10
	F2	3
	GB	1
F1:ST4.2*10 F2:M4*10		

Attention: Installation sequence of screws




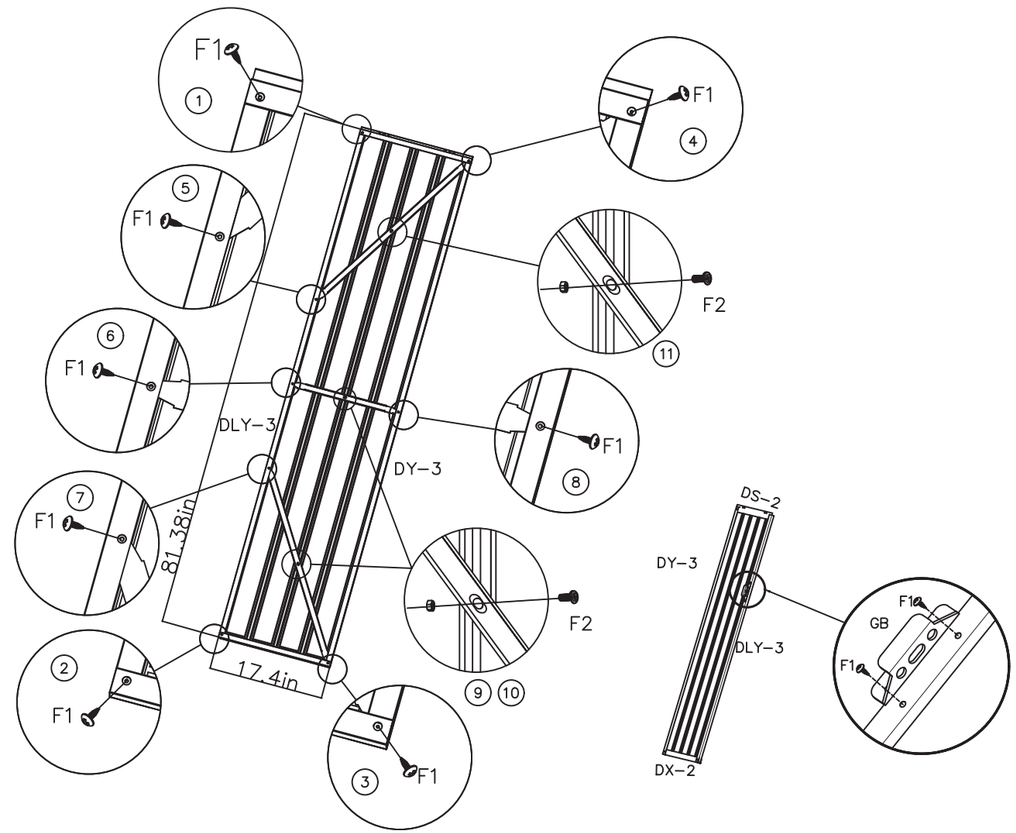


The cross pole DCA2 must be installed underneath DX–2 and DY–3.

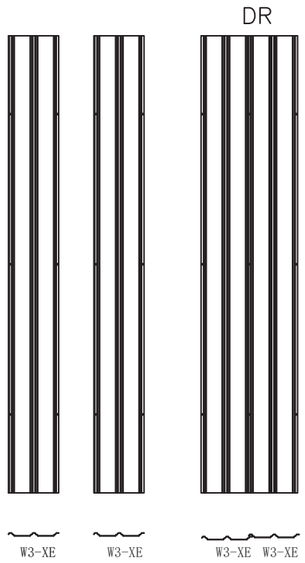


PART	NO.	QTY
	W3-XE	2
	DS-2	1
	DX-2	1
	DRY-3	1
	DY-3	1
	F1	4
F1:ST4.2*10		

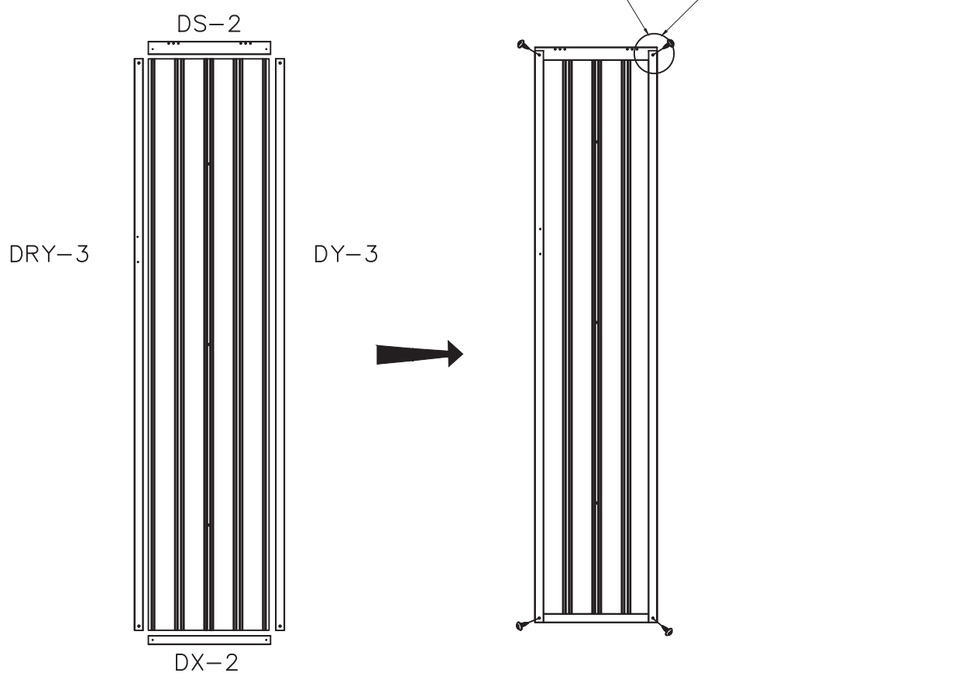


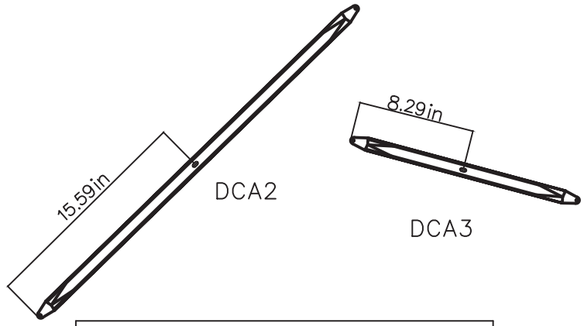

PART	NO.	QTY
	DCA2	2
	DCA3	1
	F1	10
	F2	3
	GB	1
F1:ST4.2*10 F2:M4*10		


Attention: Installation sequence of screws



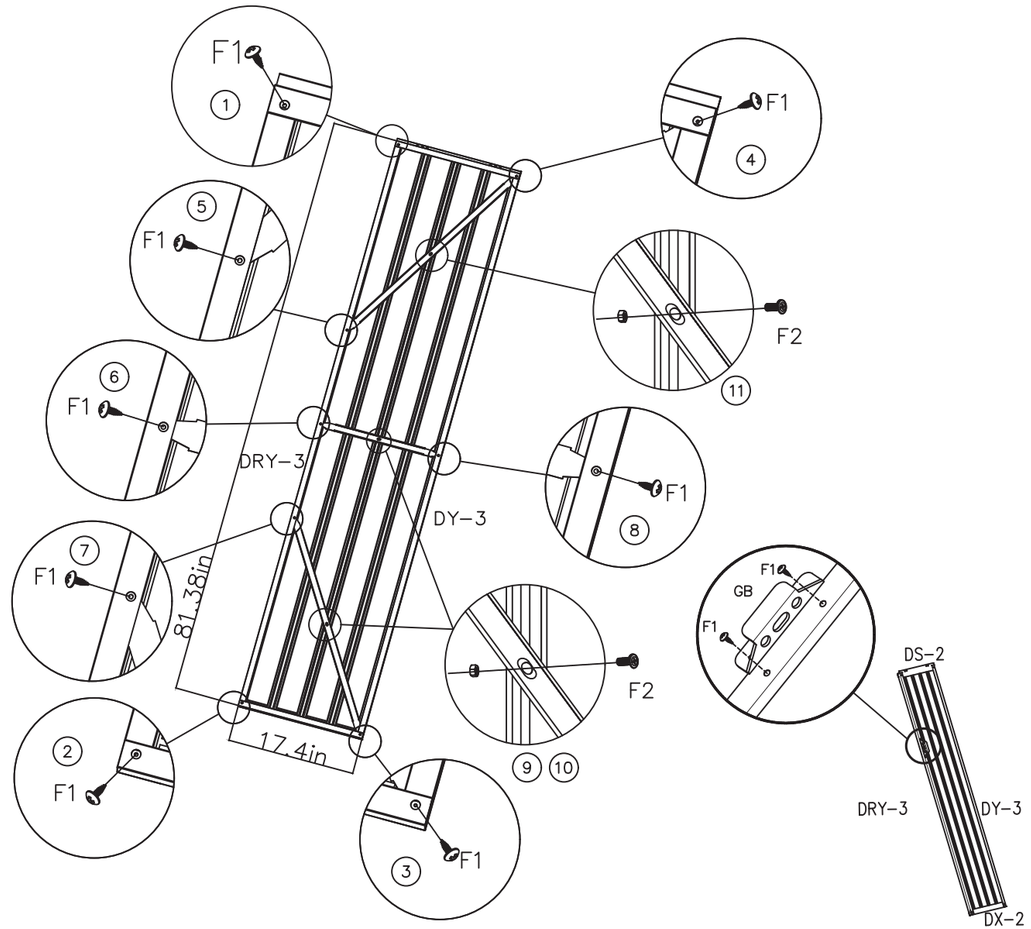

The cross pole DCA2 must be installed underneath DX-2 and DY-3.


PART	NO.	QT
	DL	1
	DR	1
	F1	12
F1:ST4.2*10		

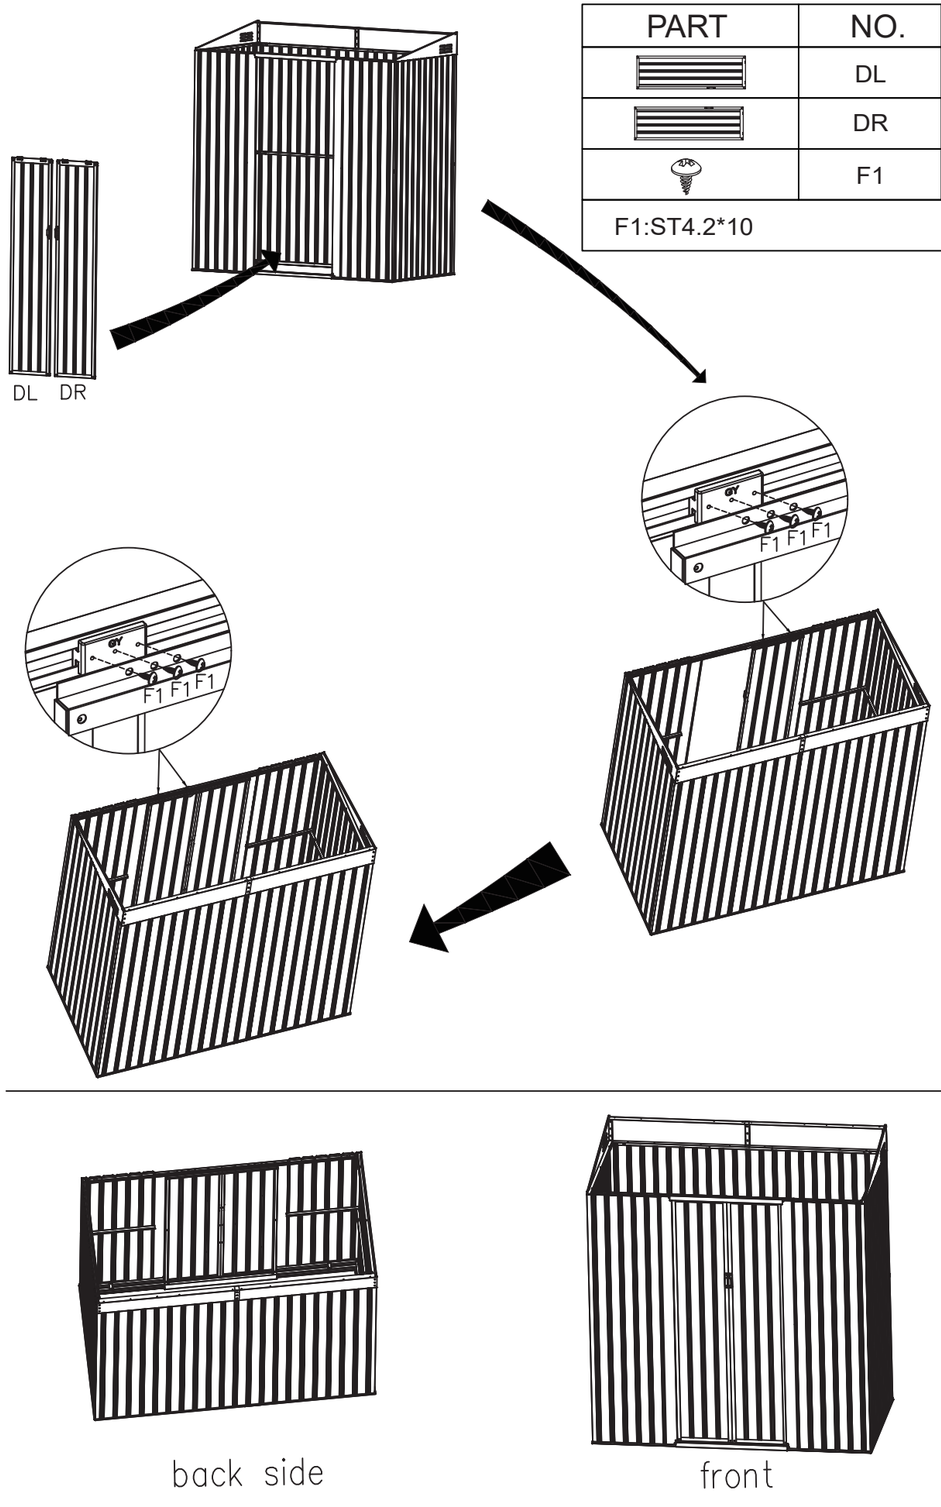


Shed Roof Frame Assemble


PART	NO.	QTY
	K310-18	2
	K310-17	2
	Y98-14	2
	Y98-11L	1
	Y98-11R	1
	F1	15
F1:ST4.2*10		

2*Component C

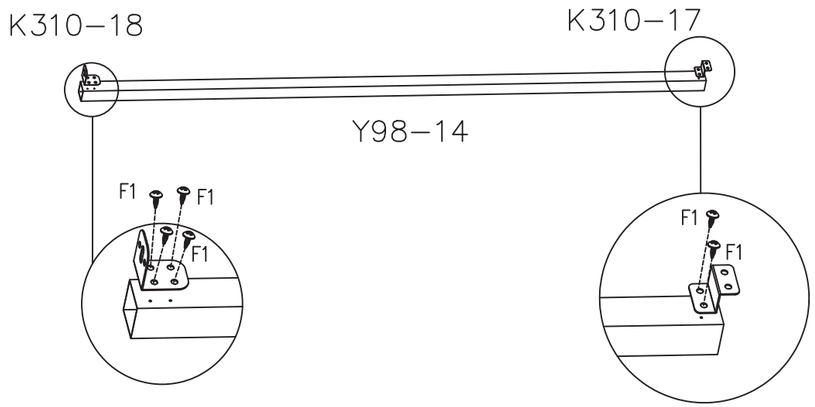

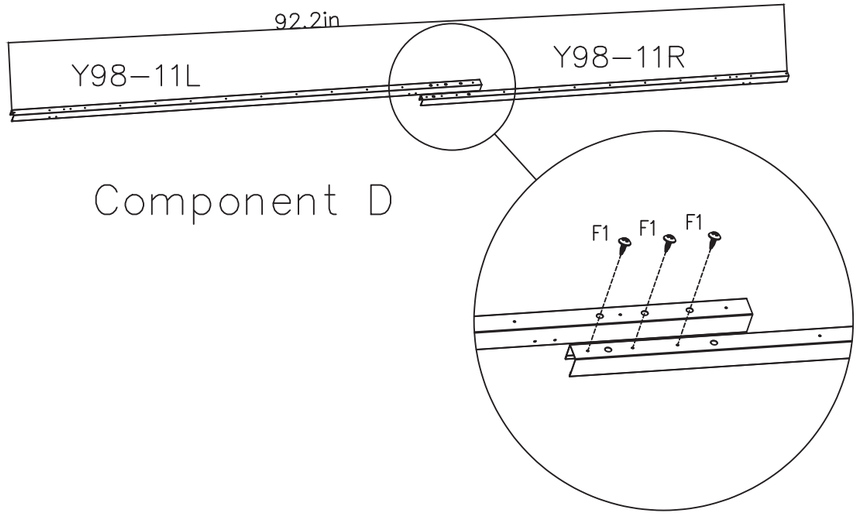



PART	NO.	QTY
	Component C	2
	Component D	1
	Y98-15	2
	F1	12
F1:ST4.2*10 F2:M4*10		

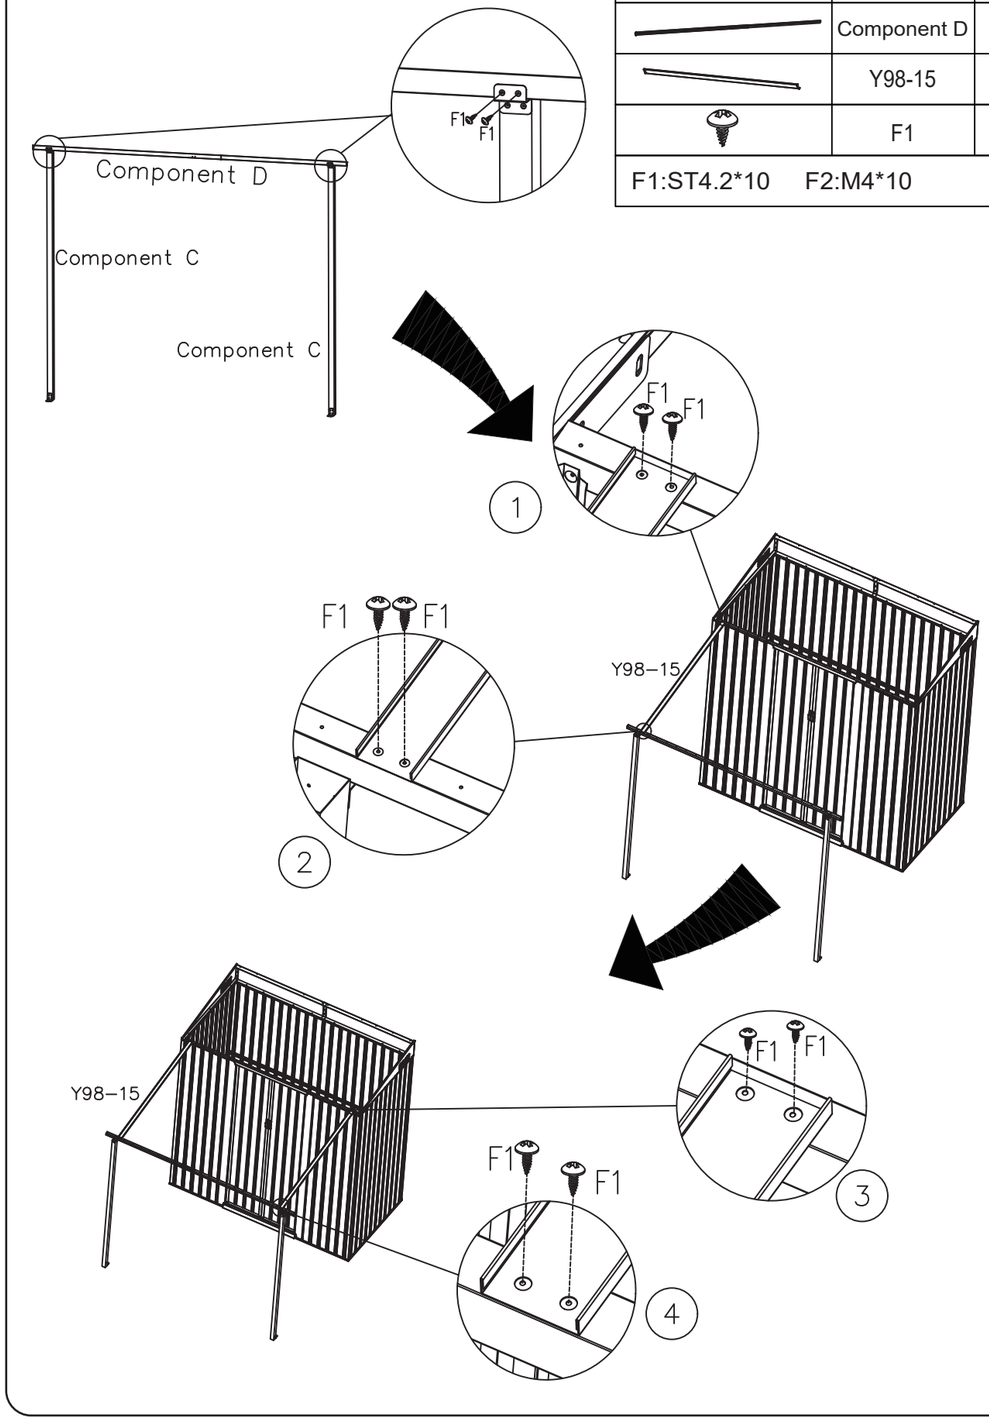


Shed Top Panels Assemble

PART	NO.	QT
	Y98-8	1
	V2	4
	F1	4
F1:ST4.2*10		

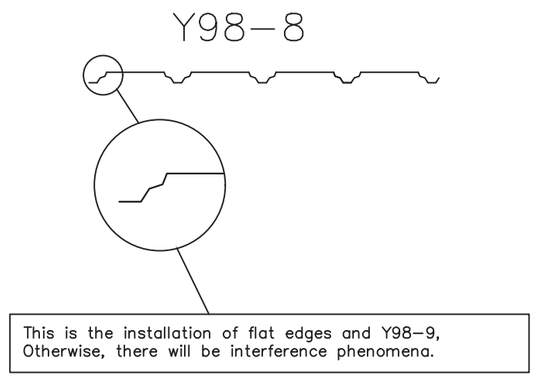


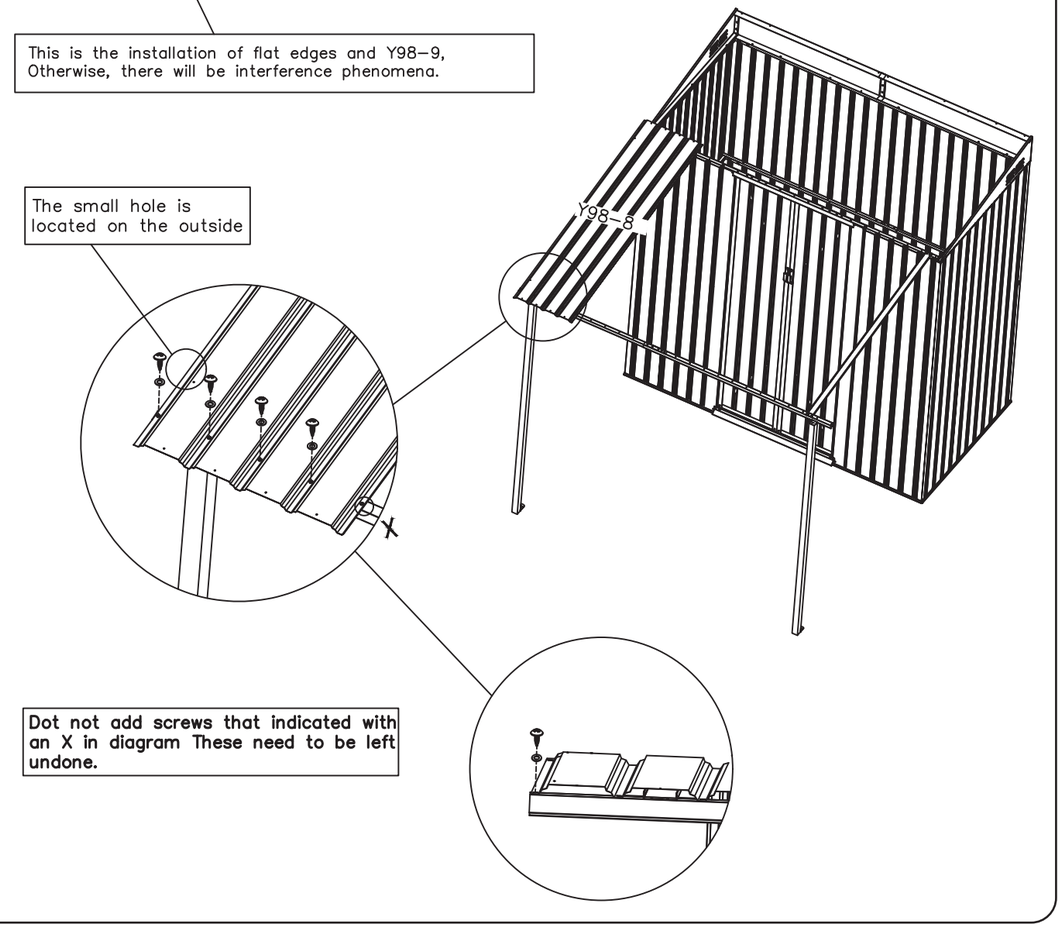


PART	NO.	QT
	Y98-8	1
	Y98-8M	3
	Y98-8MM	1
	Y48-8	2
	Y48-8M	3
	Y48-8MM	1
	V2	61
	F1	61
F1:ST4.2*10		

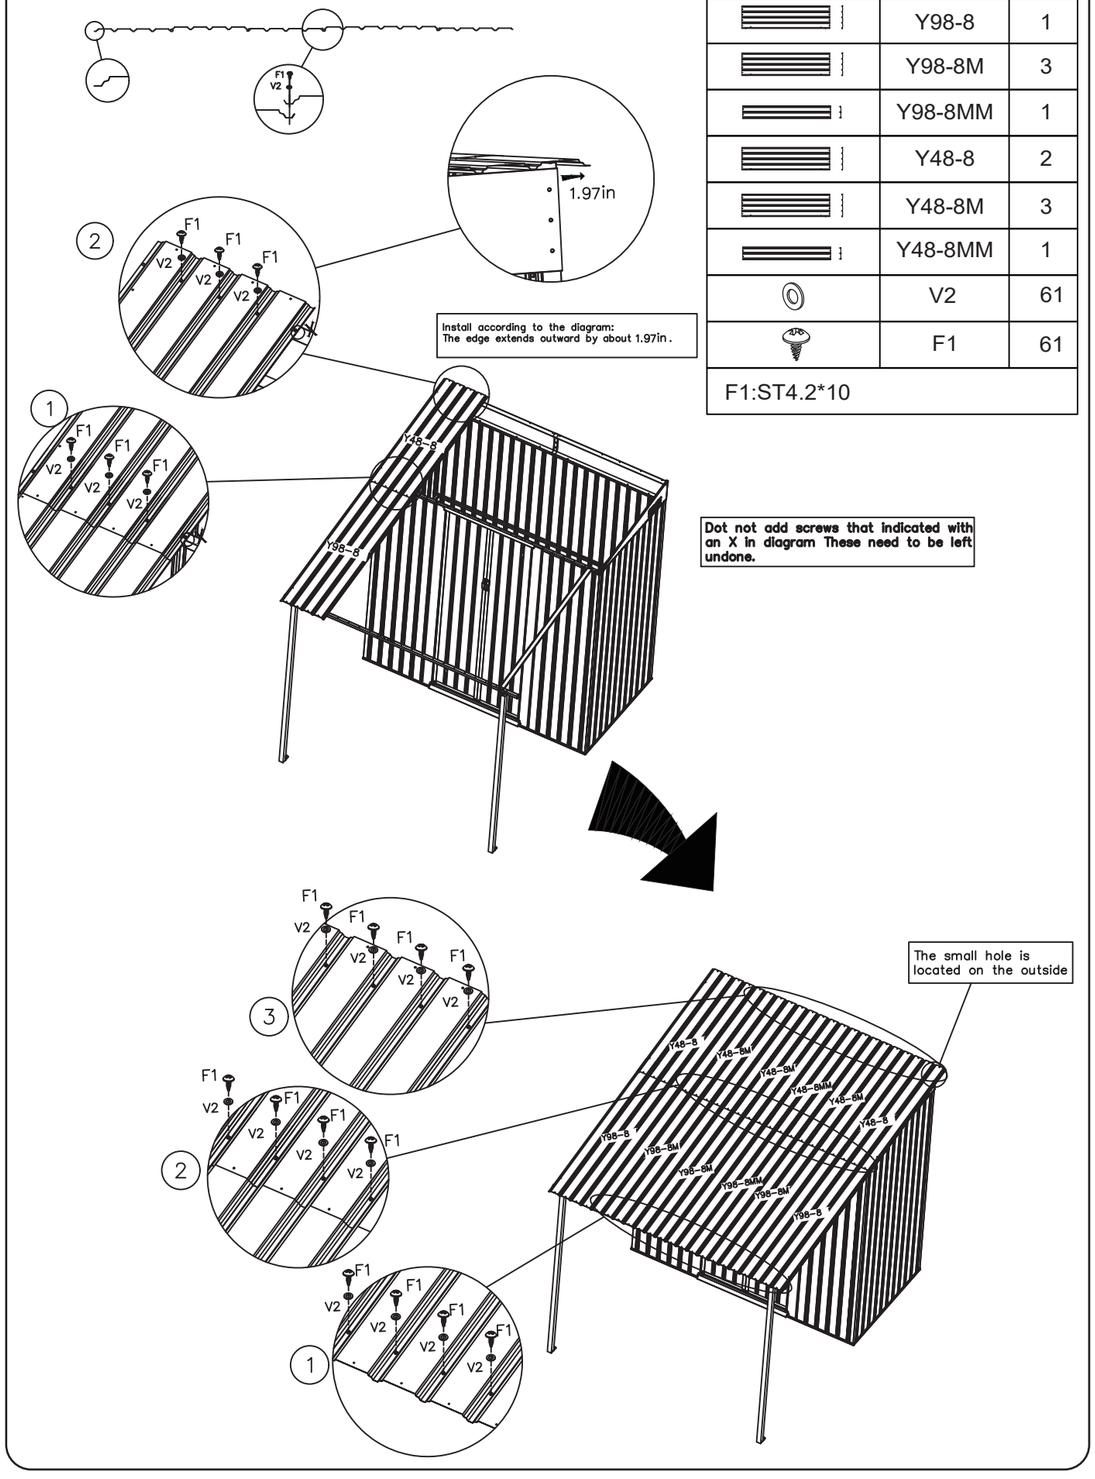


PART	NO.	QTY
	Y48-9	2
	Y98-9	2
	F1	8
	V2	8
F1:ST4.2*10		

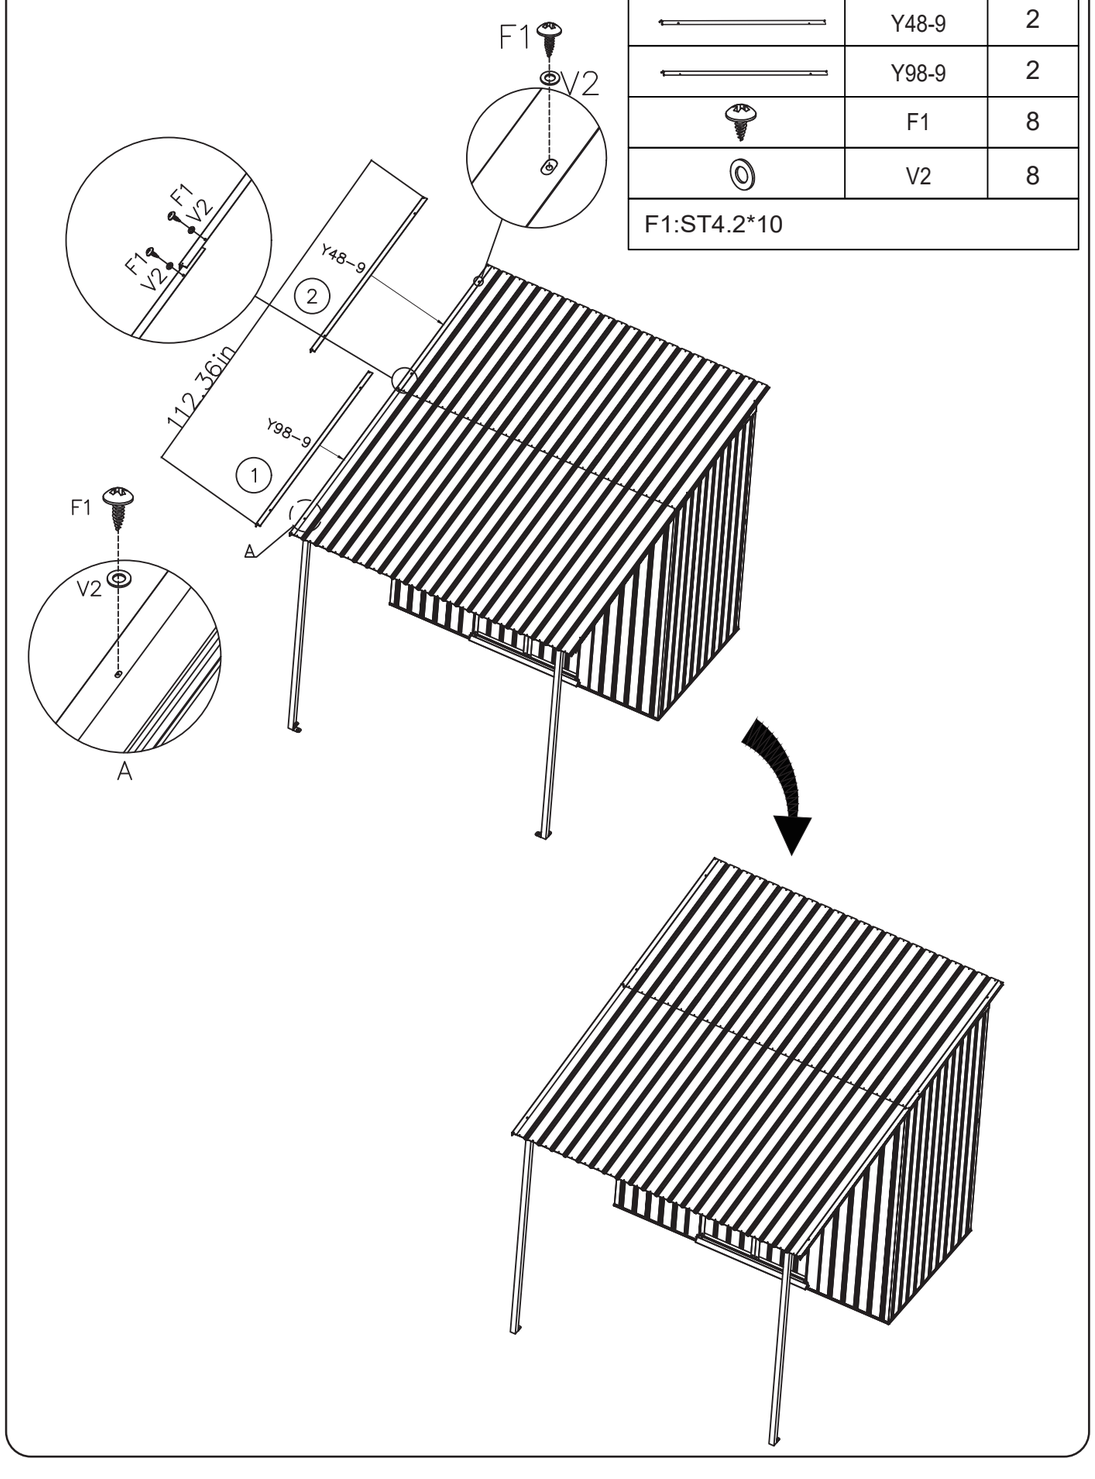

PART	NO.	QTY
	Y48-10L	2
	Y48-10R	2
	GC	4
	F1	8
	V2	8
F1:ST4.2*10		

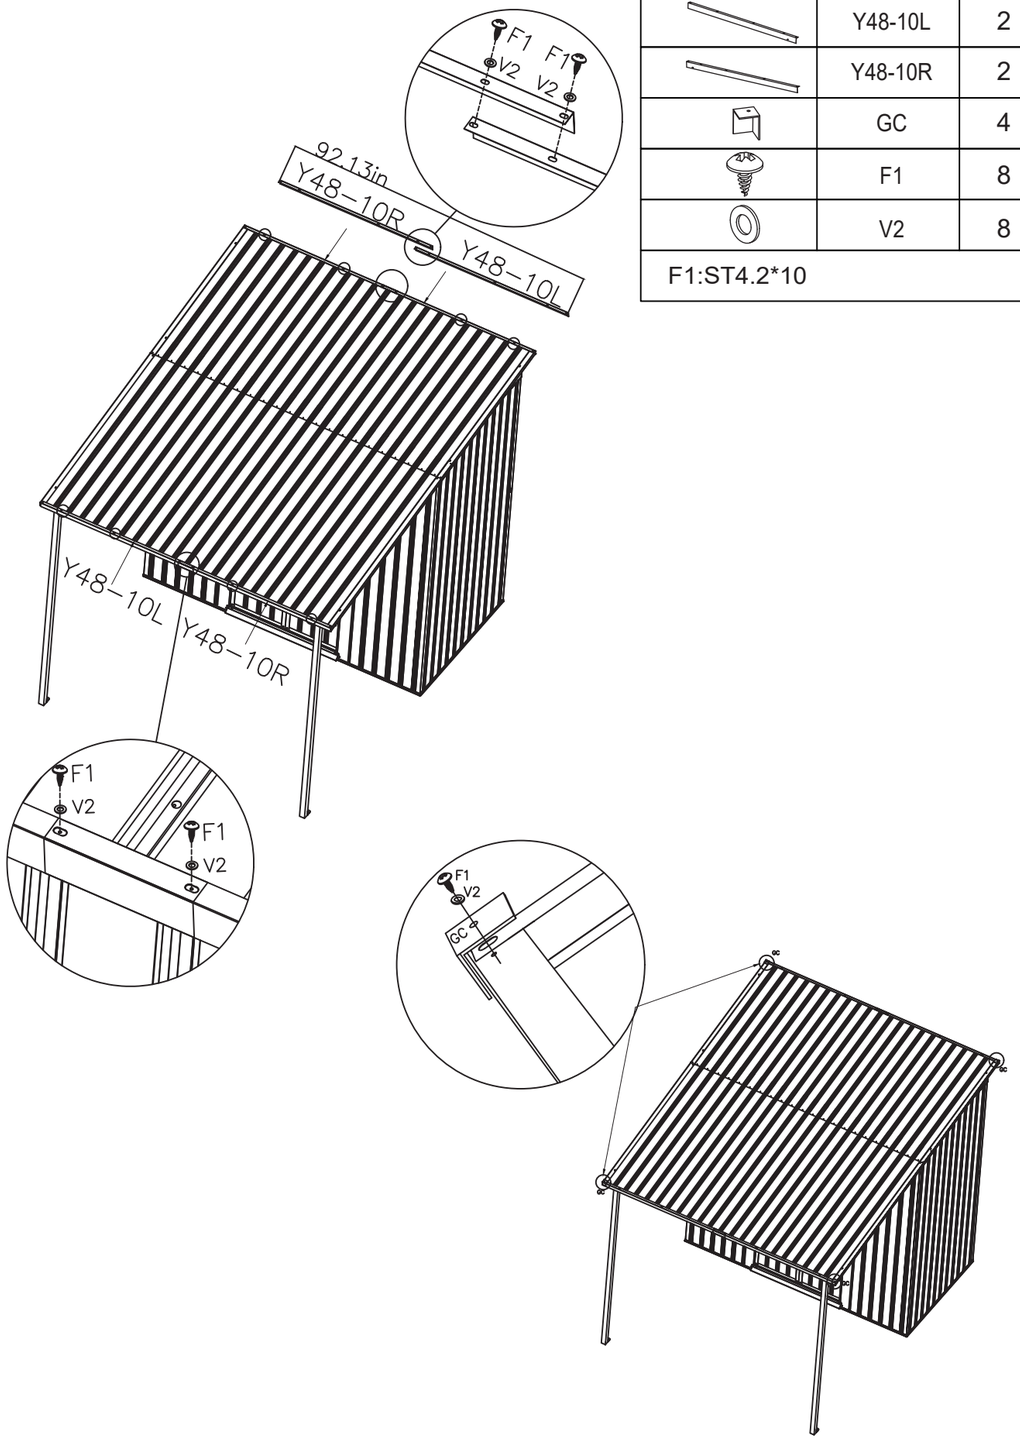


PART	NO.	QTY
	C2-3	2
	F1	8
F1:ST4.2*10		

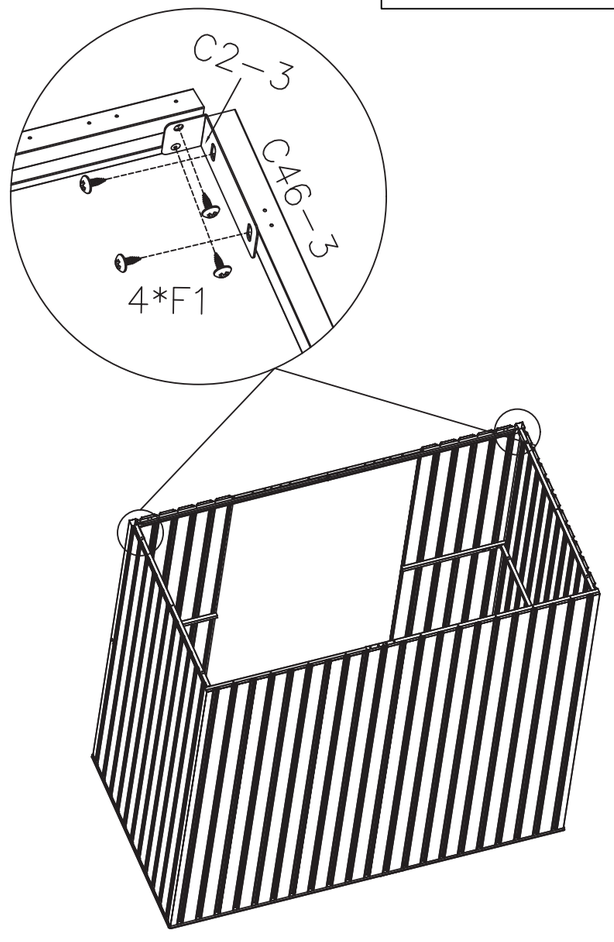

This installation diagram is only applicable to C2-3

PART	NO.	QTY
	PZ1	4
F1:ST4.2*10		

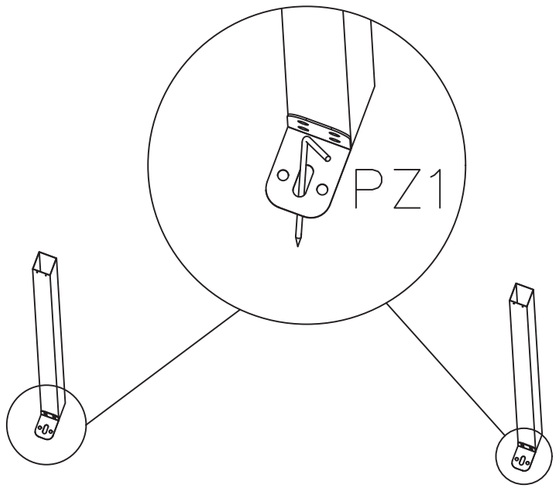

After the installation of the tool room is completed, insert PZ1 from the four corners (T–F,K310–18)of the base into the ground and fix it

