

IMPORTANCE



- Please read the safety instructions carefully before use.







- To assemble the kit, you will need 2 adults and a set of tools.





NAME	IMAGE	LENGTH (mm)	QUANTITY
	D1	1505	X2
	D2	1526	X2
	D3	1580	X1
	D4	1552	X1
	Q1	1660	X11
	Q2	1660	X6
	Q3	995	X2
	W1	850	X5
	W2	850	X5
	W3	850	X3
	W4	850	X3
	DA-1	733	X4
	DA-2	1609	X2
	DA-3	1609	X1
	DA-4	1609	X1
	DA-5	1022	X4
	DA-6	655	X2
	DA-7	1609	X1
	L1	833	X4
	L2	1699	X2
	L3	1384	X1
	L4	1384	X1
	B1	1550	X1
	B2	1616	X1
	B3	1403	X1
	B4	1616	X1
	B5	1403	X1
	Z1	1550	X1
	Z2	1492	X2
	Z3	1492	X2
	G1	1384	X1
	G2	1699	X1
	SL	773	X2
	SR	773	X2

NAME	IMAGE	LENGTH (mm)	QUANTITY
	H1	1624	X1
	H2	1624	X1
	H3	1414	X1
	H4	1414	X1
	RS	1545	X1
	LL	1672	X1
	LR	1672	X1
	BK	1672	X2
	C01	630	X2
	C02	590	X2
	C03	594	X2
	C04	600	X1
	C05	674	X2
	M1	1596	X4
ANNEX			
	J1	130	X4
	G3		X2
	G4		X4
	LATCH		X1
	HG		X4
	SPRING LATCH		X2
	S1		X65
	S2		X90
	S3		X480
	S4		X470
	S5		X290
	S6S+S6T		X6
	S7		X21
	S10		X4
	S8		X2



3.Drafting.

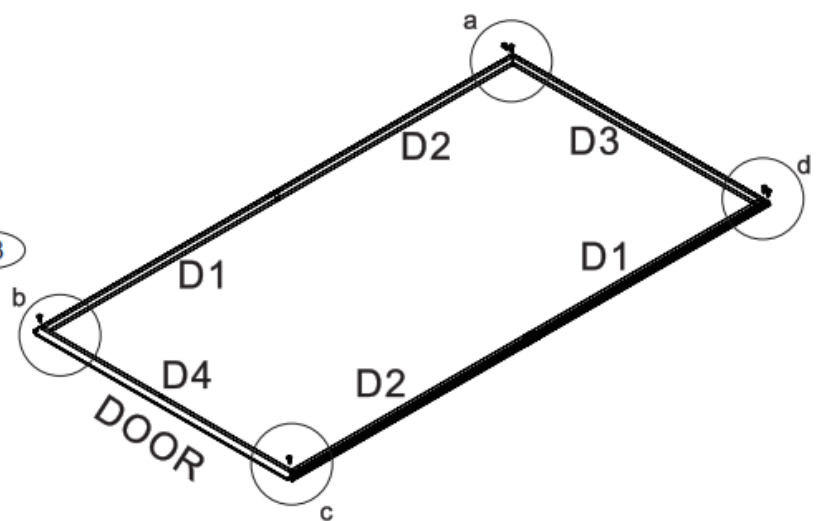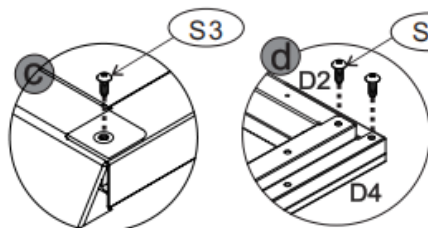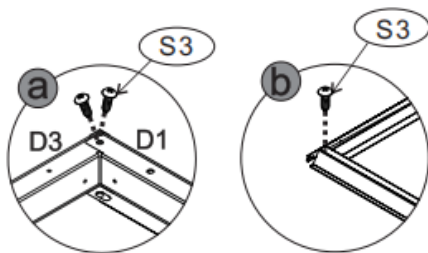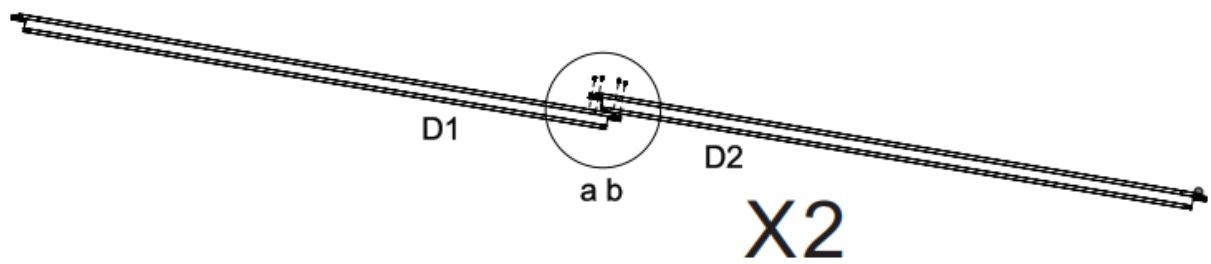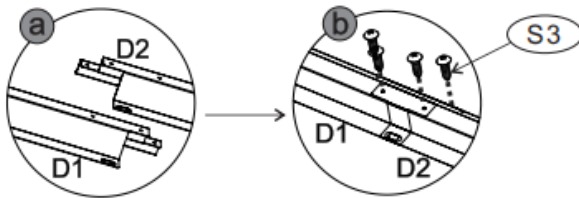


9	 B2[x1]	 B3[x1]	 S3[x11]	 S4[x8]	
---	--	--	---	---	--

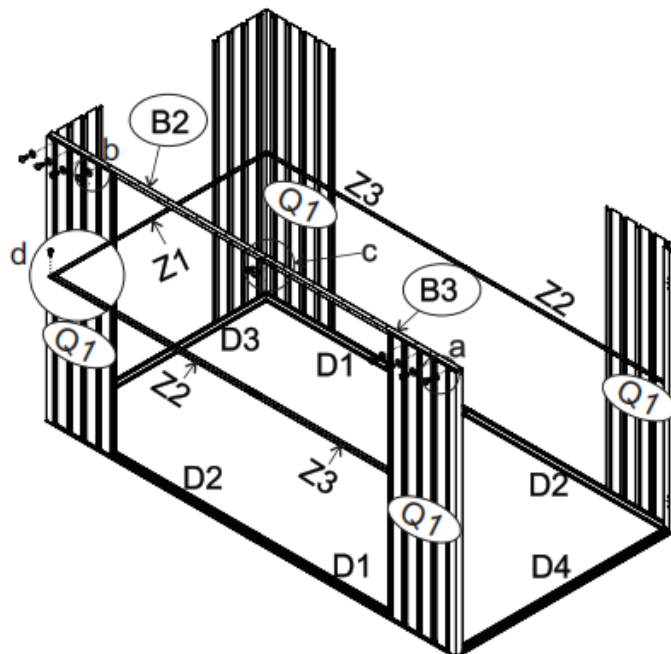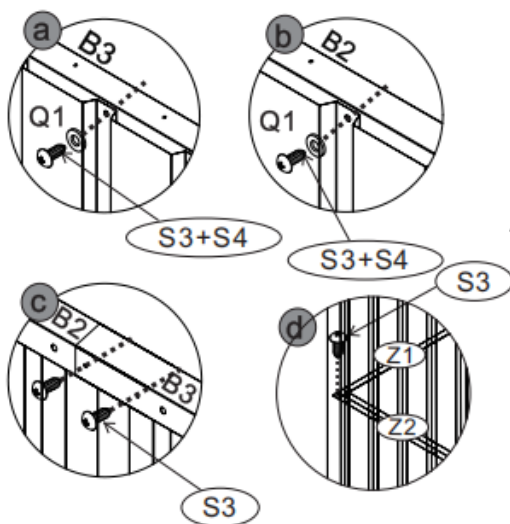


10	 B1[x1]	 B4[x1]	 B5[x1]	 S3[x16]	 S4[x14]	
----	--	--	--	--	---	--

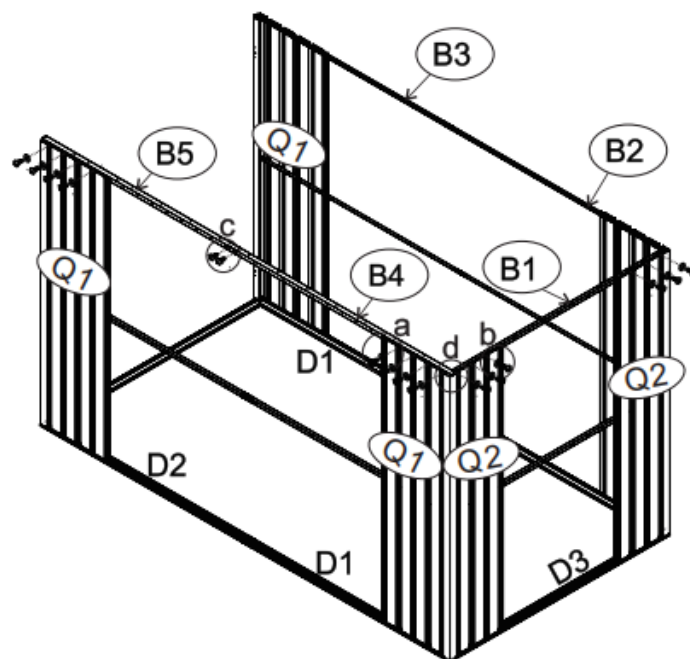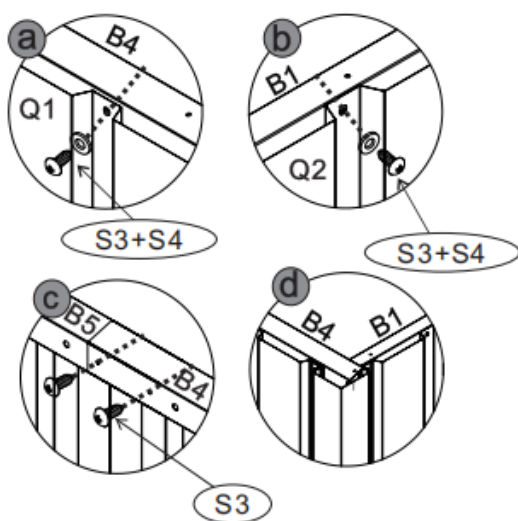


19	 H1[x1]	 H2[x1]	 H3[x1]	 H4[x1]	 S1[x16]	 S4[x16]	 S2[x16]			
----	--	--	--	--	---	---	---	--	--	--

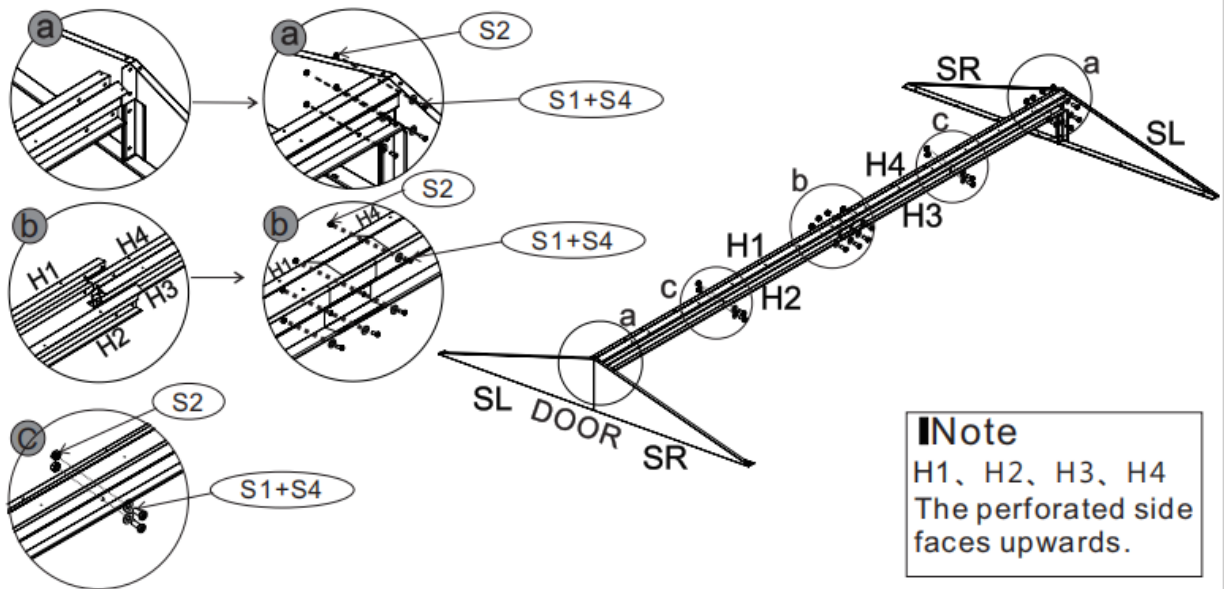


20	 S3[x16]	 S4[x16]				
----	---	---	--	--	--	--

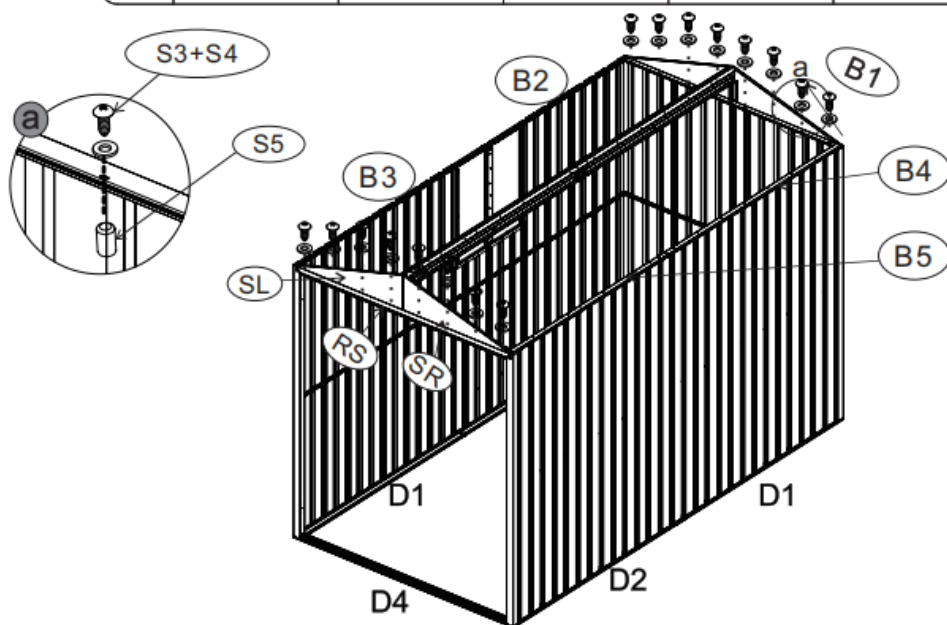


33	 DA-1[x2]	 DA-2[x1]	 DA-4[x1]	 M1[x2]		
----	--	--	--	--	--	--

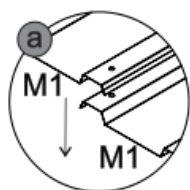


DAR

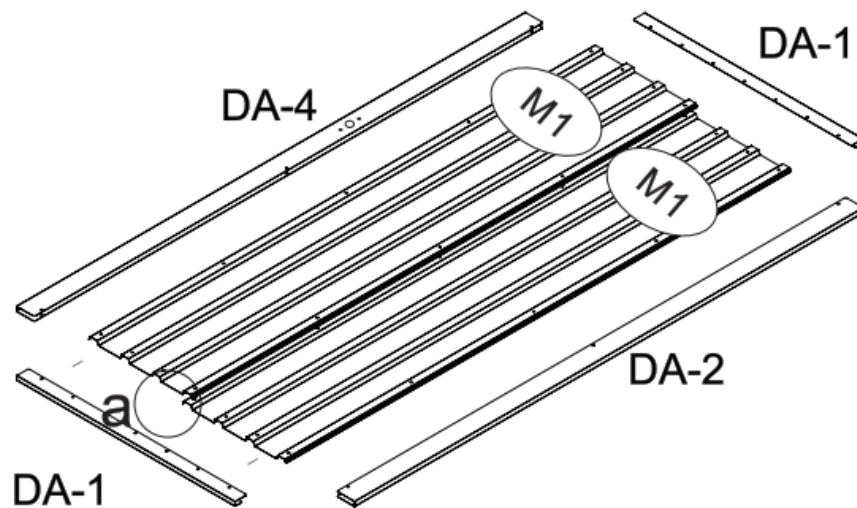

34	 S7[x2]	 S1[x10]	 S2[x12]	 S4[x12]		
----	--	---	---	---	--	--

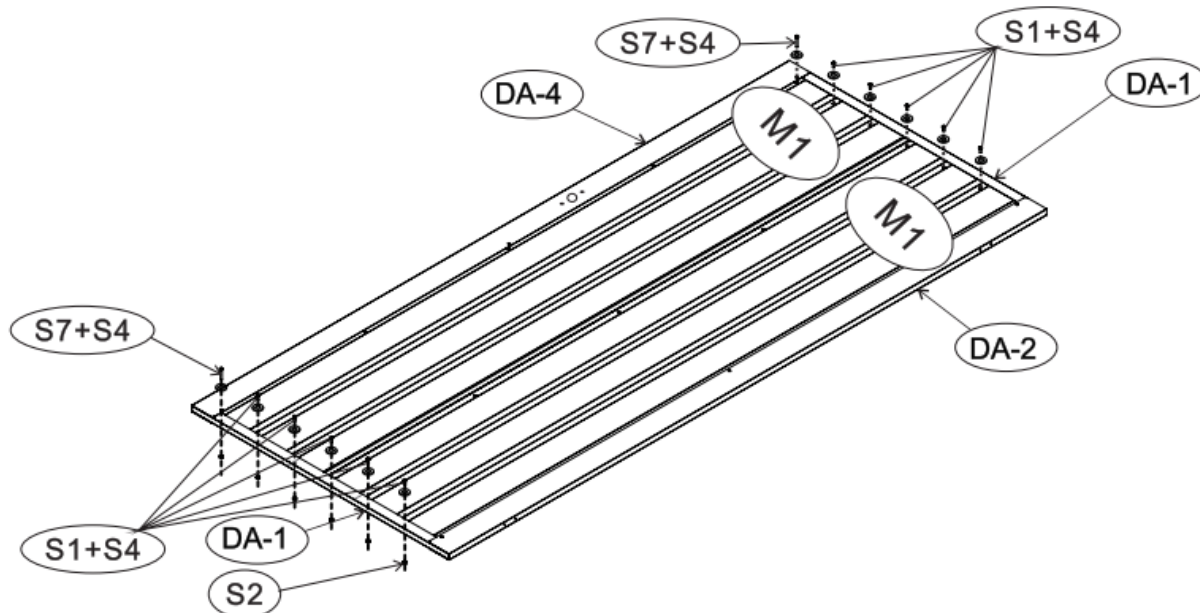

37	 HG[x4]	 S3[x12]				
----	--	---	--	--	--	--

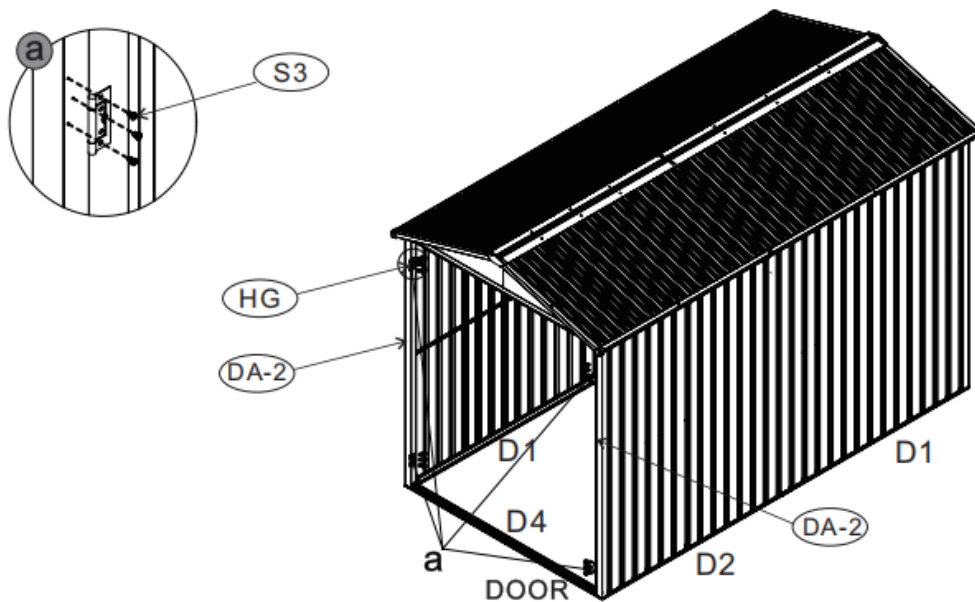

38	 S3[x8]				
----	--	--	--	--	--

