




ASSEMBLY INSTRUCTION

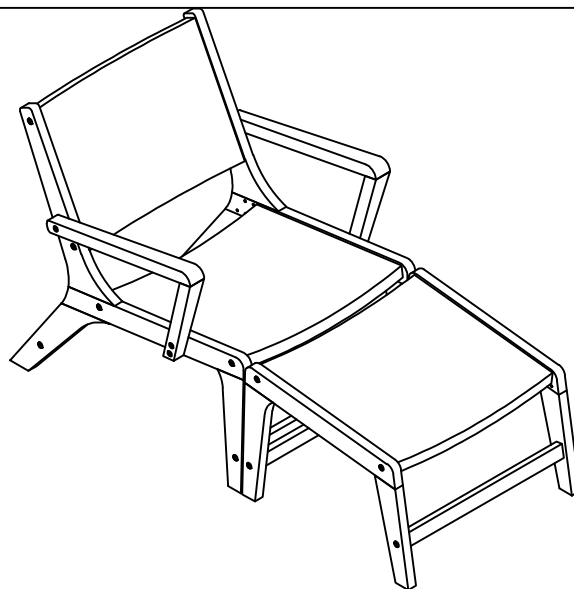


① x6
(Blot M6x60)




② x20
(Blot M6x25)

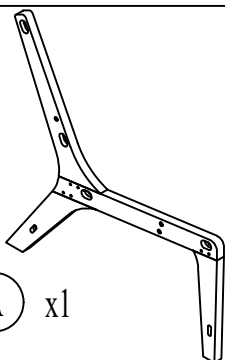


① A x1

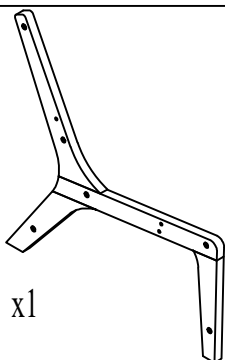


① B x1

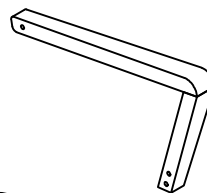


① C x1

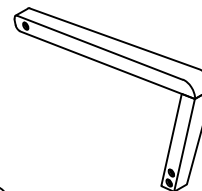


① D x1

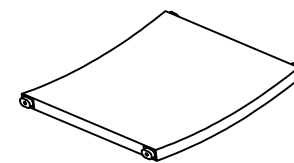


① E x1

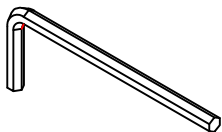


③ x2

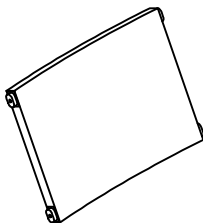


① F x1

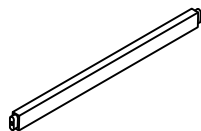


① G x4

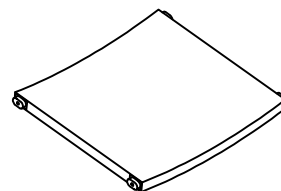

① H x1

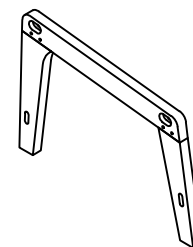


① I x1

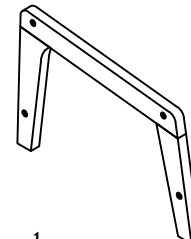


① J x1

ASSEMBLY INSTRUCTION


Step 1

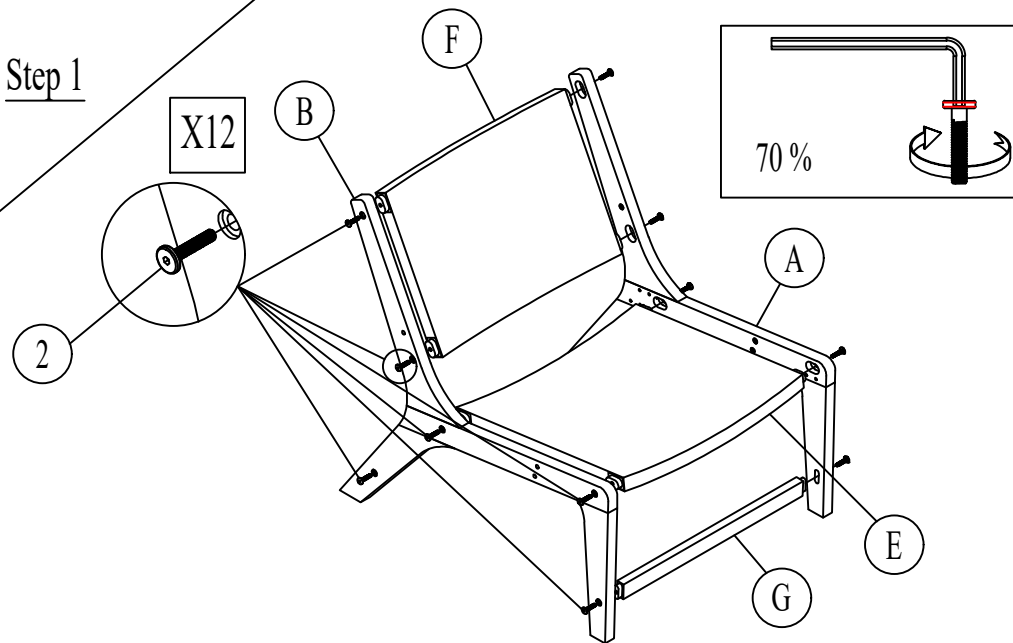


Step 2

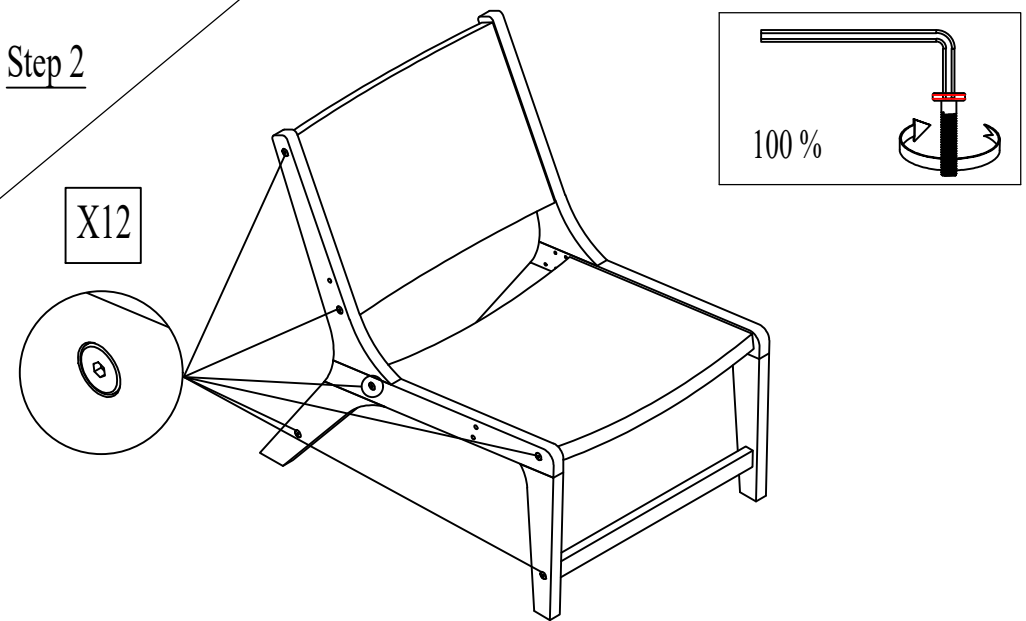

Step 3

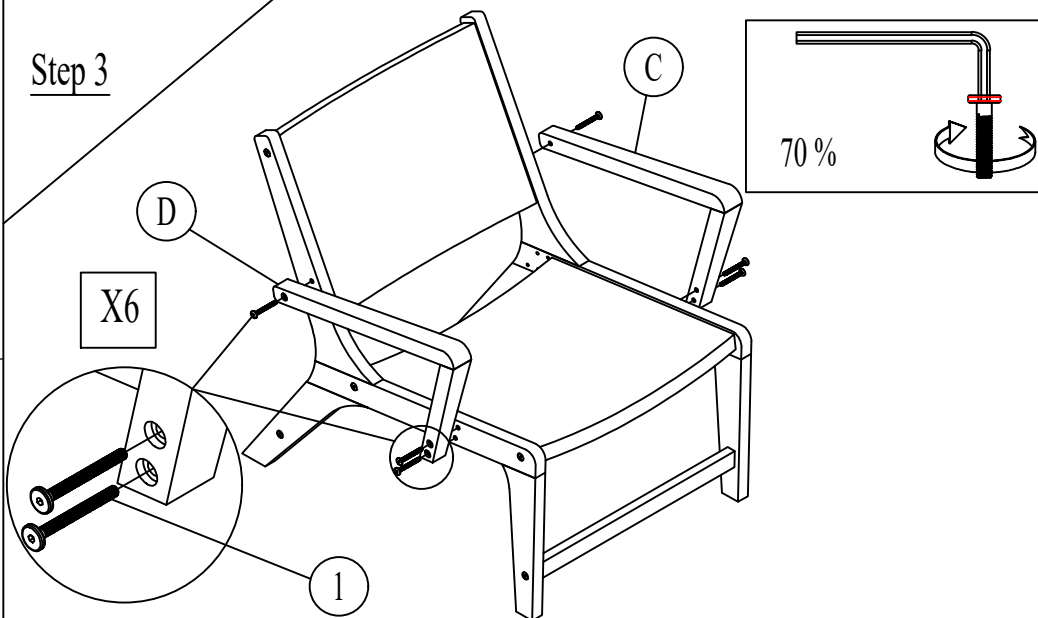



Step 4

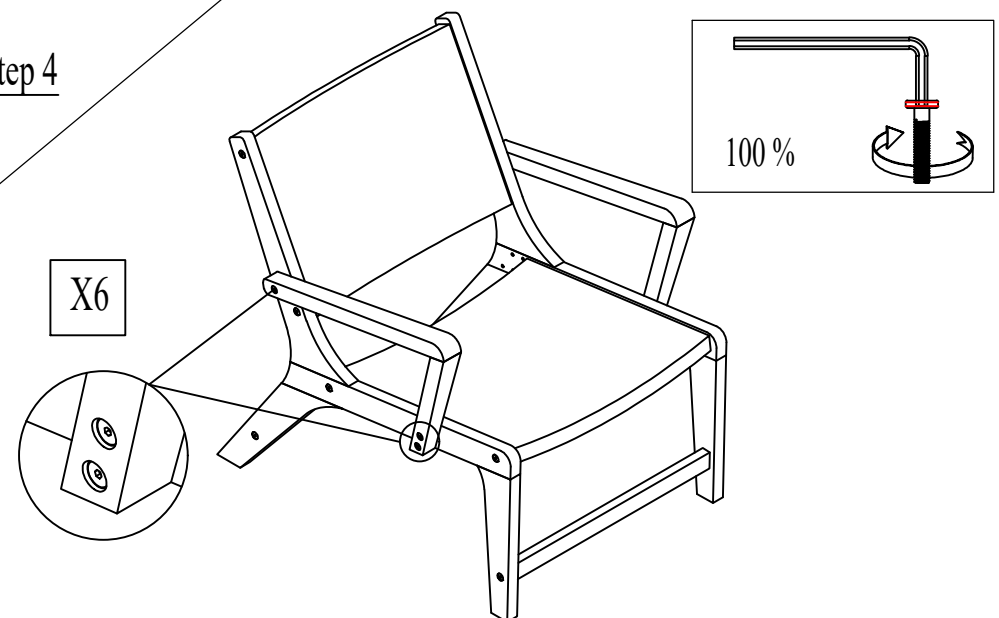

ASSEMBLY INSTRUCTION


Step 5

70 %

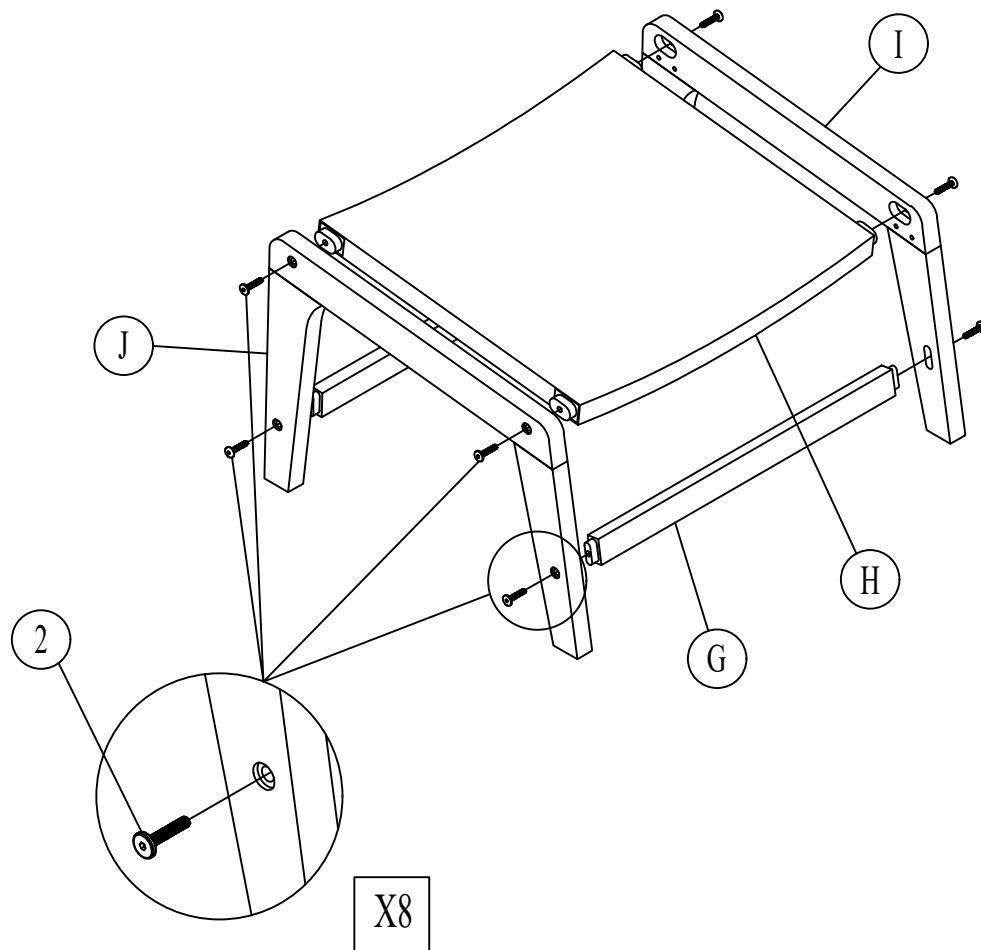

Step 6

100 %



X8

