
Hall Tree

Assembly Instructions - Please keep for future reference

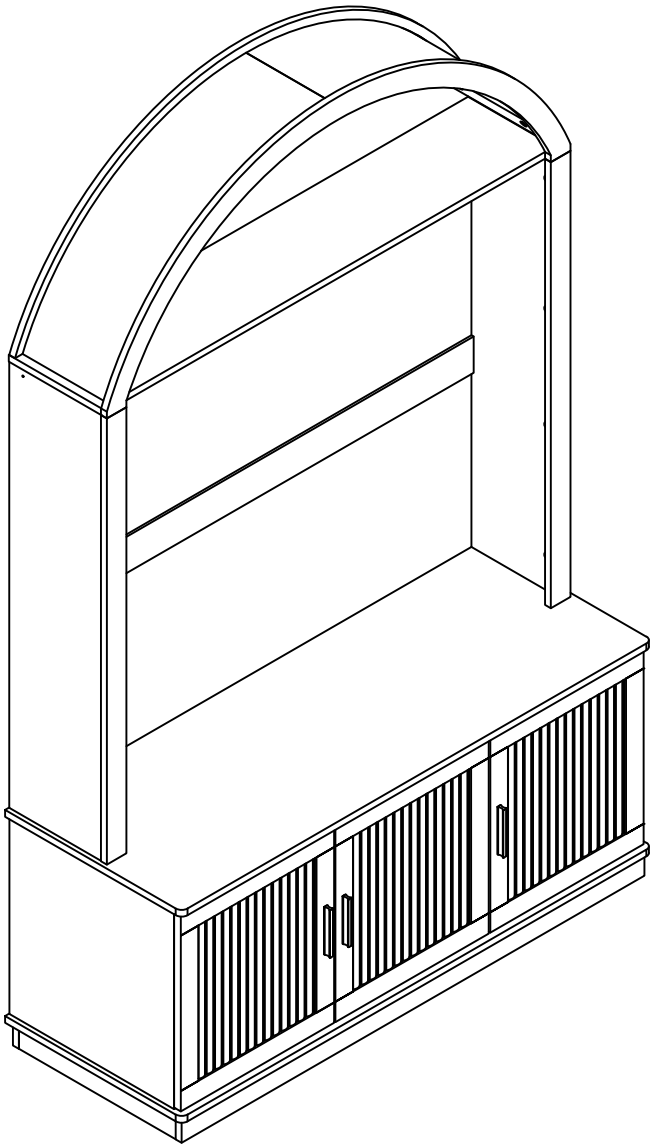

Dimensions

Width-47.244inch

Depth-16.732inch

Height-75.591inch

WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important - Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – please follow these instructions











To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components-Fittings

Please check you have all the panels llsted below

Note:The quantlle below are the correcet amount to complete the assembly. in some cases more fittings may be supplied than are required

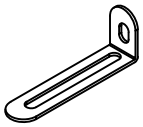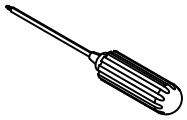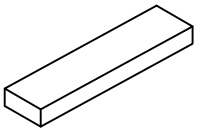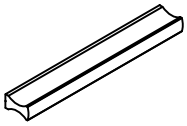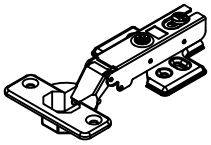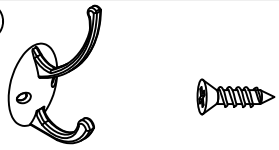Ⓐ  6*35mm Cam Bolt x 59	Ⓑ  15*10mm Cam Lock x 59	Ⓒ  8*30mm Dowel x 30	Ⓓ  4*40mm Screw x 16
Ⓔ  3.5*14mm Screw x 58	Ⓕ  Layer plate support x 8	Ⓖ  Anti-tilt Angle iron x 2	Ⓗ  6*21mm Door stop x 3
Ⓘ  Phillips screwdriver x1	Ⓙ  Back panel buckle x 20	Ⓚ  Plastic expansion bolt x 2	Ⓛ  EVA pad x 8
Ⓜ  Metal handle x 3	Ⓝ  4*20mm Screw x 6	Ⓞ  Hinge x 6	Ⓟ  Hole to stick x 22
Ⓠ  4.0*14mm Screw x 2	Ⓡ  Clothes-hook x 5 Screw x 10	Ⓢ  6.0*12mm Screw x 4	Ⓣ  Allen wrench x 1

Tools required

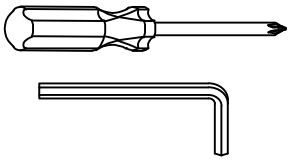


Phillips screwdriver

or Allen wrench

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

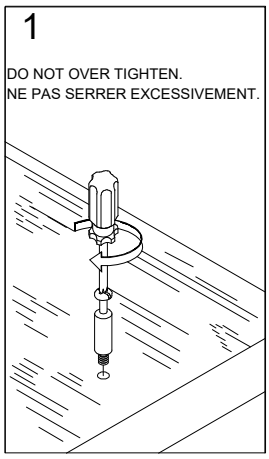

Step 2


Push the male camlock into the entry hole.

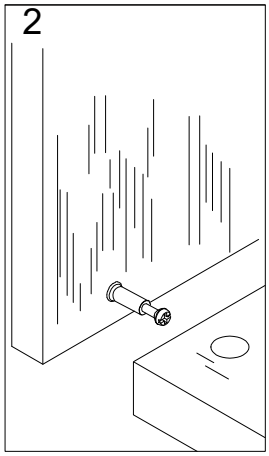

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

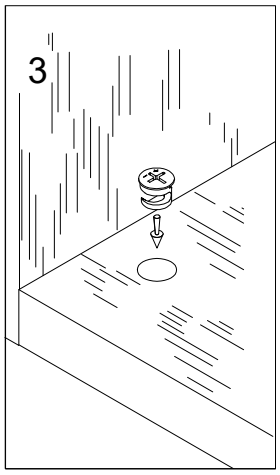


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

















The joint is now secure.

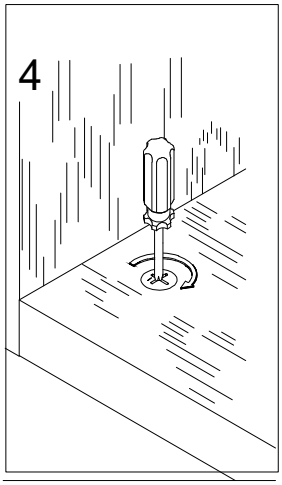

Assembly Instructions

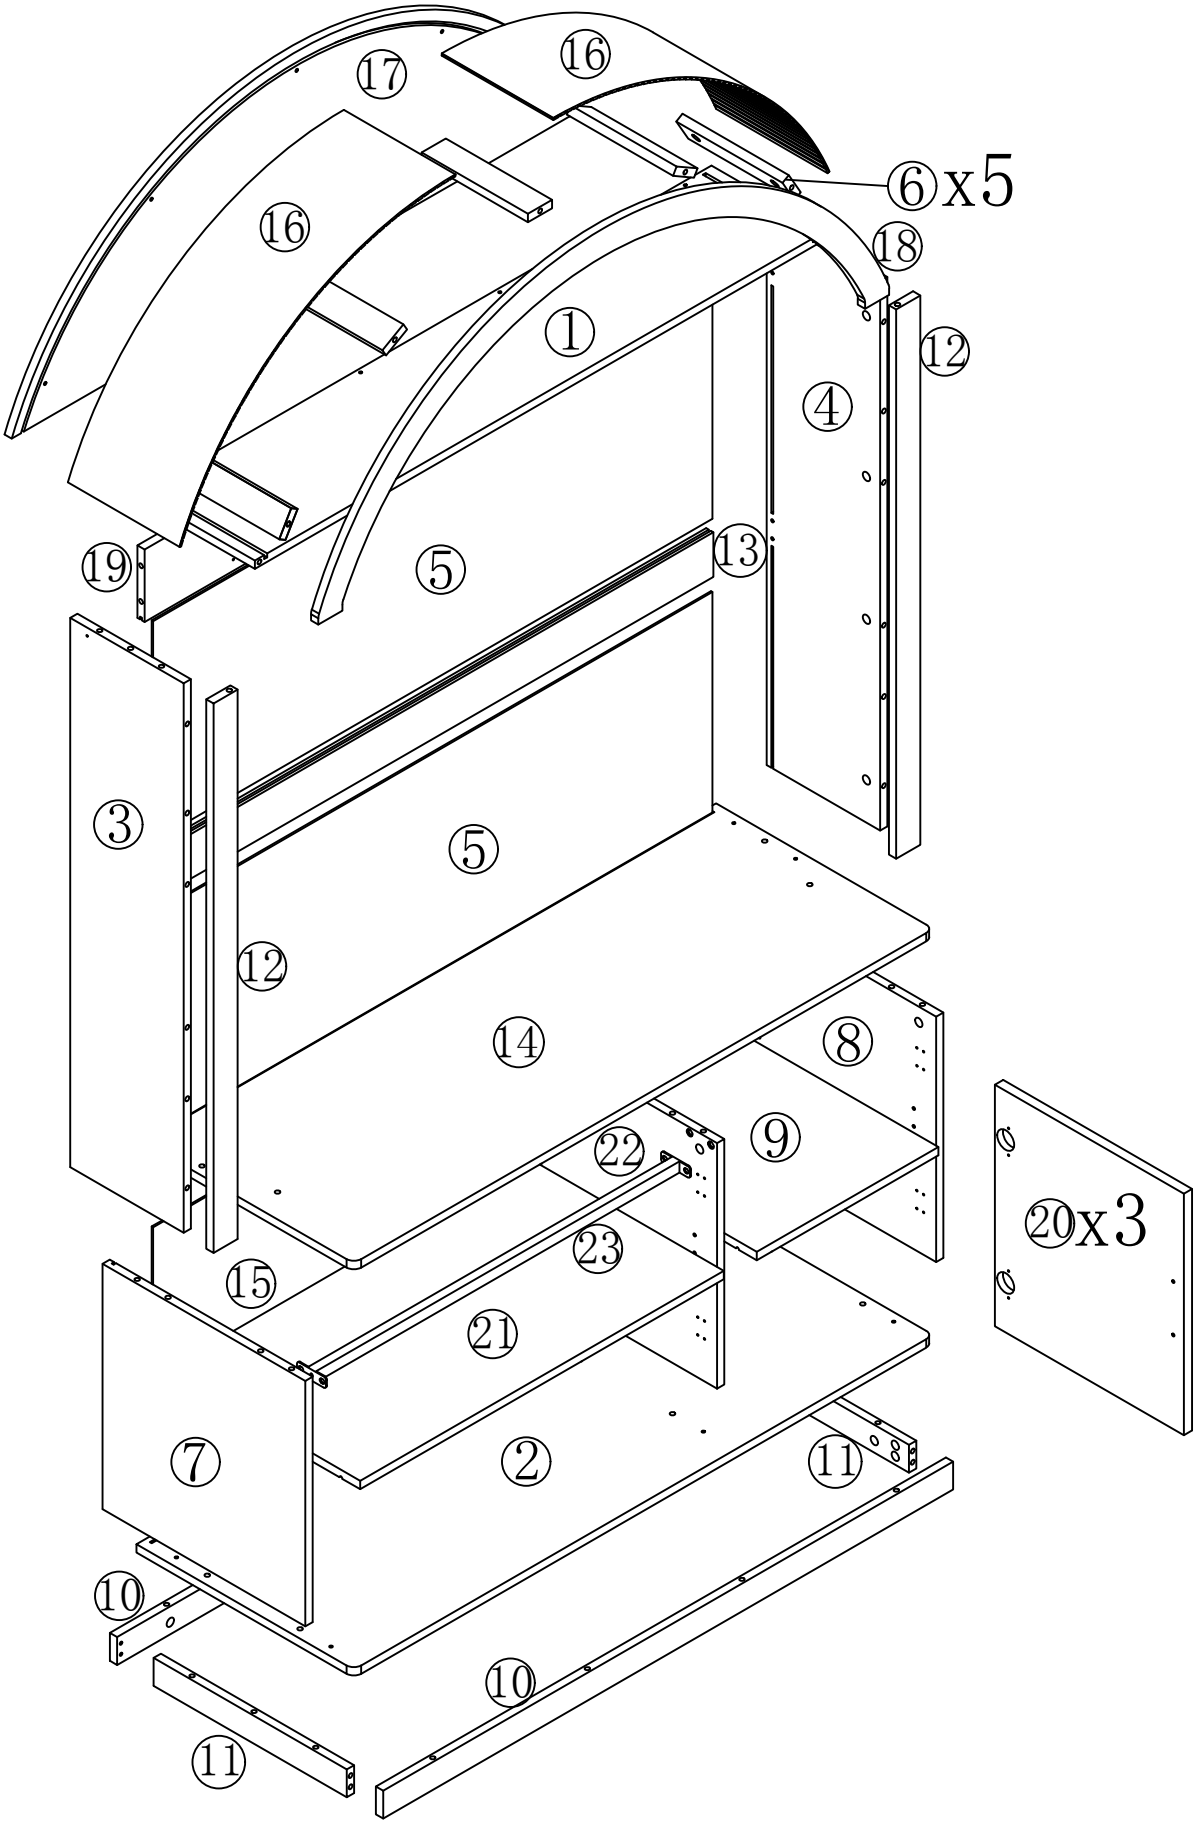



Assembly Instructions

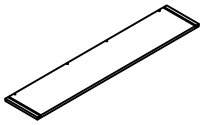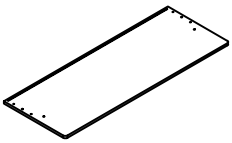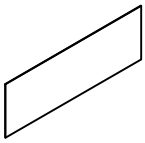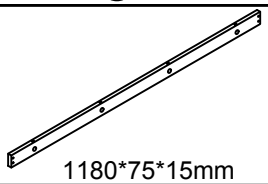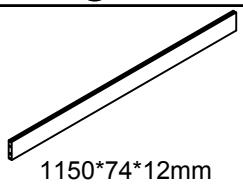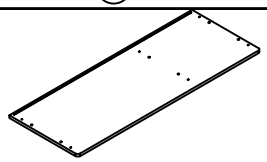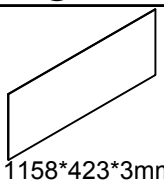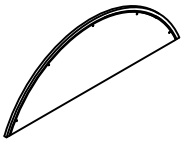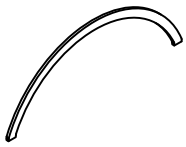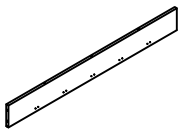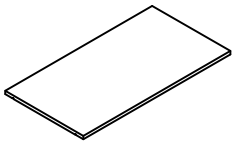
 1181*235.5*15mm	 1200*425*15mm	 985*235*15mm	 985*235*15mm
①X1	②X1	③X1	④X1
 1158*398.5*3mm	 222.5*50*15mm	 415*395*15mm	 415*395*15mm
⑤X2	⑥X5	⑦X1	⑧X1
 376*374*12mm	 1180*75*15mm	 375*75*15mm	 985*50*15mm
⑨X1	⑩ X2	⑪ X2	⑫ X2
 1150*74*12mm	 1200*425*15mm	 1158*423*3mm	
⑬ X1	⑭ X1	⑮ X1	⑯ X2
 1180*399*12mm	 1180*415*15mm	 1150*130*12mm	 408*391*17mm
⑰ X1	⑱ X1	⑲ X1	⑳ X1
 753*374*12mm	 415*381*15mm	 75*70*20mm	
㉑ X1	㉒ X1	㉓ X1	

Assembly Instructions


Step 1

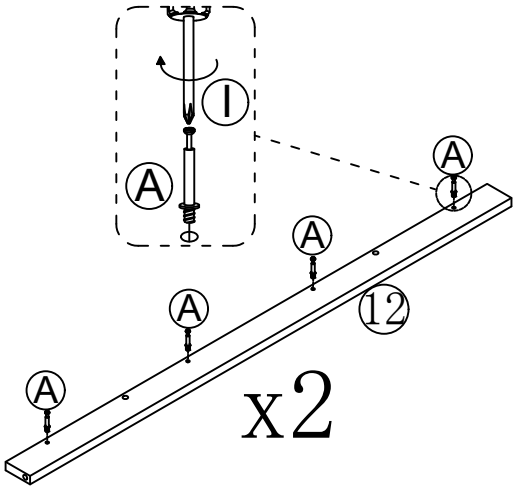


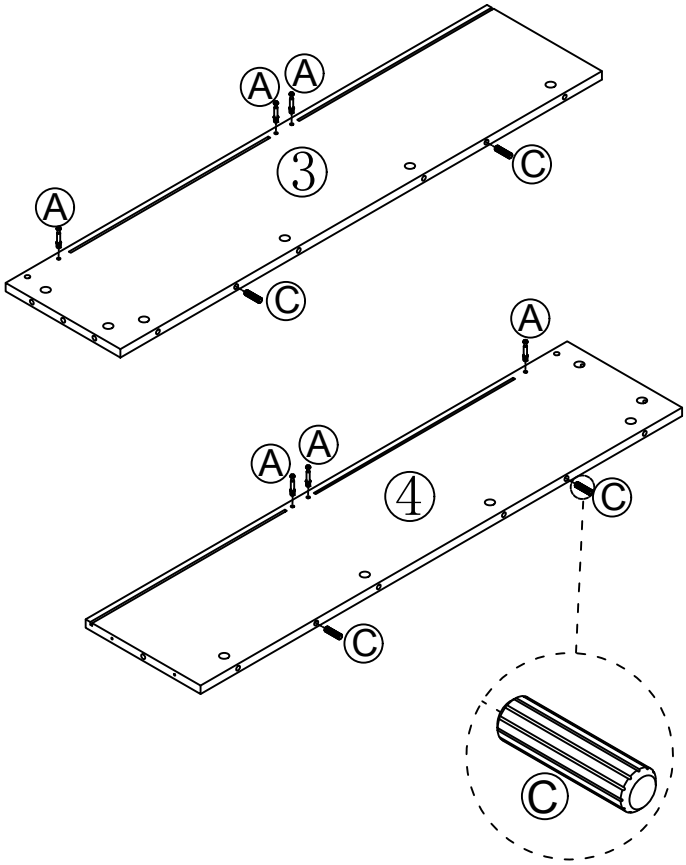


A	C
	
6*35mm Cam Bolt x 14	8*30mm Dowel x 4

[redacted]

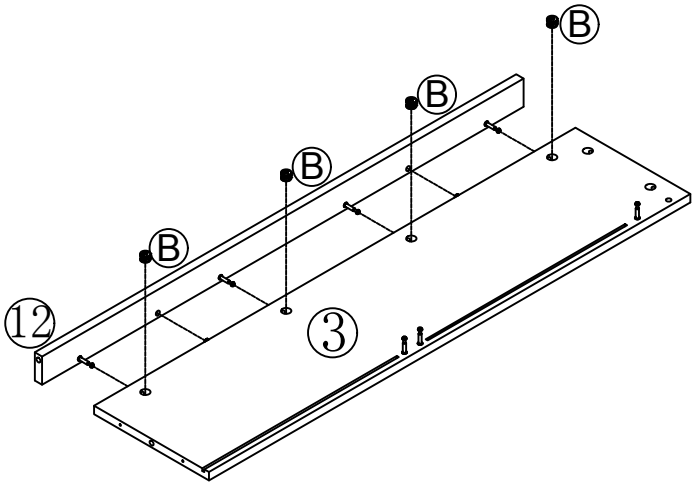

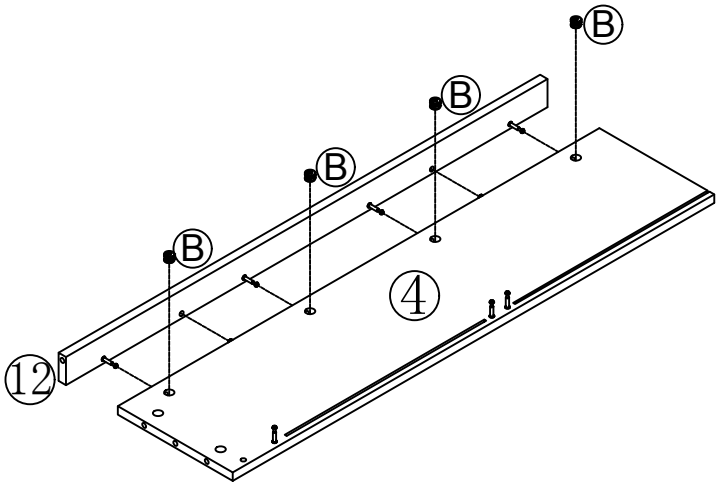

Step 1 Step 2 Step 3

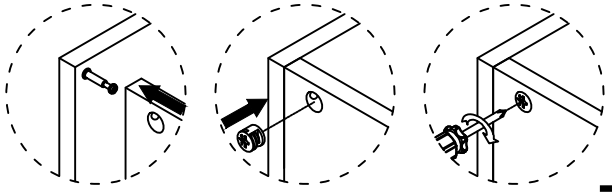


B

15*10mm Cam Lock x 8


Assembly Instructions


Step 3

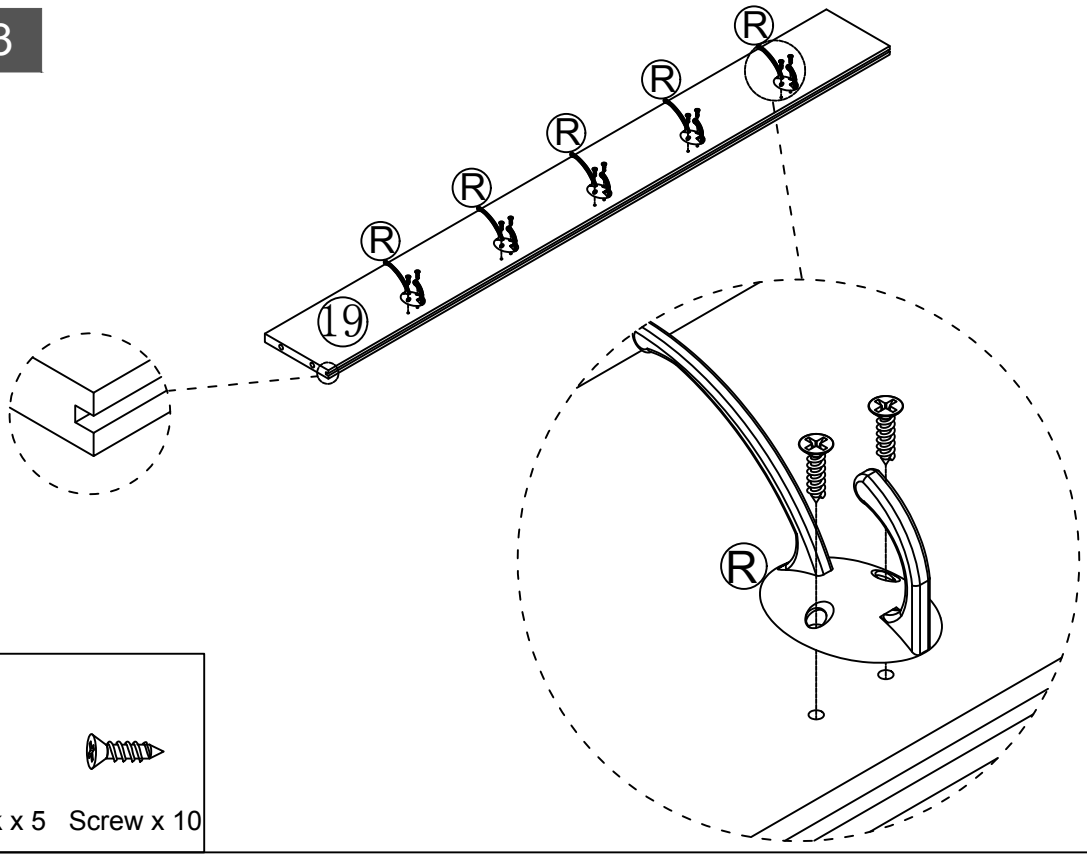

Clothes-hook x 5 Screw x 10

Step 4

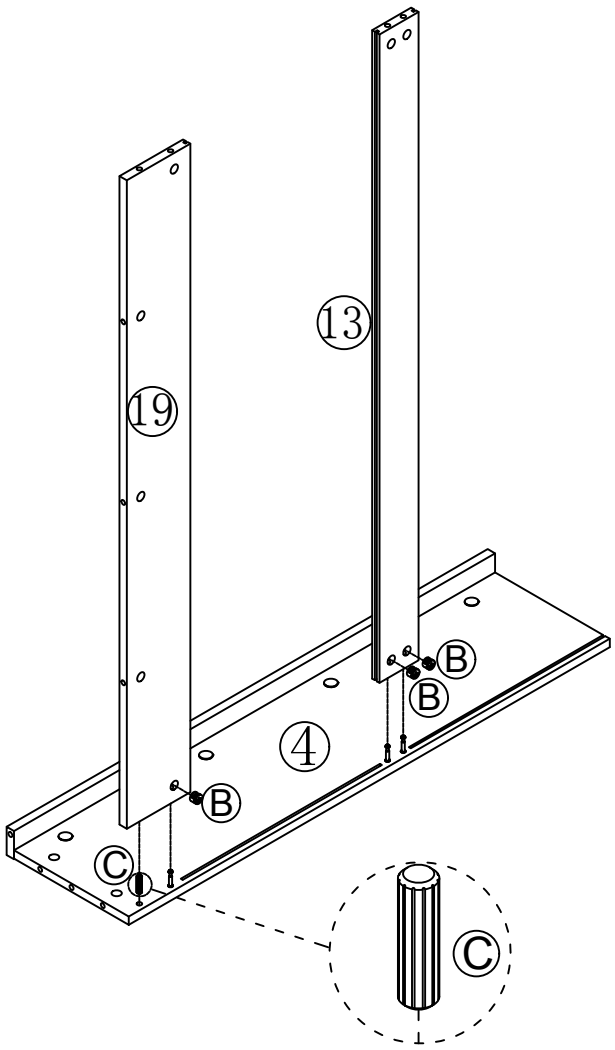

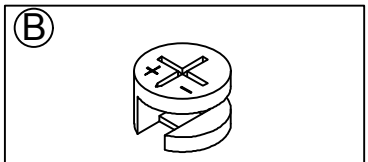


15*10mm Cam Lock x 3



8*30mm Dowel x 1

Assembly Instructions

Step 5

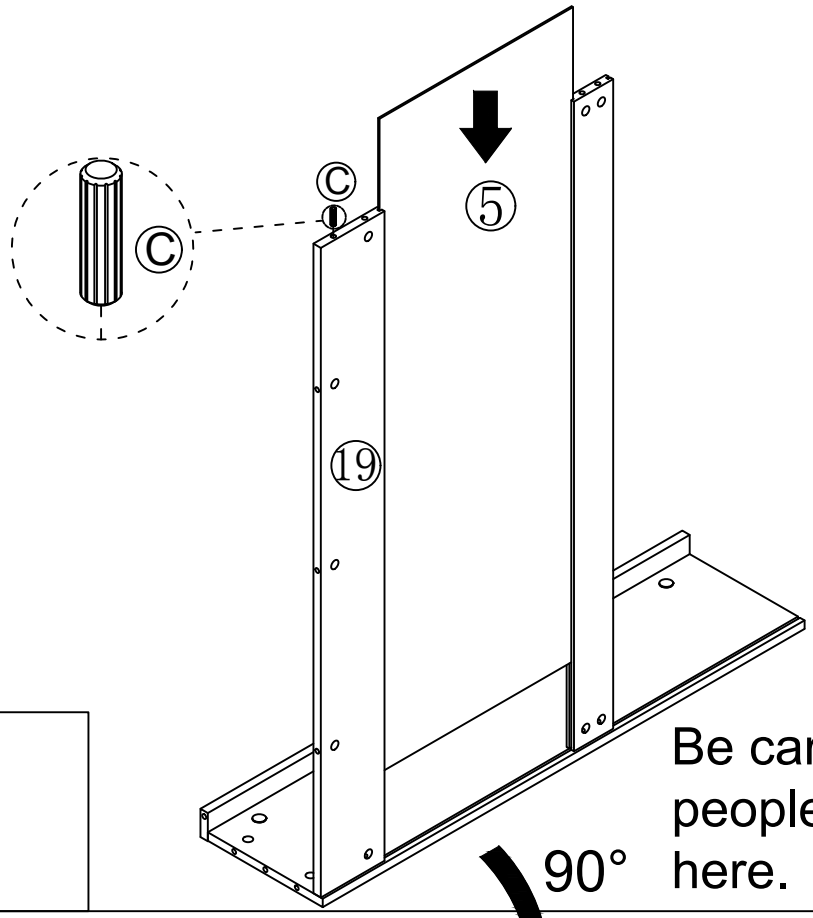

Ⓒ





8*30mm Dowel x 1

90°

Be careful! At least two people are required here.

Step 6

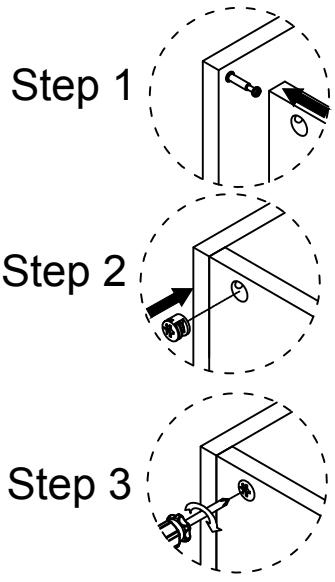

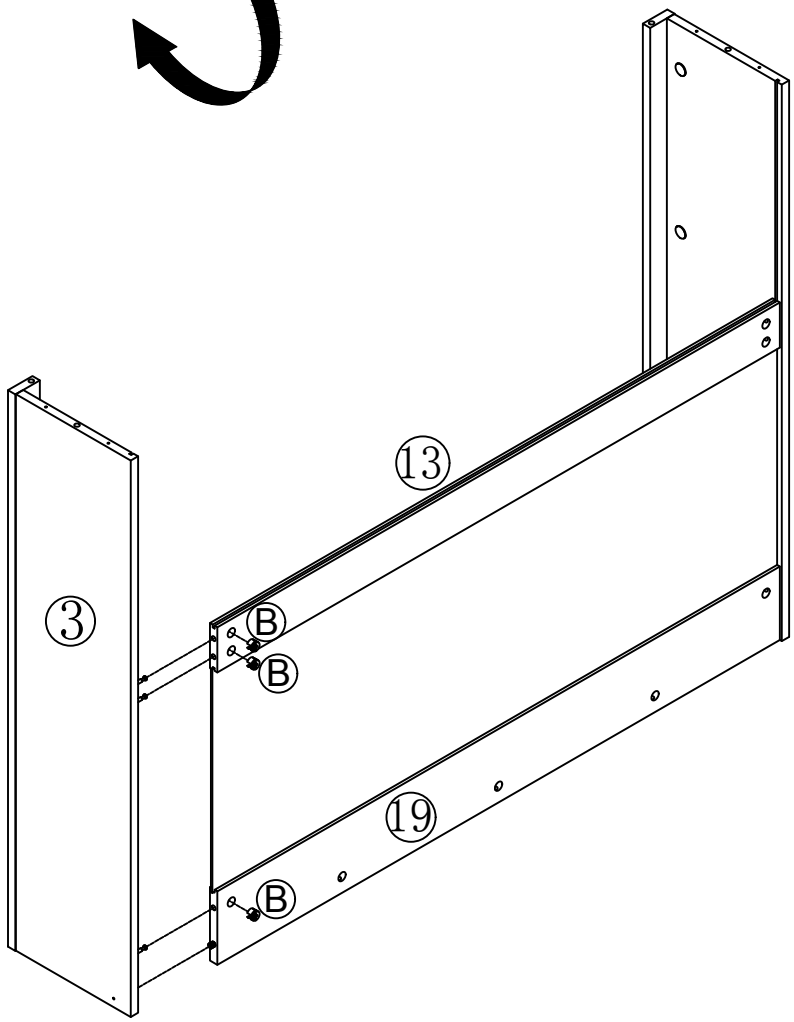


Ⓑ



15*10mm Cam Lock x 3

Assembly Instructions


Step 7

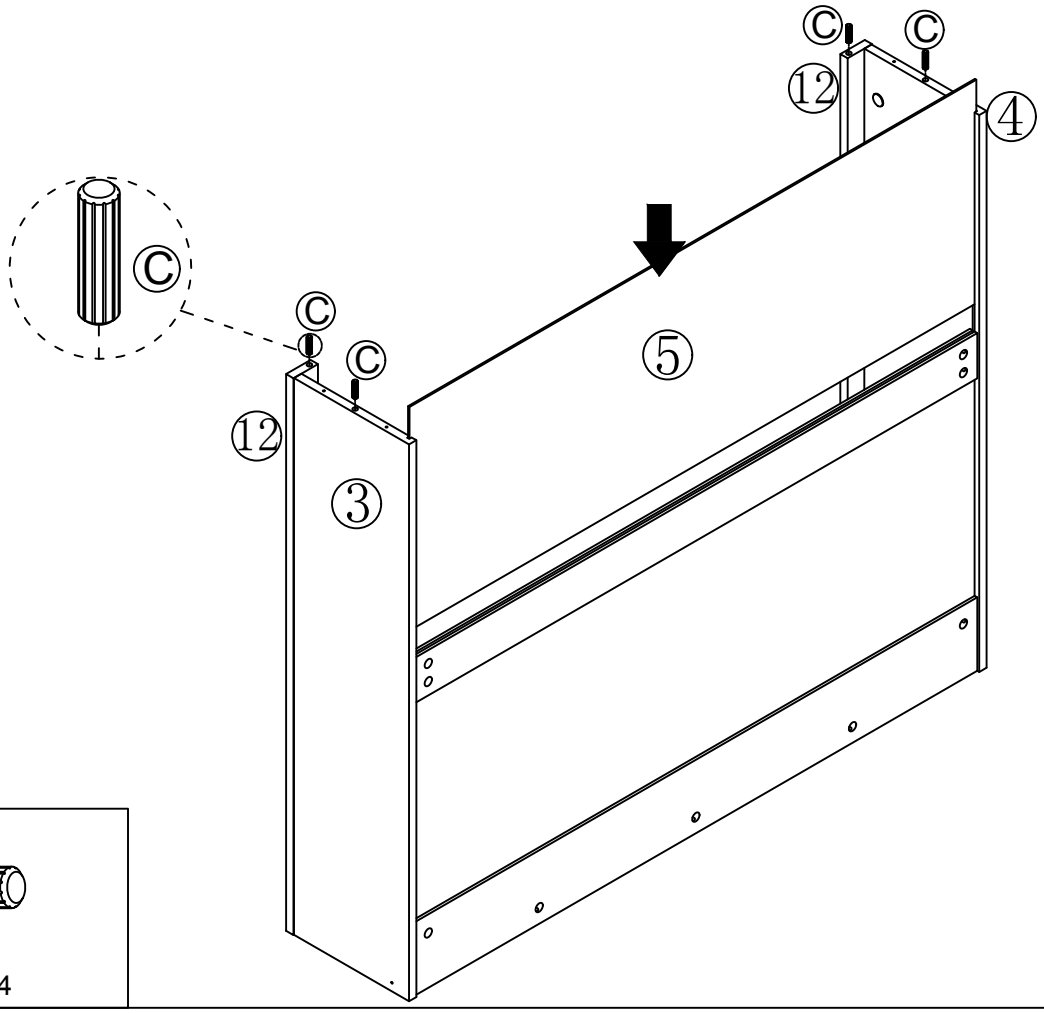


C

8*30mm Dowel x 4


Step 8

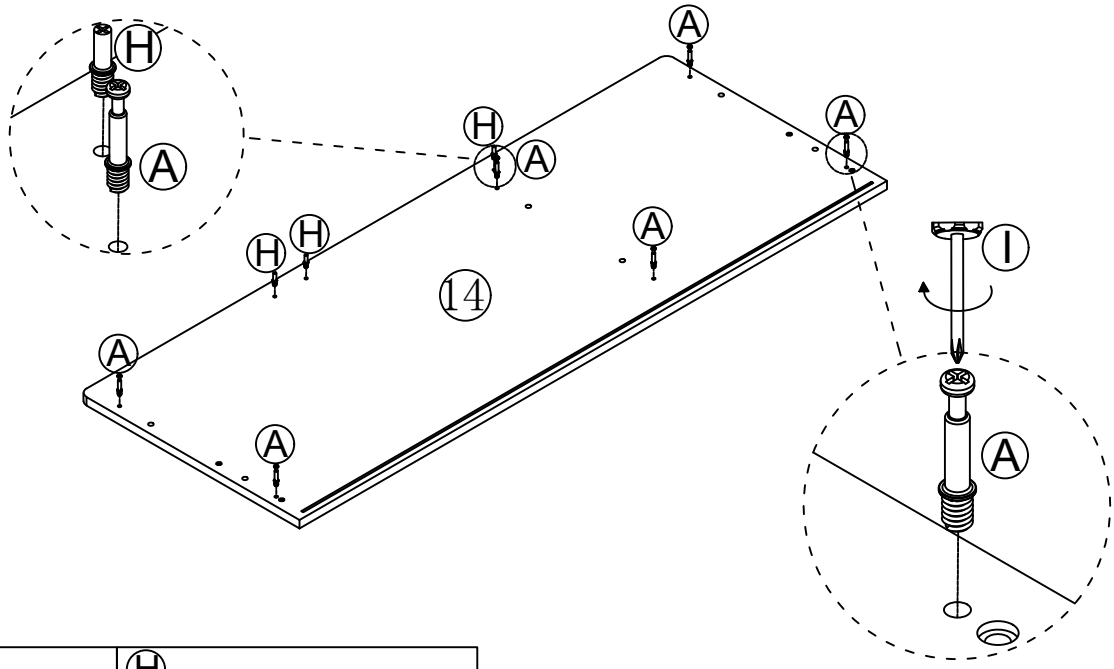


A	H
	
6*35mm Cam Bolt x 6	6*21mm Door stop x 3

Assembly Instructions

Step 9

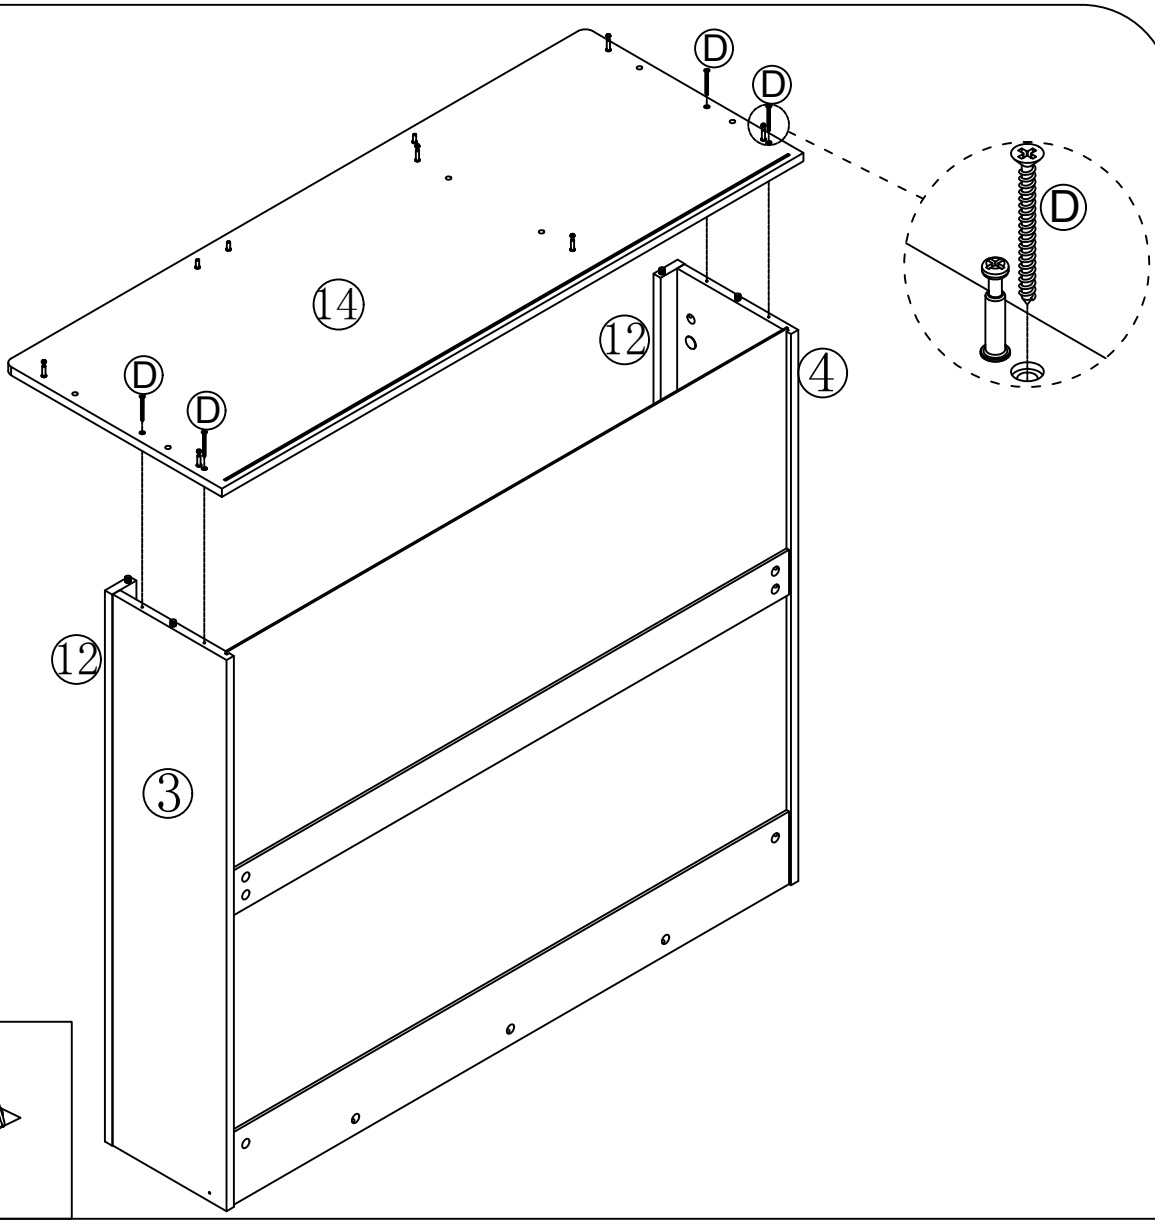


D




4*40mm Screw x 4

Step 10

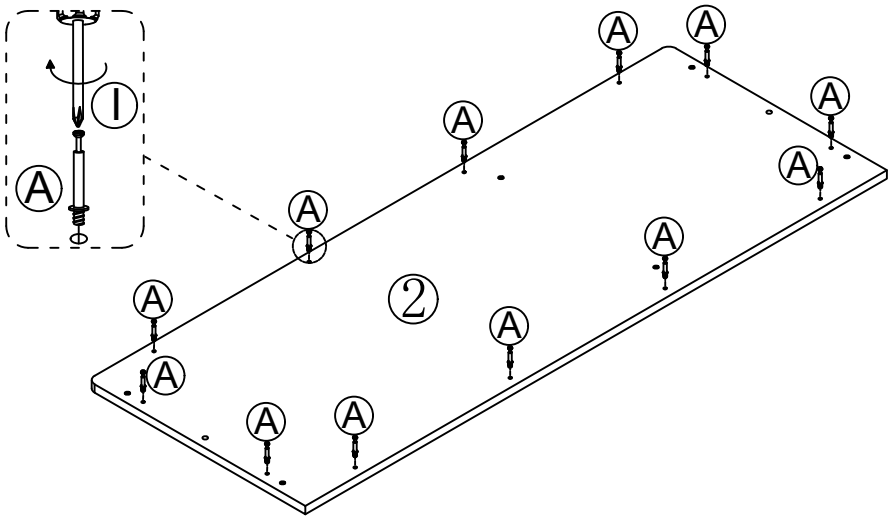

A




6*35mm Cam Bolt x 12

Assembly Instructions

Step 11

As shown in the figure, the eccentric wheel opening is facing upwards.

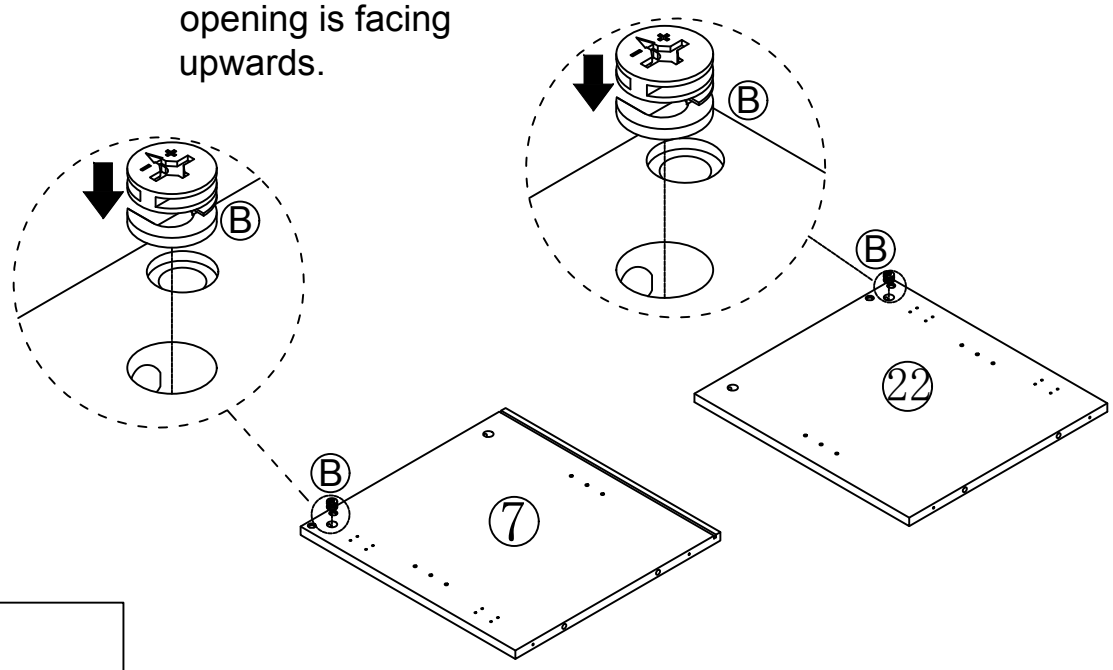


Ⓑ




15*10mm Cam Lock x 2

Step 12

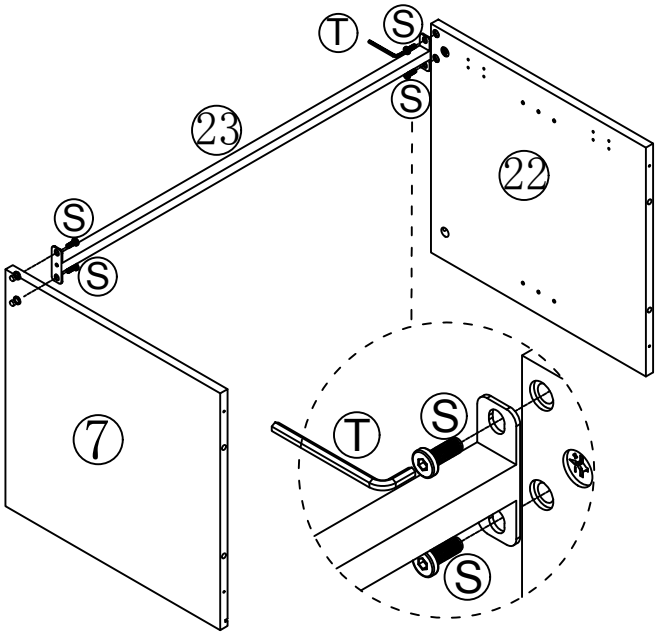

Ⓢ



6.0*12mm Screw x 4


Ⓣ



Allen wrench x 1

Assembly Instructions

Step 13

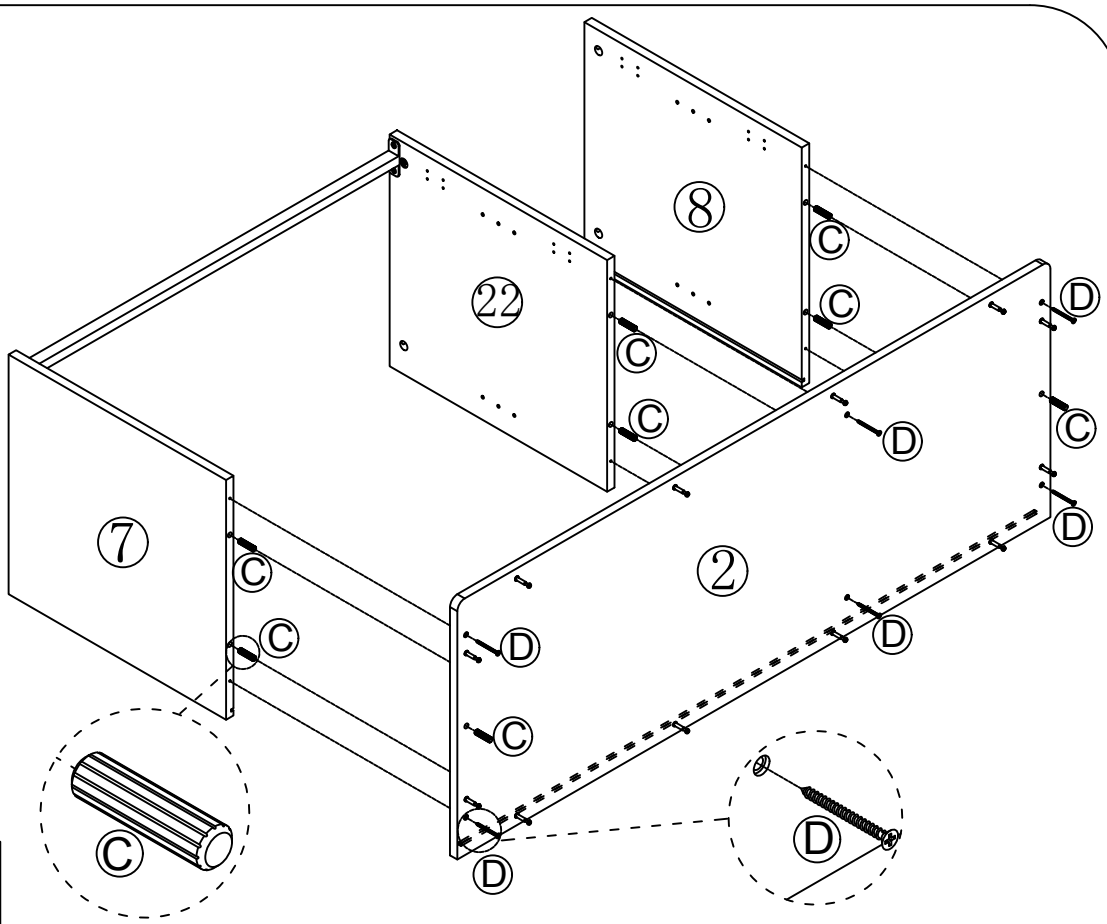


Ⓒ




8*30mm Dowel x 8

Ⓓ




4*40mm Screw x 6

Step 14

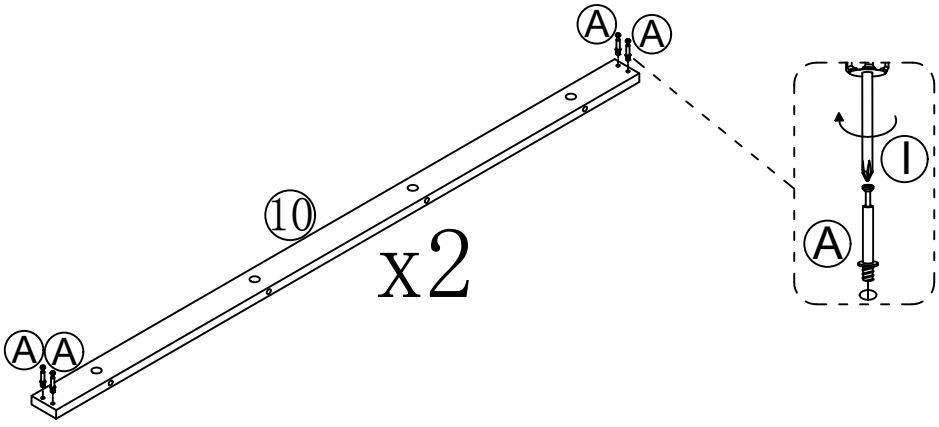


Ⓐ




6*35mm Cam Bolt x 8

Assembly Instructions

Step 15

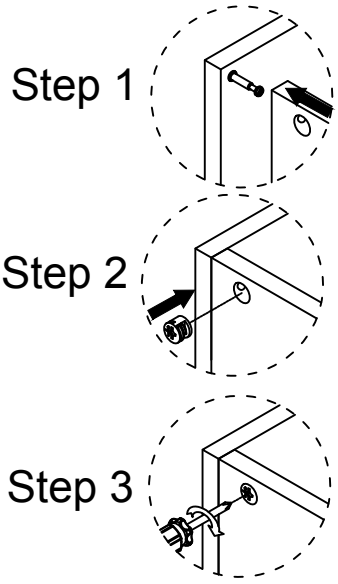

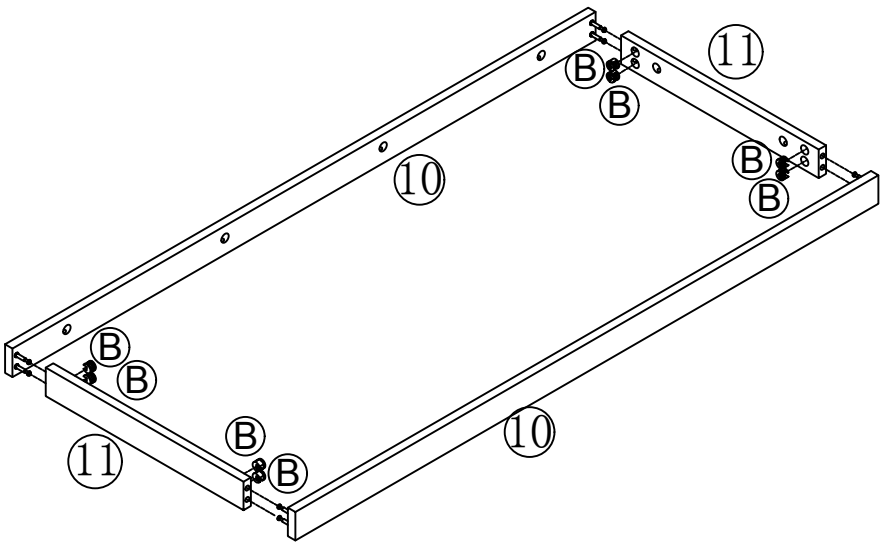


Ⓑ




15*10mm Cam Lock x 8

Step 16

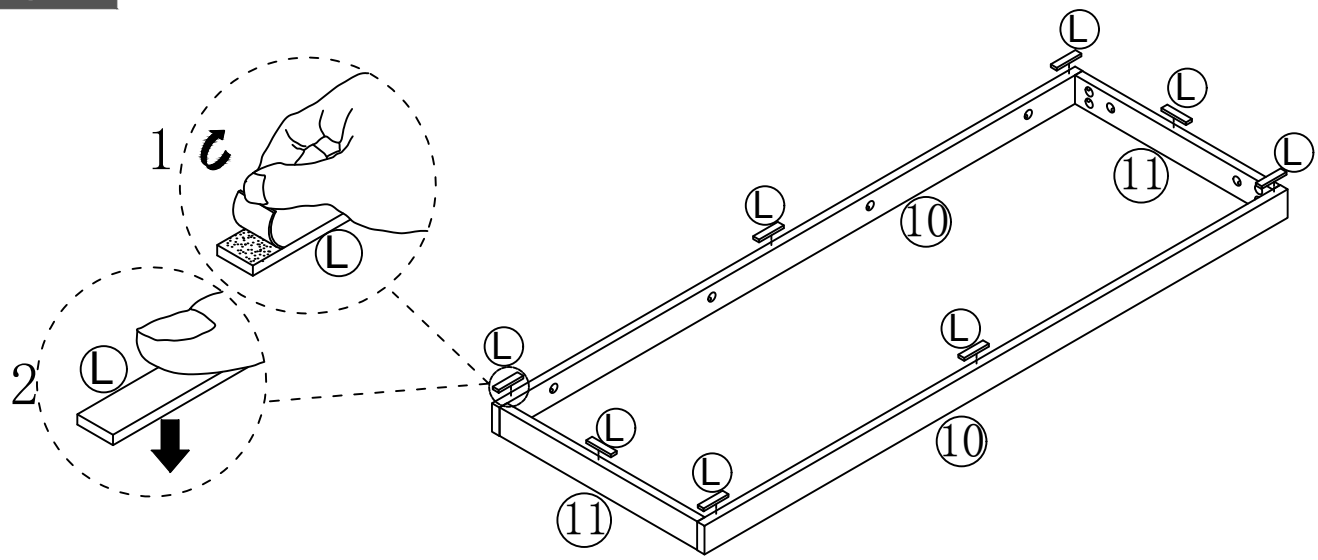


Ⓛ

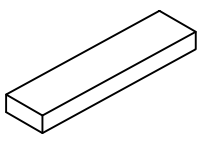

EVA pad x 8

Assembly Instructions

Step 17

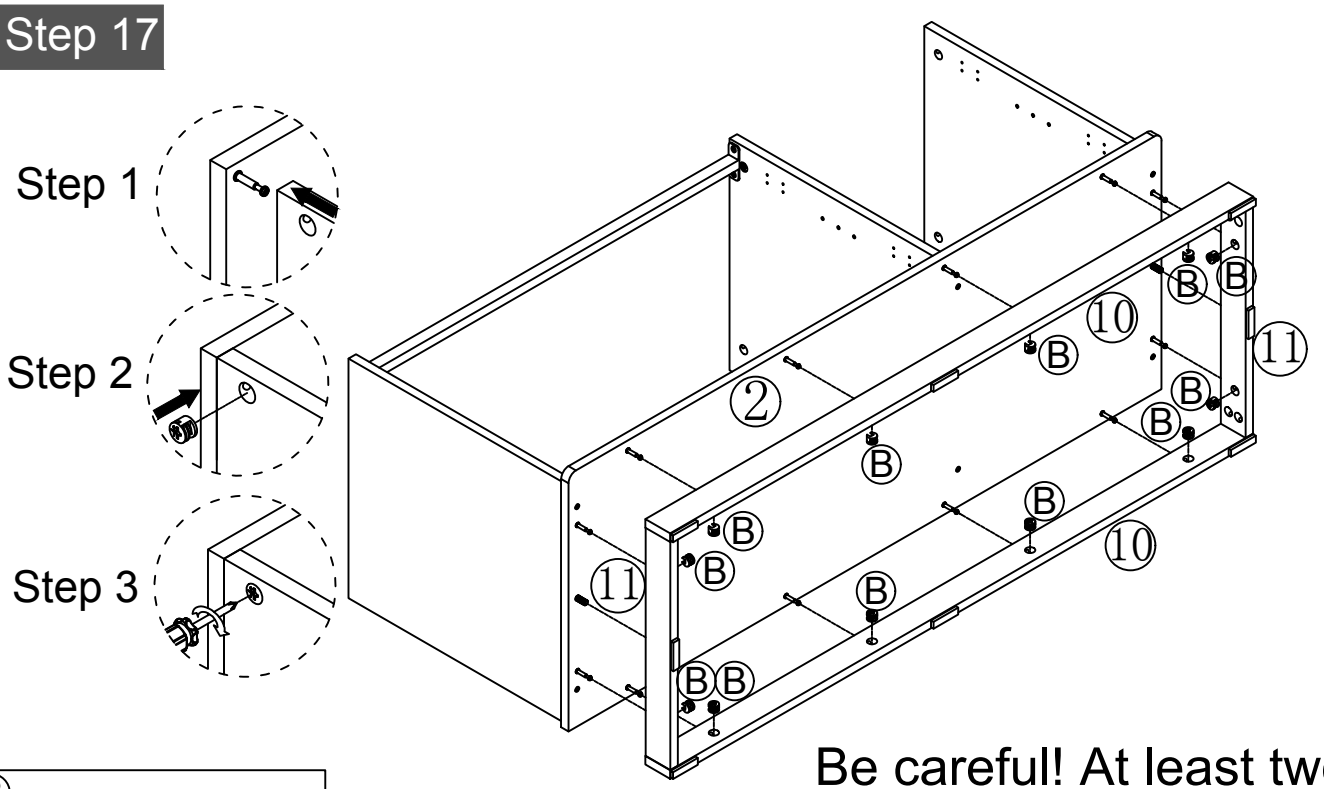

Be careful! At least two people are required here.


Ⓑ



15*10mm Cam Lock x12

90°

Step 18

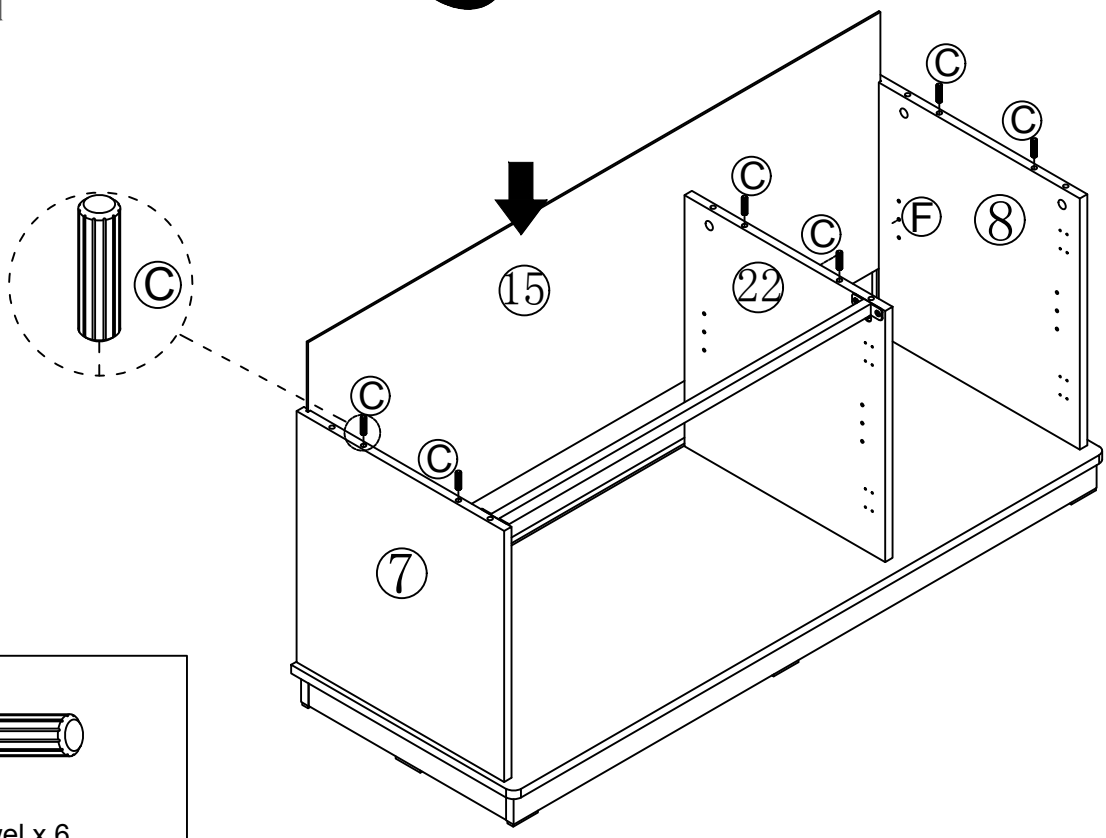


Ⓒ

8*30mm Dowel x 6

Assembly Instructions

Step 19

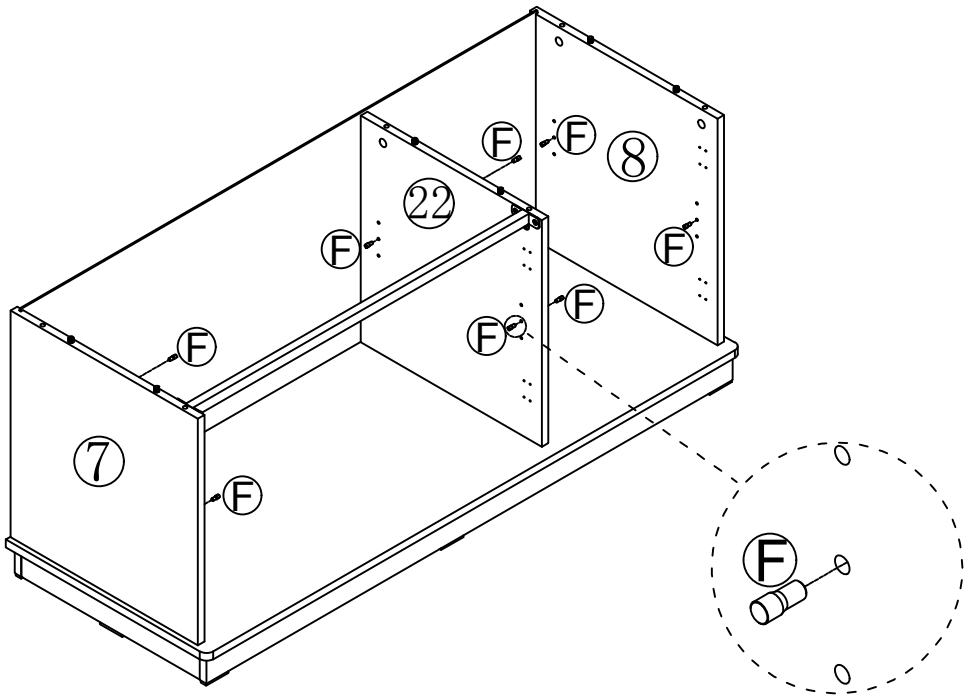


Ⓕ



Layer plate support x 8

Step 20

Caution Notice
At least two people need to complete it simultaneously

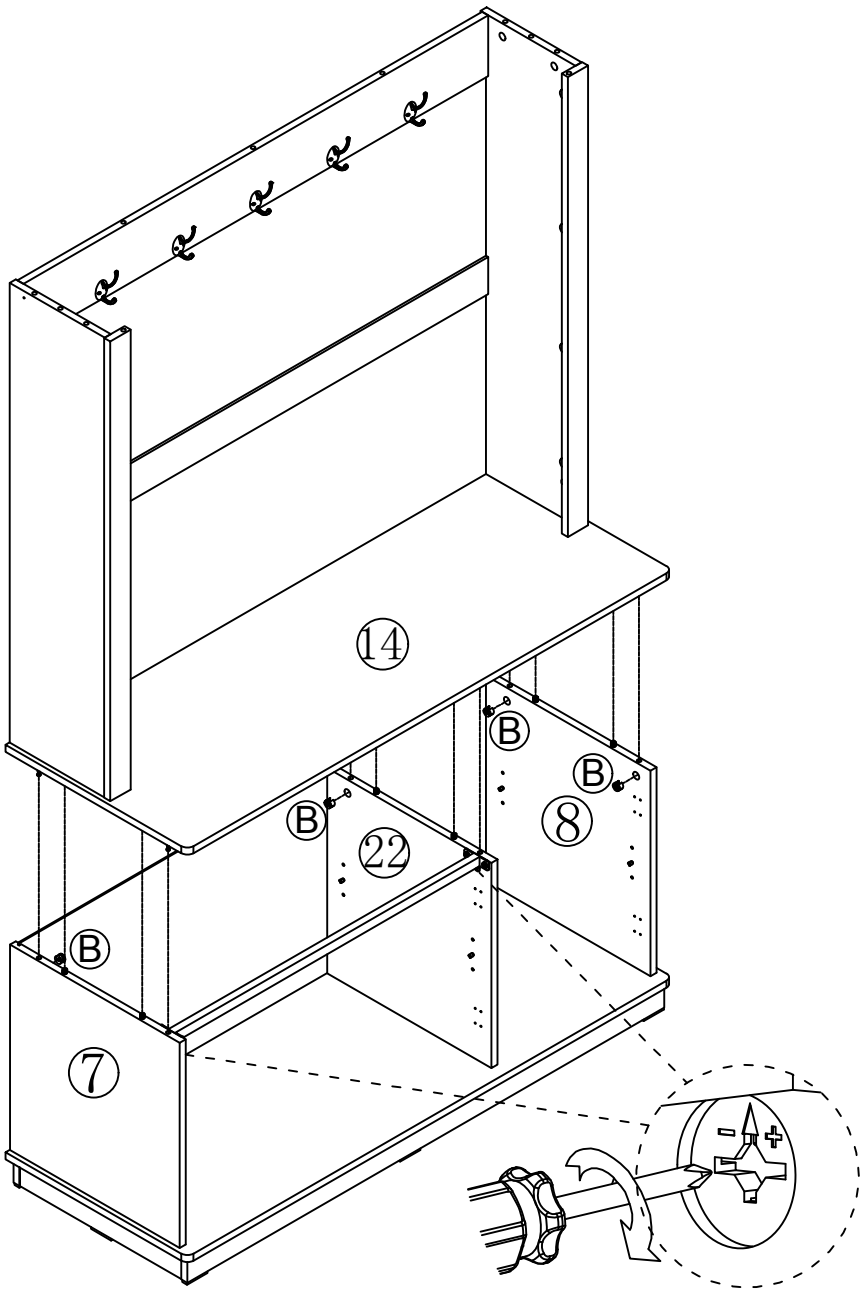


Ⓑ



15*10mm Cam Lock x 4

Assembly Instructions

Step 21

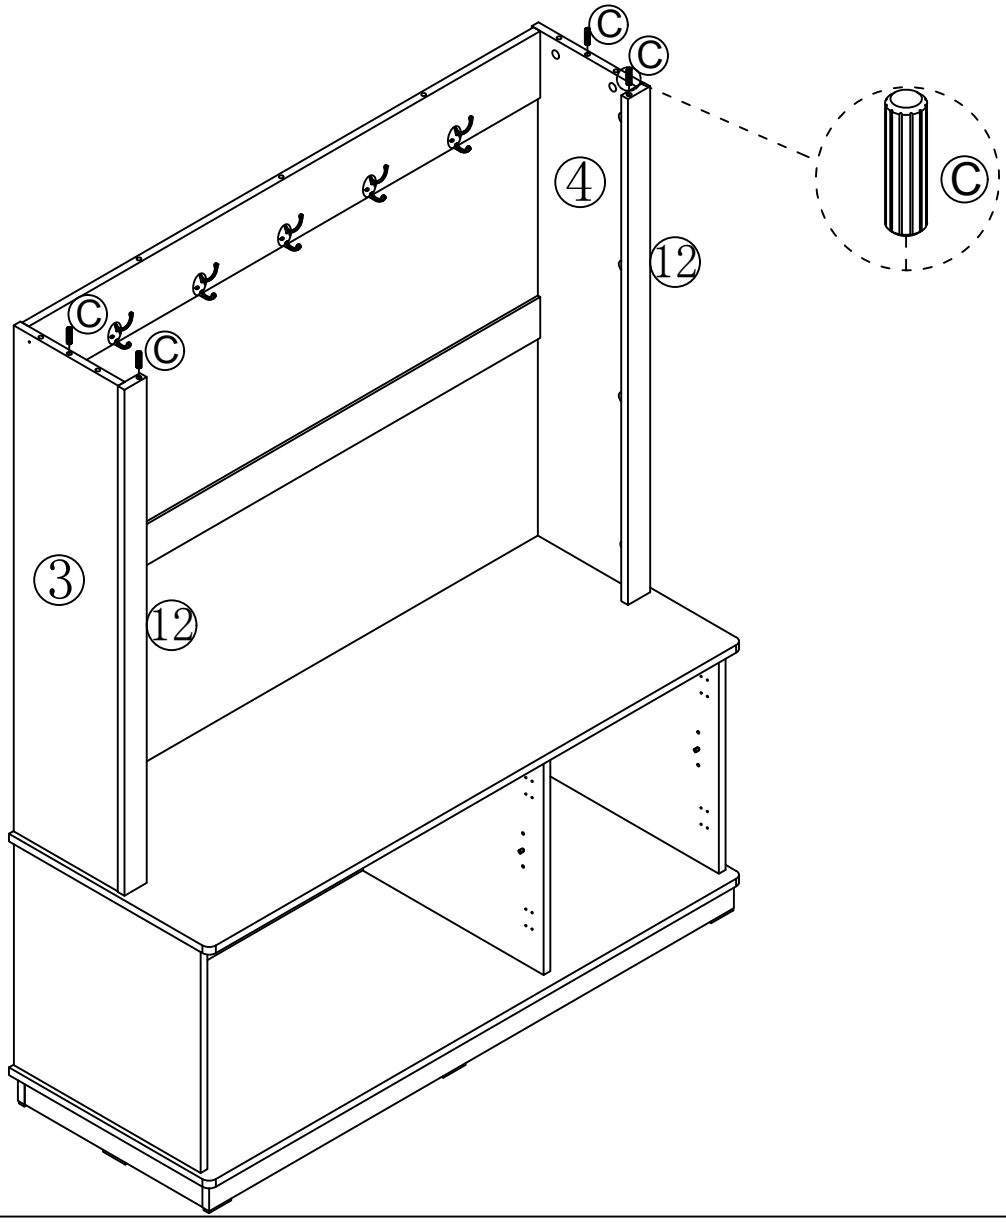


Ⓒ




8*30mm Dowel x 4

Step 22

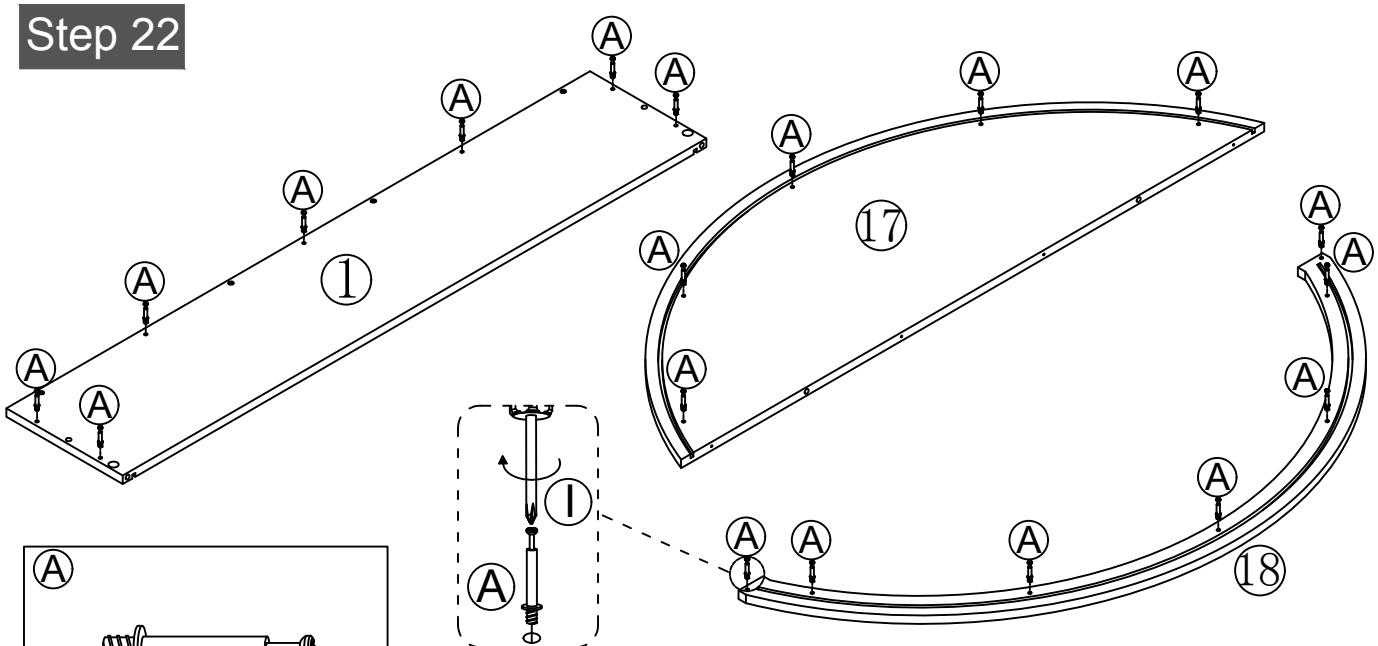


Ⓐ





6*35mm Cam Bolt x 19

Assembly Instructions

Step 23

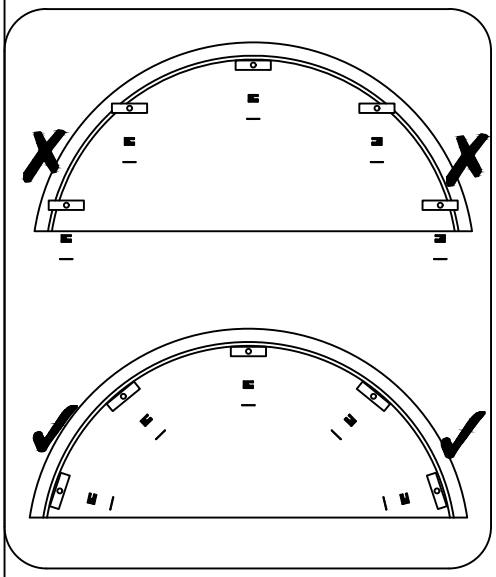

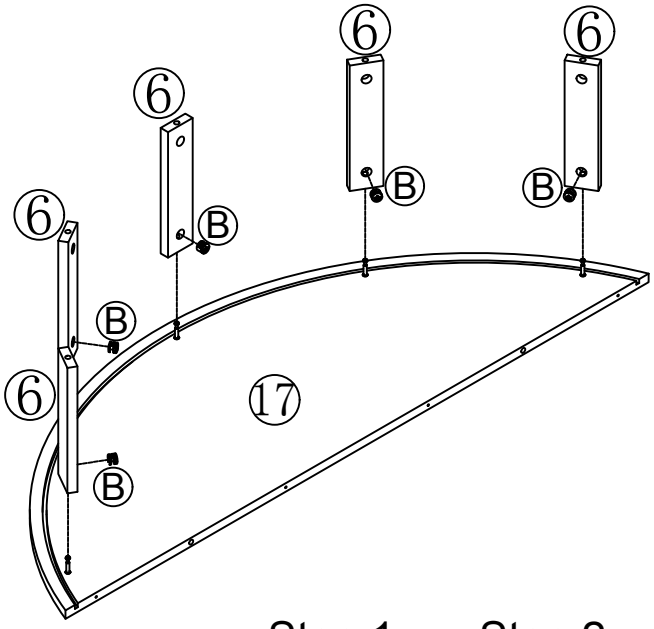

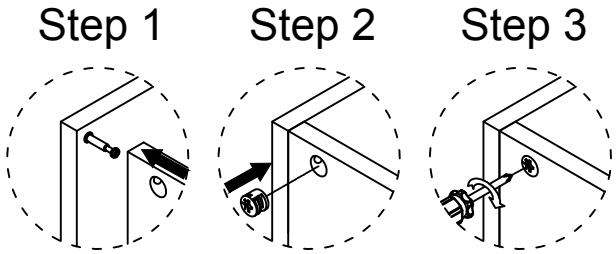


Ⓑ




15*10mm Cam Lock x 5

Step 24

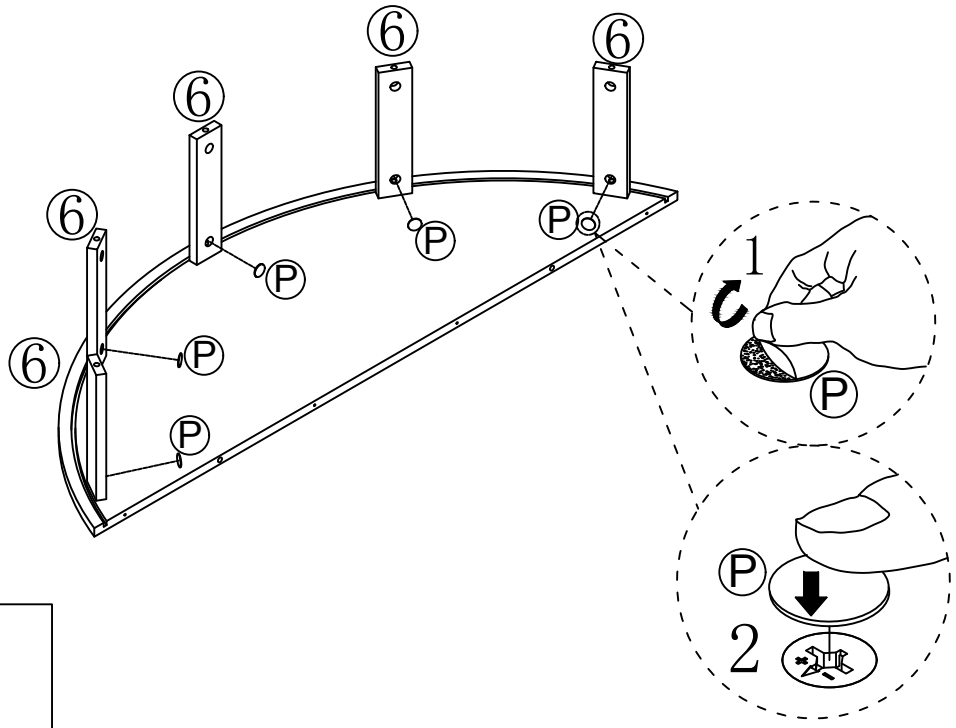


Ⓟ




Hole position sticker x 5


Assembly Instructions

Step 25

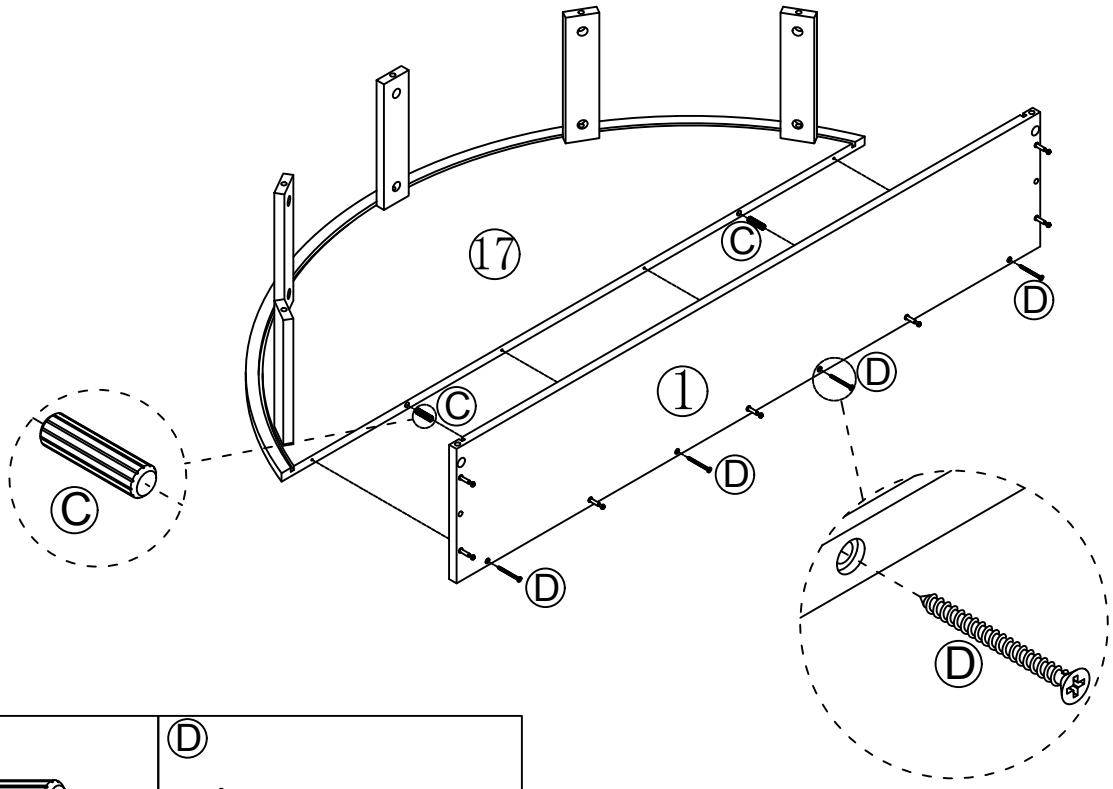


C	D
	
8*30mm Dowel x 2	4*40mm Screw x 4

Step 26

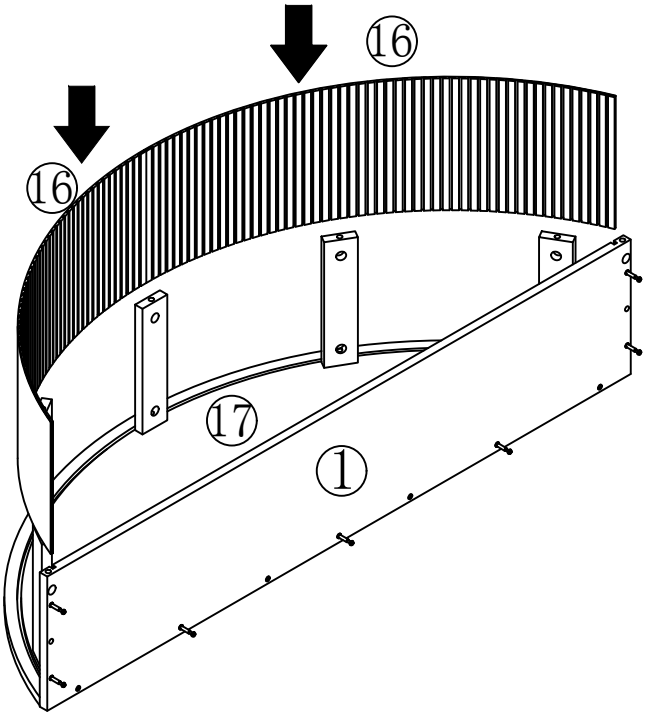

Assembly Instructions


Step 27

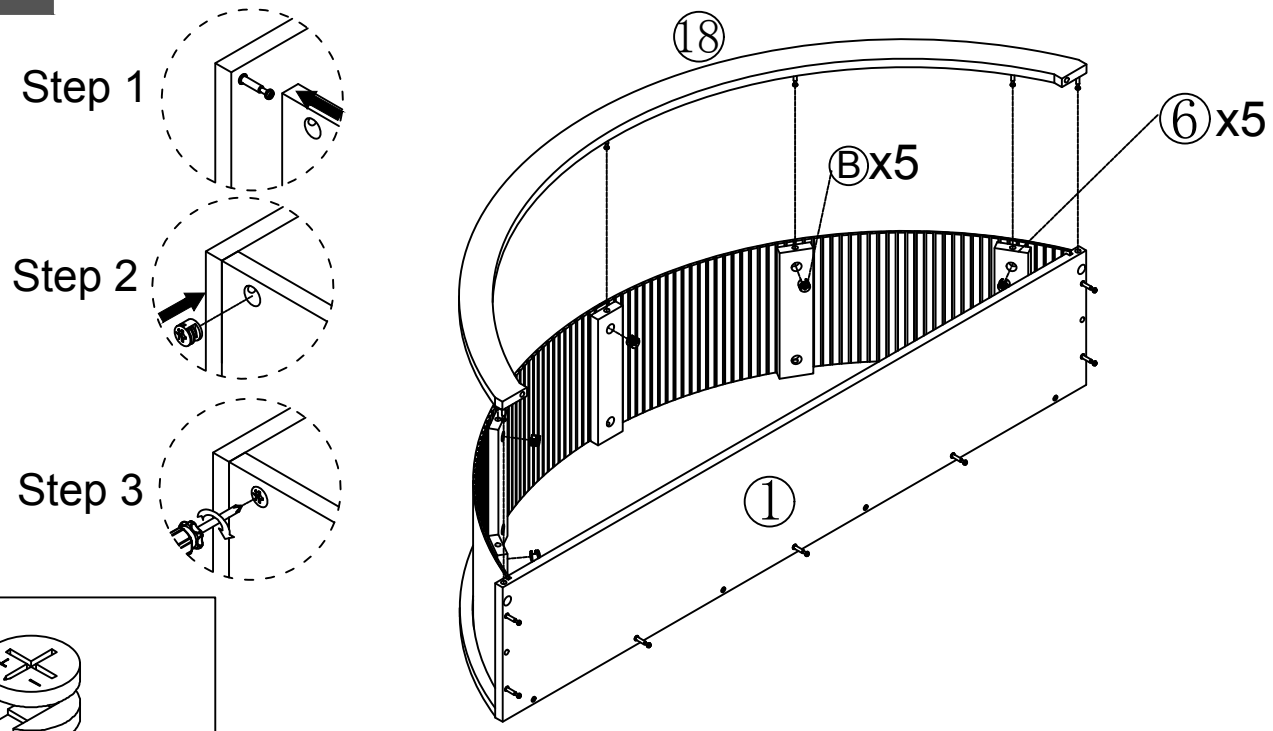


Ⓑ

15*10mm Cam Lock x 5


Step 28

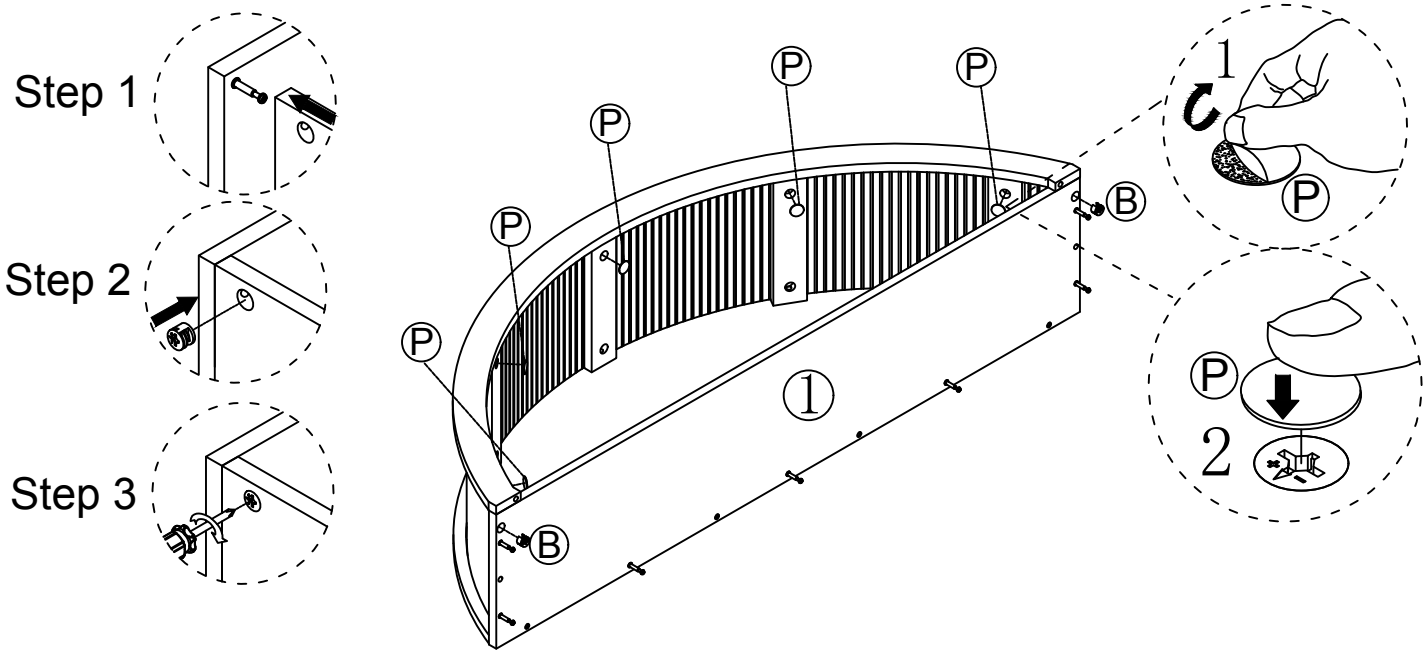


Ⓑ	Ⓟ
	
15*10mm Cam Lock x 2	Hole position sticker x 5

Assembly Instructions

Step 29

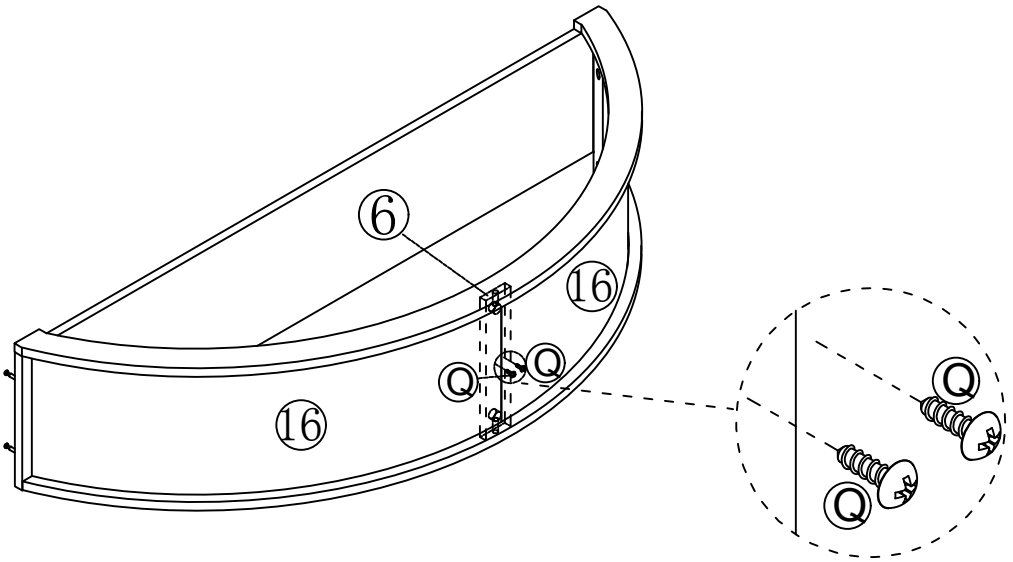


Q



4.0*14mm Screw x2

Step 30

Caution Notice
At least two people need to complete it simultaneously

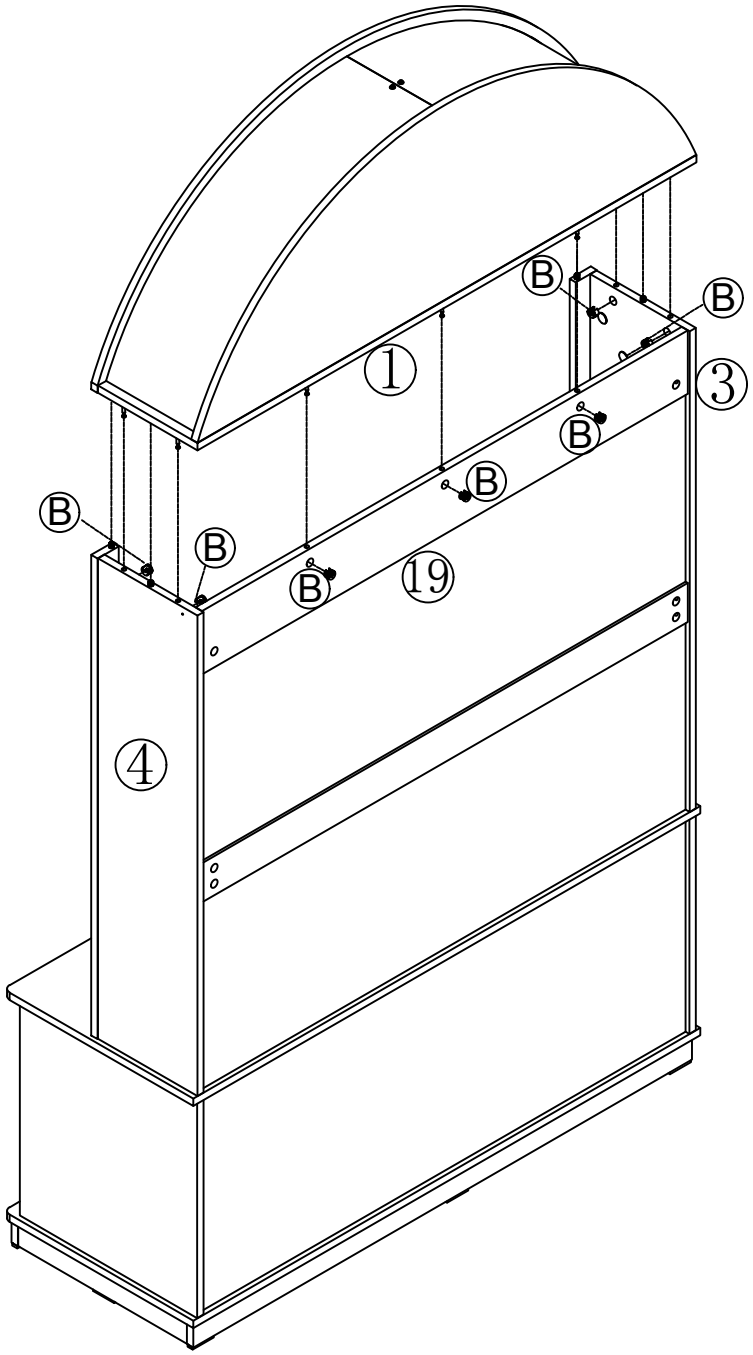


B



15*10mm Cam Lock x 7

Assembly Instructions


Step 31

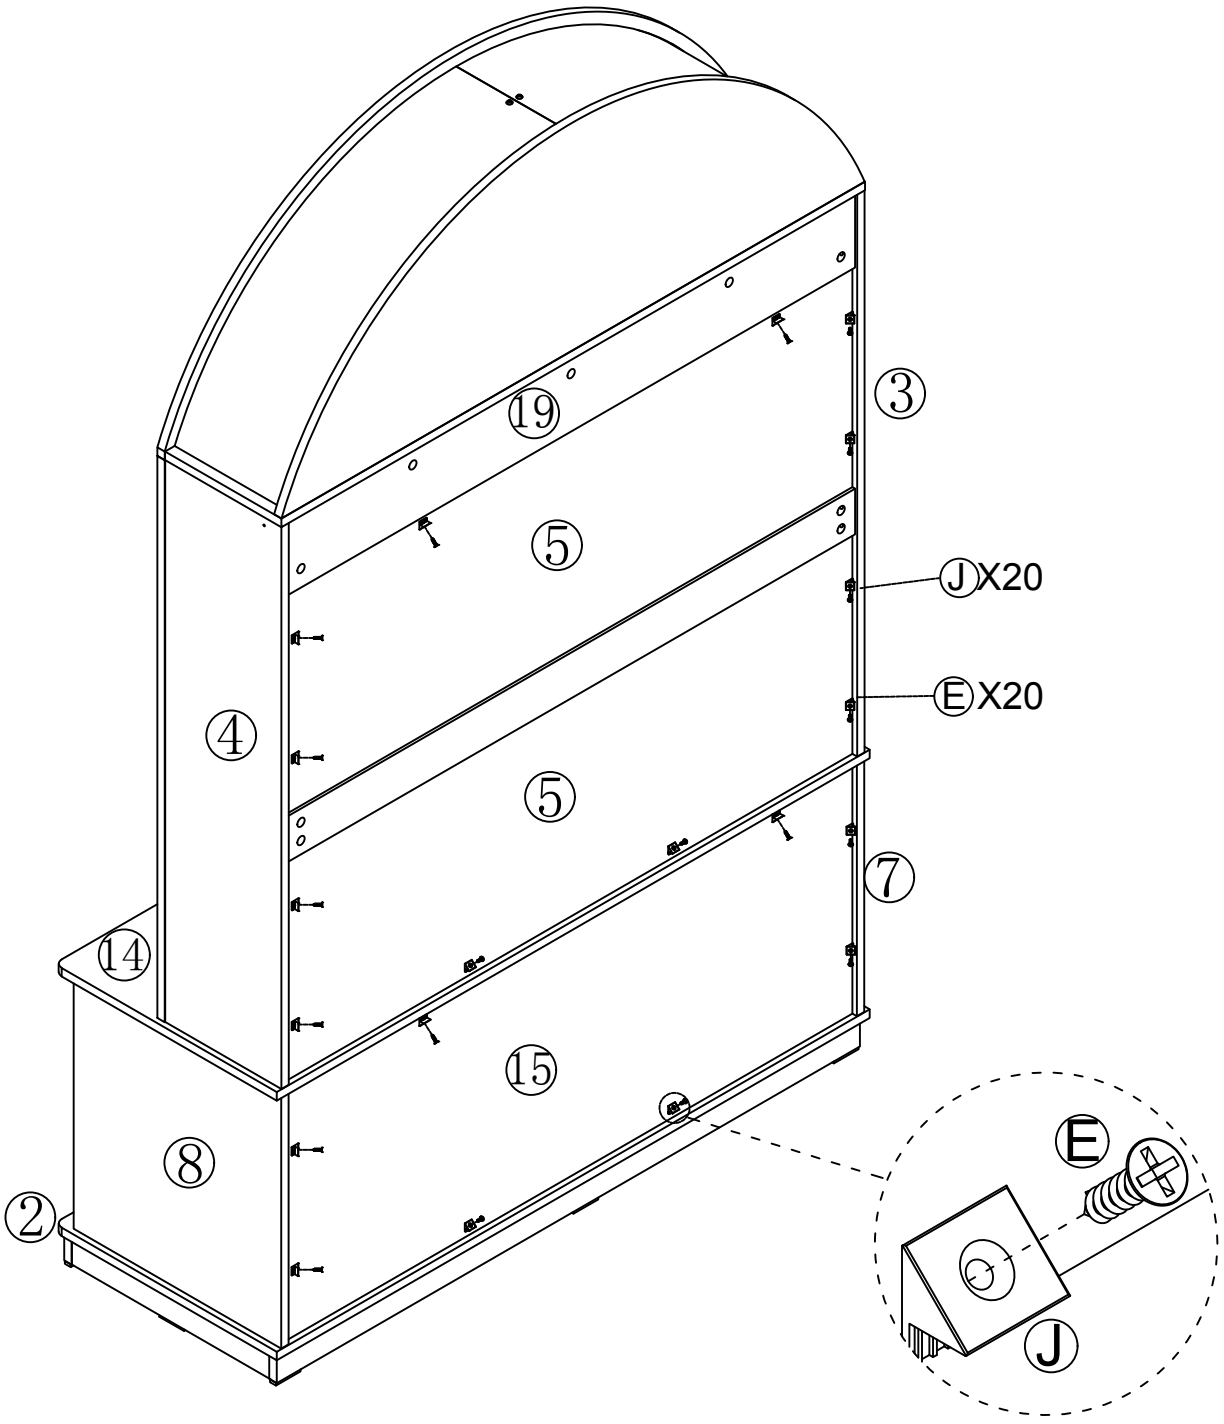


E	J
	
3.5*14mm Screw x 20	Back panel buckle x 20

Assembly Instructions


Step 32


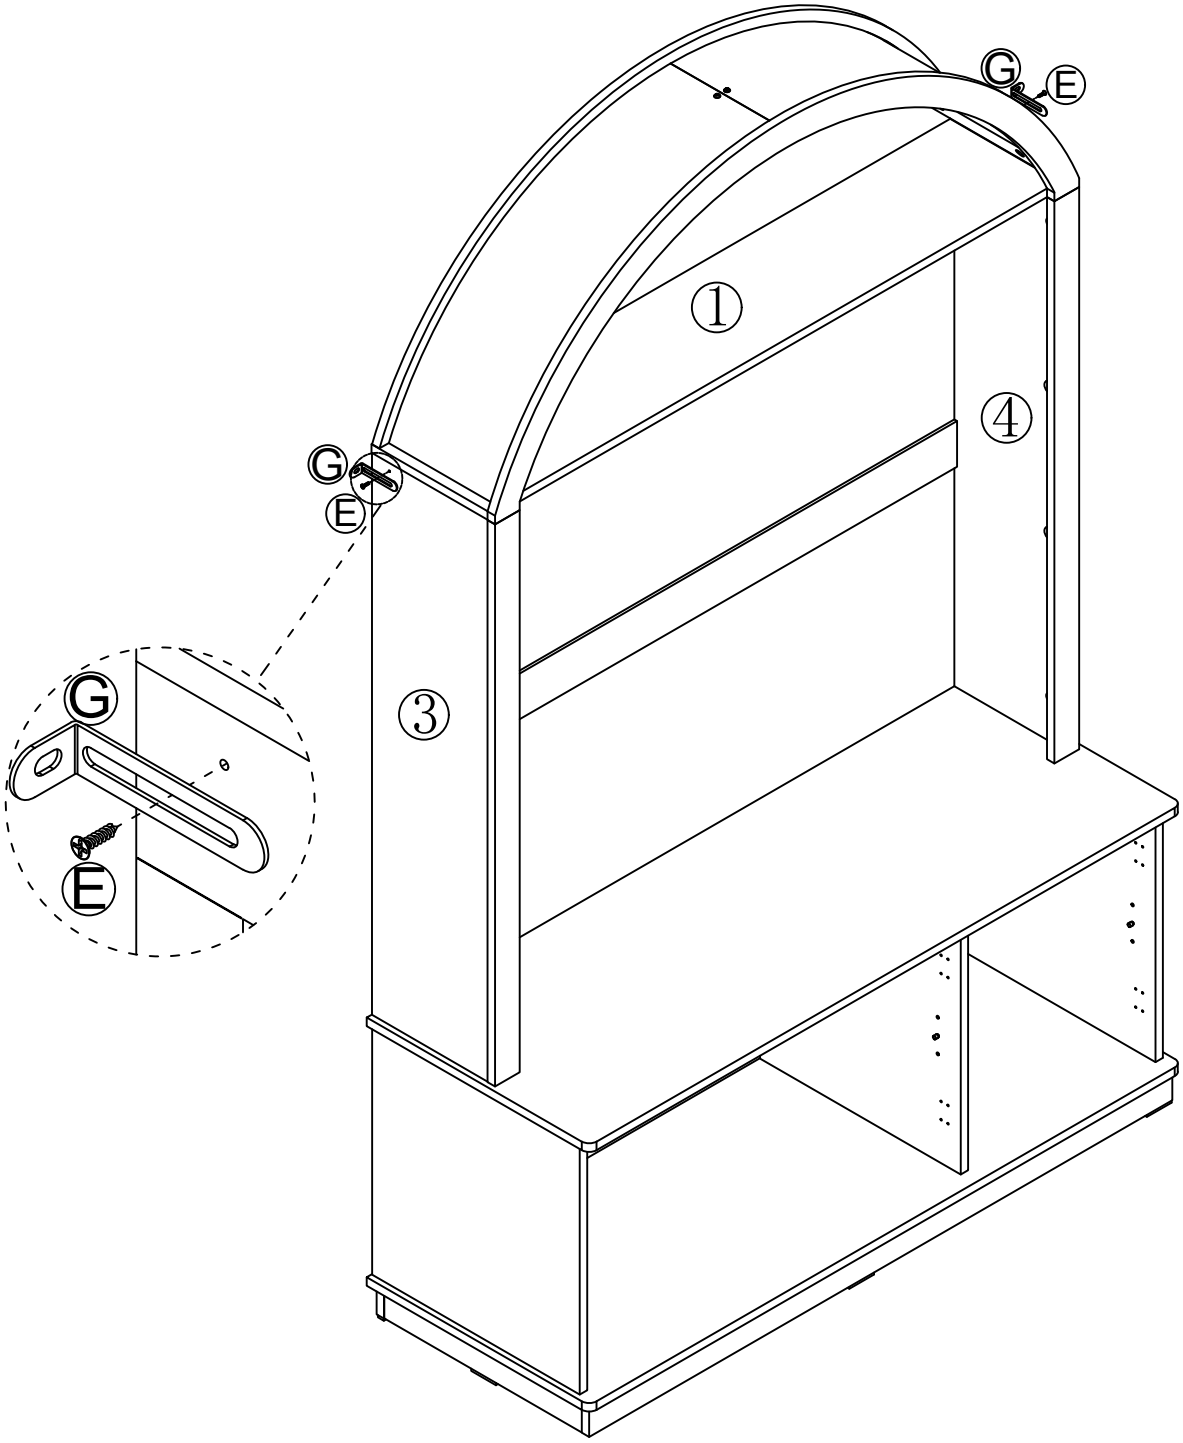


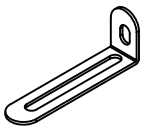E	G
	
3.5*14mm Screw x 2	Anti-tilt Angle iron x 2

Assembly Instructions


Step 33

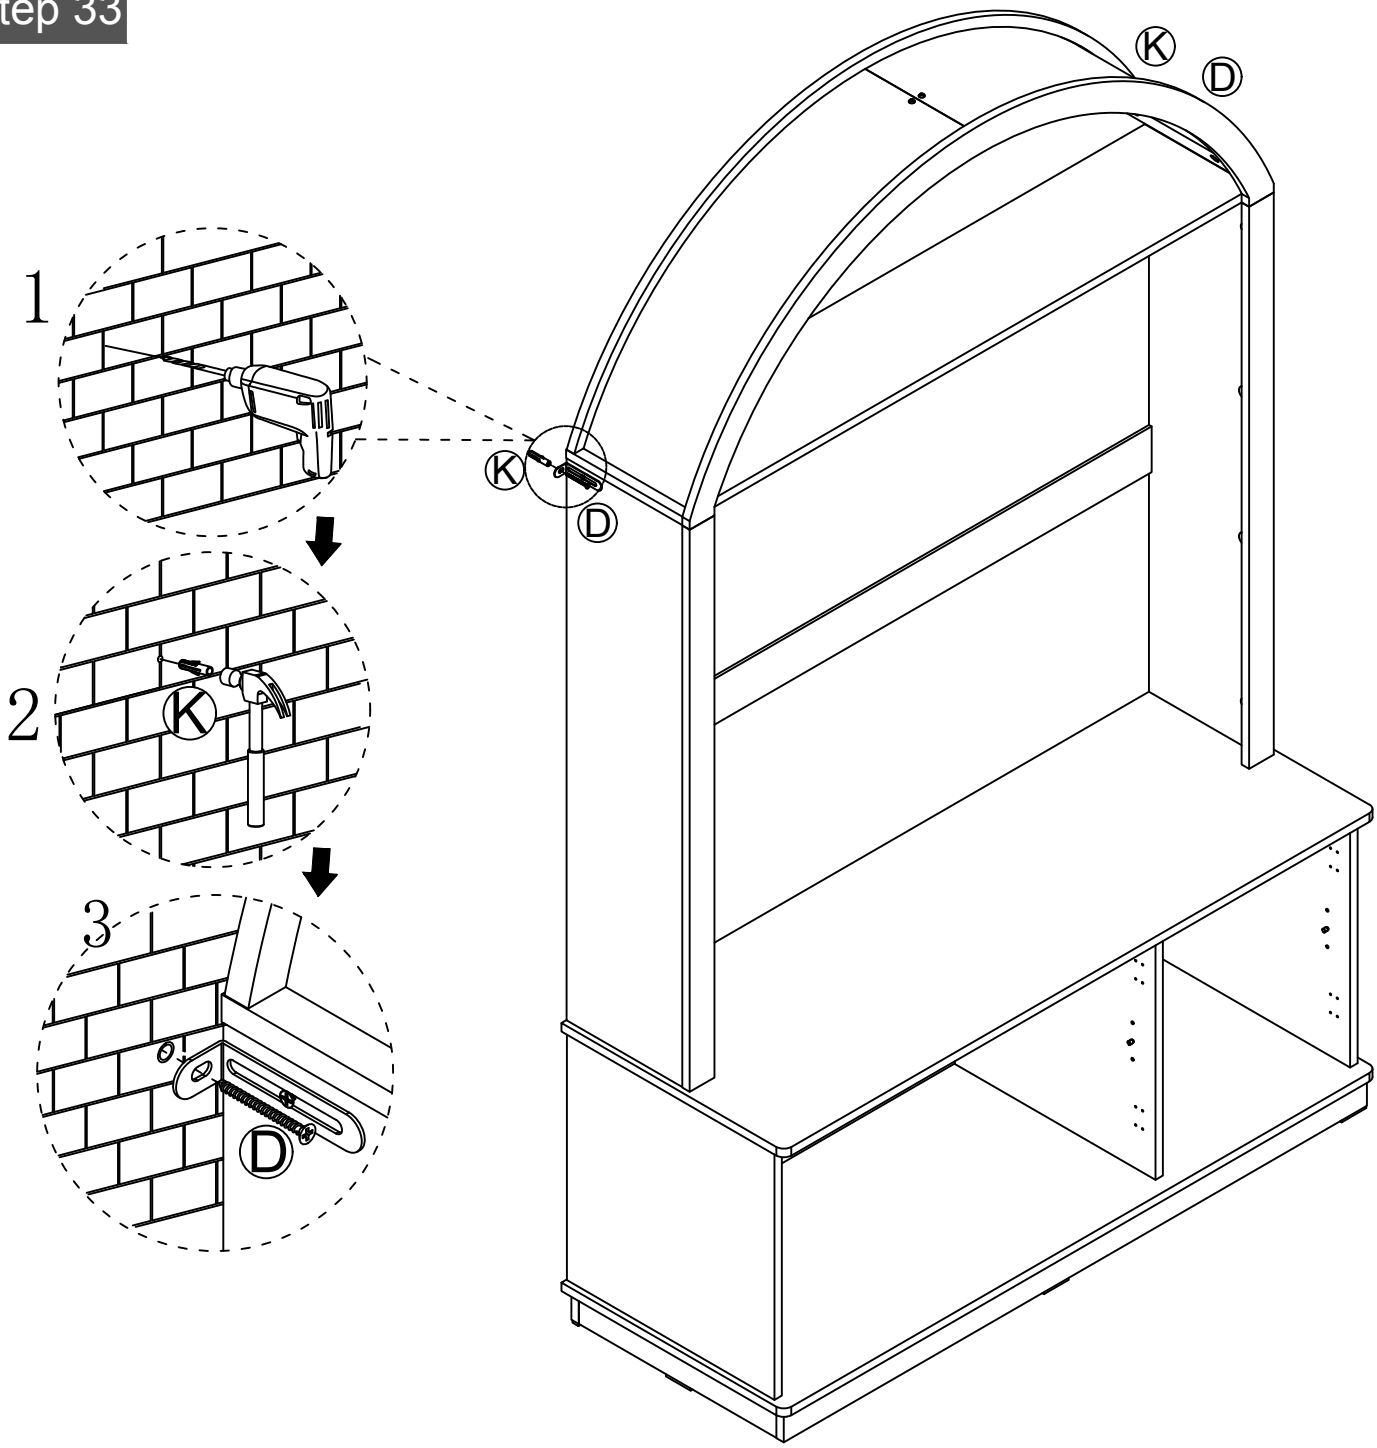


D	K
	
4*40mm Screw x 2	Plastic expansion bolt x 2

Assembly Instructions

Step 34

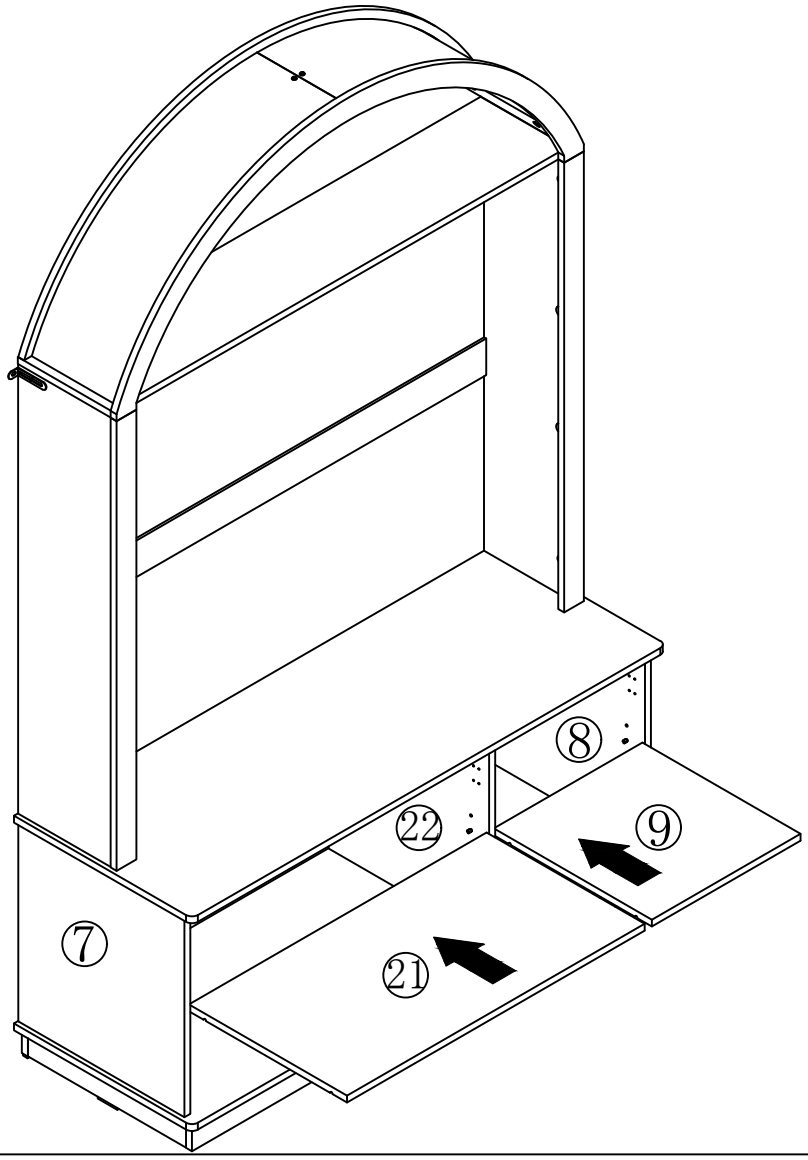


Step 35

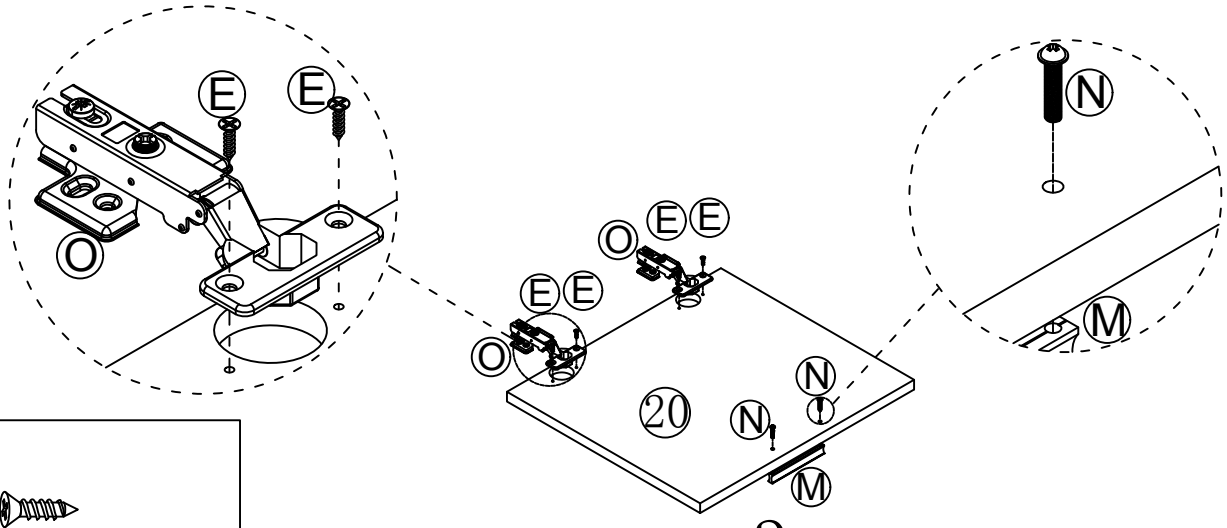

E 3.5*14mm Screw x 12		
O Hinge x 6	M Metal handle x 3	N 4*20mm Screw x 6

Assembly Instructions

Step 36

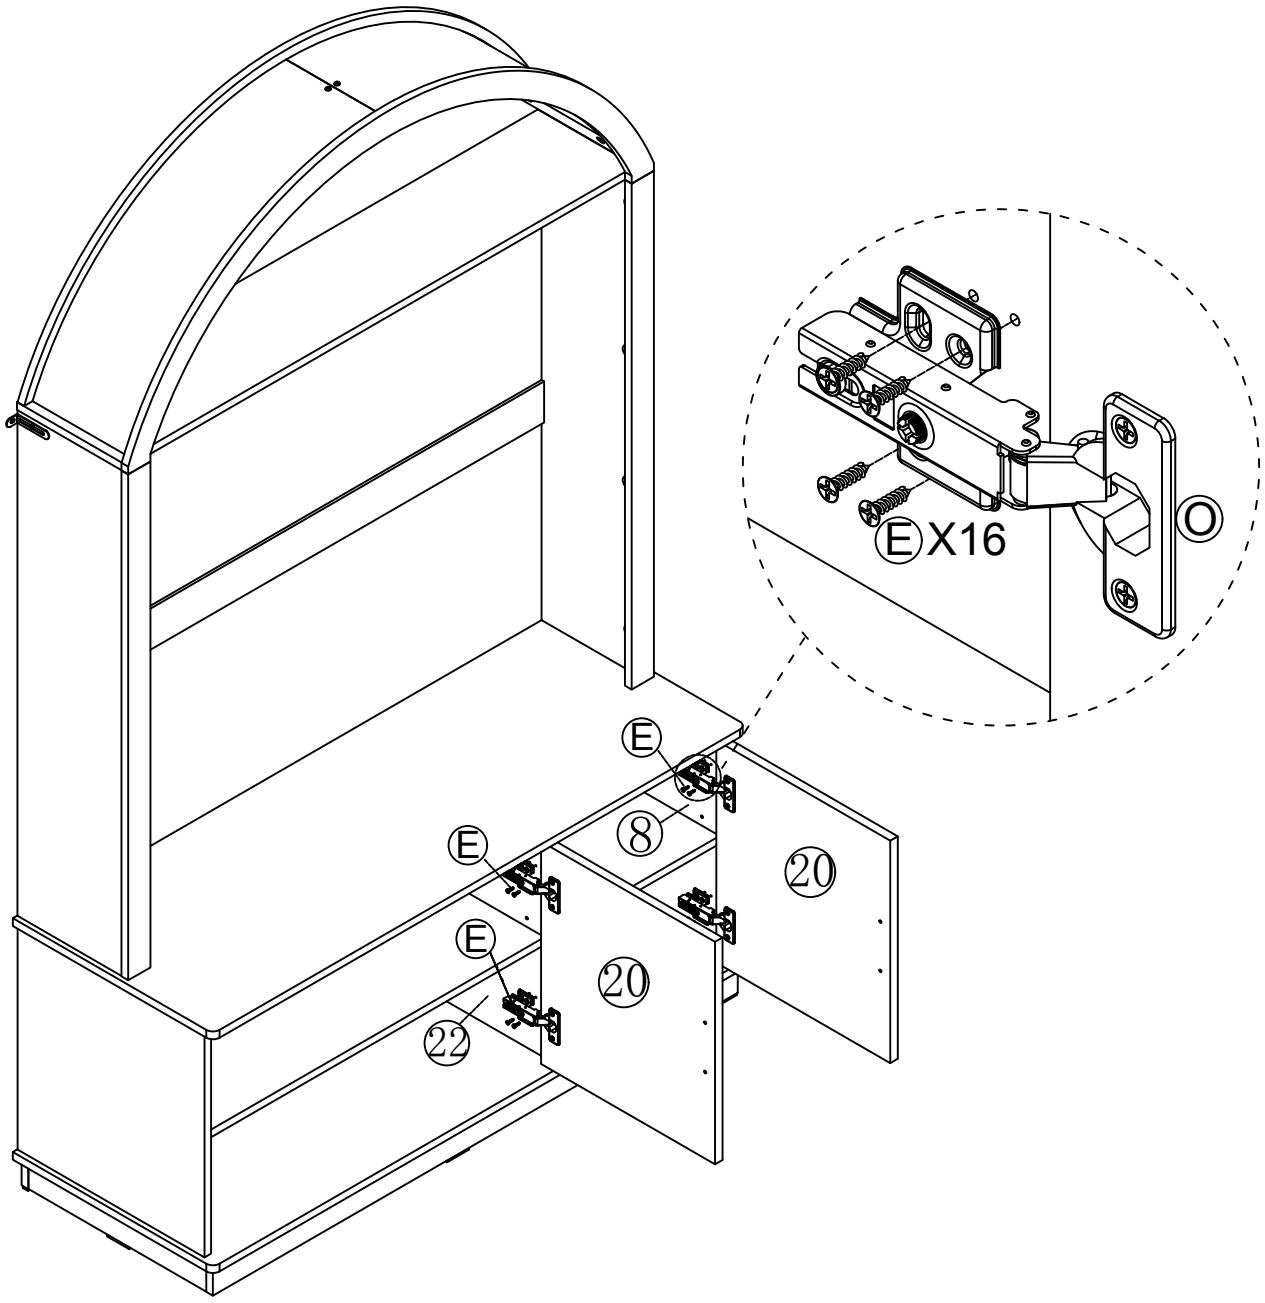


Ⓔ



3.5*14mm Screw x 16

Assembly Instructions

Step 37

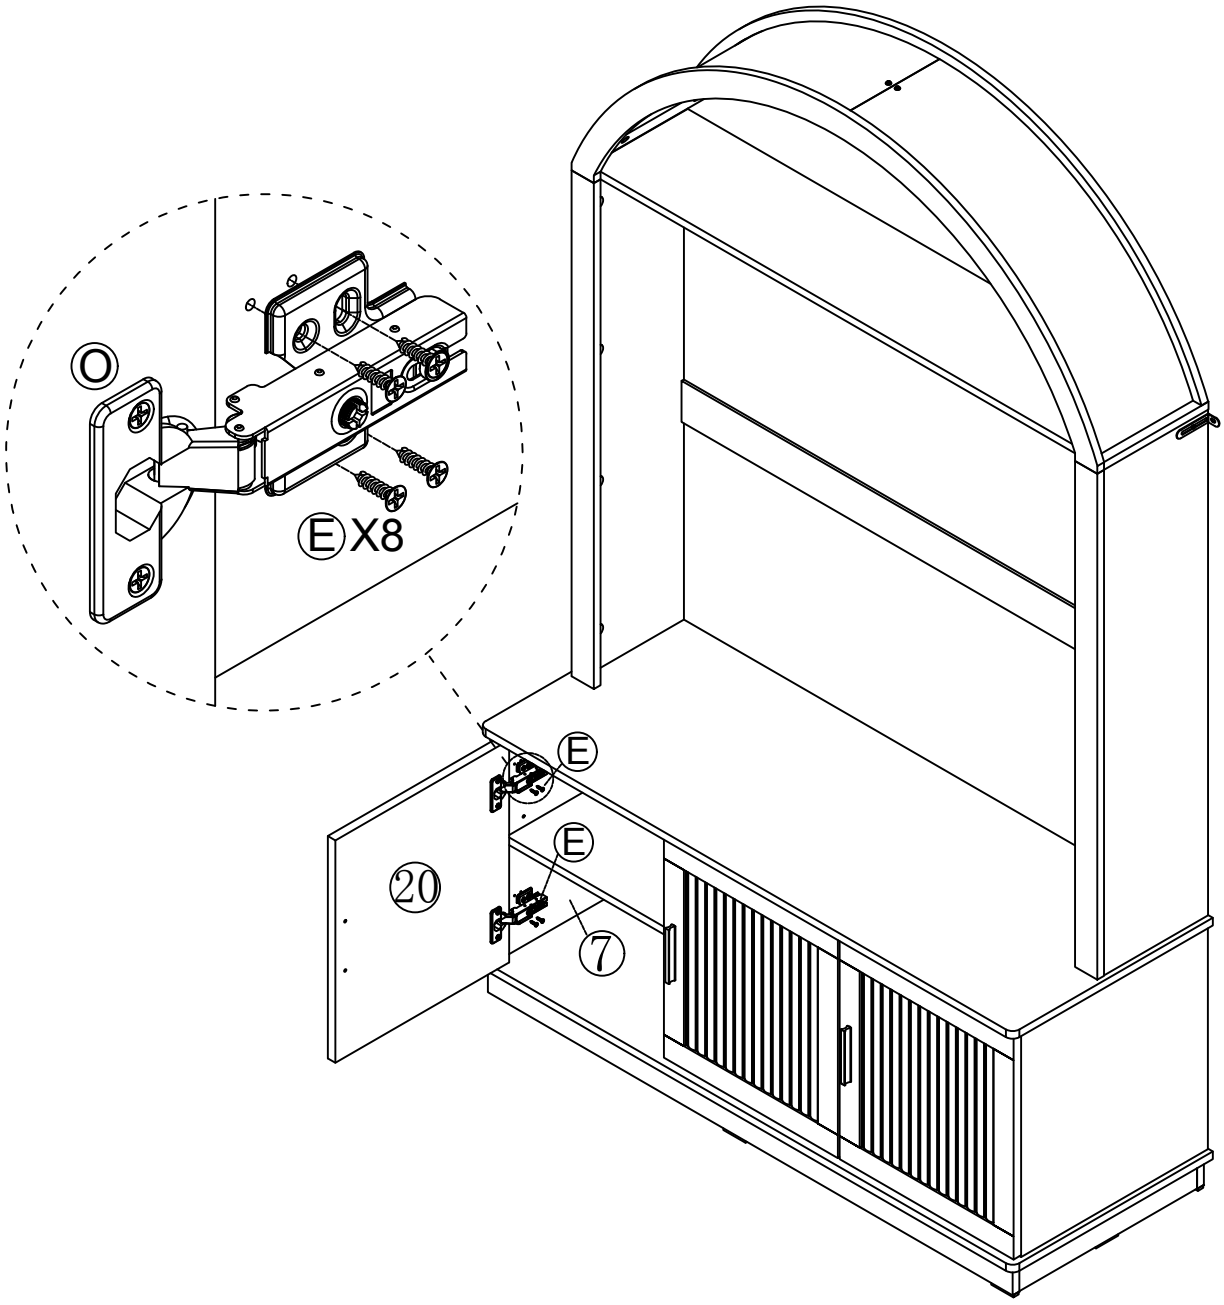


E




3.5*14mm Screw x 8


Assembly Instructions

When the hinges are installed, you can refer to the pictures to adjust the screws of the doors till it's perfect.

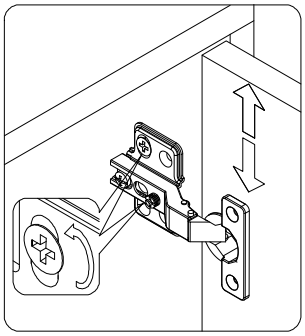



1. Adjust the screws shown in Fiqure 1 to adjust the door up and down.

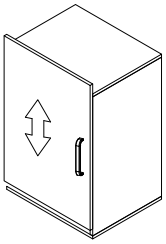

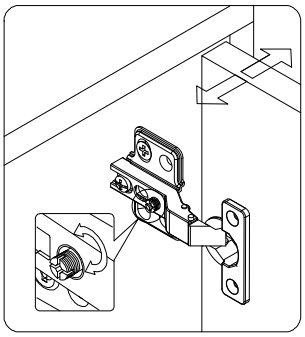



2. Adiust the screws shown in Fiqure 2 to adjust the door left and right to the right position.

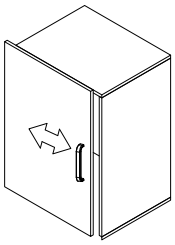

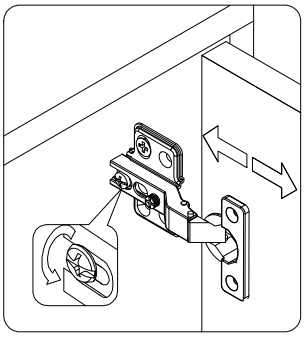

3. Adjust the screws shown in Fiqure 3 and pull the door back and forth so that it can be opened smoothly.

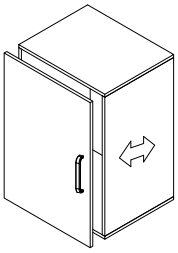


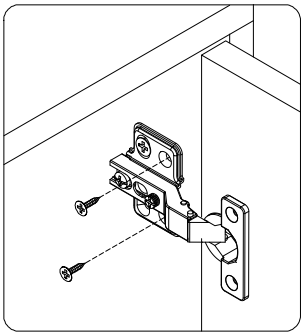


4. After the adjustment is complete, secure the remaining two screws to secure the door in place.

Assembly Instructions

Step 38

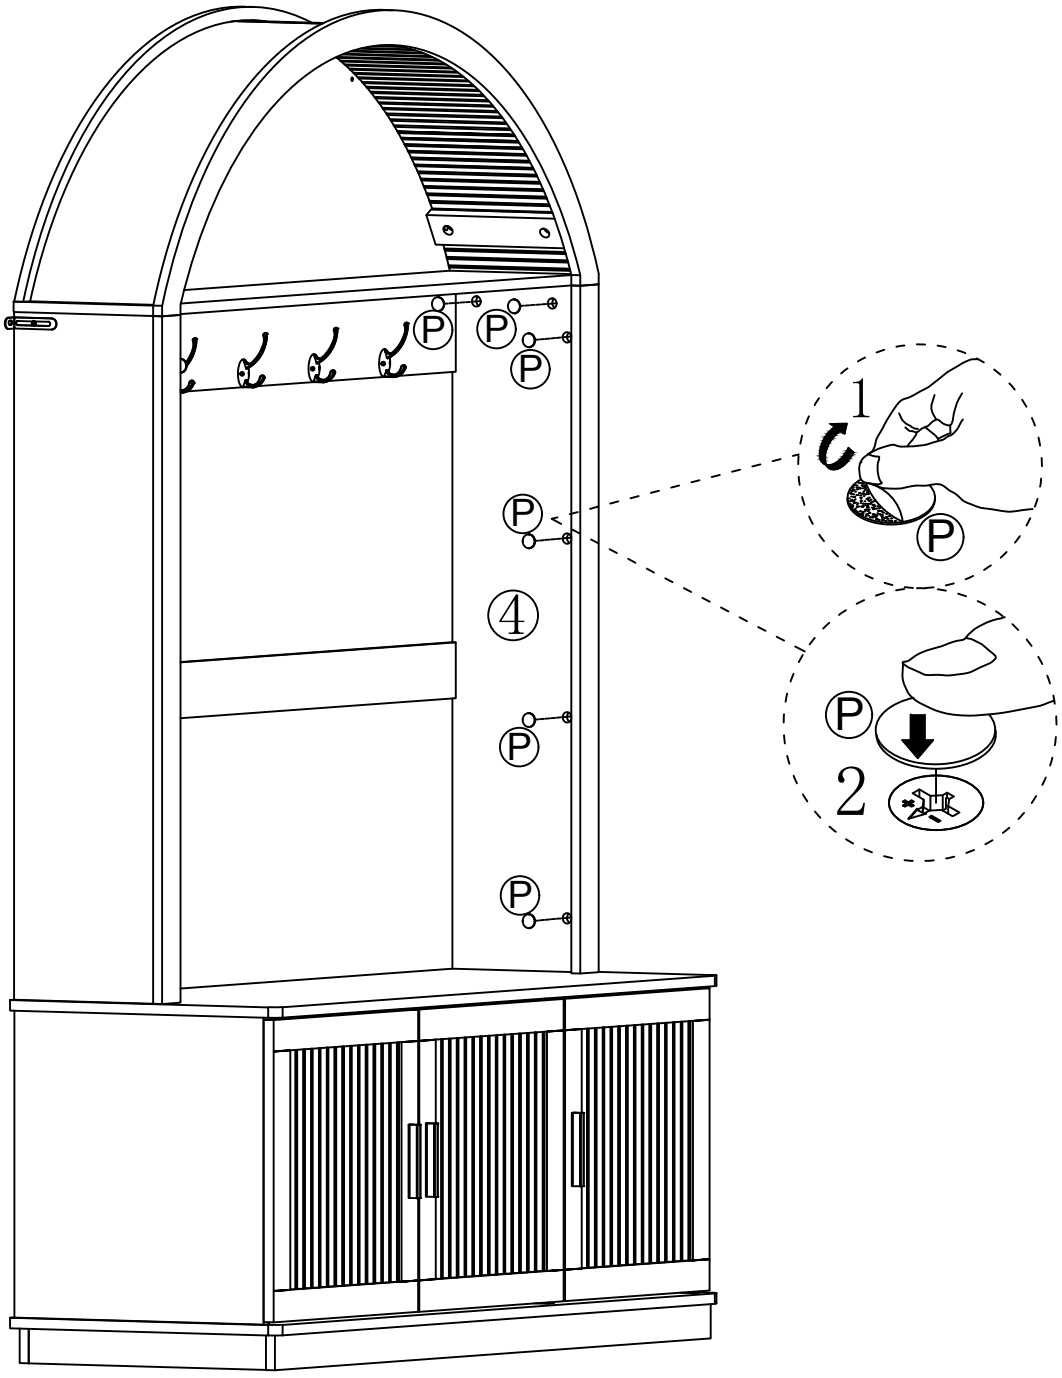


Ⓟ




Hole position sticker x 6

Assembly Instructions

Step 39

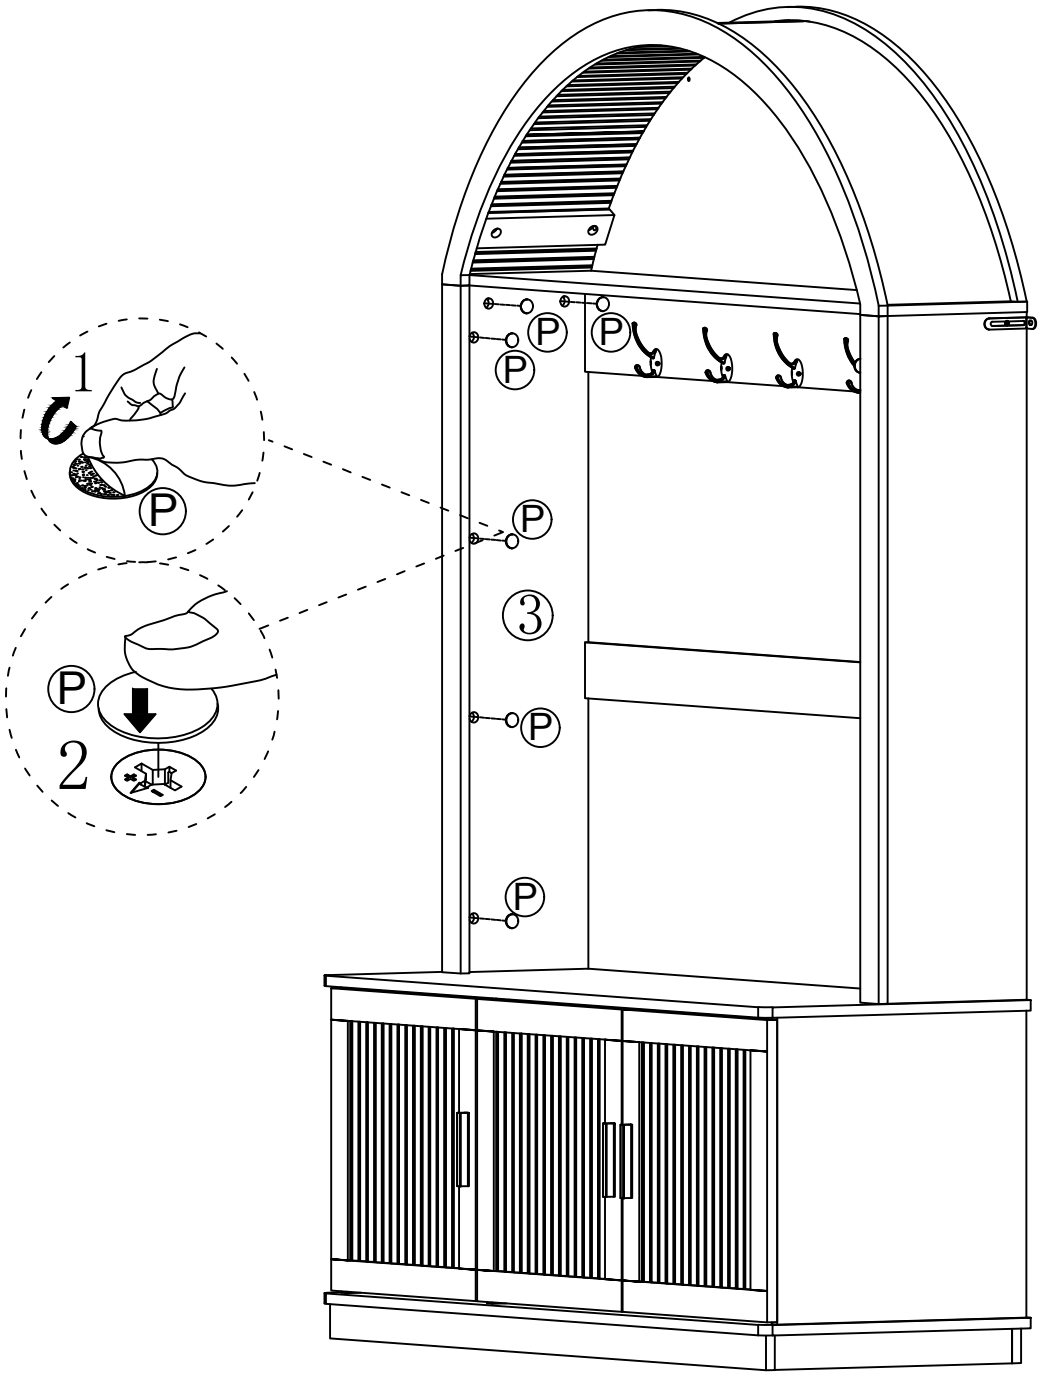

Ⓟ



Hole position sticker x 6

Assembly Instructions

FINISH

