



ASSEMBLY INSTRUCTIONS

FULL BED

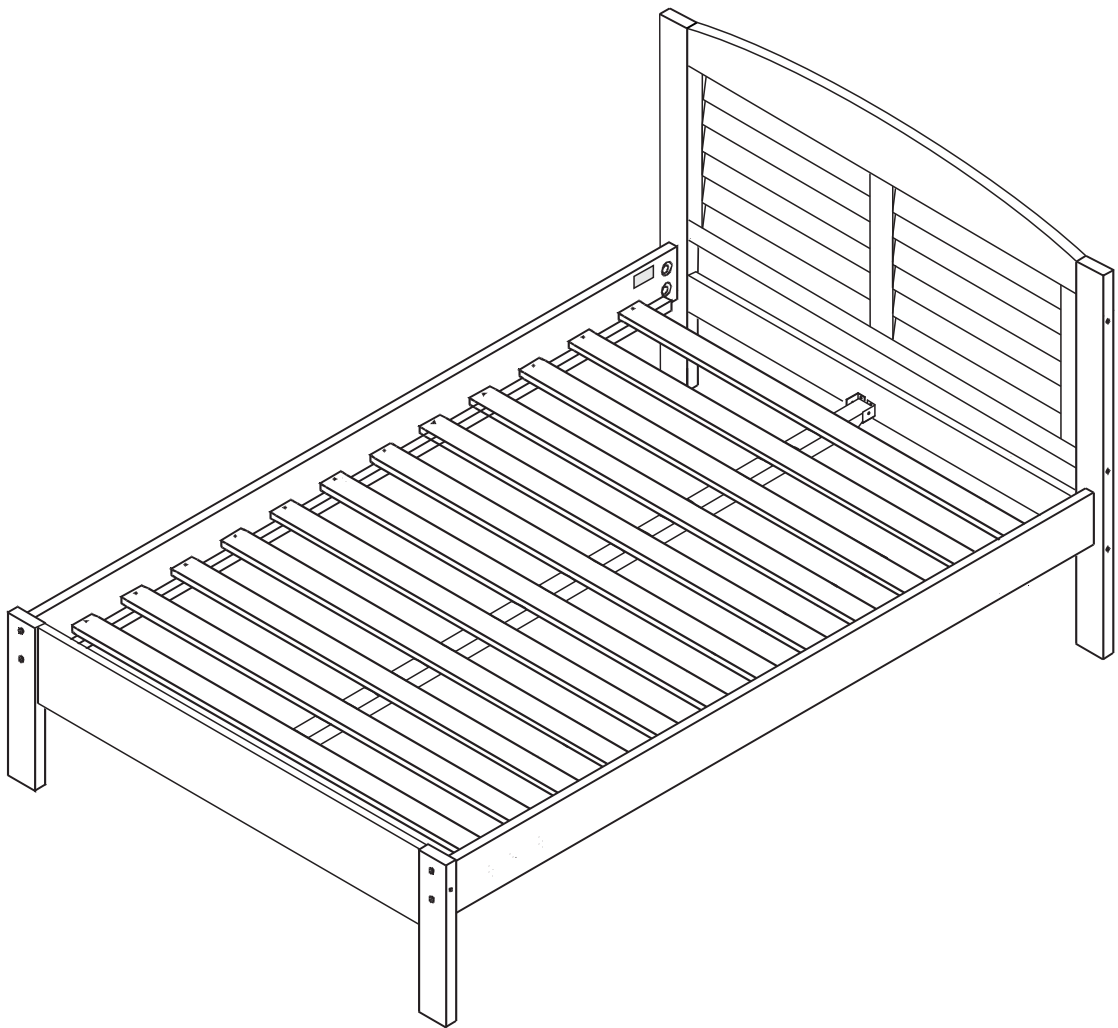


Thank you for purchasing this quality product. Besure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. eparate, identify and count al lparts and hardware. Compare with the parts list to be sure al parts are present.
“DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED”

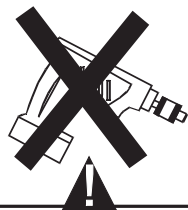

*Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !
*Please assemble on a clean soft surface to avoid damage.



Tools Required



(Not included)




(Not included)









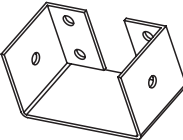
IMPORTANT:

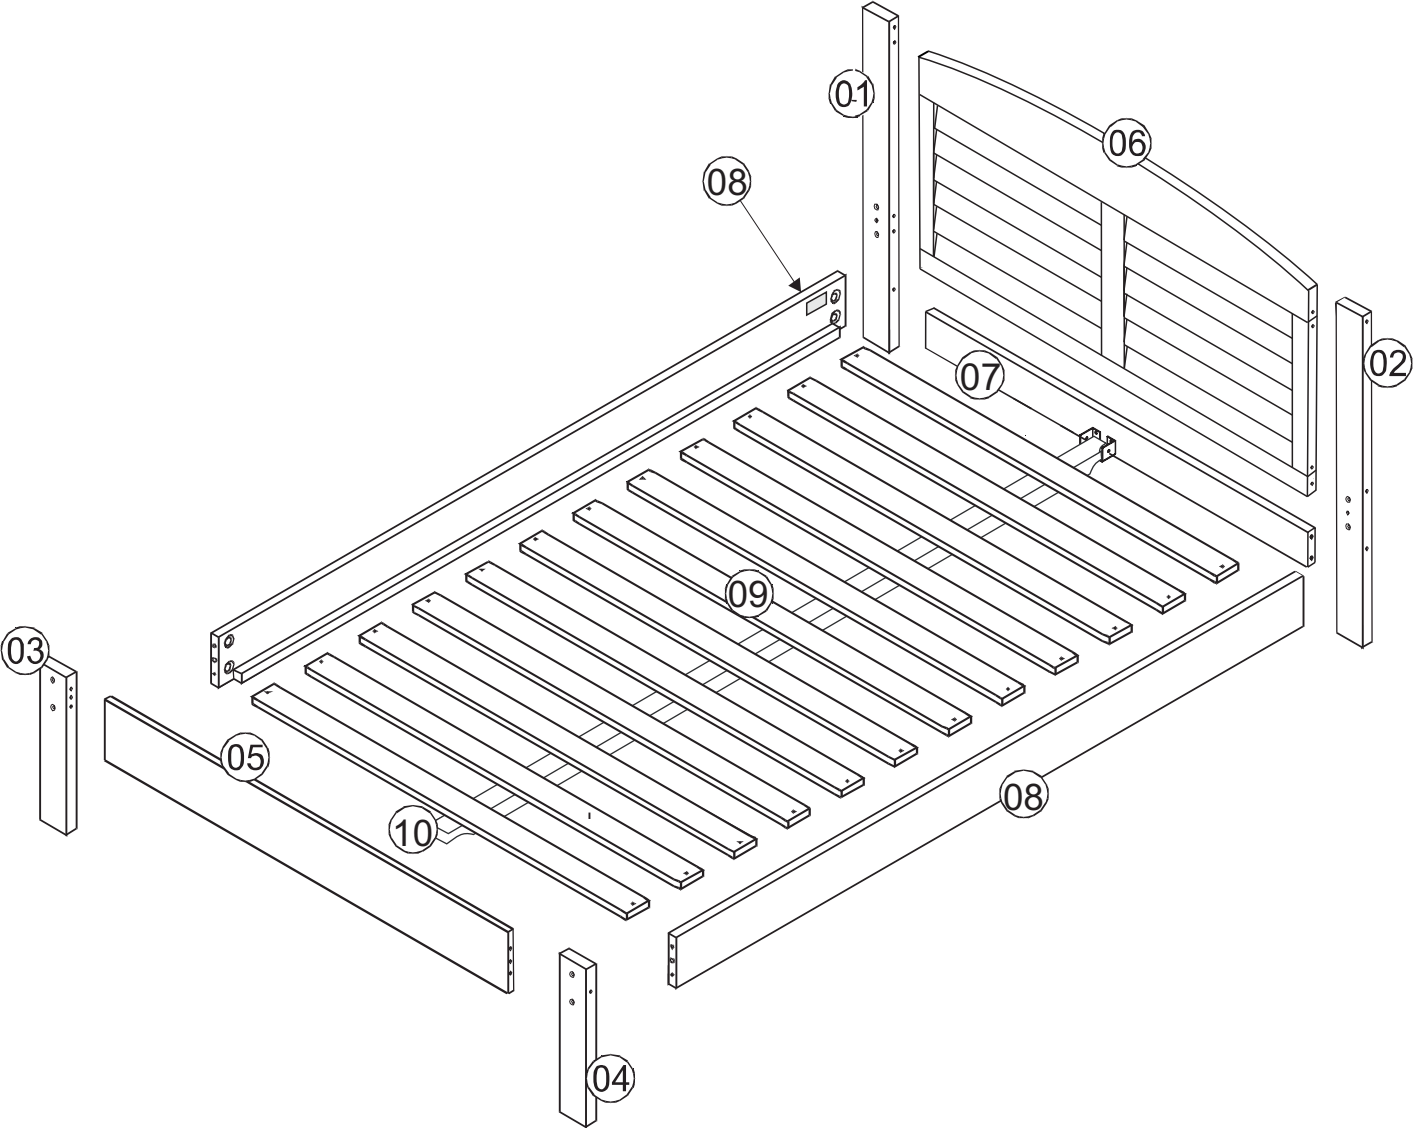PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY


Part List: FULL BED




Identifying the Hardware/part list - Identify the hardware using the illustrations below.

| | | |
|---|--|--|
| A  10x40 Wood Dowel Qty 14 | B  4mm Hex Screwdriver Qty 01 | C  7,0x100 Screw Qty 06 |
| D  1/4x90 Screw Qty 10 | E  1/4" Half Moon Qty 10 | F  4,0x30 Screw Qty 28 |
| G  3,45 in SPACE SLATS Qty 02 | H  3,5x16 Screw Qty 12 | I  Qty 02 |


01

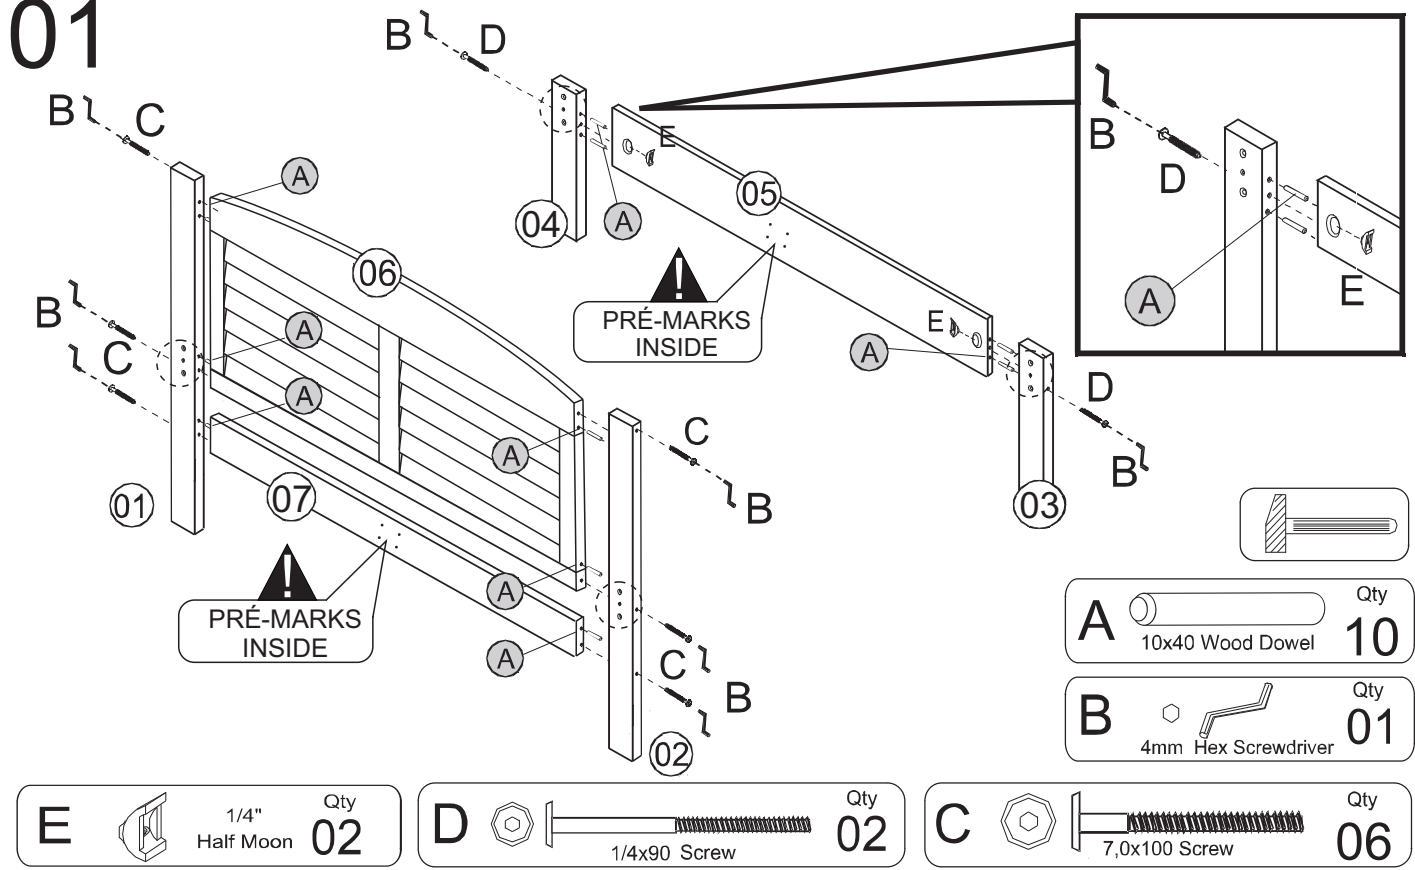


02

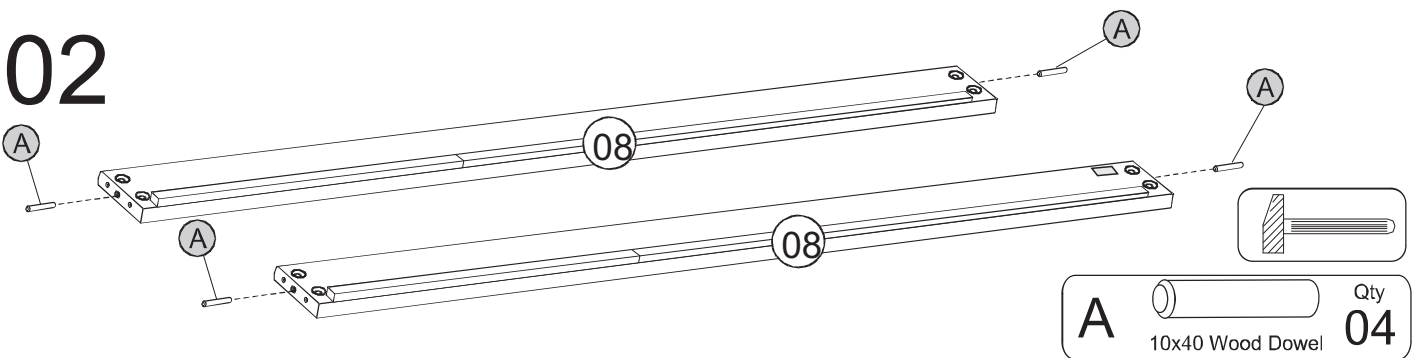

03

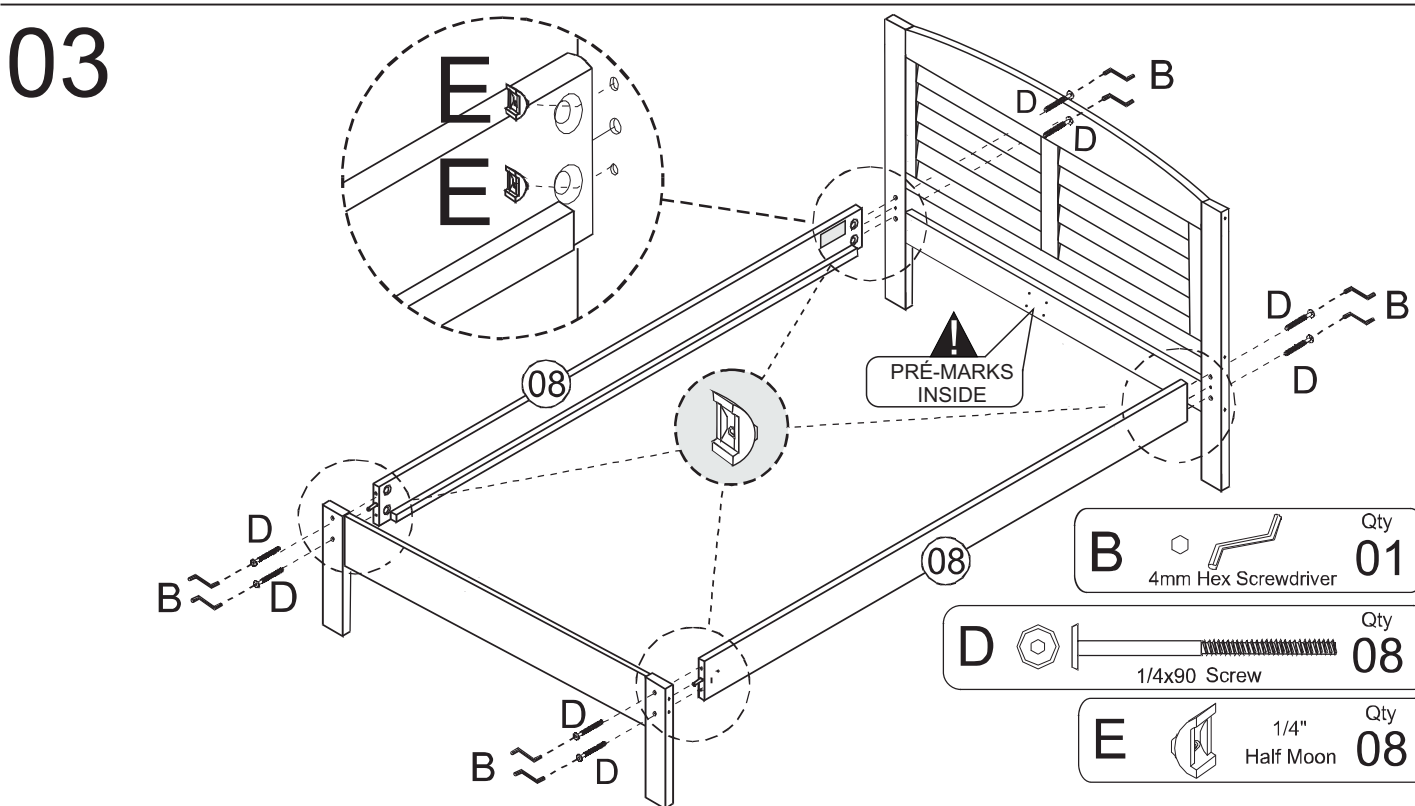

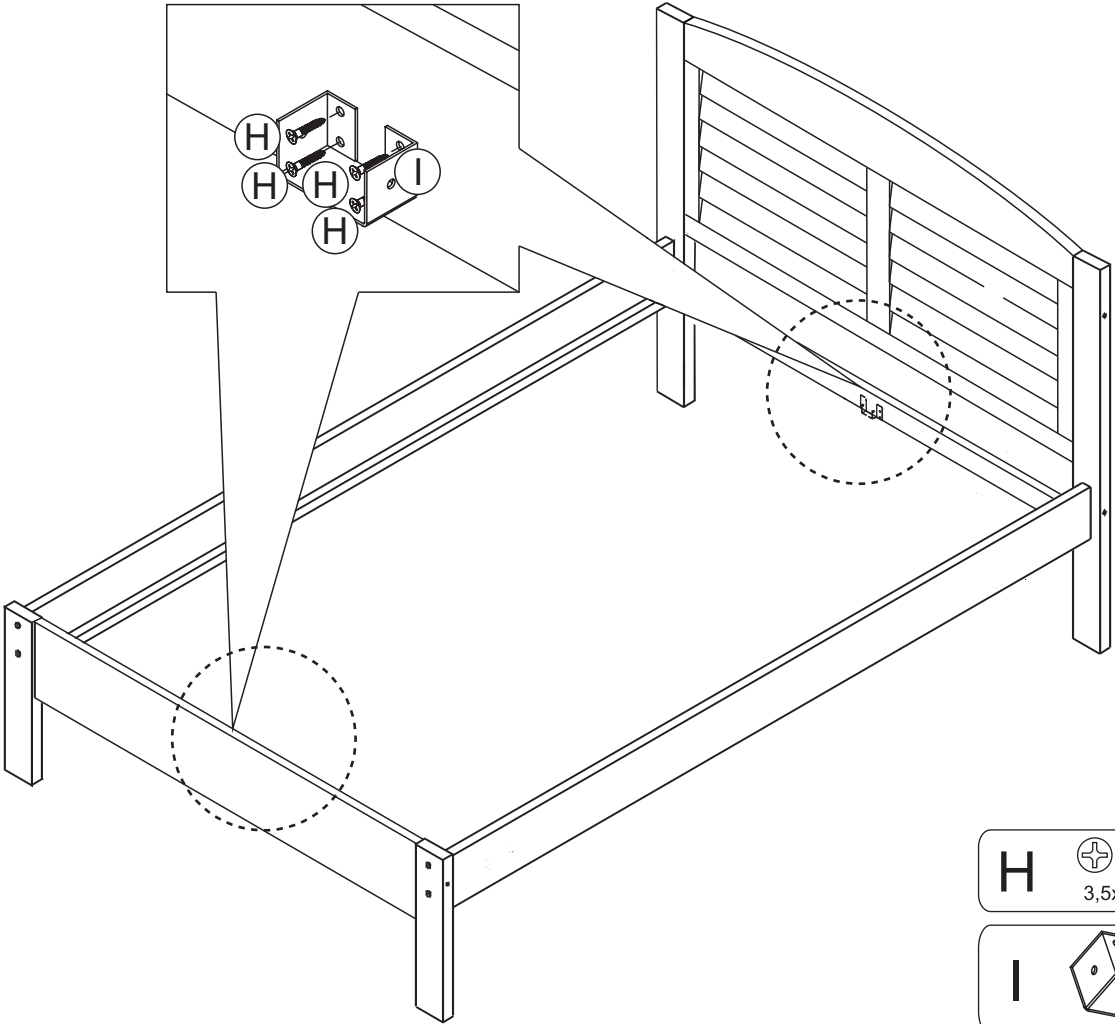

04




Tool Required



(Phillips Key)

| | | |
|---|---|-----------|
| H |  | Qty 08 |
| I |  | Qty 02 |


05

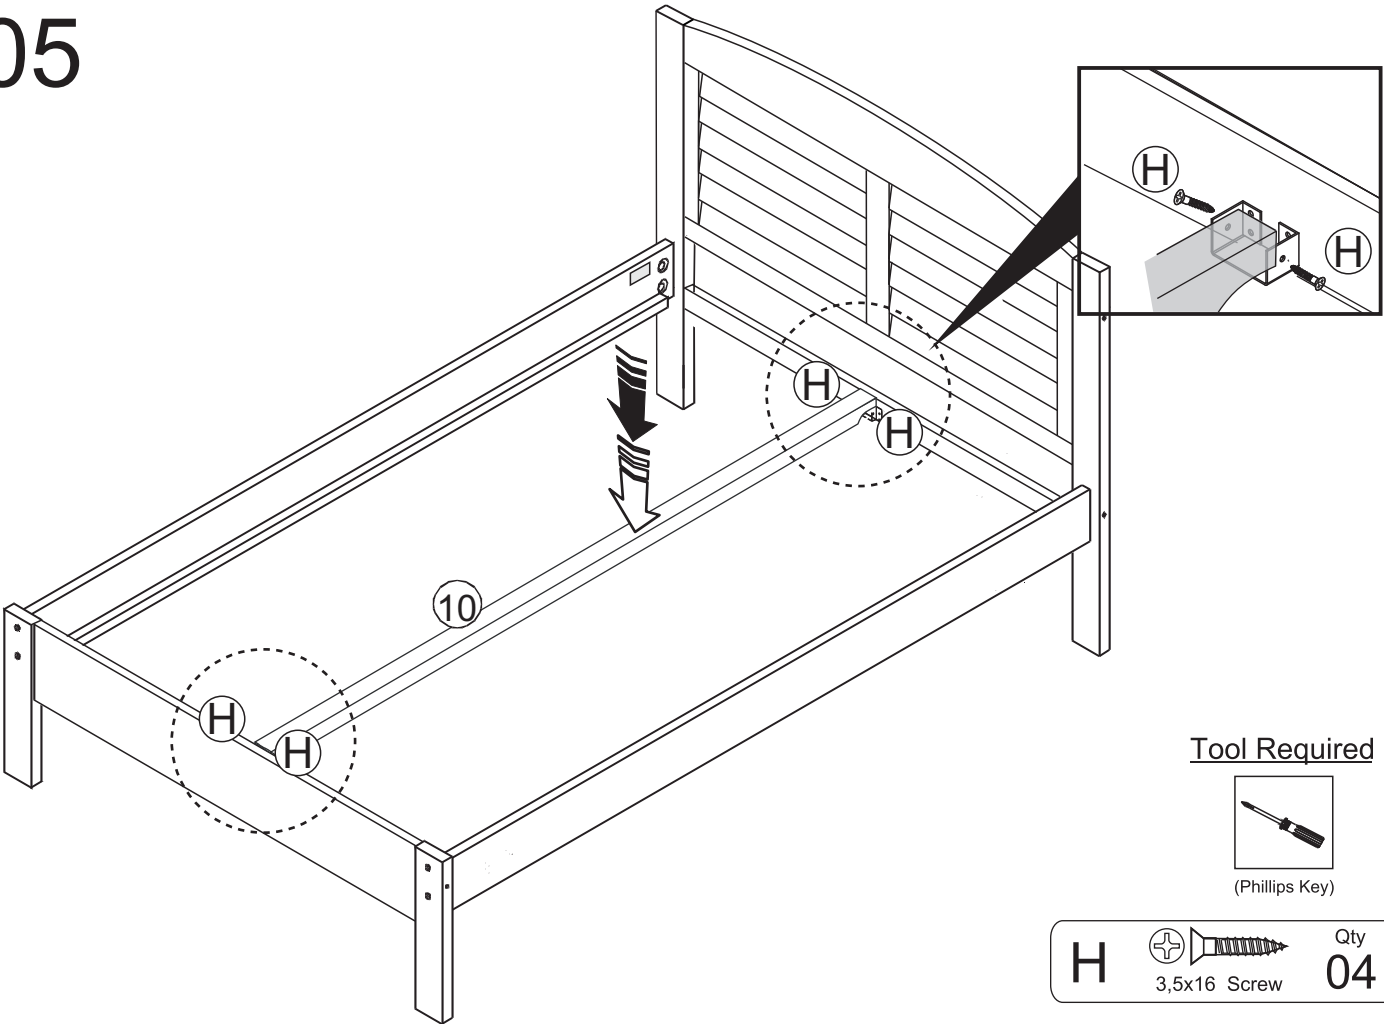


Tool Required




(Phillips Key)

| | | |
|---|---|-----------|
| H |  | Qty 04 |
|---|---|-----------|


06

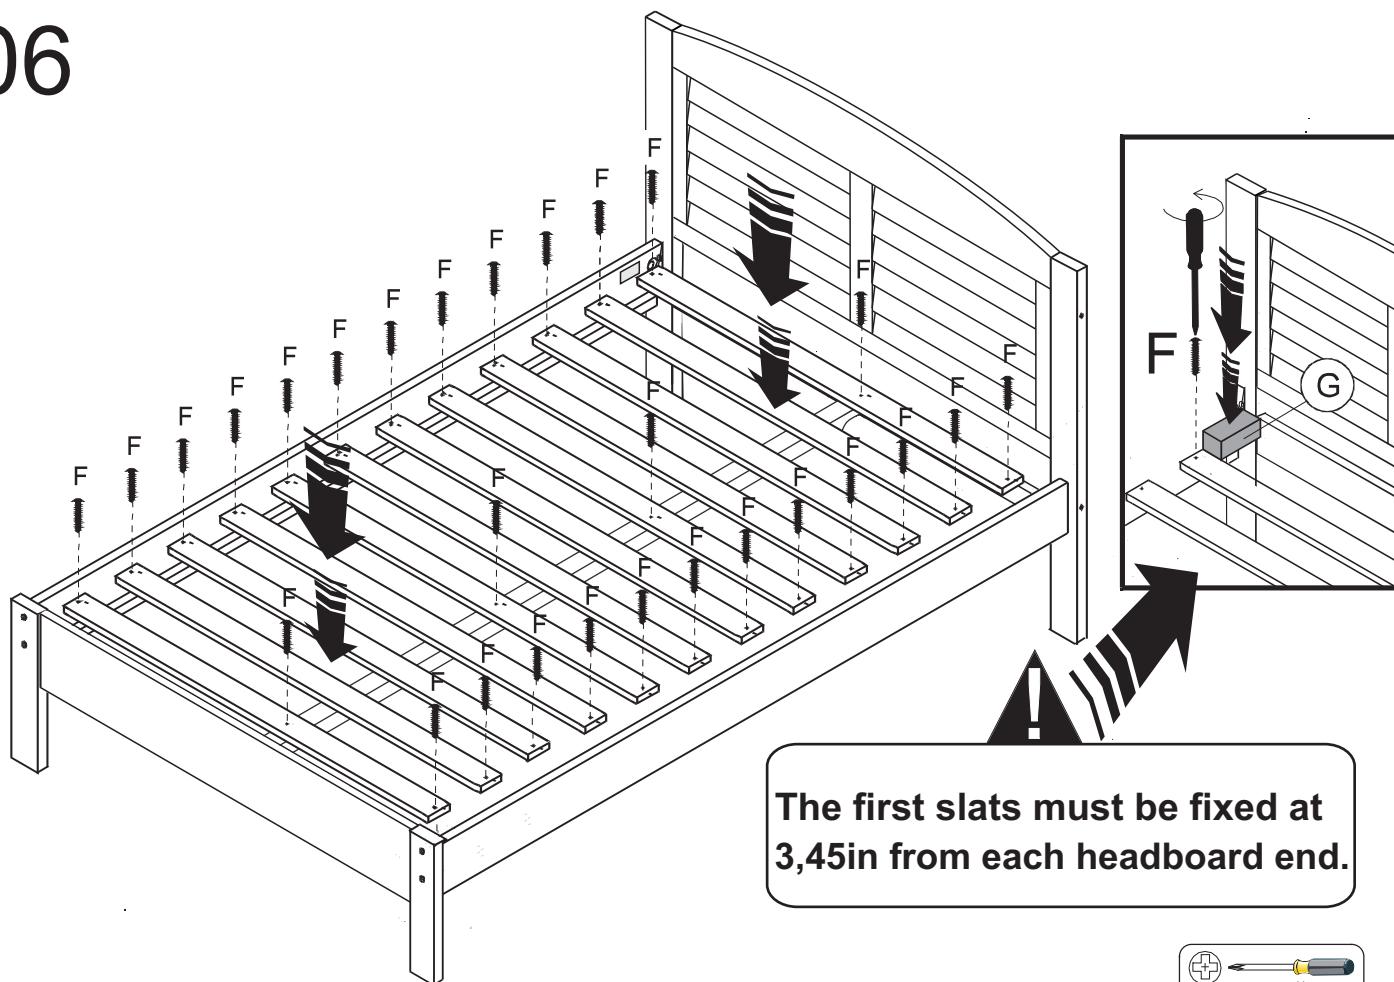

The first slats must be fixed at 3,45in from each headboard end.



G  3,45 in Qty 02
SPACE SLATS

F  4,0x30 Screw Qty 28

