

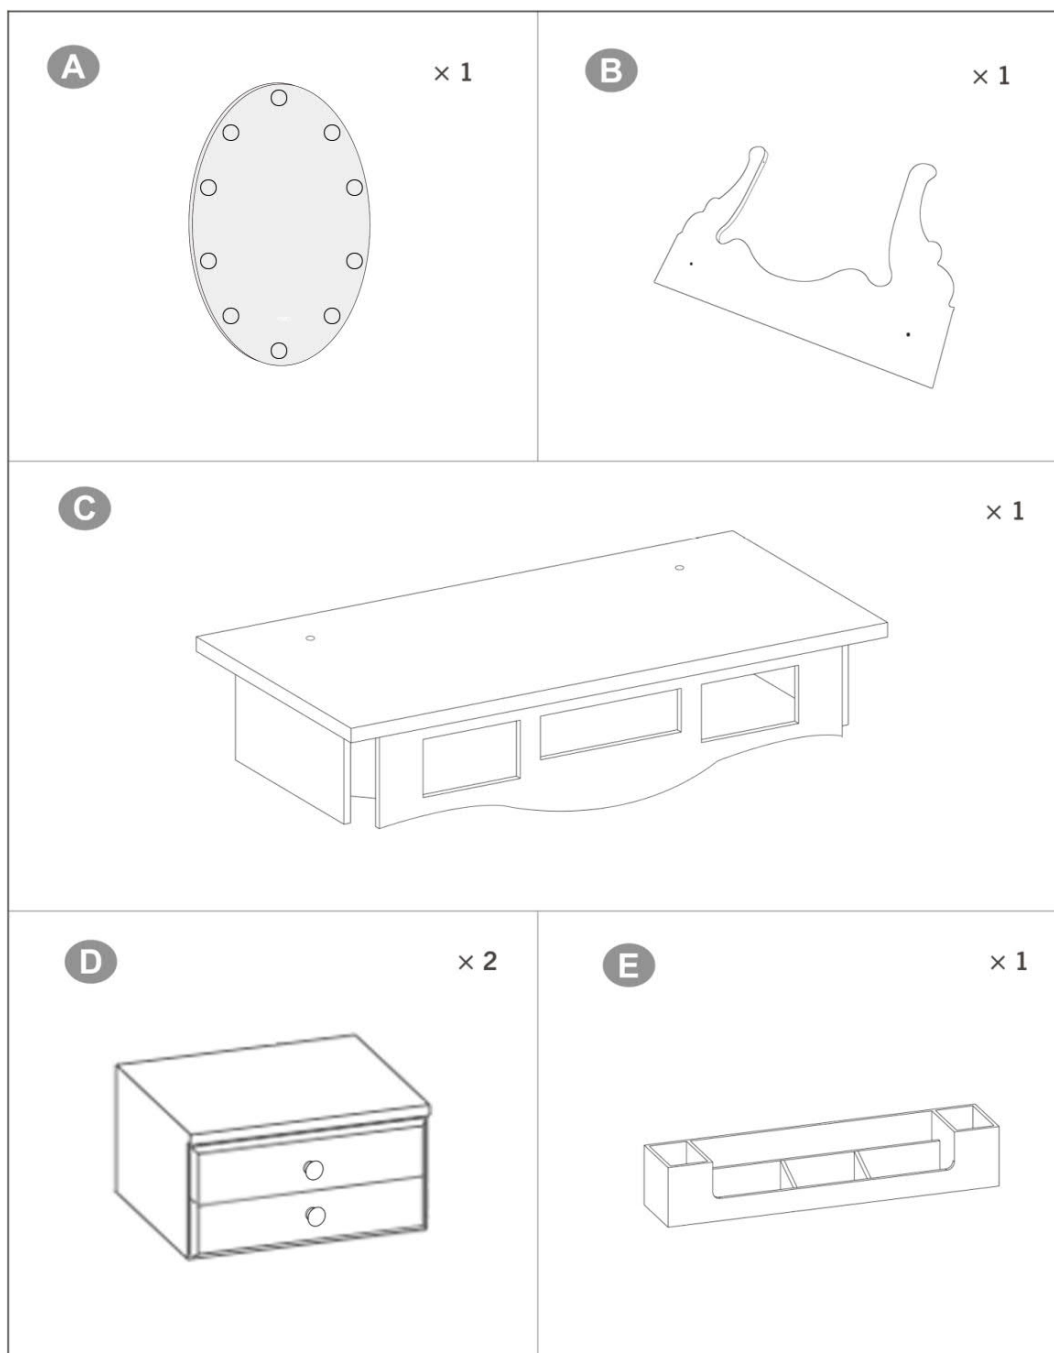
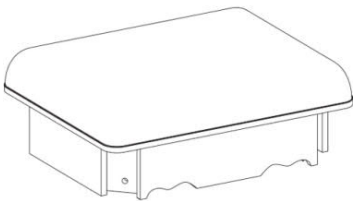
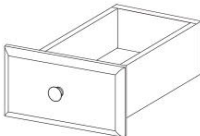
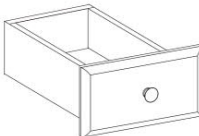
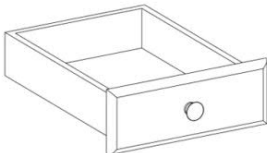
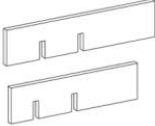
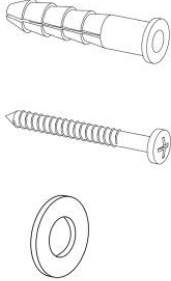


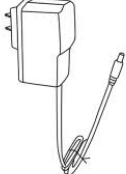


F  × 1	G  × 4	
H  × 4	L1  × 1	L2  × 1
K  × 1	M640  M6 × 40mmM8mm × 16	

M × 1 	M450 × 2  M4 × 50mm	M620 × 2  M6 × 20mm
M520 × 2  M5 × 20mm	O × 1 	P × 1 
S1  11 ×	S2  1 ×	
S3  1 ×	S4  1 ×	

1

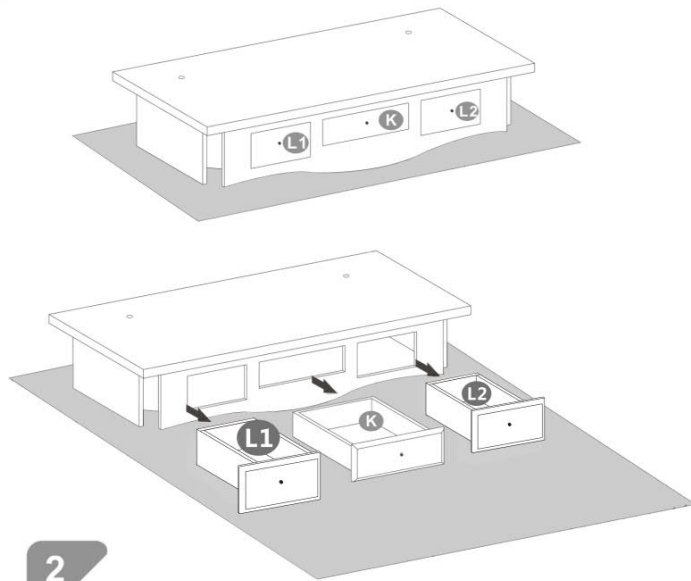


2

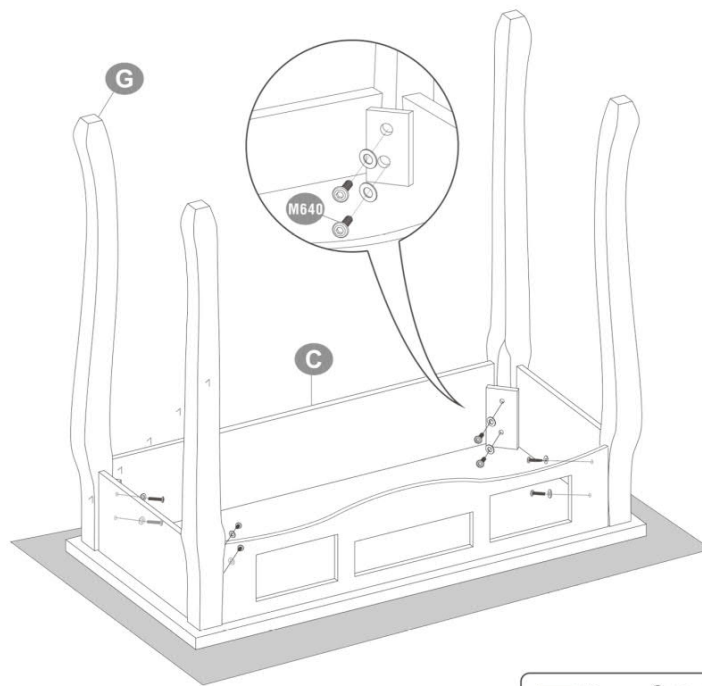


6

M640 8PCS

3

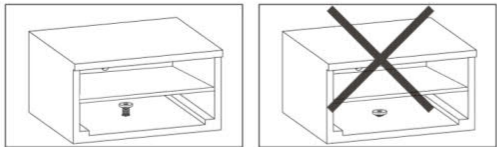


Semi-tighten the screws and fully tighten them after step 4.

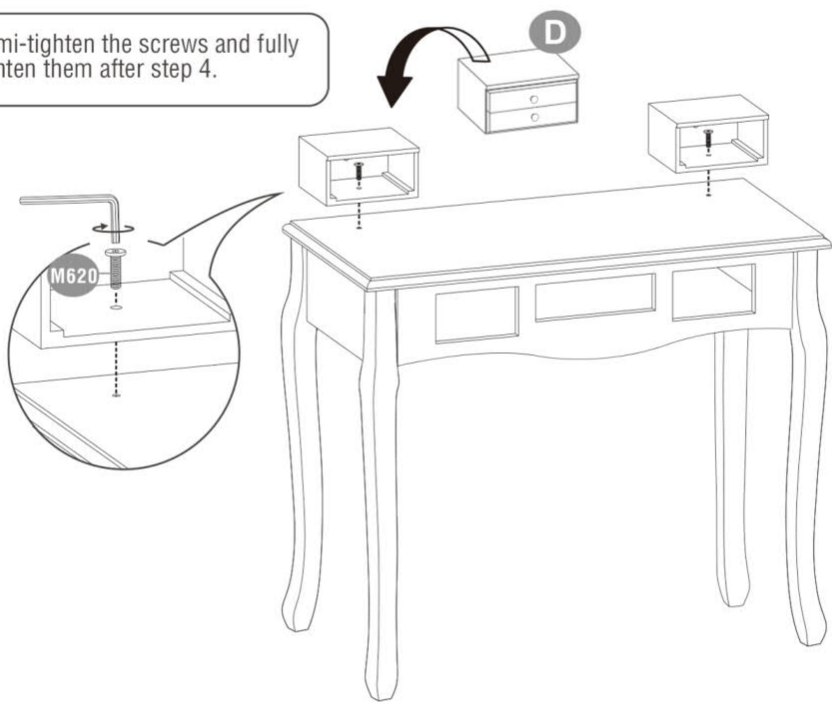


M620  2PCS

4



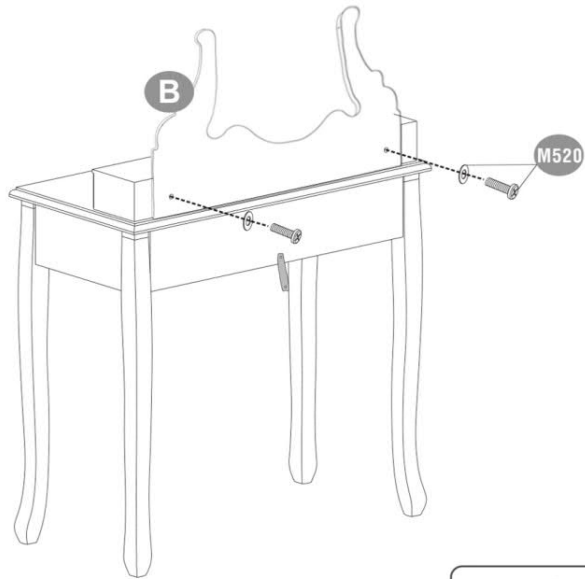


M520 2PCS


5

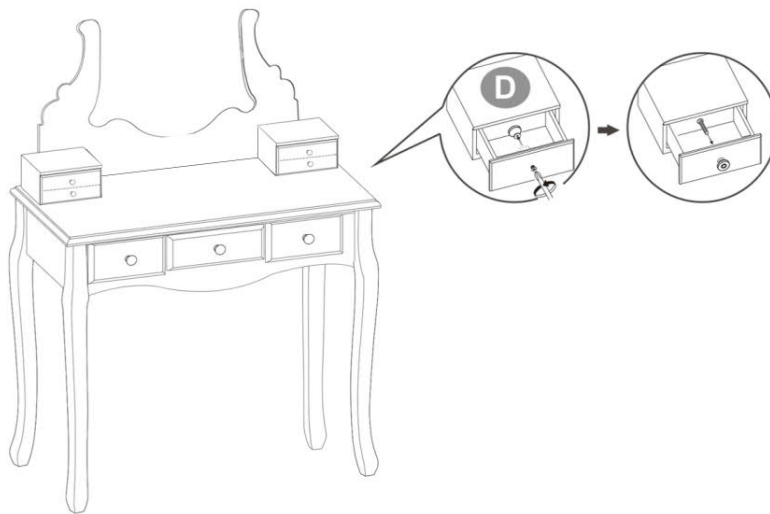

6

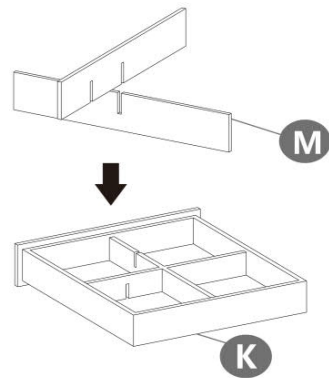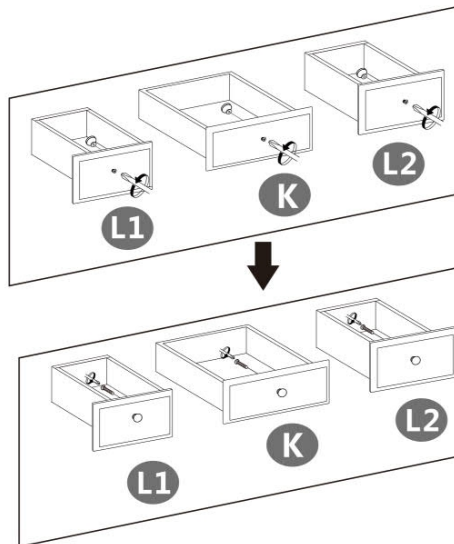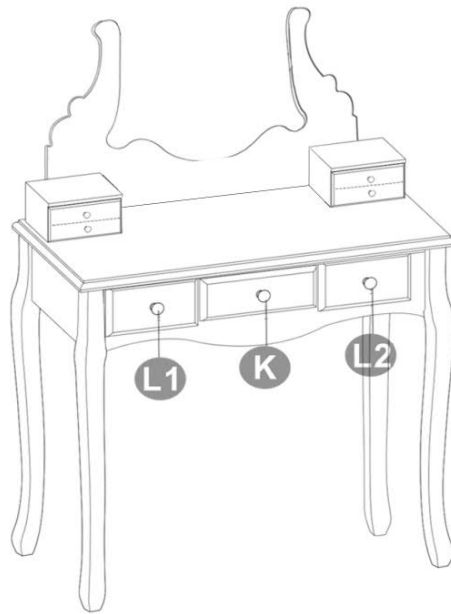


7


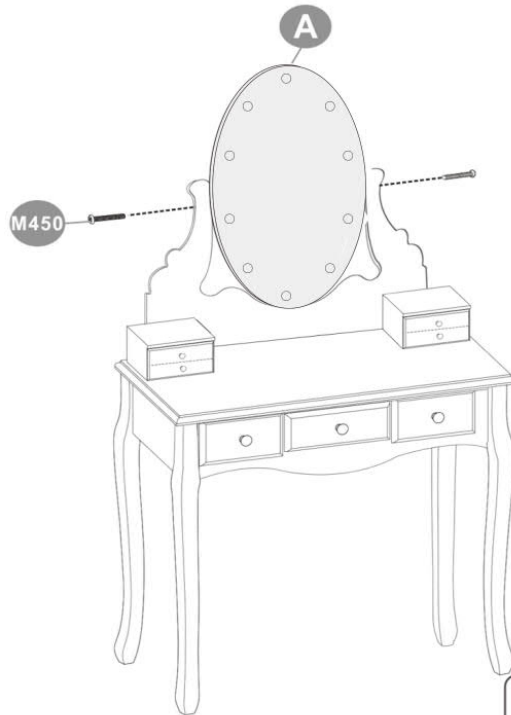


M450  2PCS


8

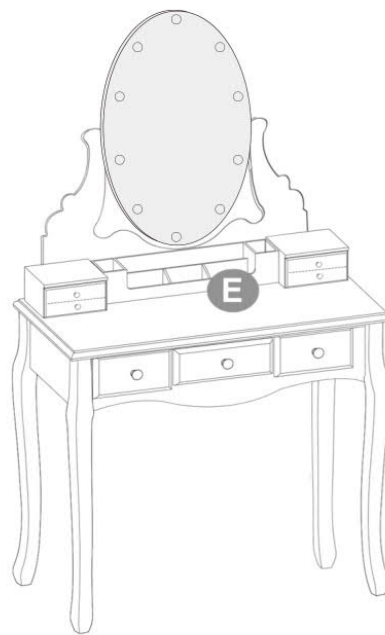



9



you can adjust the length of the line, the extra wires can be hidden to base

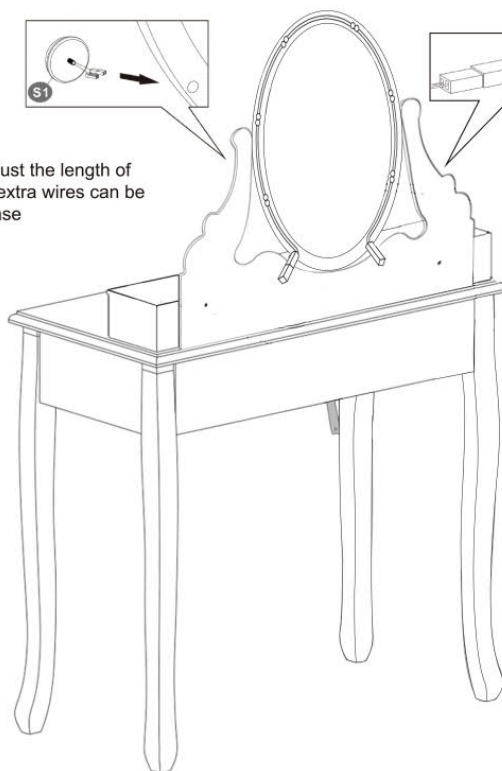


10

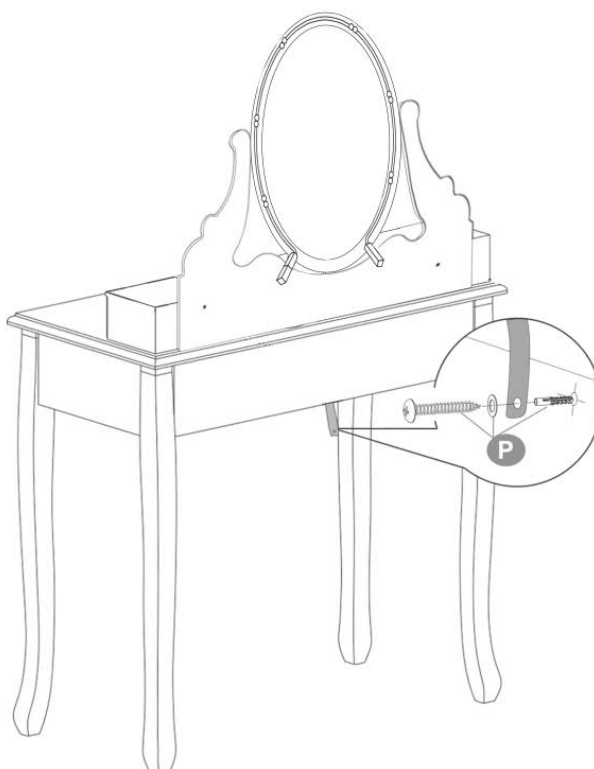

P 1PCS


11

11

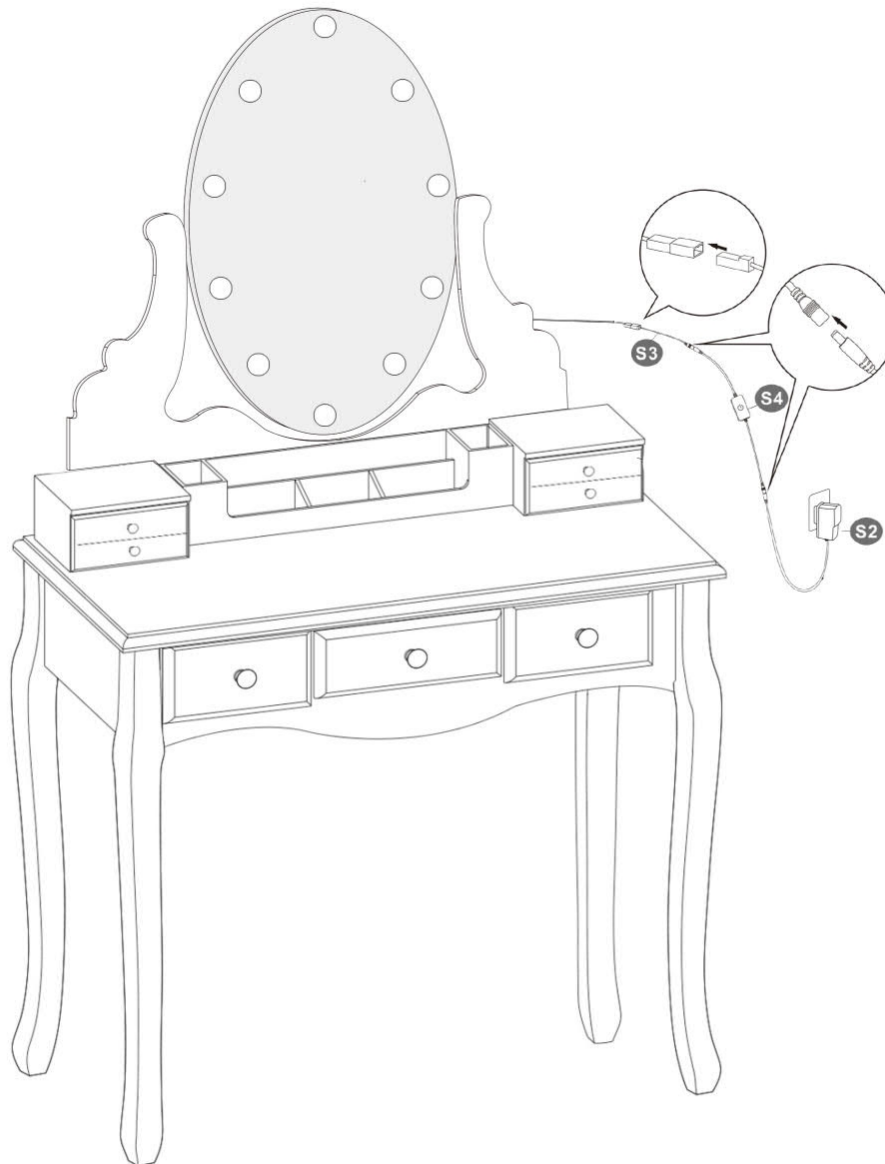

12

12

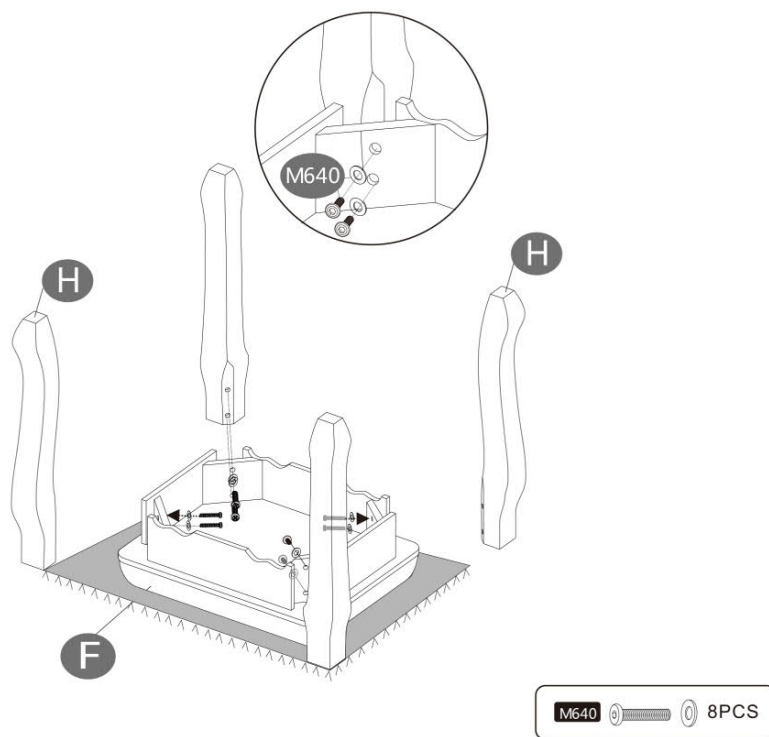

13