


STORAGE CABINET USER MANUAL

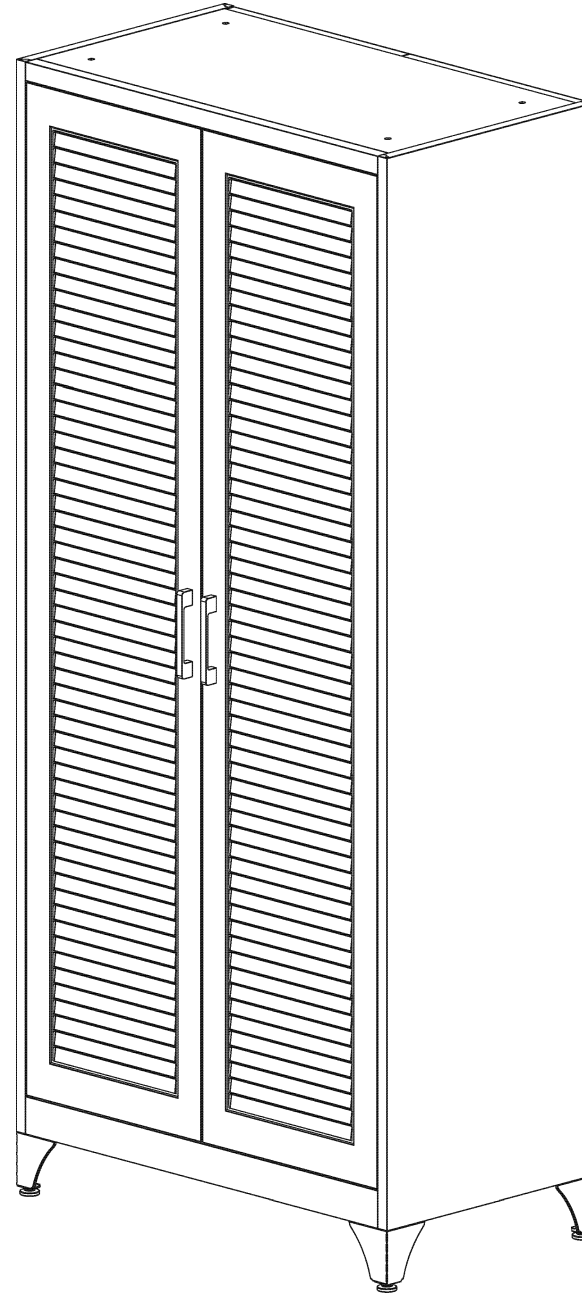

Please read the user manual carefully or refer to the installation instructions
on the product details page. Thank you!

PRODUCT PARAMETERS

Product Size	H1900xW800xD400 mm H75xW32xD16 inch
Loading Capacity Per Layer	180lbs/81.6kg (weight must be distributed evenly)
N.W.	73.0lbs/32.8kg
G.W.	81.8lbs/37.1kg

 WARNING:

Read this material before using this product. Failure to do so can result in serious injury. SAVE THIS MANUAL


ASSEMBLY PRECAUTIONS

1. Assemble needs to follow these instructions. Incorrect assembly can be a hazard.
2. Wear safety goggles and heavy-duty work gloves during assembly.
3. When drilling the screws, it is recommended to choose **electric screwdriver**.
4. Do not assemble when tired or when under the influence of alcohol, drugs or medication.
5. Weight capacity and other product capabilities apply to a properly and completely assembled product only.
6. Keep the assembly area clean and well-lit.
7. Keep bystanders out of the area during assembly.
8. Assemble on a flat, level, hard and smooth surface.

Tips




Using an electric screwdriver makes the install process easier and faster.



x2


This is the original instruction.
The appearance of the product shall be subject to the product
you received. Please forgive us that we won't inform you
again if there are any technology or software updates on our
product.

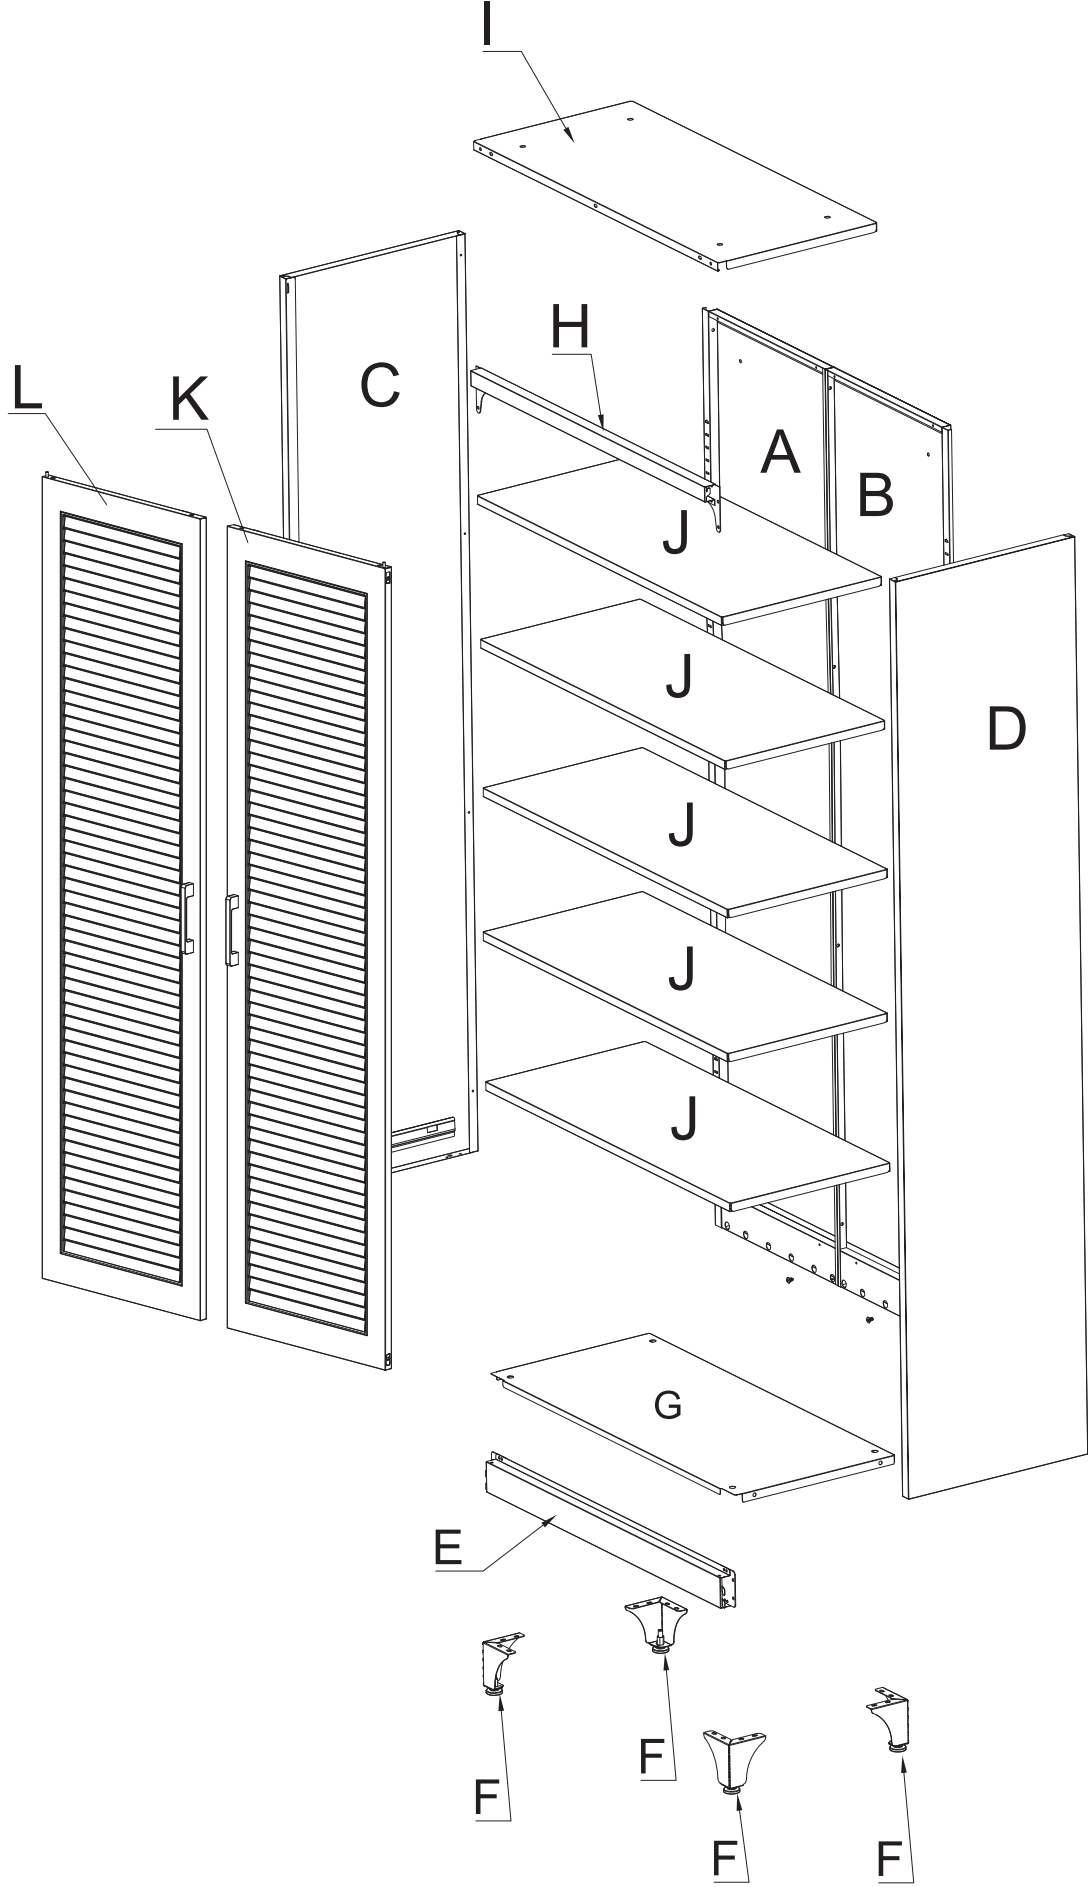

USE PRECAUTIONS

 **WARNING:TO PREVENT SERIOUS INJURY AND DEATH FROM TIPPING:**

- 1. This product is not a toy. Do not allow children to play with or approach this item.
- 2. Use as intended only. Do not sit or stand on the product.
- 3. Inspect before every use. Do not use it if parts are loose or damaged.
- 4. Use on flat, level, and hard surfaces only.
- 5. Do not exceed the listed weight capacity. Tighten all knobs securely before applying load. Be aware of dynamic loading! The sudden loadmovement may briefly create an excess load, causing product failure.

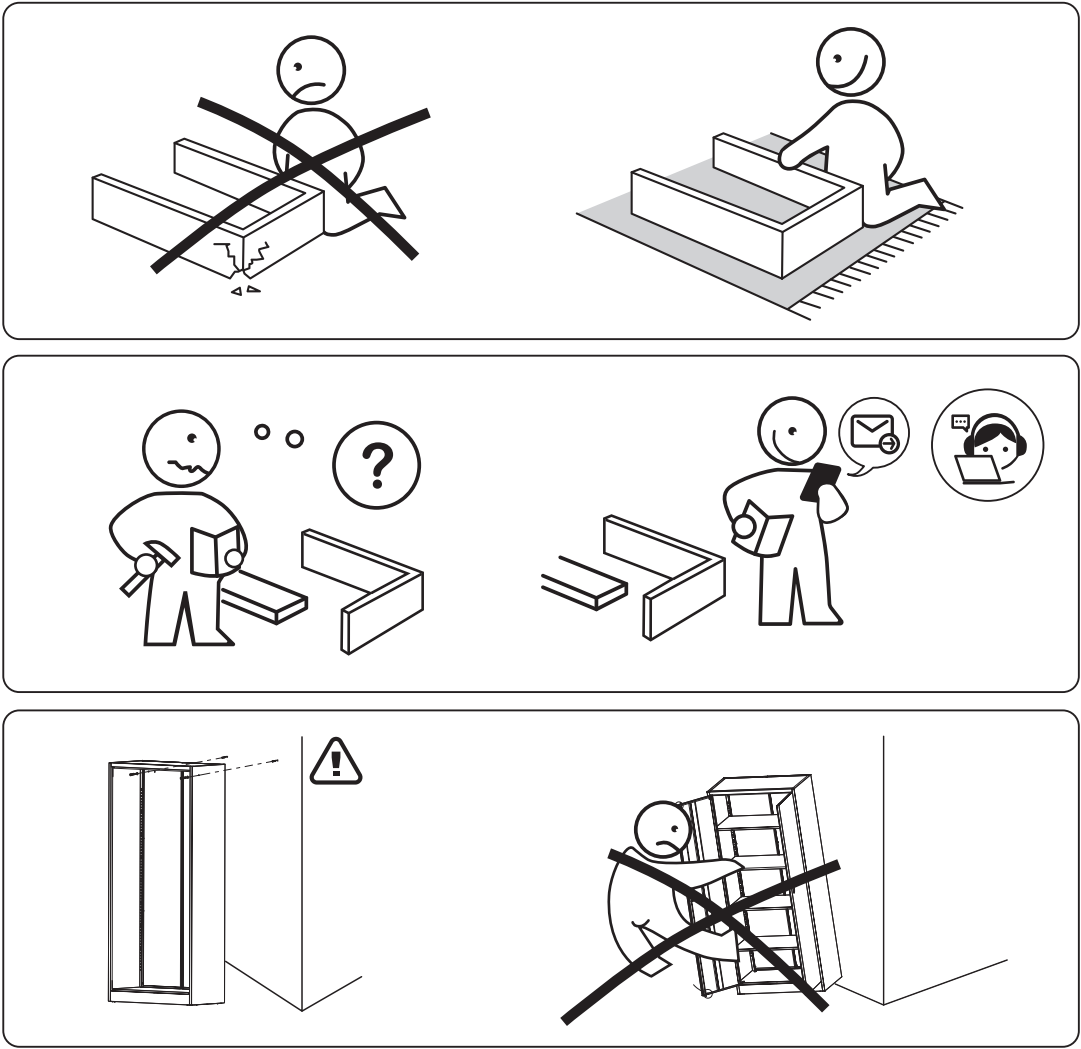

PARTS LIST

A×1	B×1	C×1	D×1	
E×1	G×1	H×1	I×1	
K×1	L×1	M×4	N×2	O×43
		P×2	Q×4	S×20
		T×1	U×4	V×2
J×5	F×4	Spare Acc		

step 1


NOTICE

Two Doors (L&K) are pressed into back panels (A&B), please take them out before assembly.

Qx4




Put part A and part B together by following the figure. Then Drill 4 screws Q.

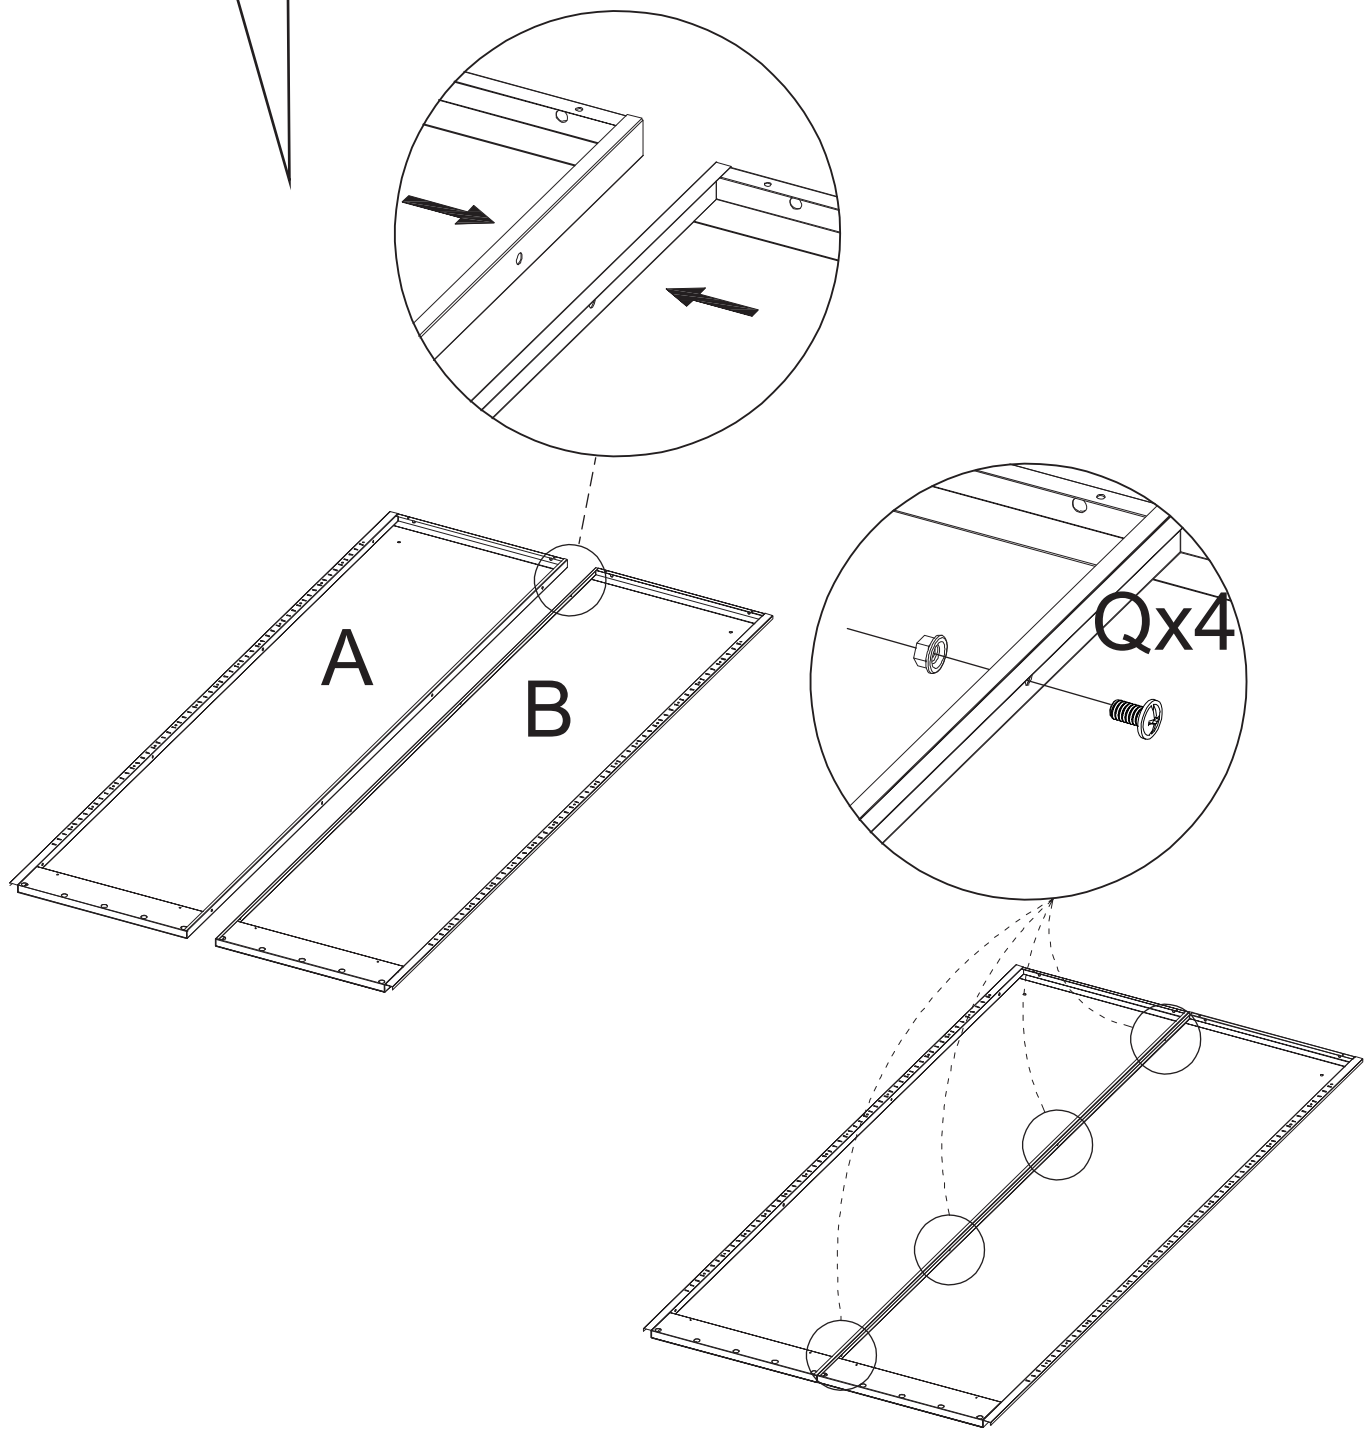


step 2

Ox8

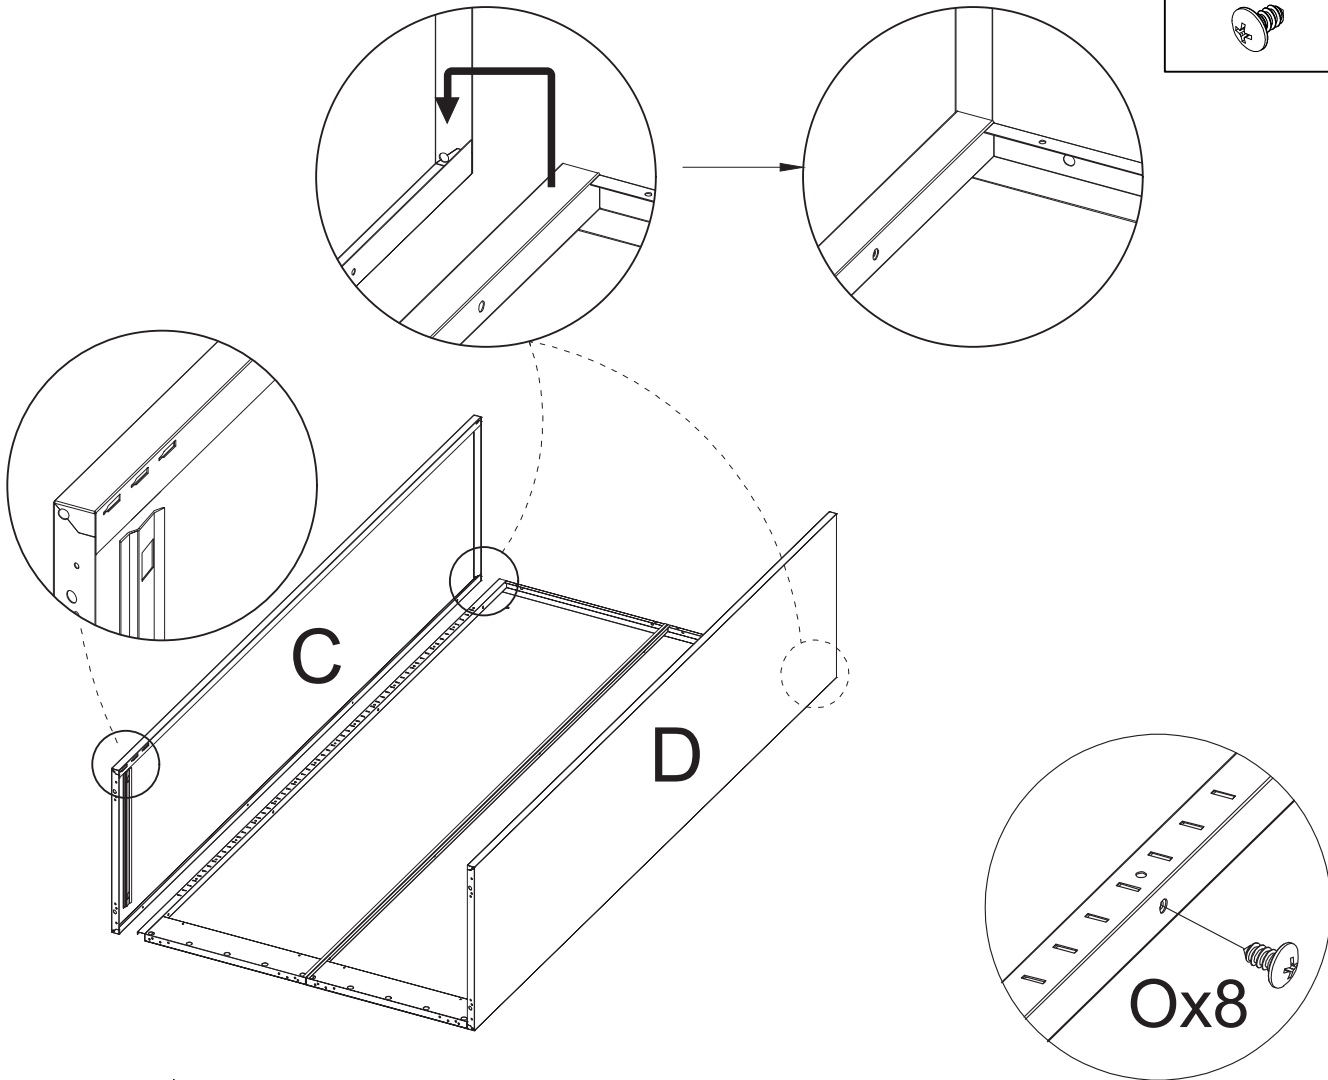

Part C is on the left side and part D is on the right side. If they are misplaced, the next assemble step will fail.

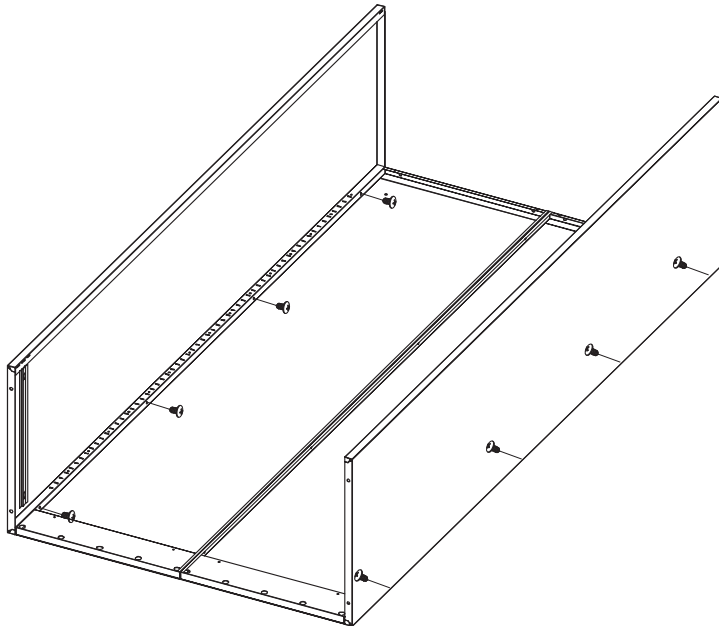

step 3


- ① Insert the 2 buckles on either side of panel E into the pointed holes in both side panels.
- ② Push it down by following the direction of arrow.

Ox4



Ex1




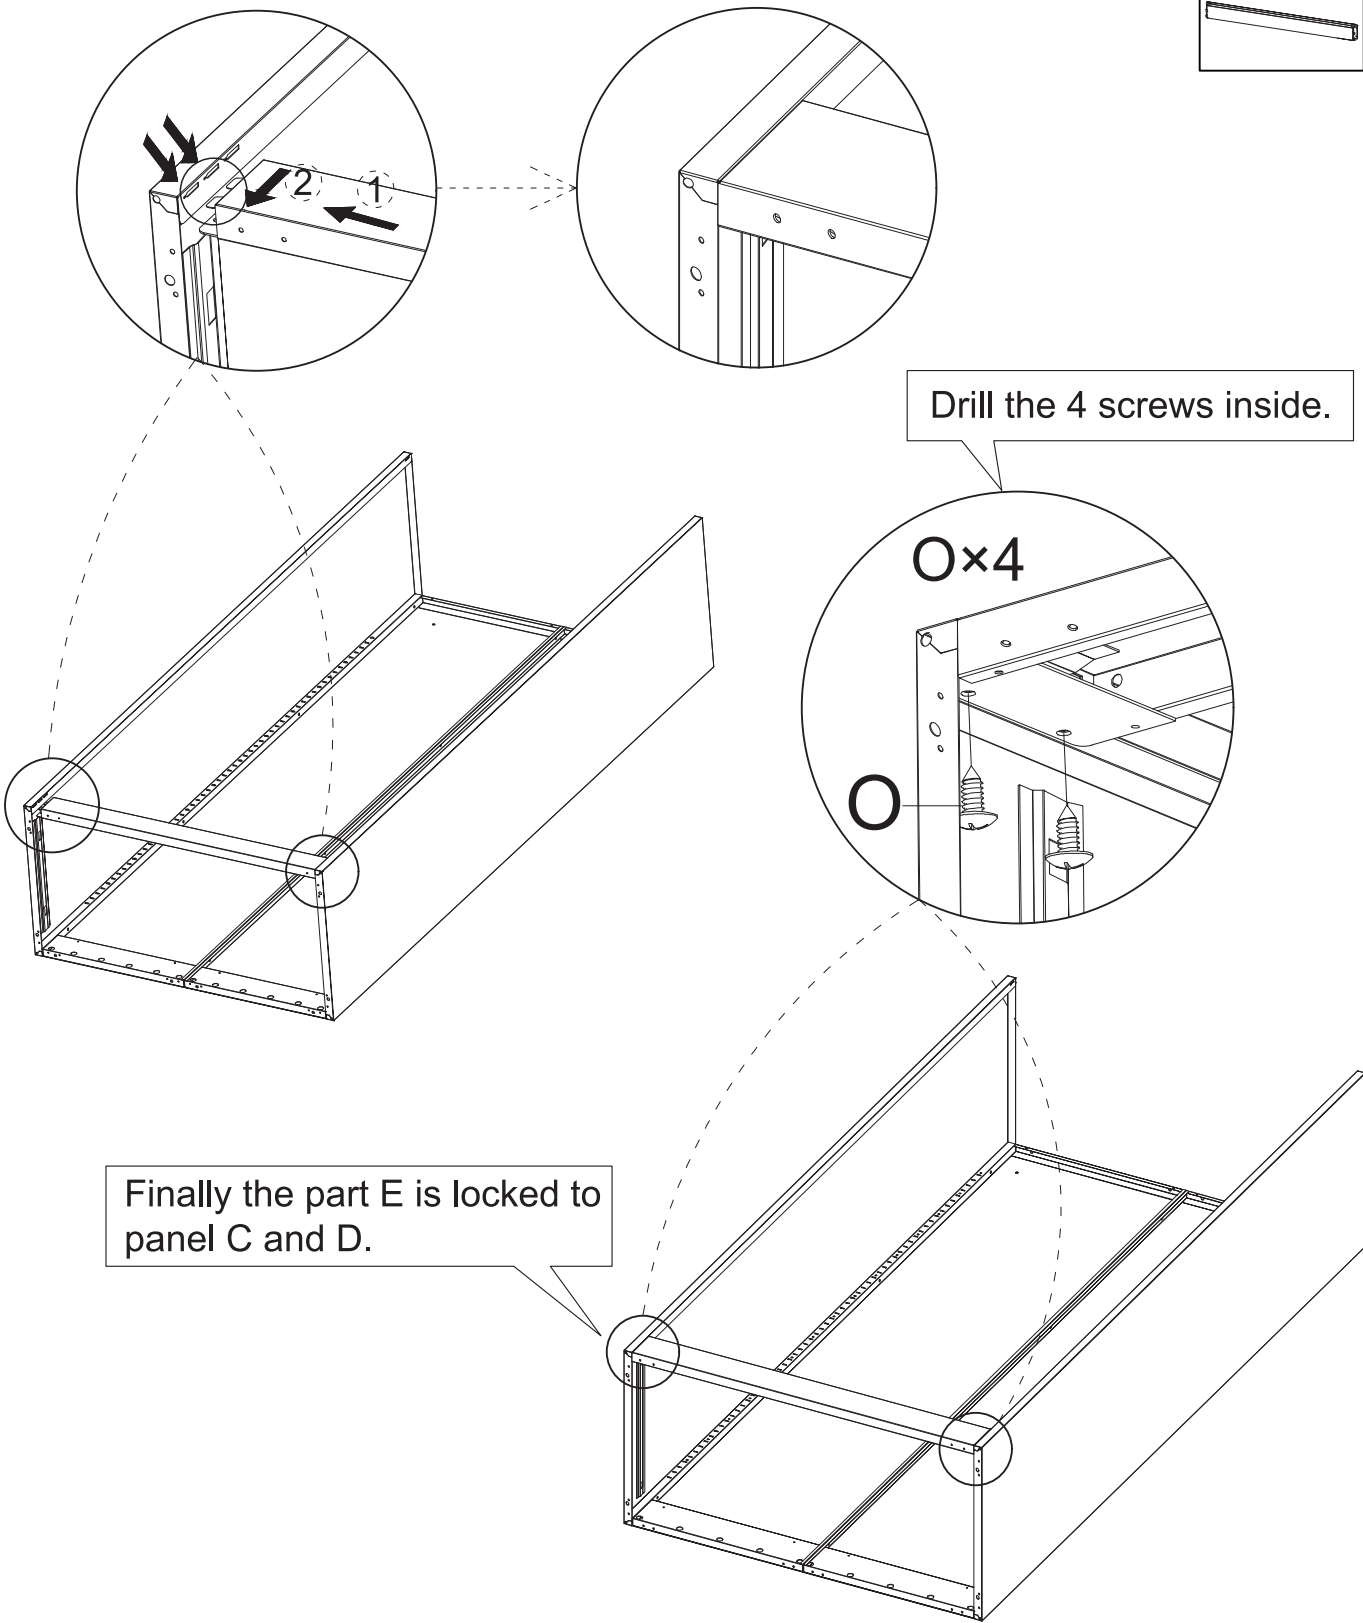

step 4




Gx1



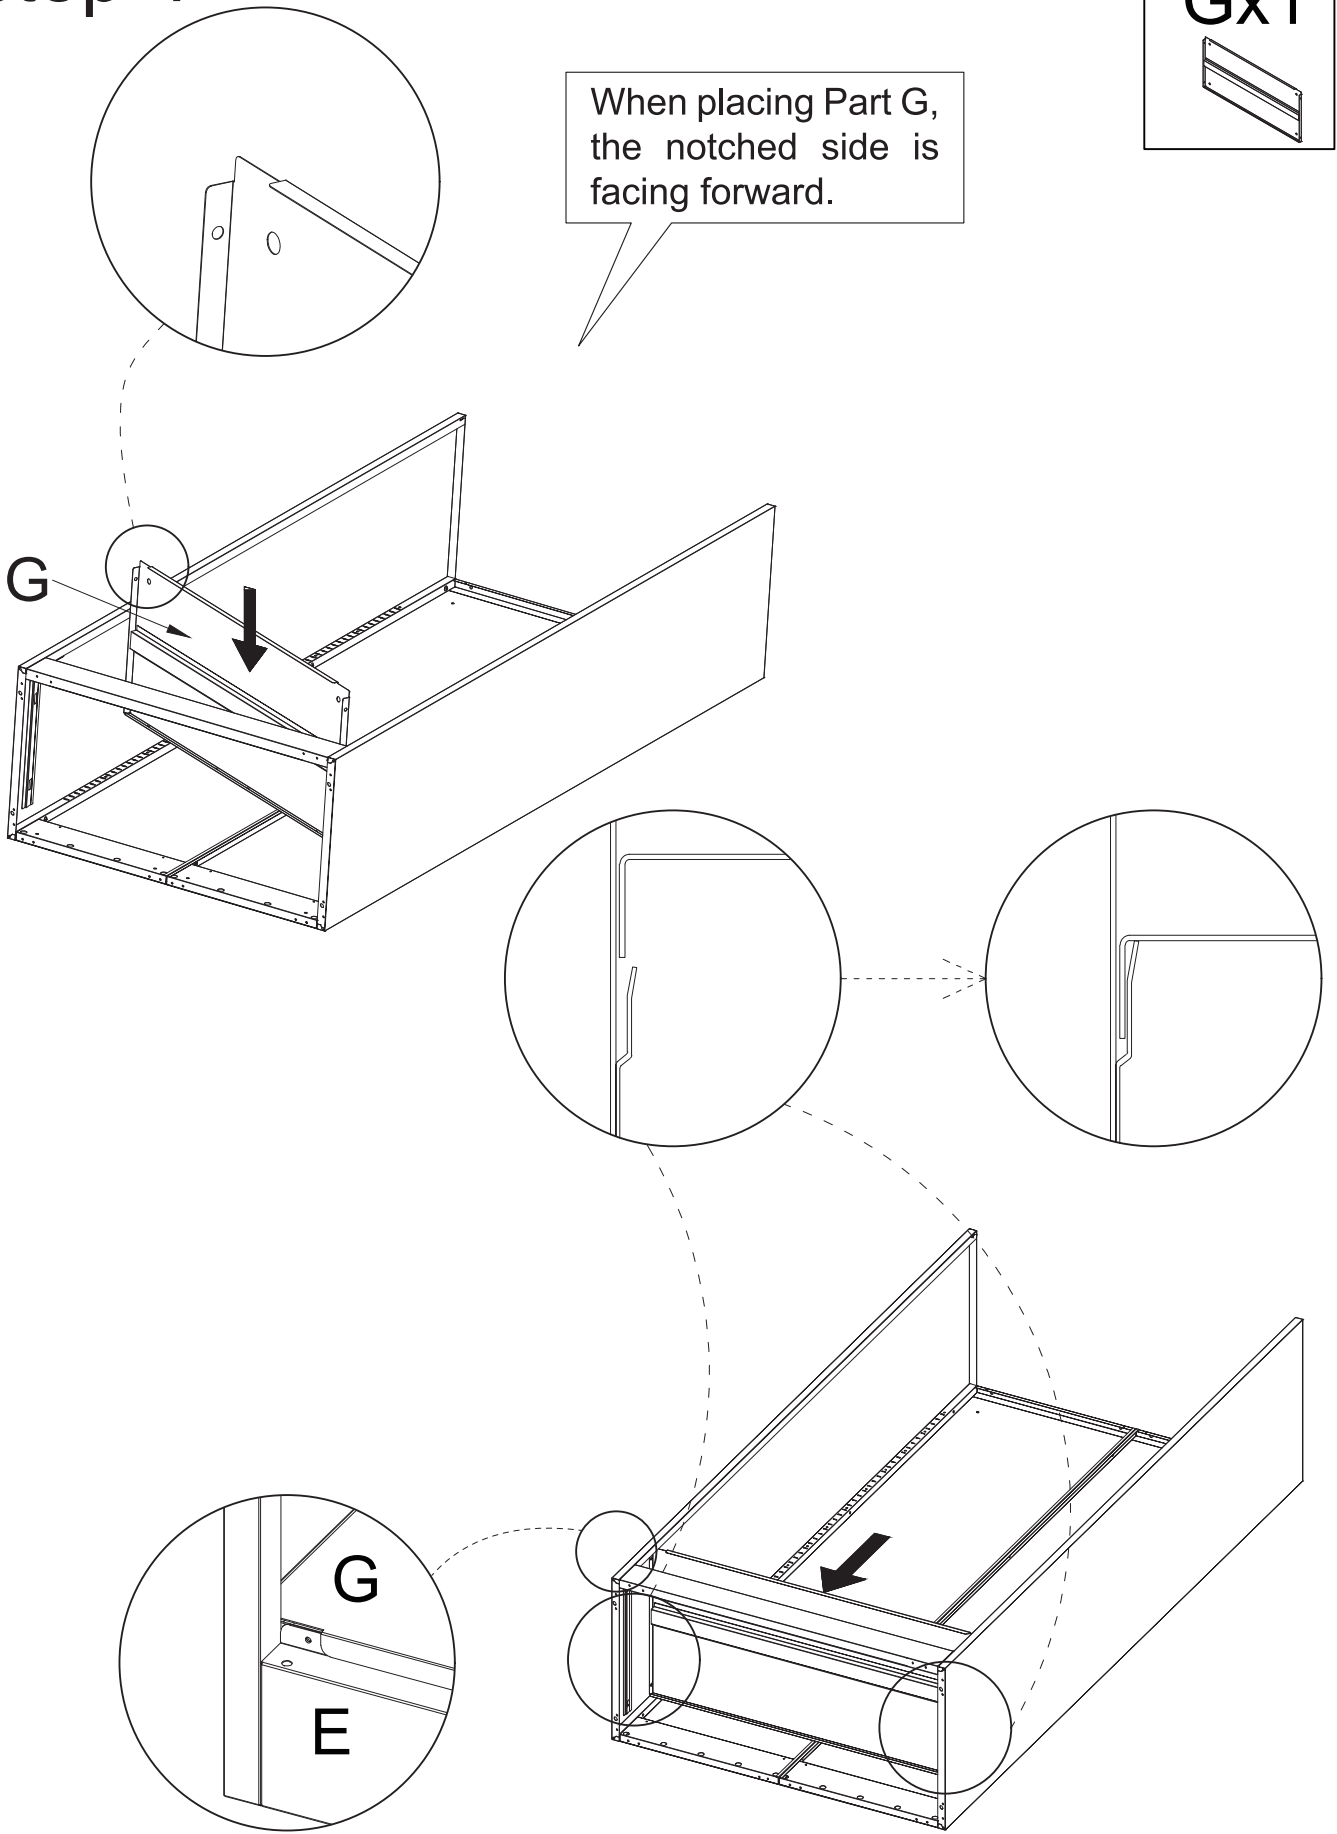

step 5

Ox4

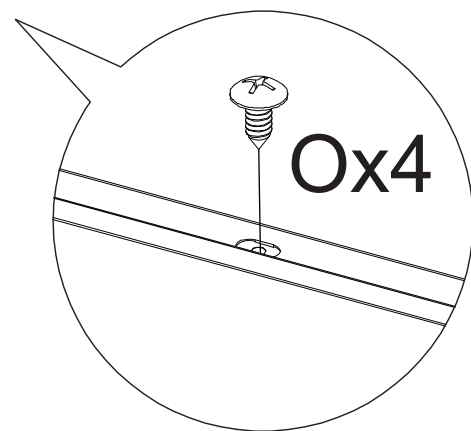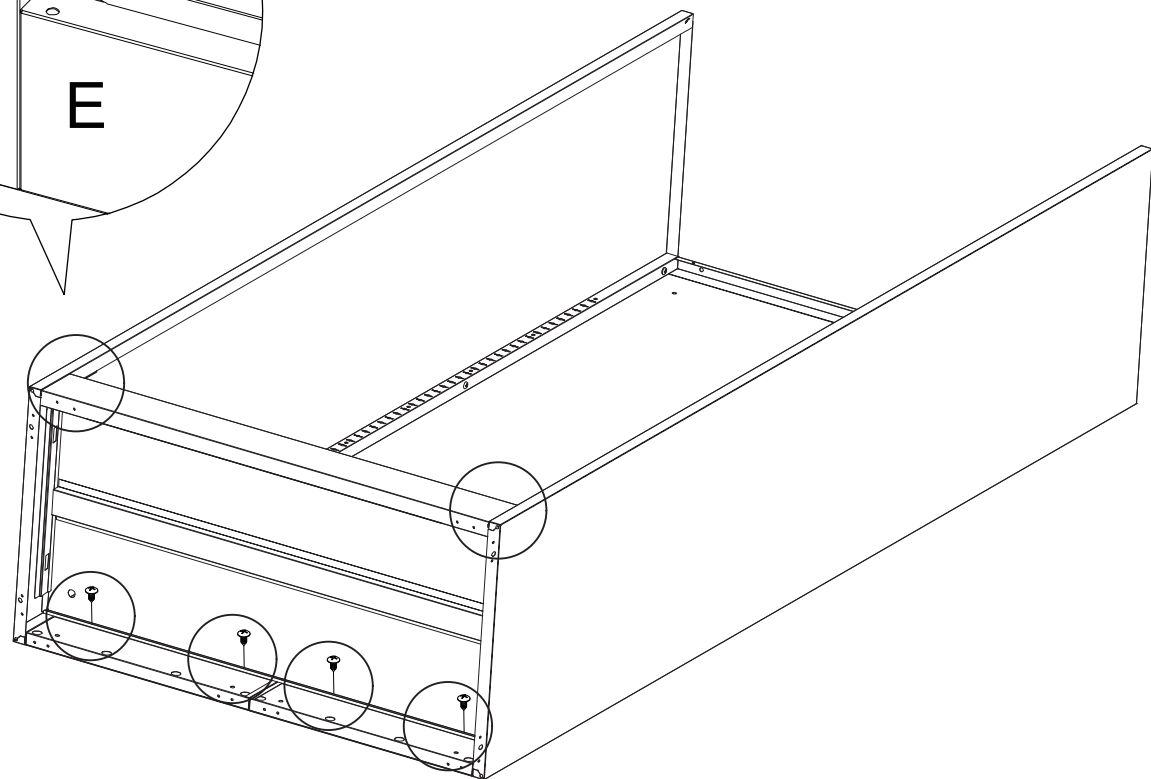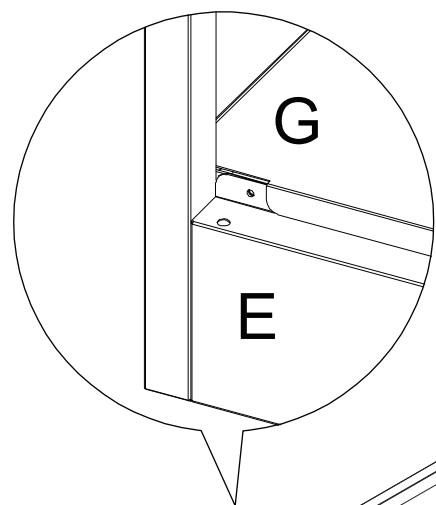


step 6




Fx4




Mx4



Ox16

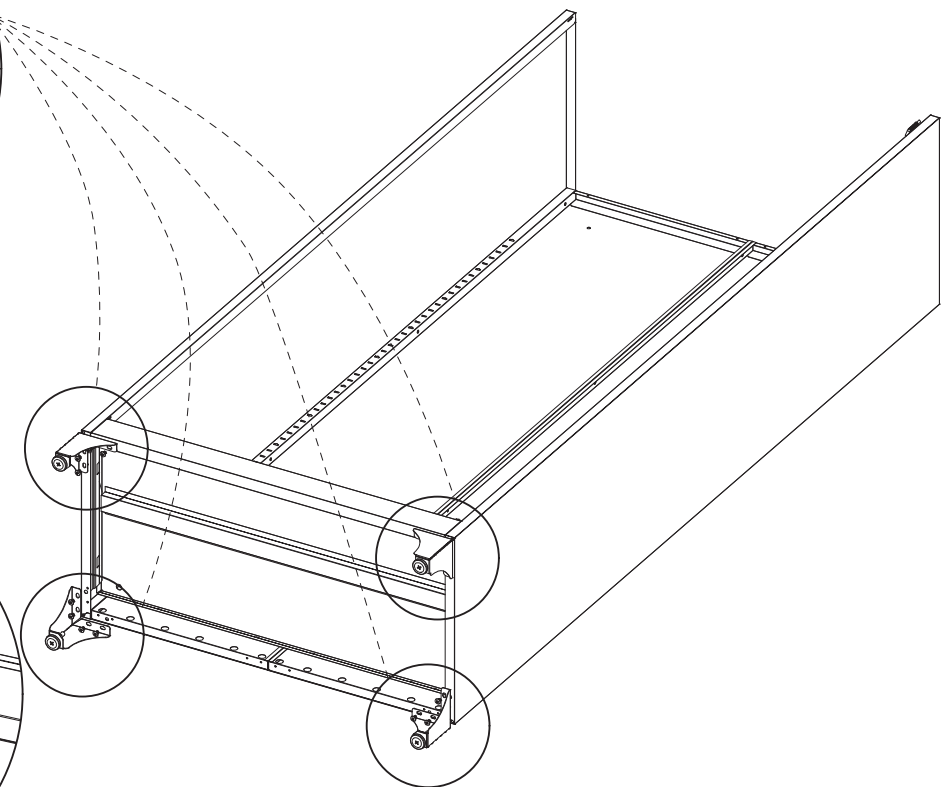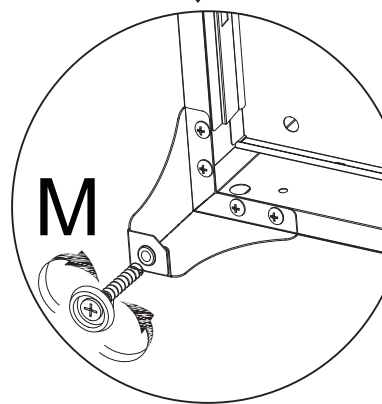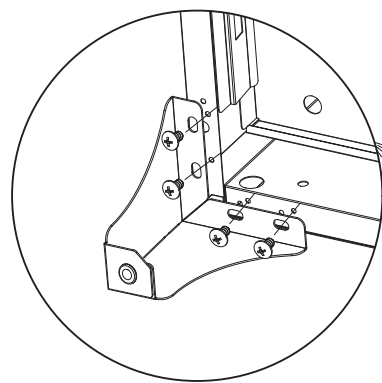


For M screw:

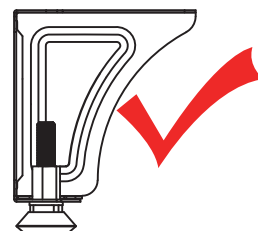


Drilling the M entirely is the safest way to keep the cabinet stable.




If the ground is uneven or the cabinet is wobbling, rotate screw M slightly to adjust it. Meanwhile, this will ensure the door opens and closes smoothly.

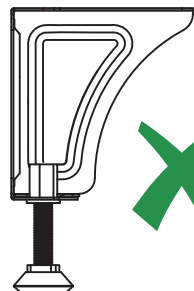


Please DO NOT adjust the M screw excessively. This may result in serious injury or an accident.

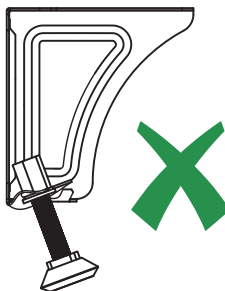


step 7

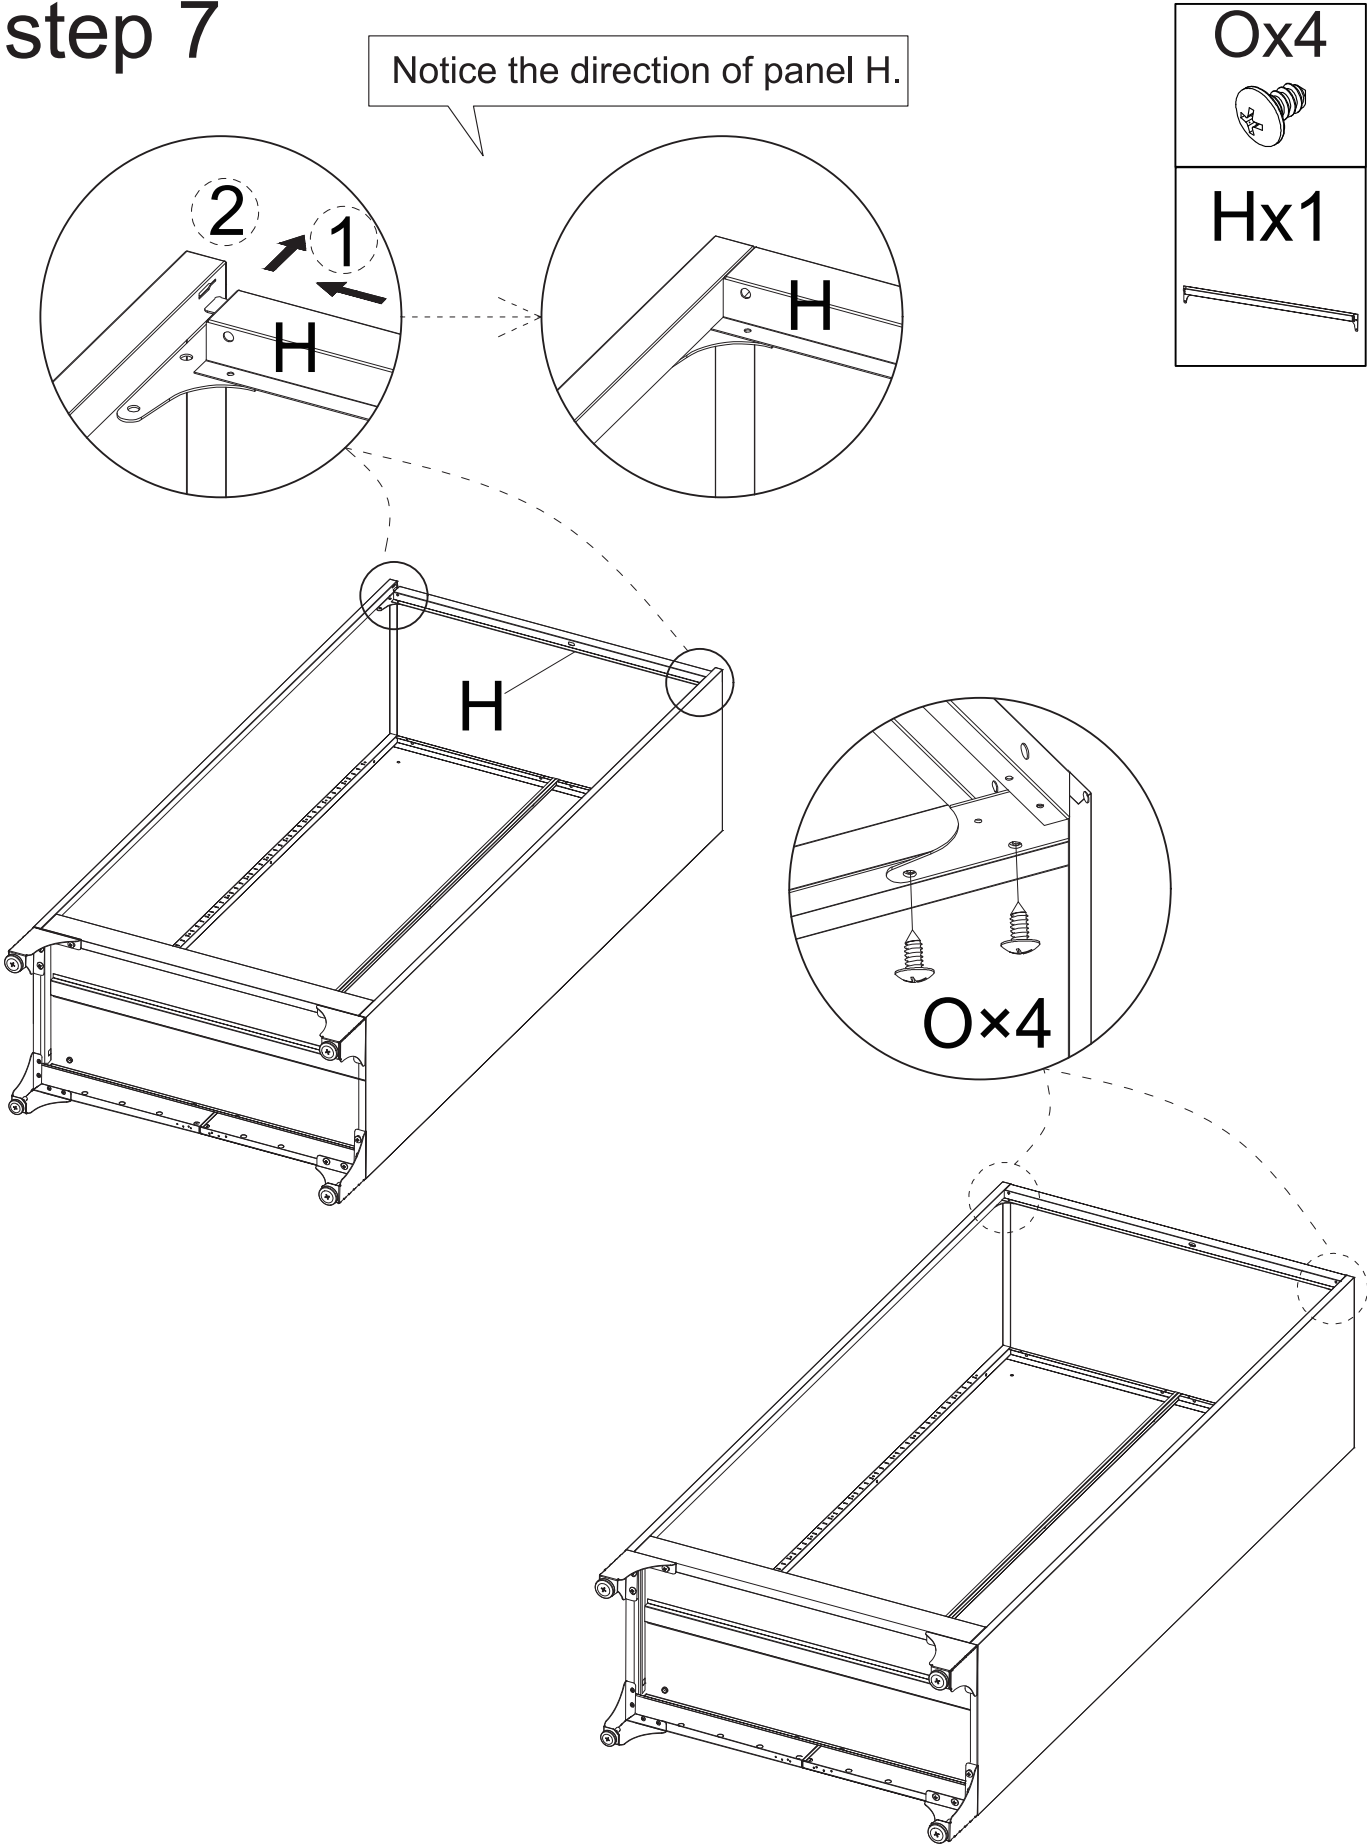

step 8

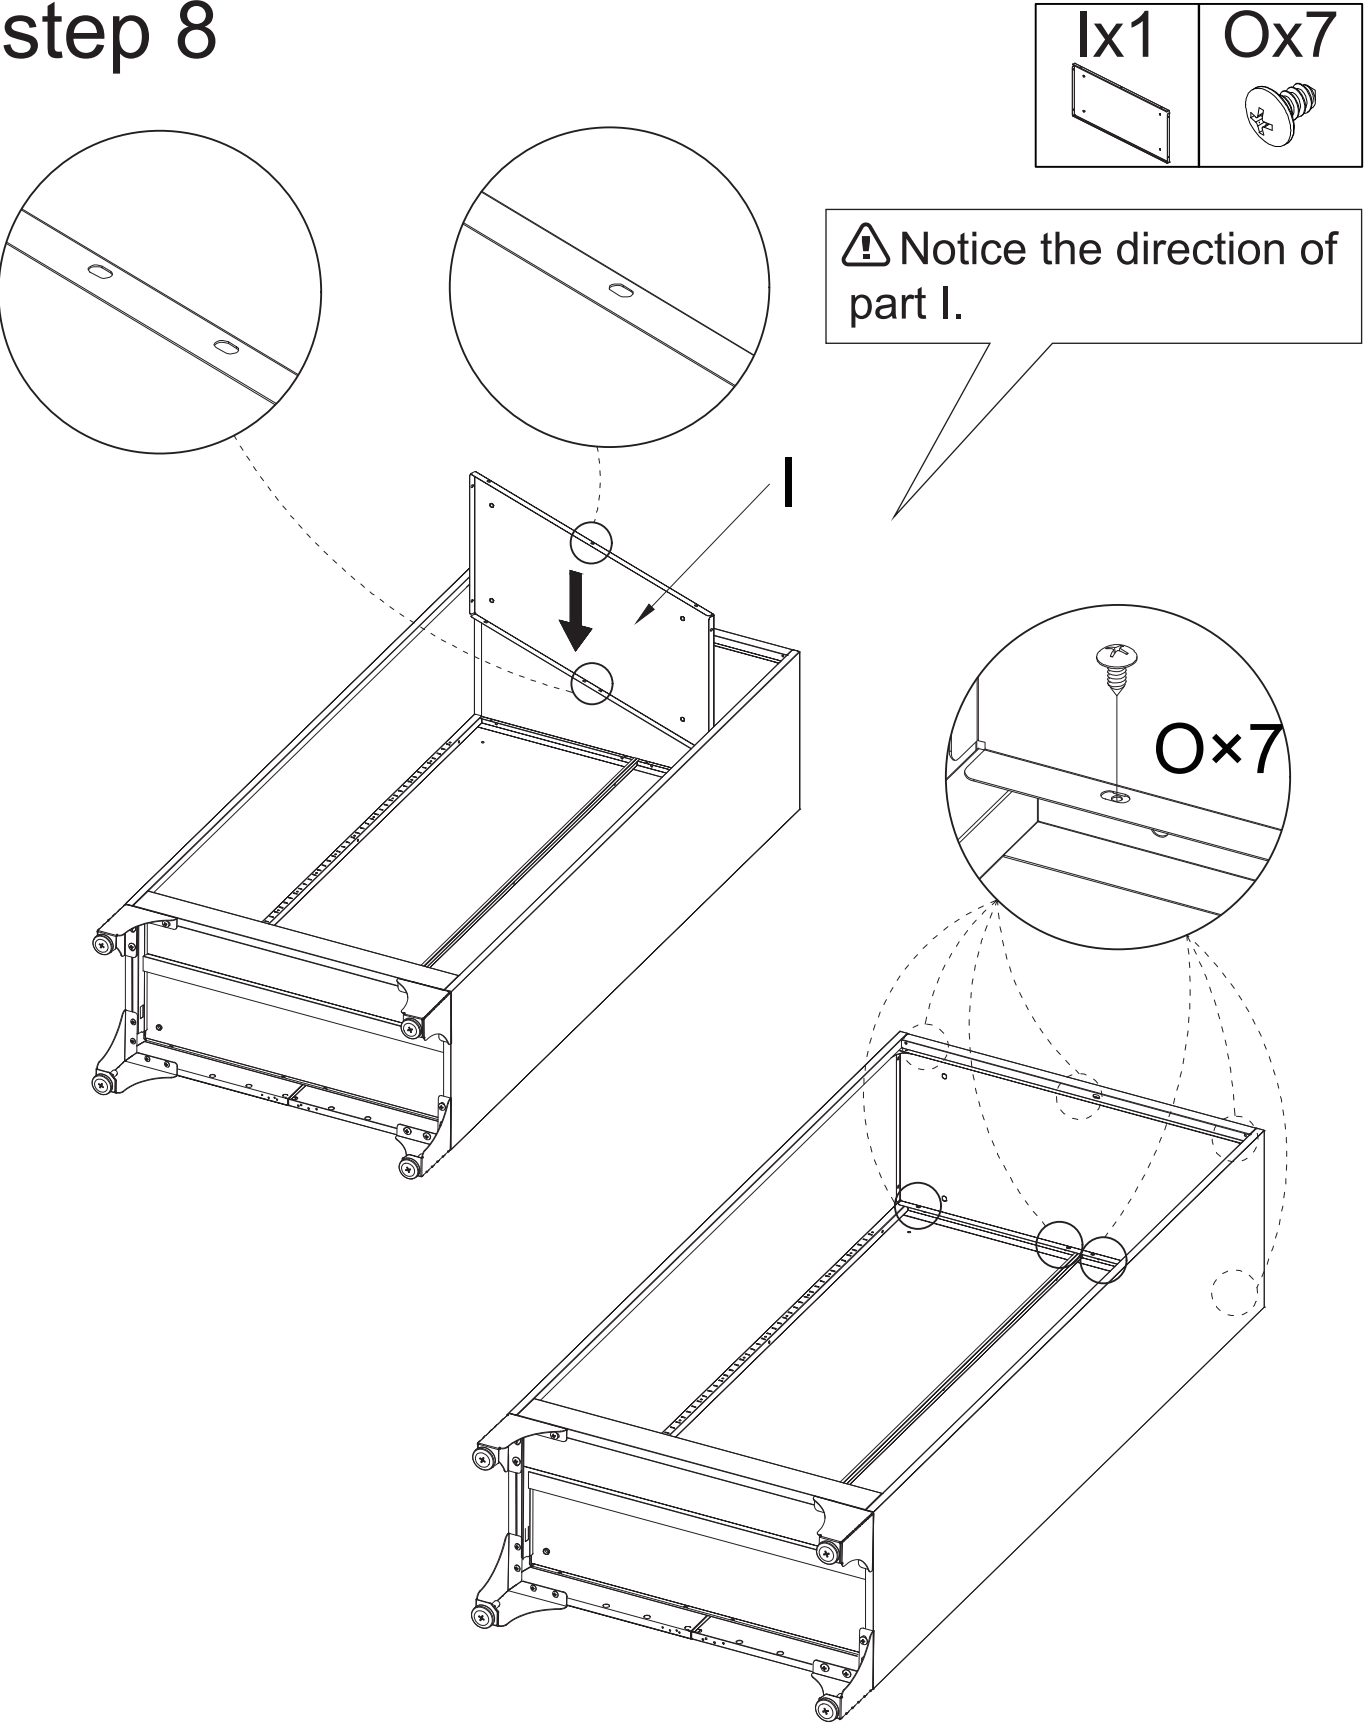



step 9




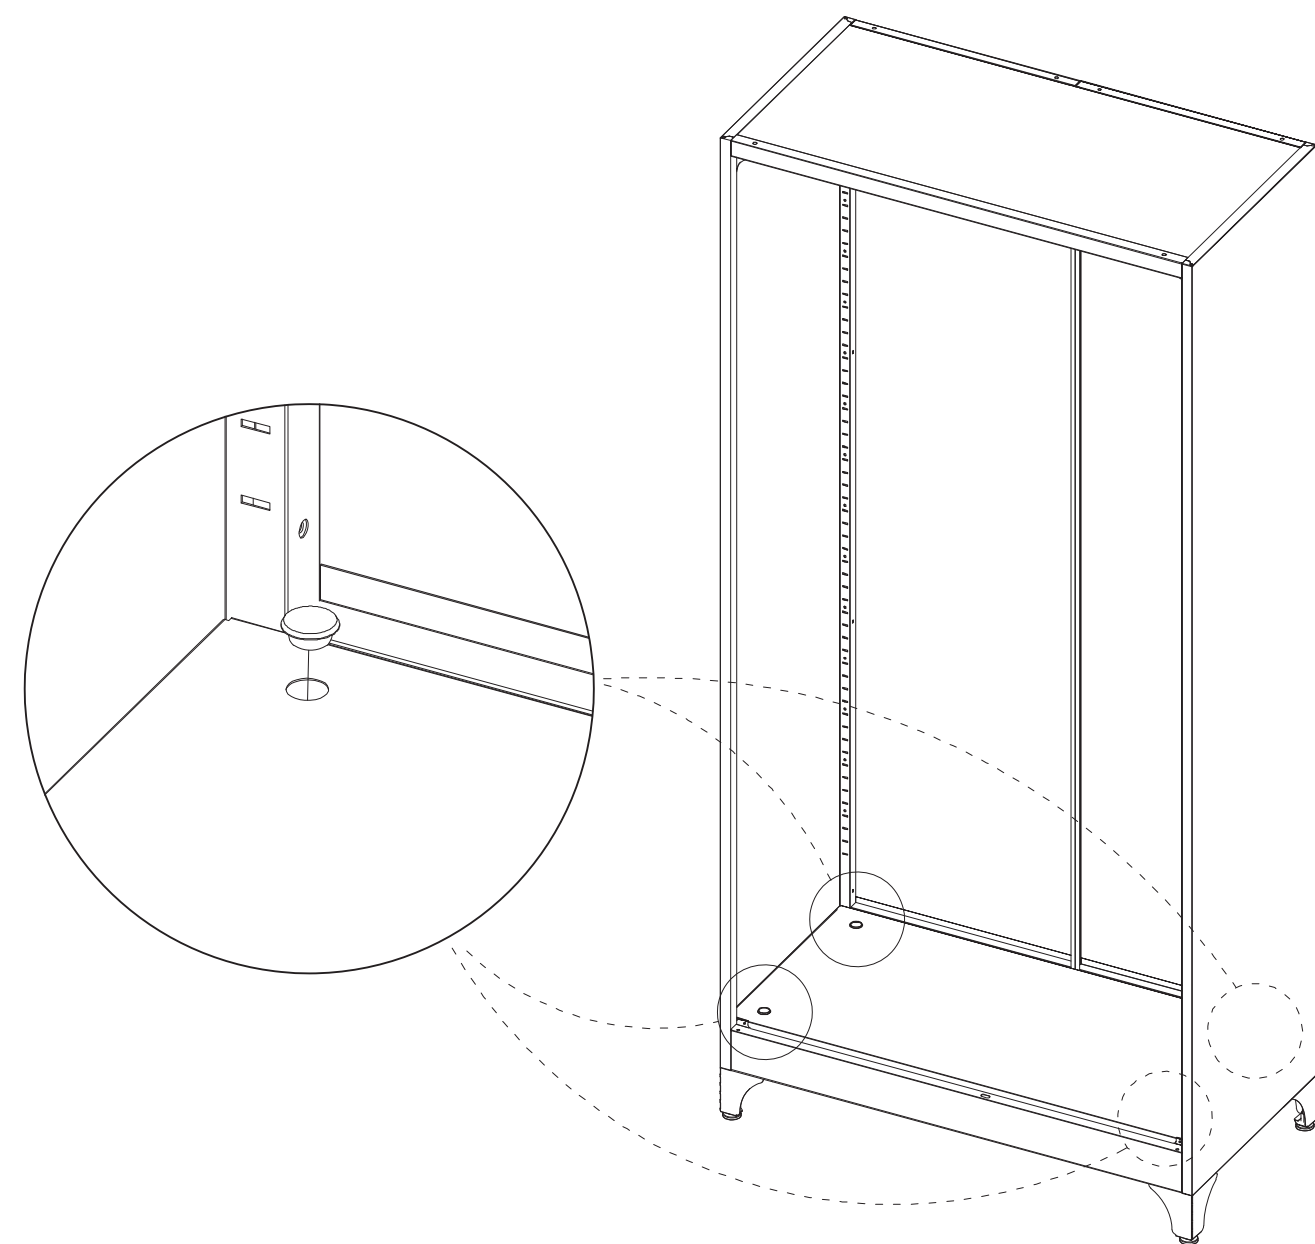


step 10



 **WARNING**

Serious or fatal crushing injuries can occur from the tip-over. To prevent this cabinet from tipping over, it must be Permanently fixed to the wall with the included wall attachment device provided. Assess the suitability of the wall to ensure that it will withstand the forces generated.If you are uncertain, seek professional advice.



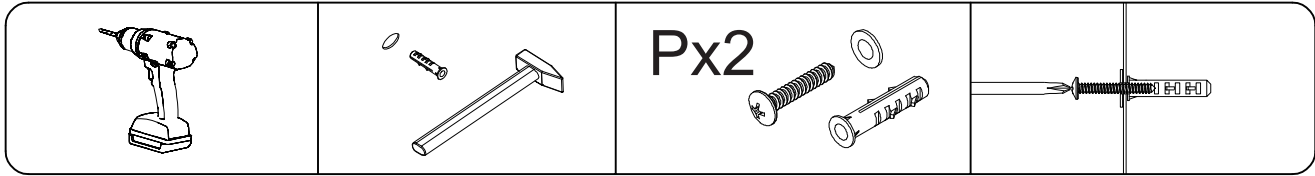
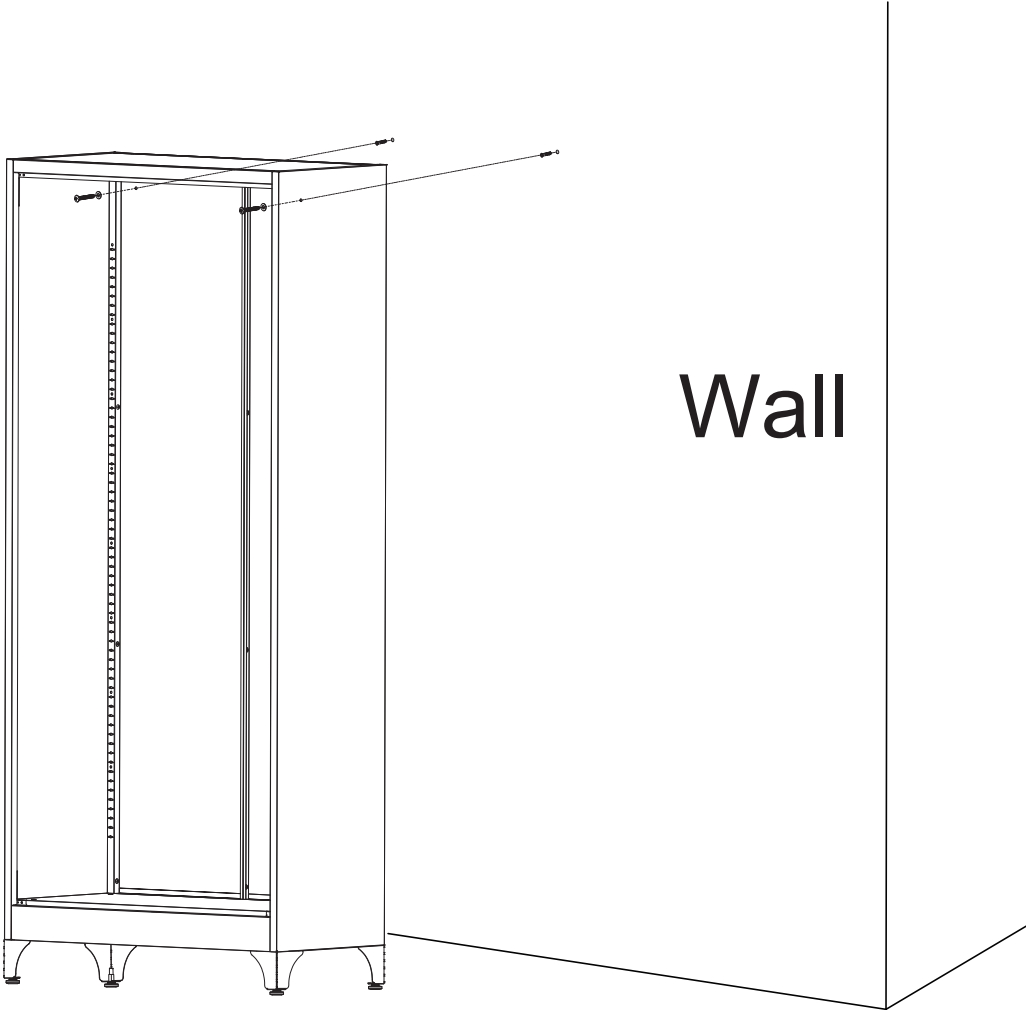


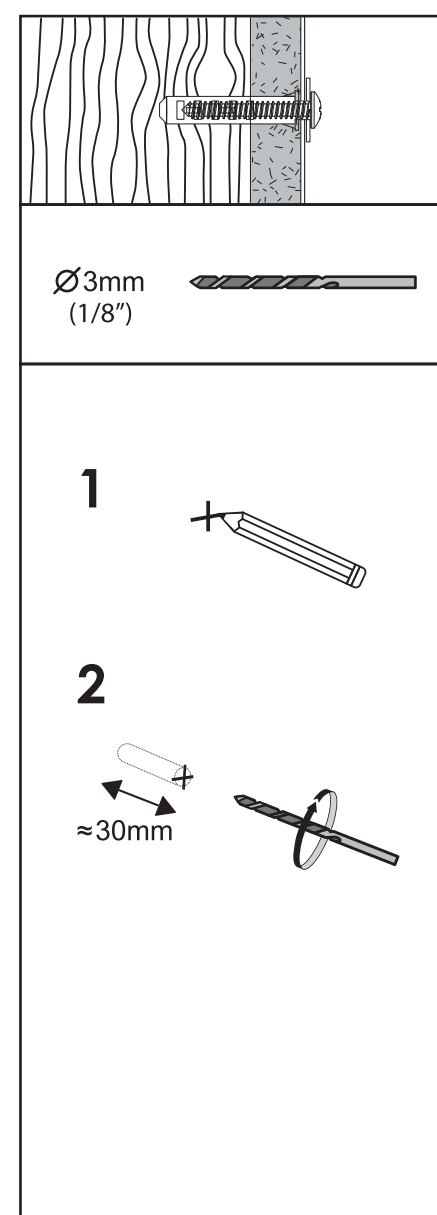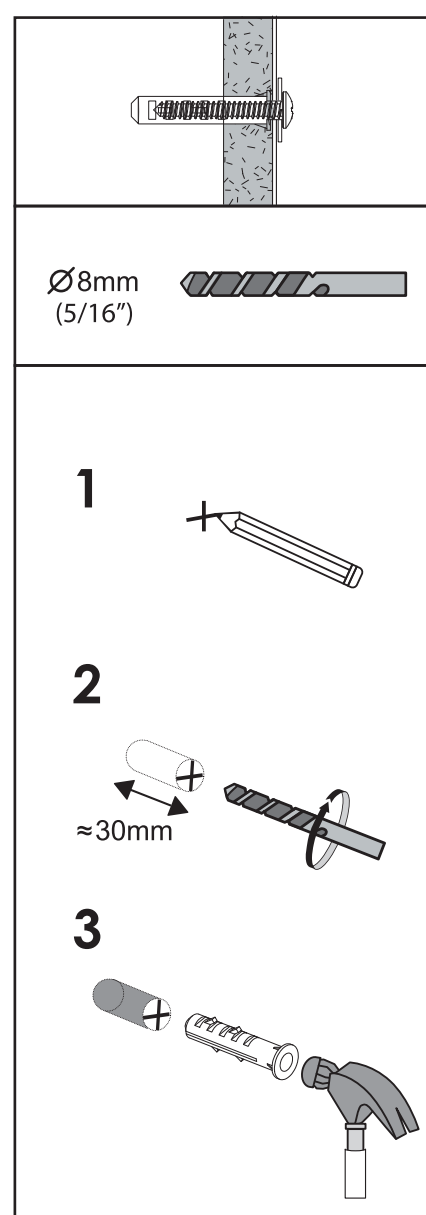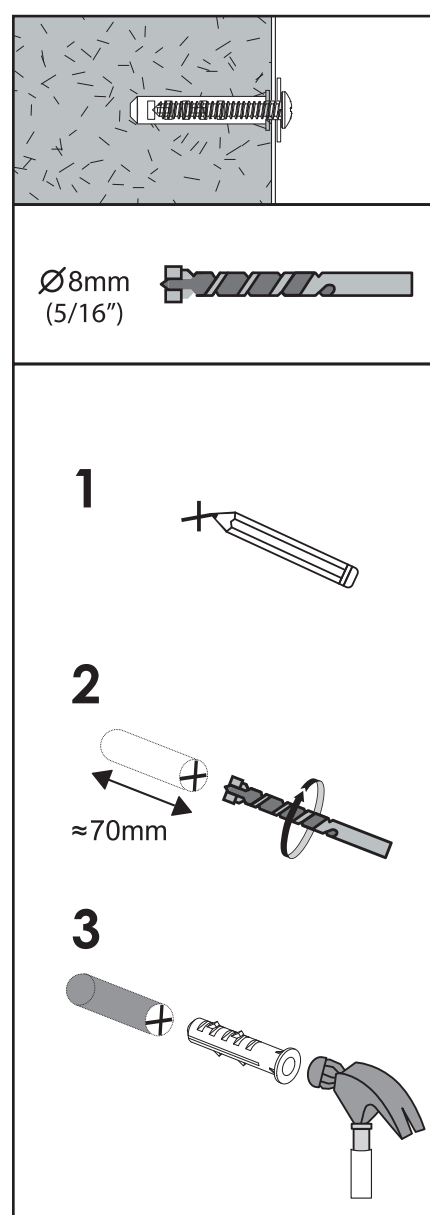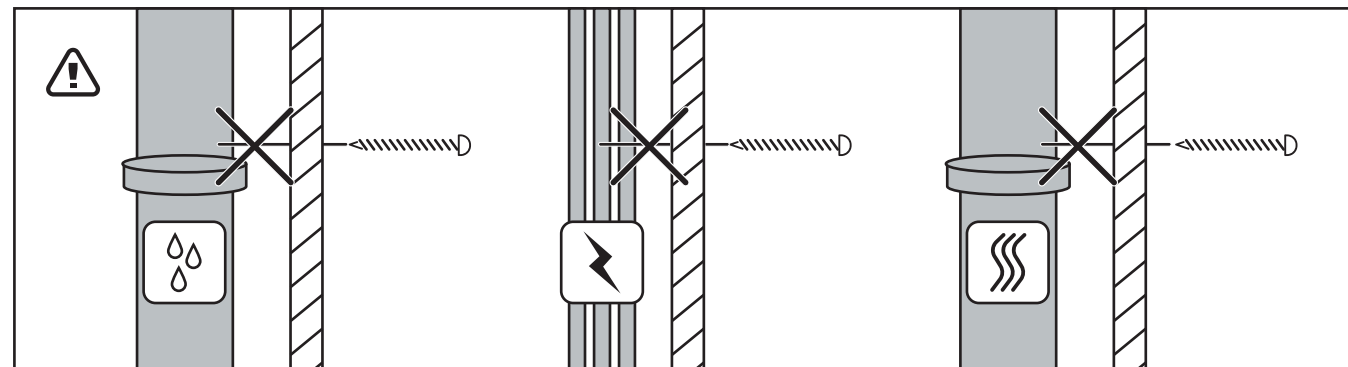

step 11

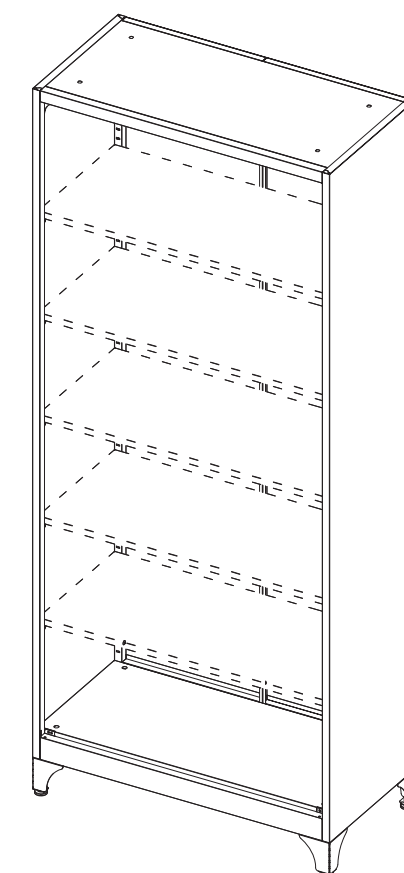
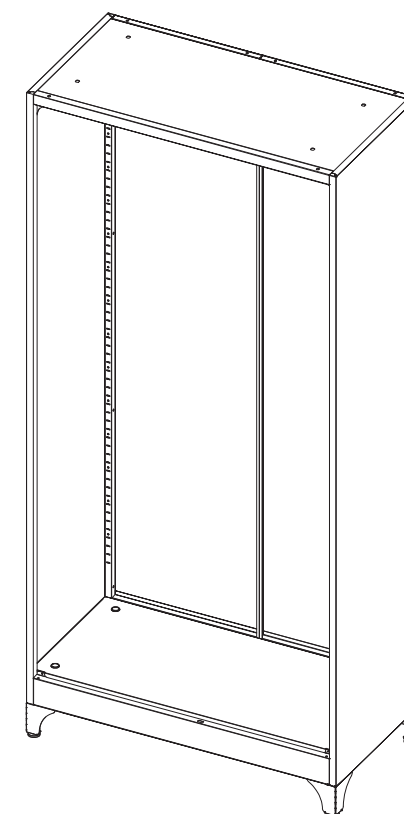


Sx20



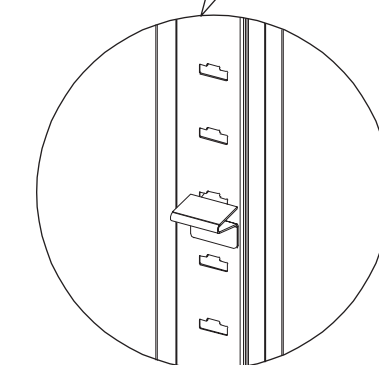
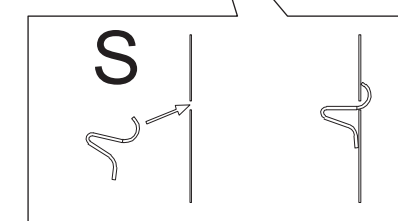
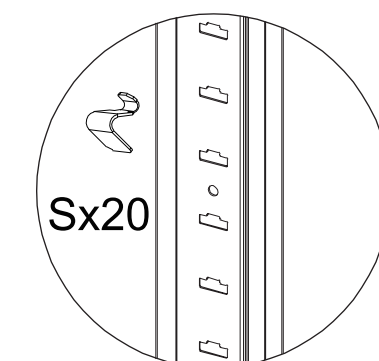



Put 4 support clips S in the four corners of the cabinet. 4 clips must at the same level.

step 12

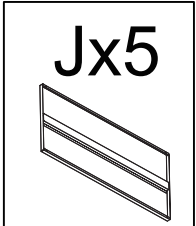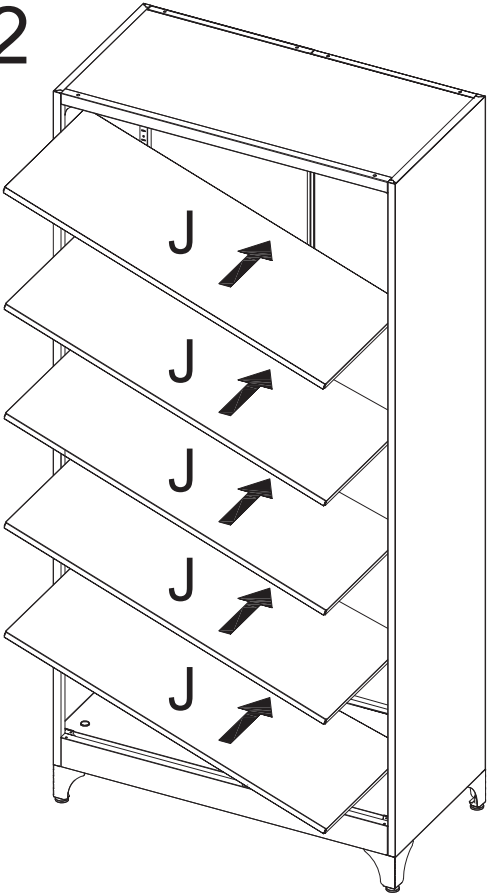

step 13

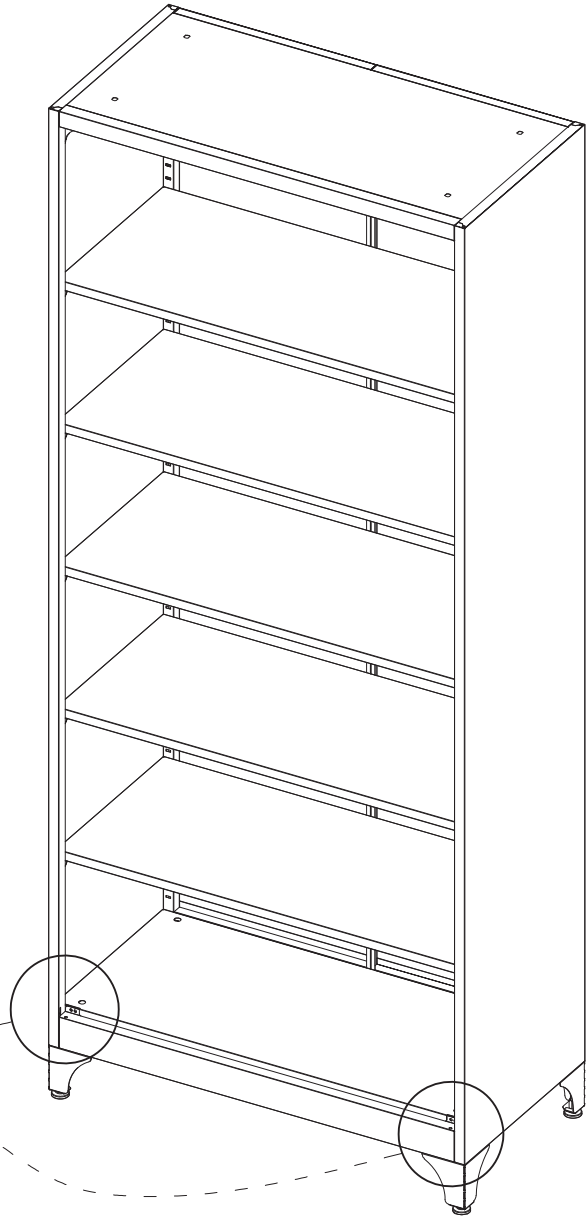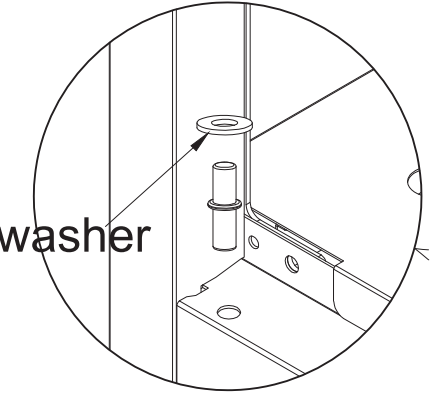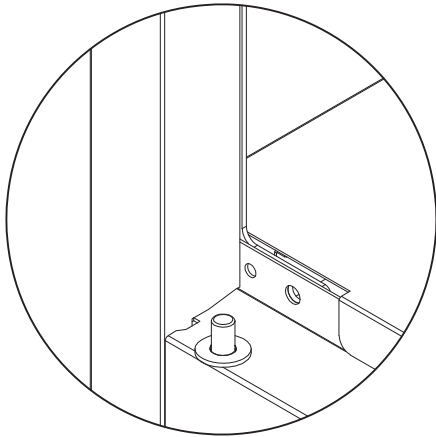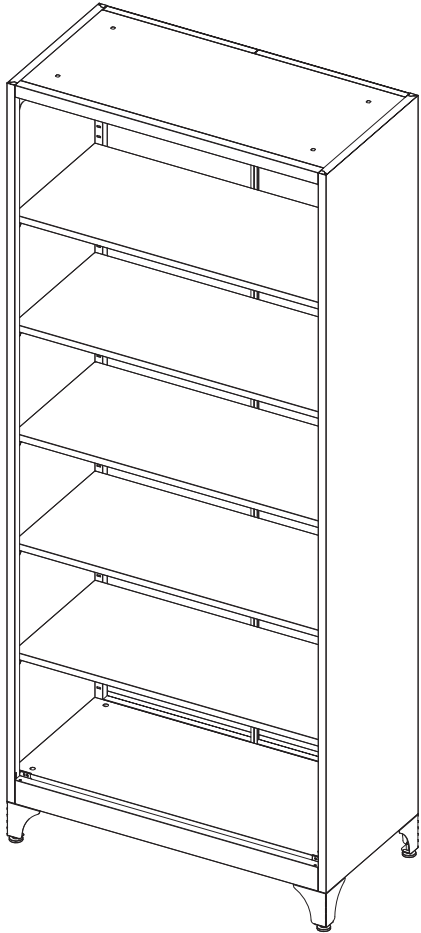
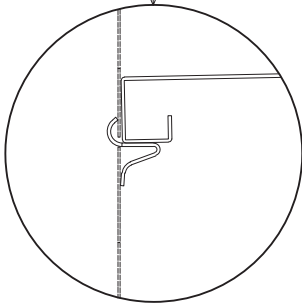
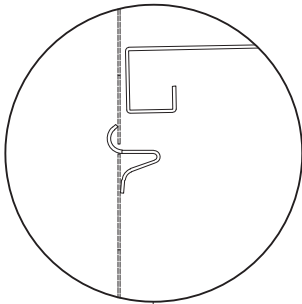


step 14

NOTICE

If the spring shaft missed from the door, you can find the spapre part in the hardware bag. Insert the crooked part to the hole.


Lx1

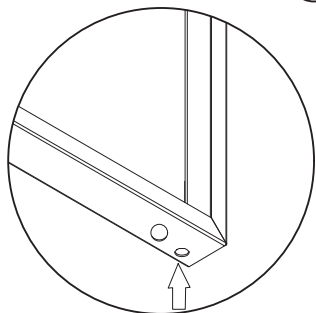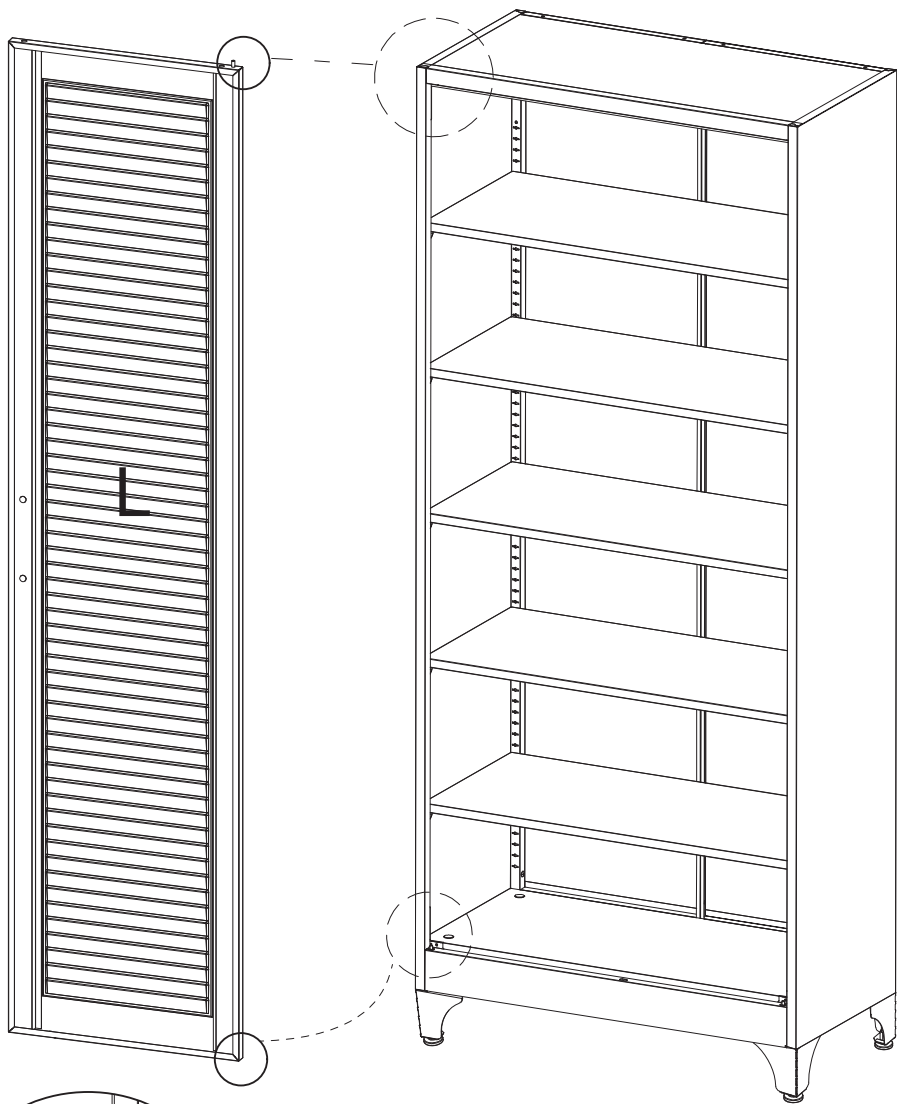


Make sure to choose the smaller hole to install on the door shaft.

Install the lower door shaft hole on the door shaft N, and press down the upper spring pin to the upper shaft hole.

step 15

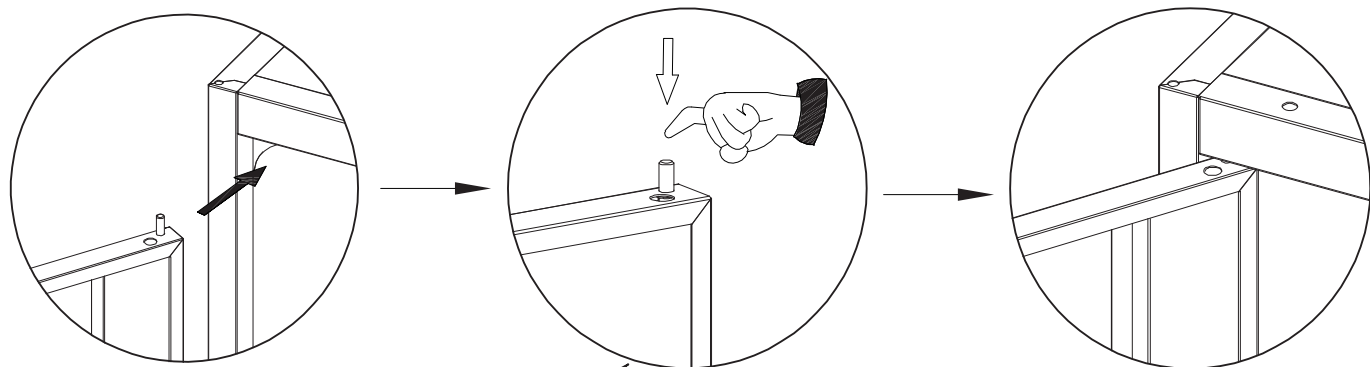

Press down the upper spring pin to the upper shaft hole.


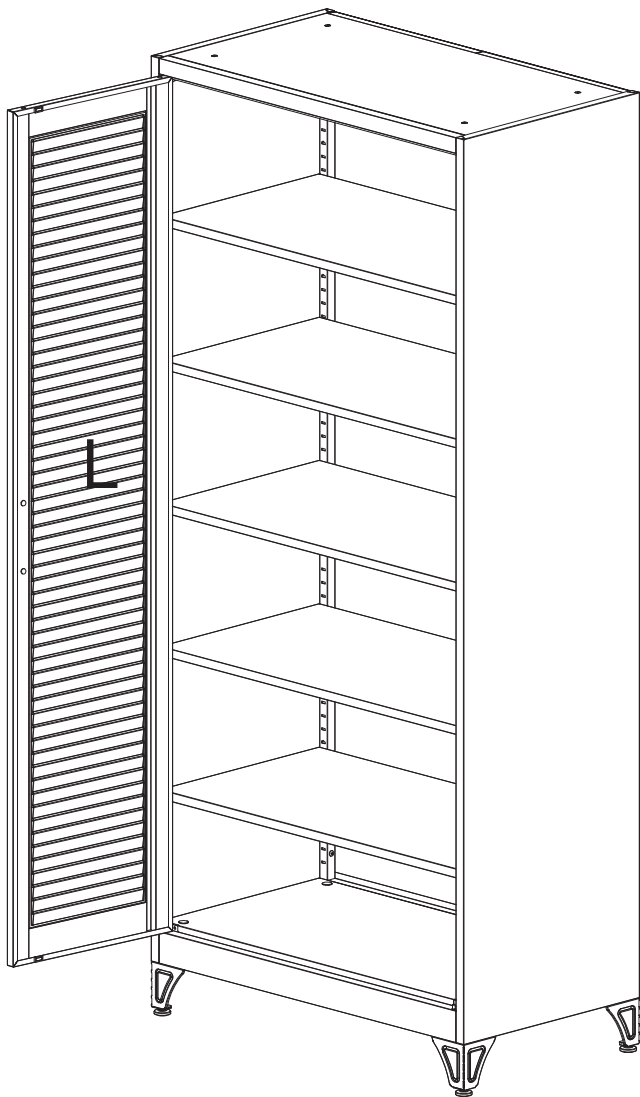


step 16

⚠ NOTICE

If the spring shaft missed from the door, you can find the spapre part in the hardware bag. Insert the crooked part to the hole.


Kx1

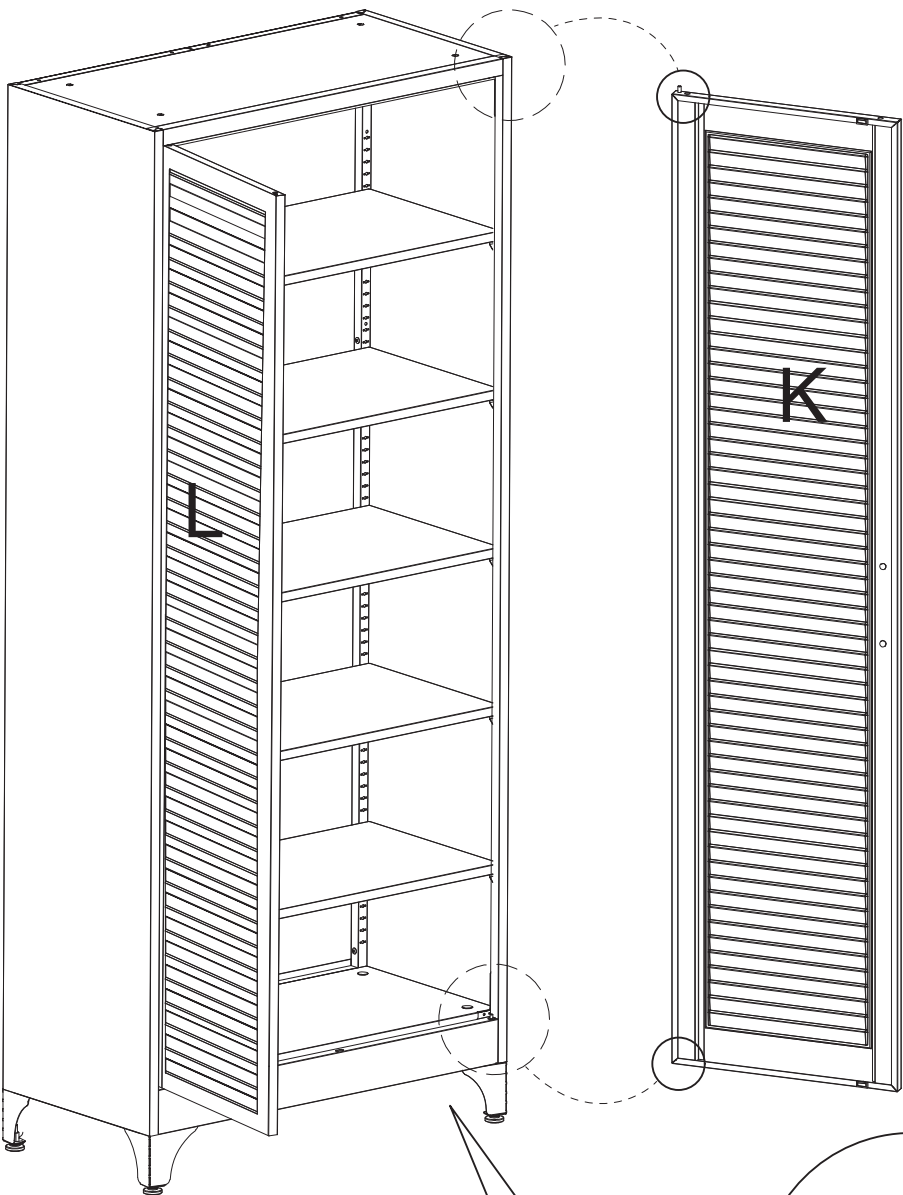


Install the lower door shaft hole on the door shaft N, and press down the upper spring pin to the upper shaft hole.

Make sure to choose the smaller hole to install on the door shaft.



step 17

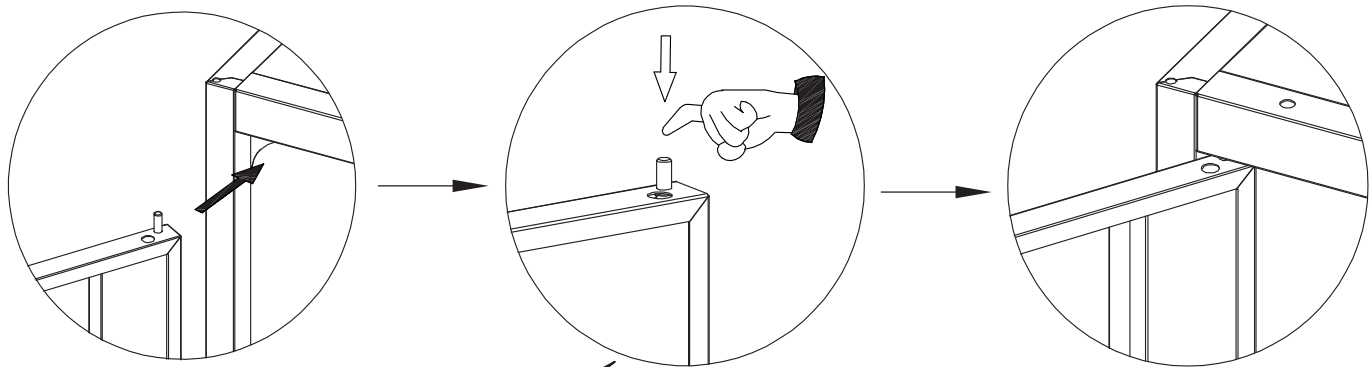


Press down the upper spring pin to the upper shaft hole.

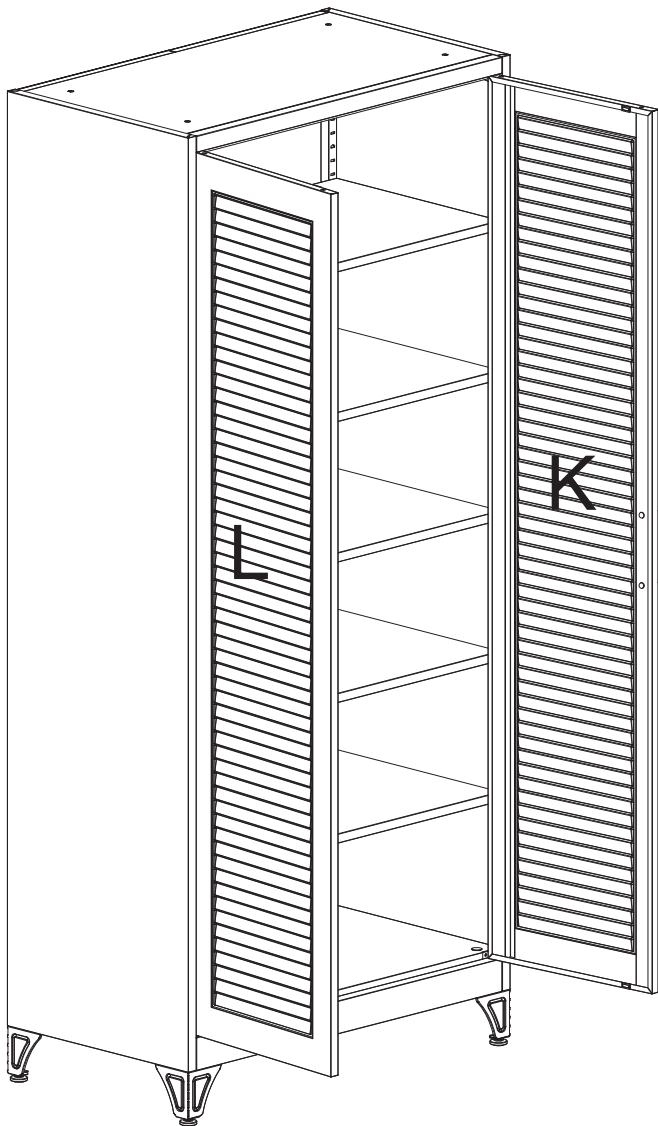

step 18

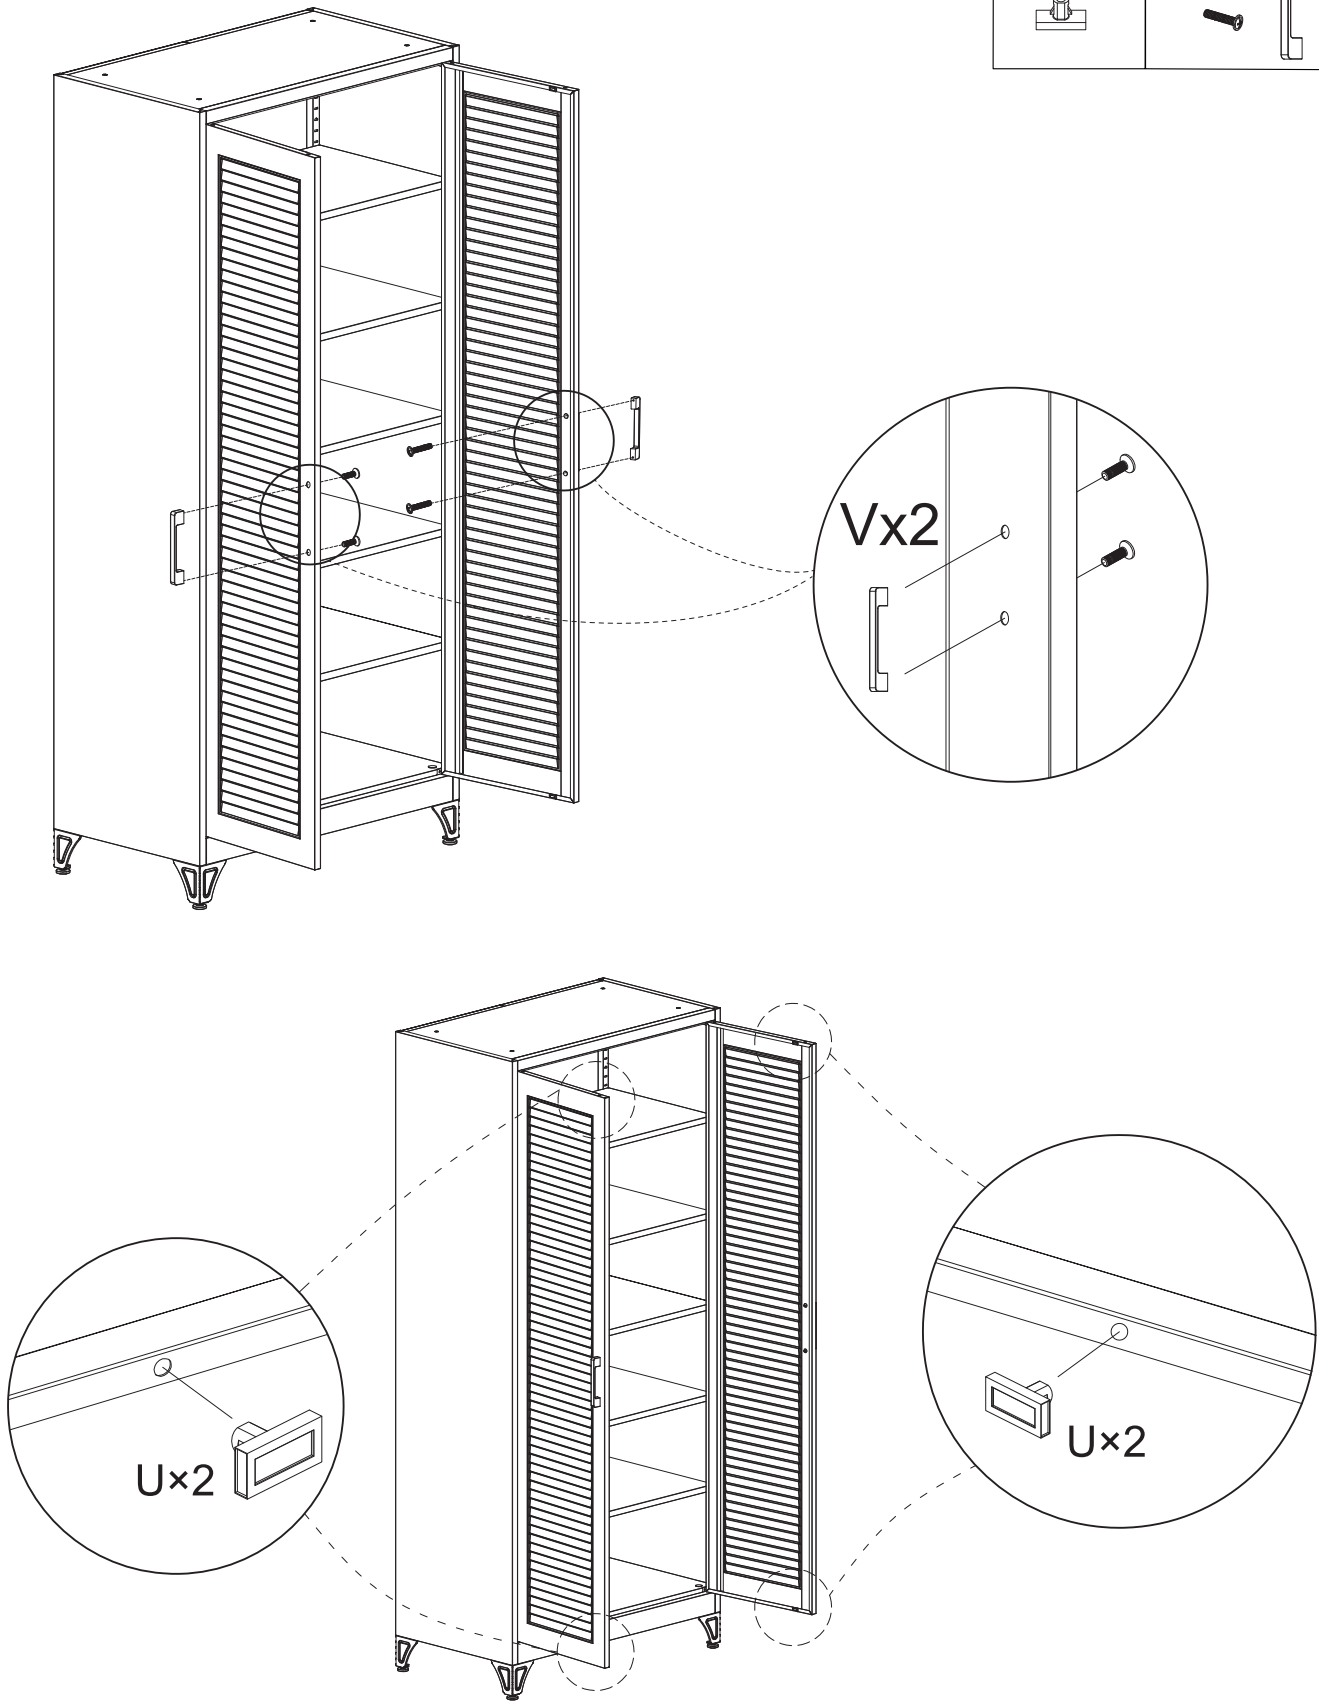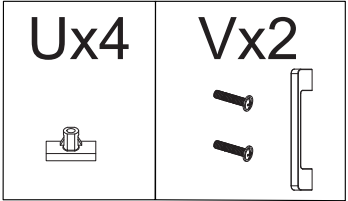


step 19

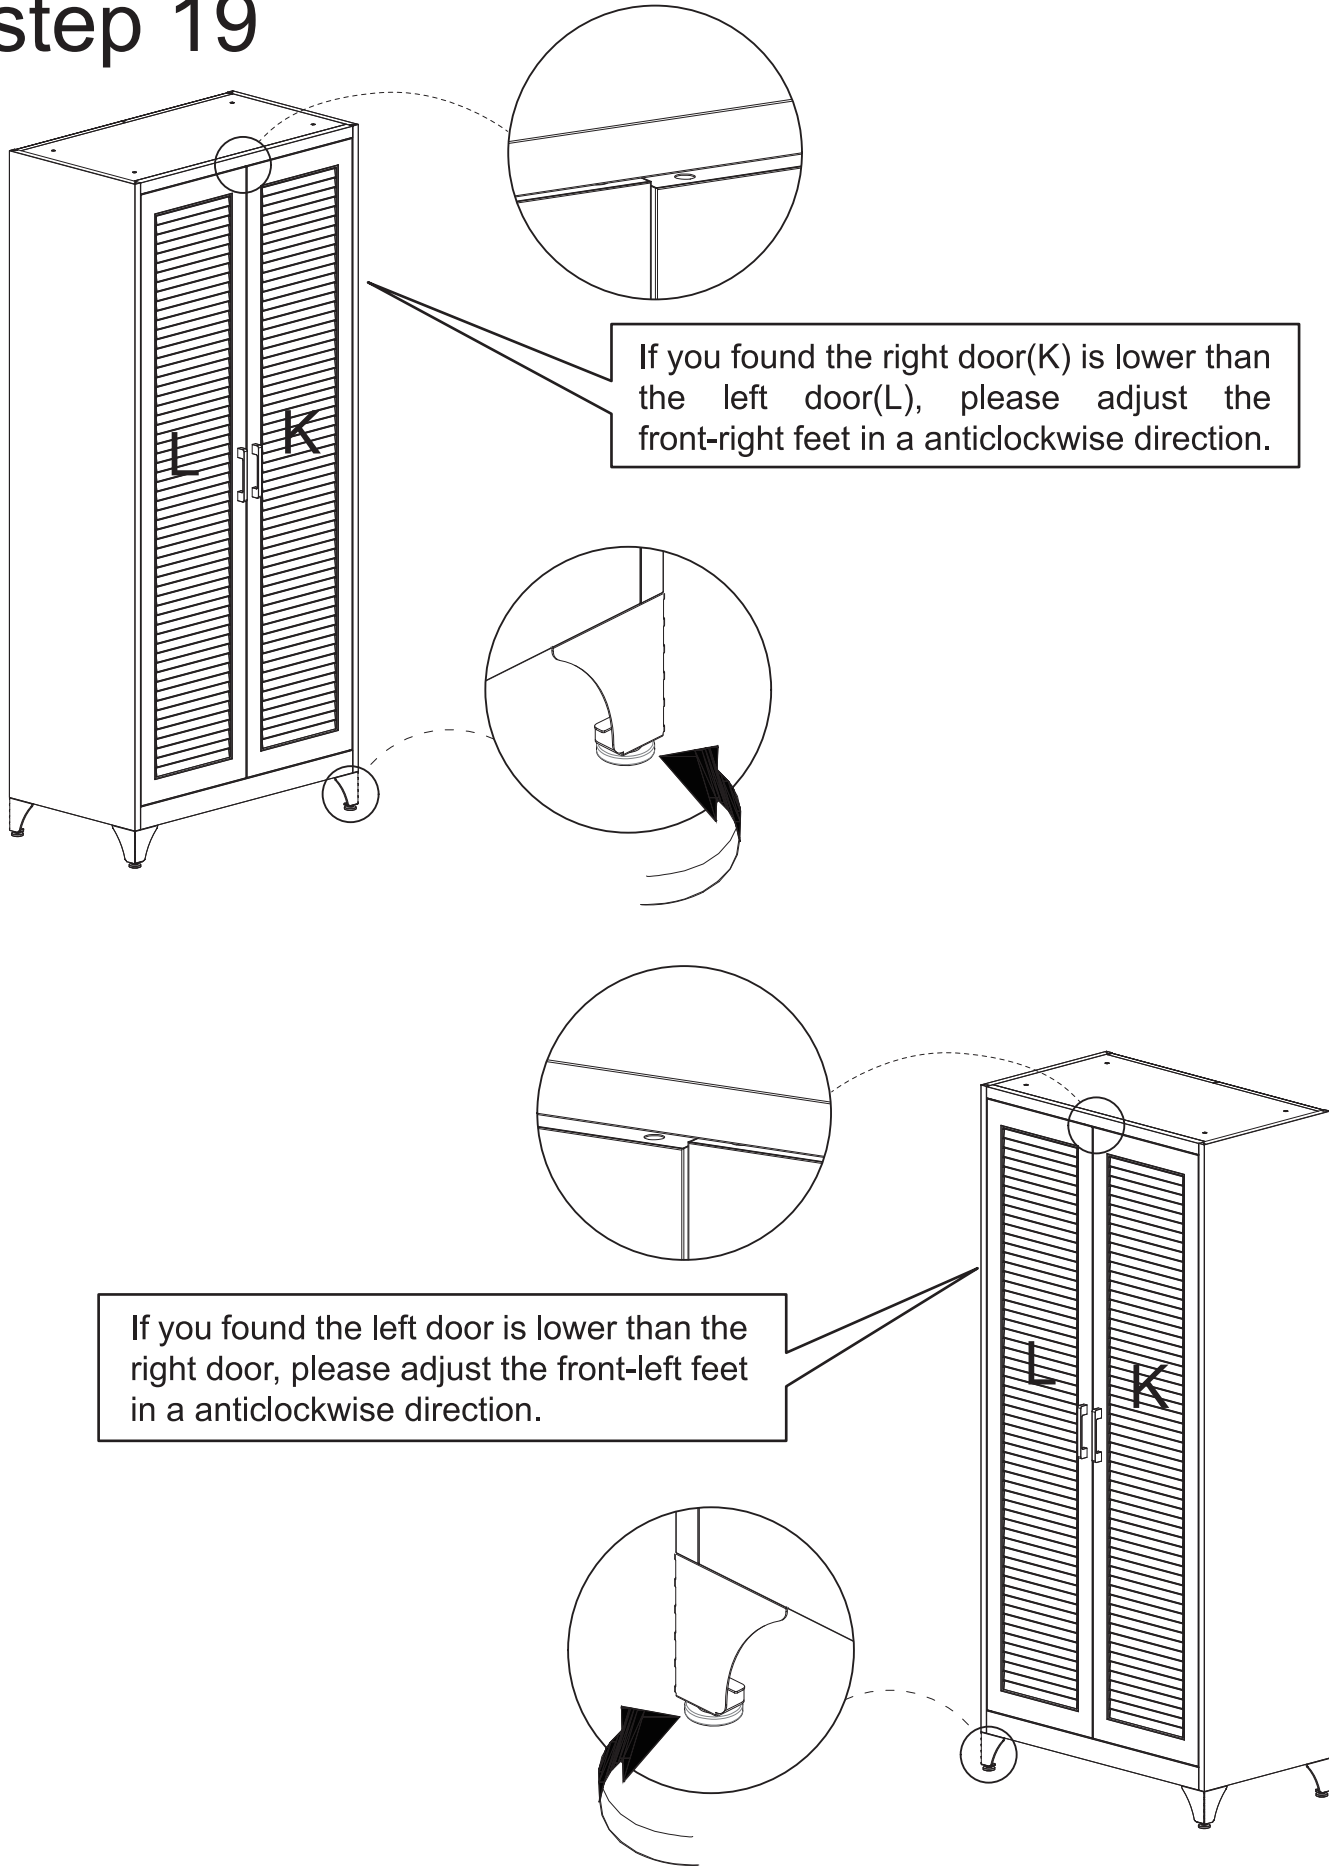


COMPLETION

If the door can not be closed properly, please scan the QRcode on page 2. Follow the guide video to fix the bent issue. Thank you.

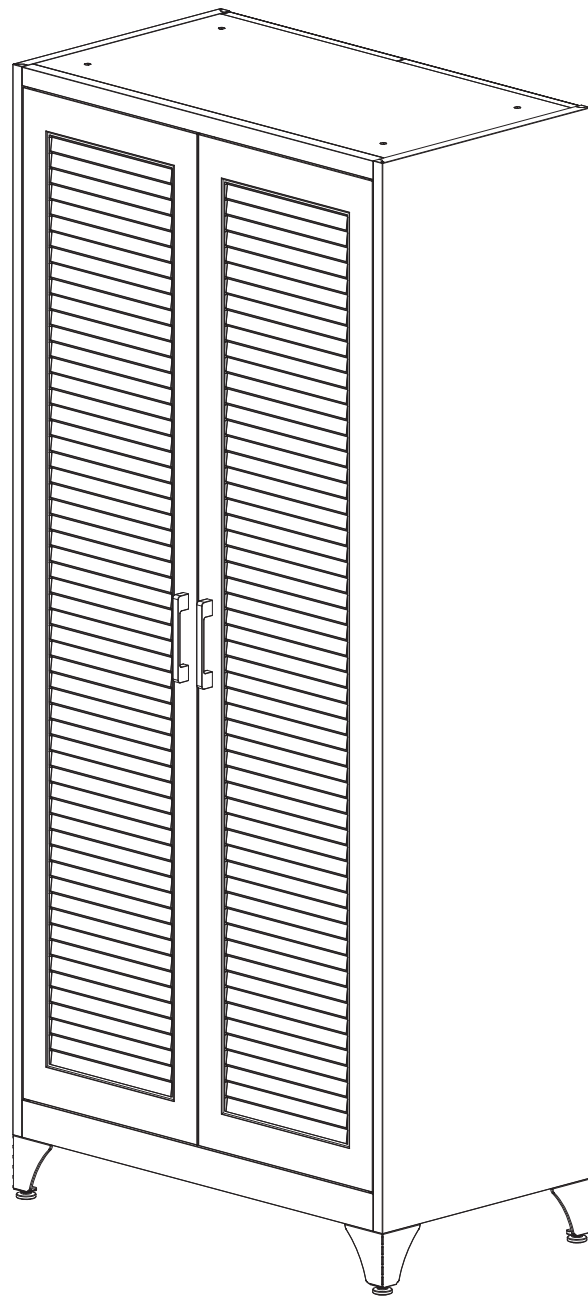

General Care

Cautions: The load-bearing limit for each shelf is 180lbs/81.6kg only when the weight is spread evenly. Don't try to load over the limit nor load heavy items onto one position of the shelf.

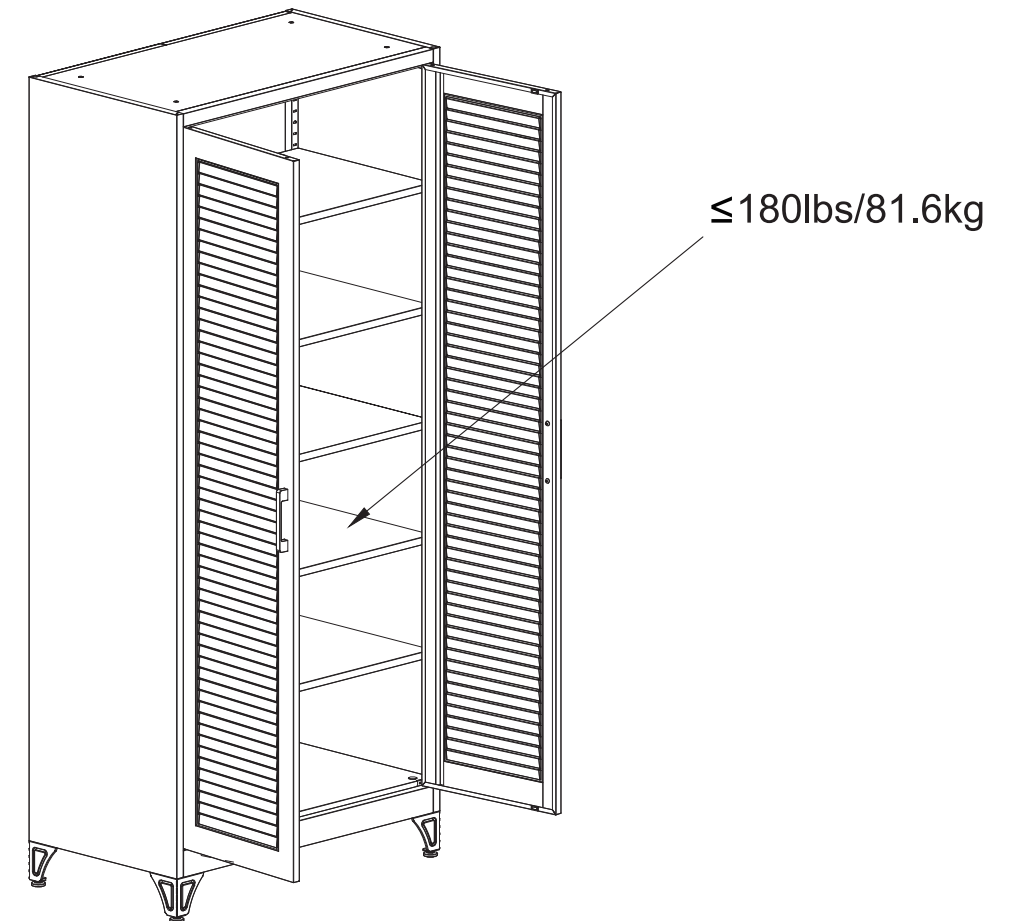

Cleaning

- For cleaning, wipe the surface with a damp (not wet) cloth or wipe dry with a clean lint free cotton cloth.
- Window cleaning liquid or a similar cleaning liquid can be used to clean the surface.