
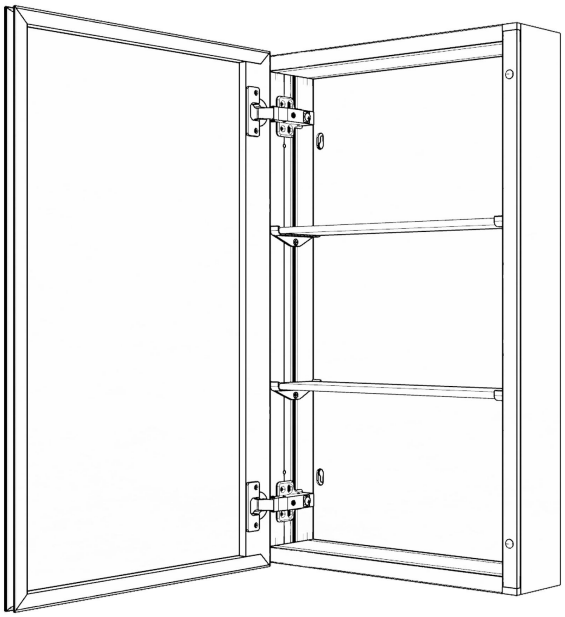











INSTALLATION MANUAL

ARTISAN-DESIGNED STORAGE SOLUTION

The installation manual applies to all frameless medicine cabinets with various cabinet-door shapes.

PACKING LIST

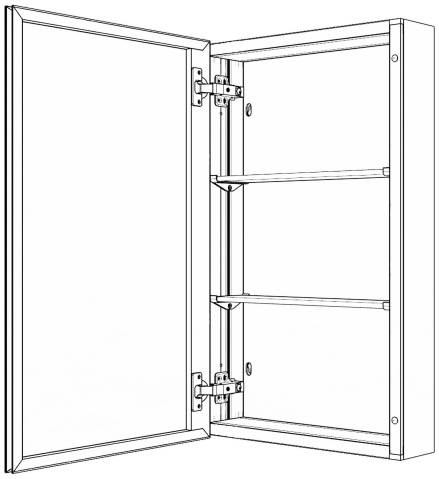

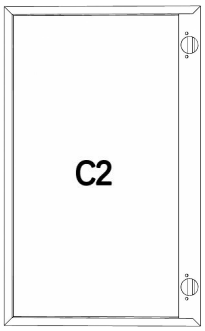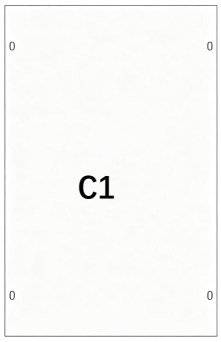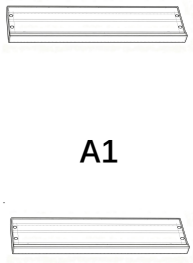PARTS	 C2	 C1	 A2	 A1	 A3	 B1 B2
Name	Mirror Door	Cabinet Back Panel	Hinge Side Panel	Top & Bottom Panel	Non-Hinge Side Panel	Mirror Kit
Quantity	1	1	1	B1: 1, B2: 1	1	2
PARTS	 B3	 Y1 Y2		 N	 J	 O
Name	Shelves	Shelf Bracket	Door Hinges	Wall Screws 4×30 mm	Wall Anchor	Hole Plug
Quantity	2	4	2	4+(1 extra)	4+(1 extra)	8+(1 extra)
PARTS	 H	 K				 P
Name	Phillips Pan Head Screw 4×12 mm	Phillips Pan Head Self-Tapping Screw 4×25 mm	Bubble level	Glove	Phillips Screwdriver	Screws
Quantity	20+(2 extra)	8+(1 extra)	1	2	1	4+(1 extra)


BEFORE INSTALLATION

To ensure the best possible experience, please carefully read and follow the instructions provided below before assembling and installing the product.


1. **Important Safety Instructions:**
   ① Installation should be performed by a licensed contractor or electrician.
   ② Assembly requires two or more adults.
   ③ Confirm the mounting surface (for example: solid stone or brick wall) can support the total weight of this cabinet.
   ④ This cabinet may be surface-mounted or recess-mounted.
   For surface-mount installation, the wall must have ≥8 mm-thick wood sheathing backed by wall studs or be solid-concrete construction.
   ⑤ To avoid personal injury, follow all installation steps shown in this manual.

2. **Pre Installation Check**
   • Upon receiving your cabinet, inspect for shipping damage and missing parts.
   • Verify all cabinet functions work correctly before installation.
   • If any parts are missing, DO NOT return the product to the retailer. Contact customer service by email: Souhou26916@163.com


INSTALLATION TOOLS

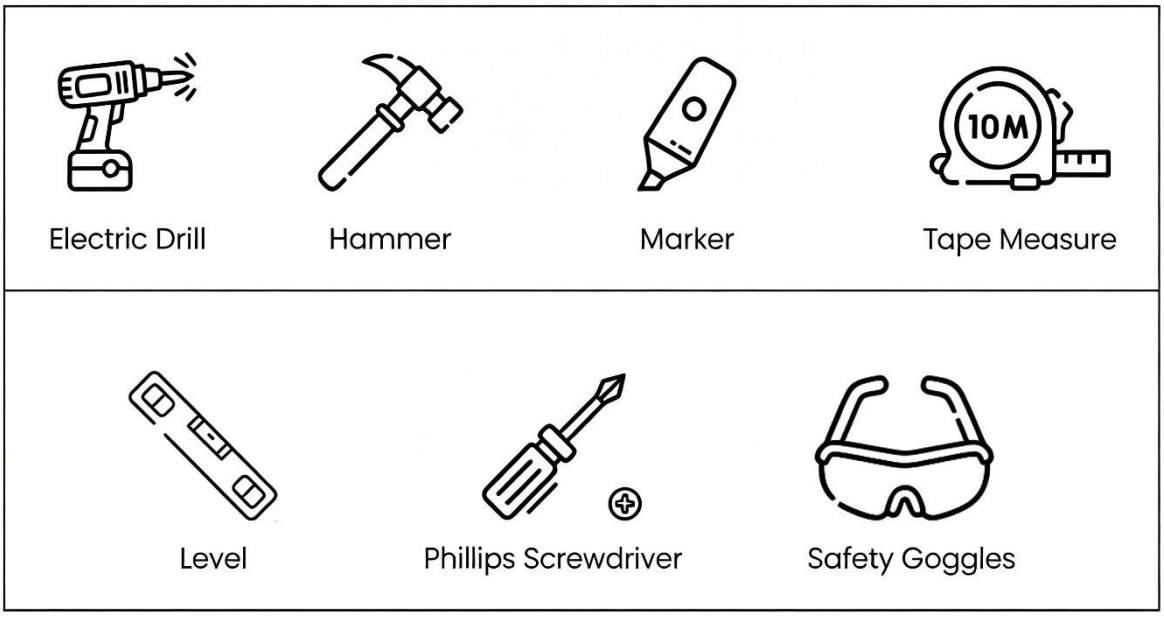


ASSEMBLY STEPS

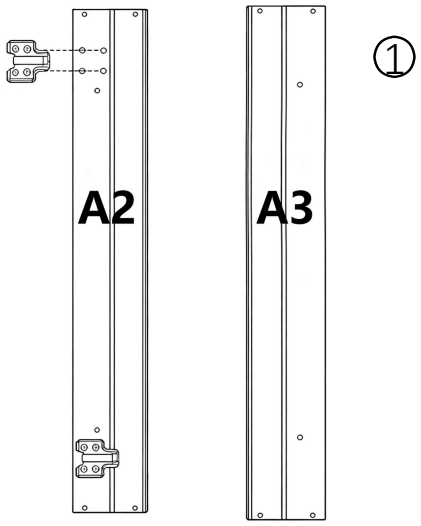


Install hinge base to A2 using screws H

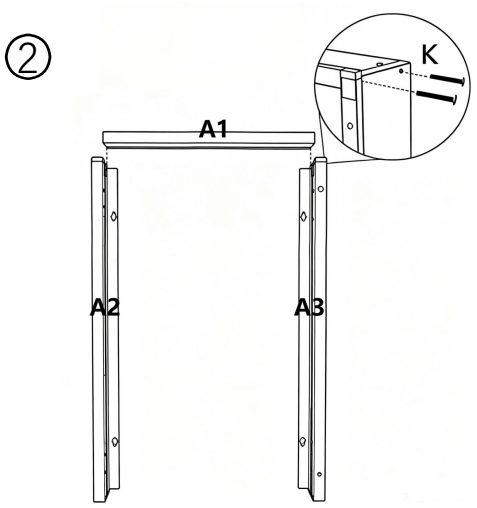


Install top panel A1 using screws K

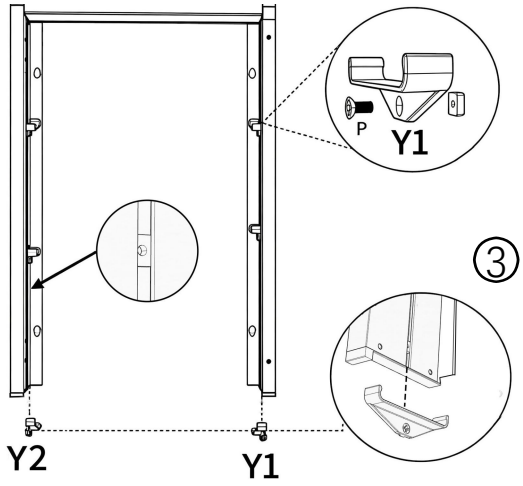


Install shelf brackets Y1 Y2 using screws

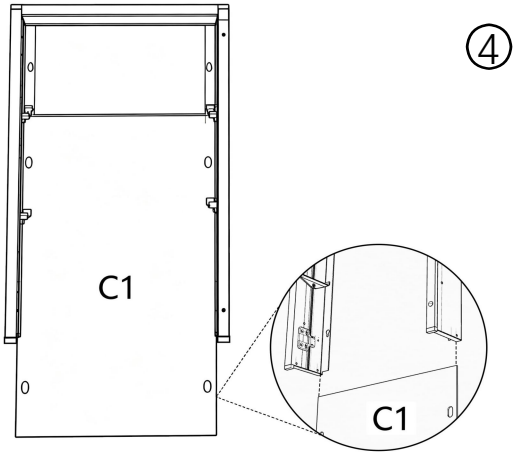

Insert cabinet back panel C1

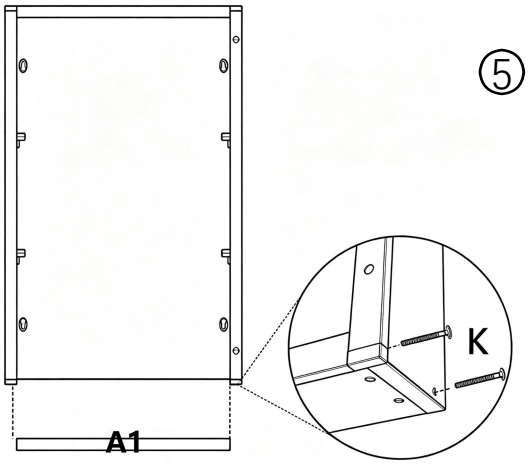


Install bottom panel A1 using screws K

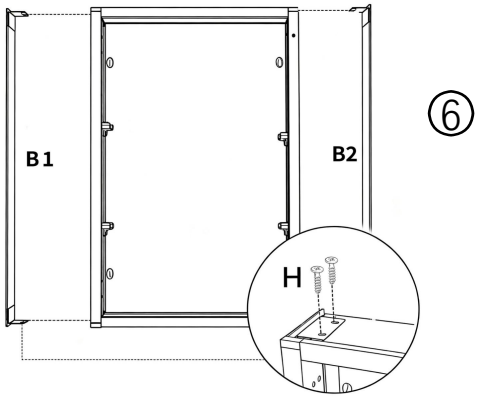


Install mirror kit B1 B2 using screws H

FOR SURFACE-MOUNT ONLY!

ASSEMBLY STEPS

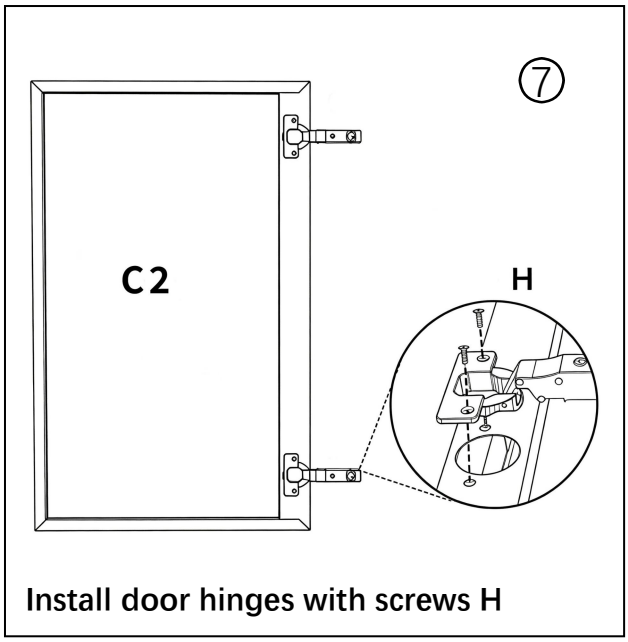



Install door hinges with screws H

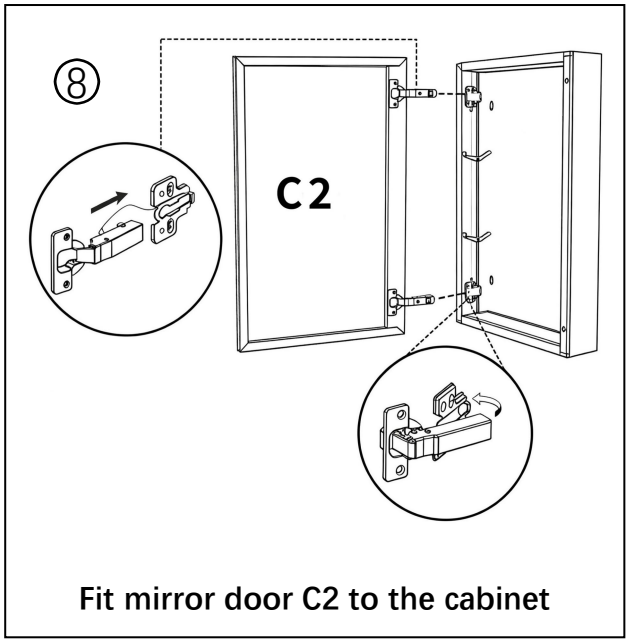


Fit mirror door C2 to the cabinet


HOW TO ADJUST HINGES

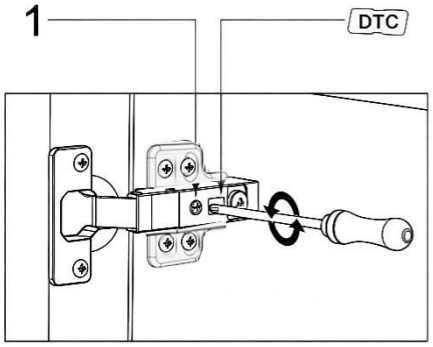

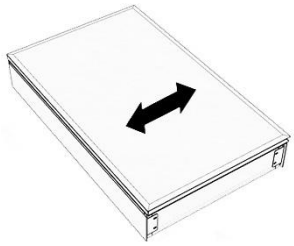

Open the "DTC" Hinge Cover. Turn adjustment screw ❶ to modify door overlay depth.

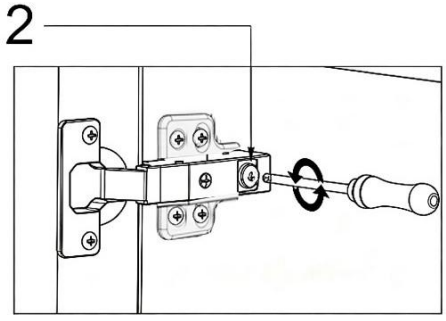


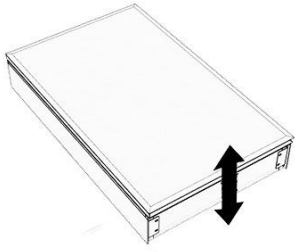

Turn the front screw ❷ to adjust the gap between door and cabinet frame.

SURFACE MOUNT INSTALLATION


1. Hold the cabinet against the wall and mark spots ❶❷❸❹ on the wall.

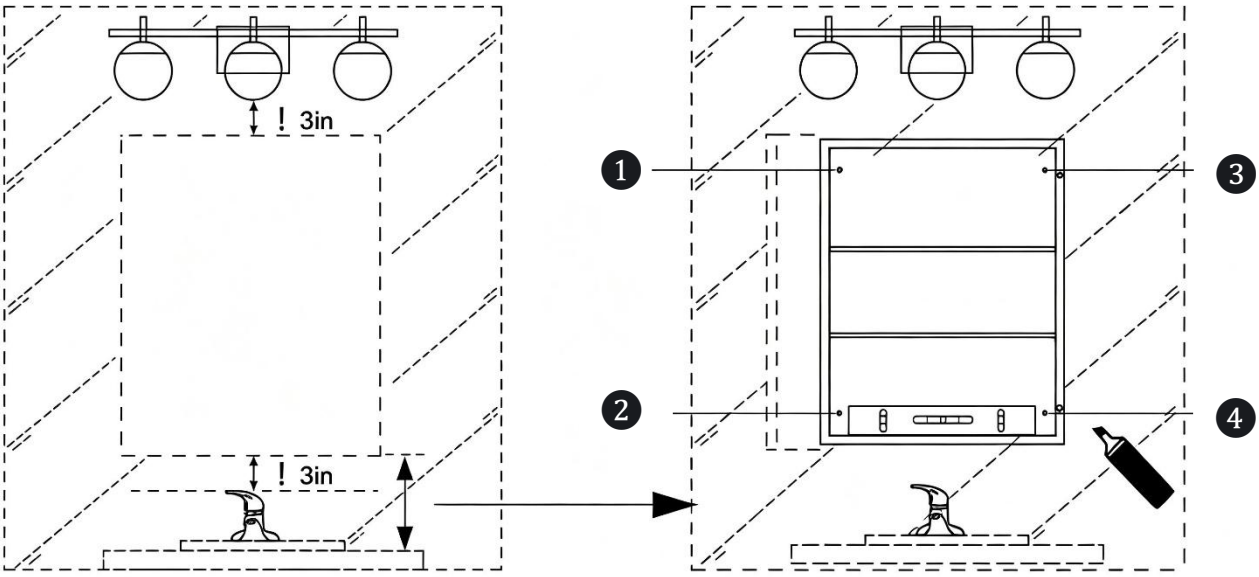


NOTE: Mount the cabinet a minimum of 3 inches above the faucet.

2. Set the cabinet aside, drill at the marked spots (①).

   and insert wall anchors (②).

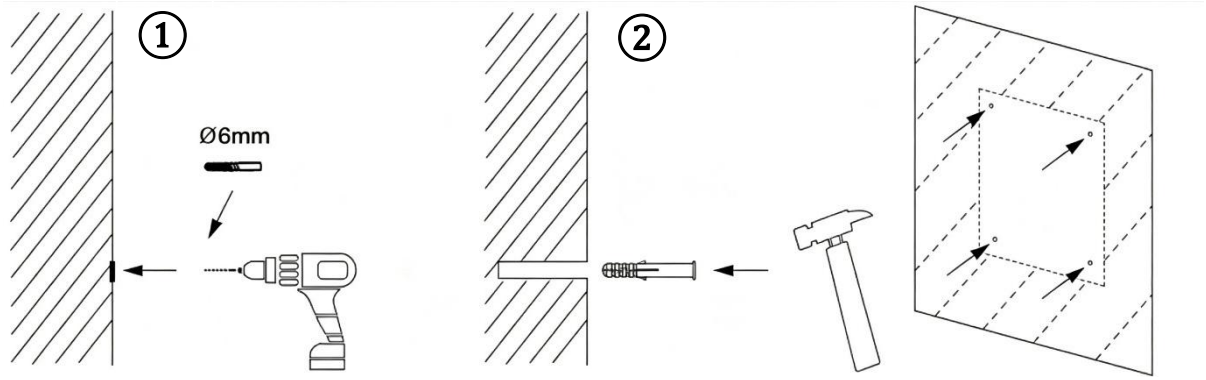


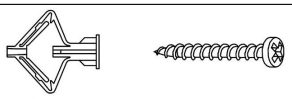Thickness of Wall	Recommended Drill Bit
＞5/8" (16mm)	1/4" (6mm) drill bit, drilling depth in 1 31/32" (50mm) 
5/16" (8)-5/8" (16mm)	25/64" (10mm) drill bit 
＜5/16" (8mm)	Unapplicable


3. Drive screws into the wall anchors (①).

   After installing the screw, cover it with the decorative cap (②).

   Insert the hole plugs into the holes on both sides of the cabinet (③).

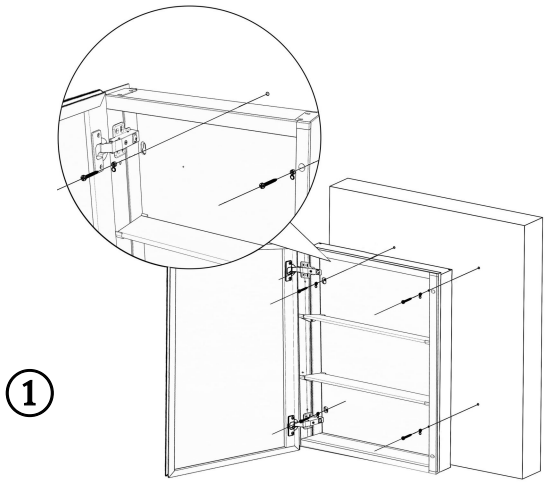



①

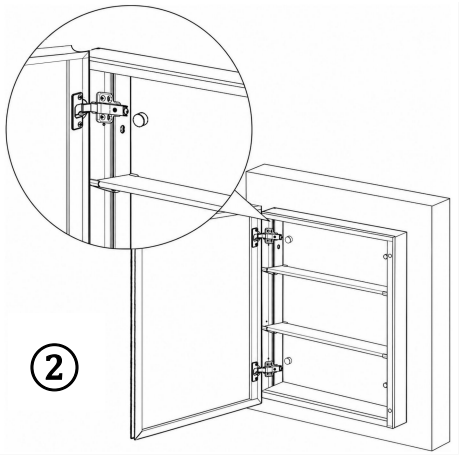

②

③

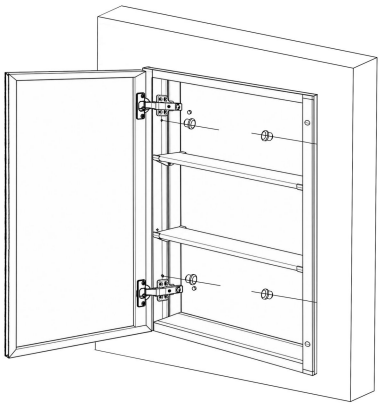

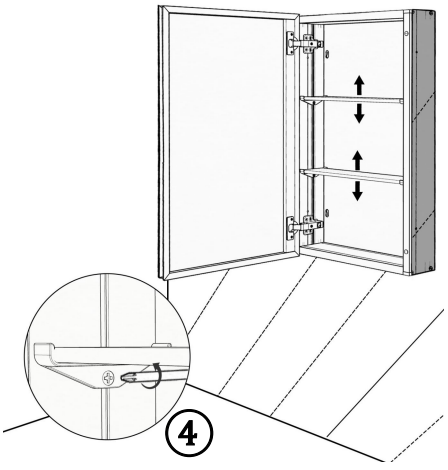

④


4. Rest shelves into the

   shelf bracket Y.

   Rotating the screw to adjust(④).


RECESSED MOUNT INSTALLATION

1. Hold the cabinet against the wall. Use a marker to trace the outline of the cabinet body opening.

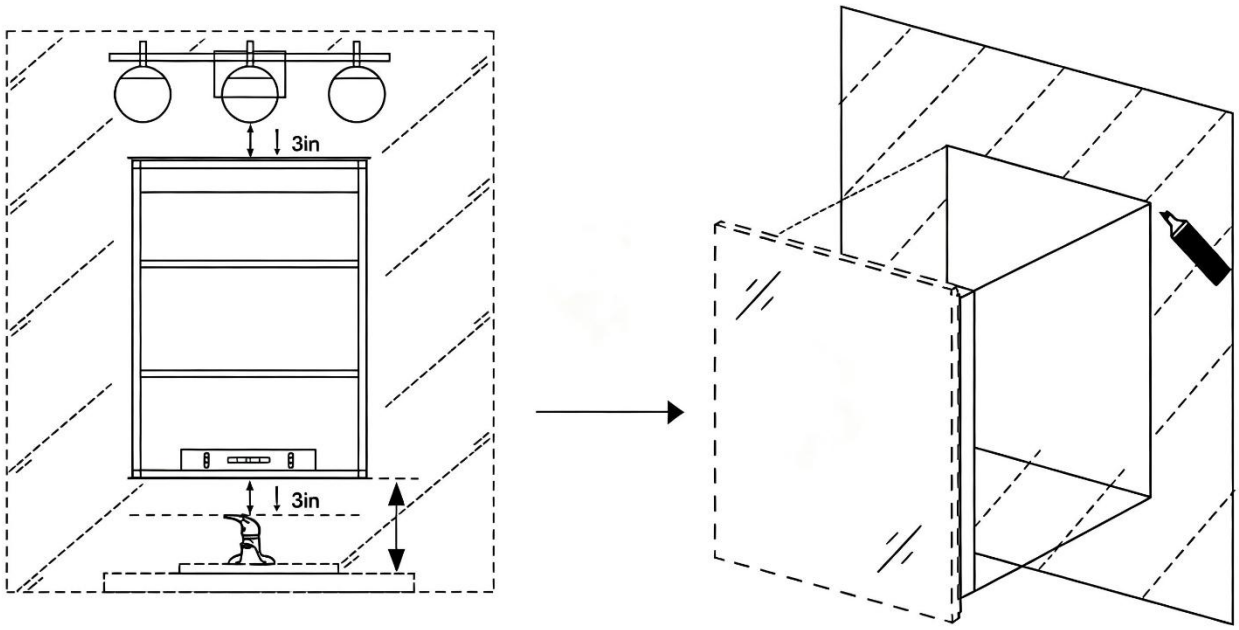


NOTE: Mount the cabinet a minimum of 3 inches above the faucet.

2. Set the cabinet inside the wall cutout (①), then mark drilling locations ❶❷❸❹ on the wall (②).

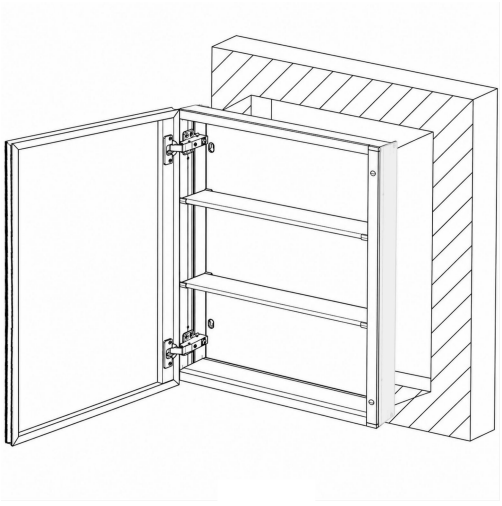


①

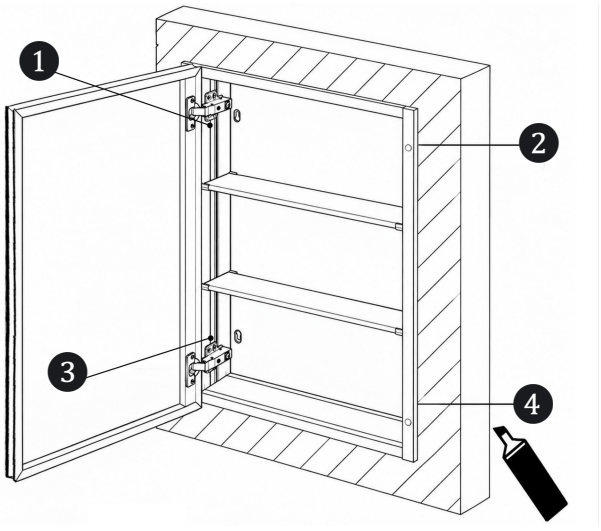

②

3. Remove the cabinet. Drill holes at marked locations (①).


   then tap wall anchors into place using a hammer (②).

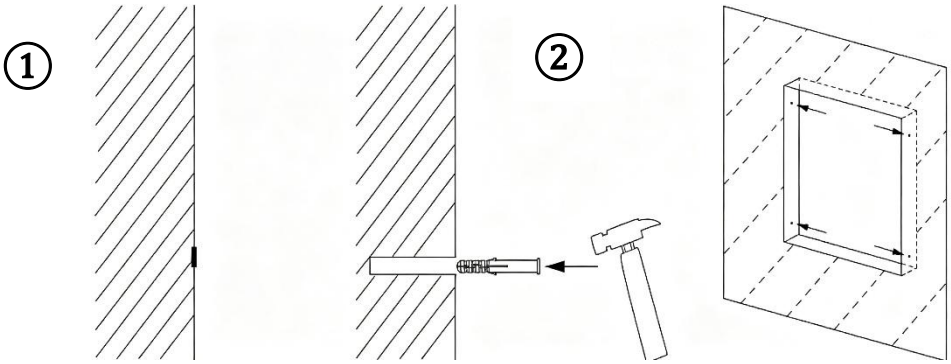


4. Set the cabinet inside the wall cutout and secure it using screws (①).

   After installing the screws, fit decorative caps over the screw heads (②).

   Insert hole plugs into holes on the rear side of the cabinet (③).

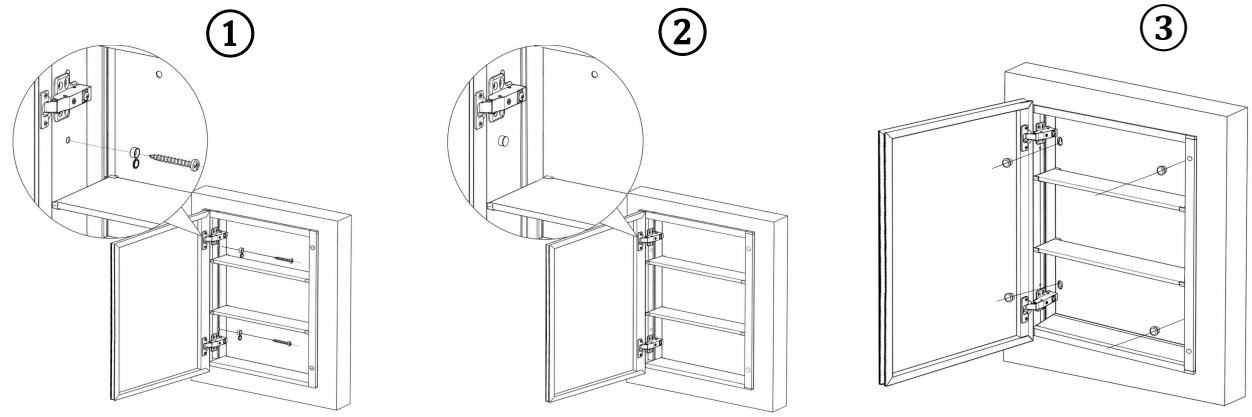

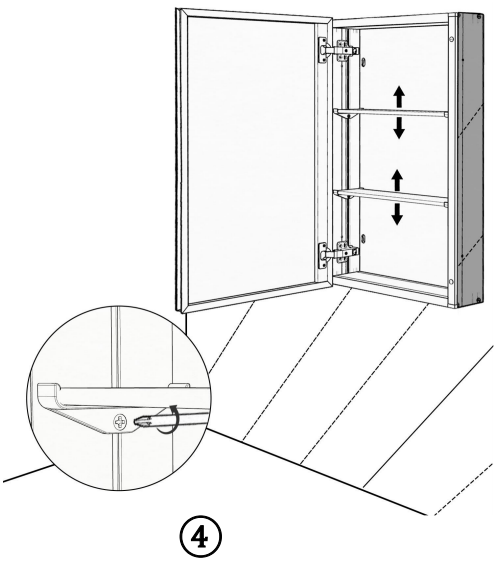

5. Set shelves into the shelf brackets.

   Rotate the screw to adjust shelf-to-shelf spacing(④).