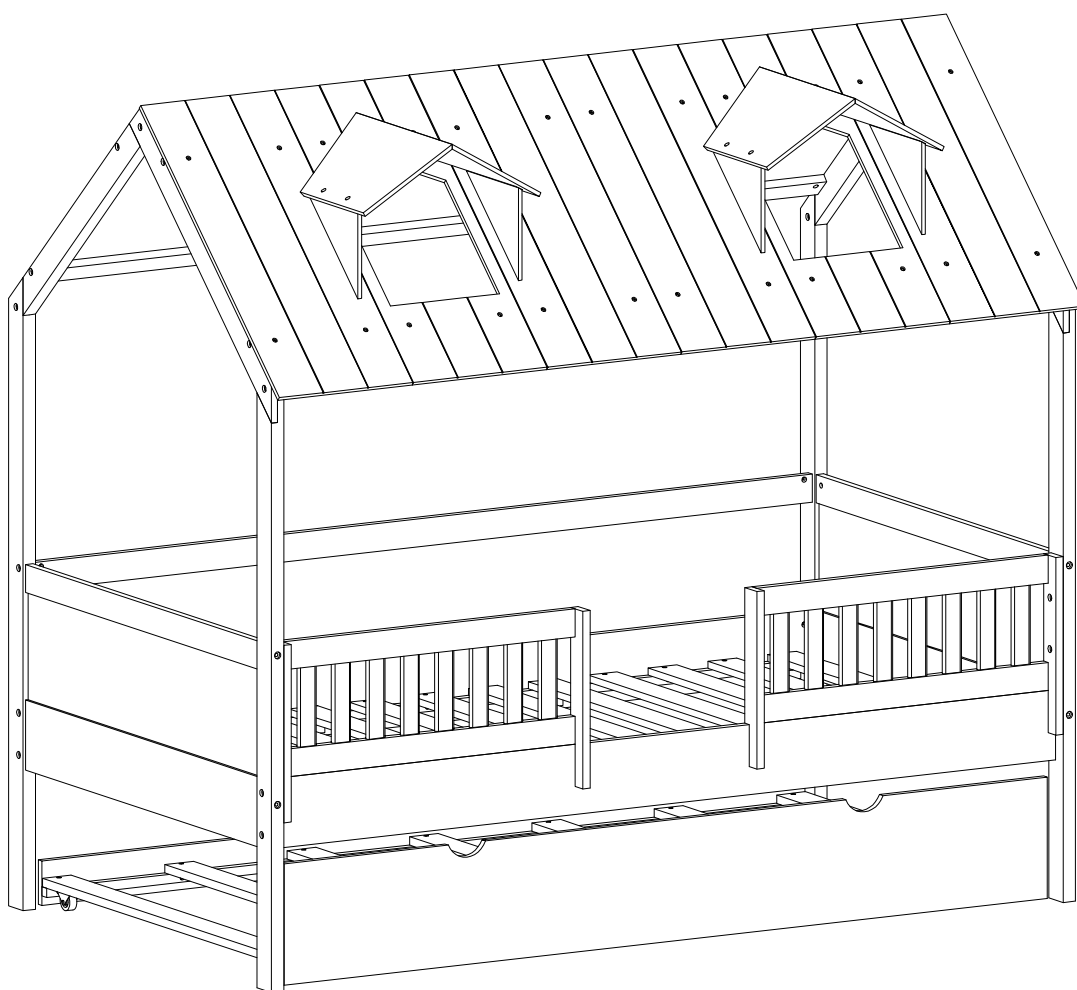


TWIN SIZE HOUSE BED


WF290446

WF290447























IMPORTANT NOTE

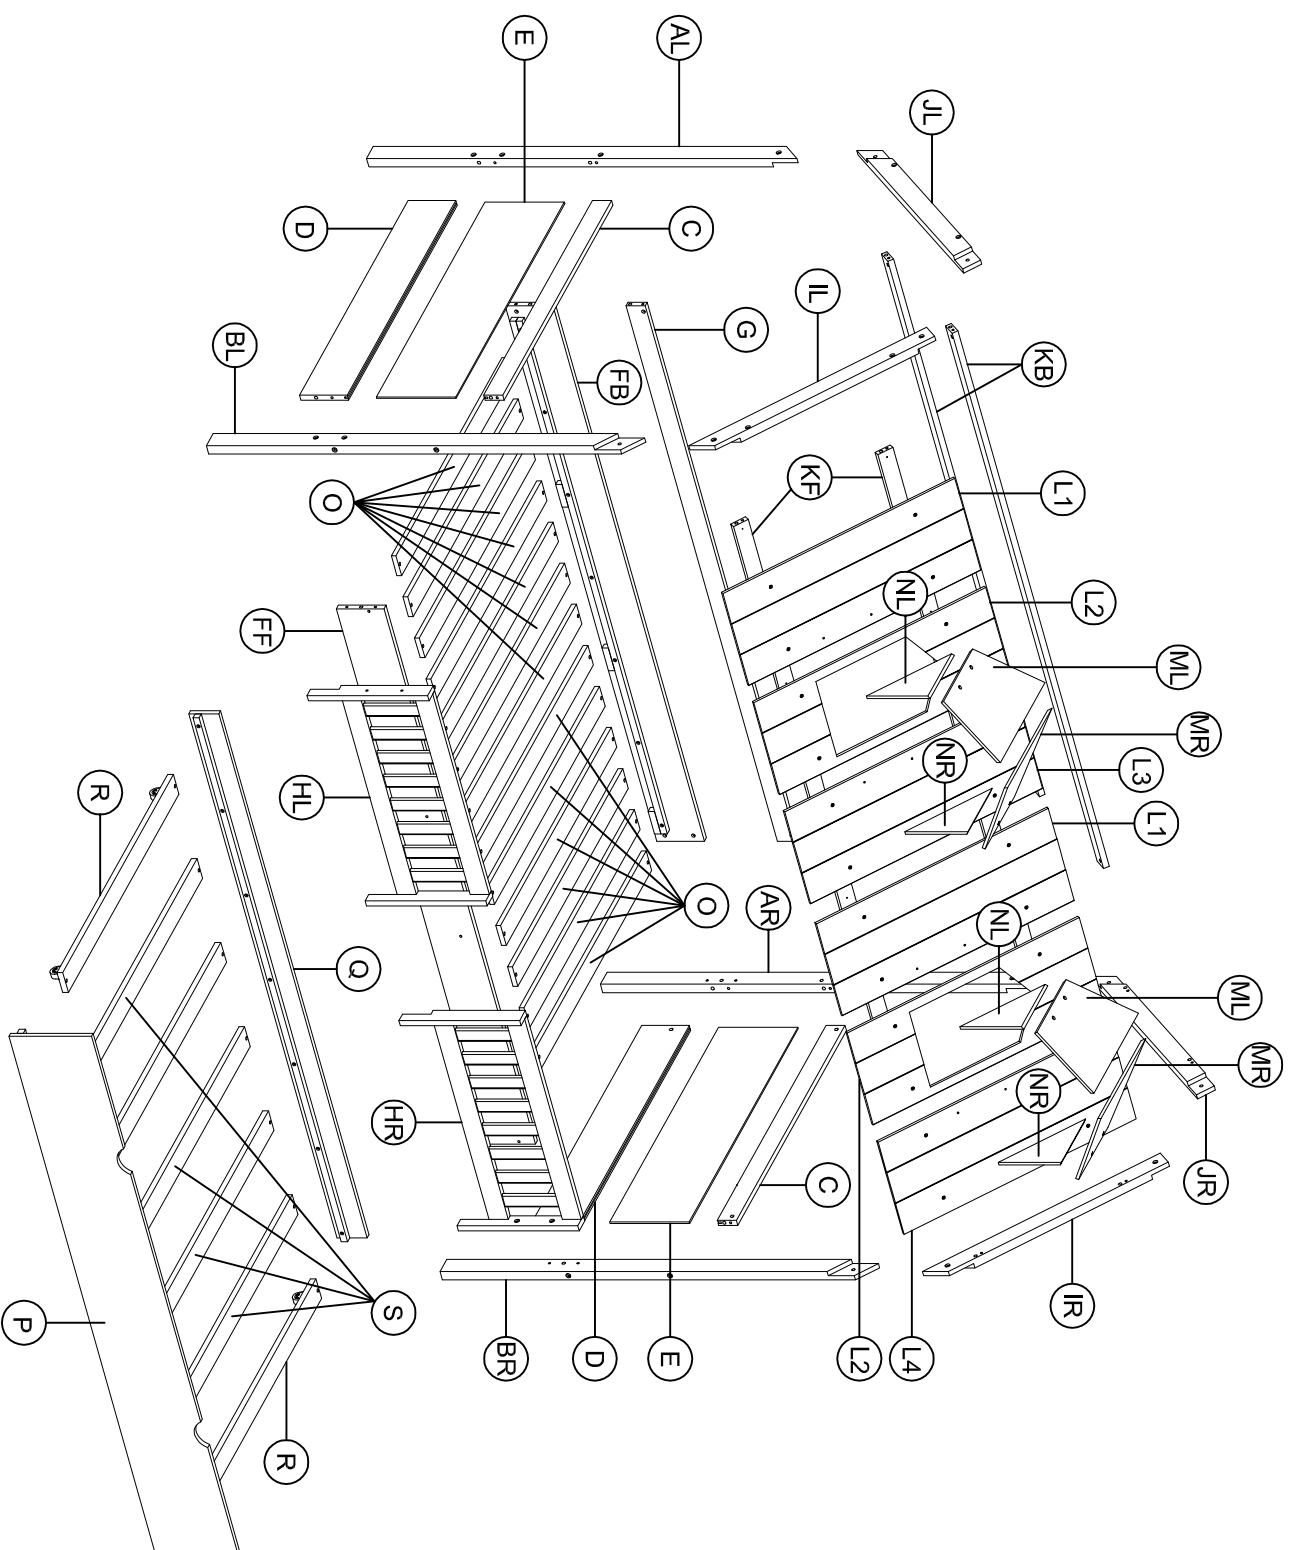1. PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED
2. BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP
3. DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BED IS FULLY SET-UP














PART LIST WF290446

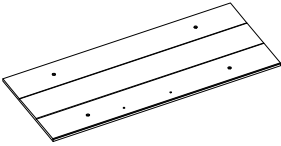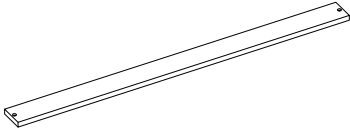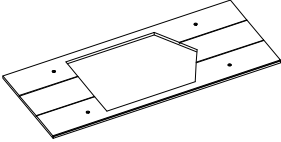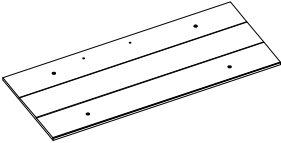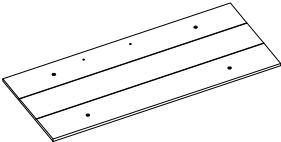
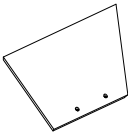
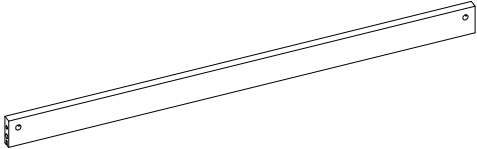

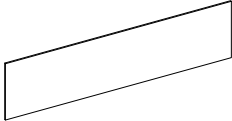


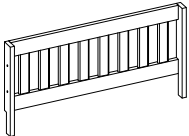

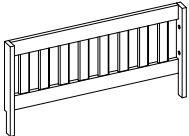
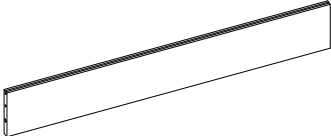
L1	 ROOF PANEL (2PCS)	O	 SLAT (13PCS)
L2	 ROOF PANEL (2PCS)	IL	 TOP RAIL FRONT LEFT (1PC)
L3	 ROOF PANEL (1PC)	IR	 TOP RAIL FRONT RIGHT (1PC)
L4	 ROOF PANEL (1PC)	JL	 TOP RAIL BACK LEFT (1PC)
ML	 SMALL ROOF PANEL LEFT (2PCS)	JR	 TOP RAIL BACK RIGHT (1PC)
MR	 SMALL ROOF PANEL RIGHT (2PCS)	C	 TOP BAR (2PCS)
NL	 SMALL SIDE PANEL LEFT (2PCS)	E	 PANEL (2PCS)
NR	 SMALL SIDE PANEL RIGHT (2PCS)	R	 SLAT 6 HOLE (2PCS)
HL	 FRAME LEFT (1PC)	S	 SLAT 2 HOLE (5PCS)
HR	 FRAME RIGHT (1PC)	D	 BOTTOM BAR (2PCS)

ASSEMBLY INTRUCSION

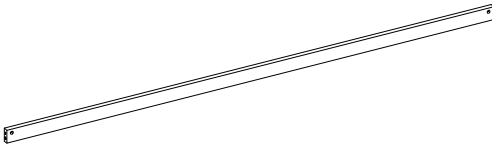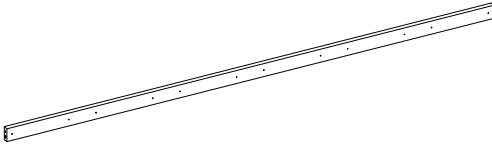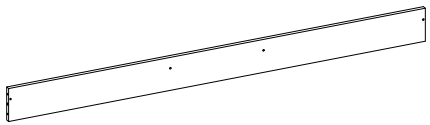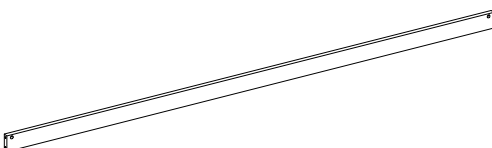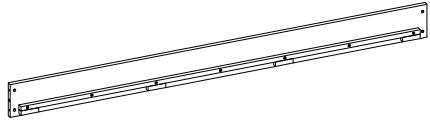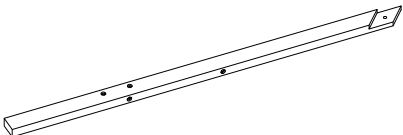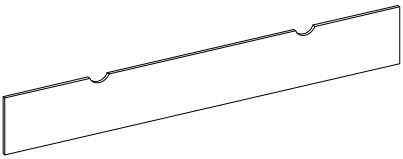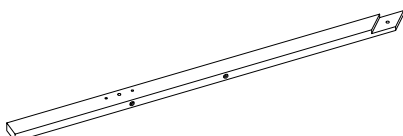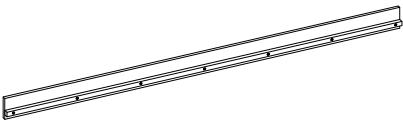PART LIST WF290447


AL	 BACK LEG LEFT (1PC)	KB	 BACK HORIZONTAL BAR (2PCS)
AR	 BACK LEG RIGHT (1PC)	KF	 FRONT HORIZONTAL BAR (2PCS)
FF	 SIDE RAIL FRONT (1PC)	G	 BACK BAR (1PC)
FB	 SIDE RAIL BACK (1PC)	BL	 FRONT LEG LEFT (1PC)
P	 FRONT PANEL (1PC)	BR	 FRONT LEG RIGHT (1PC)
Q	 BACK PANEL (1PC)		

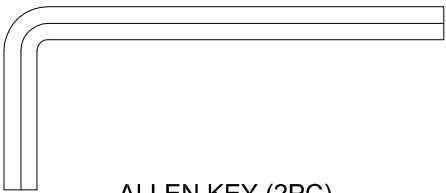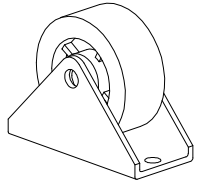HARDWARE LIST WF290446

1	 ALLEN KEY (2PC) K4 x 60 mm	2	 HEX HEAD BLOT (8PCS) 1/4 x 90 mm
3	 WOOD DOWEL (22PCS) Ø10 x 30 mm	4	 BARREL NUT (26PCS) 1/4 x Ø10 x 13 mm
5	 HEX HEAD BLOT (18PCS) 1/4 x 60 mm	6	 HEX HEAD BLOT (6PCS) 1/4 x 15 mm
7	 SLEEVE NUT (6PCS) 1/4 x 15 mm	8	 WOOD SCREW (32PCS) Ø4 x 15 mm
9	 V-BRACKET (4PCS) 2 x 20 x 20 mm	10	 WOOD SCREW (8PCS) Ø3.5 x 12 mm
11	 HEX HEAD BLOT (8PCS) 1/4 x 30 mm	12	 WOOD SCREW (56PCS) Ø4 x 25 mm
13	 WHEEL (4PCS) Ø40 mm		


ASSEMBLY INTRUSSION

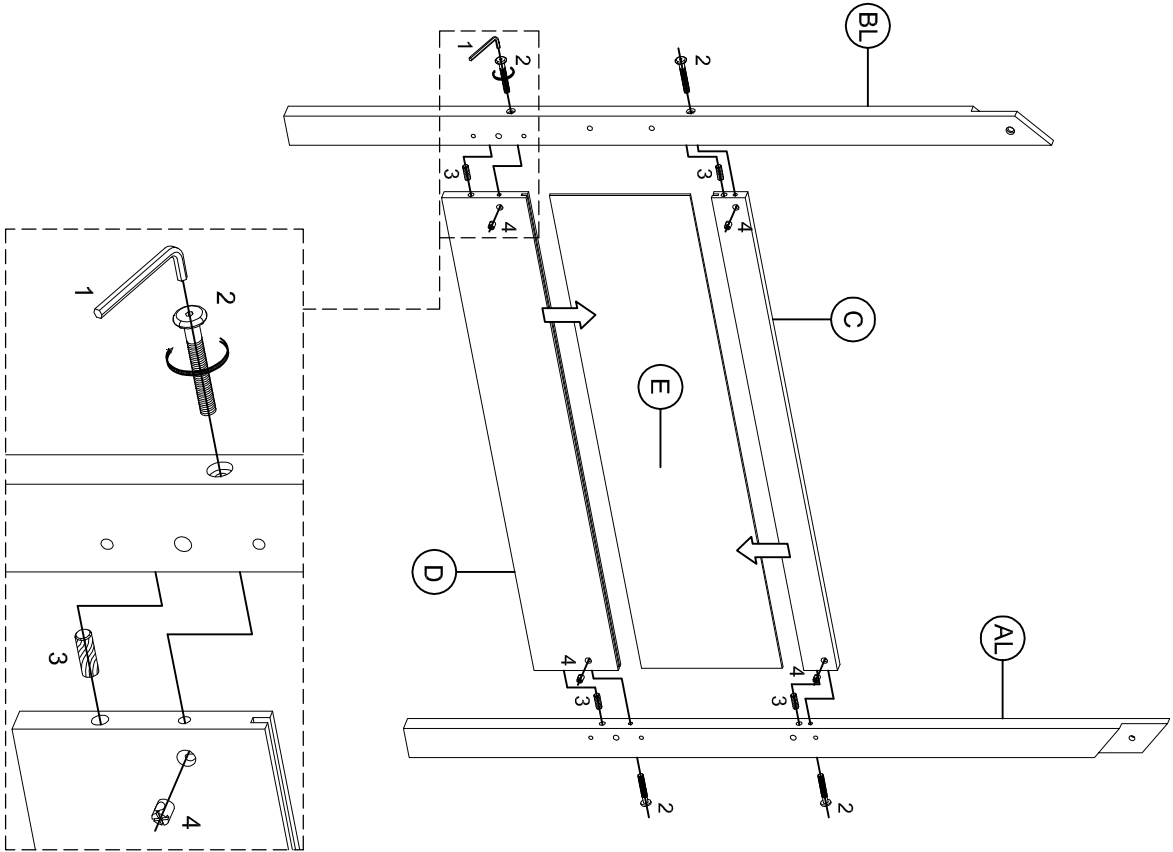STEP 1



1	Allen key - 1pc K4 x 60 mm
2	Hex head bolt - 4pcs 1/4 x 90 mm
3	Wood dowel - 4pcs Ø10 x 30 mm
4	Barrel nut - 4psc 1/4 x Ø10 x 13 mm


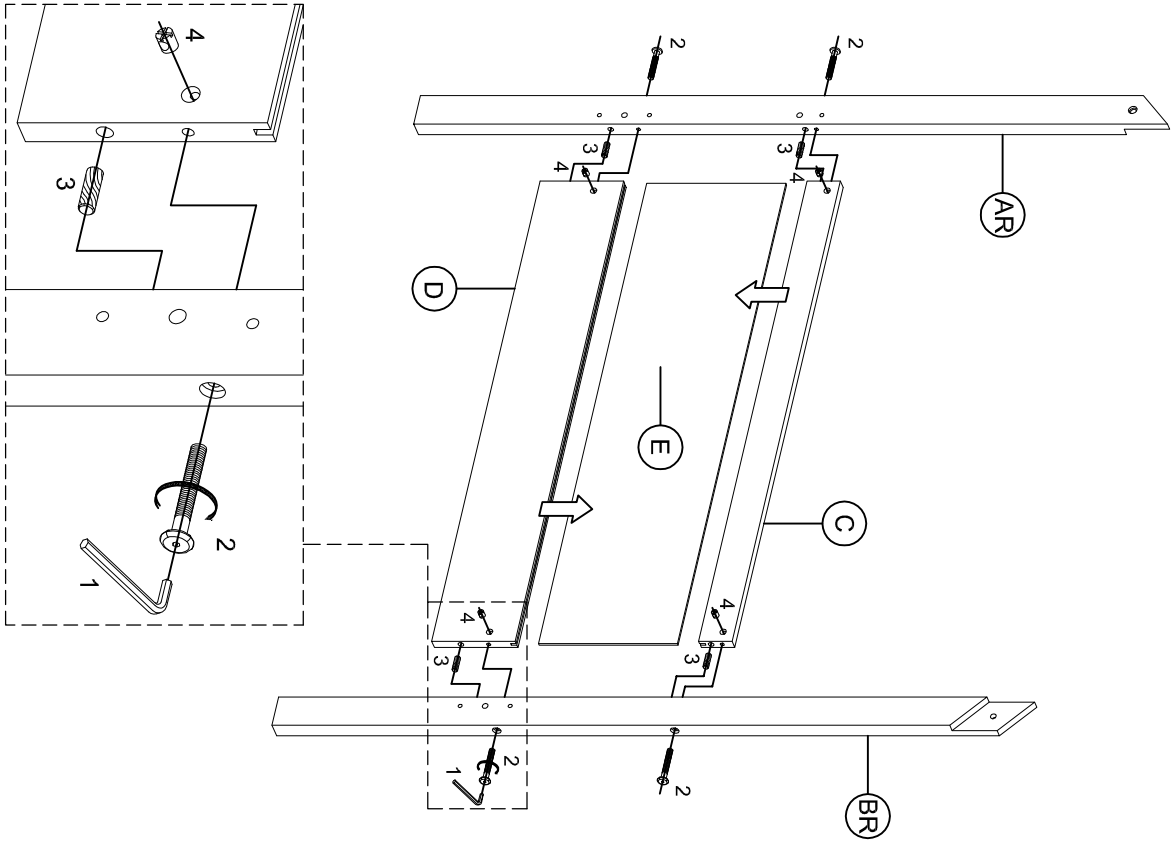
STEP 2



1	Allen key - 1pc K4 x 60 mm
2	Hex head bolt - 4pcs 1/4 x 90 mm
3	Wood dowel - 4pcs Ø10 x 30 mm
4	Barrel nut - 4psc 1/4 x Ø10 x 13 mm



ASSEMBLY INTRUSSION

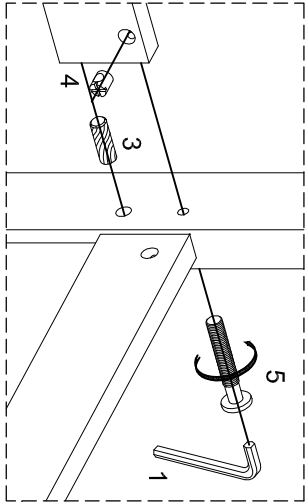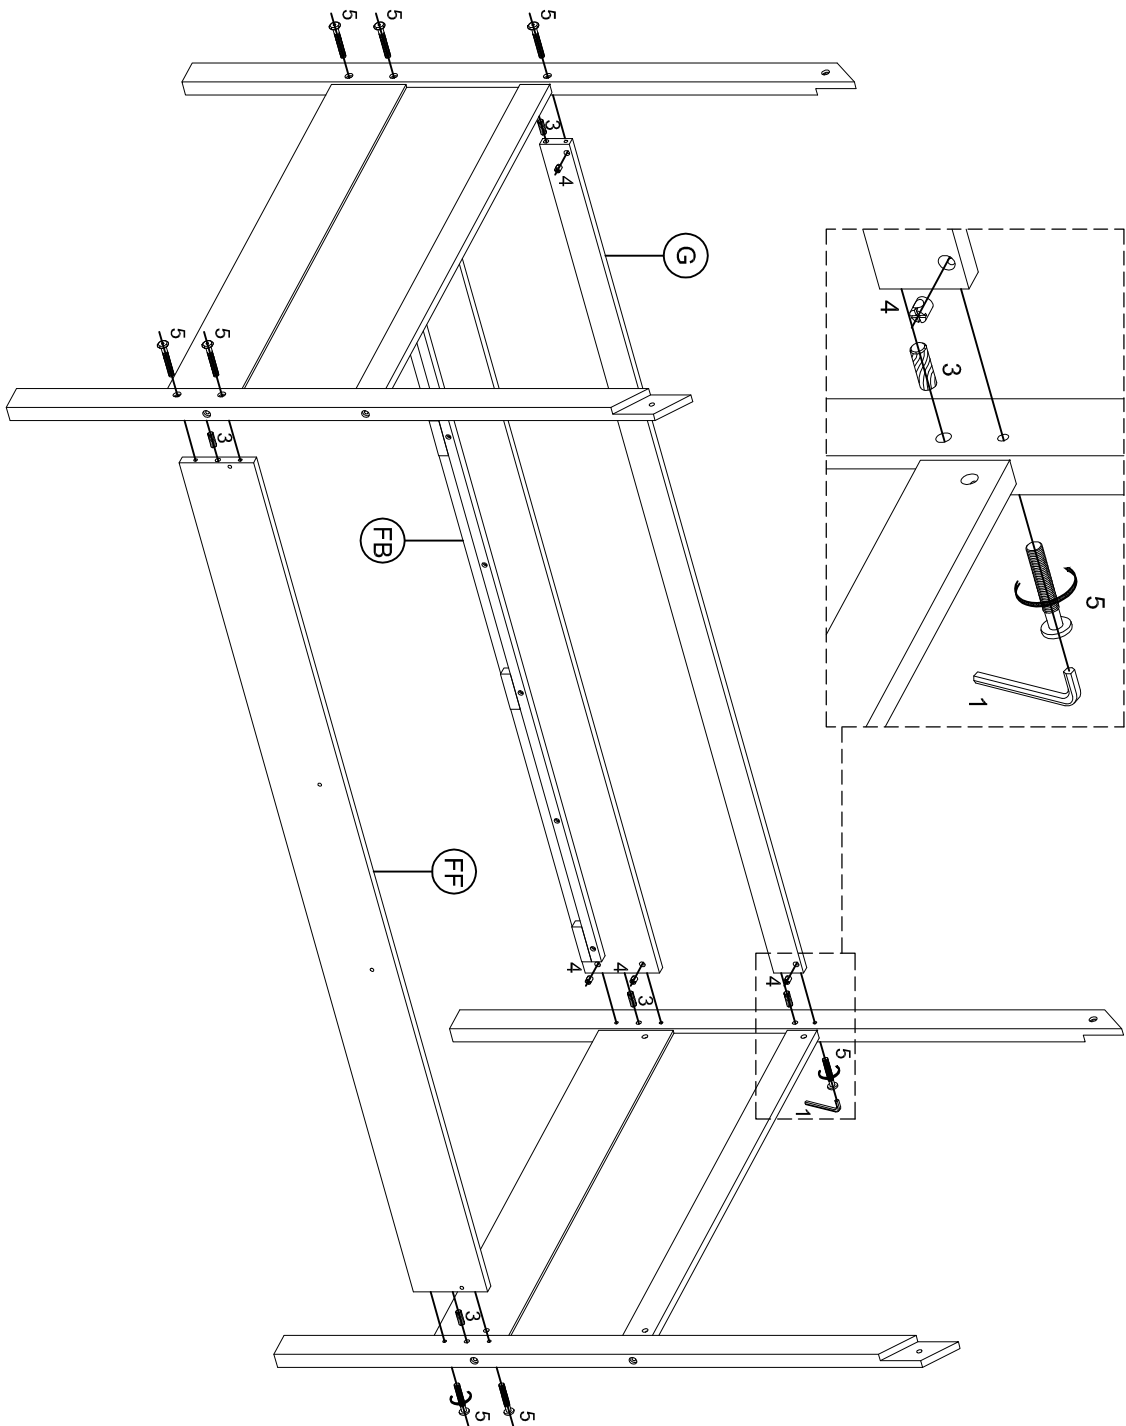
STEP 3



1	Allen key - 1pc K4 x 60 mm
3	Wood dowel - 6pcs Ø10 x 30 mm
4	Barrel nut - 10psc 1/4 x Ø10 x 13 mm
5	Hex head bolt - 10pcs 1/4 x 60 mm

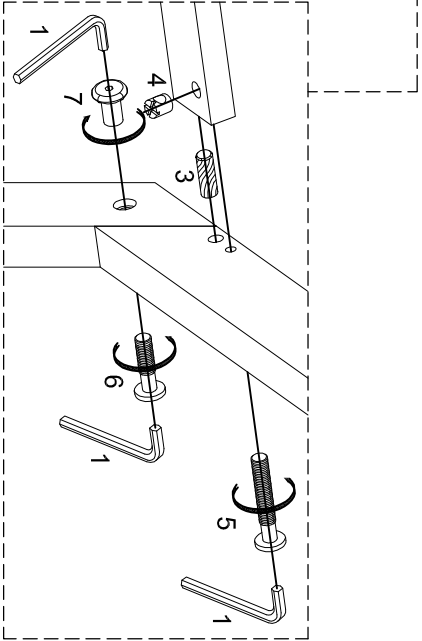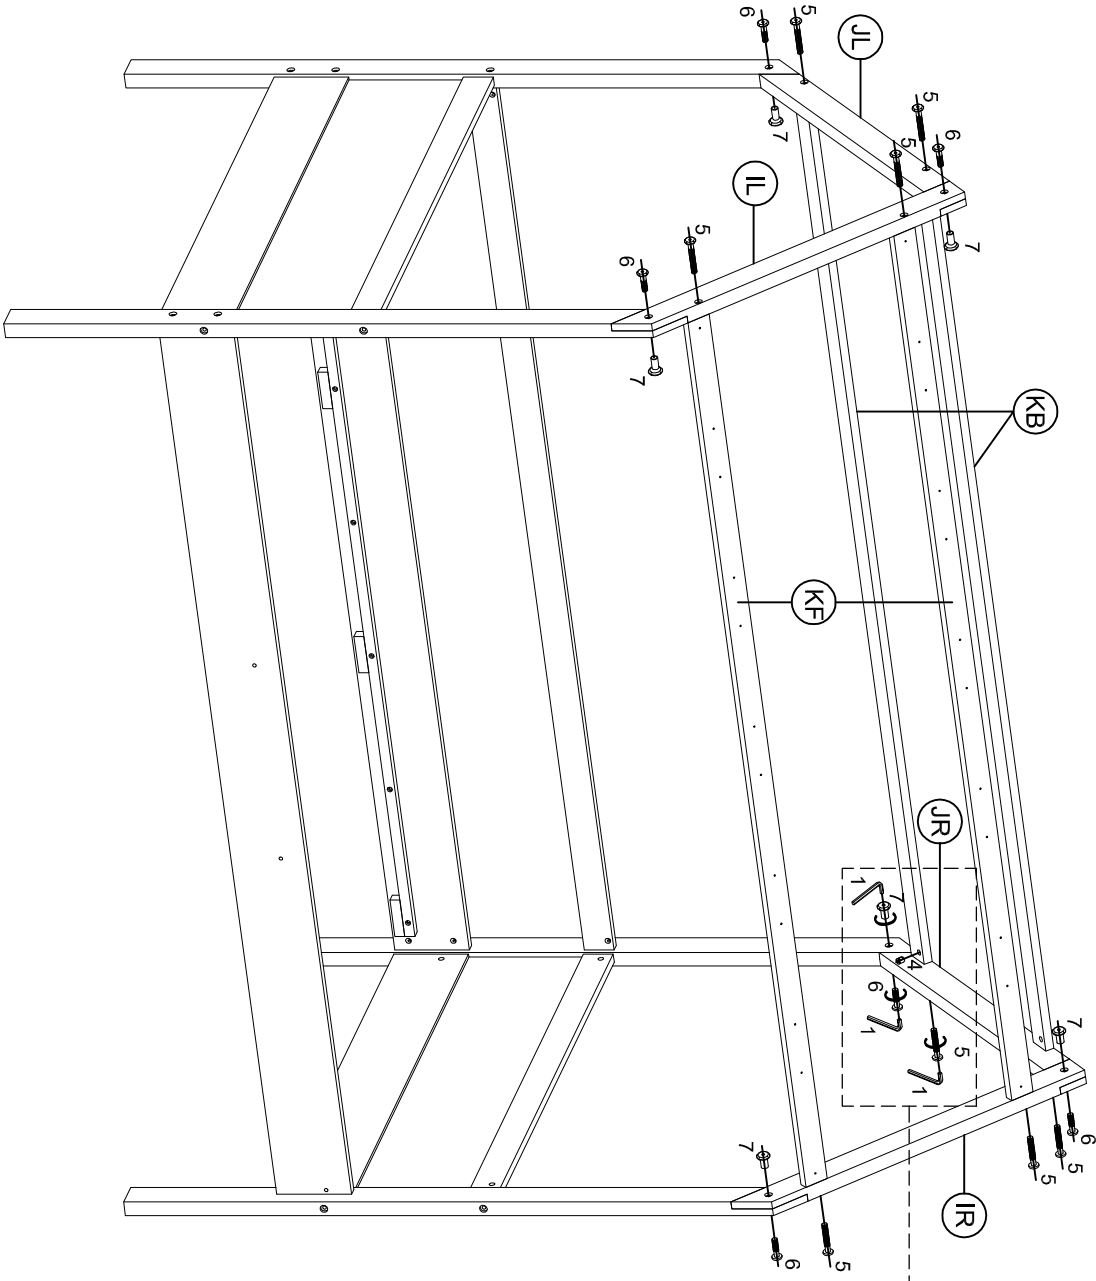STEP 4



1	
3	
4	
5	
6	
7	

Allen key - 2pcs
K4 x 60 mm

Wood dowel - 8pcs
Ø10 x 30 mm

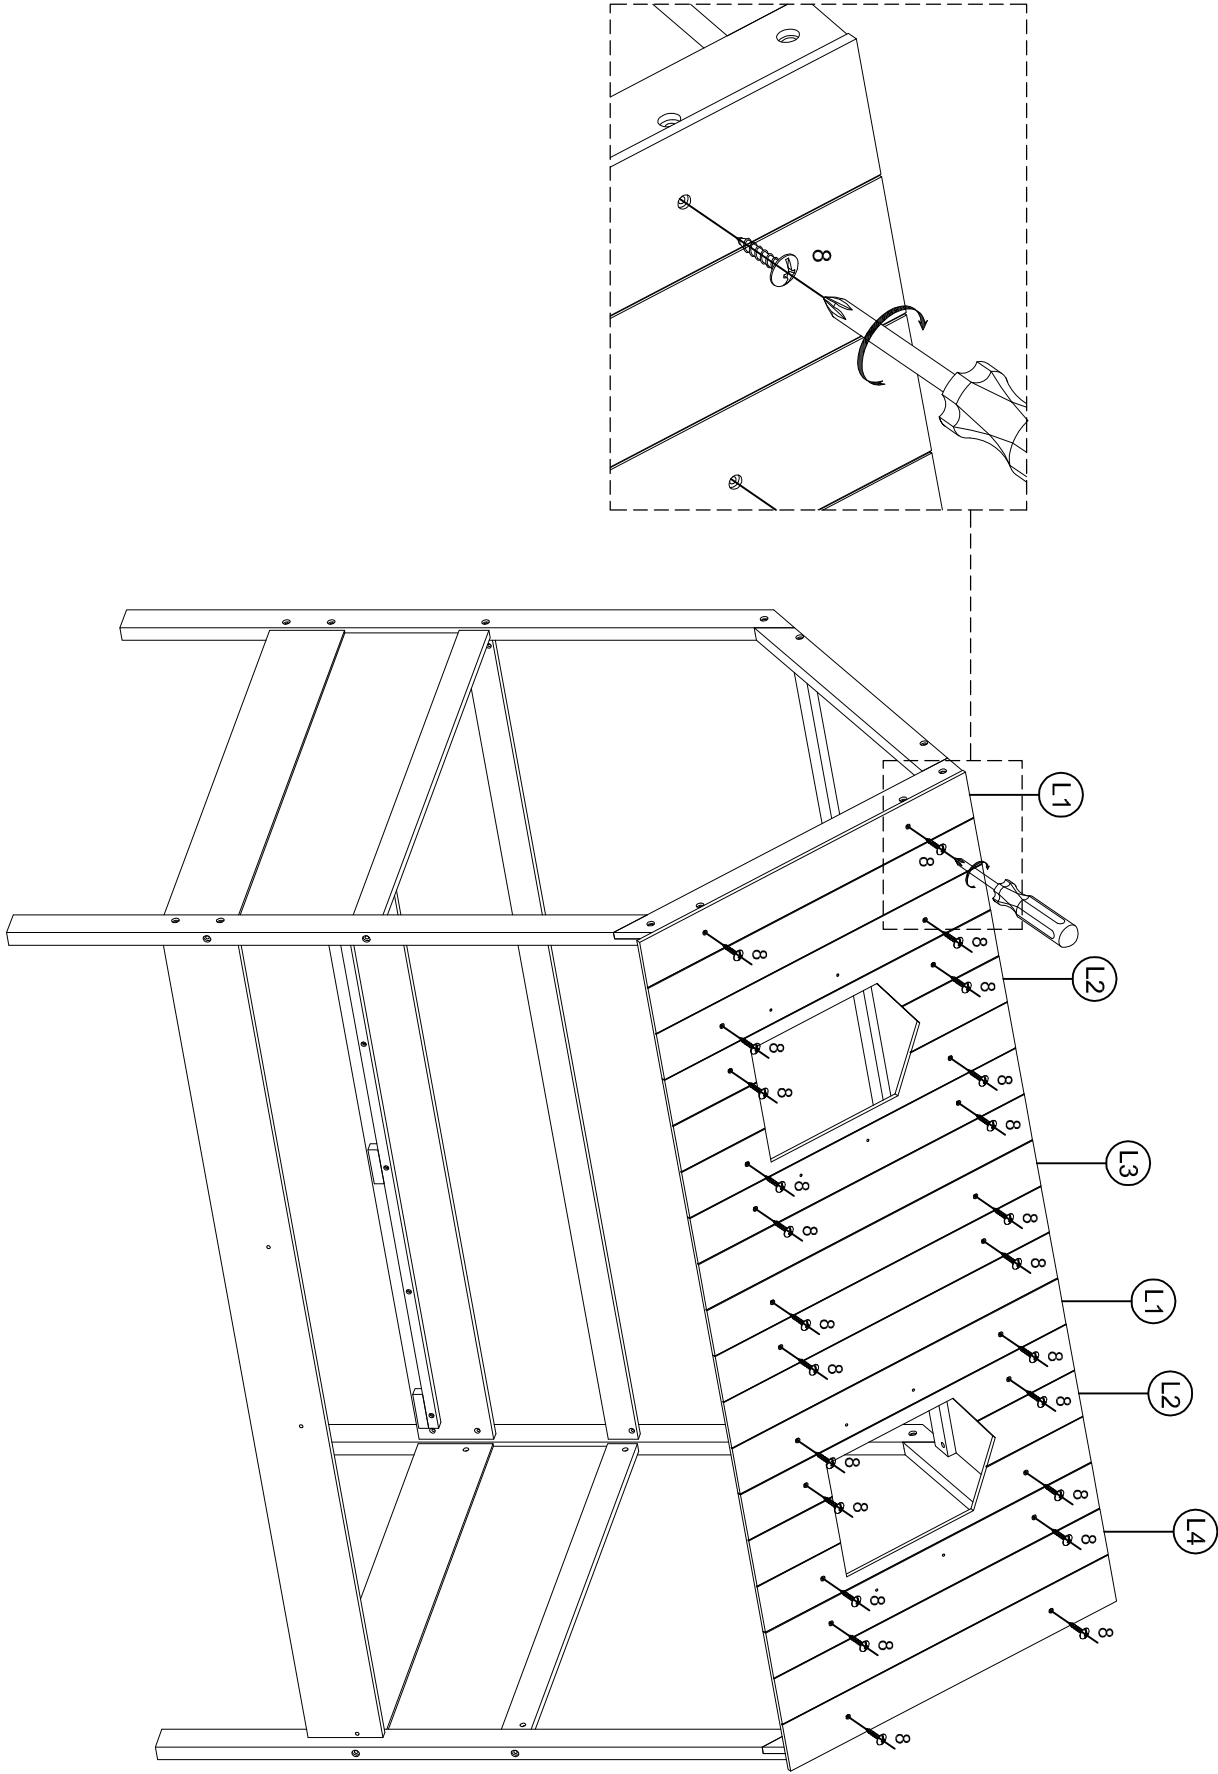
Barrel nut - 8psc
1/4 x Ø10 x 13 mm

Hex head blot - 8pcs
1/4 x 60 mm

Hex head blot - 6pcs
1/4 x 15 mm

Sleeve nut - 6psc
1/4 x 15 mm

STEP 5




8



Wood screw - 24pcs
Ø4 x 15 mm

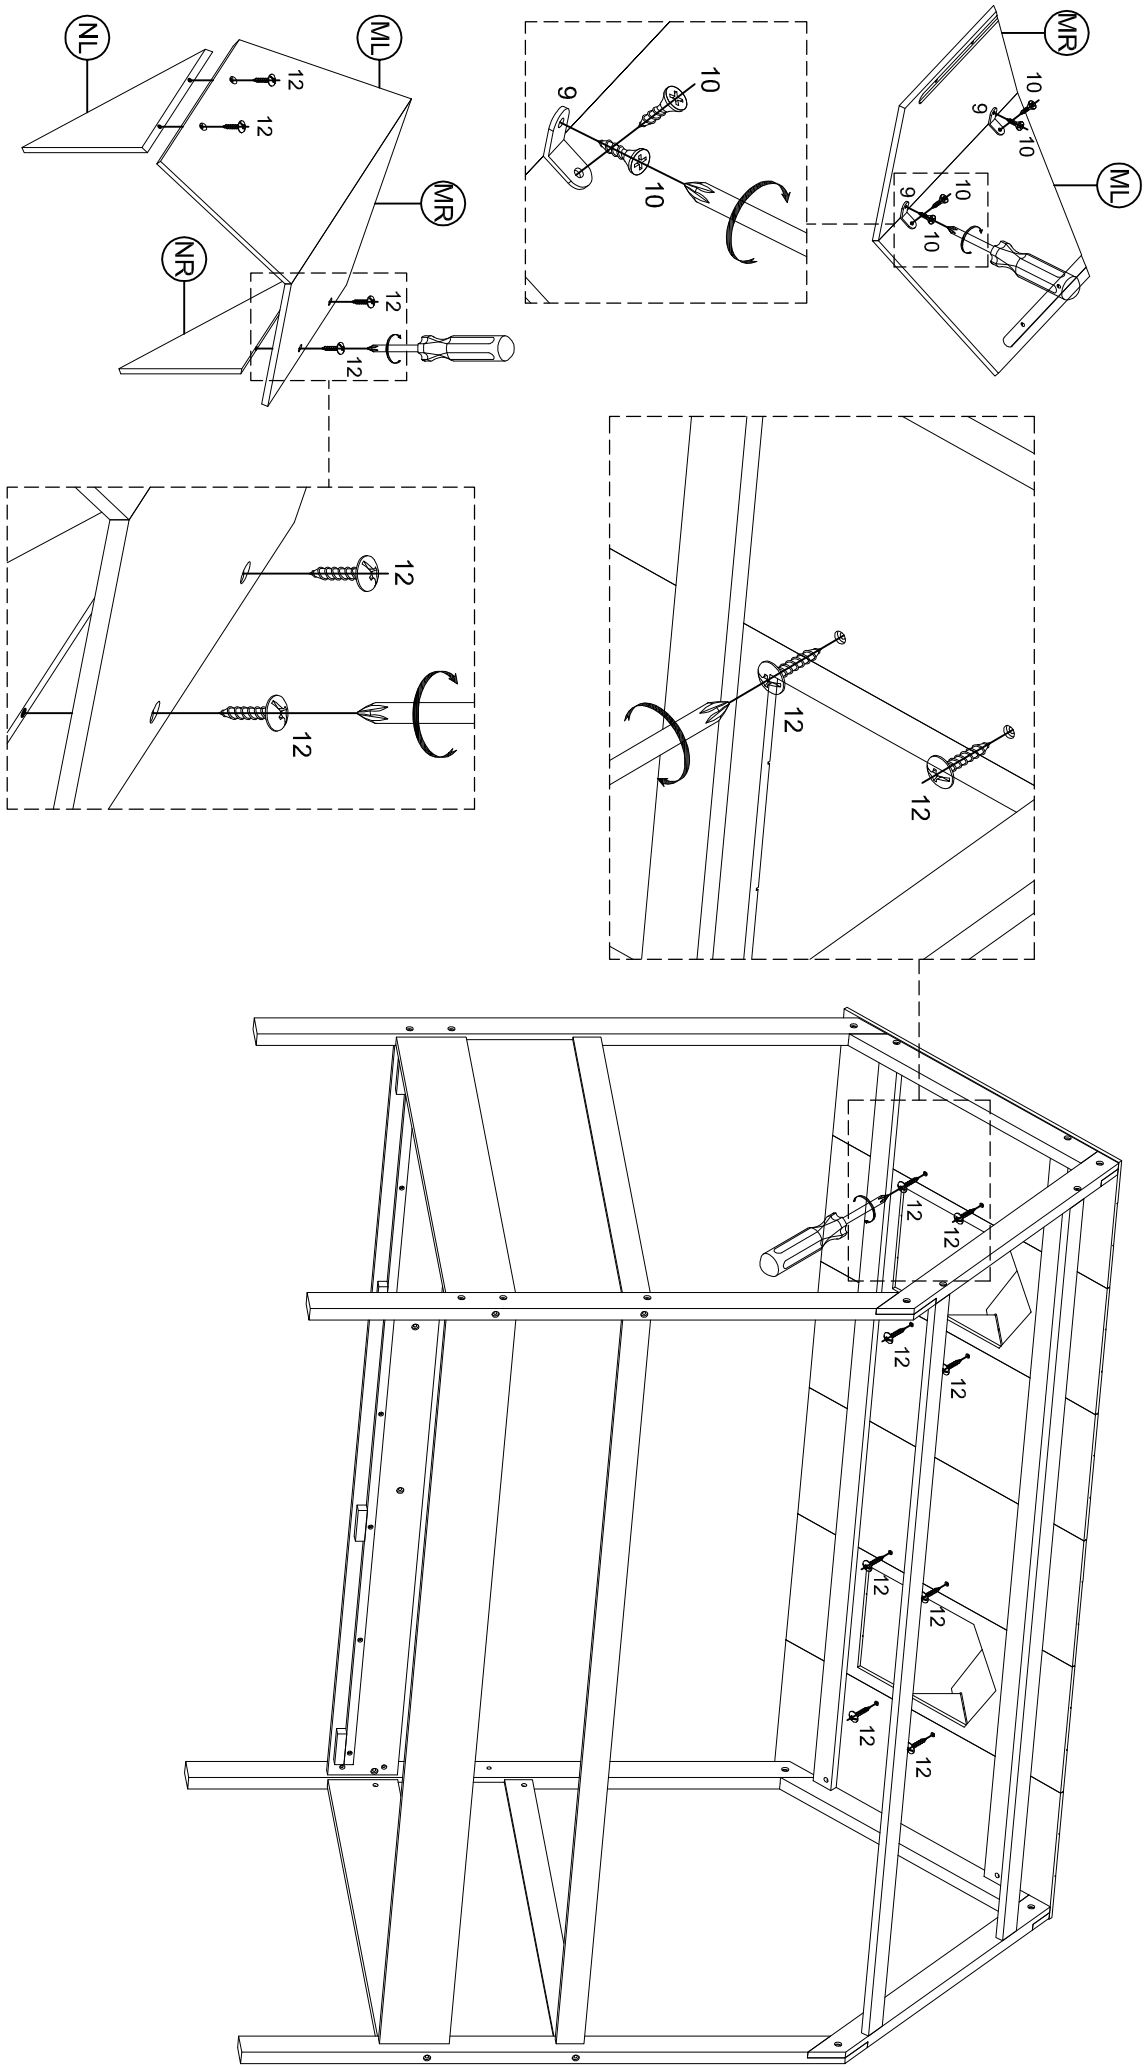STEP 6



9



V-Bracket - 4pcs
2 x 20 x 20 mm

10



Wood screw - 8pcs
Ø3,5 x 12 mm

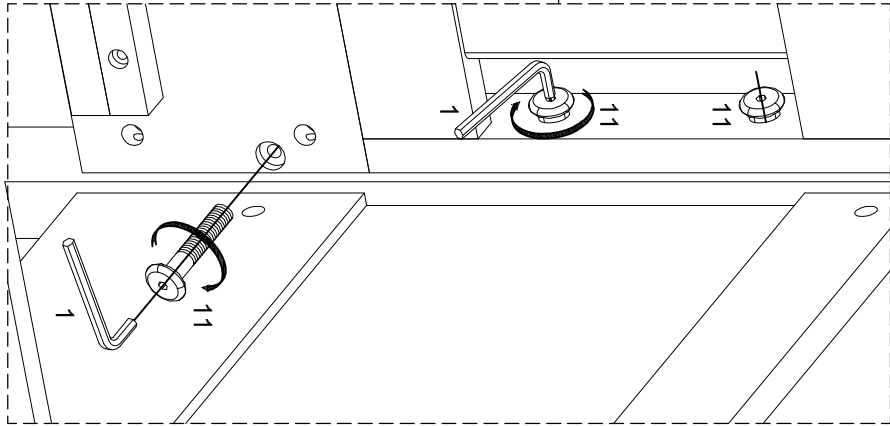
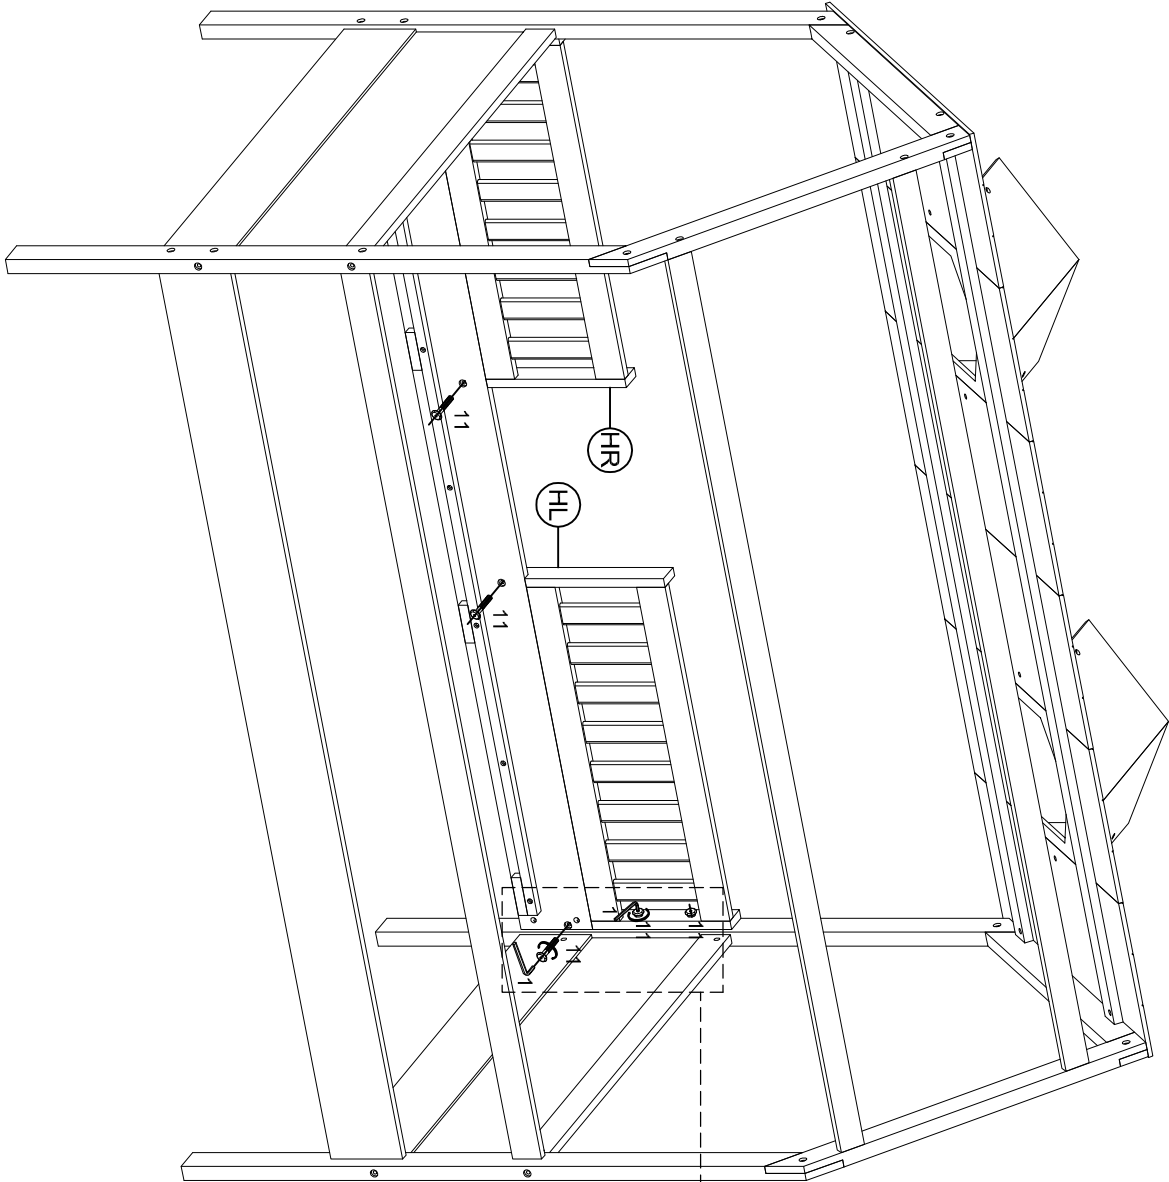
12




Wood screw - 16pcs
Ø4 x 25 mm

ASSEMBLY INTRUSSION

STEP 7




1	
11	

Allen key - 1pc
K4 x 60 mm

Hex head bolt - 8pcs
1/4 x 30 mm

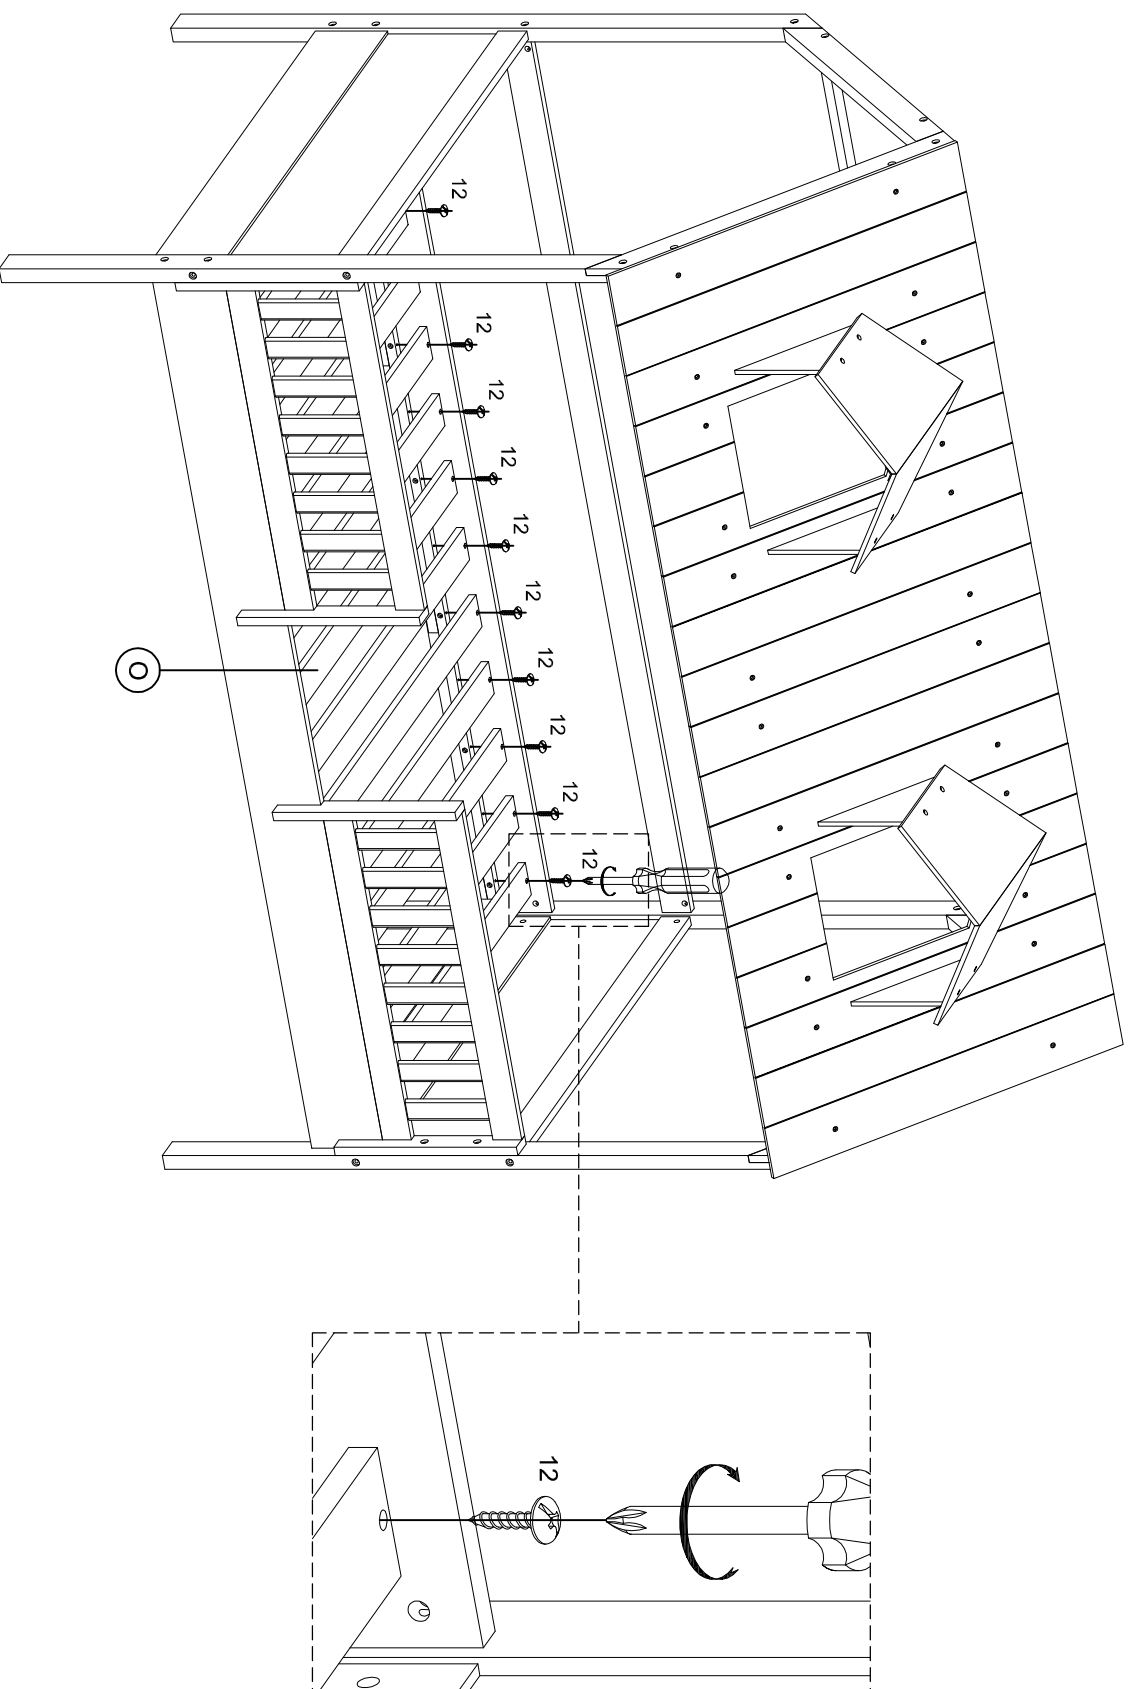STEP 8





12



Wood screw - 26pcs
Ø4 x 25 mm

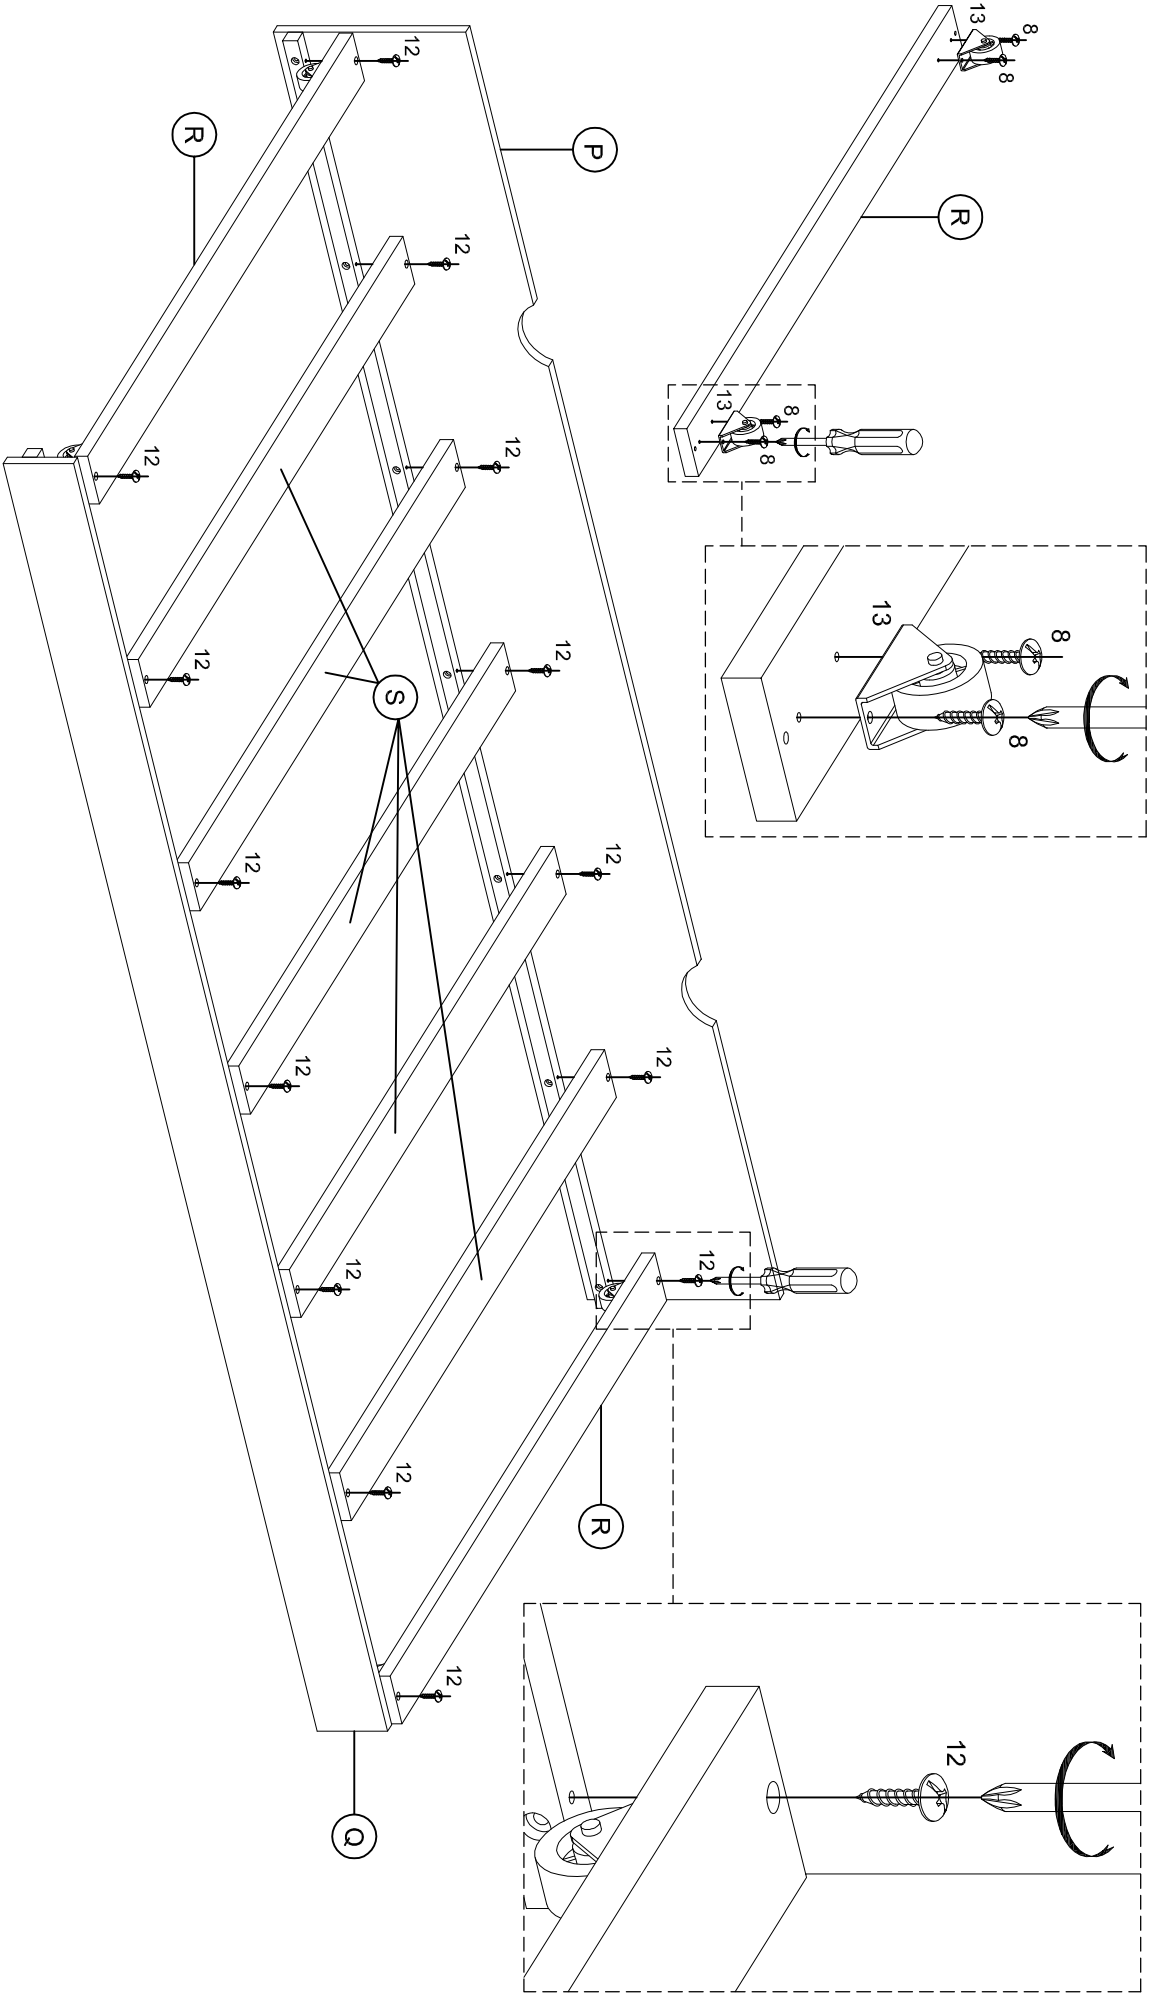STEP 9



8	12	13
		
Wood screw - 8pcs Ø4 x 15 mm	Wood screw - 14pcs Ø4 x 25 mm	Wheel - 4pcs Ø40 mm

