








ASSEMBLY INSTRUCTION


(Box 1)
BOX OF HEADBOARD & HB LEG

No	ITEM	Qty
A	Headboard 	1 pc
B	Headboard Leg (L/R) (500mm) 	2 pcs

(Box 1)
BOX OF HEADBOARD & HB LEG

No	ITEM	Qty
1	JCBC Bolt M6 x 30mm 	6 pcs
2	Spring Washer 1/4" Rbw 	6 pcs
3	Flat Washer 1/4" ID x 13mmOD Blk 	6 pcs
4	Allen Key M6 x 65mm 	1 pc
5	12V+12W+1A Adaptor 	1 pc

STEP 1 : Attach Headboard Leg (B) to Headboard (A) as shown using JCBC bolt (1) with Spring Washer (2), Flat Washer (3) and securing with Allen Key (4).

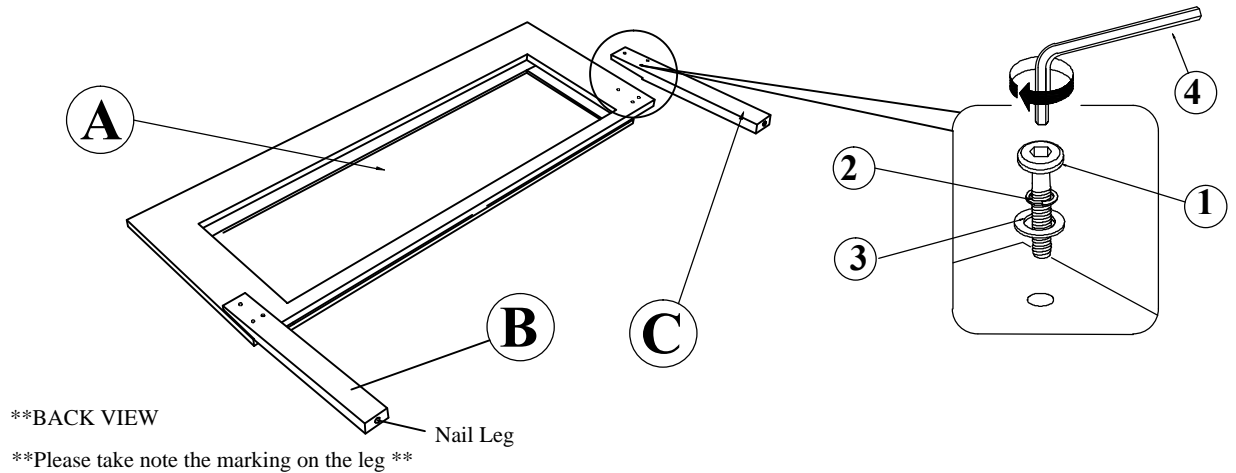

STEP 2 : Connect the Adaptor plug (5) as shown.

