
ASSEMBLY INSTRUCTION

HEFTBSWF-01AVQ8


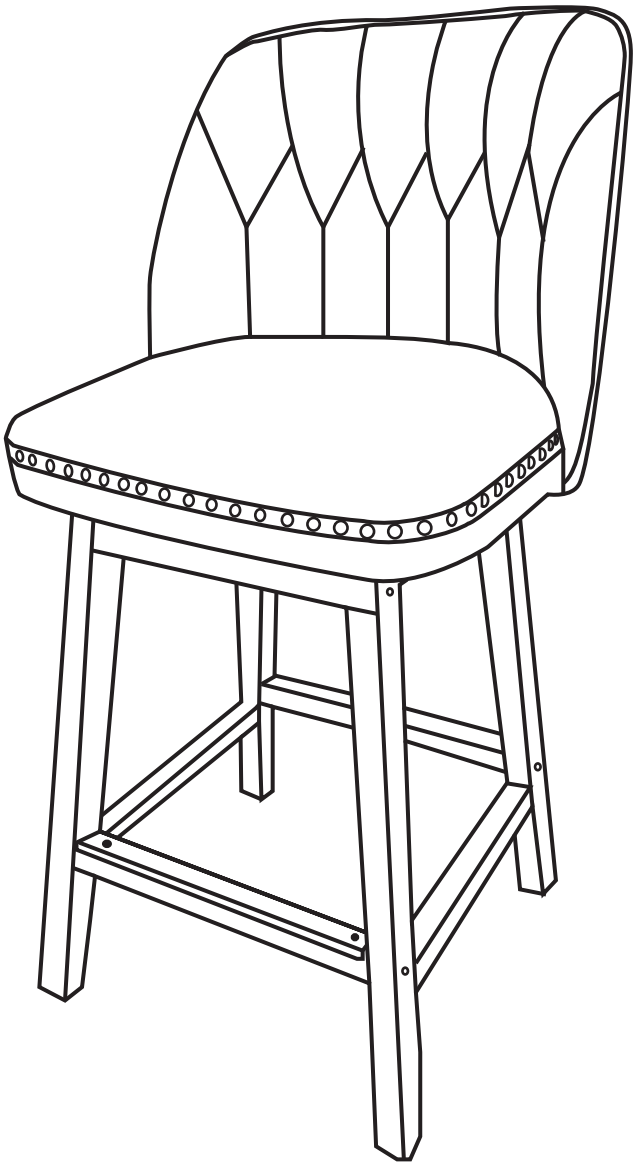




1. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.


2. Follow the installation instructions.Please confirm all accessories are preset before installation.

3. Do not fully tighten the screws during initial assembly.Fully tighten screws only once all pieces which are correctly assembled.


4. If you encounter any problems during installation,please contact our customer service.

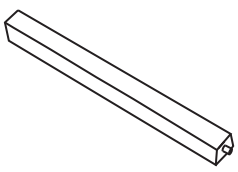Item no.	Reference Image	Qty.
A	 M6X60mm	x8
C		x8
E		x2
G		x1

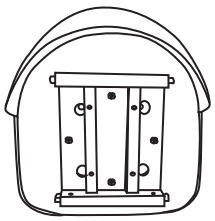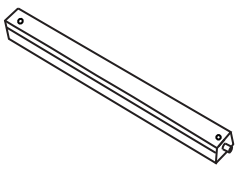
Item no.	Reference Image	Qty.
B		x8
D	 M6	x1
F		x1
H	 (with Stainless steel part)	x1

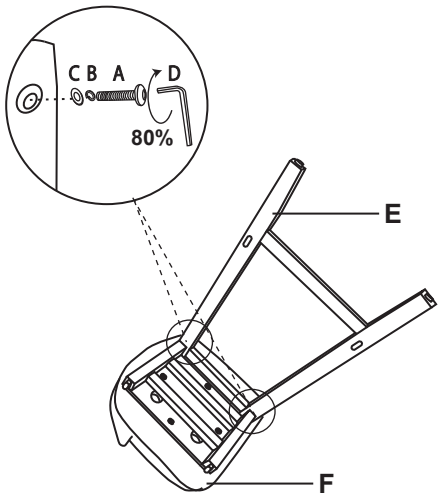


①

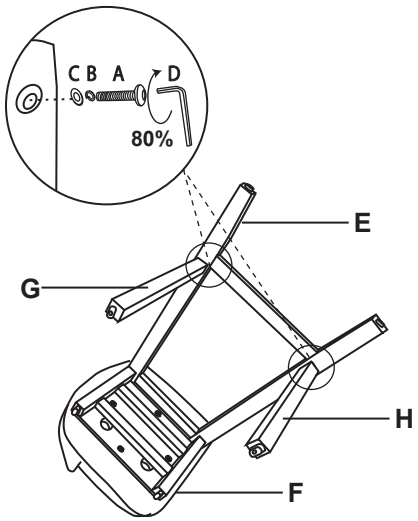


②

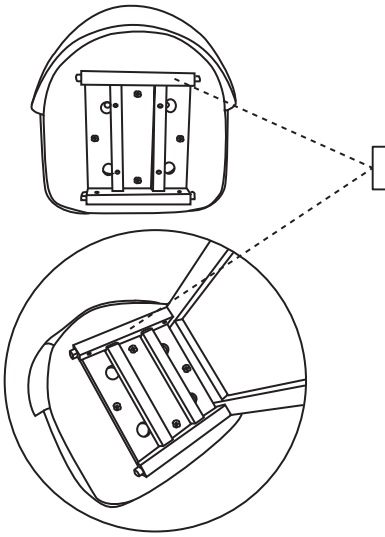

If the installation holes on the chair feet can not be aligned, the installation holes on the wooden feet can be aligned by adjusting the upper crossbar wooden block.

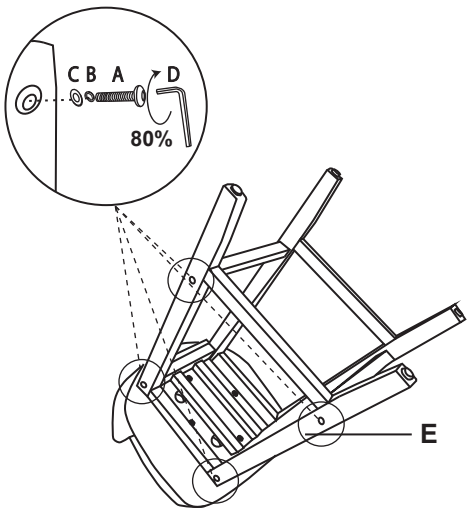

③

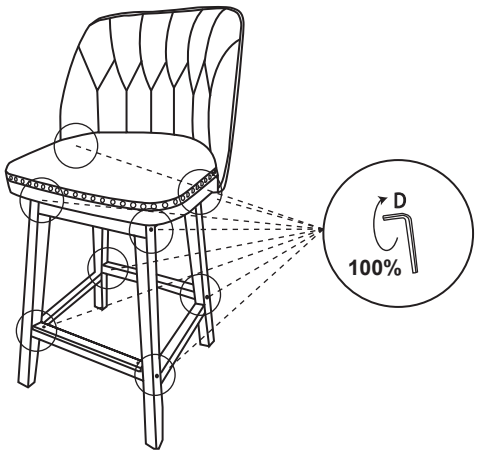

④