


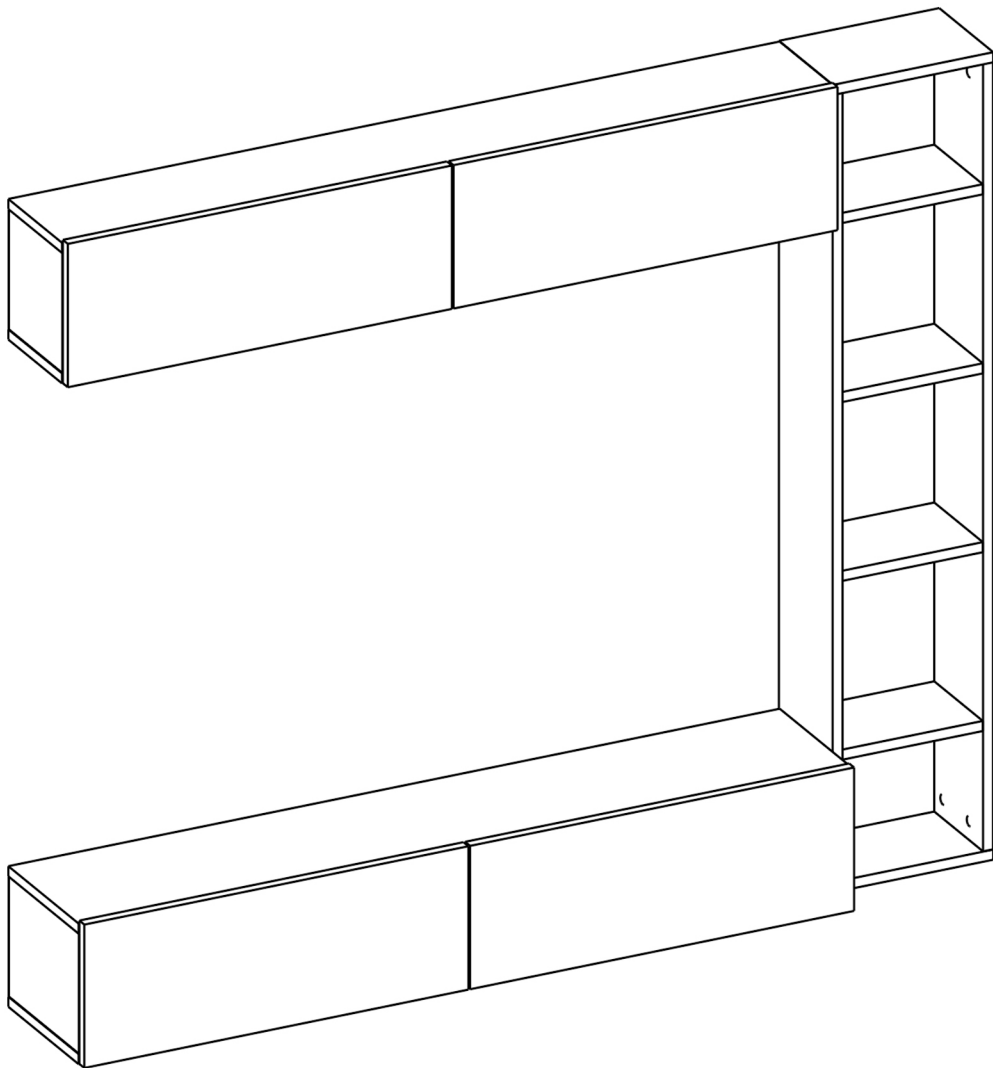









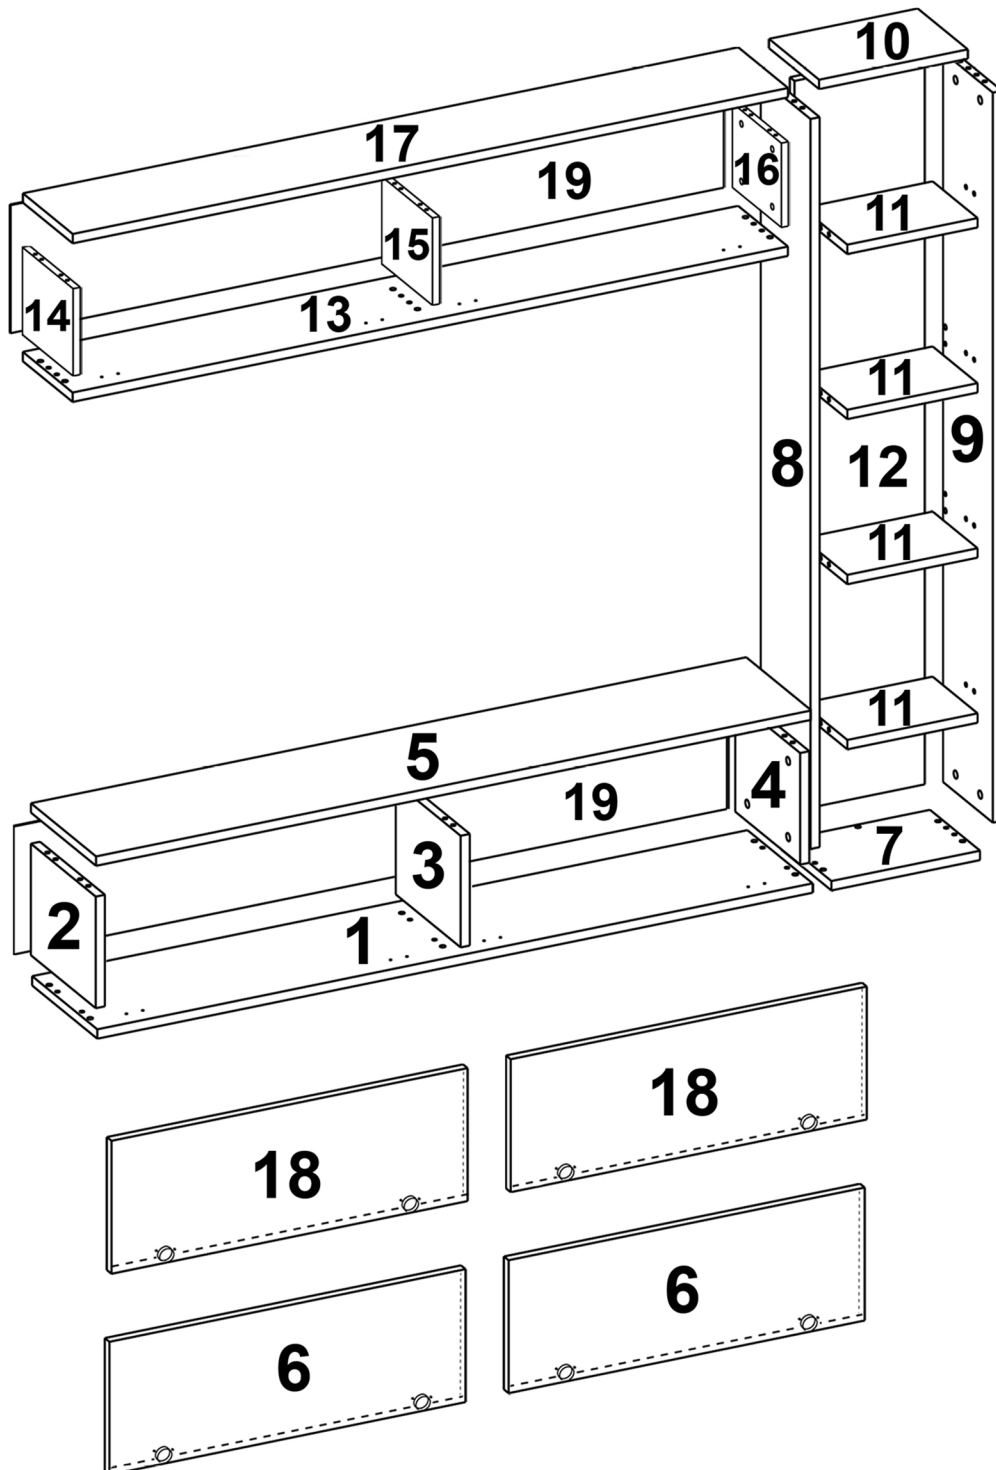
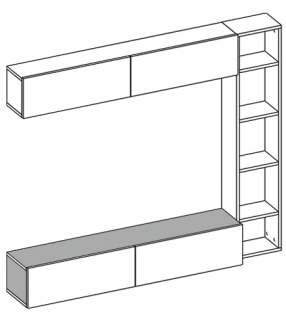


CN1



 B0501 x38	 B0502 x38	 B0503 x36	 B0504 x38	 B0301 x48
 B0101 x8	 B0105 x8	 B0507 x16	 B0318 x50	 B0306 x11
 B1303 x8	 B0317 x11	<p>Important Installation Notice</p> <p>For safe and secure mounting on drywall, PLEASE USE PLASTIC ANCHOR BOLTS.</p> <p>Using incorrect hardware may cause wall damage and potential injury.</p> <p>Thank you for following proper installation guidelines !</p>		





B0502


B0503

B0504

B0501



x12

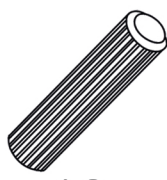


x12





x12




x12

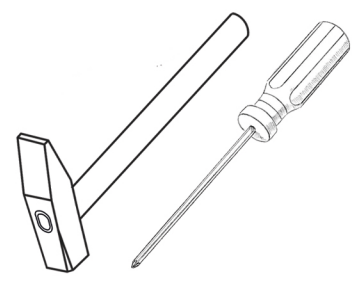



1

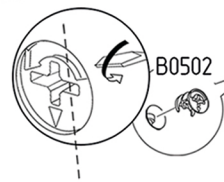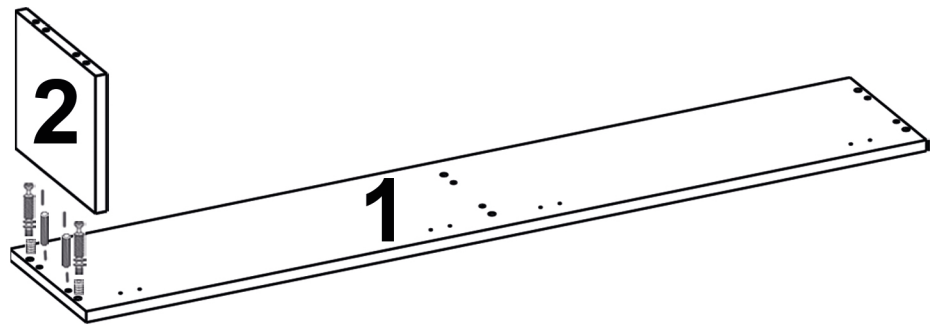

2



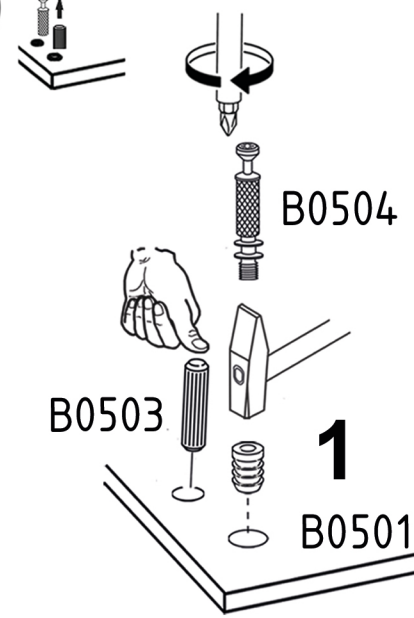


2

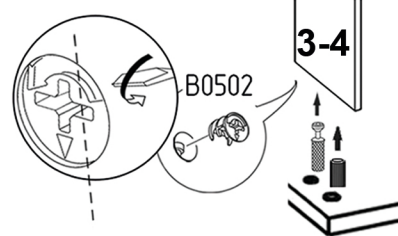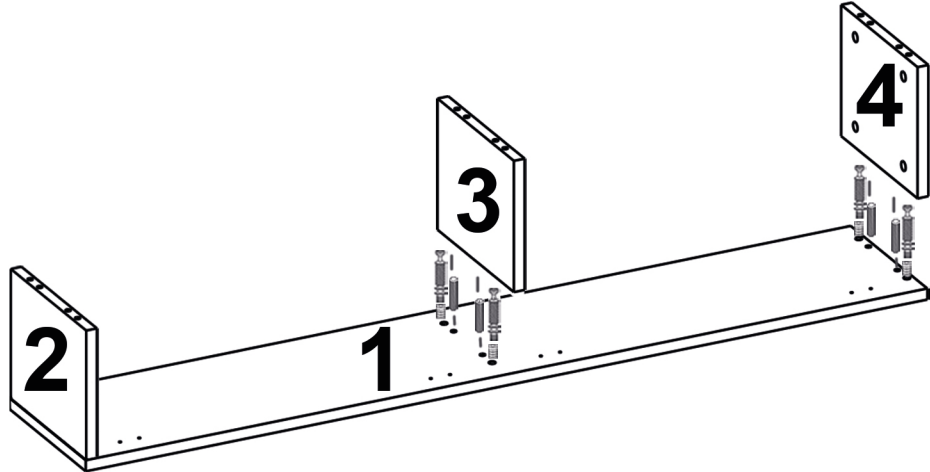


3-4

3

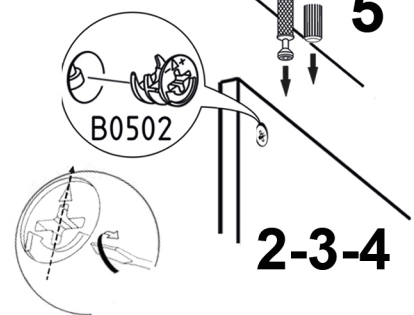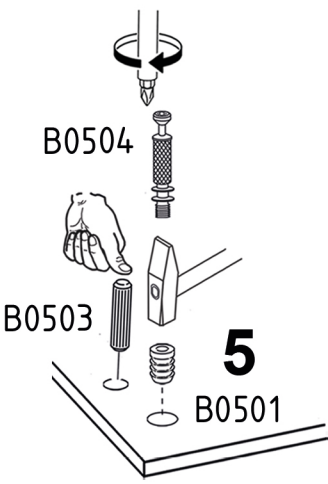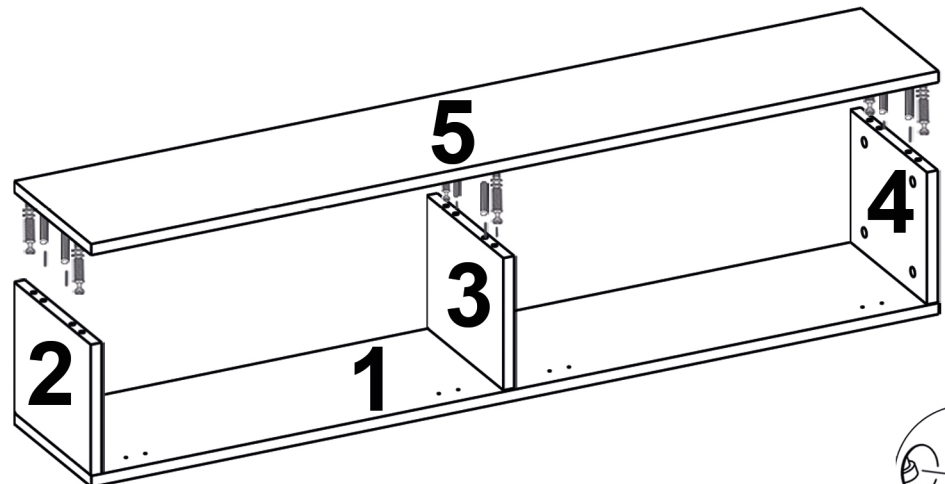

2-3-4

2

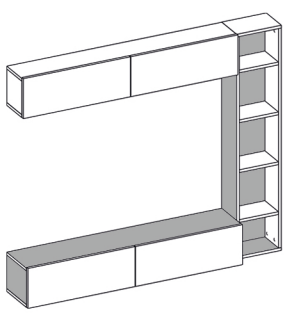

B0502


B0503

B0504

B0501



x5

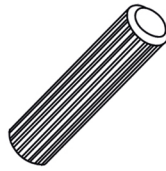


x4






x5








x5

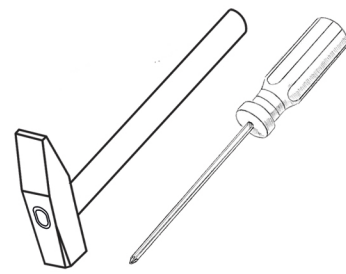


4

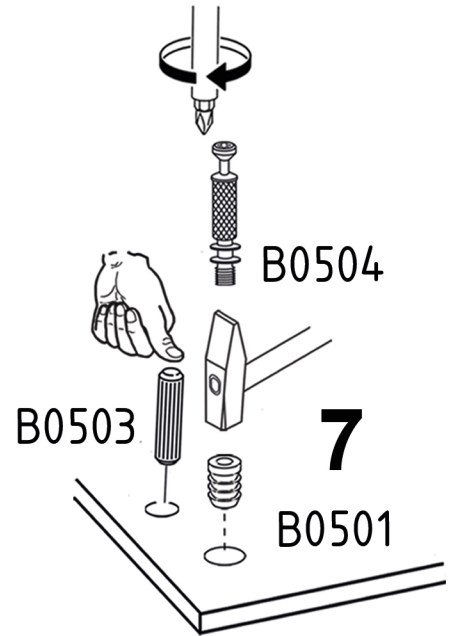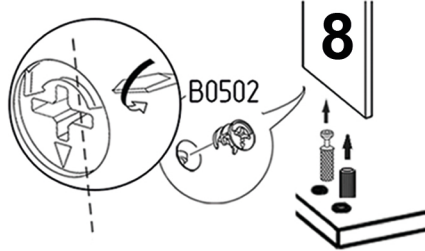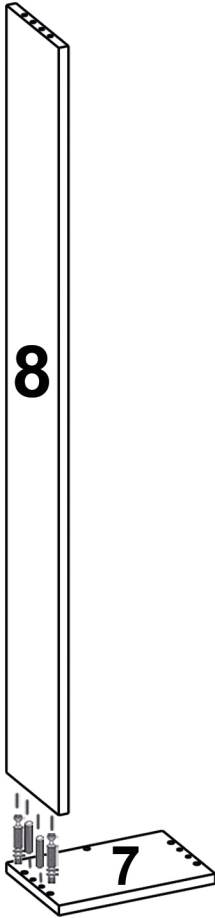

5

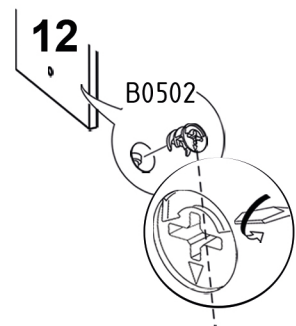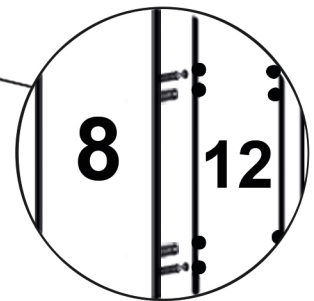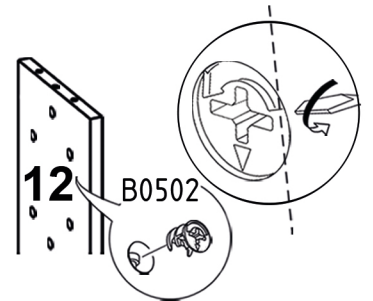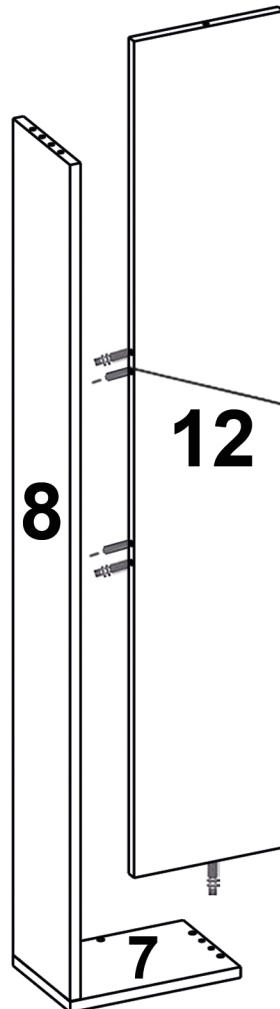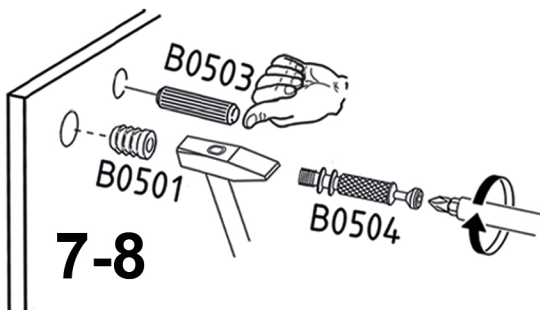

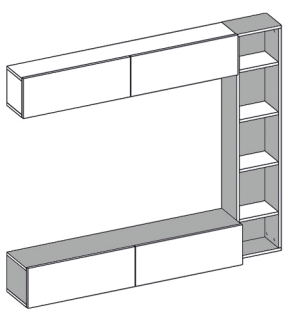

B0502



x9

B0503



x8

B0504




x9





B0501






x9

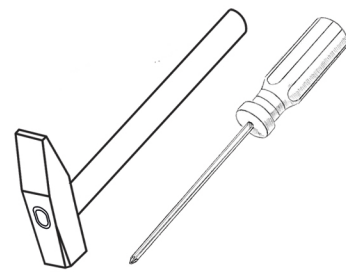


6

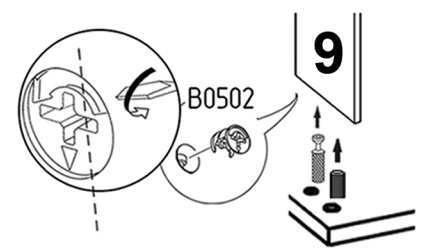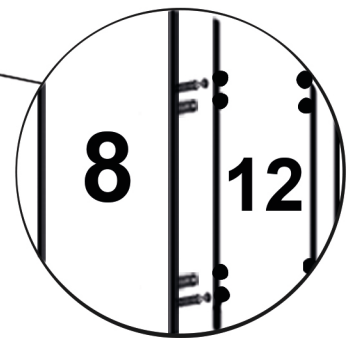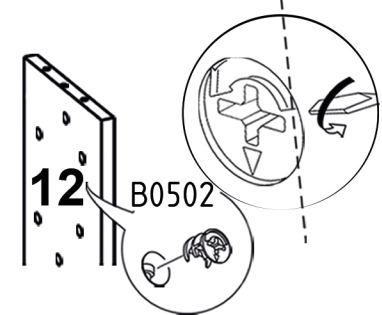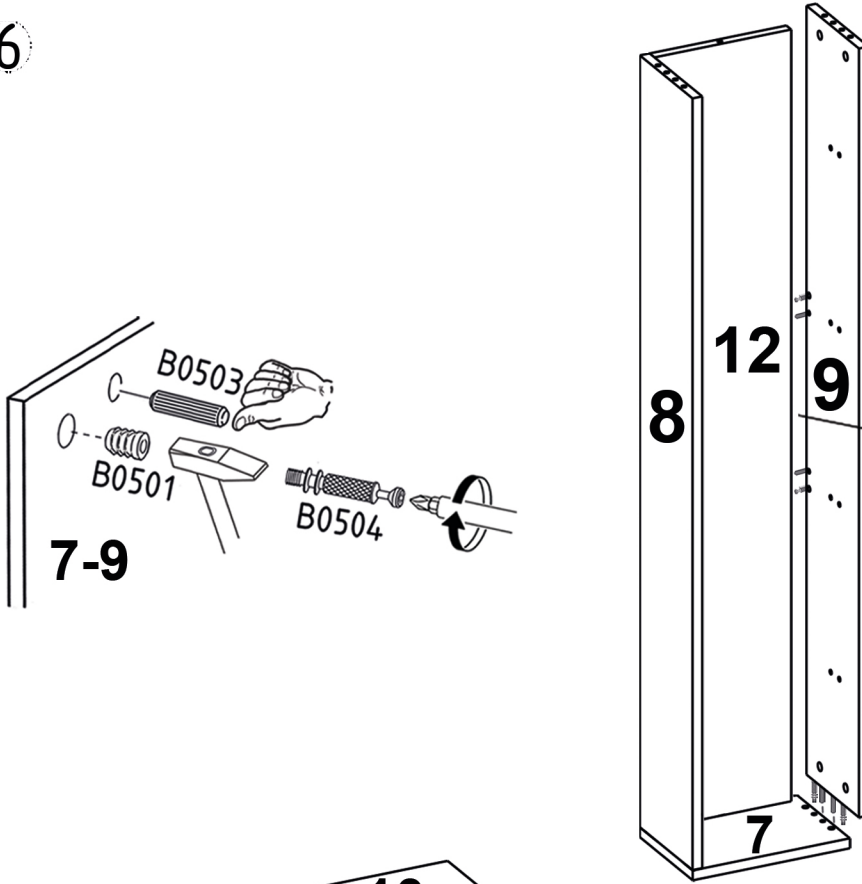

7

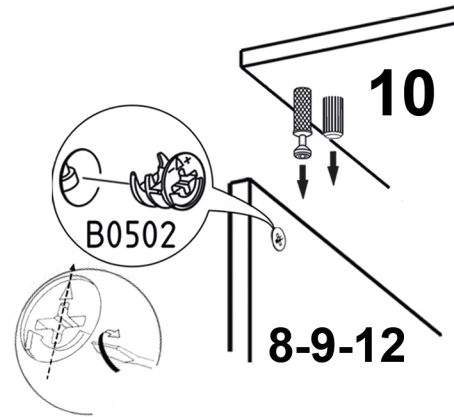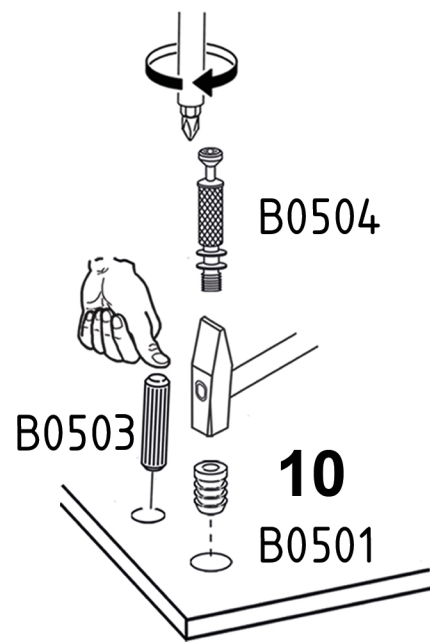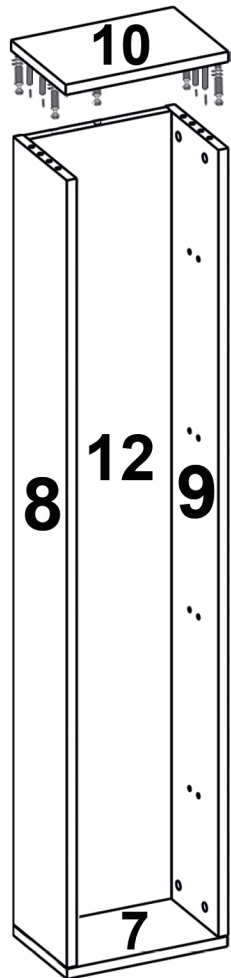


4

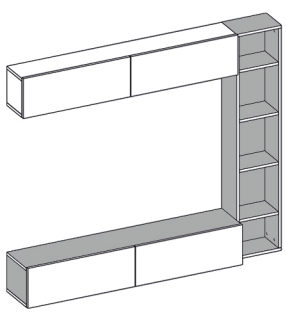

B0507




x16


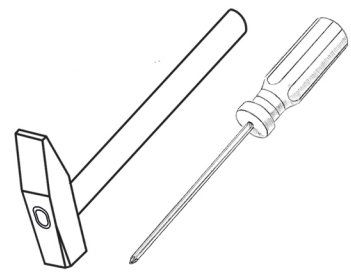


8

11


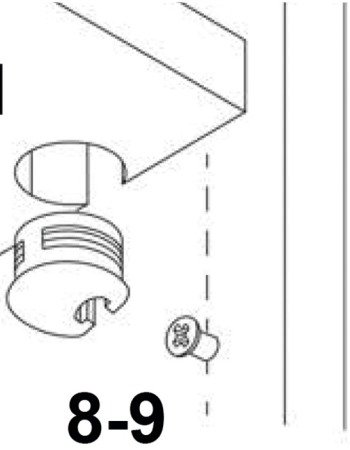


8-9

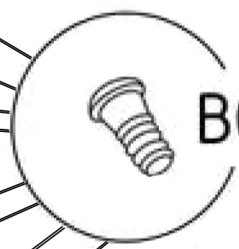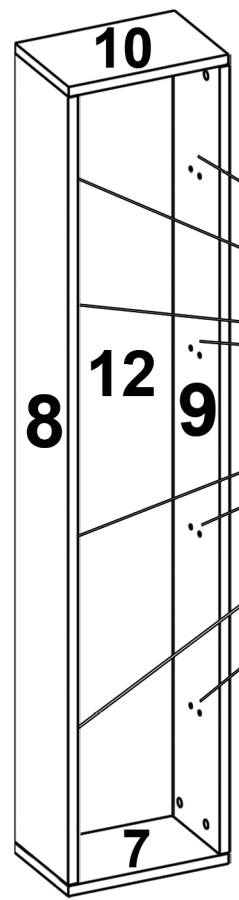


B0507


9

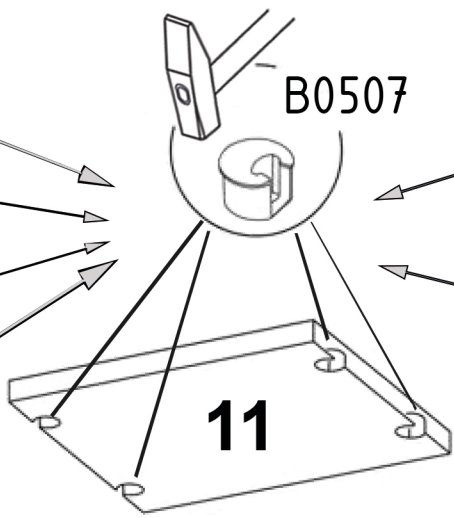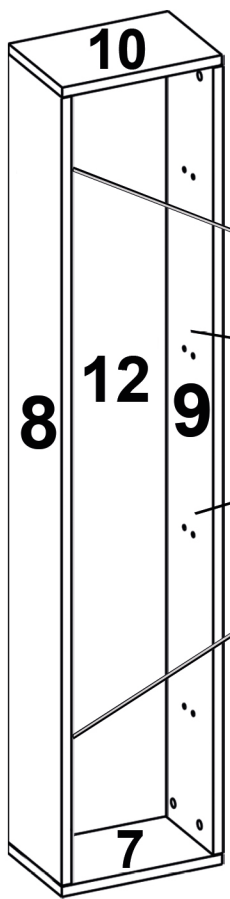

B0507

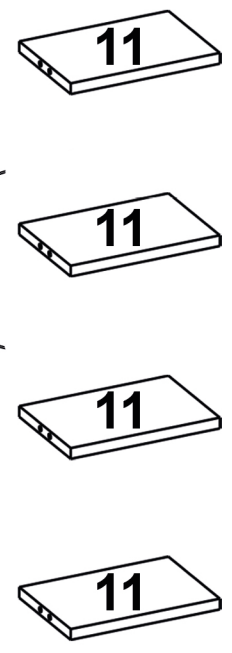

5

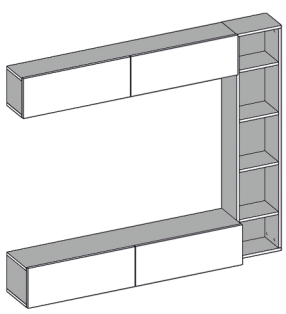

B0502

B0503

B0504

B0501



x12




x12







x12



x12

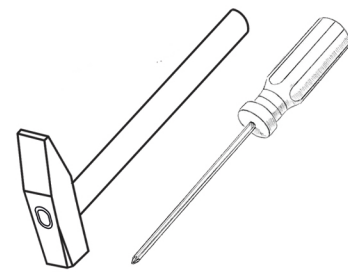

10

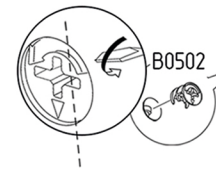
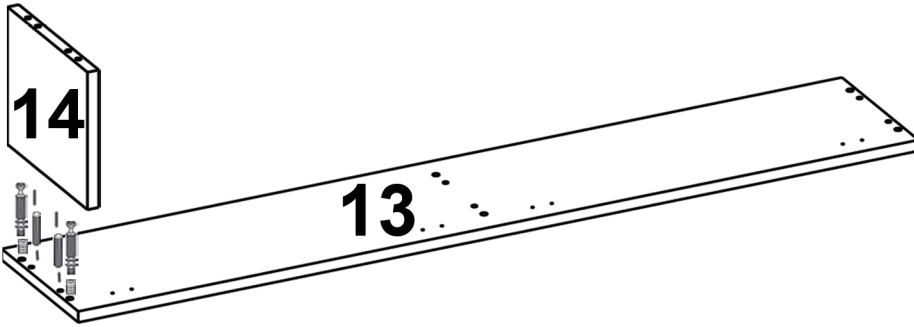


B0504

B0503



13
B0501

11

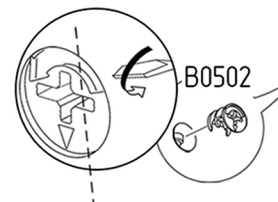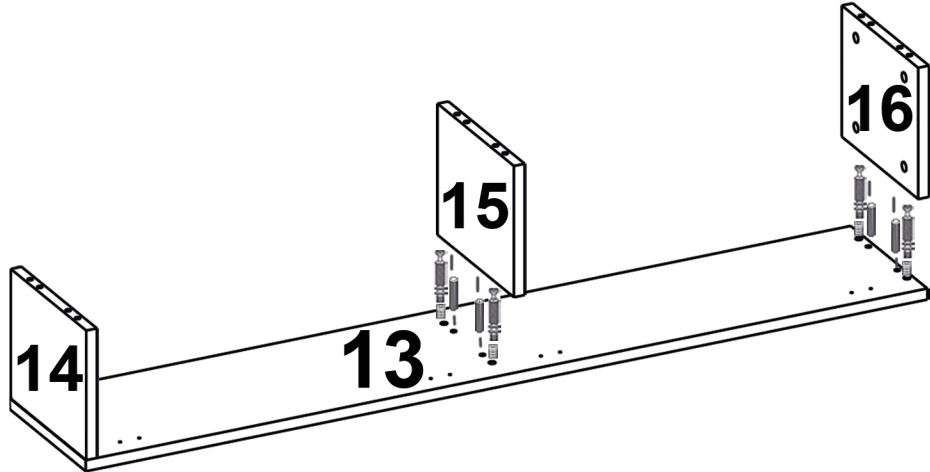

15-16

12

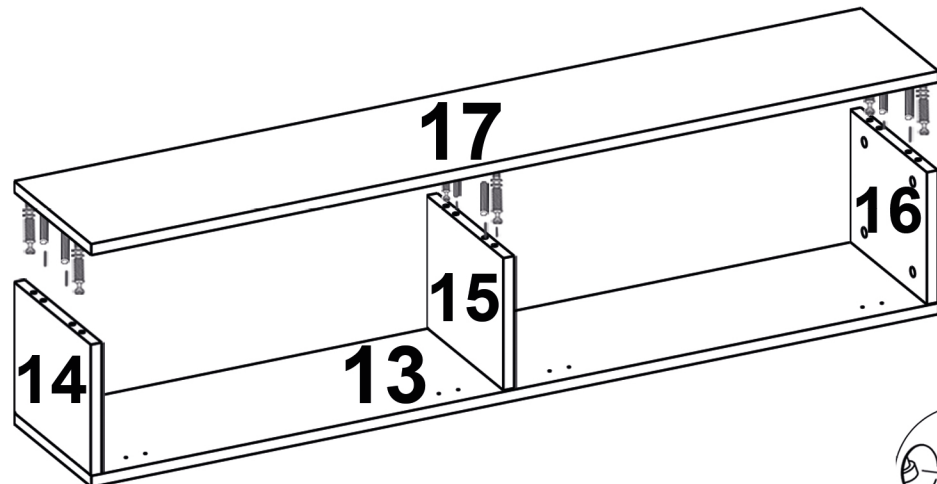

B0504



B0503

17


B0501




B0502

17

14-15-16

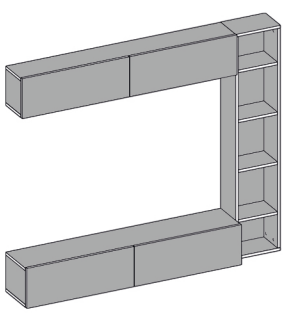


B0101



x8

B0105




x8






B0301




x32

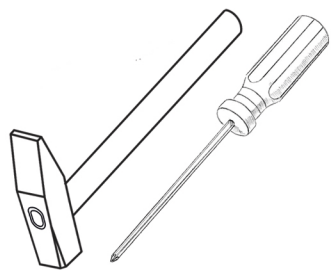

13

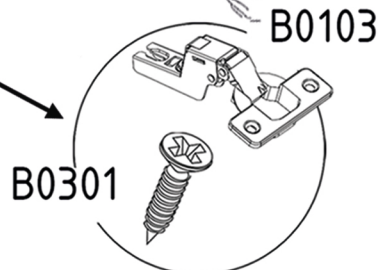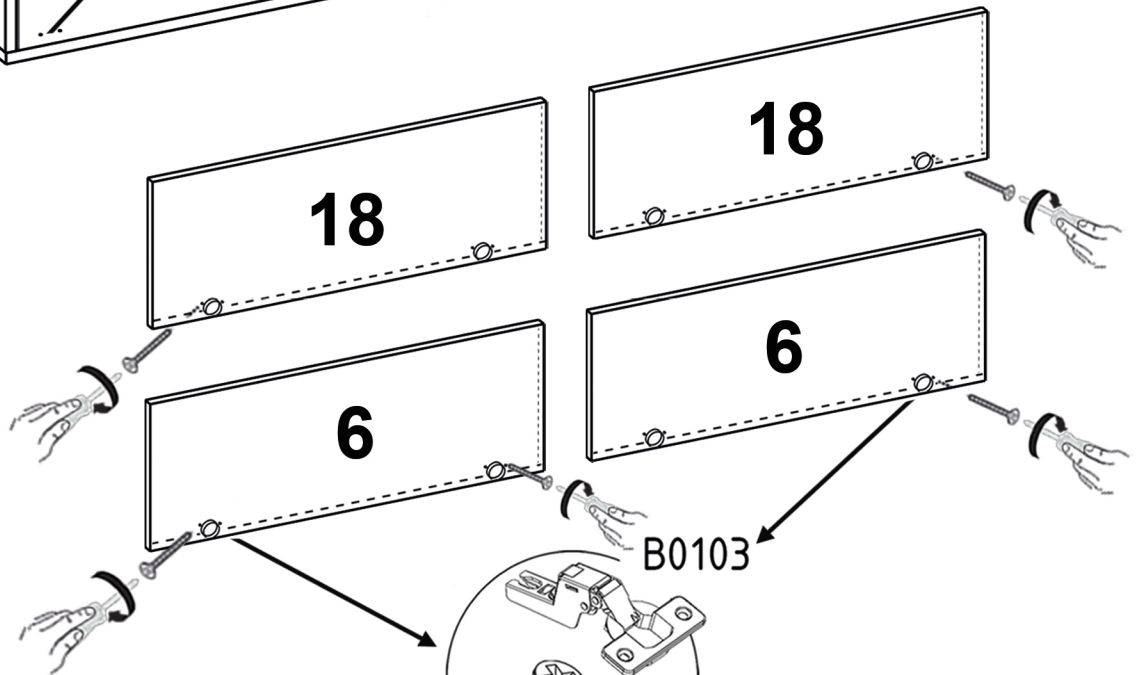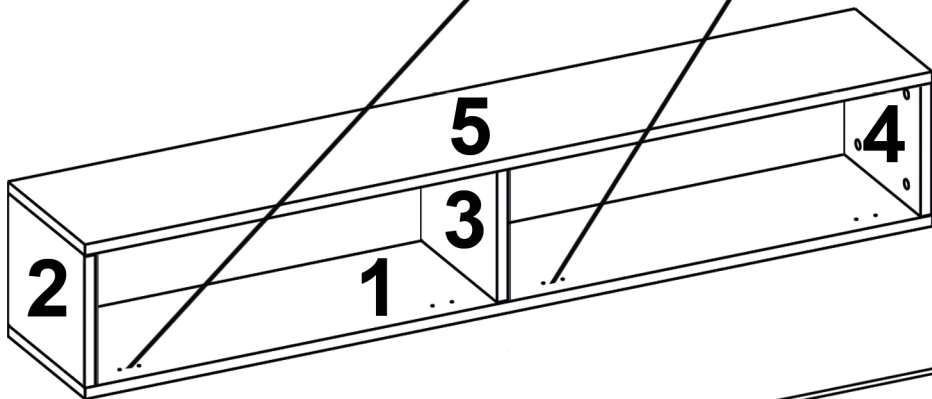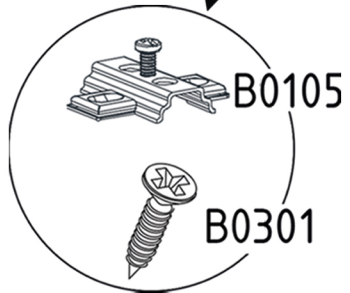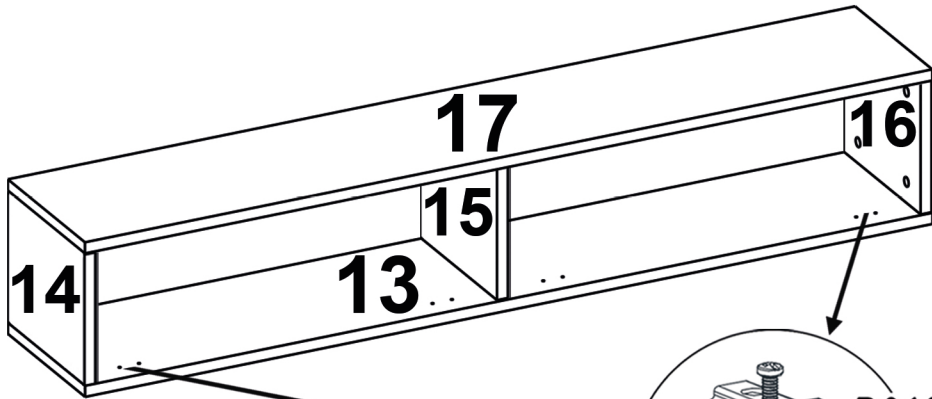


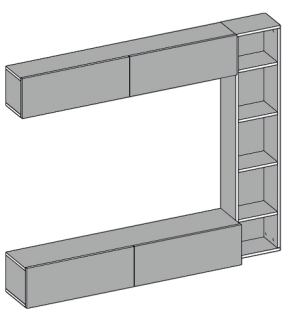






B0318




x50

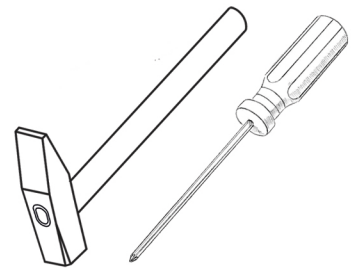


14

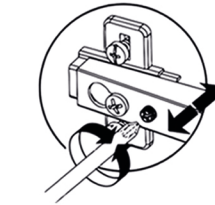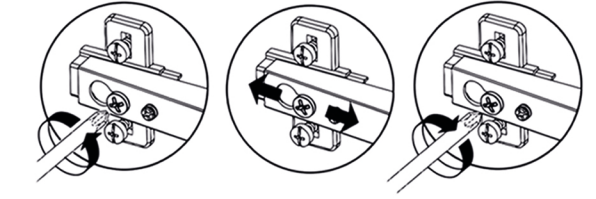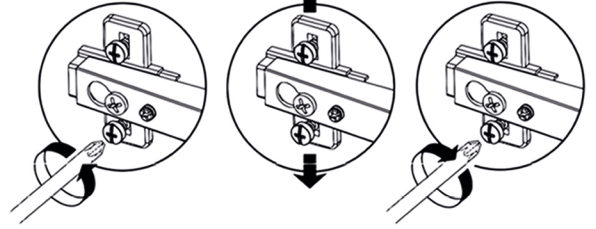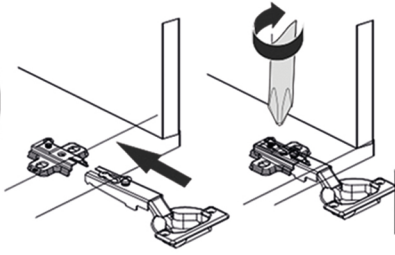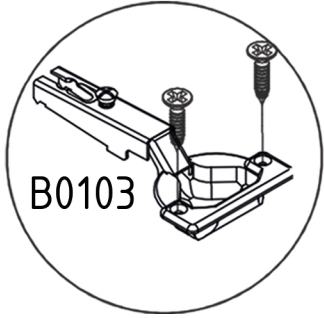


15

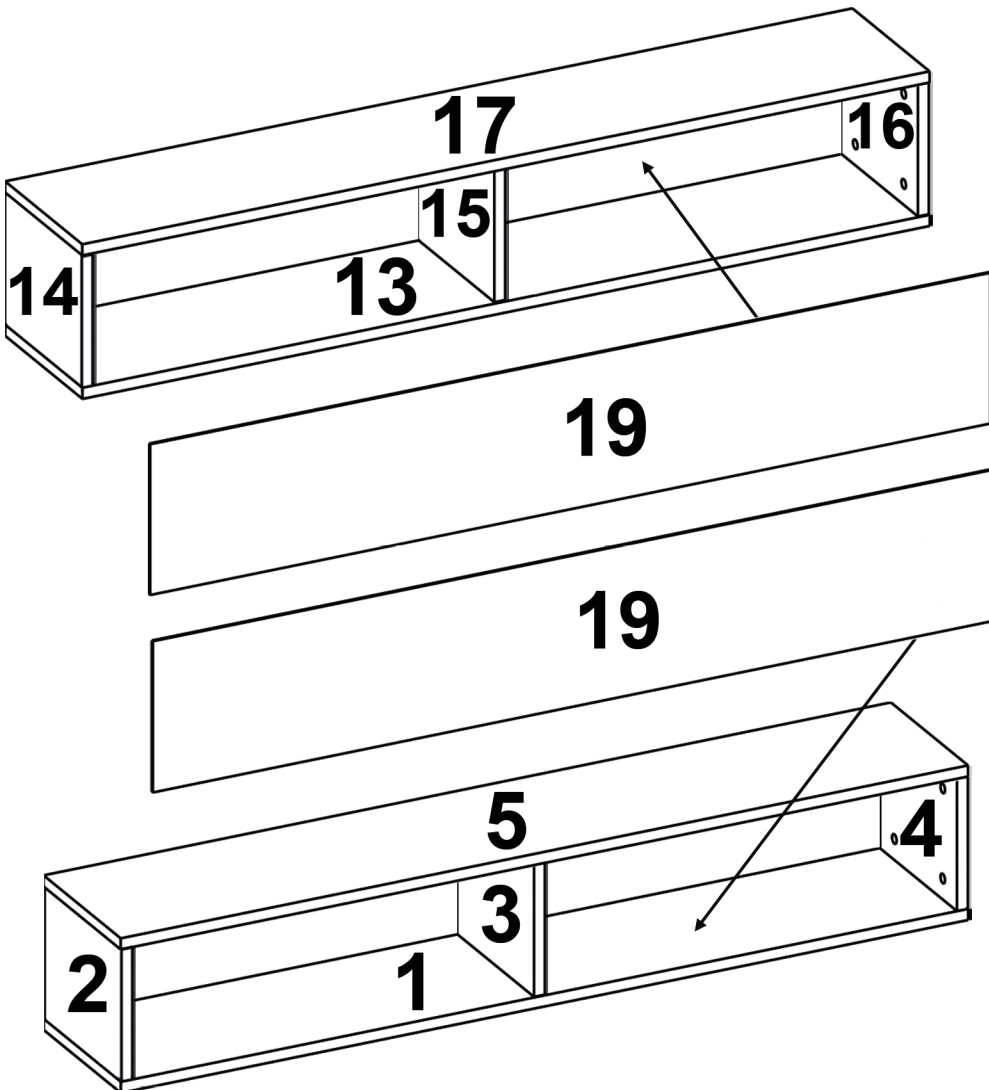

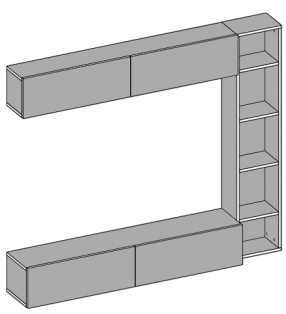

B1303 B0306 B0317 B0301




x8







x11

x11

x16

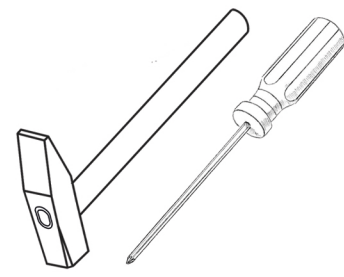

16

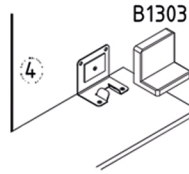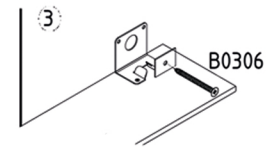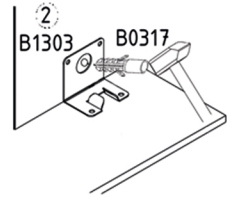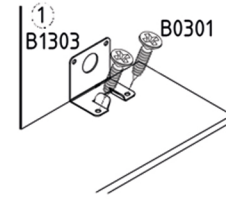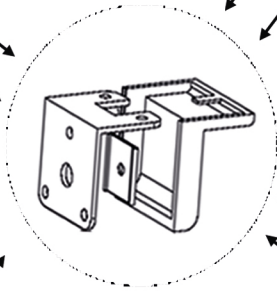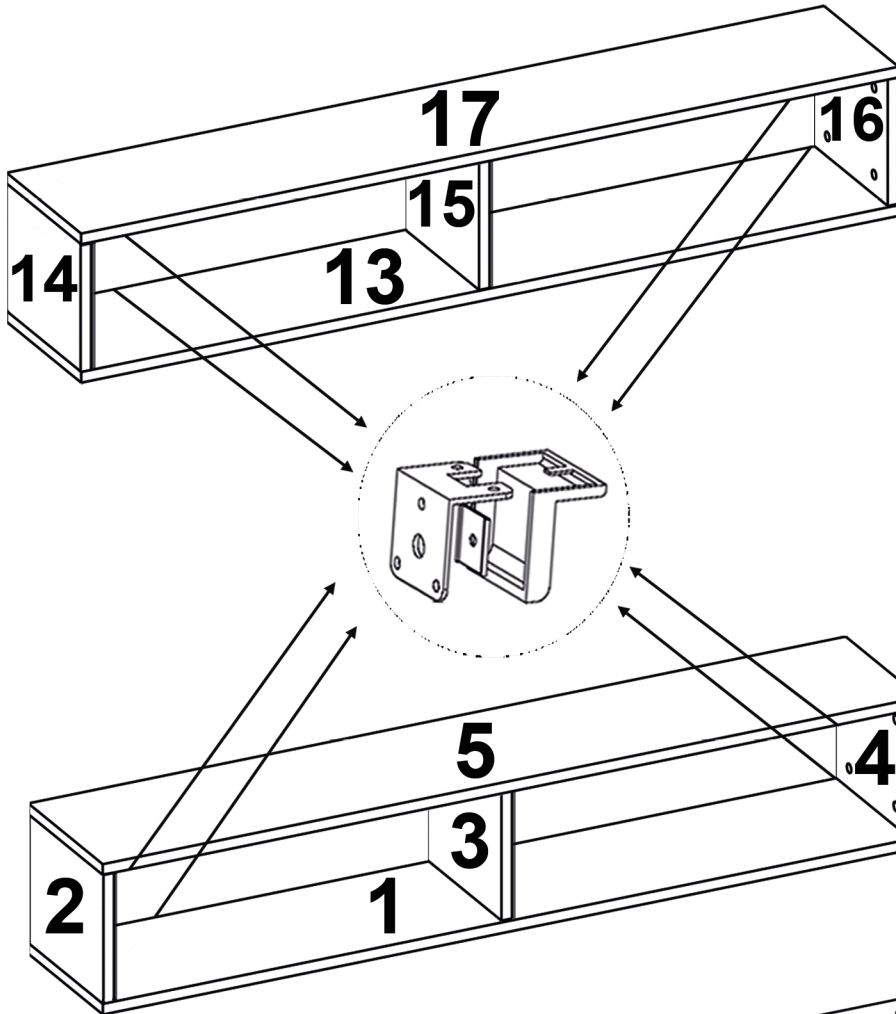

17

