WINDOW CURTAIN MEASURING GUIDE

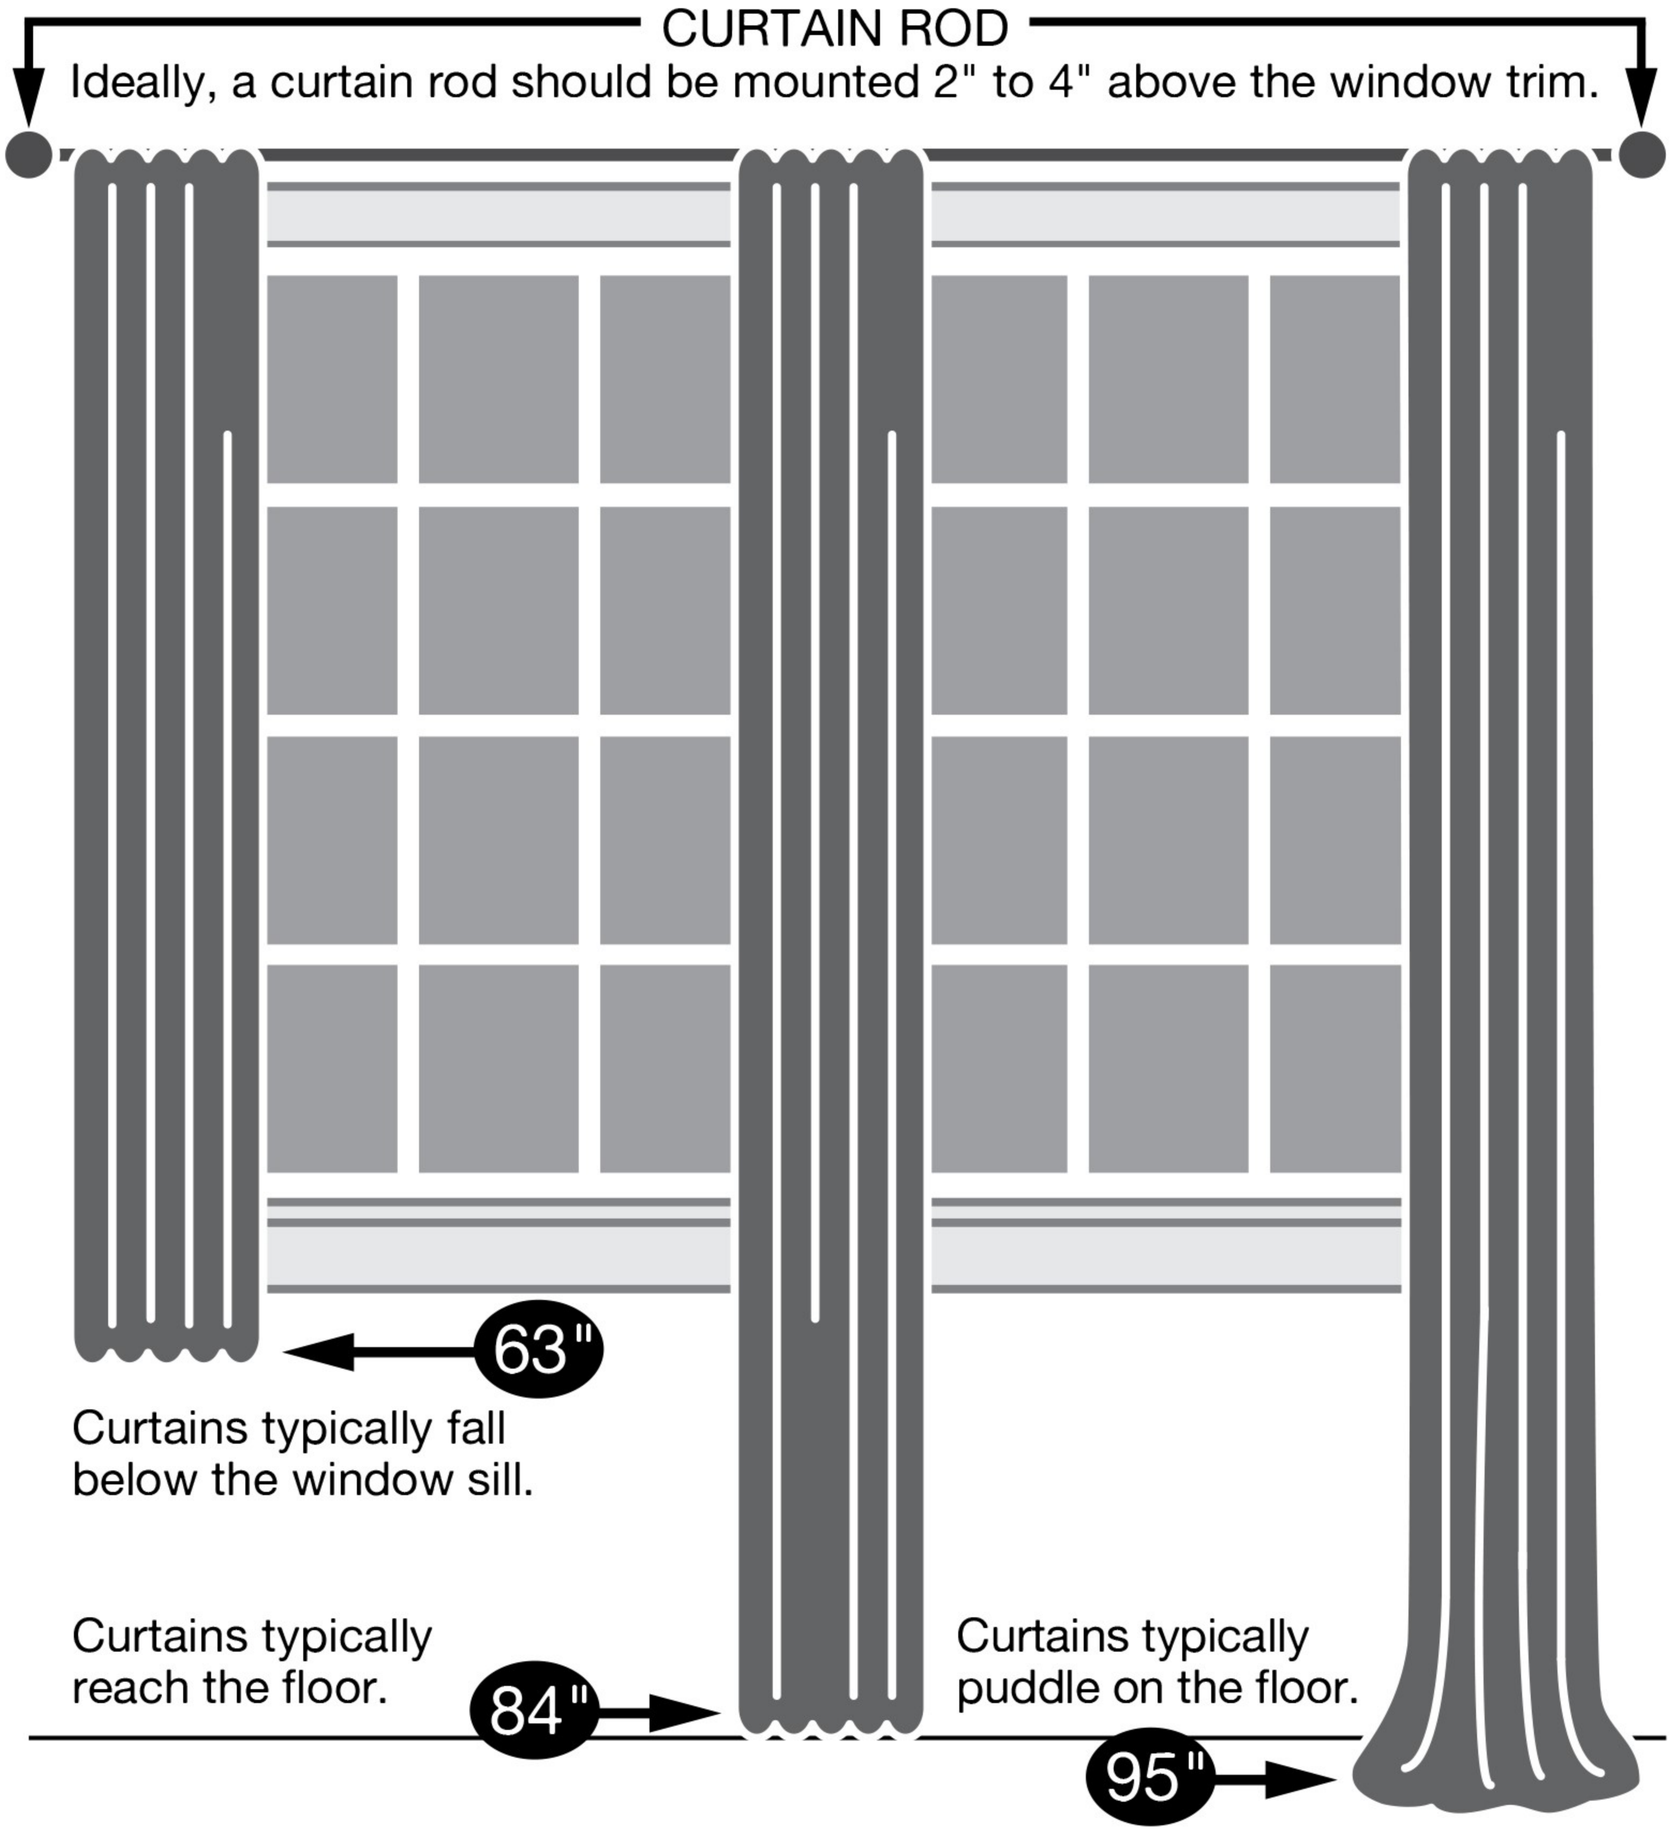

For proper fullness, fabric should measure approximately
2 to 3 times the width of your window.