


Assembly Instructions



Cabinet

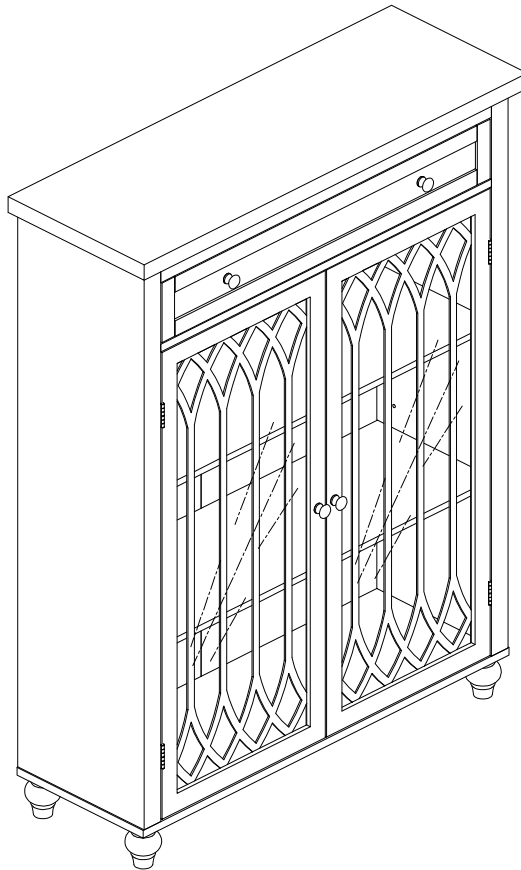

NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.

To use a cam lock: (Please read below instructions before assembling)

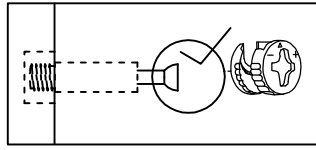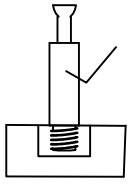

1. Insert cam screw into hole as shown in diagram A .

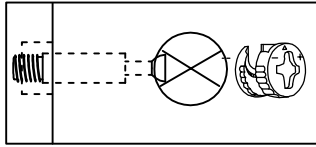
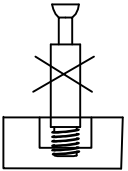


Diagram B

Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.




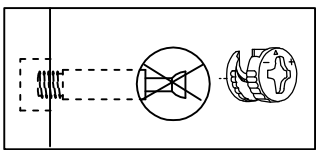


Diagram C

Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.

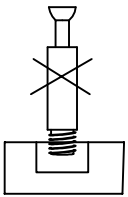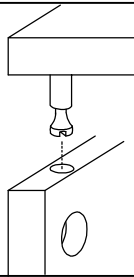


2. Connect the panels together.

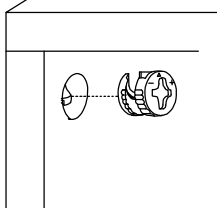

ARROW SIGN



3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.

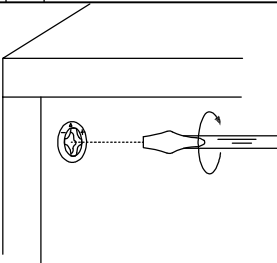



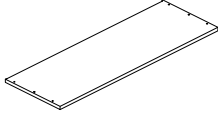
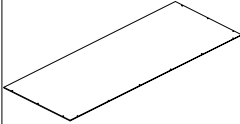
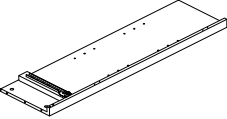

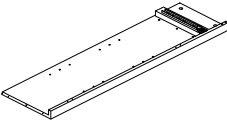
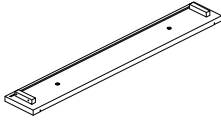
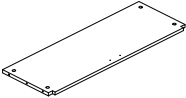
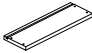
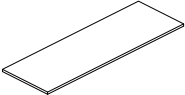
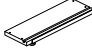
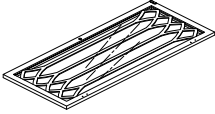
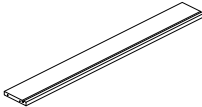
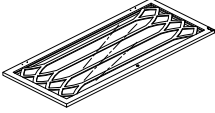
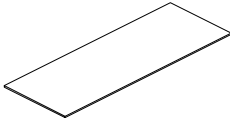
4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.

**NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.**



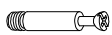





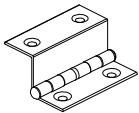

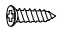

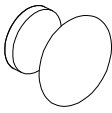
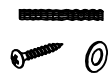
Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.









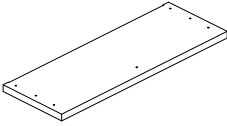
Part List

PART	FIGURE	DESCRIPTION	QTY	PART	FIGURE	DESCRIPTION	QTY
A		TOP PANEL	1PC	I		UPPER FRONT RAIL	1PC
B		BOTTOM PANEL	1PC	J		BACK PANEL	2PCS
C		LEFT SIDE PANEL	1PC	K		LEG	4PCS
D		RIGHT SIDE PANEL	1PC	L		DRAWER FRONT PANEL	1PC
E		MIDDLE SHELF	1PC	M		DRAWER LEFT SIDE PANEL	1PC
F		ADJUSTABLE SHELF	2PCS	N		DRAWER RIGHT SIDE PANEL	1PC
G		LEFT DOOR	1PC	O		DRAWER BACK PANEL	1PC
H		RIGHT DOOR	1PC	P		DRAWER BOTTOM PANEL	1PC

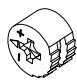HARDWARE LIST

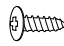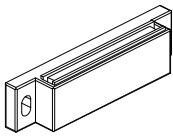PART	FIGURE	DESCRIPTION	QTY	PART	FIGURE	DESCRIPTION	QTY
1		CAM LOCK	8PCS	8		BOLT	4PCS
2		CAM BOLT	8PCS	9		SHELF SUPPORT	8PCS
3		WOOD DOWEL	11PCS	10		SCREW	28PCS
4		MAGNET	2PCS	11		SCREW	4PCS
5		HINGES	4PCS	12		SCREW	8PCS
6		SCREW	16PCS	13		ANCHOR WITH SCREW	1PC
7		KNOB	4PCS	14		ANTI-TIP KIT	1PC

APPENDIX: Dimension of Hardwares in this AI.

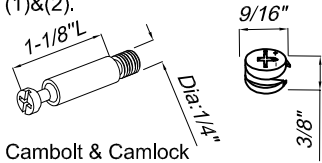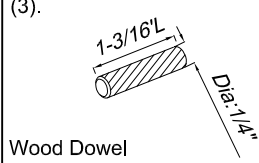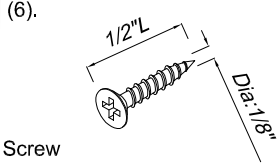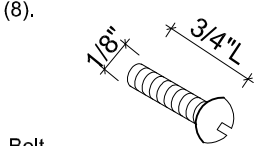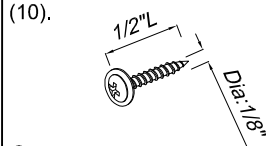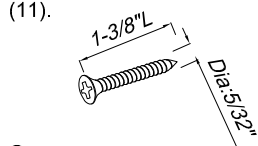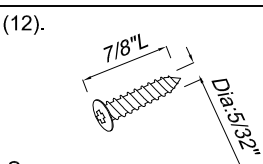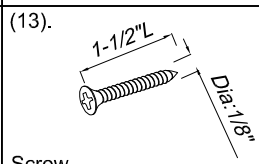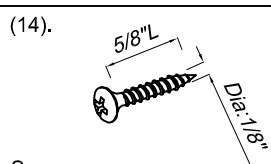
<p>(1)&(2).</p>  <p>Cambolt & Camlock</p>	<p>(3).</p>  <p>Wood Dowel</p>	<p>(6).</p>  <p>Screw</p>
<p>(8).</p>  <p>Bolt</p>	<p>(10).</p>  <p>Screw</p>	<p>(11).</p>  <p>Screw</p>
<p>(12).</p>  <p>Screw</p>	<p>(13).</p>  <p>Screw</p>	<p>(14).</p>  <p>Screw</p>

1



4 PCS

2




4 PCS

3




6 PCS

4

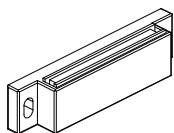

1 PC

5

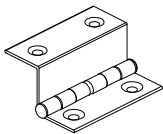


4 PCS

6





8 PCS

10




2 PCS

STEP 1

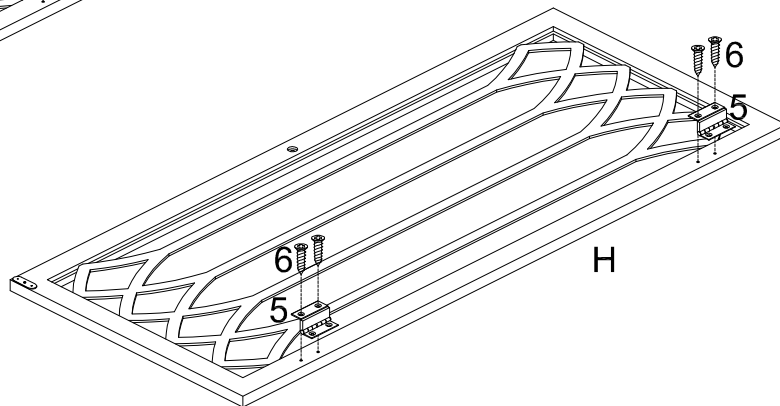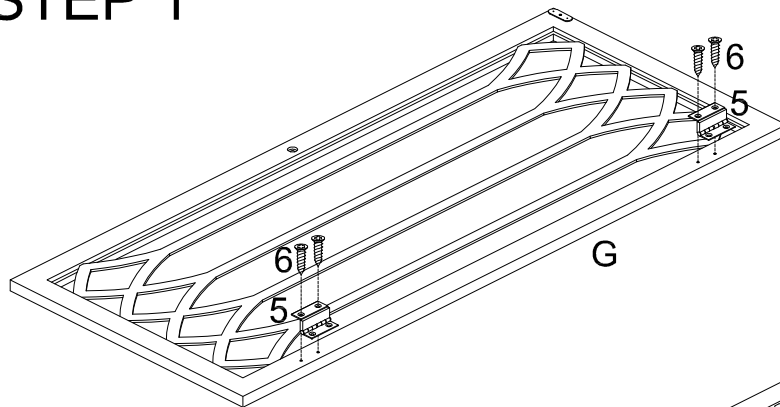

Attach Hinges (5) to Doors (G)&(H) using Screws (6).
Note:Holes are pre-drilled for Screws (6).

STEP 2

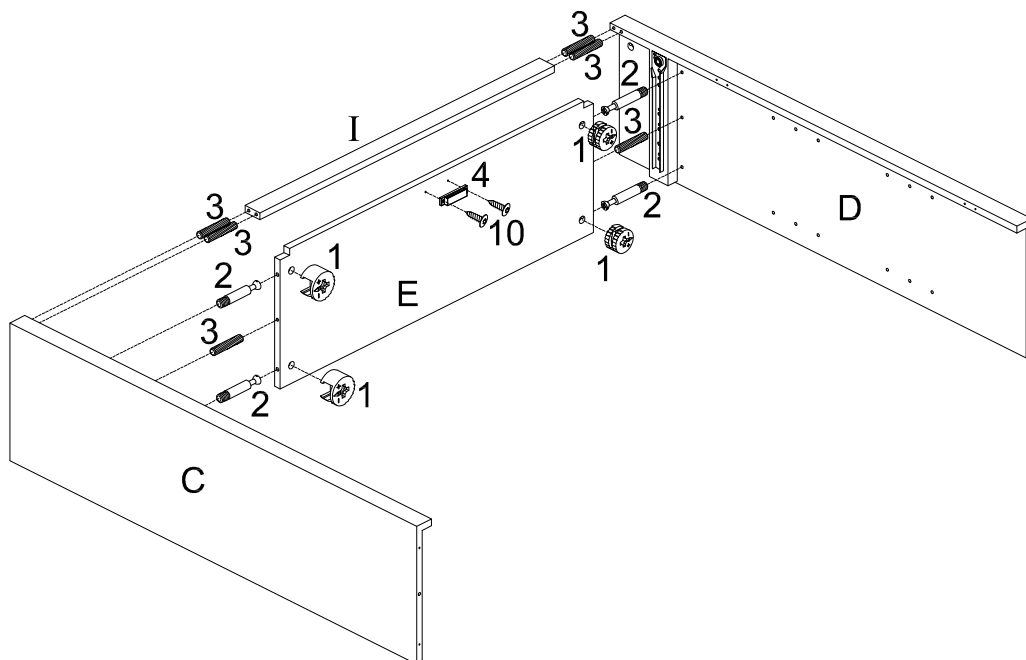

1)Assemble Middle Shelf (E) and Upper Front Rail (I) to Side Panels (C)&(D) using Camlocks (1),Cam-bolts (2) and Wood Dowels (3) as shown above.
2).Attach Magnet (4) to bottom of Middle Shelf (E) using Screws (10).
Note:Holes are pre-drilled for Screws (10).

1



4 PCS

2



4 PCS

3




5 PCS

11




4 PCS

STEP 3

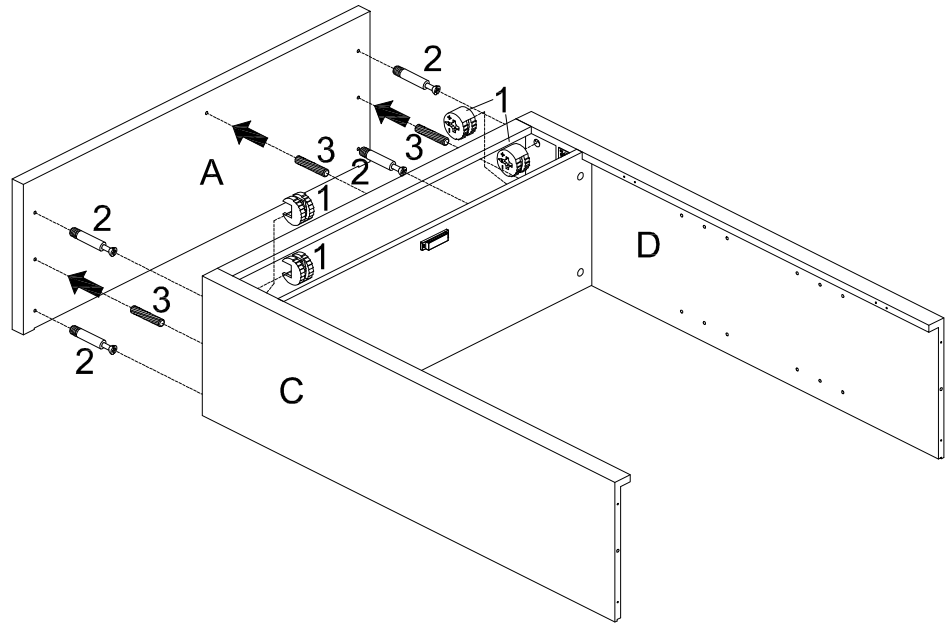

Assemble Top Panel (A) to Side Panels (C)&(D) and Upper Front Rail (I) using Camlocks (1), Cam-bolts (2) and Wood Dowels (3).


STEP 4

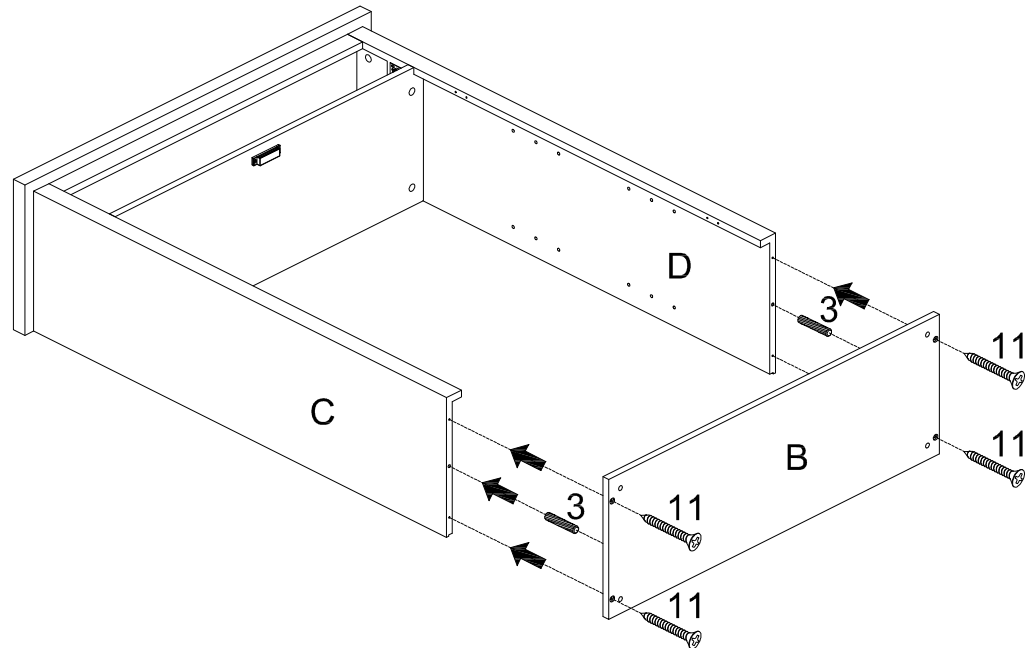

Assemble Bottom Panel (B) to Side Panels (C)&(D) using Wood Dowels (3) and Screws (11).


Note: Holes are pre-drilled for Screws (11).

10




24 PCS

STEP 5

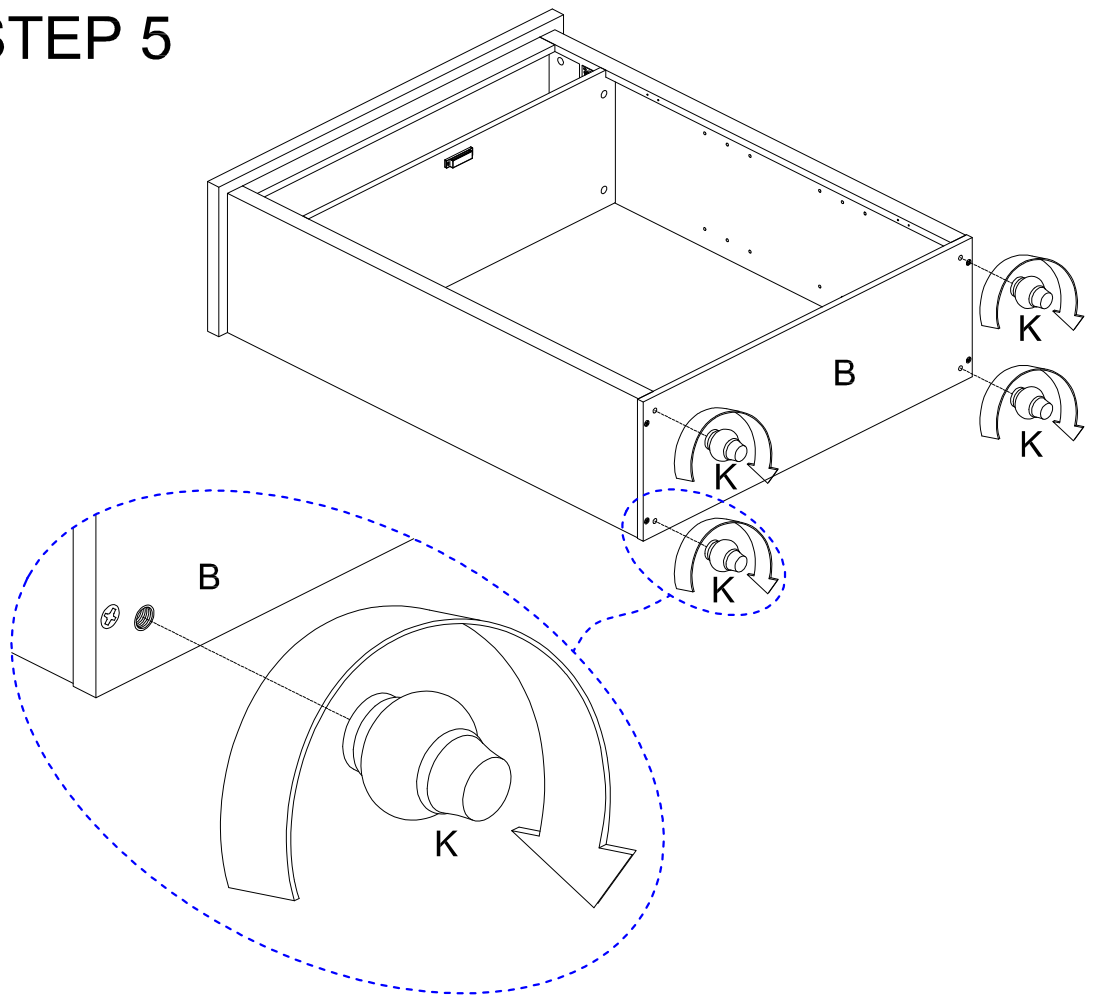


Screw Legs (K) to the bottom of Bottom Panel (B).

STEP 6

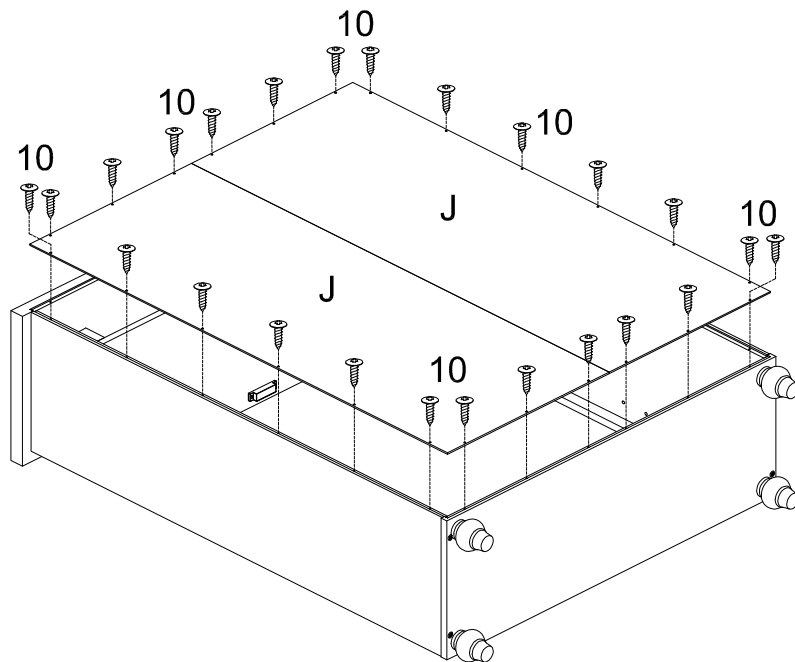


Assemble Back Panels (J) to the back of this unit using Screws (10).
Note: Holes are pre-drilled for Screws (10).

6



8 PCS

7

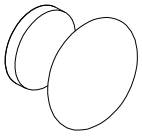

2 PCS

8




2 PCS

9




8 PCS

4

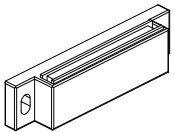


1 PC

10




2 PCS

STEP 7

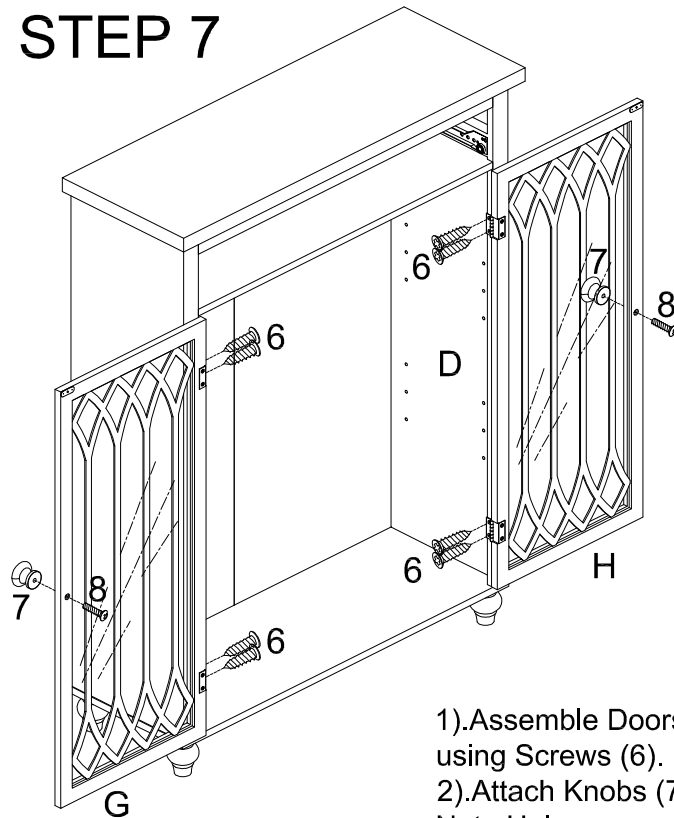


- 1). Assemble Doors (G)&(H) to Side Panels (C)&(D) using Screws (6).
 - 2). Attach Knobs (7) to Doors (G)&(H) using Bolts (8).
- Note: Holes are pre-drilled for Screws (6).

STEP 8

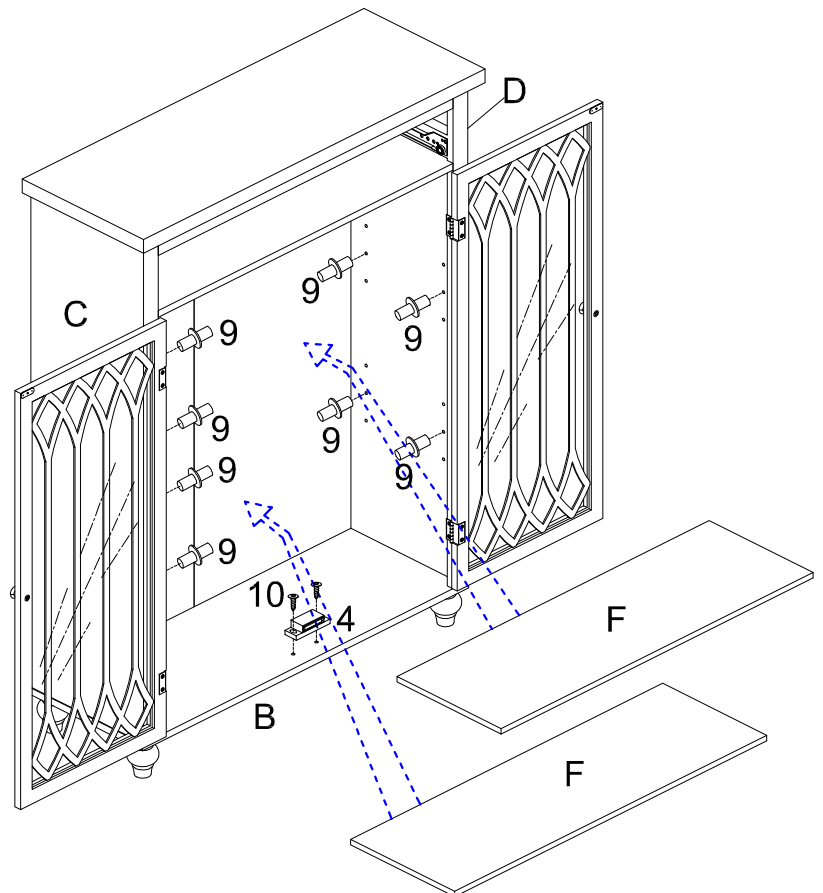

- 1). Attach Magnet (4) to Bottom Panel (B) using Screws (10).
 - 2). Insert Shelf Supports (9) into the holes of Side Panels (C)&(D), then put Adjustable Shelves (F) onto Shelf Supports (9).
- Note: Holes are pre-drilled for Screws (10).

7

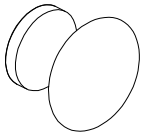


2 PCS

8




2 PCS

12




8 PCS

STEP 9

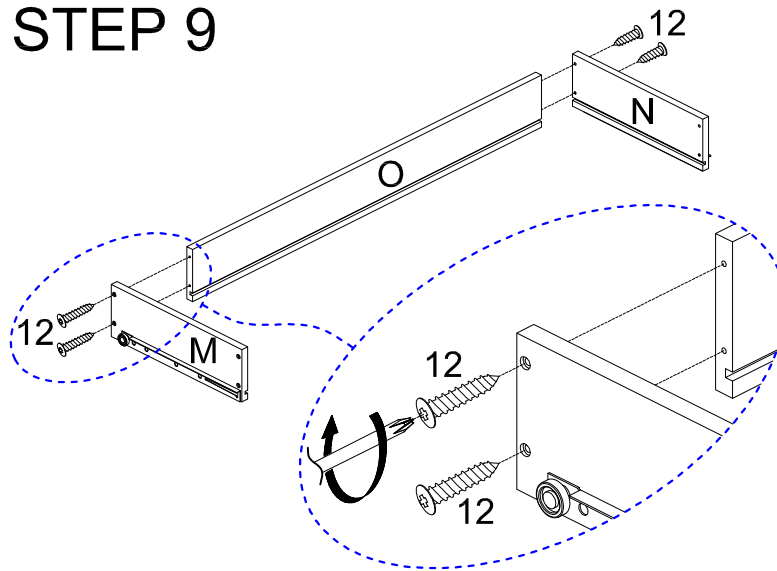


Assemble Drawer Side Panels (M)&(N) to Drawer Back Panel (O) using Screws (12).

STEP 10

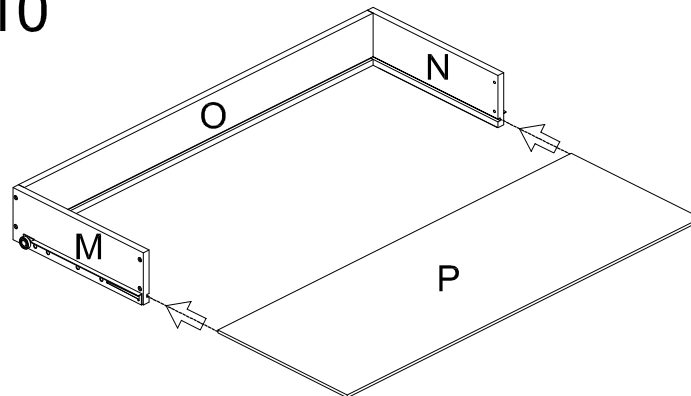


Insert Drawer Bottom Panel (P) into the grooves on Drawer Side Panels (M)&(N).

STEP 11

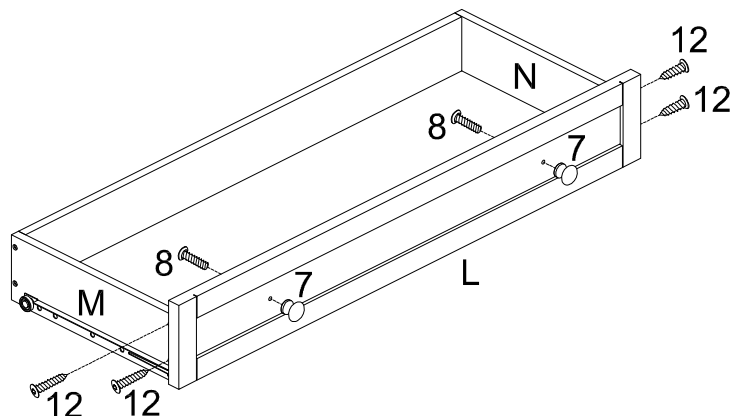


Assemble Drawer Front Panel (L) to Drawer Side Panels (M)&(N) using Screws (12), then attach Knobs (7) to Drawer Front Panel (L) using Bolts (8).

13

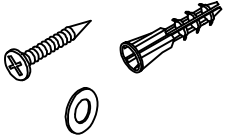


1 PC

14




1 PC

STEP 12

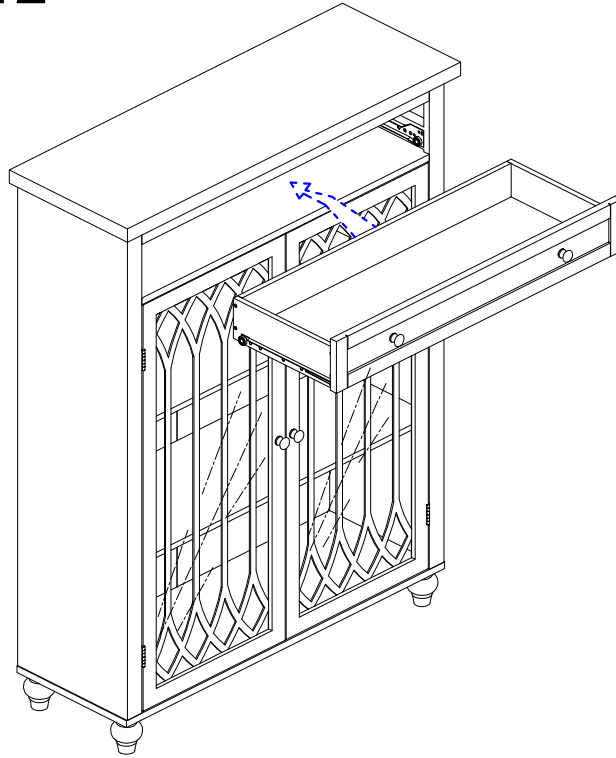

Insert the drawer to this unit as shown above.

STEP 13

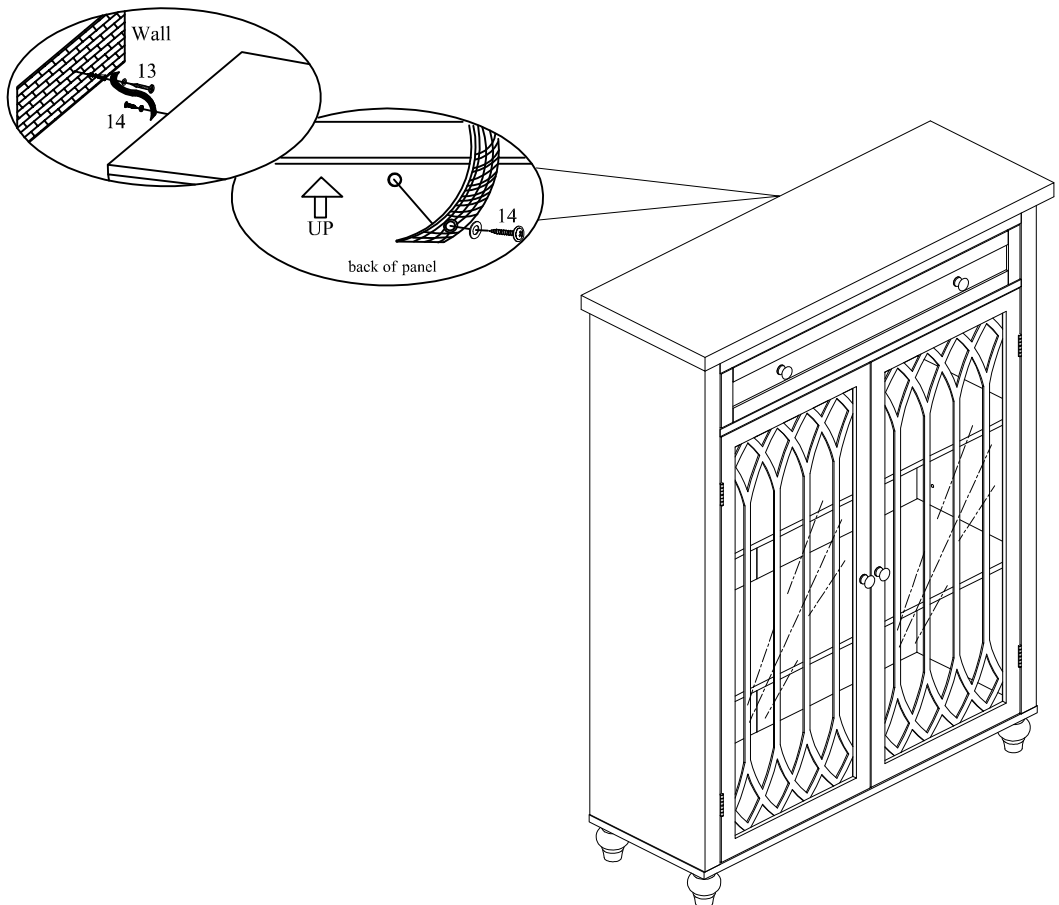

Attach the nylon strap of Anti-tip Kit (14) to the back side of Top Panel (A) through Back Panel (J), then attach another end of nylon strap of Anti-tip Kit (14) to the wall using Anchor and Screw (13) as shown above.