


ASSEMBLY INSTRUCTIONS

VD01 Desk

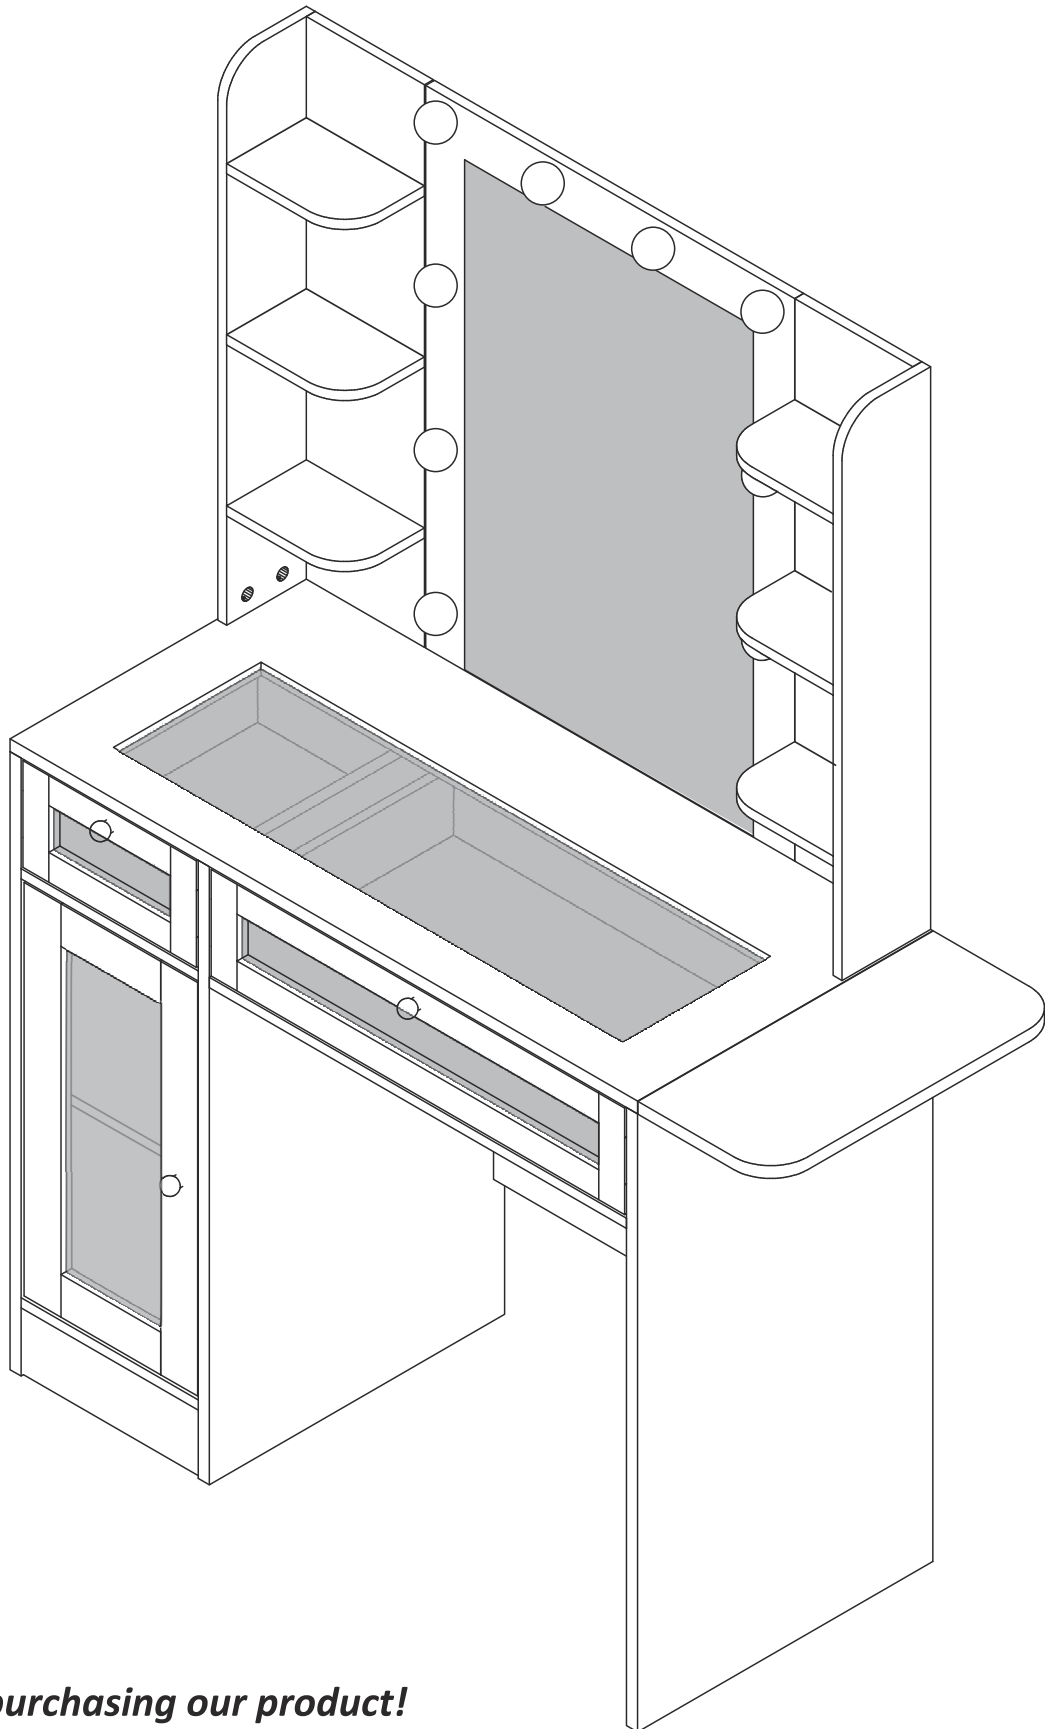

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product.

Contact our customer service department in case there are any missing or damaged parts or hardware. Please also tell us your "Order ID", We will solve for you as soon as possible.

EMAIL: support-cs@hkfoam.com

ASSEMBLY PREPARATION:

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List and ensure they are correct before assembly. Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.

SAFETY PRECAUTION:

1. Keep all hardware parts out of reach of children.
2. Dispose plastic packaging material immediately to avoid any risk of suffocation to children and animals..

TIPS FOR ASSEMBLY:


1. Allow ample room for assembly and in close proximity to where product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE:

- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.










Part List

Please check if all the pieces listed below are received

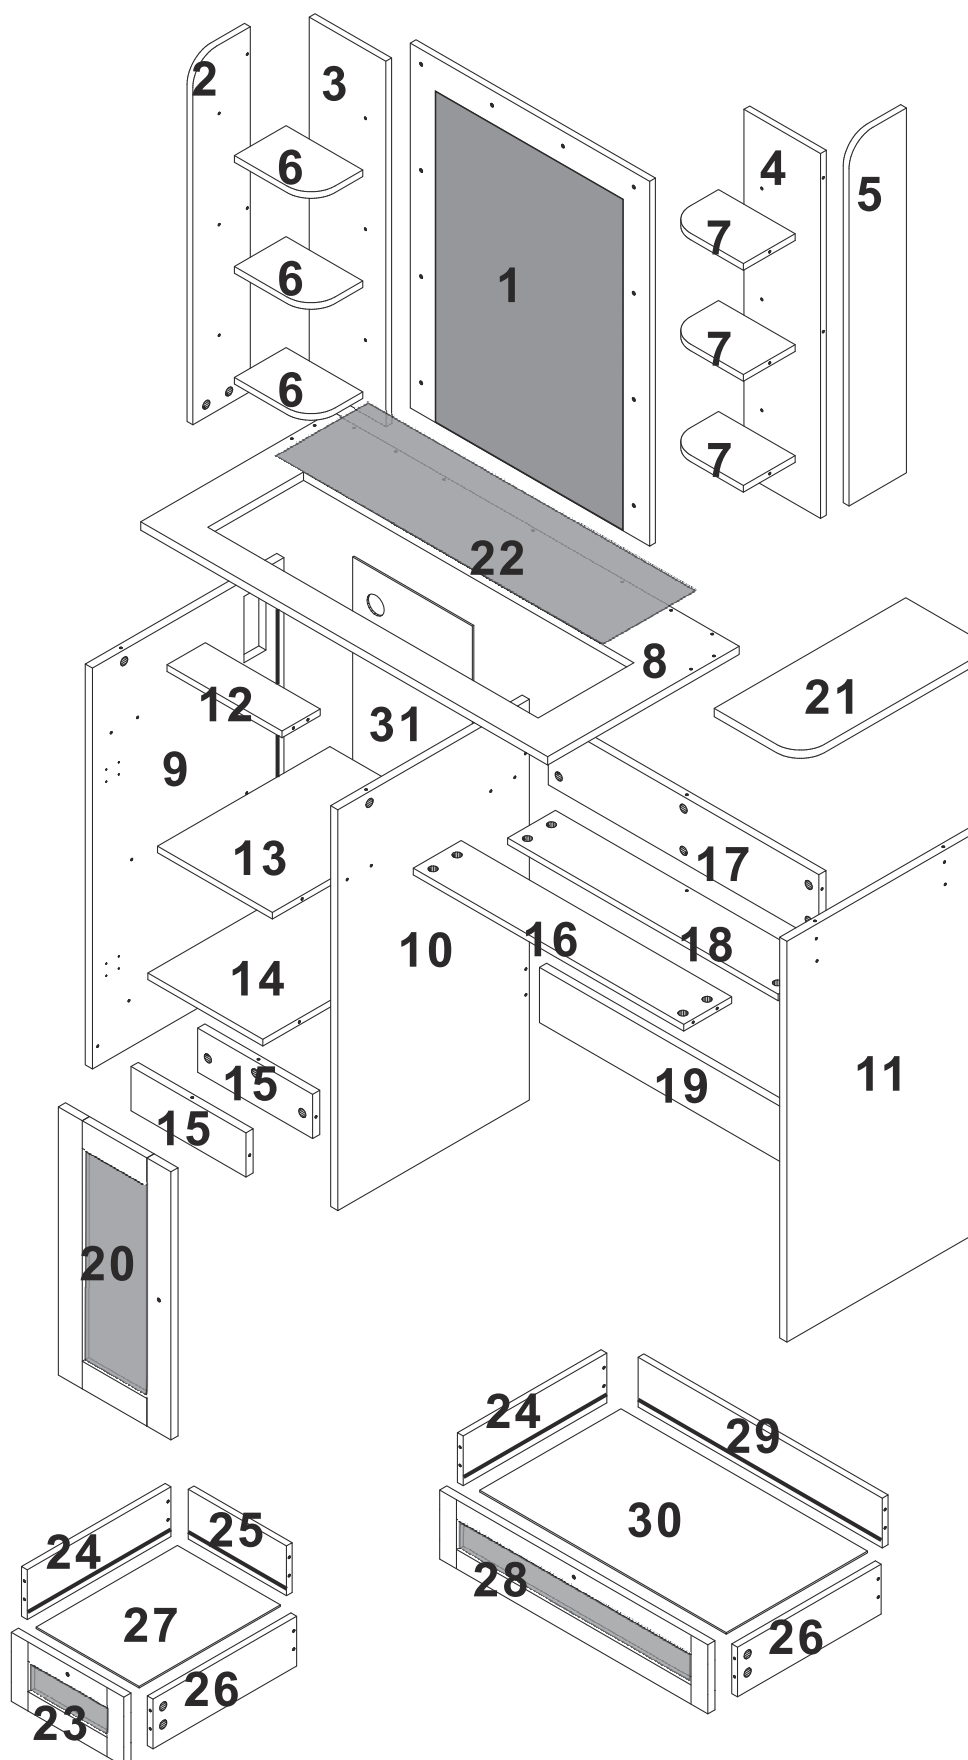

Hardware List

Please check if all the pieces listed below are received

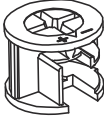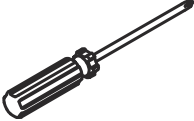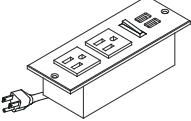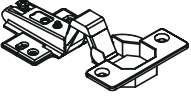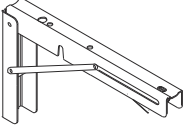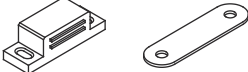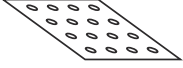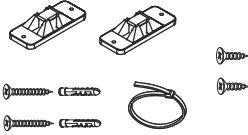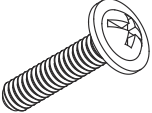A X71  Cam bolt M6X40mm	B X71  Cam lock M15X12mm	C X14  Screw M5X40mm	D X4  Drawer slide 12 inches	E X50  Screw M3.5X12mm
F X3  Drawer handle	G X3  Screw M4X16mm	H X1  Screwdriver	J X1  Power strip	K X2  Hinge
L X2  Folding bracket	M X1  Door stopper	N X8  Plastic wedge	P X10  Screw M3X15mm	Q X1  Light bulb
R X6  Metal plate	S X4  Light strip clip	T X1  Light strip and remote control	U X1  Screw hole cover	V X1  Anti-tip accessory
W X4  Screw M6X12mm				

**ASSEMBLY
REQUIREMENTS**

2 Hours
Assembly Time
(Approximate)

2 -Person Assembly



Tools Required (Not Provided):


Flat Head Screwdriver




Mark Pencil




Power Drill







HOW the knock down assembly system work

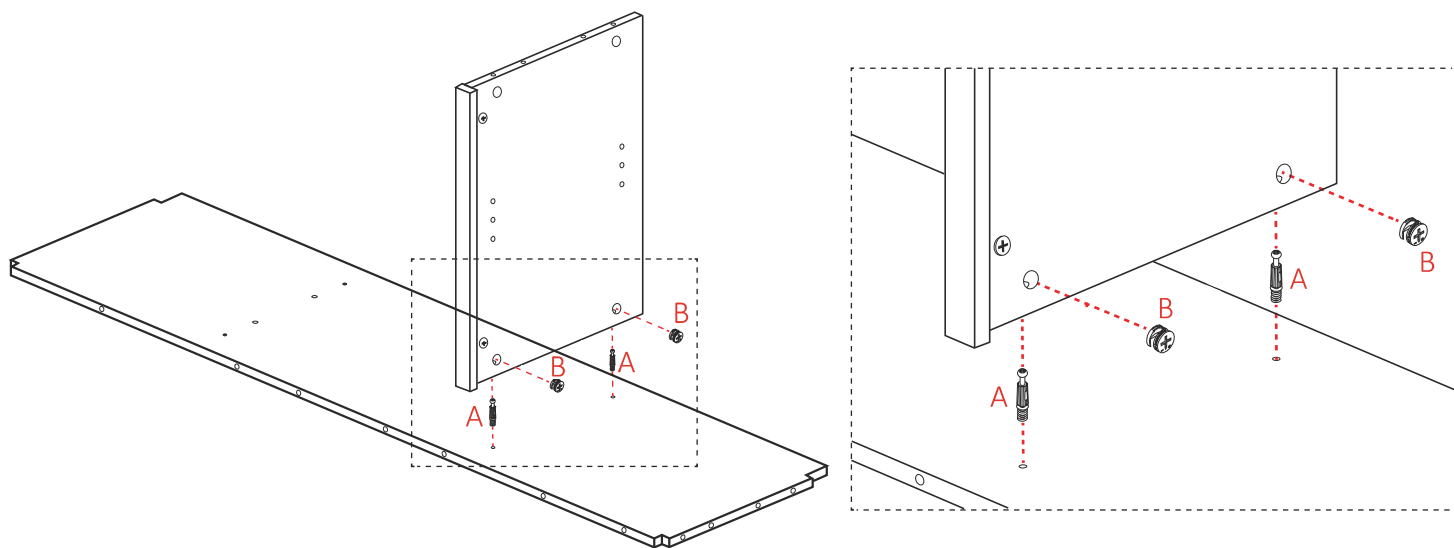


CAM LOCK SYSTEM OPERATION

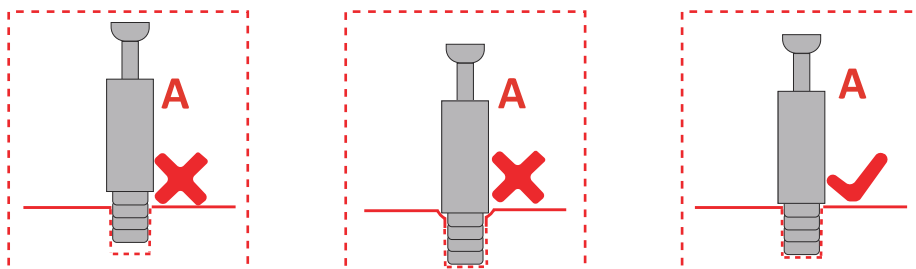


1. Screw the cam bolt [A] into the threaded insert on the panel.
2. Connect both panels together making sure cam bolt[A] goes into the pre-drilled large hole on the end of panel for cam lock[B].
3. Insert the cam lock[B] into the pro-drilled large hole on the panel. Make sure the cross slot of cam lock [B] faces out (The arrow should point towards Screw No. A).
4. Rotate the cam lock [B] clockwise with a self-supplied phillips screwdriver to lock the cam bolt [A] in place (Rotate 100-180 degrees until tight).

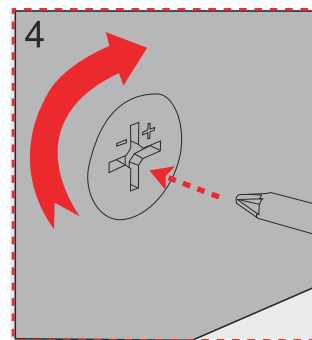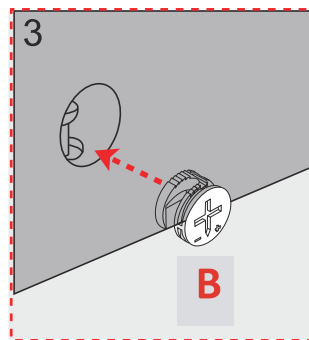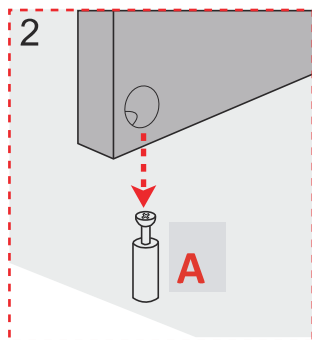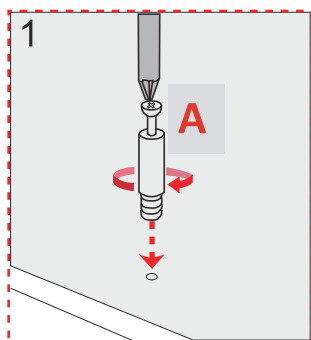


Before installing the drawer rail, you need to separate the D1 and D2 first.

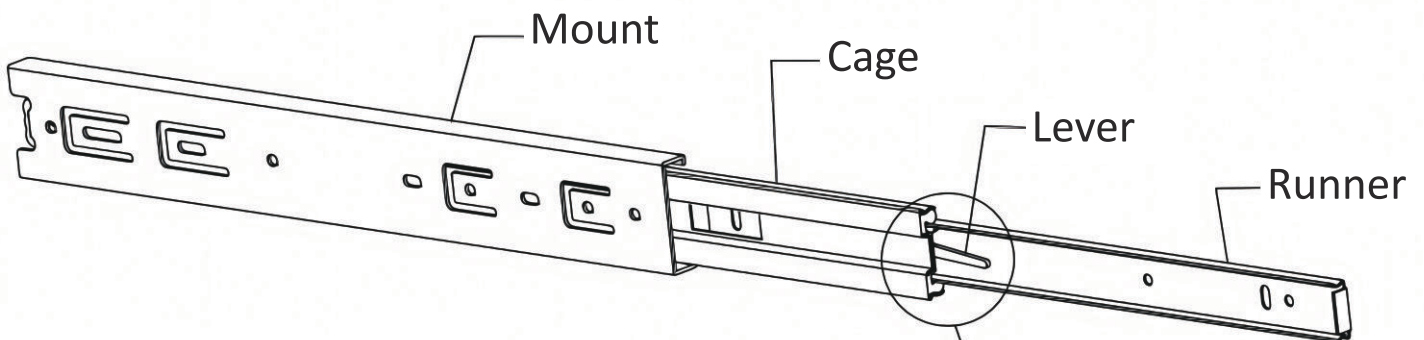


STEP 1: Extend Slider

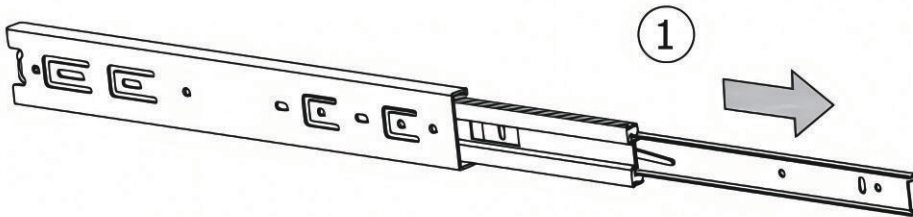

STEP 2: Push Lever Up


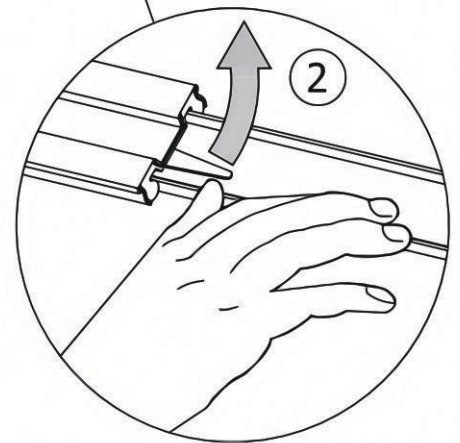


STEP 3: Remove Runner

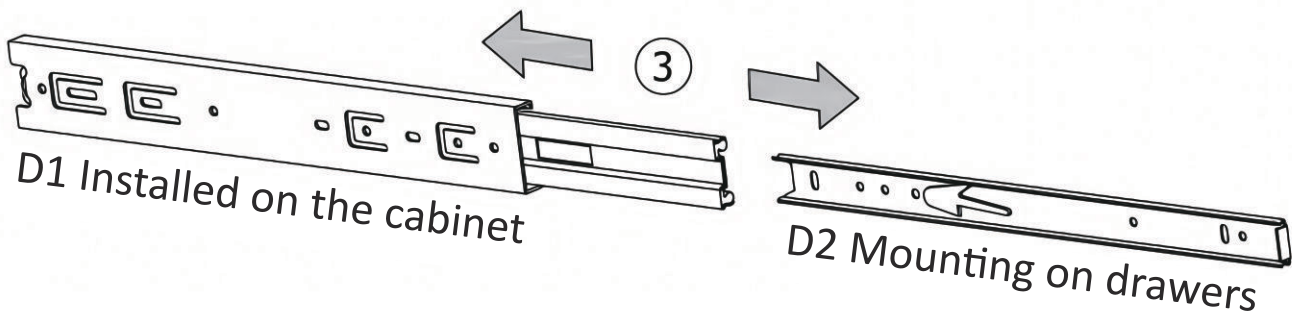


Step 1

I. Use screws (C) to attach panels (24 and 26) to panel (25).

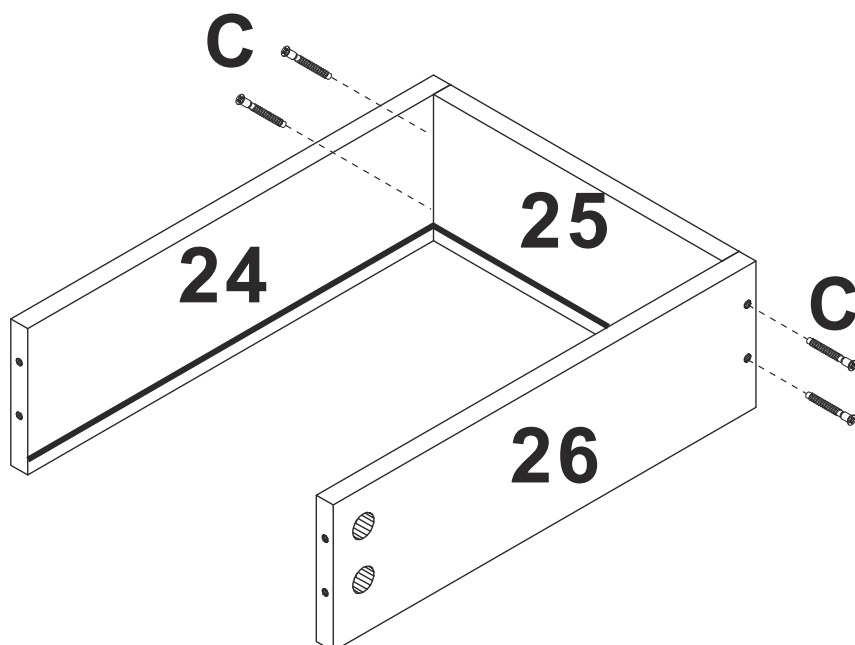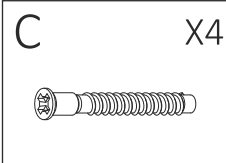

Step 2


I. Install panel (27) as per diagram and slide them into the grooves until they are fully seated.

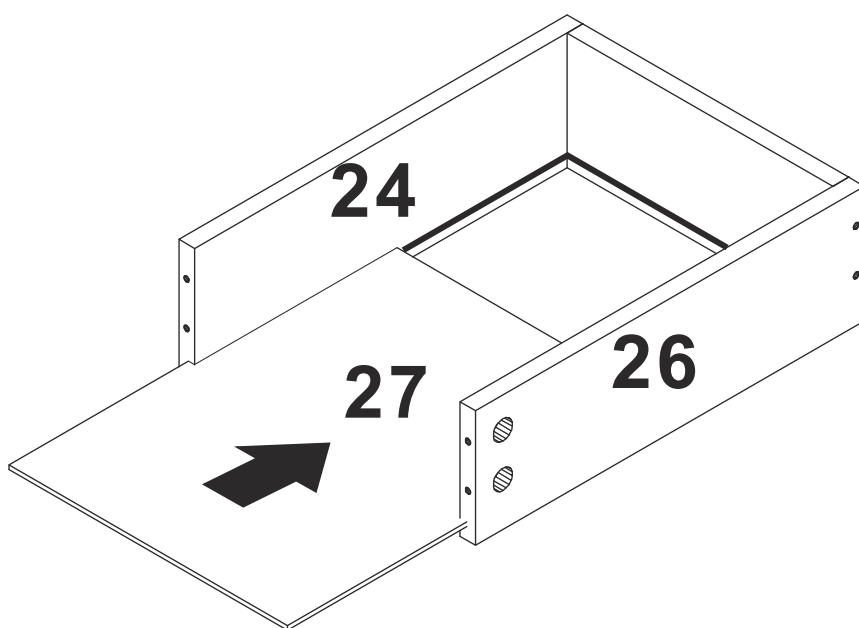

Step 3

I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding hole on panel (23).


II. Use screws (G) to attach the drawer handle (F) to panel (23).

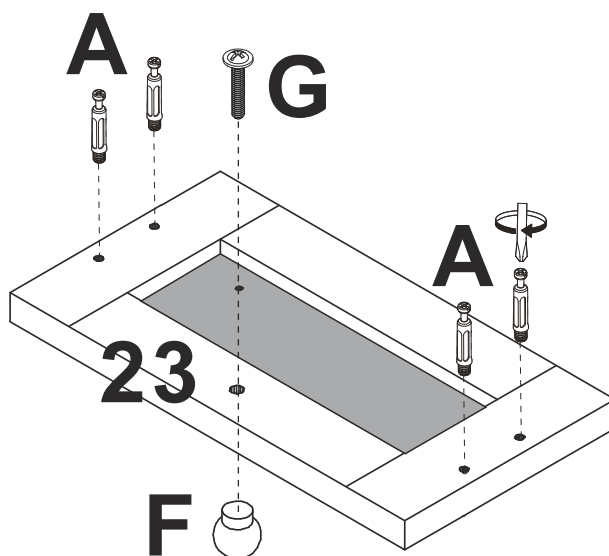

A	X4
	
F	X1
	
G	X1
	

Step 4


I. As shown in the illustration, connect panel (23) to panels (24 and 26), insert the cam lock (B) into the corresponding holes on panels (24 and 26), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

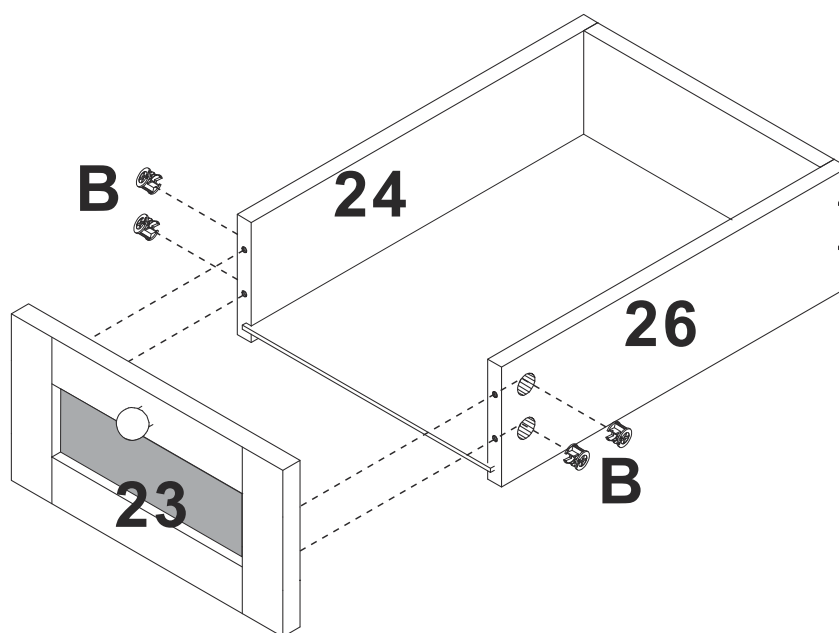


B	X4
	

Step 5

I. Use screws (E) to attach the slide rail (D2) to panels (24 and 26).


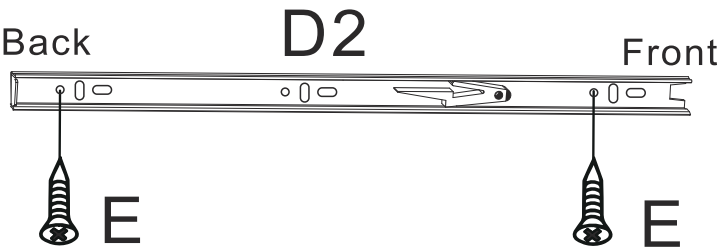


D2	X2
	
E	X4
	

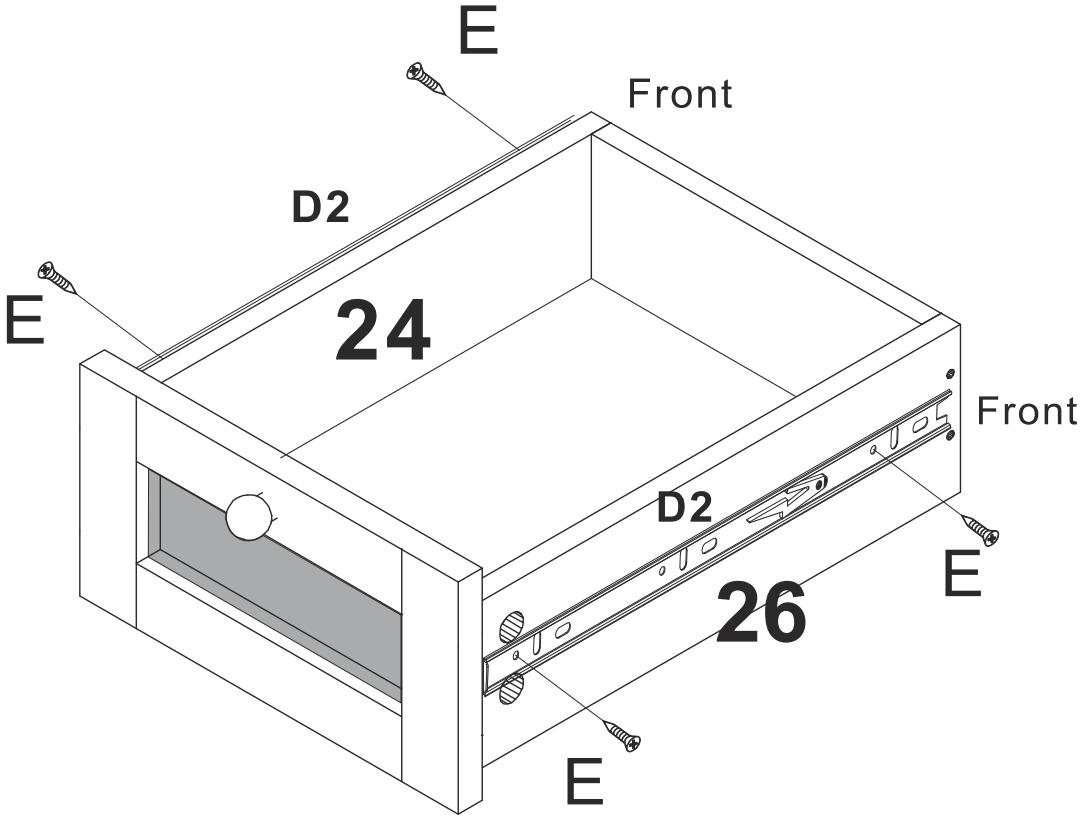


Step 6

I. Use screws (C) to attach panels (24 and 26) to panel (29).

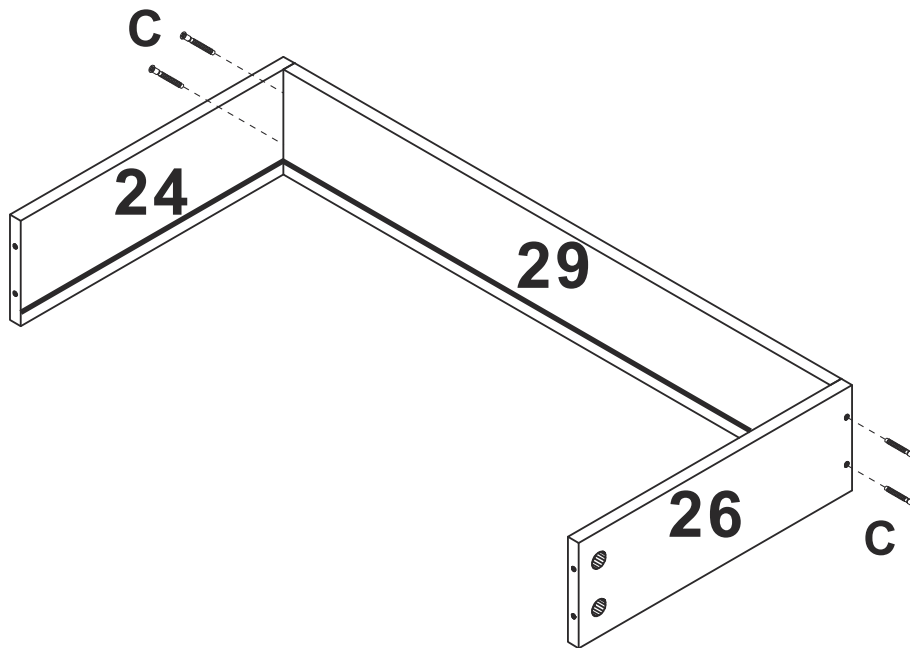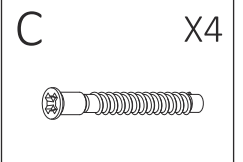

Step 7



I. Install panel (30) as per diagram and slide them into the grooves until they are fully seated.

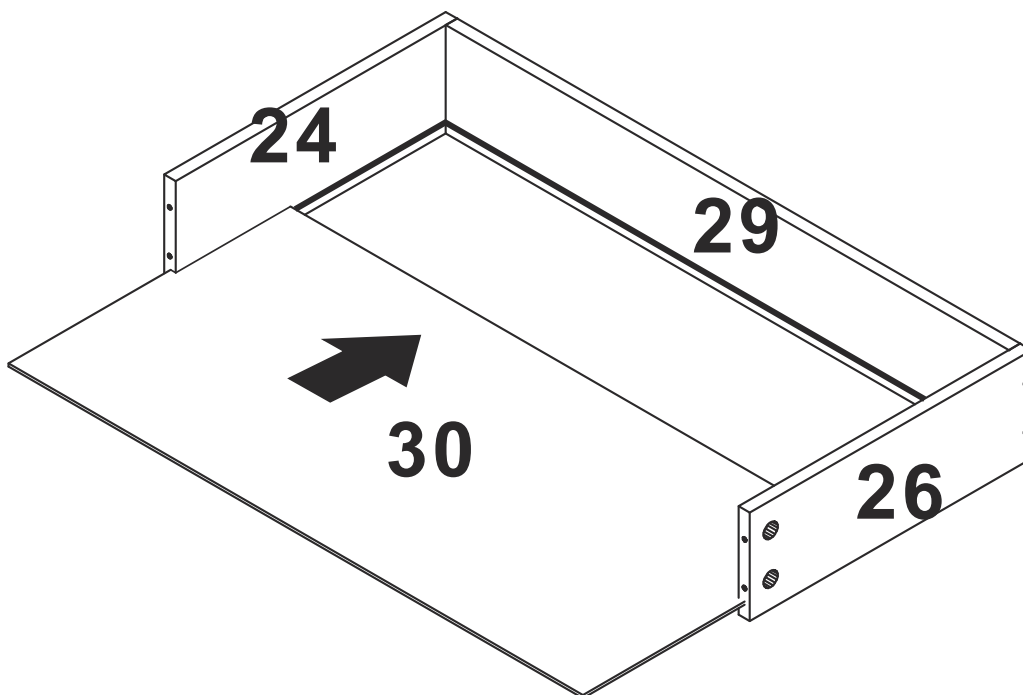

Step 8



I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding hole on panel (28).

II. Use screws (G) to attach the drawer handle (F) to panel (28).

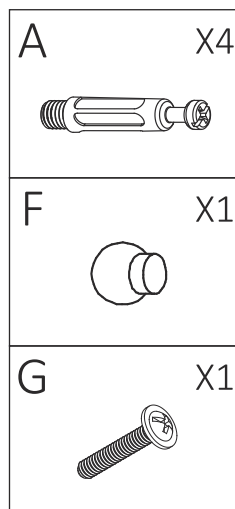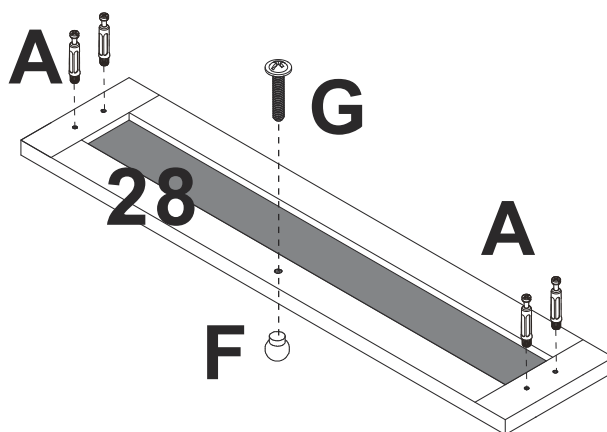


Step 9

I. As shown in the illustration, connect panel (28) to panels (24 and 26), insert the cam lock (B) into the corresponding holes on panels (24 and 26), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

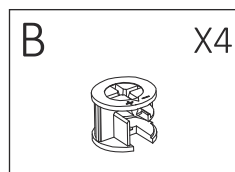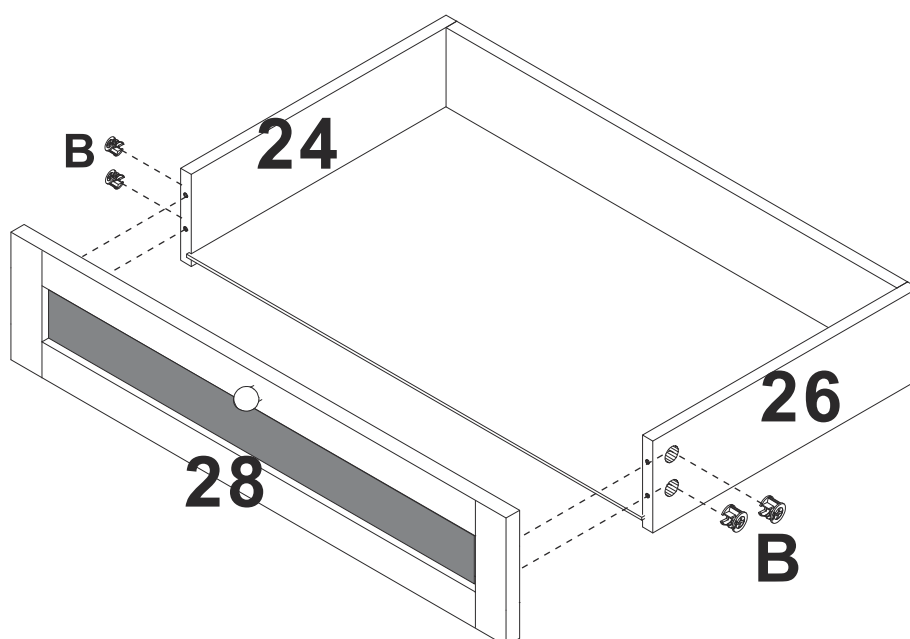


Step 10

I. Use screws (E) to attach the slide rail (D2) to panels (24 and 26).

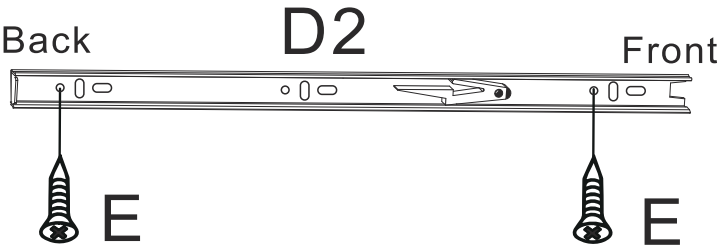


D2	X2
	
E	X4
	

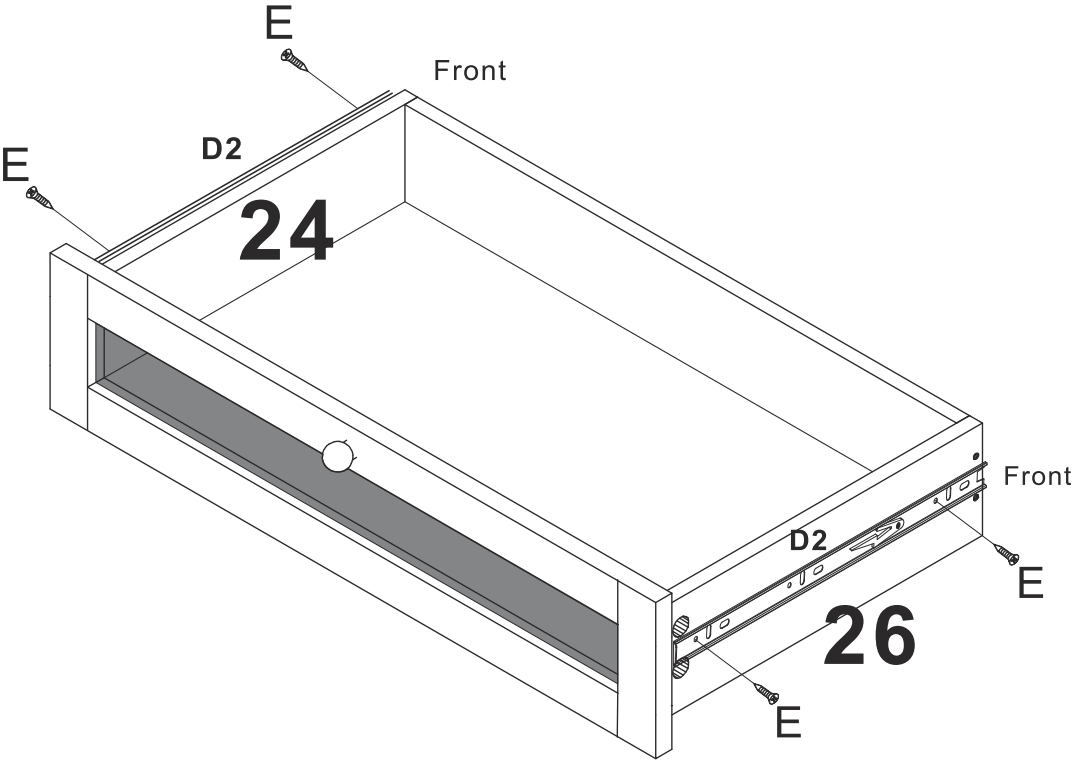



Step 11

I. Use screws (E) to attach the slide rail (D1) to panels (9, 10, and 11).

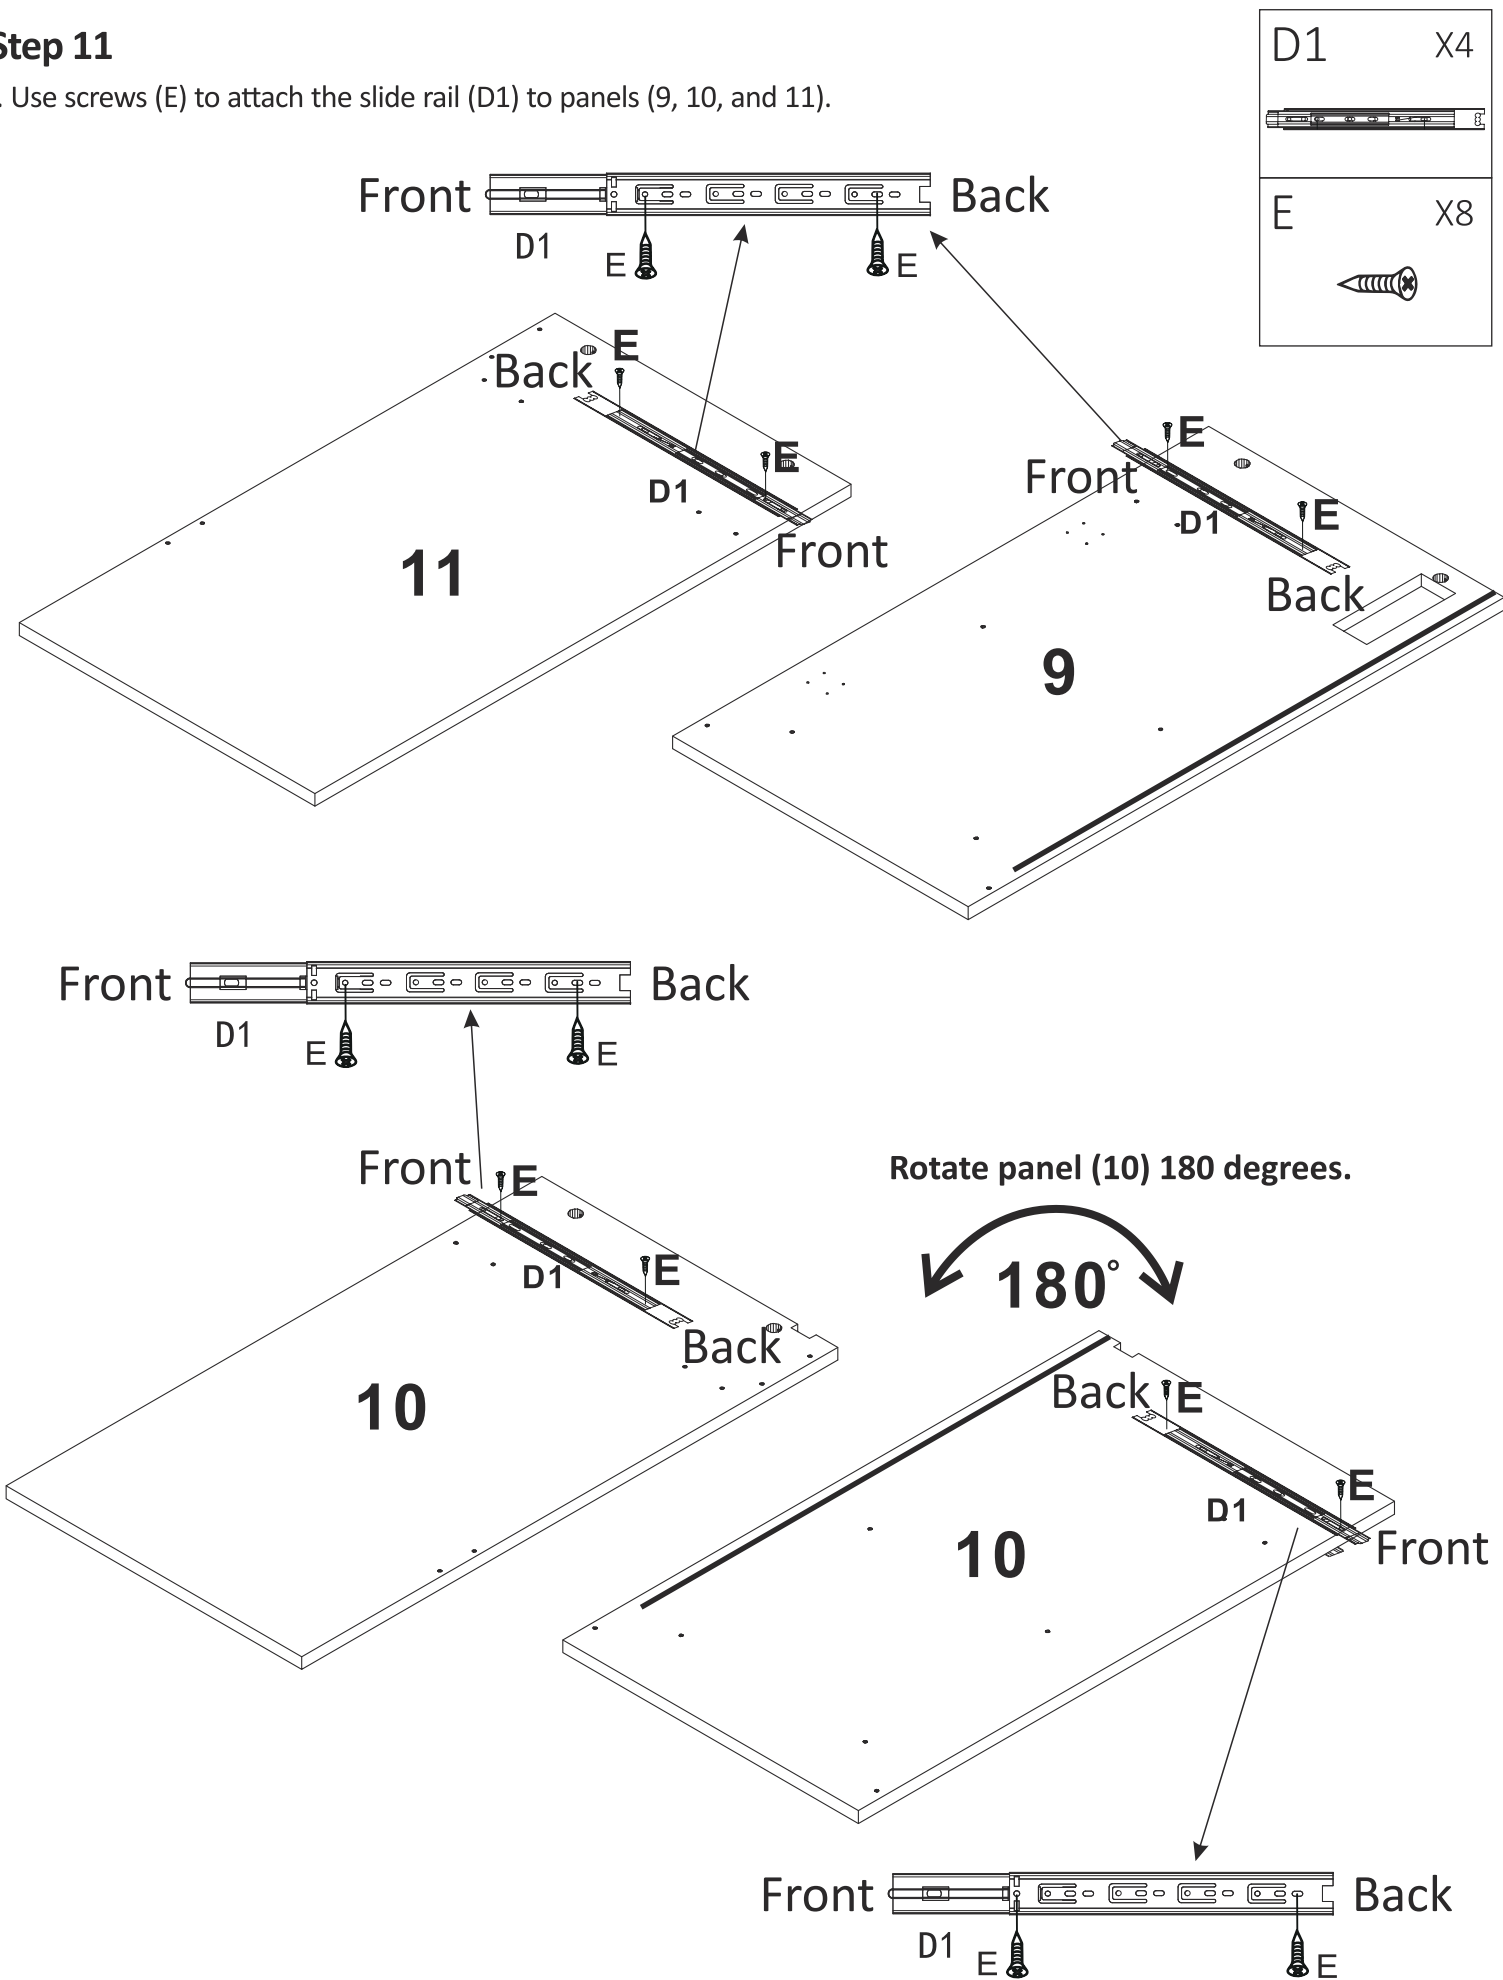



Step 12

I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panels (9, 10, and 11).

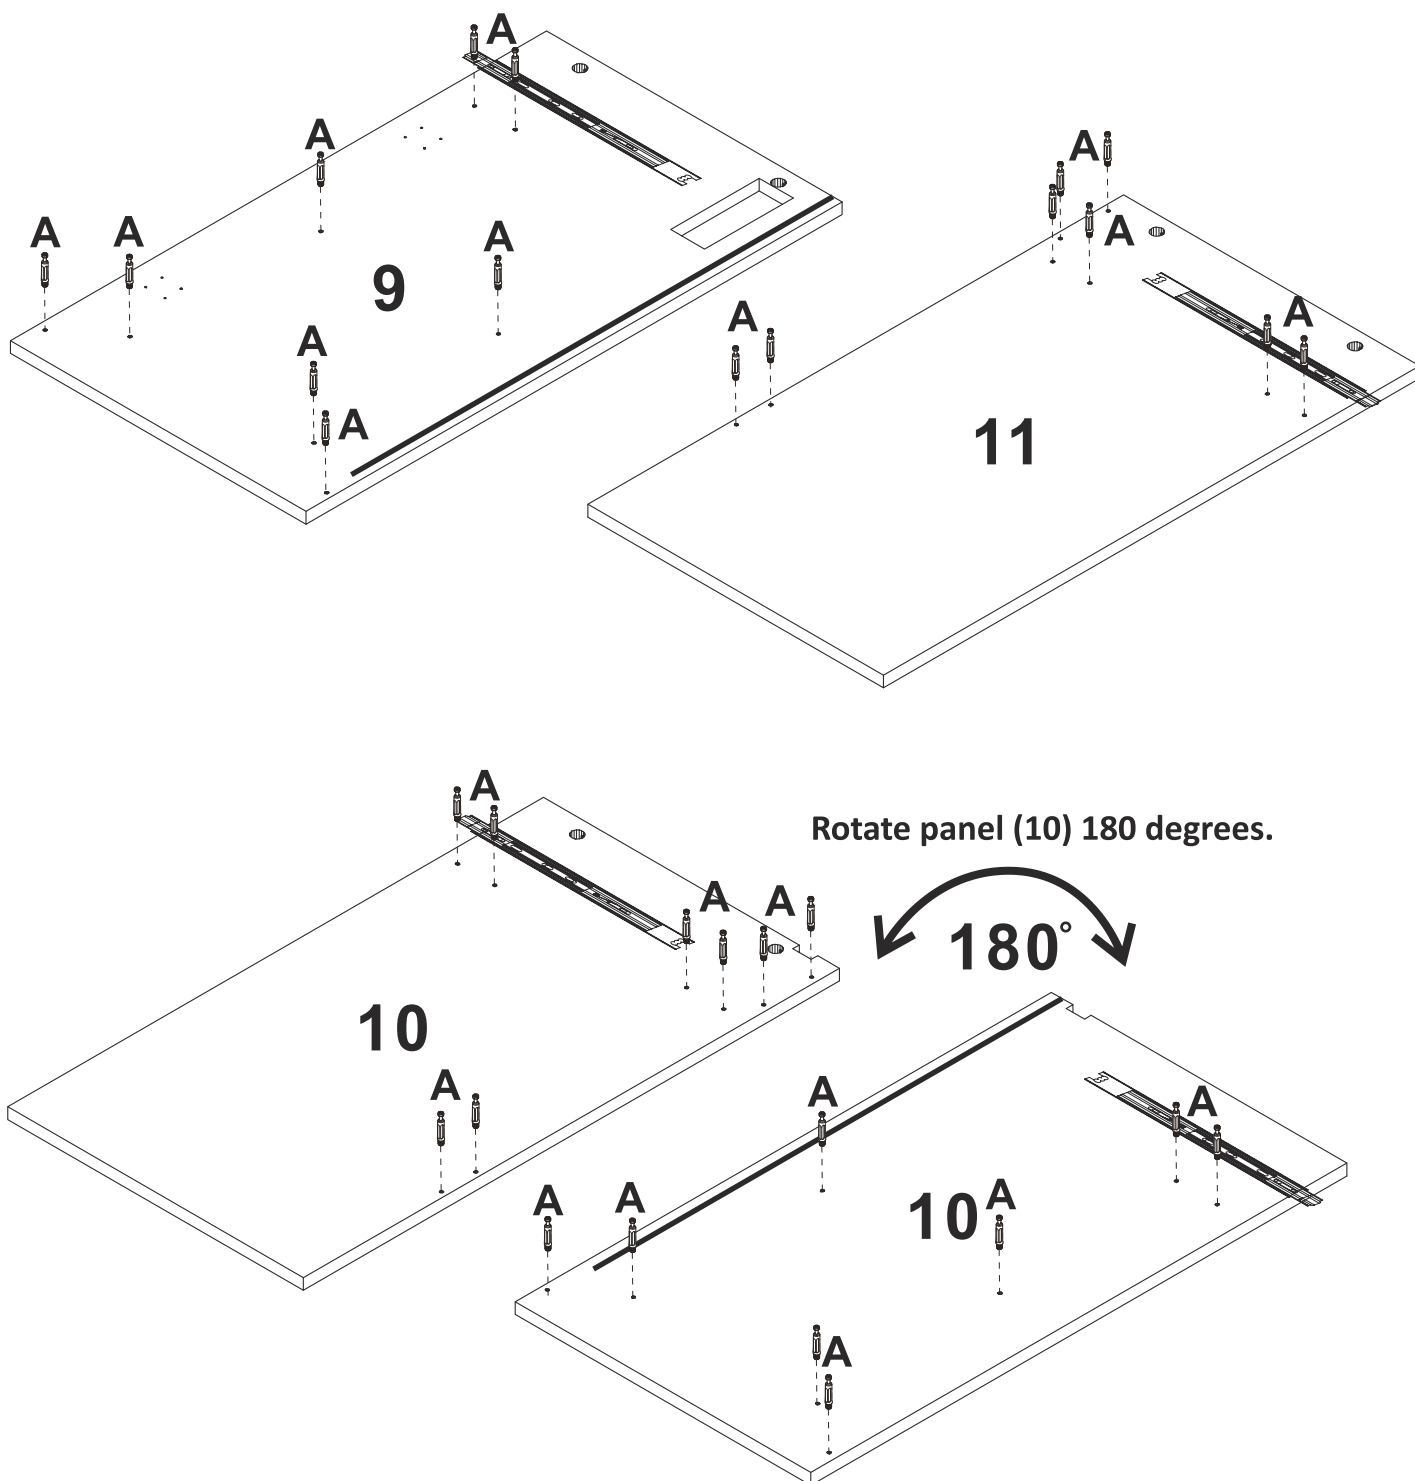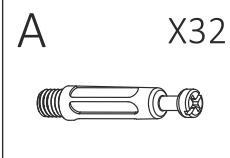



Step 13

I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panel (14).

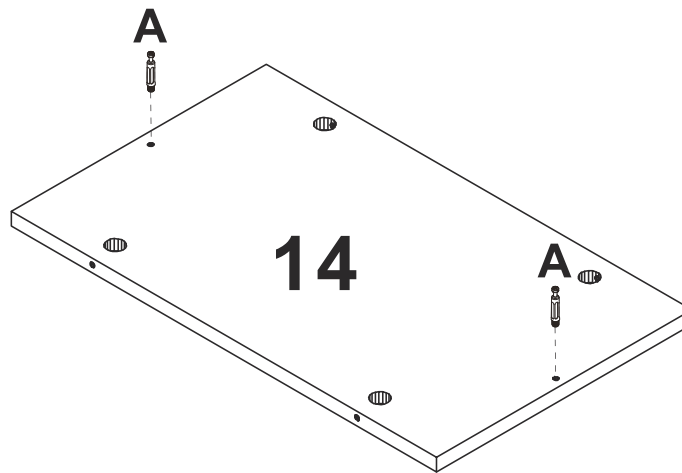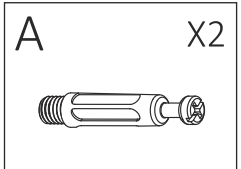

Step 14


I. As shown in the illustration, connect panels (15 and 15) to panel (14), insert the cam lock (B) into the corresponding holes on panels (15 and 15), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

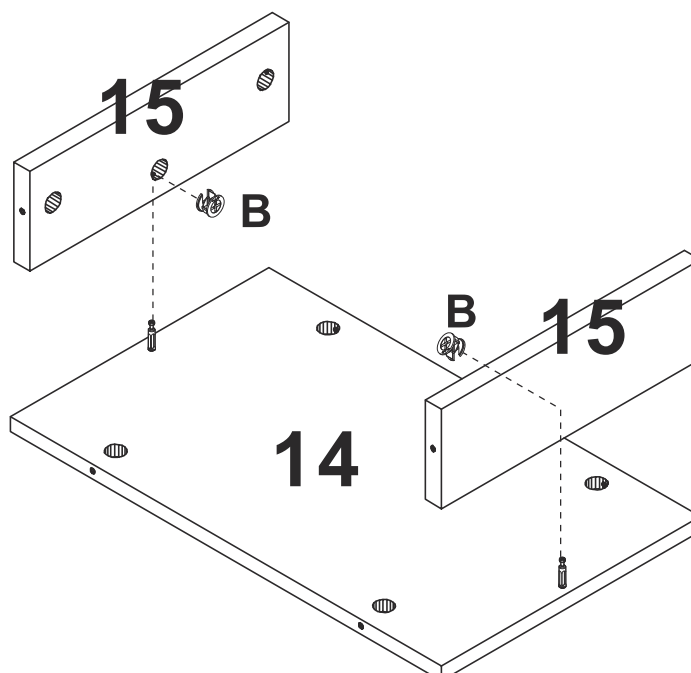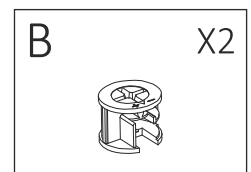

Step 15

I. Use screws (P) to attach the door stopper (M) to panel (12).



M	X1
P	X2

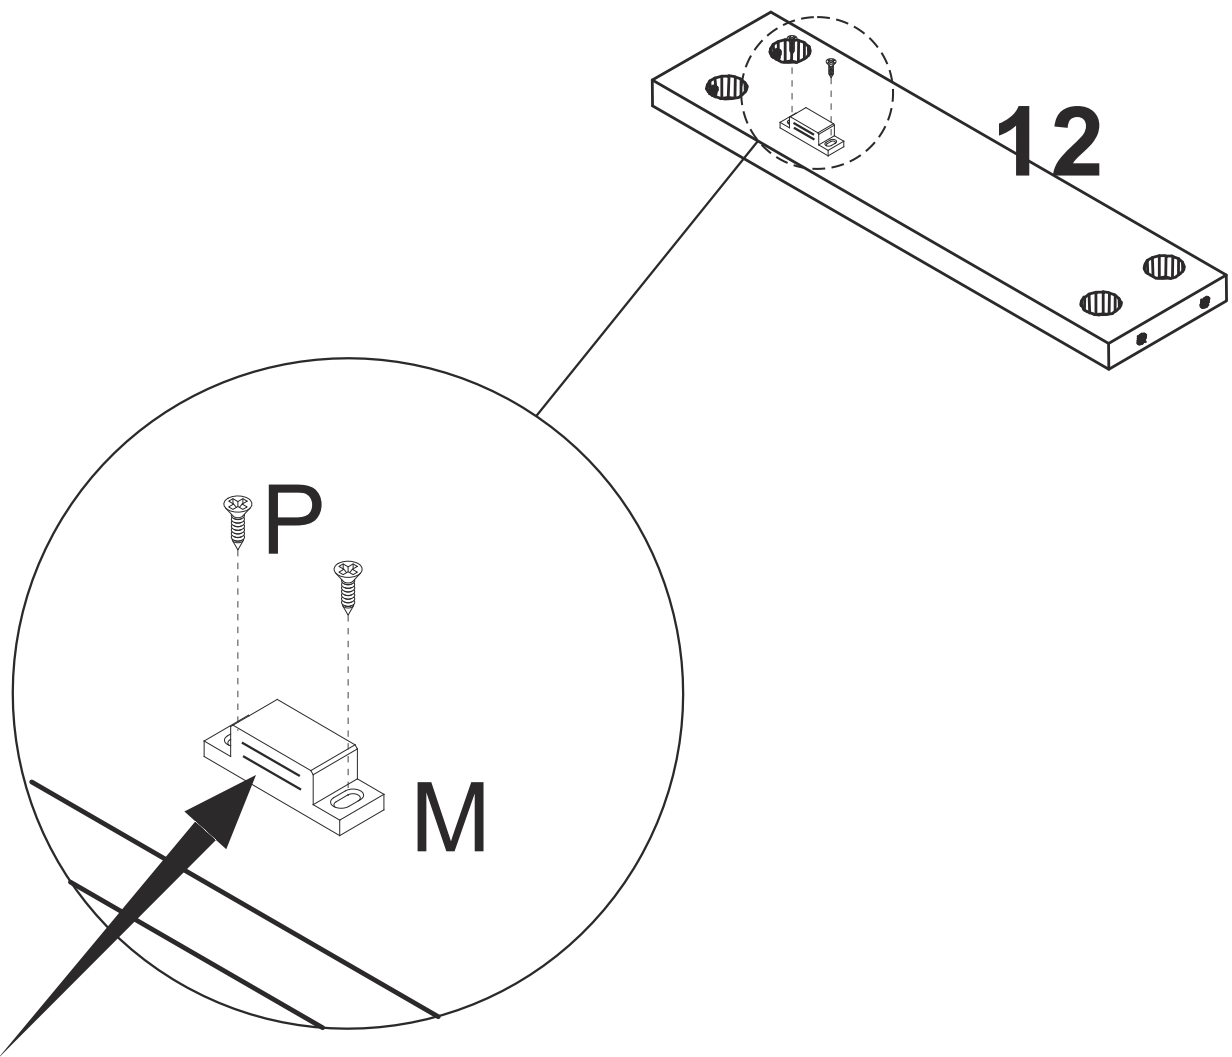

Note: The magnetic direction of the door stopper is as shown in the illustration.


Step 16

I. As shown in the illustration, connect the assembled panels (14, 15, and 15) to panel (9), insert the cam lock (B) into the corresponding holes on panels (14, 15, and 15), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

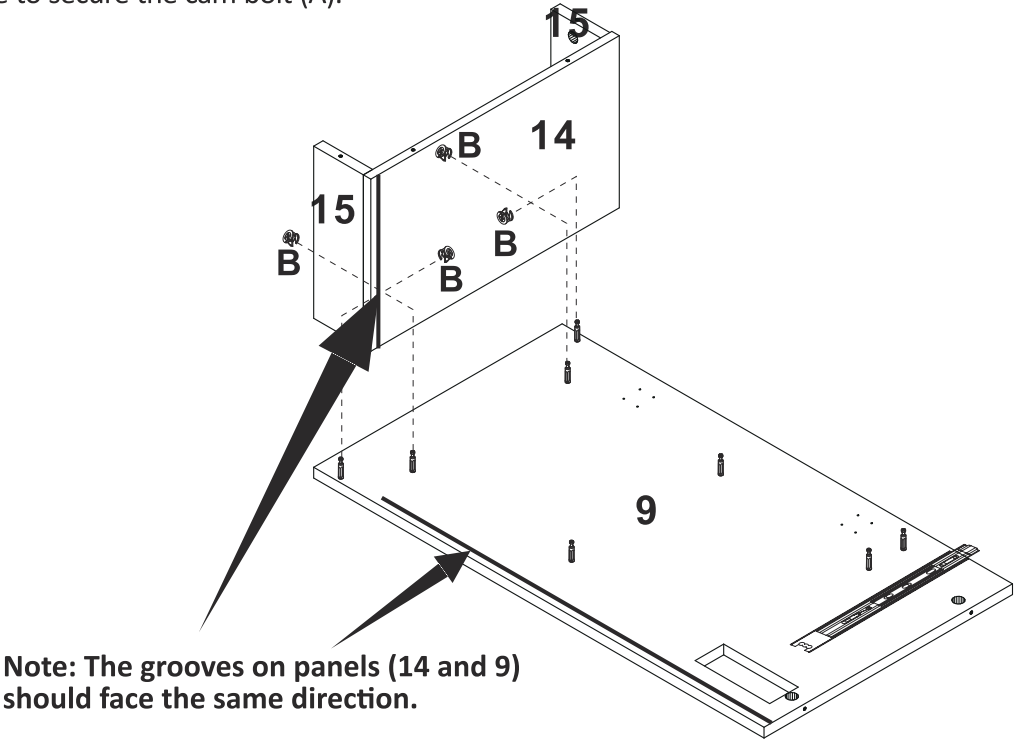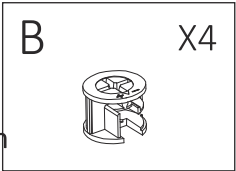


Step 17

I. As shown in the illustration, connect the panels (12 and 13) to panel (9), insert the cam lock (B) into the corresponding holes on panels (12 and 13), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

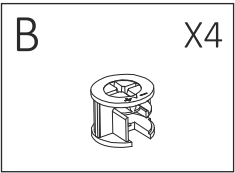

Note: The door stopper is located here on panel (12).

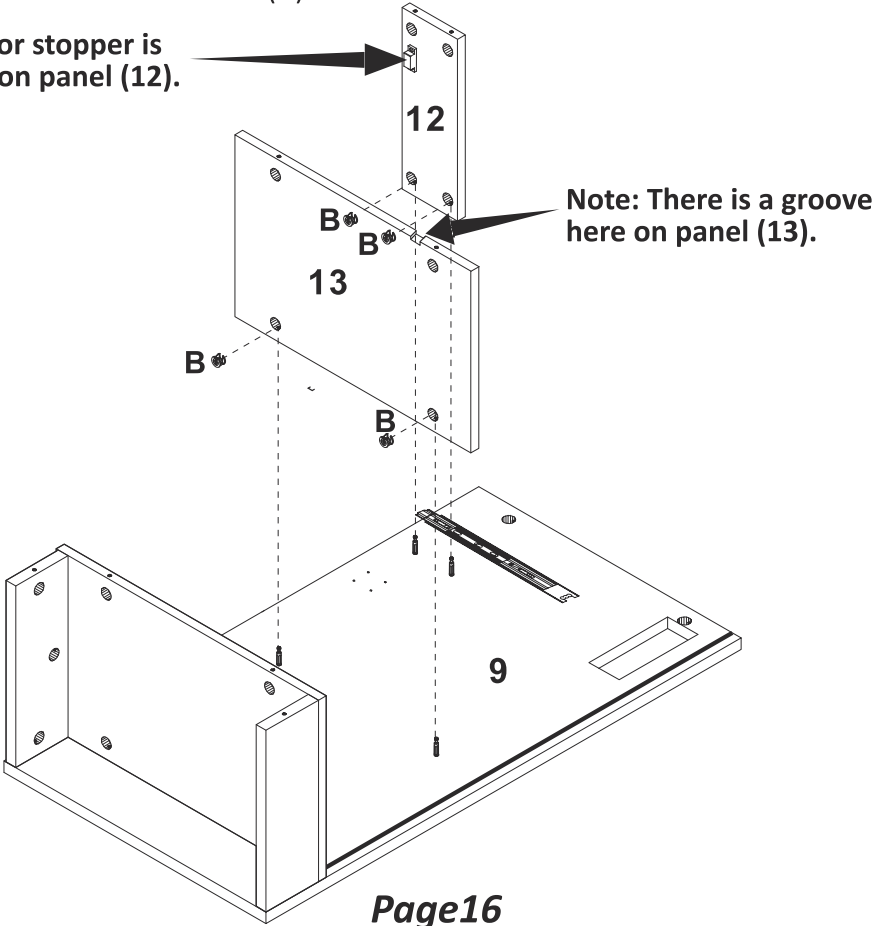


Step 18

I. As shown in the illustration, connect panel (10) to the assembled panels (12, 13, 14, 15, and 15), insert the cam lock (B) into the corresponding holes on panels (12, 13, 14, 15, and 15), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).



B

X8

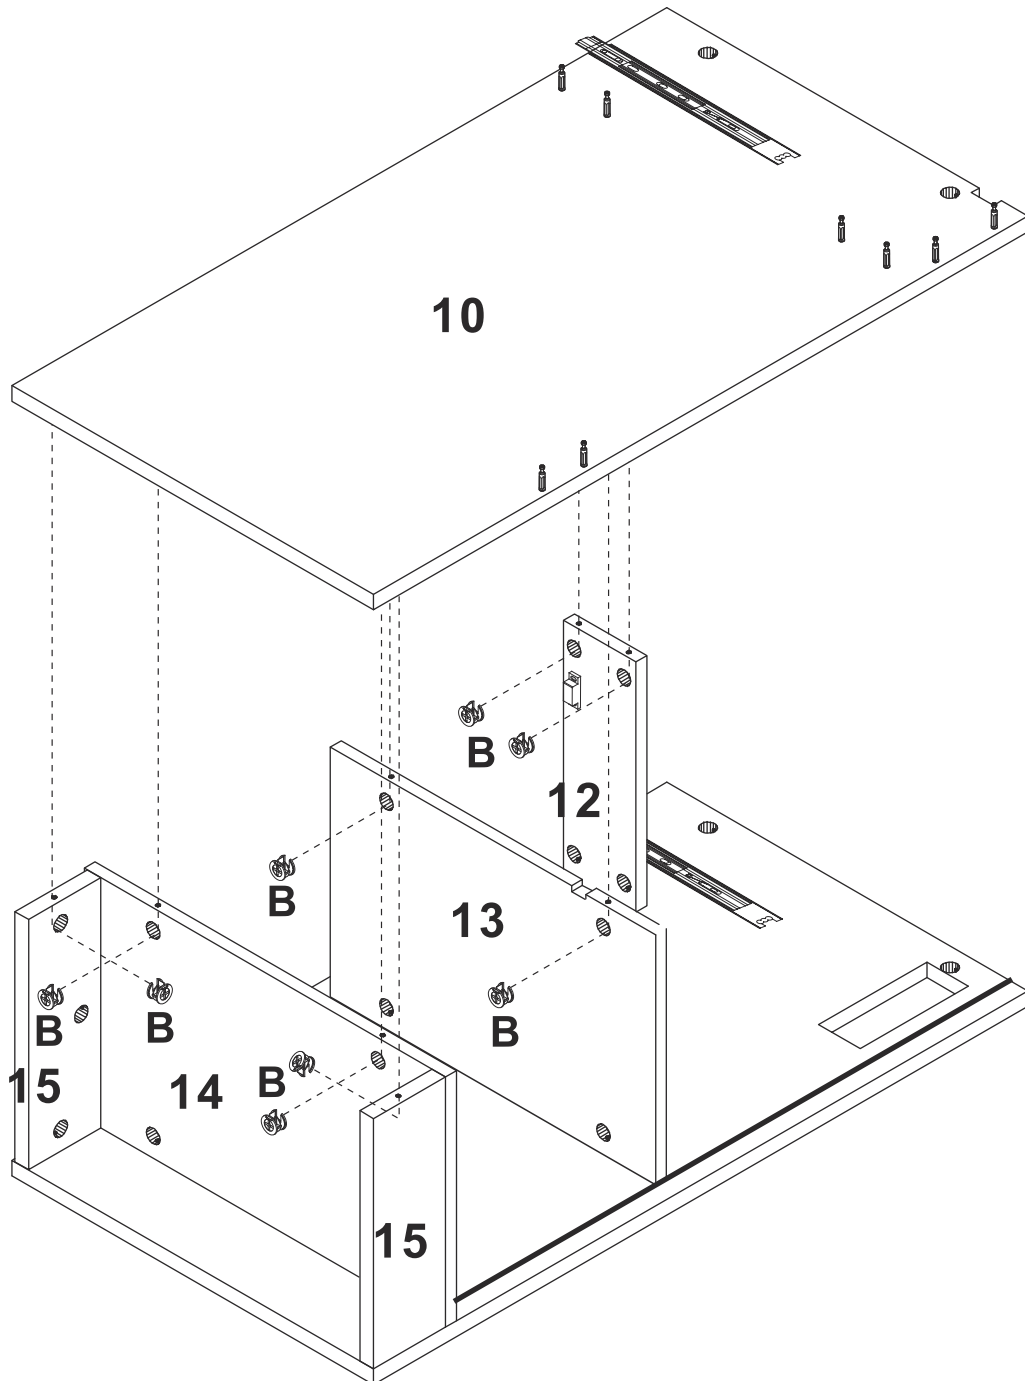



Step 19

I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panel (18).

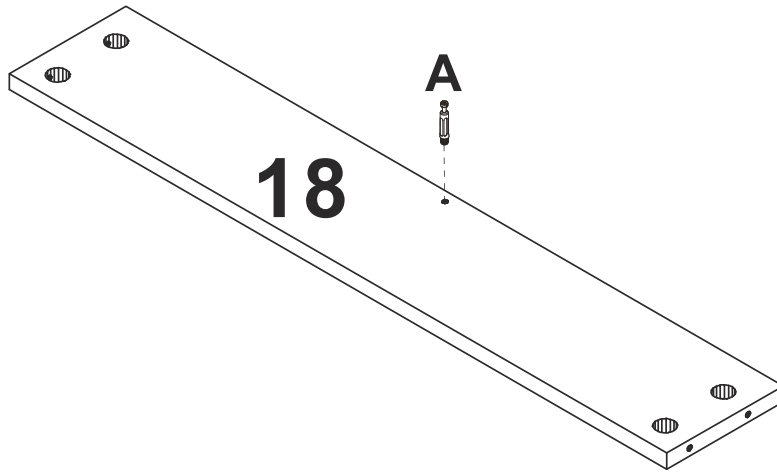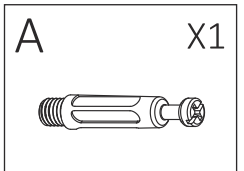

Step 20

I. As shown in the illustration, connect panels (17) to panel (18), insert the cam lock (B) into the corresponding holes on panels (17), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

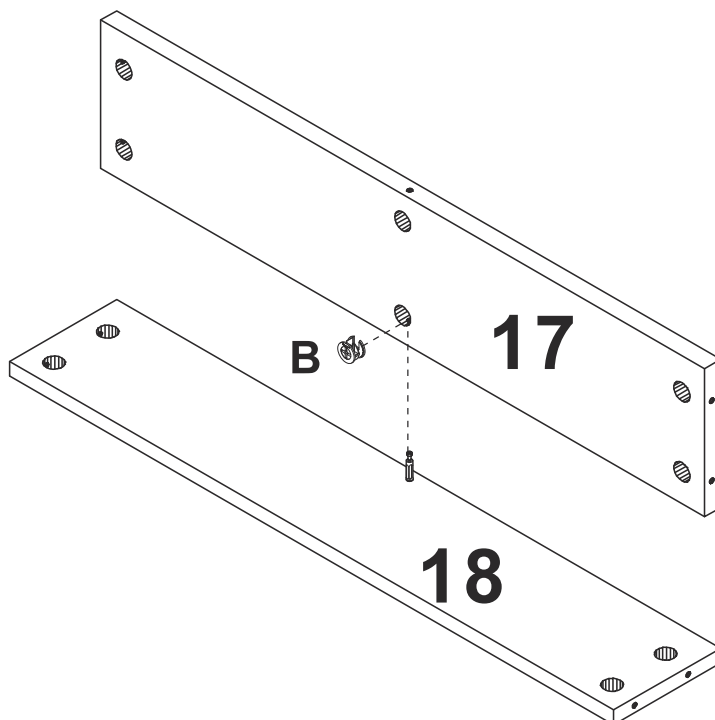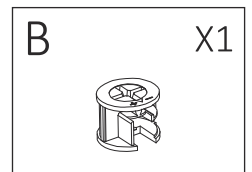


Step 21

I. As shown in the illustration, connect panels (16, 17, 18, and 19) to panel (10), insert the cam lock (B) into the corresponding holes on panels (16, 17, 18, and 19), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

B

X8

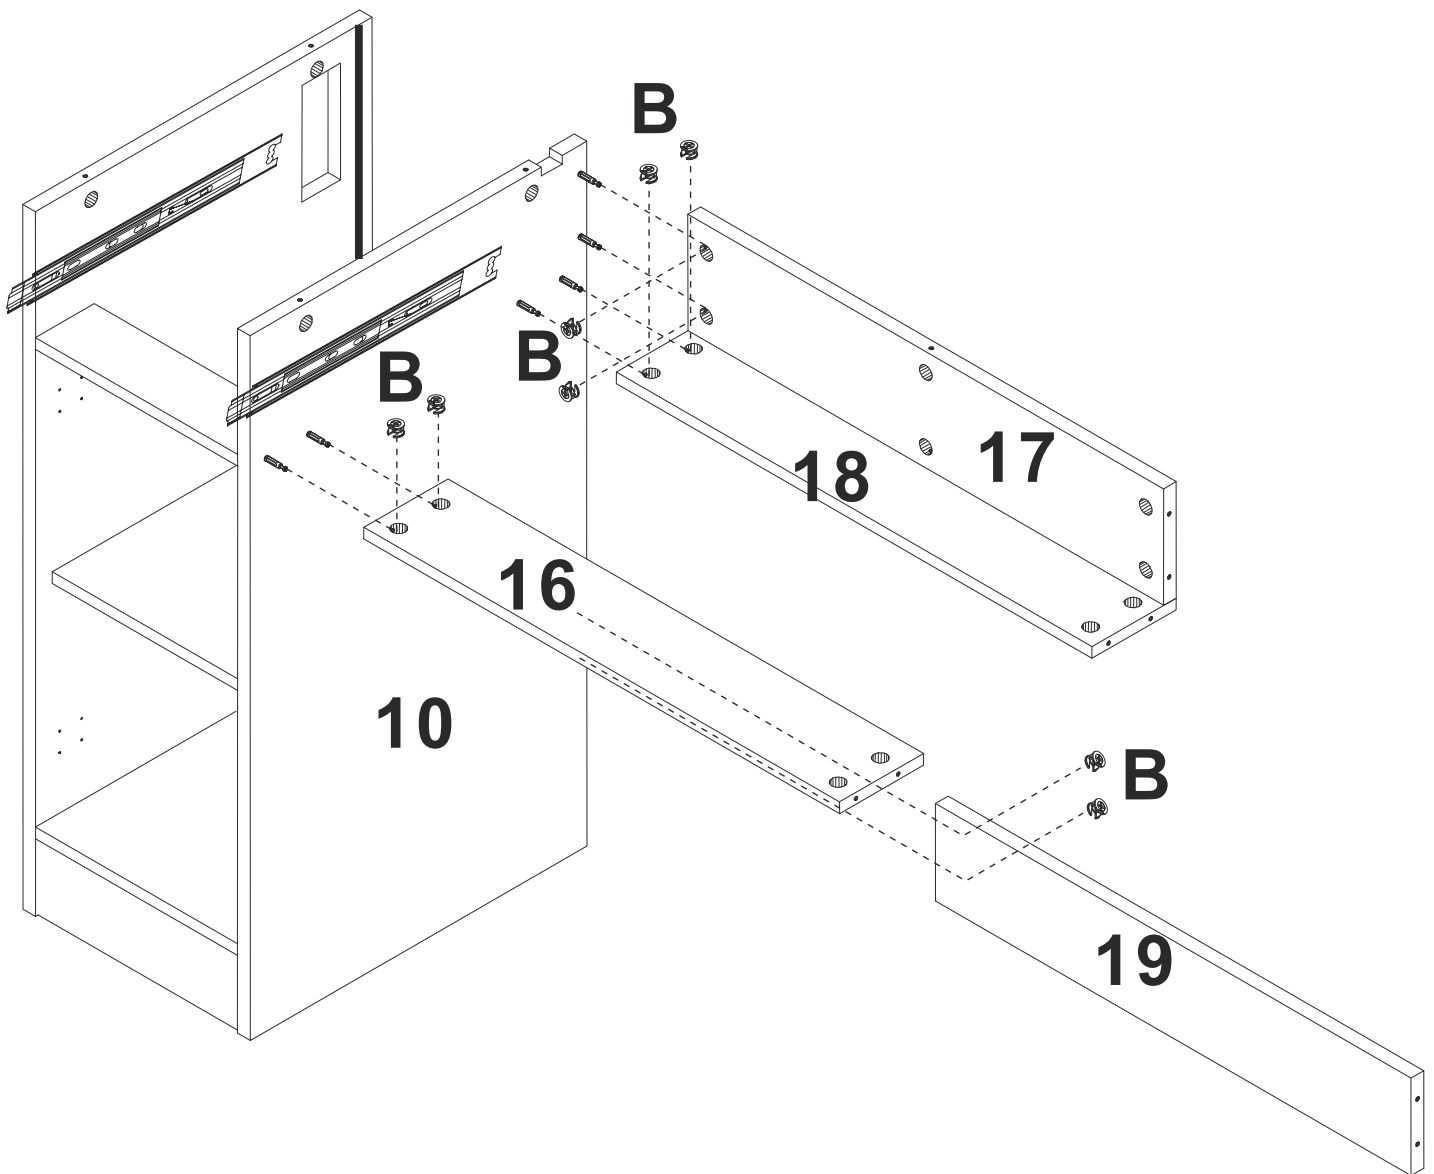


Step 22

I. As shown in the illustration, connect panels (11) to panel (16, 17, 18, and 19), insert the cam lock (B) into the corresponding holes on panels (16, 17, 18, and 19), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

B


X8

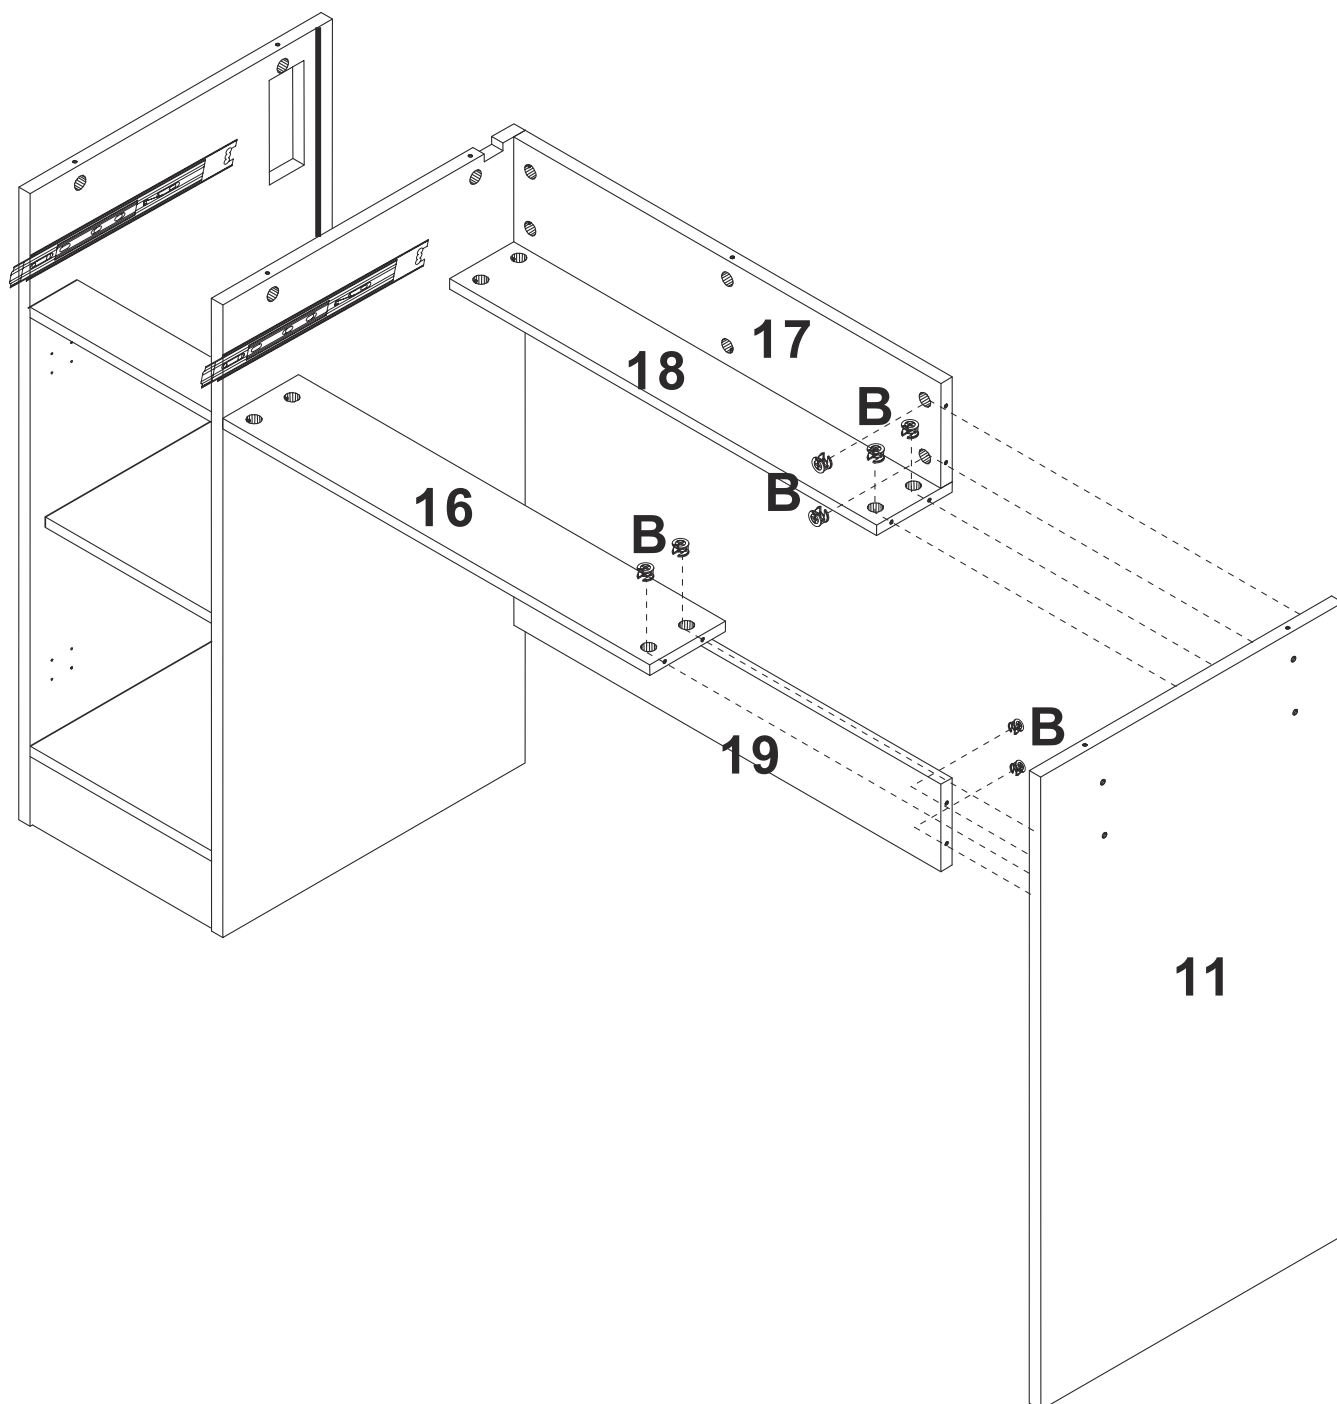

Step 23


I. Install panel (31) as per diagram and slide them into the grooves until they are fully seated.

Note: There is a round hole here on panel (31).


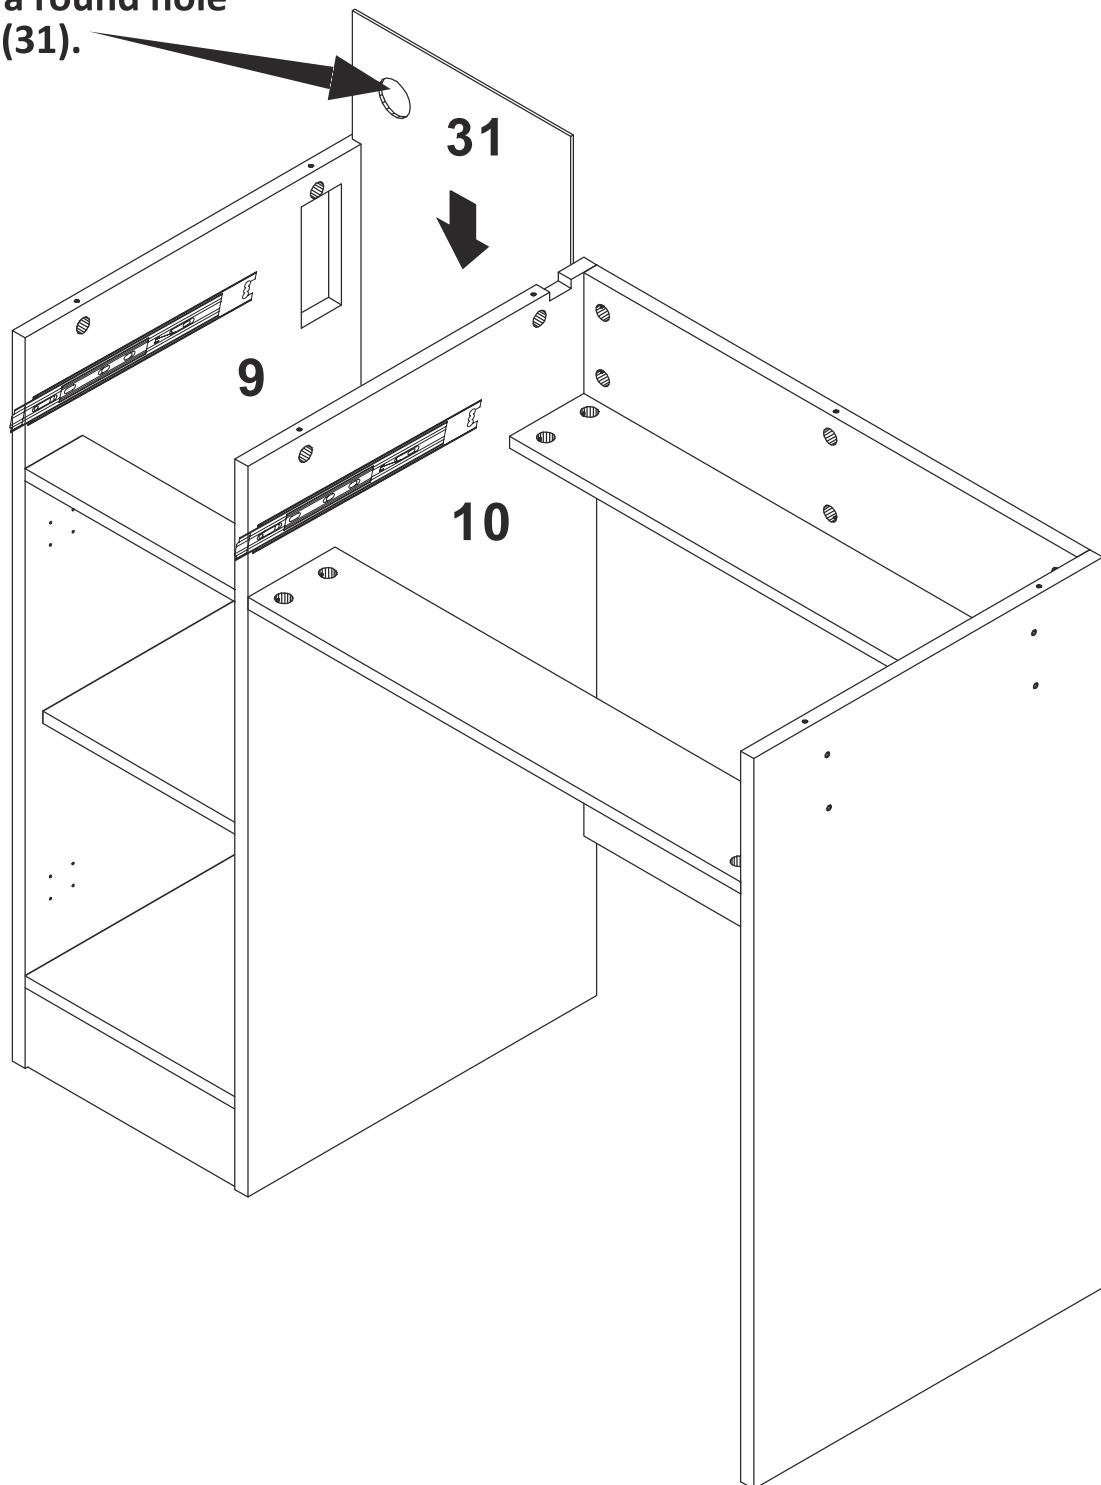


Step 24

I. Peel off the adhesive strip from panel (8), then carefully remove the tempered glass (22) and place it in a safe location.


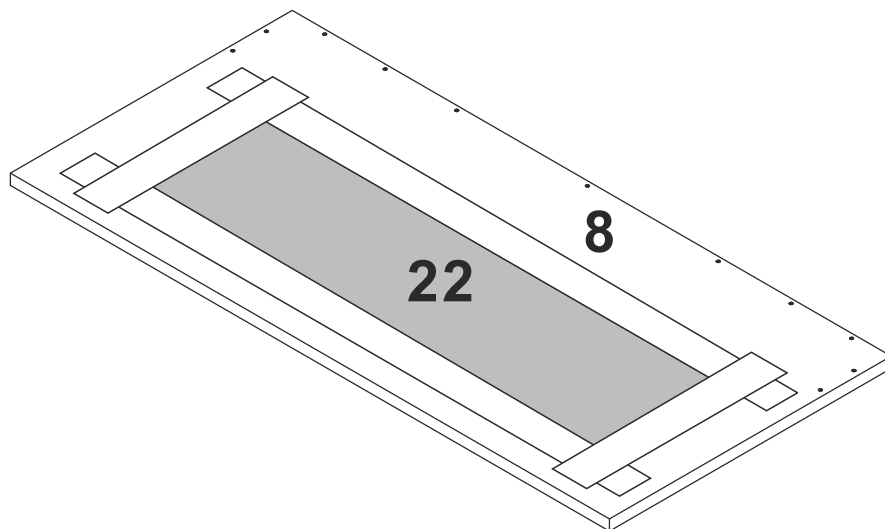


Tear oA the tape first, Then carefully remove the glass

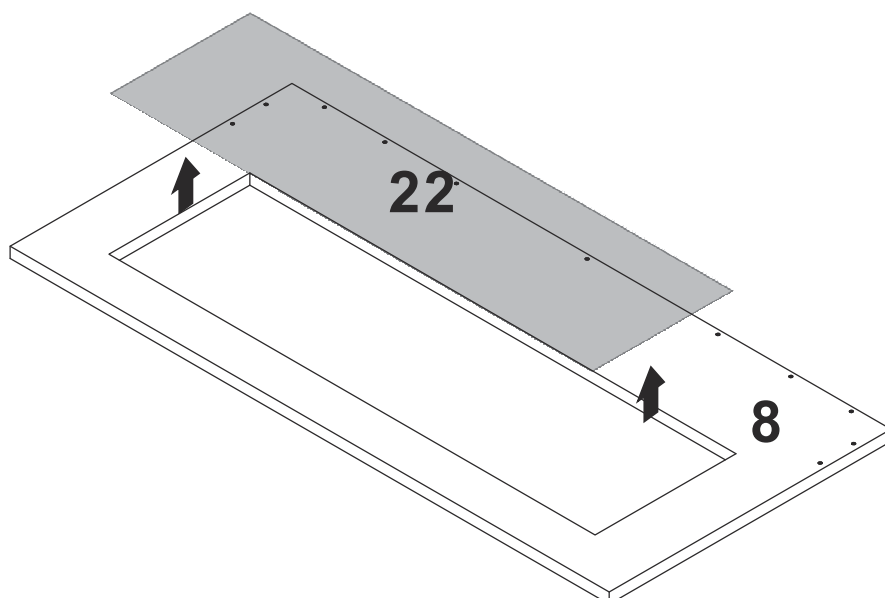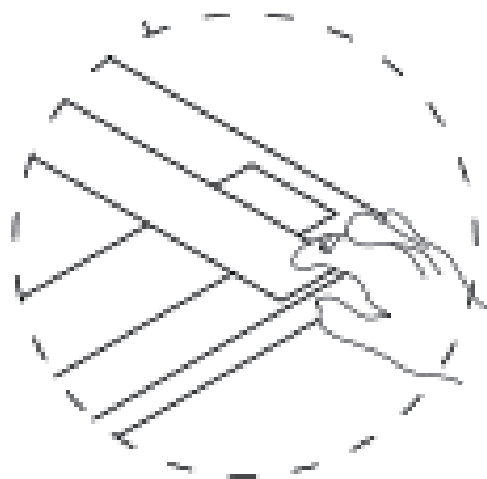

Step 25

I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panel (8).

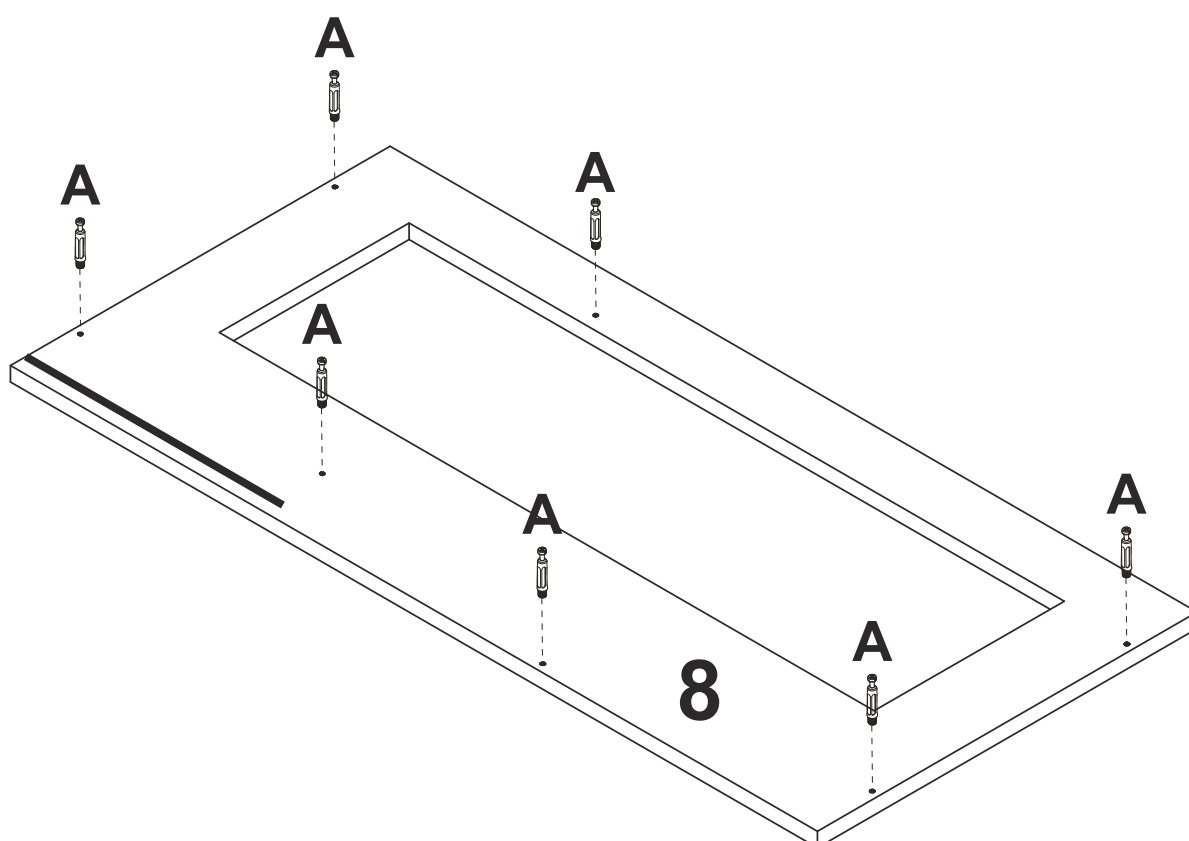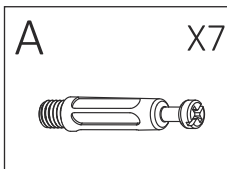


Step 26

I. As shown in the illustration, connect panel (8) to the assembled frame, insert the cam lock (B) into the corresponding holes on panels (9, 10, 11 and 17), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).



B

X7

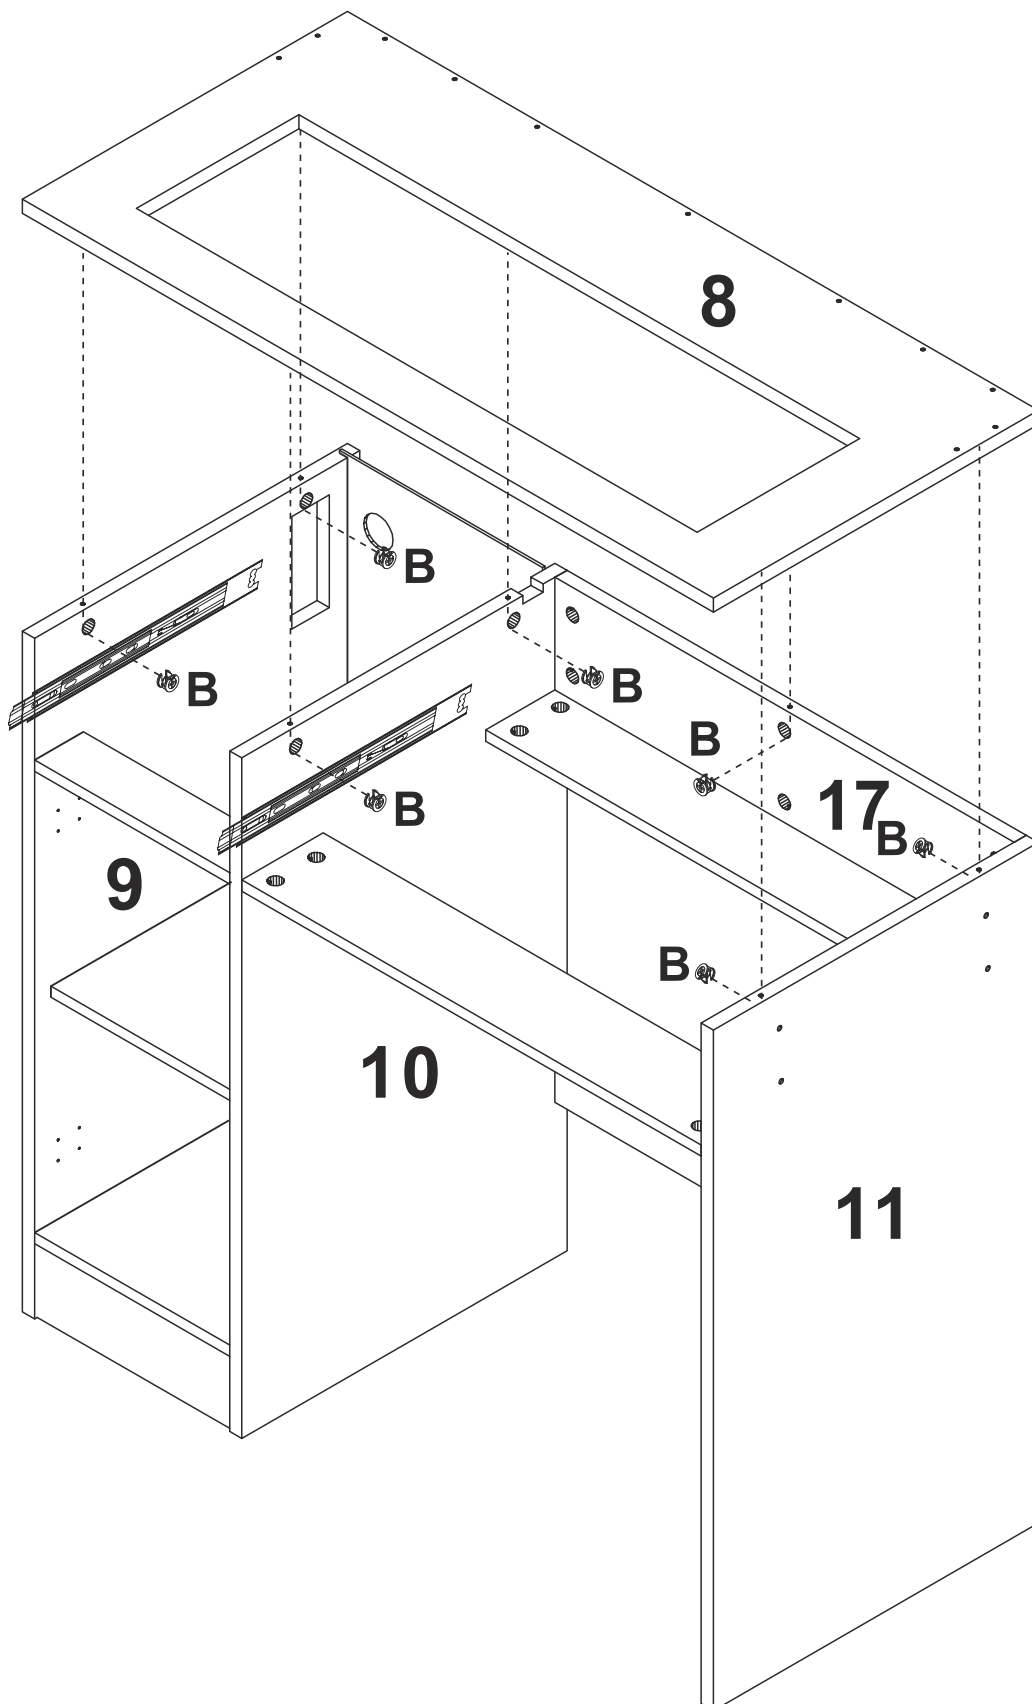



Step 27

I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panel (8).

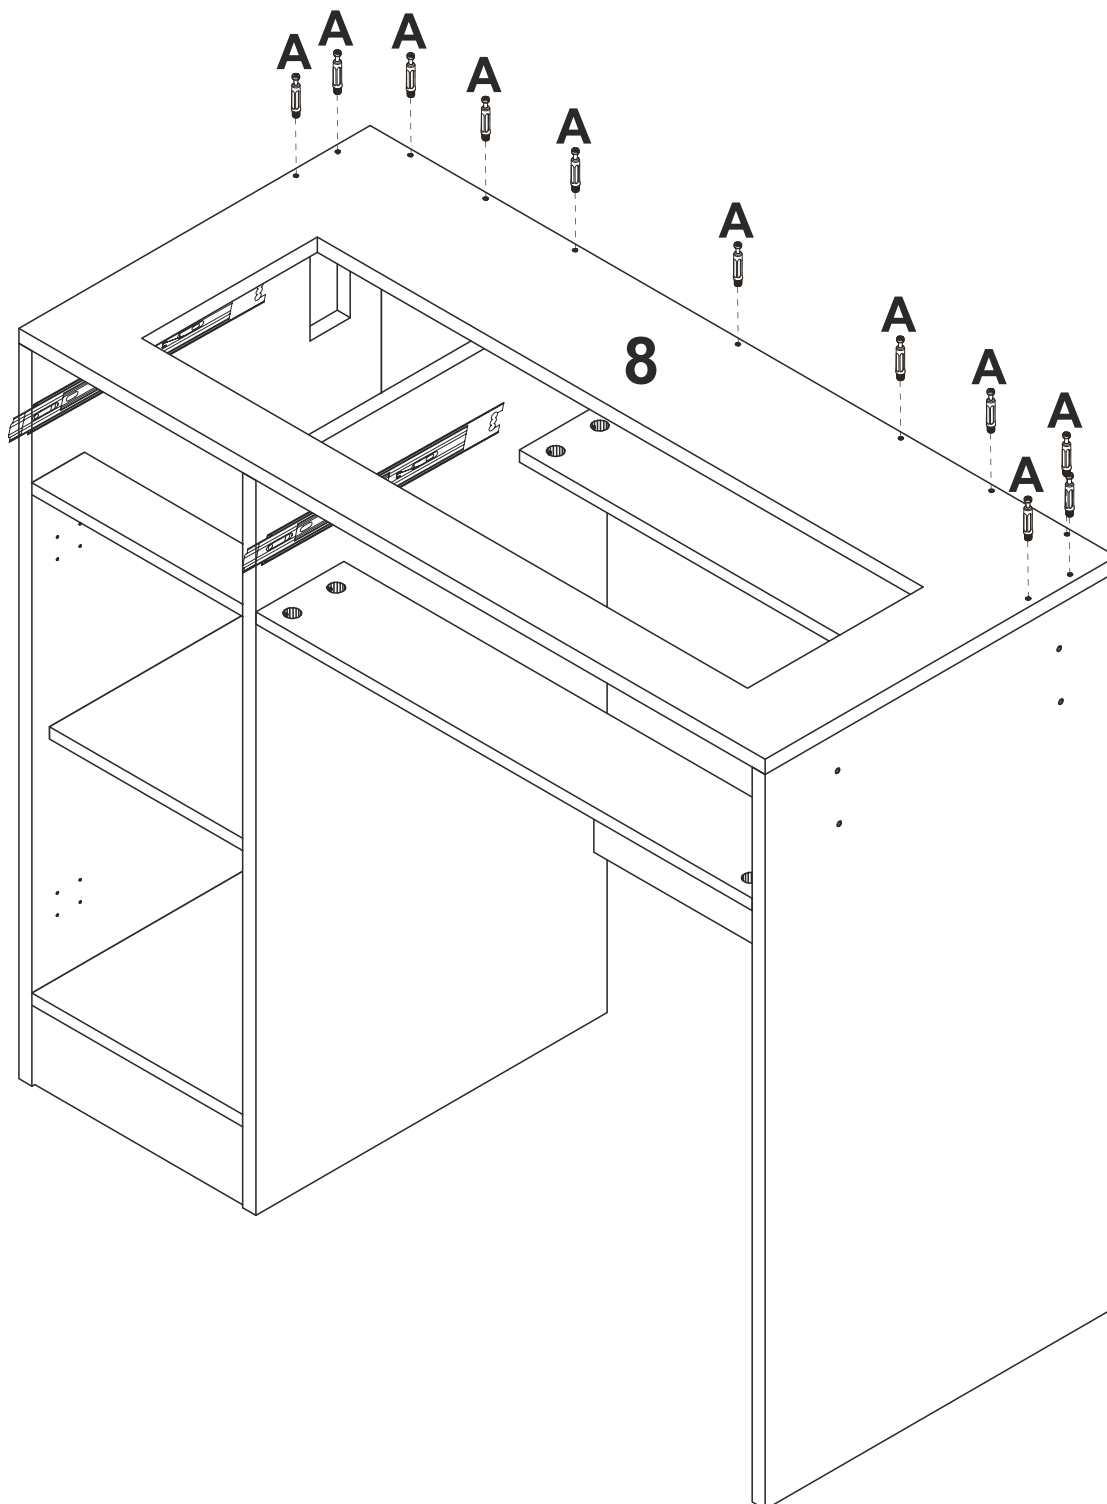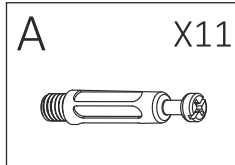



Step 28

I. As shown in the illustration, attach panels (6, 6, and 6) to panel (3) and secure them with screws (C).

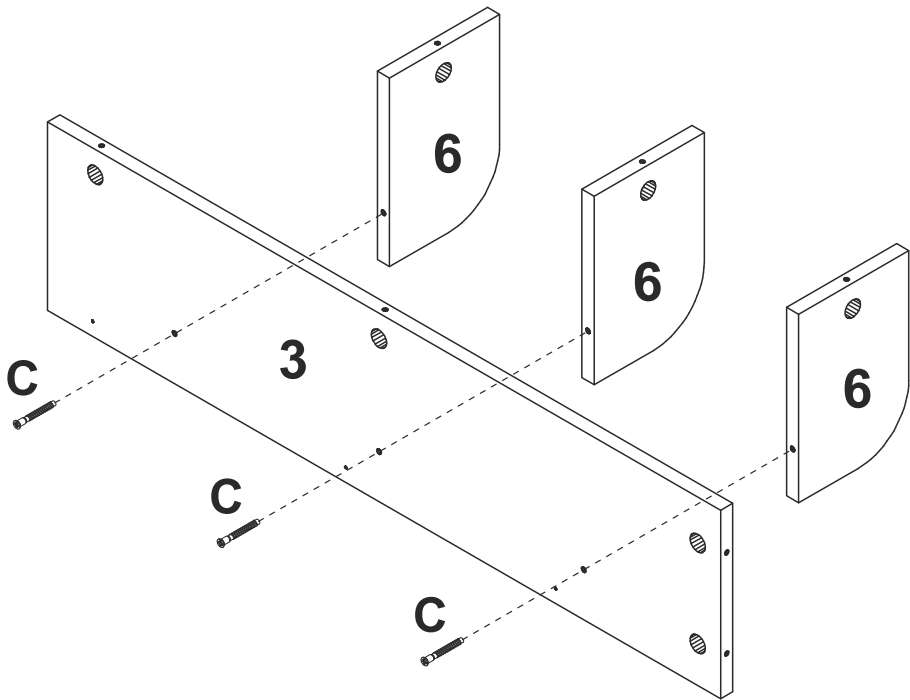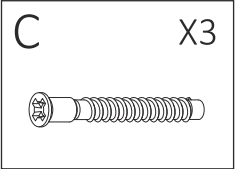



Step 29

I. As shown in the illustration, attach panels (7, 7, and 7) to panel (4) and secure them with screws (C).

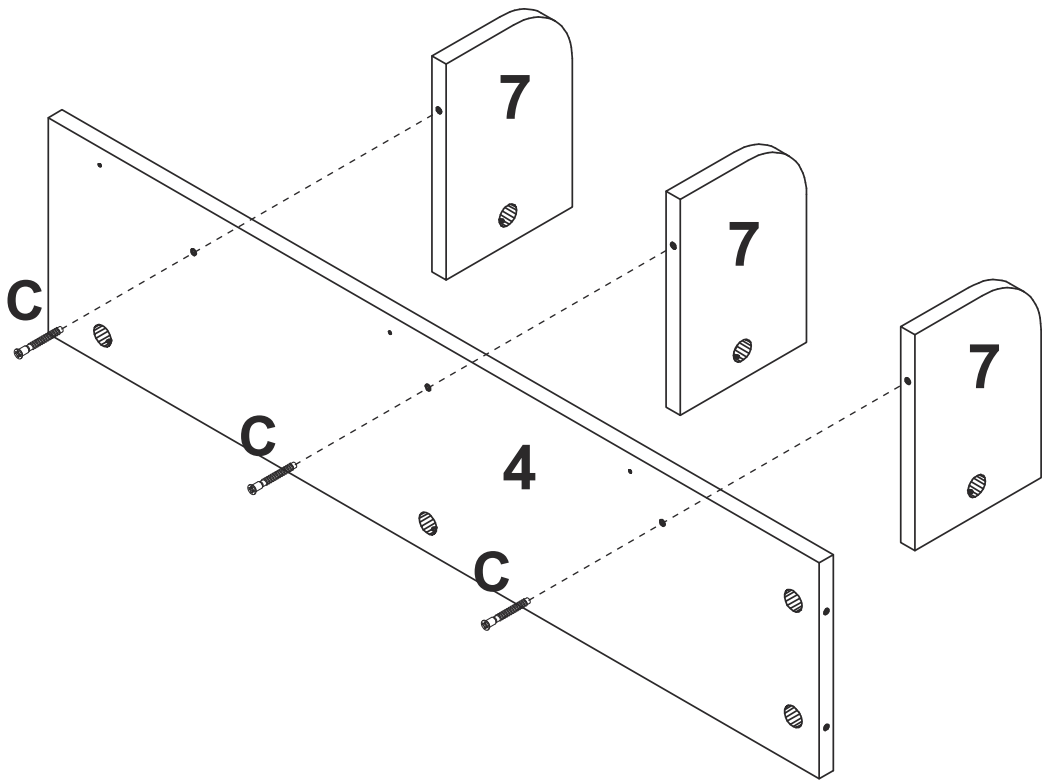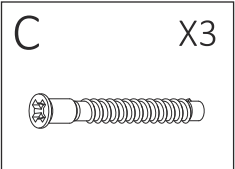



Step 30

I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panel (2).

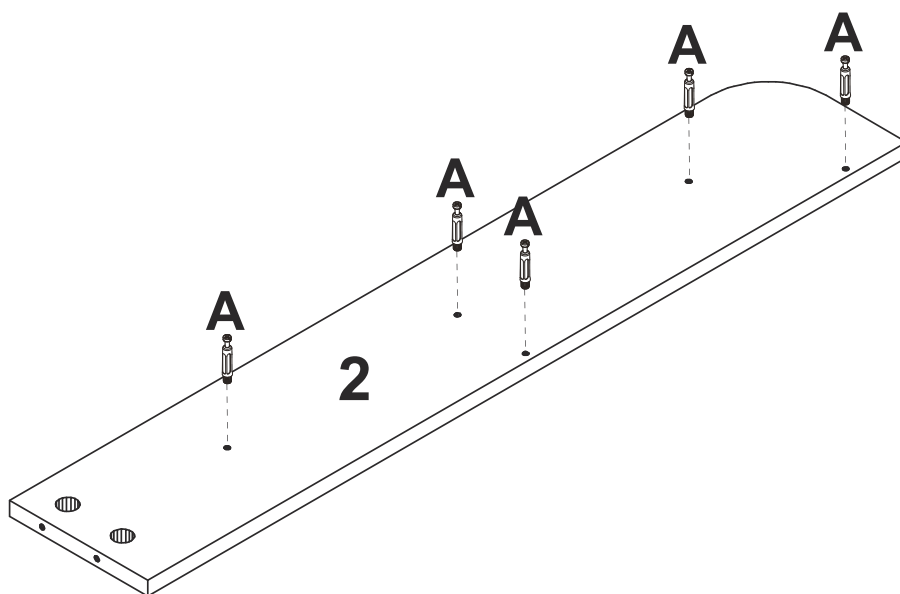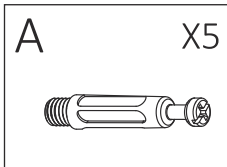



Step 31

I. As shown in the illustration, connect panel (2) to the assembled panels (3, 6, 6, and 6), insert the cam lock (B) into the corresponding holes on panels (3, 6, 6, and 6), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

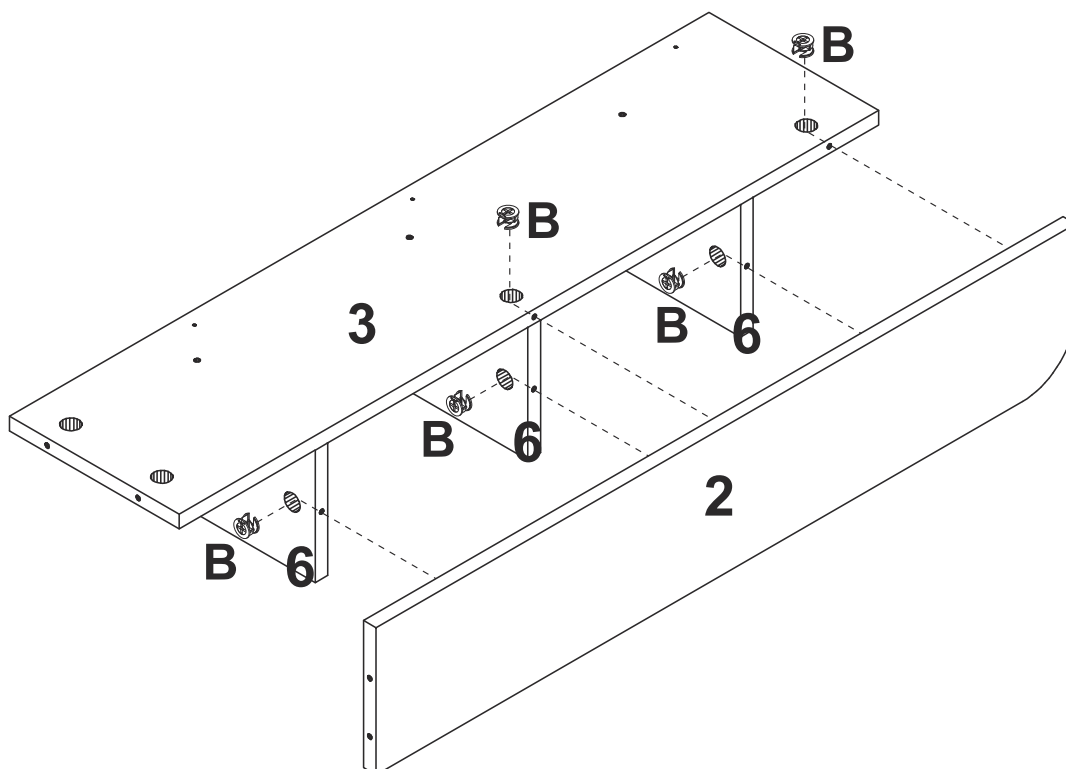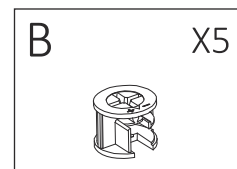



Step 32

I. As shown in the illustration, use a screwdriver to insert the cam bolt (A) into the corresponding holes on panel (5).

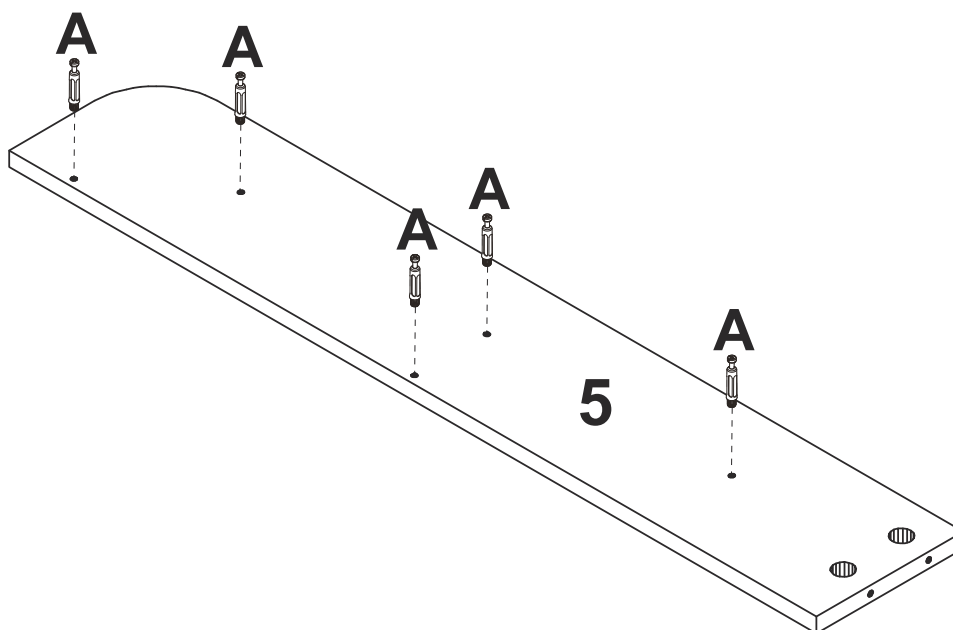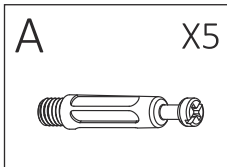

Step 33



I. As shown in the illustration, connect panel (5) to the assembled panels (4, 7, 7, and 7), insert the cam lock (B) into the corresponding holes on panels (4, 7, 7, and 7), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).

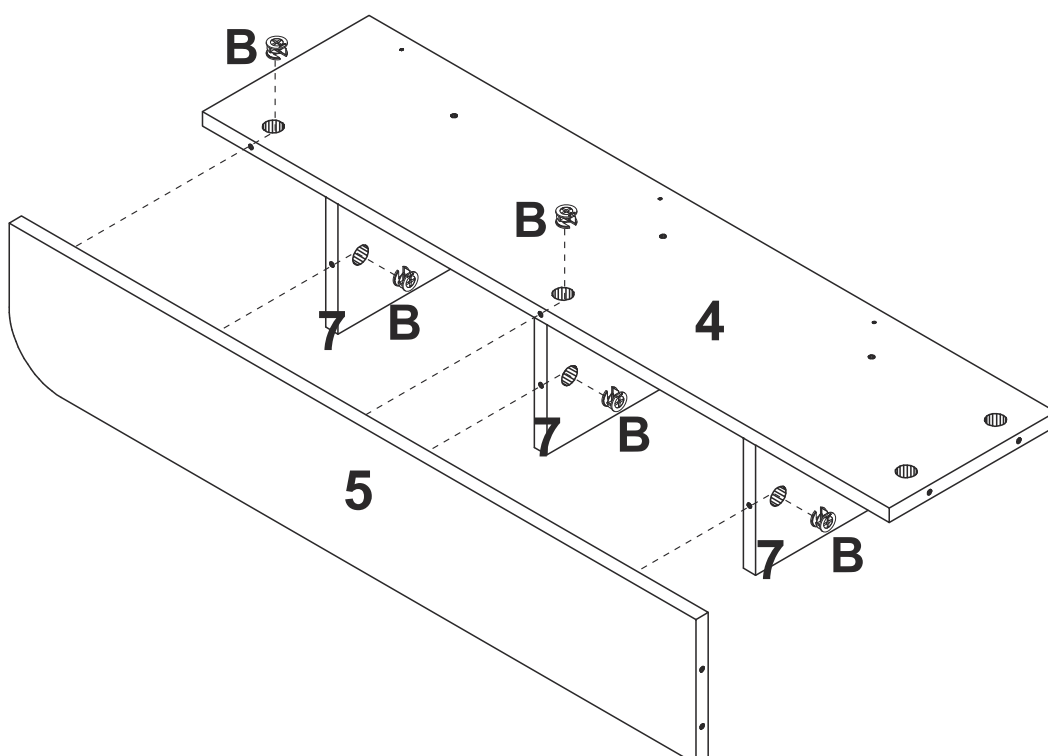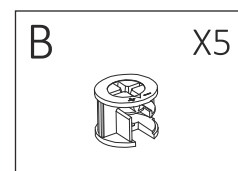

Step 34


I. Attach the metal plate (R) to panels (3 and 4) using screws (E).

E	X6
	
R	X6
	

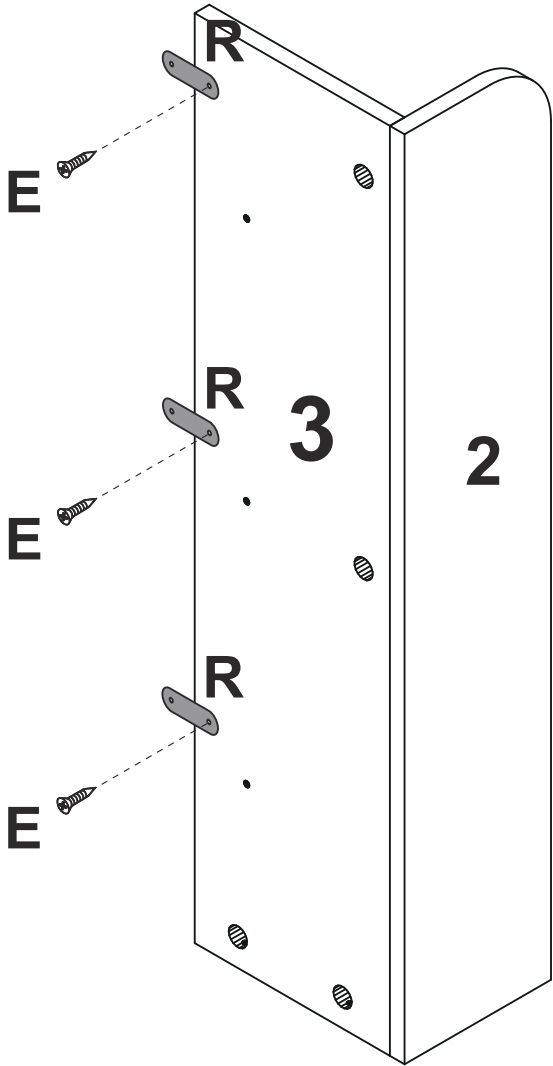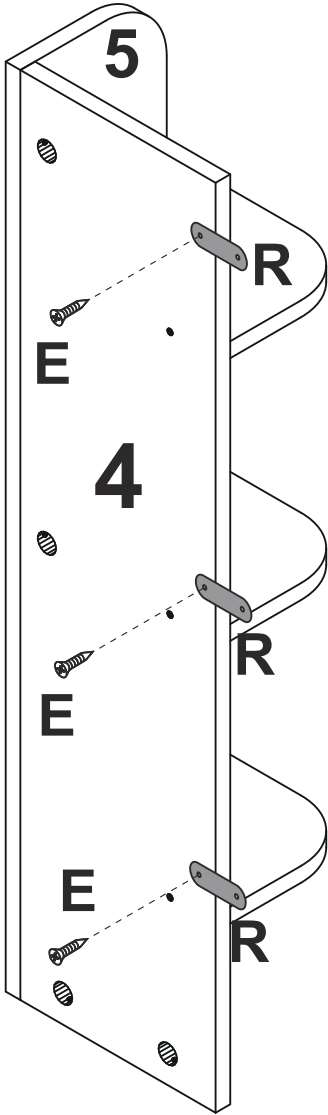

Step 35


I. As shown in the illustration, use the metal plate (R) to connect panels (3 and 4) to panel (1), and secure it with screws (E).

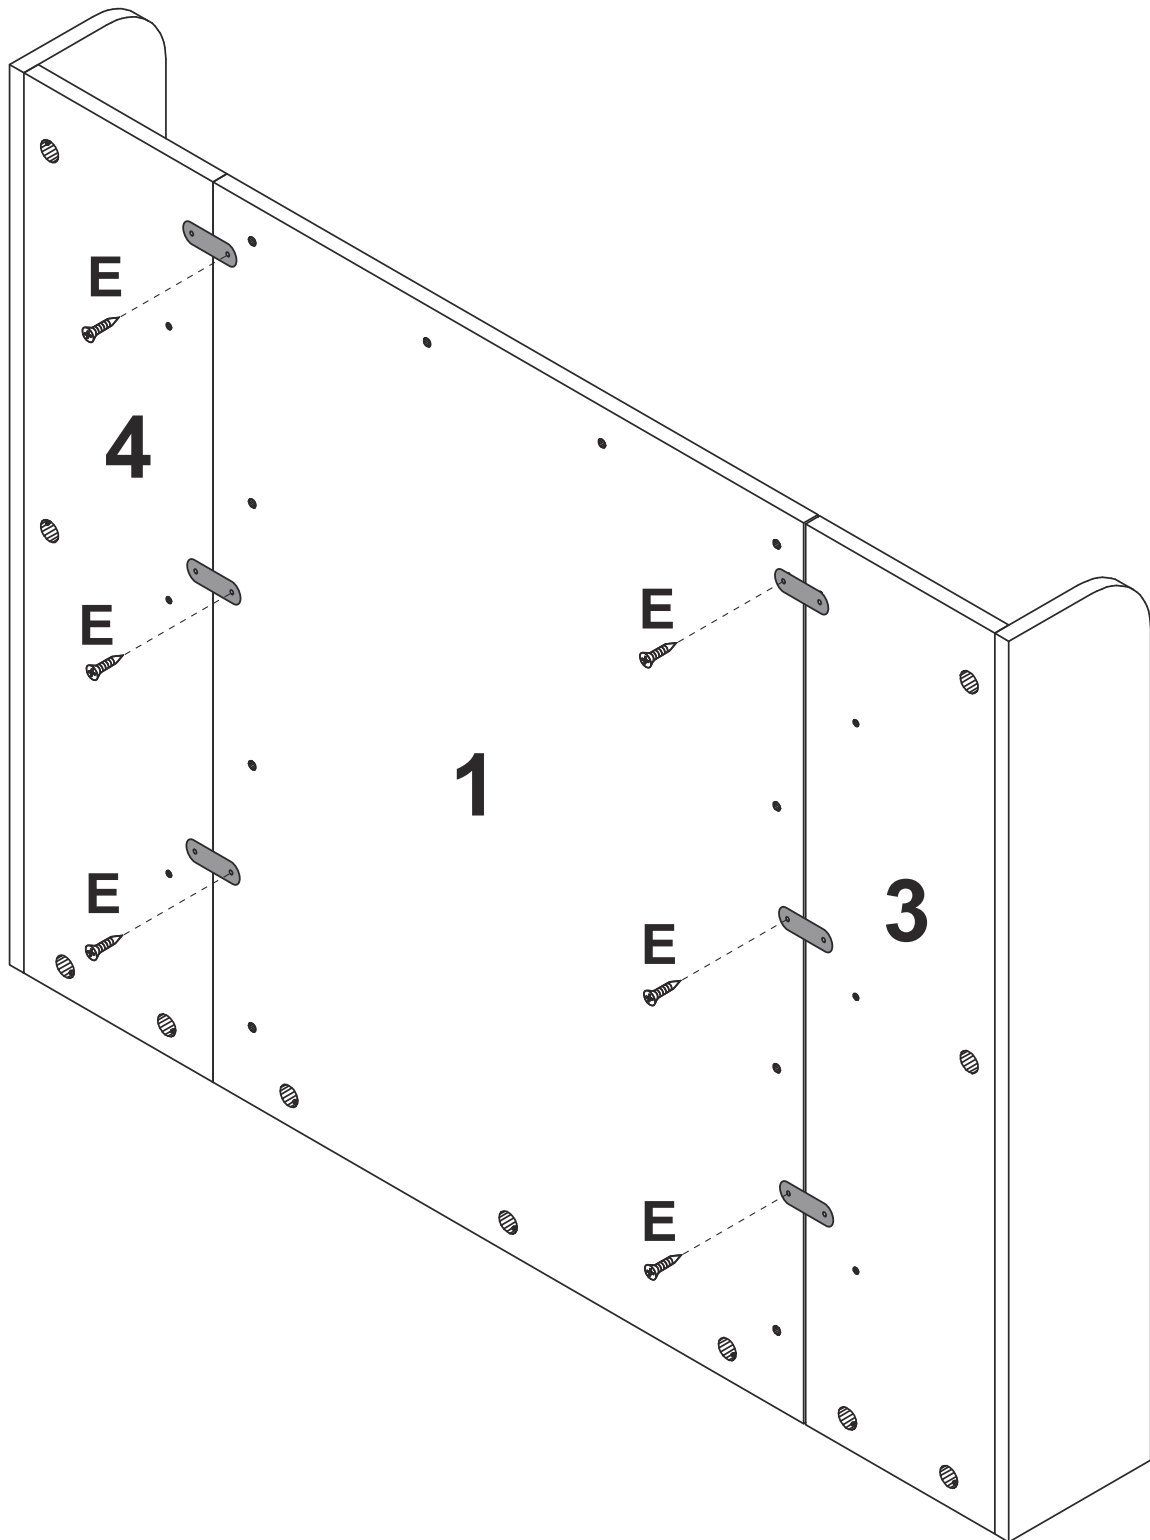

Step 36

I. As shown in the illustration, attach the assembled mirror to the assembled table, insert the cam lock (B) into the corresponding holes on panel (8), and then use a screwdriver to turn the cam lock (B) clockwise to secure the cam bolt (A).



II. Use screws (E) to secure the power strip (J) to panel (9).

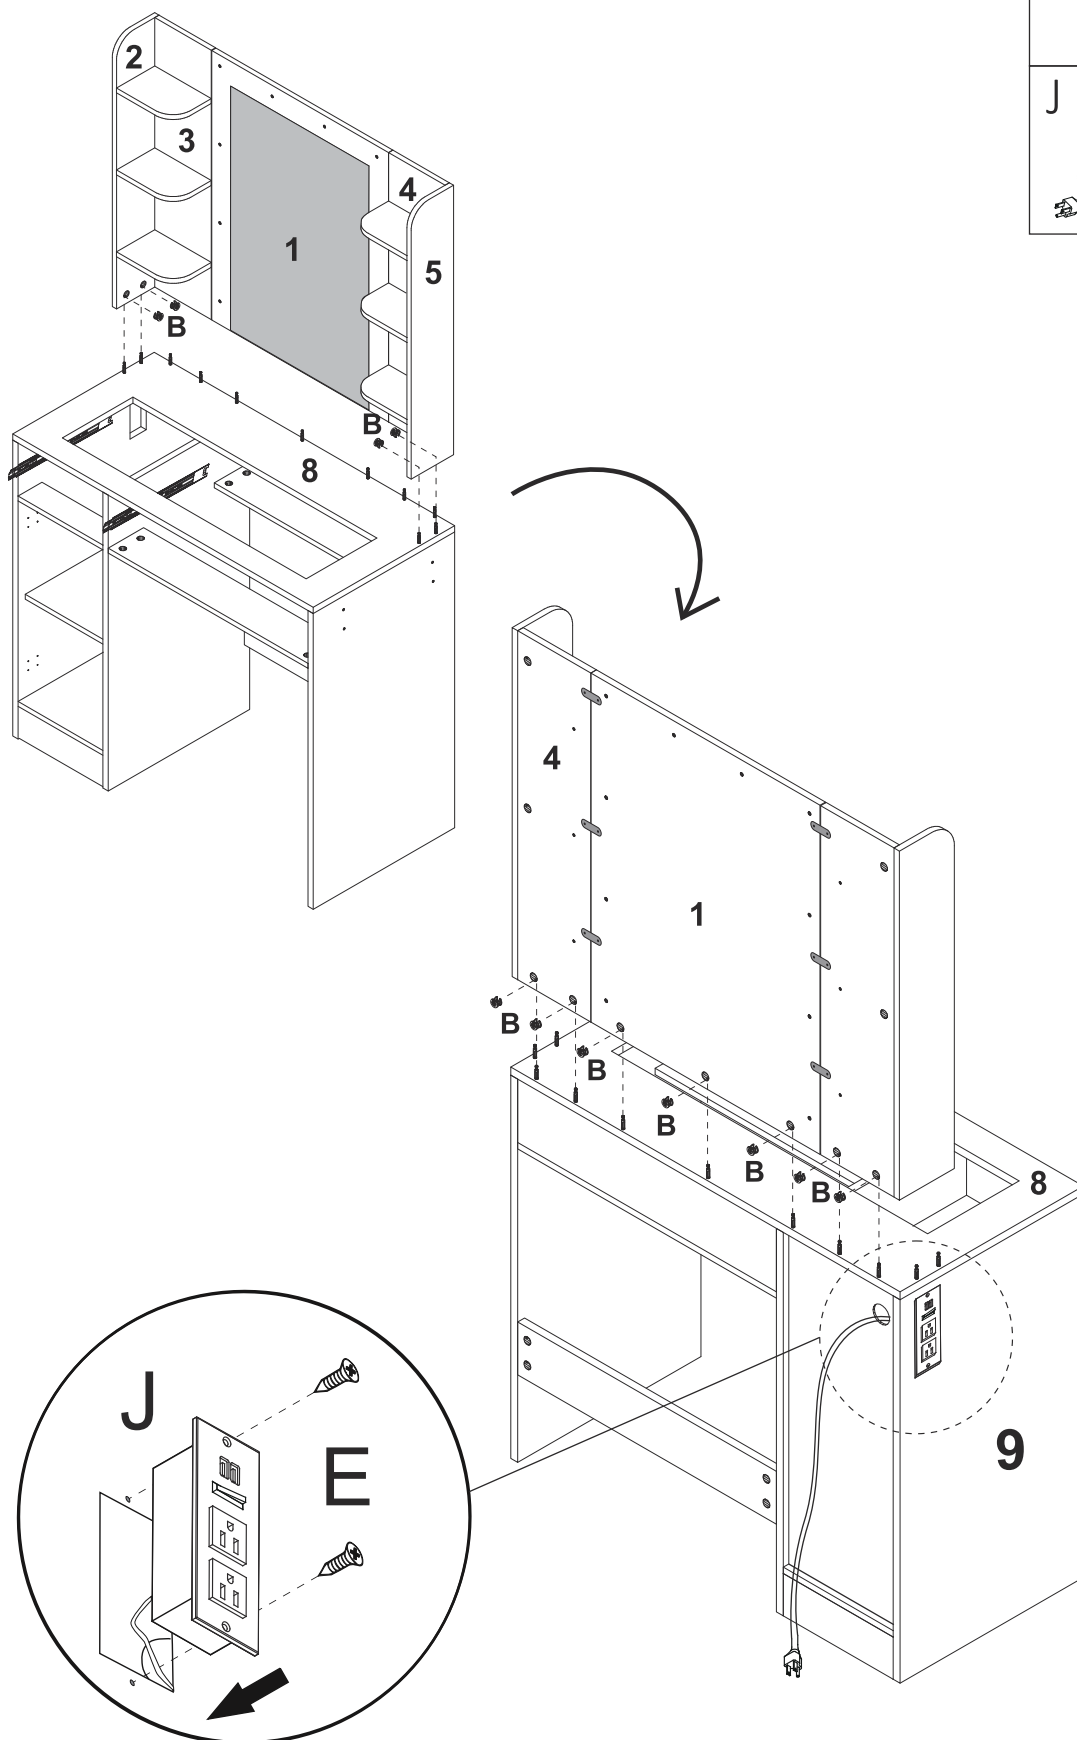

B	X11
E	X2
J	X1

Step 37



I. Use screws (W) to attach the folding bracket (L) to panel (11).

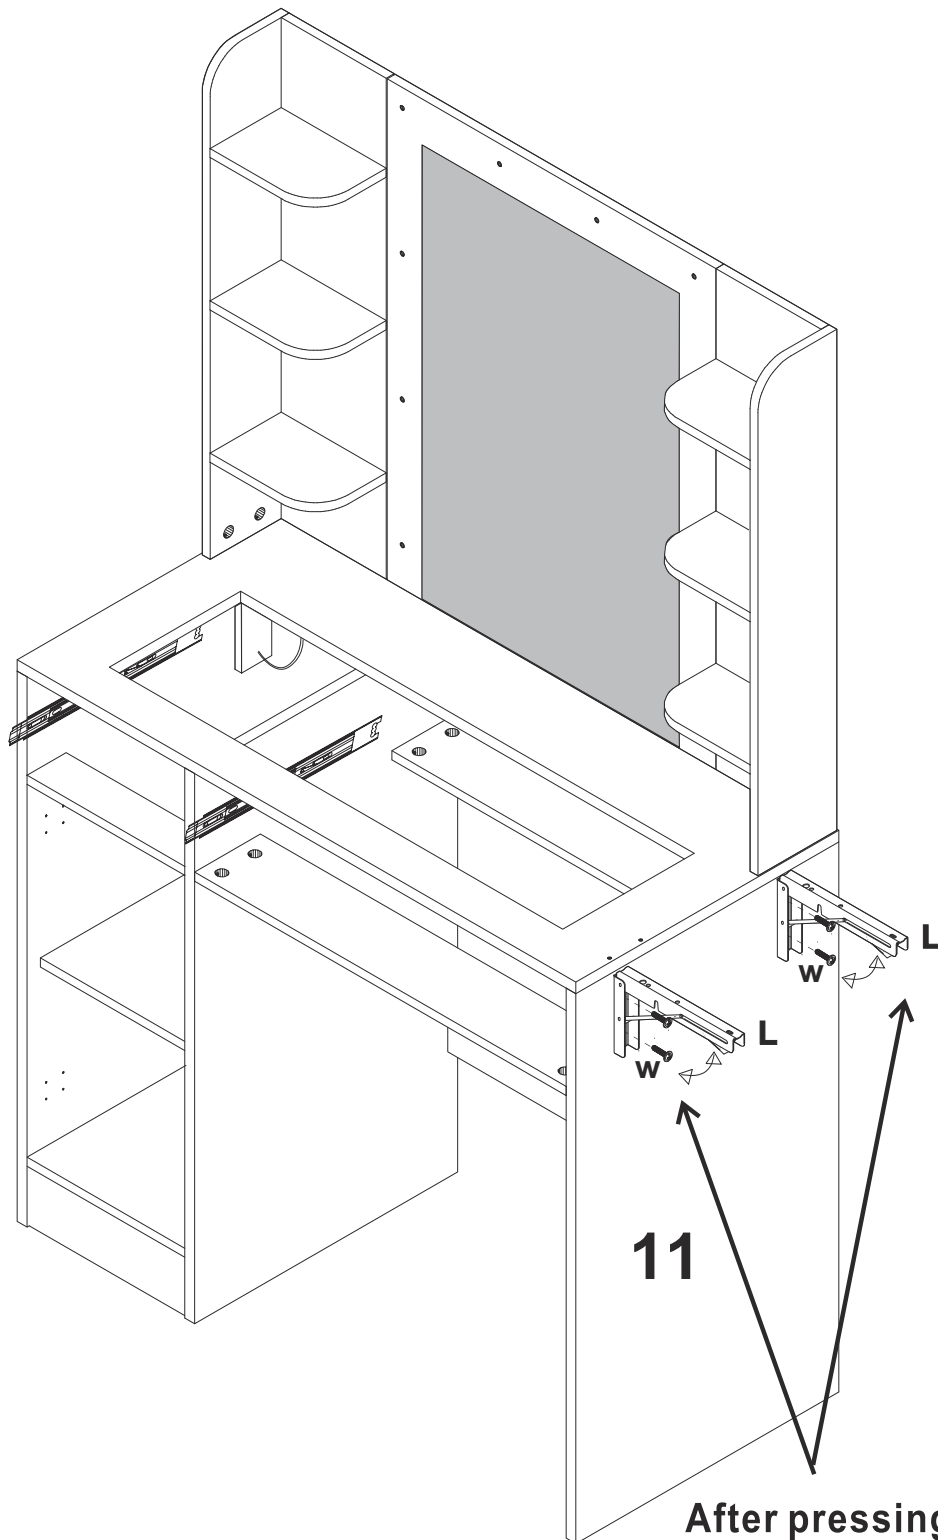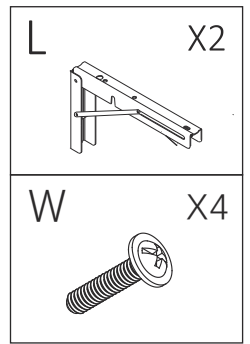

After pressing,
it can be folded and expanded.



Step 38


I. Use screws (E) to secure panel (21) to the folding bracket (L).

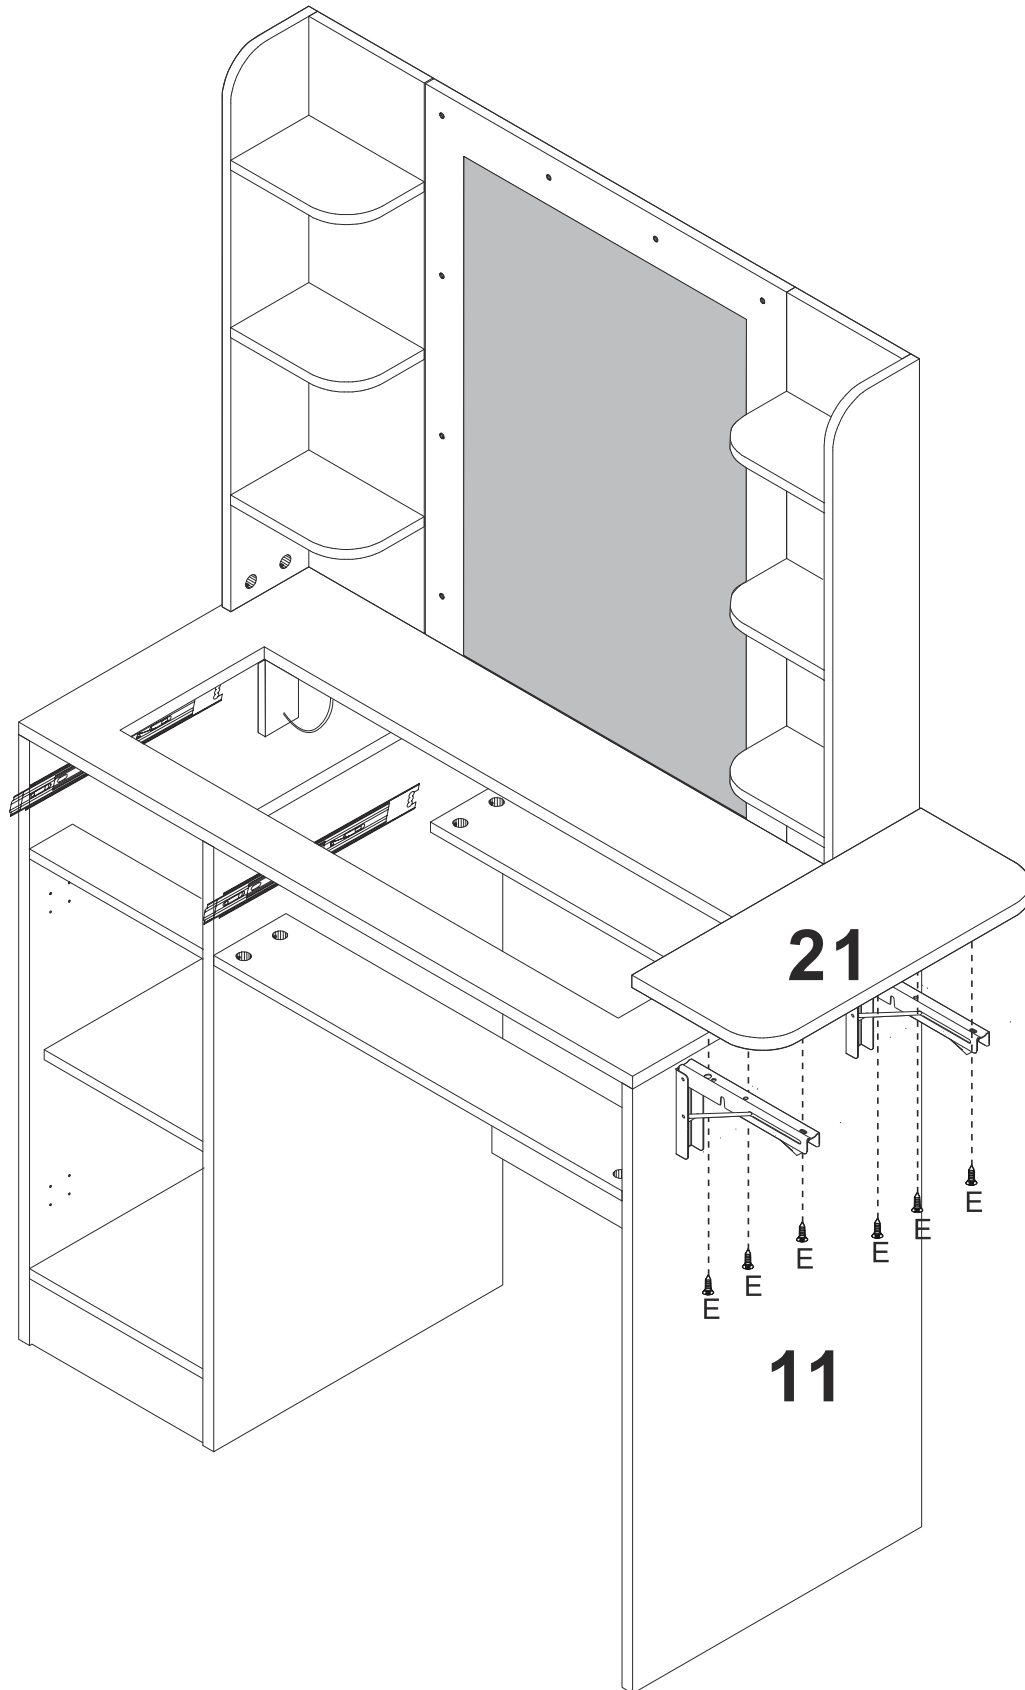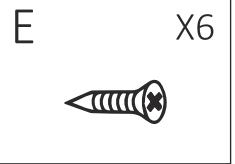

Step 39

- I. Use screws (E) to secure the hinge (K) to panel (20).
- II. Use screws (G) to attach the handle (F) to panel (20).
- III. Use screws (E) to secure (M) to panel (20).


E	X6	
F	X1	
G	X1	
M	X1	
K	X2	

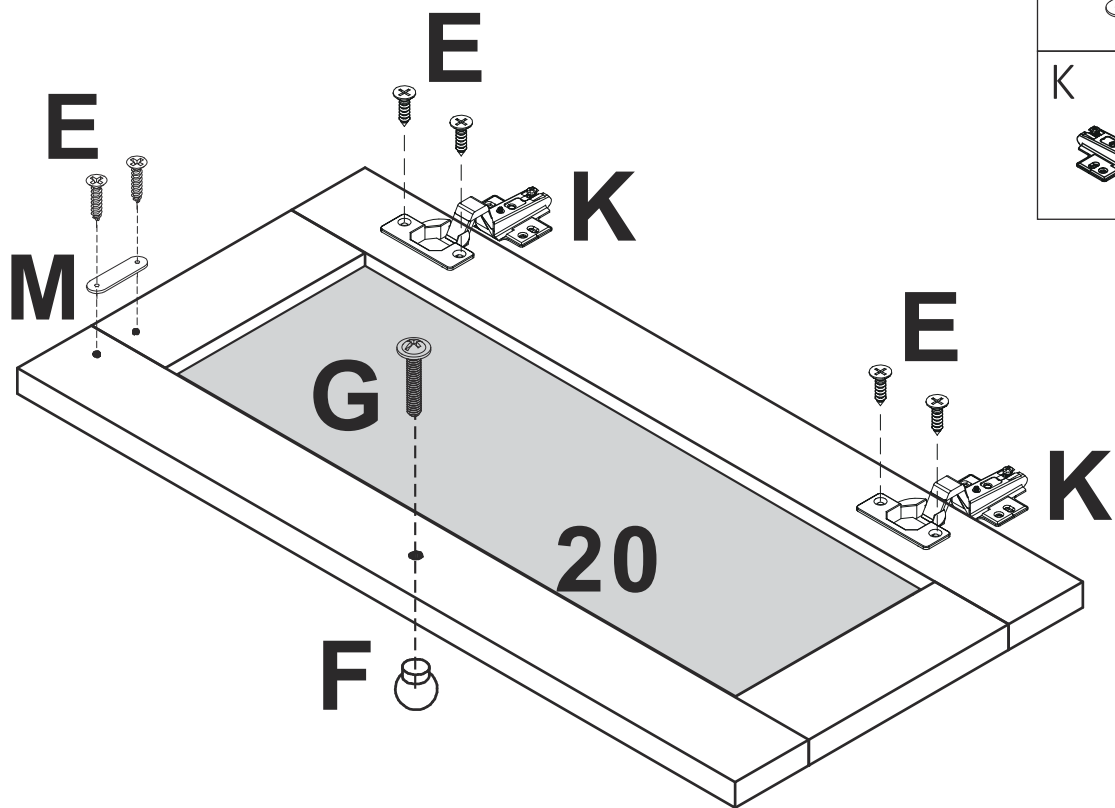

Step 40

I. Attach the hinge (K) on panel (20) to panel (9) and secure it with screws (E).

E X8

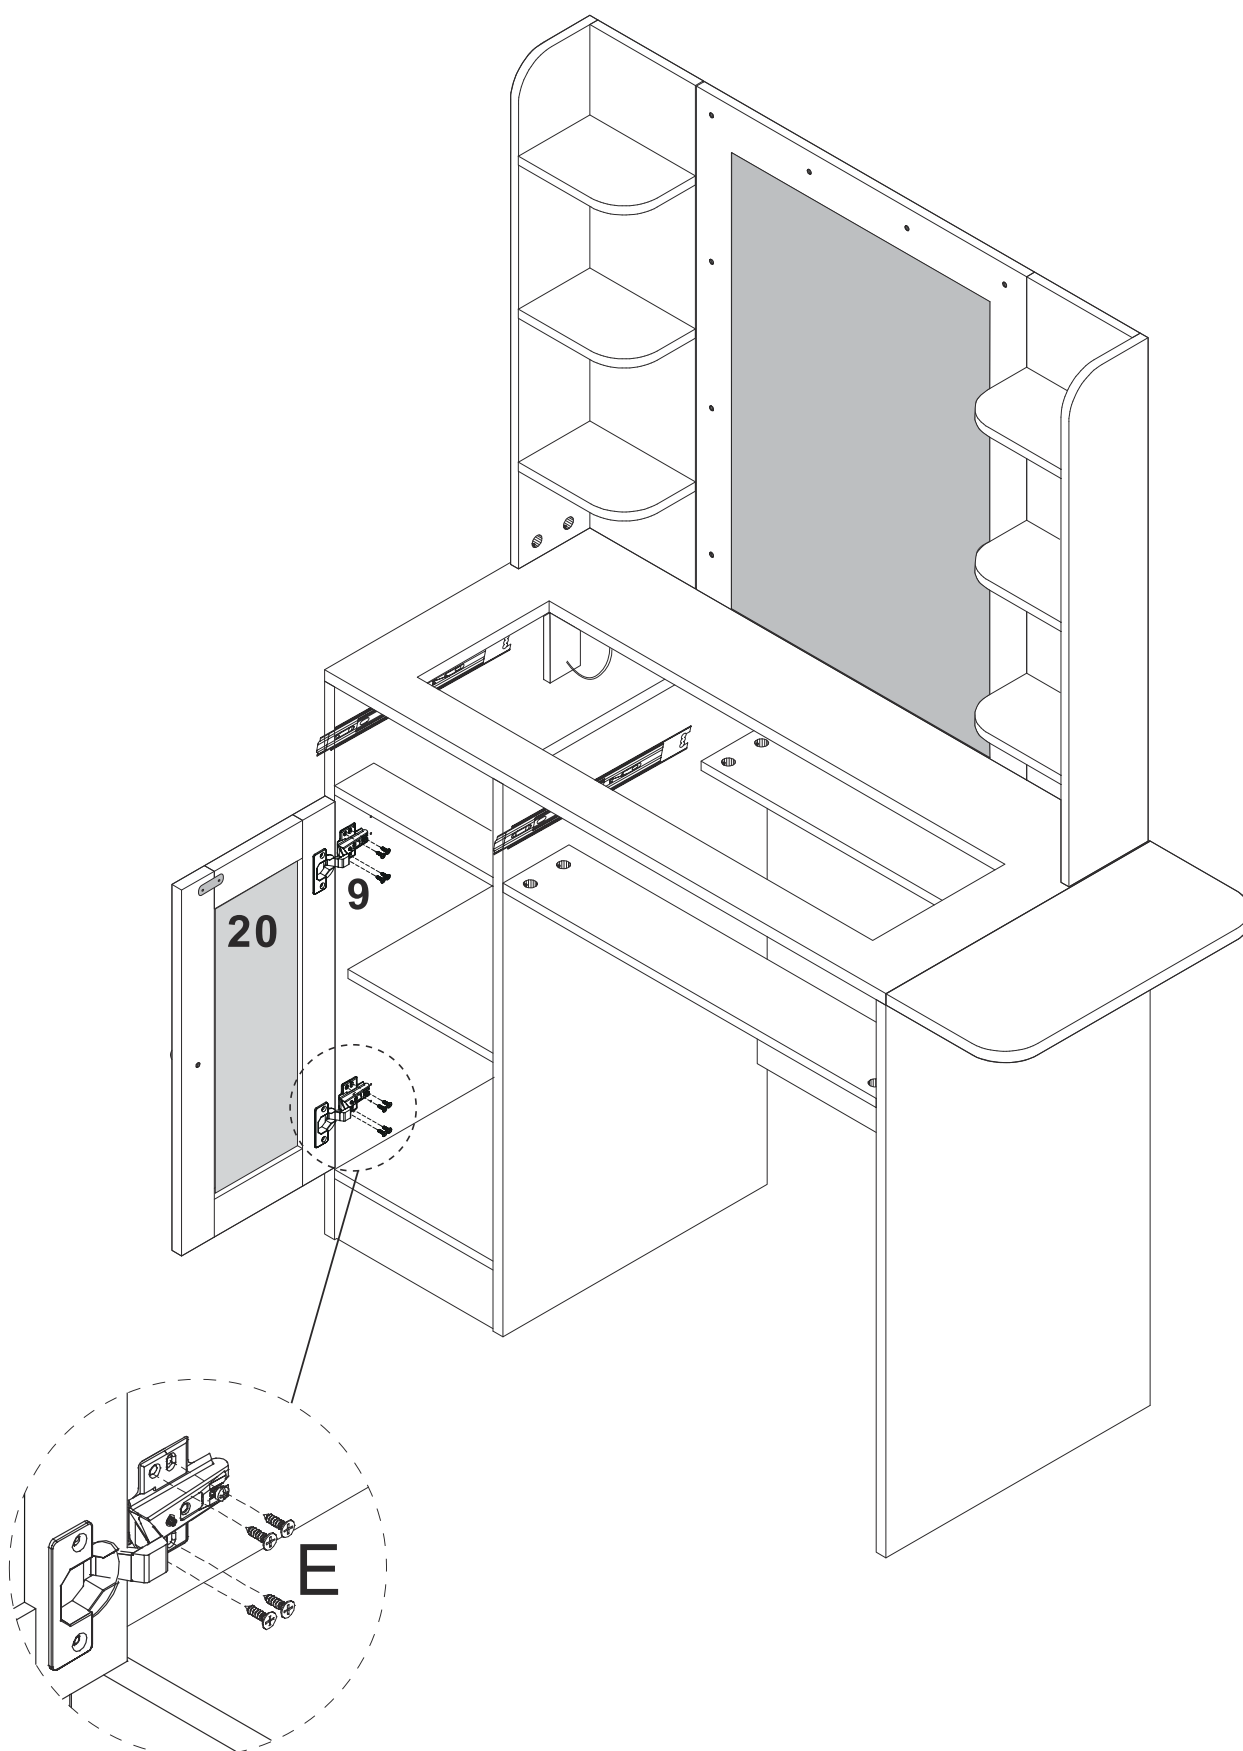


The ways to adjust the door

- Before adjusting the hinge, please check whether the cabinet is skewed.
- If the skew can not be repaired, please remove the anti-tipping device first, then adjust the cabinet to vertical position.
- Please adjust the hinge with the door open.
- Please operate it with more than 2 people, one person holds the door and the other one adjusts the screw.

Components Name

The door side

The cabinet side

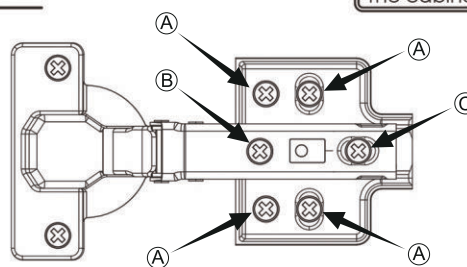


Adjust the depth: If the door is not parallel to the side of the cabinet




Adjust it according to the three steps on the right.


1 Inside the cabinet, turn both hinges to the left to loosen screw "C."

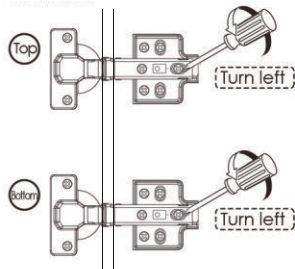

2 Then push the door slightly inward.

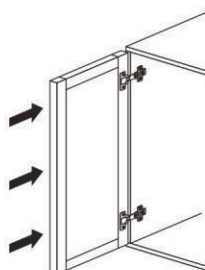


3 Finally, turn both hinges inside the cabinet to the right to tighten screw "C."


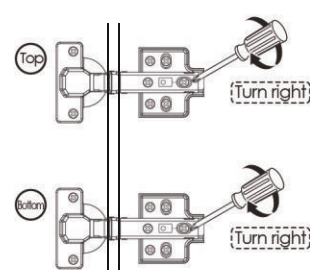


After adjusting screw "C" the door may improve slightly but still not reach the desired result. You can repeat the above steps to fine-tune the adjustment. If there is no change, slightly turn screw "B" to the right.


When door is leaning

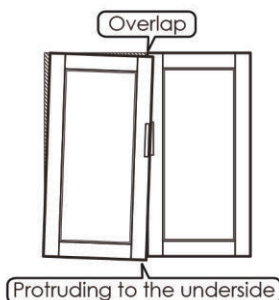


1 Turning screw "B" on the upper hinge inside the cabinet to the left will tilt the top of the door outward.

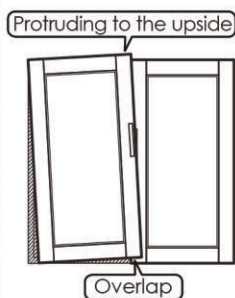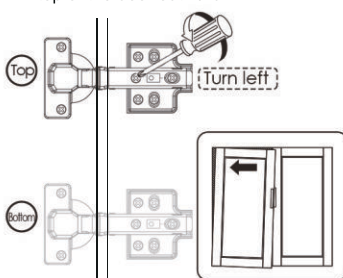



1 Turning screw "B" on the lower hinge inside the cabinet to the left will tilt the bottom of the door outward.

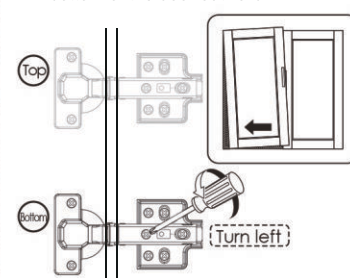

When 2 doors are not tight

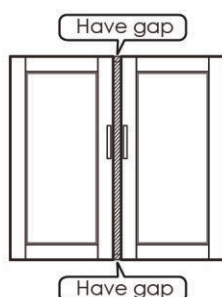


1 To adjust both the left and right doors, turn screw "B" inside the cabinet to the right to move the two doors closer together. Adjust the doors gradually.

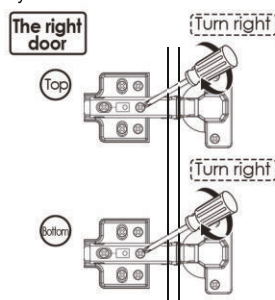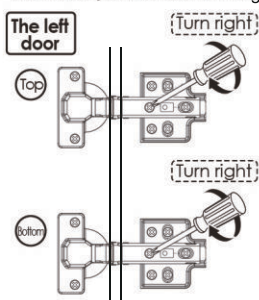


If the two doors overlap, turn screw "B" to the left.


When the door is higher on top

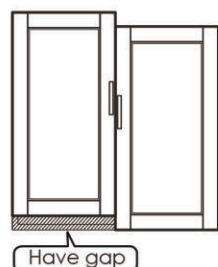


1 To adjust the left door, turn screw "A" on both hinges inside the cabinet to the left to loosen them slightly.

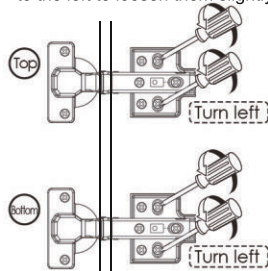

2 Push the left door downward to lower its height so that both doors are aligned at the same level.

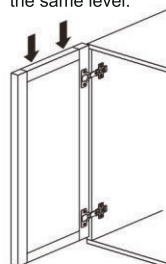




3 Then turn screw "A" to the right to tighten it.

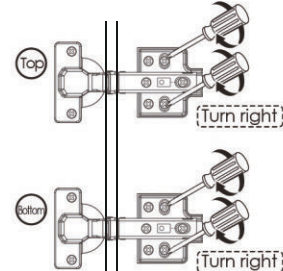

※ If the door is lower on bottom, please lift up the left door slightly on step 2

Step 41

- I. Peel off the adhesive backing from the light strip (T) and the light strip clips (S).
- II. Attach the longest light strip (T) to this side of the cabinet inside panel (8), routing it through the groove on panel (10). Use the light strip clips (S) to hold the light strip (T) in place for added stability.
- III. Attach the shortest light strip (T) to this side of the cabinet inside panel (10), routing it through the groove on panel (13). Use the light strip clips (S) to hold the light strip (T) in place for added stability.

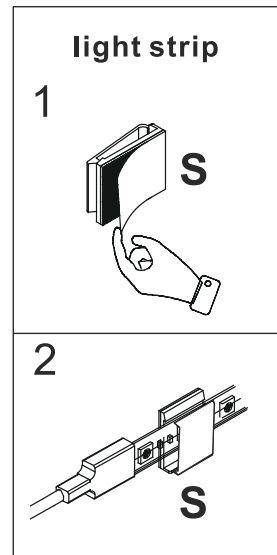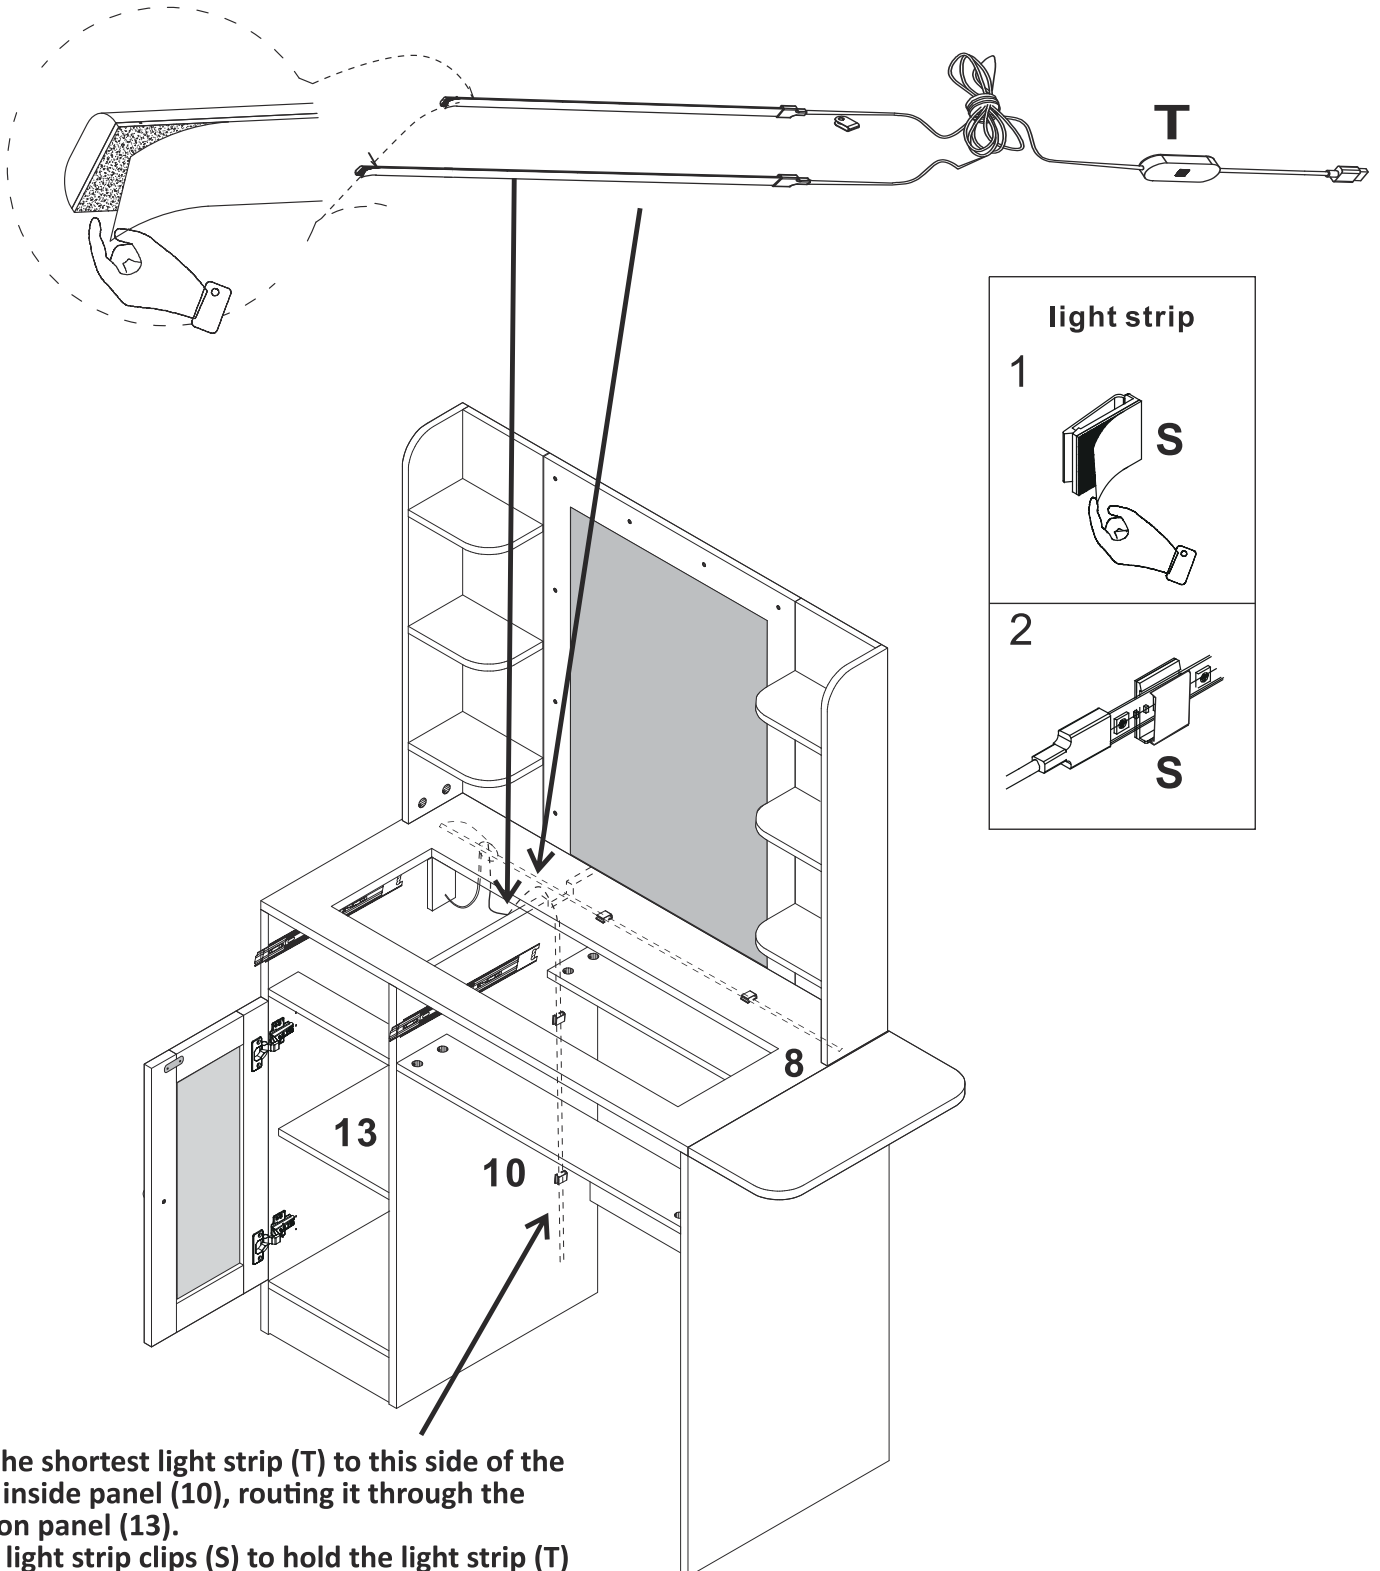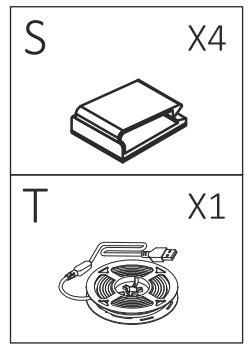


Attach the shortest light strip (T) to this side of the cabinet inside panel (10), routing it through the groove on panel (13). Use the light strip clips (S) to hold the light strip (T) in place for added stability.



Step 42

I. Align the slide rails (D2) on drawers (23 and 28) with the slide rails (D1) inside the cabinet, then slowly push the drawers in until the rails slide smoothly. If the rails do not slide smoothly, repeat the above installation steps.


II. Place the screw hole cover (U) over the visible cam lock (B).

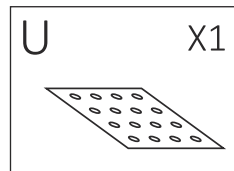

Place the screw hole cover (U) over the visible cam lock (B).

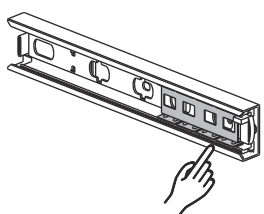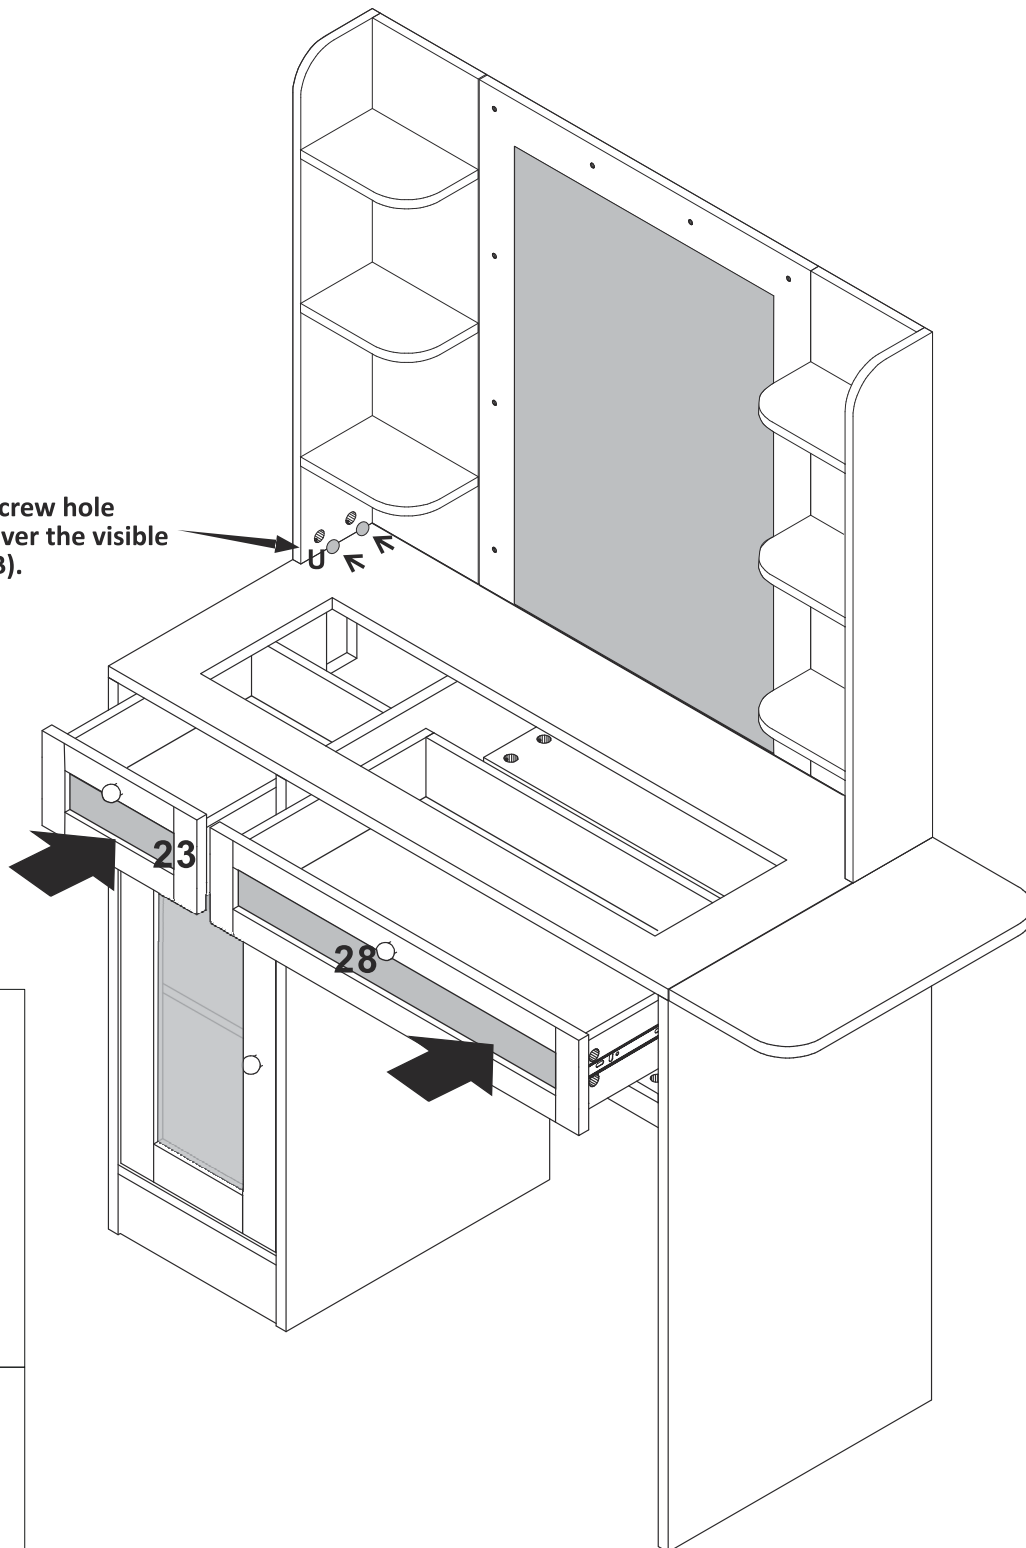


Move the balls of the slide rails on both sides to the position as shown in the figure

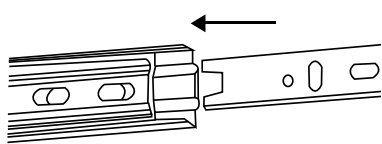

Slide rails on both sides are inserted into the slide groove at the same time

Note on the protective films of the acrylic board


- 1. The protective film on both sides of the acrylic sheet is a specialized membrane designed to safeguard the surface. It is typically applied to both faces of the sheet, providing comprehensive surface protection during transportation, storage, processing, and installation.*
- 2. Follow the illustrated pattern and begin removing the protective film from one corner.*
- 3. The protective films on both sides of the panel must be removed together.*

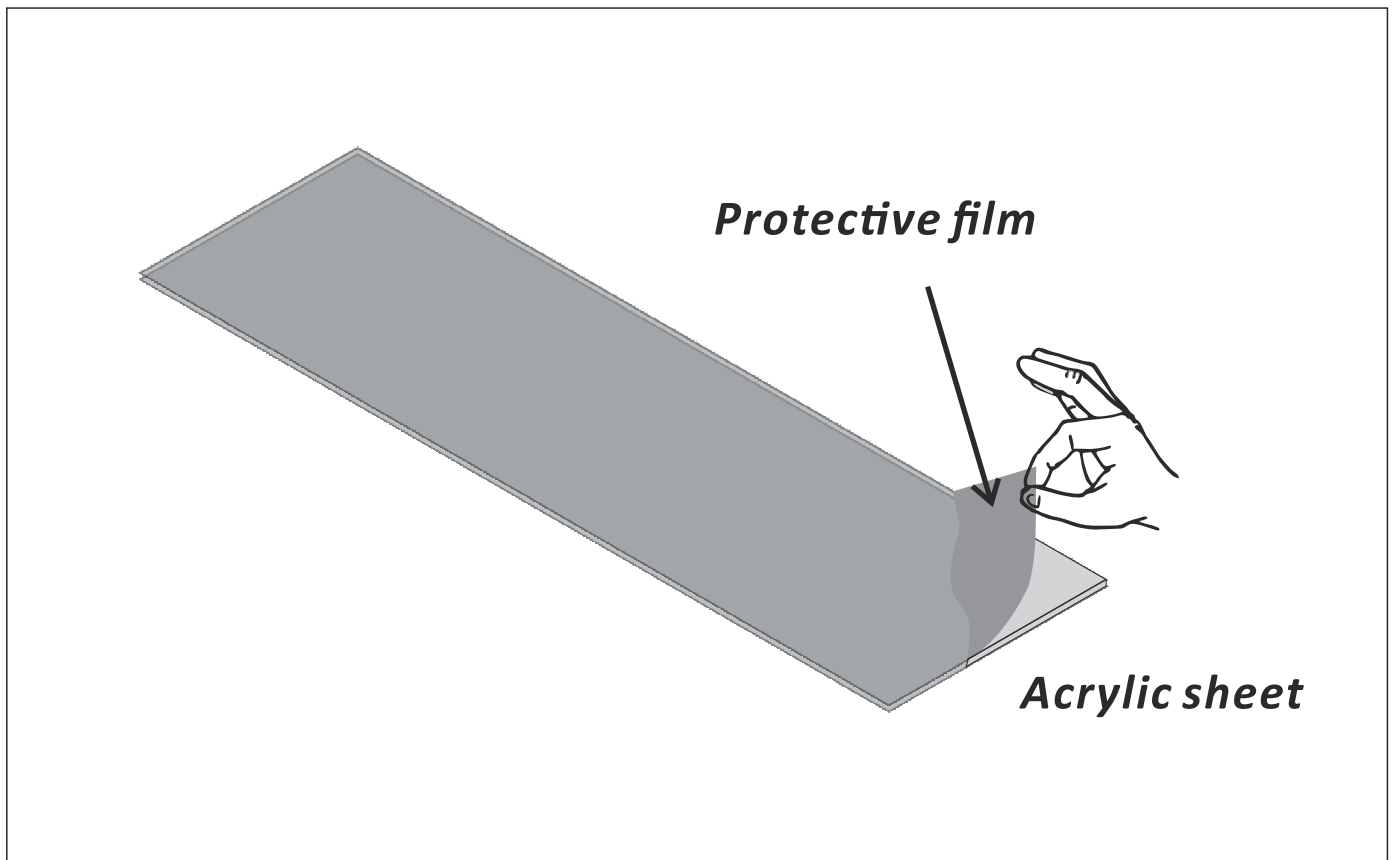

Step 43






I. Insert the thinnest side of the plastic part (N) into the gap between the back panel and the cabinet, then secure it with screws (P).

N	X8
	
P	X8
	

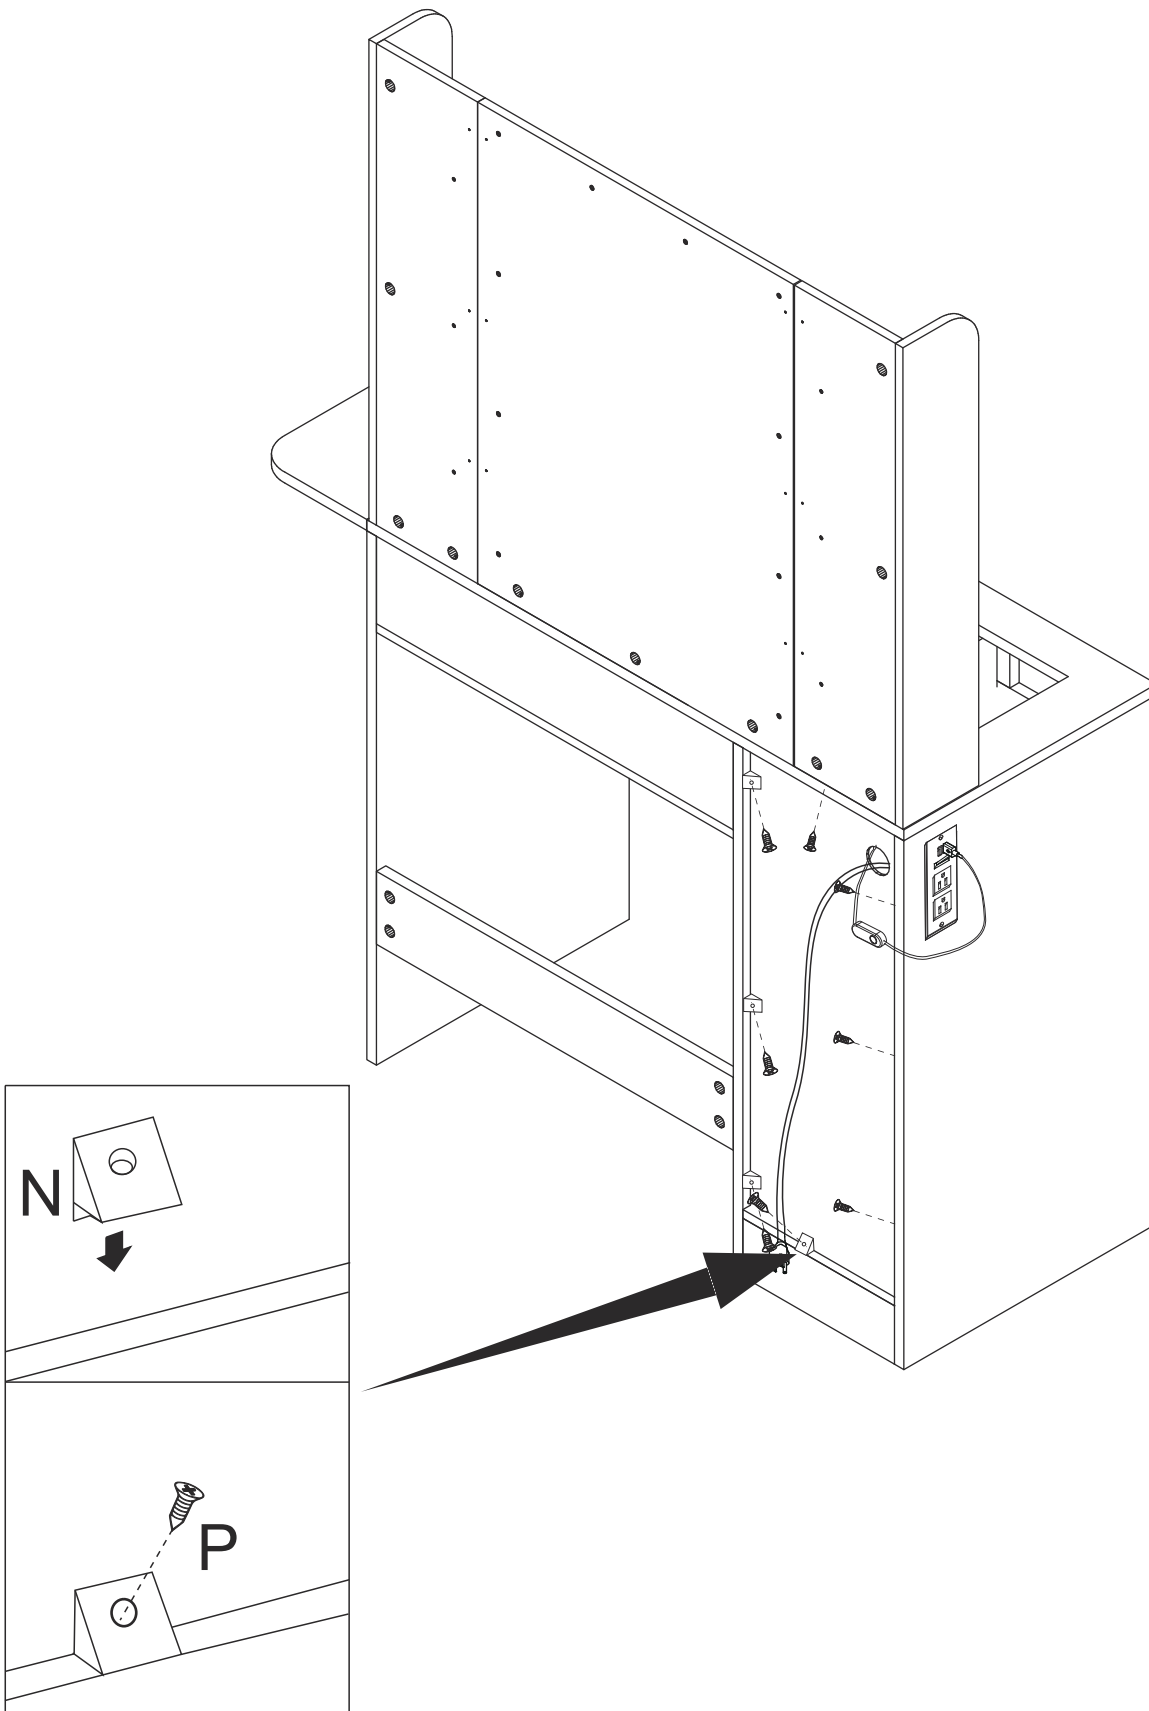

Step 44

- I. Use the nut (Q) to secure the bulb (Q) to panel (1).
- II. Install the anti-tip accessory (V) by securing it to panel (11) with the short screws (V).

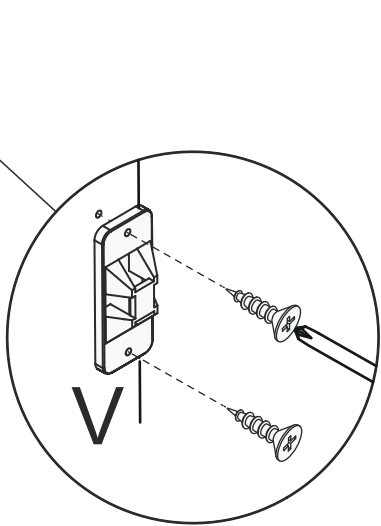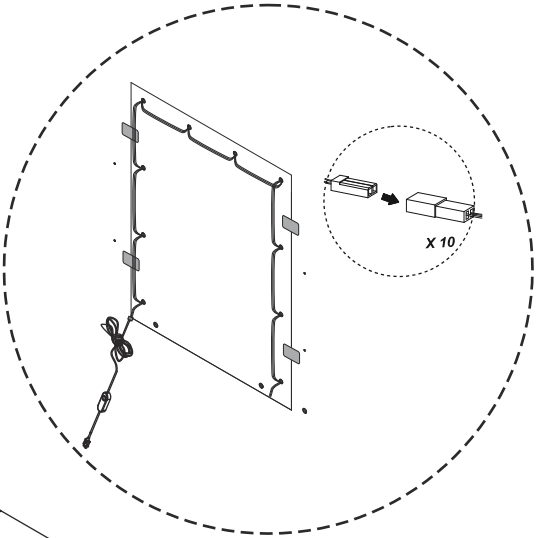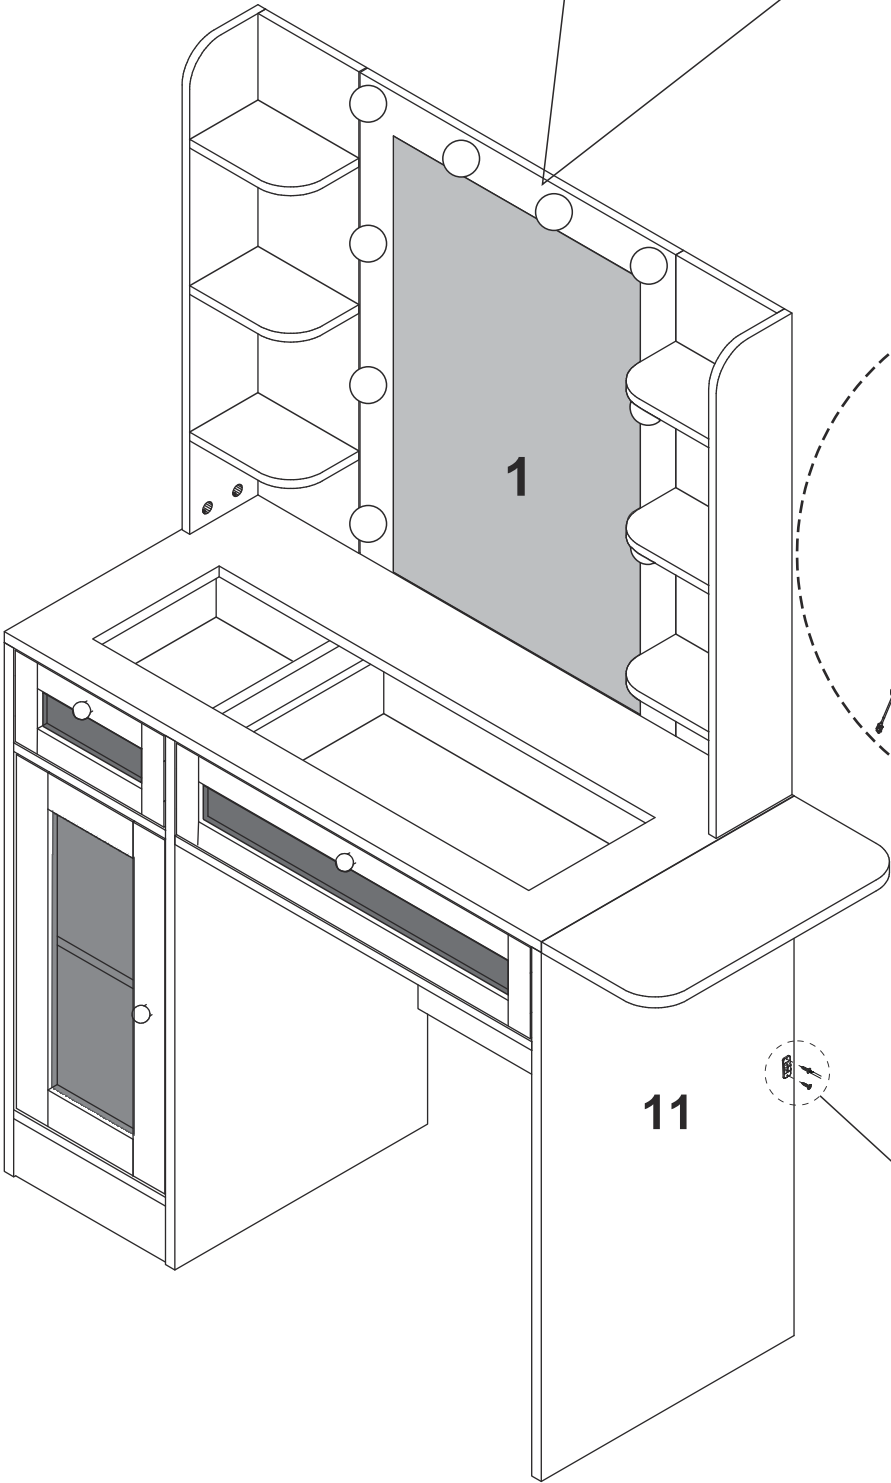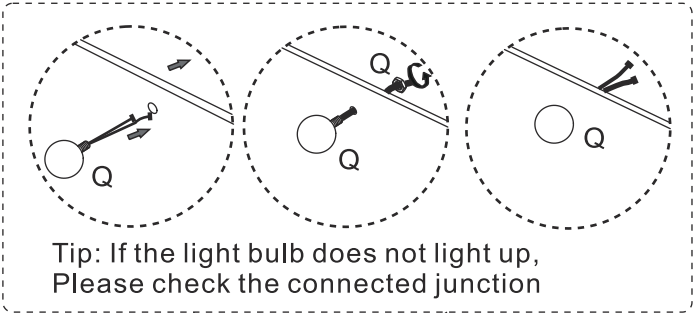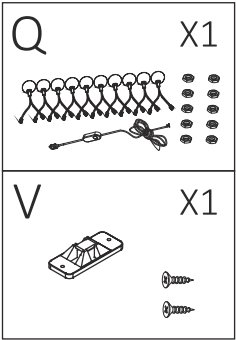

Step 45

- I. Mark the drill position on the wall with a pencil.
- II. Drill a small hole on the marked position.
- III. Insert drywall anchor (V) into the drilled hole.
- IV. Use long screw(V) to fix it to the drywall anchor(V).
- V. Use the plastic strap (V) to connect the plastic piece on the wall to the plastic piece on panel (11).

