


# Assembly Instruction

**CAUTION:** Read instruction carefully and turn electricity off at main circuit breaker panel before beginning installation.

Size: 14.5"L X 14.5W X 16.5"H

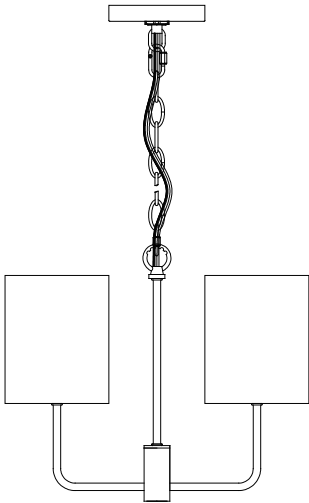

## Care and Cleaning

To clean the outside fo the fixture,use a dry or slightly dampened clean cloth(use clean water,never a solvent)to wipe the surface of the fixture.

To clear the inside of the fixture,first disconnect power to the fixture by turning off the circuit breaker or by removing the fuse at the fuse box.Next,use a dry or slightly dampened clean cloth(use clean water,never a solvent) to wipe the interior surface of the fixture

Do not use any cleaners with chemical,solvents or harsh abrasives.Use Only a dry soft cloth to dust or wipe carefully.

Estimated Assembly Time: 30 minutes

## Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Mounting bar		1X	H	Bulb		4X
A1	Mounting screw		2X	I	Socket ring		4X
B	Canopy		1X	J	Fabric shade		4X
C	Lock		1X	K	Fixture body		1X
D	Canopy ring		1X				
E	Chain		1X				
G	Central rod		1X	O	Wire nut		3X

# Installation

## Step 1


Attach the central rod (G) to the fixture body (K1), then install the fabric shade (J) to the socket with socket ring (I), finally place the bulb (H) to the socket.

**\*Note:**Please use type"B"bulb max 40-watt or CFL bulb max 13-watt or LED bulb max 9-watt  
There are 4pcs LED 4-watt bulbs in the box

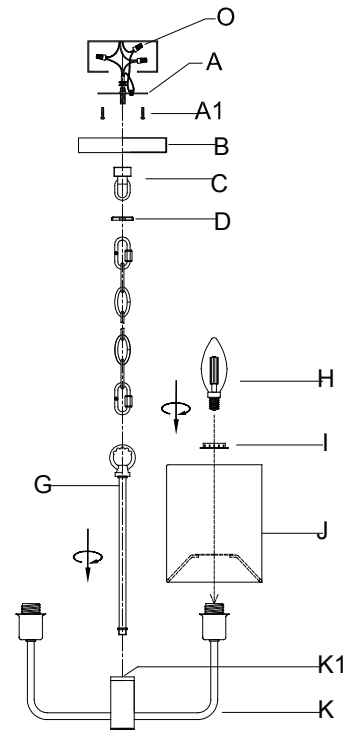


## Step 2 Wire Connetion

Connect,Hot,Black or Red outlet Supply Wire to:	Connect,Neutral,White Outlet Supply Wire to:
Black	White
* Parallel Cord(round & smooth)	* Parallel Cord(square& ridged)
Clear,Brown,Gold or Black without Tracer(colored stripes)	Clear,Brown,Gold or Black without Tracer(colored stripes)
Insulated Wire(not green) with copper metal conductor	Insulated Wire(not green) with Silver metal conductor



**\*Note:** When parallel wire(SPT I & SPT II) is used.The neutral wire is square shaped and ridged and the hot wire will be round in shape and smooth.(See illustration on left.)

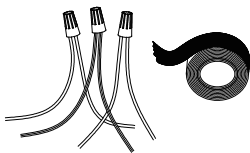

## Step 3

Grounding Instructions:

- a) For installation in the United States: Wrap ground wire from outlet box around green ground screw on mounting bracket, no less than 2" from wire end. Tighten ground screw. If fixture is supplied with a ground wire, connect to outlet ground wire with a wire connector.
- b) For installation in Canada: If fixture is supplied with ground wire, wrap ground wire around green grounding screw on mounting bracket. Tighten ground screw.

## Step 4

Attach the mounting bar (A) to the junction box with mounting screw (A1),fix the collar loop (C) to the mounting bar (A), then connect the chain (E) to the collar loop (C) and central rod (G), finally fix the canopy (B) with canopy ring (D).

## Step 5

Installing whole body to the lock(C)

## Step 6

Consult a qualified electrician to ensure correct branch circuit conductor

ENJOY YOUR LAMP

