
WLIVE



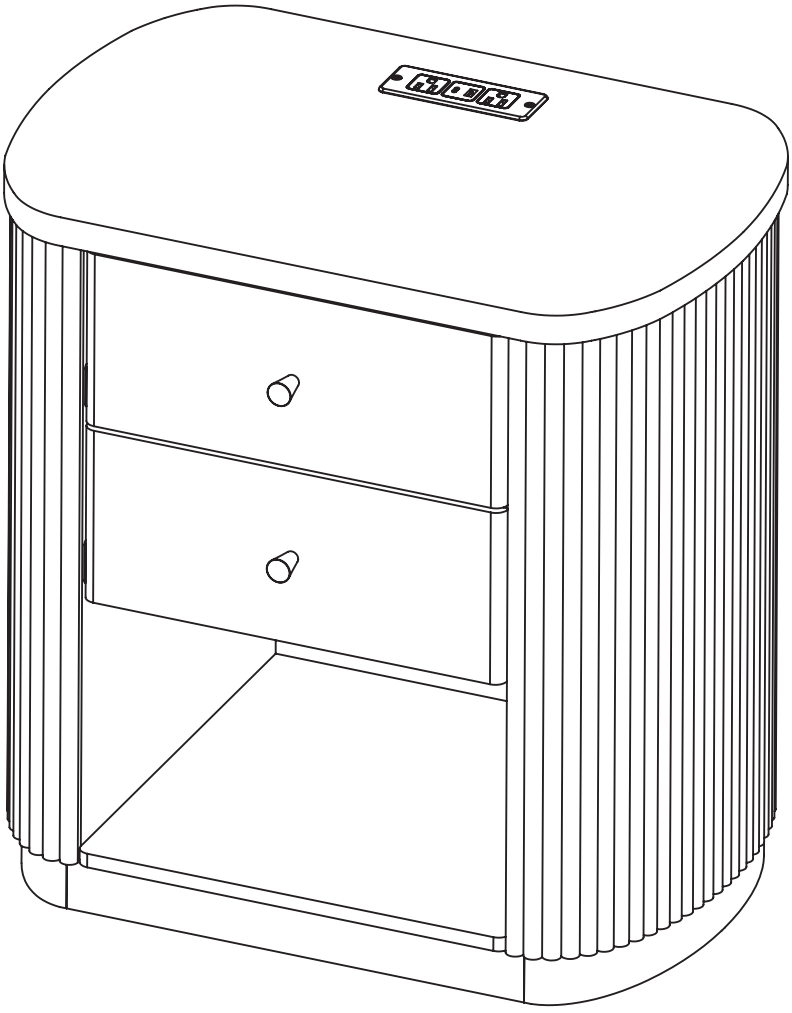

V5.1.0


# ACTG047

Night Stand

# IMPORTANT INFORMATION
# READ CAREFULLY.
# KEEP THIS INFORMATION FOR FURTHER REFERENCE.

## GENERAL GUIDELINES

Please read the following instruction carefully and use the product accordingly.
Please keep this manual and hand it over when you transfer the product.
This summary may not include every detail of all variations and considered steps.
Please contact us when further information and help are needed.

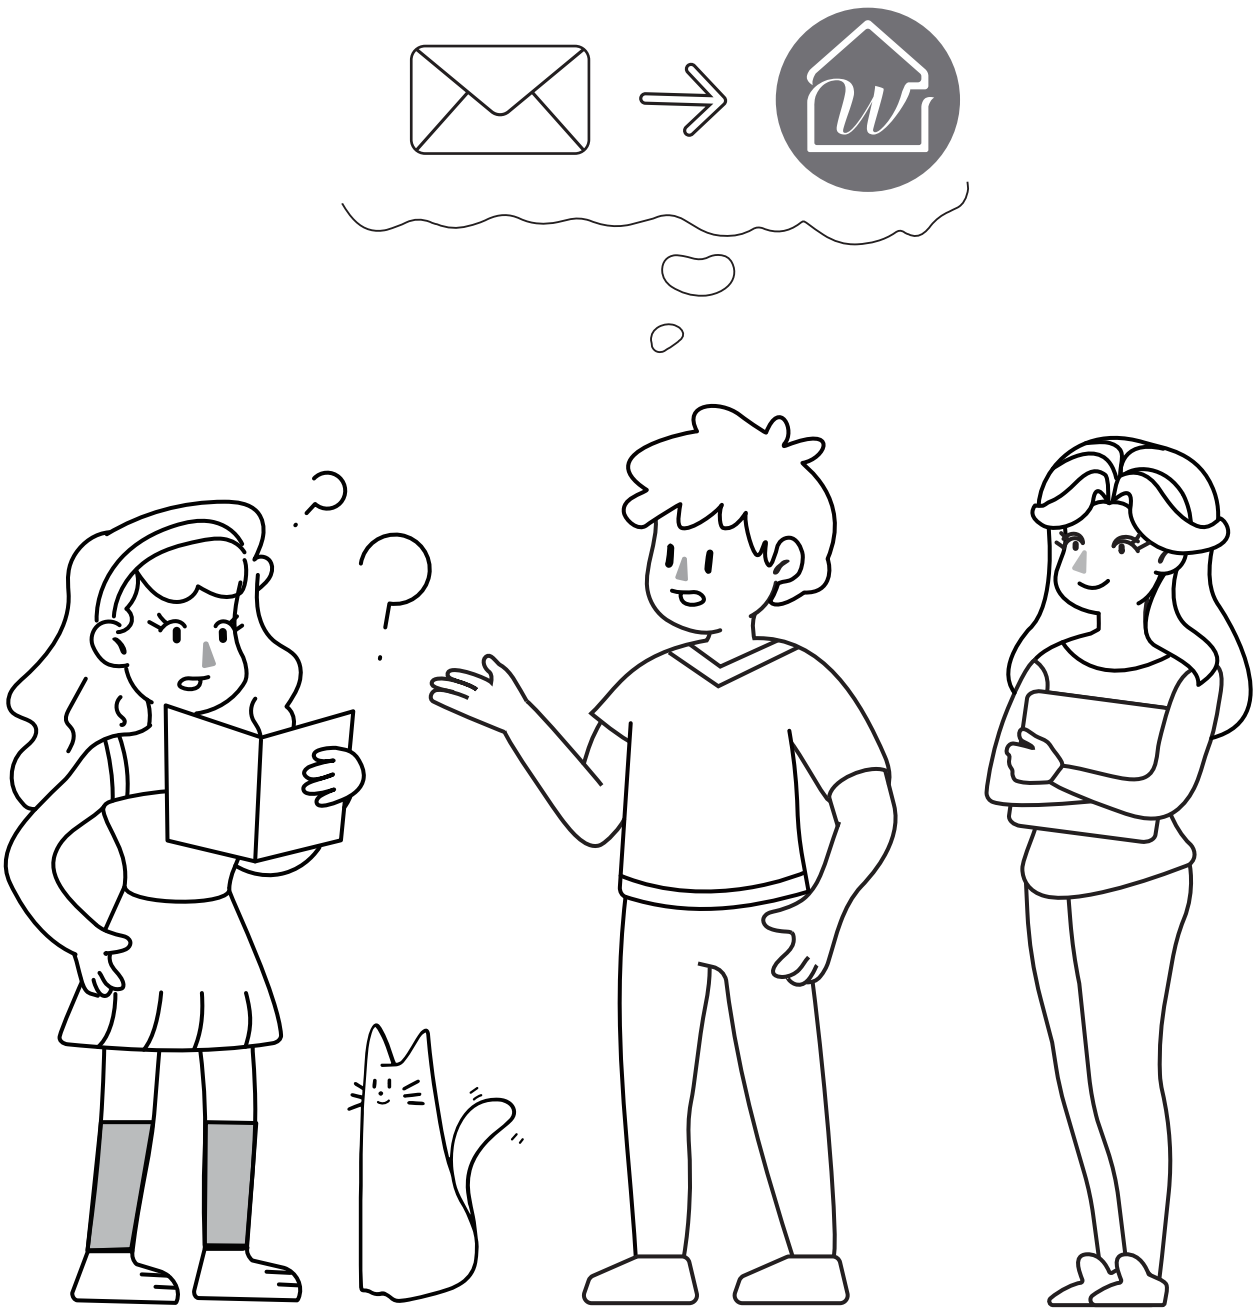

# NOTES

Please follow the assembly instructions precisely and only use the product as intended.

If an odor is present when first opening the package, please leave the unwrapped product in a shaded and ventilated area for a few days to air out.Please follow the assembly instructions precisely and only use the product as intended.

Prior to assembly, please check the product for defects or missing accessories. If any defects are found or accessories are missing, do not use product as damage or injury may occur;
Please contact us for assistance and replacement.

It is suggested you regularly check the products bolts and connections to ensure safe use.

Assemble the item on a soft flat and clean surface to avoid scratches and damage.


It is recommended that two people assemble this product.During assembly, please only slightly tighten all screws in their correct position first, then fully tighten them. A Philips screwdriver is recommended but not included.

# WARNINGS

During assembly, keep parts and packaging materials away from children and pets as there could cause injury and are a potential choking hazard.


Avoid sharp objects or corrosive chemicals to prevent damage to the product.

Please open the item slowly and cautiously to avoid pinching your hands by metal joints, especially children.

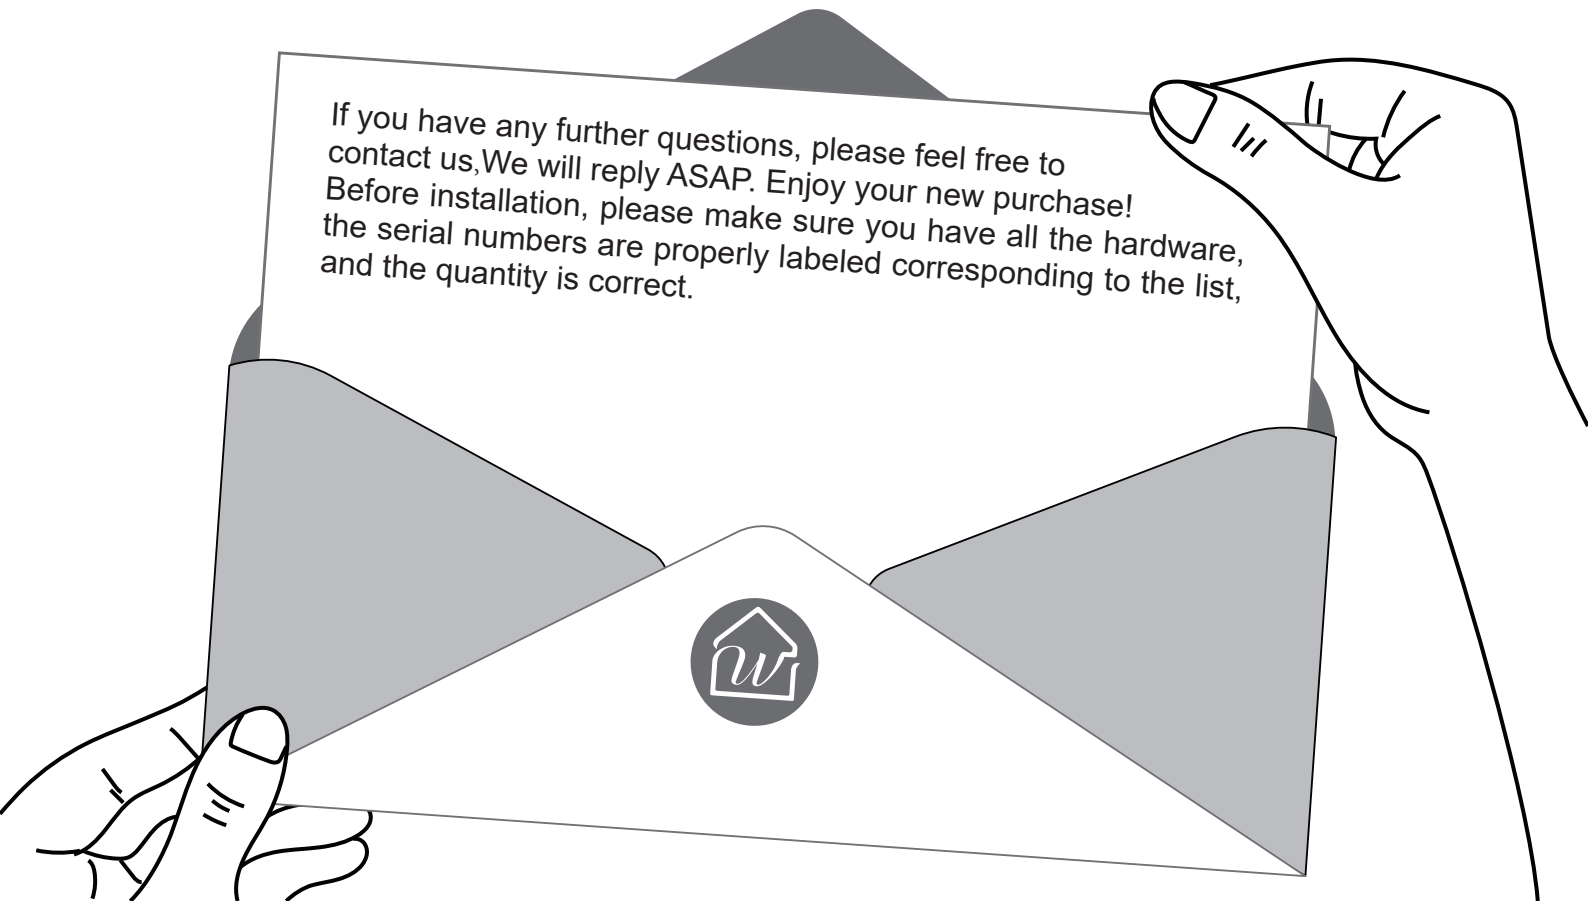


# INSTRUCTIONS


❶

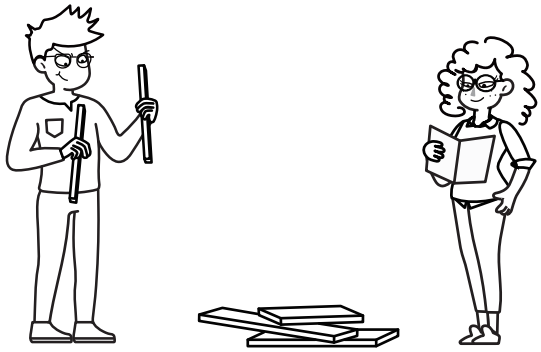

❷

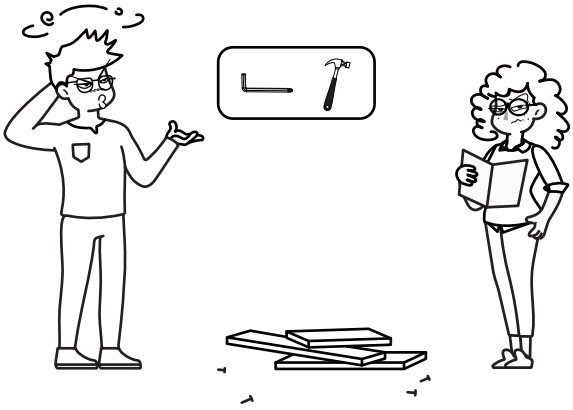


❸

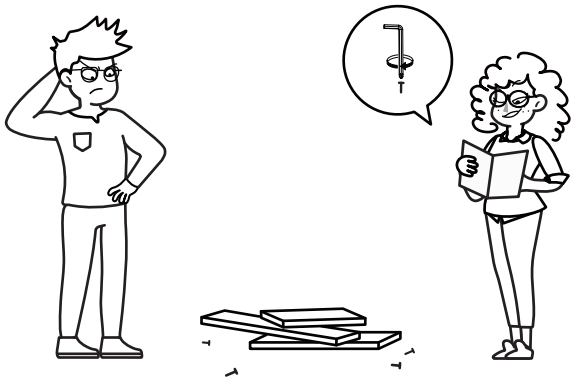


❹




❺

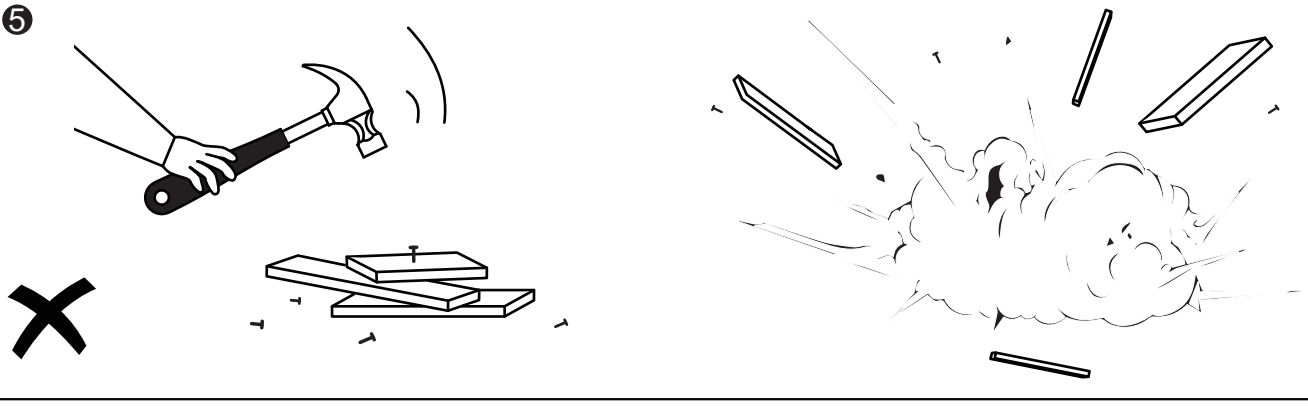


❻

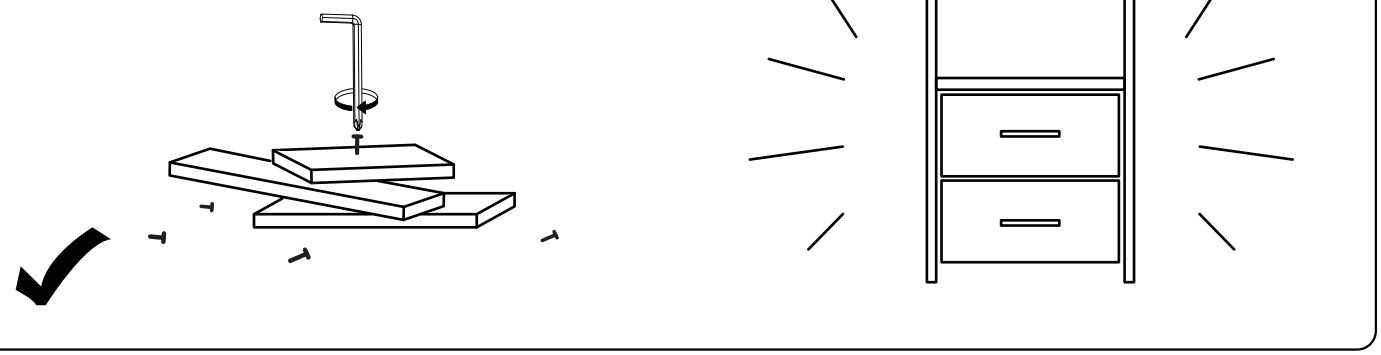

# EXPLODED DRAWING

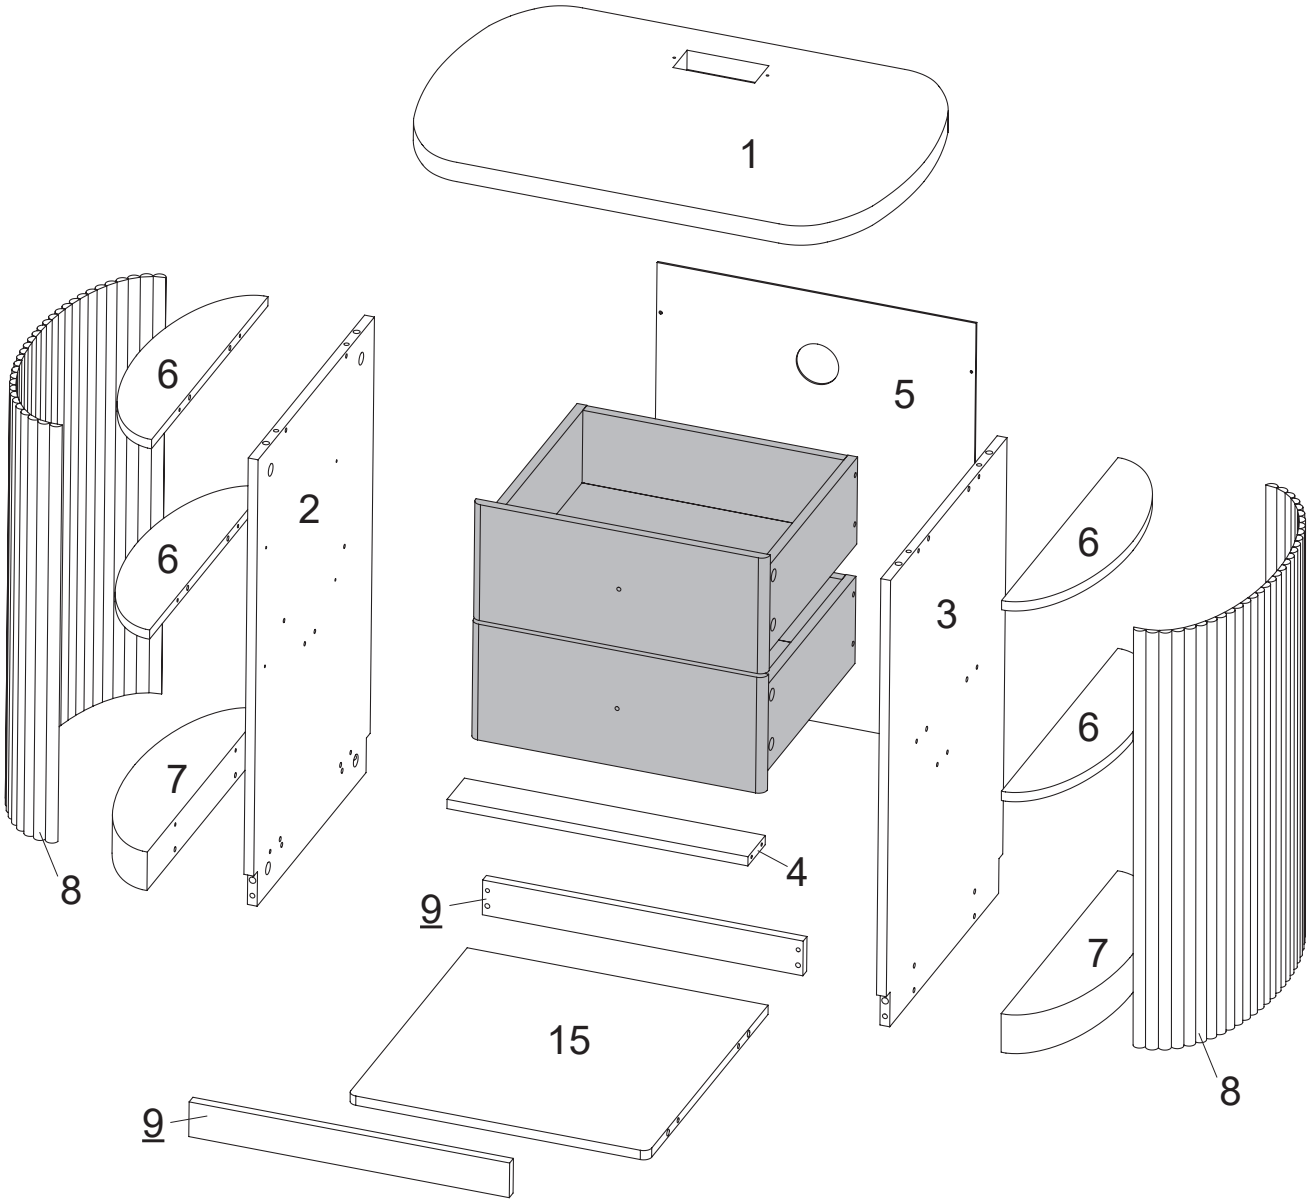

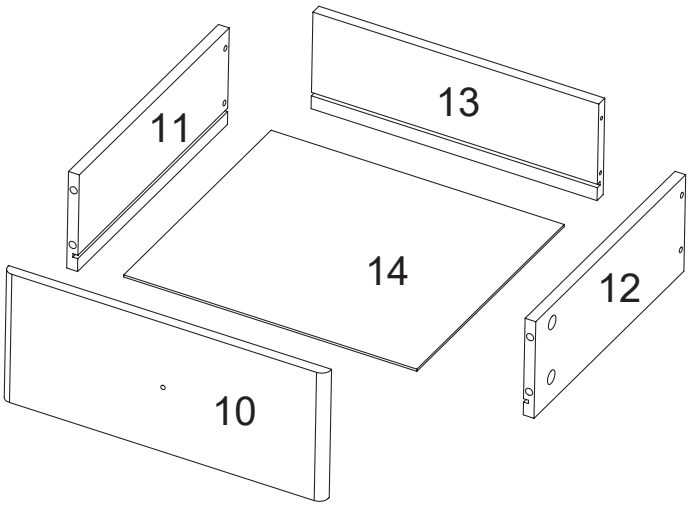
X2

# PARTS

**A** X20




**B** X24



**C** X20




**D** X2

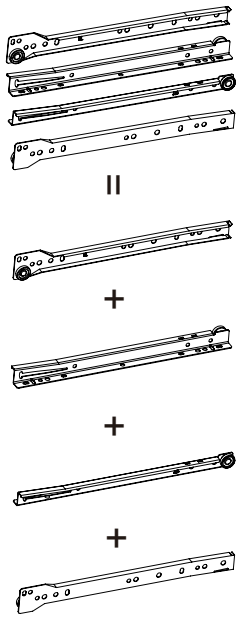



**E** X20




**F** X18
M4x11




**G** X24
M5x38




**H** X6
M4x12




**I** X2




**J** X2
M4x20



**K** X1



**L** X1





**M** X4



# REMARK


## MINIFIX POSITION

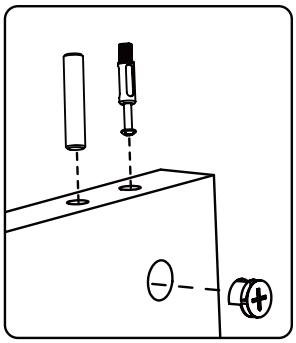

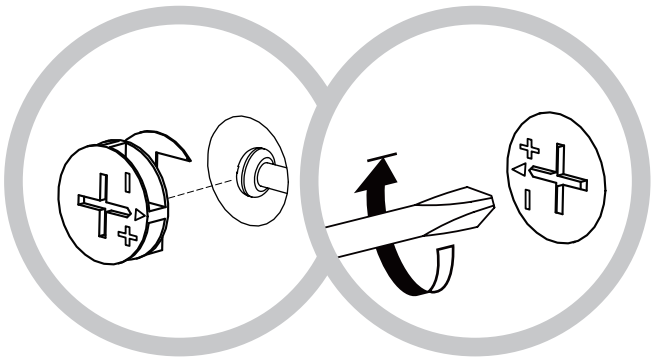


# Step 1


Put a blanket under the board to avoid scratch or damage.

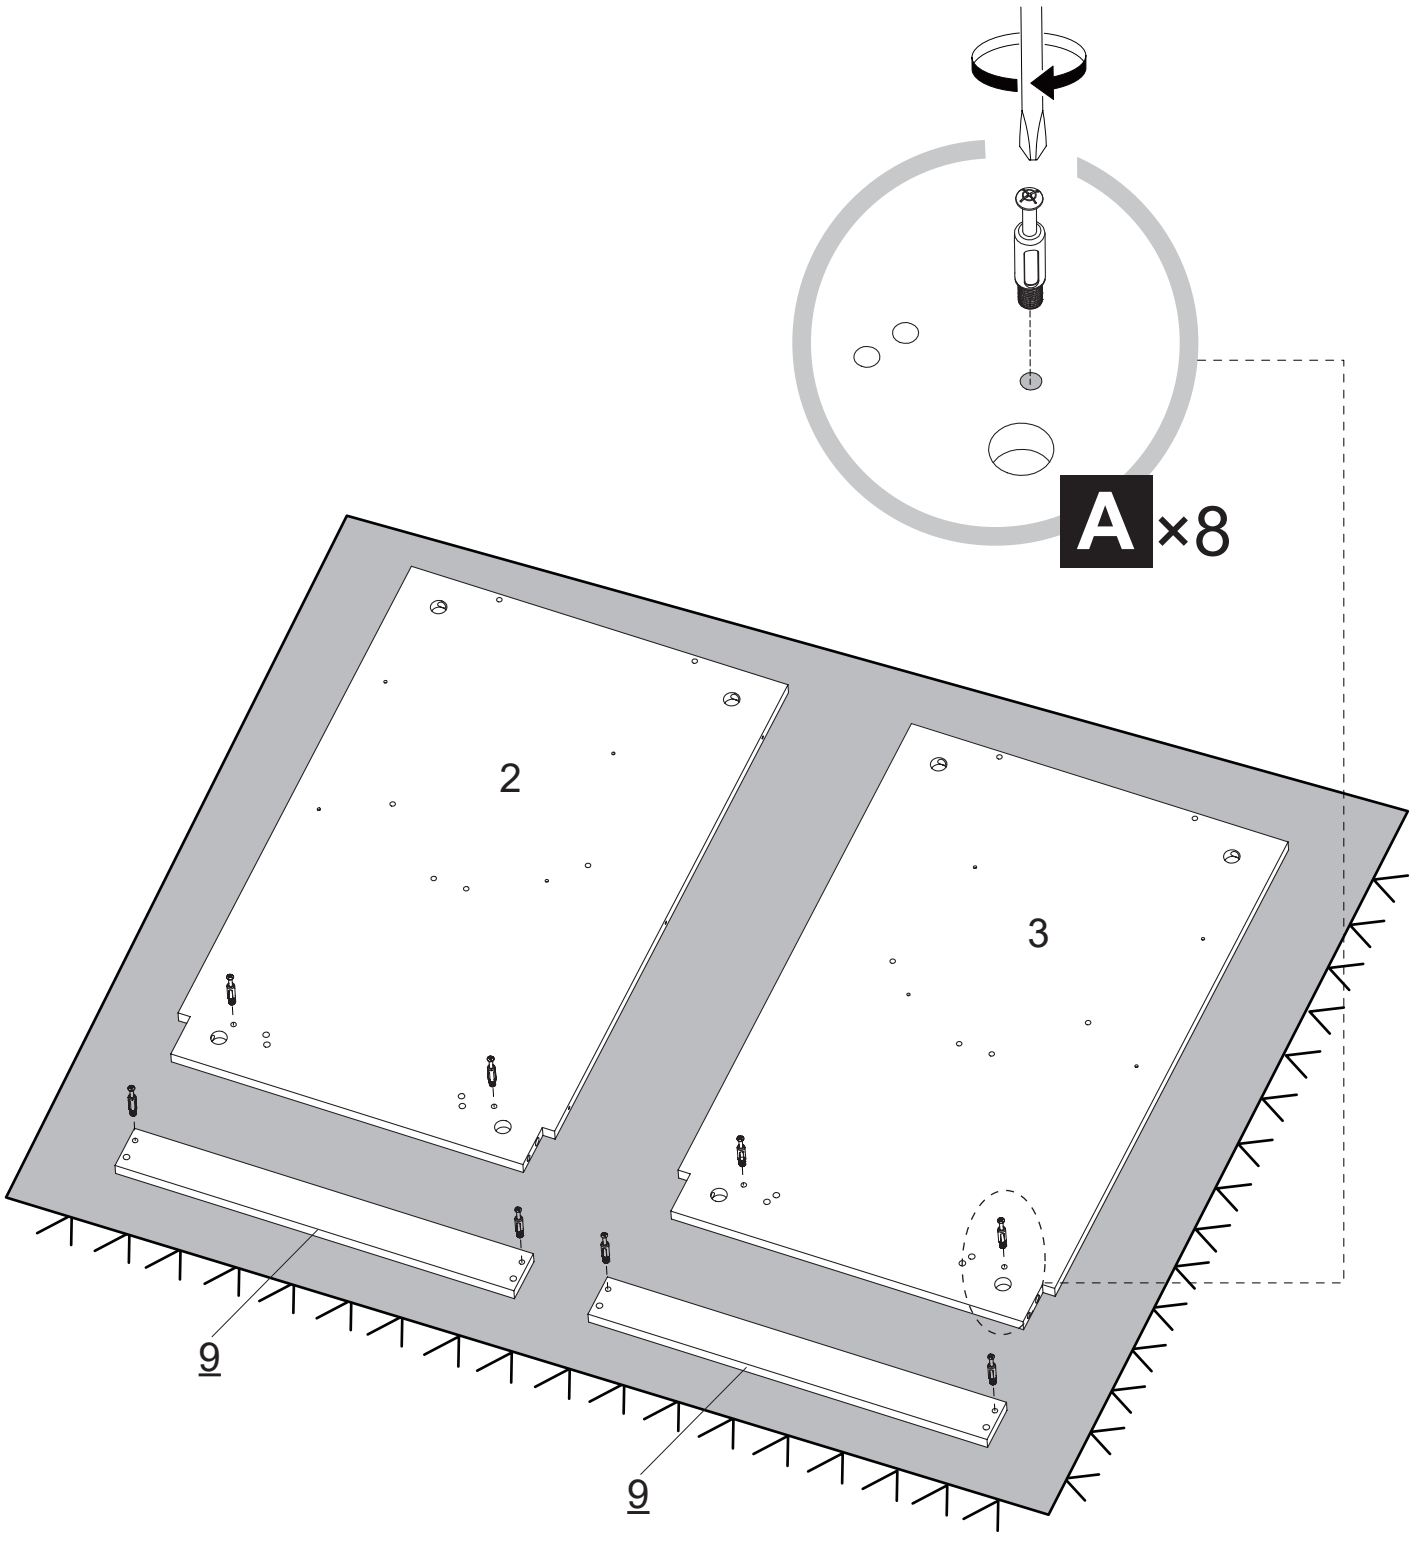


# Step 2


When installing, please make sure the screws are flattened, not crooked; Otherwise the drawers will not be installed perfectly.

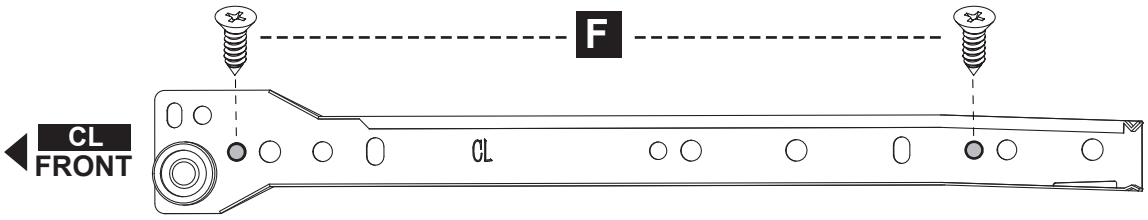


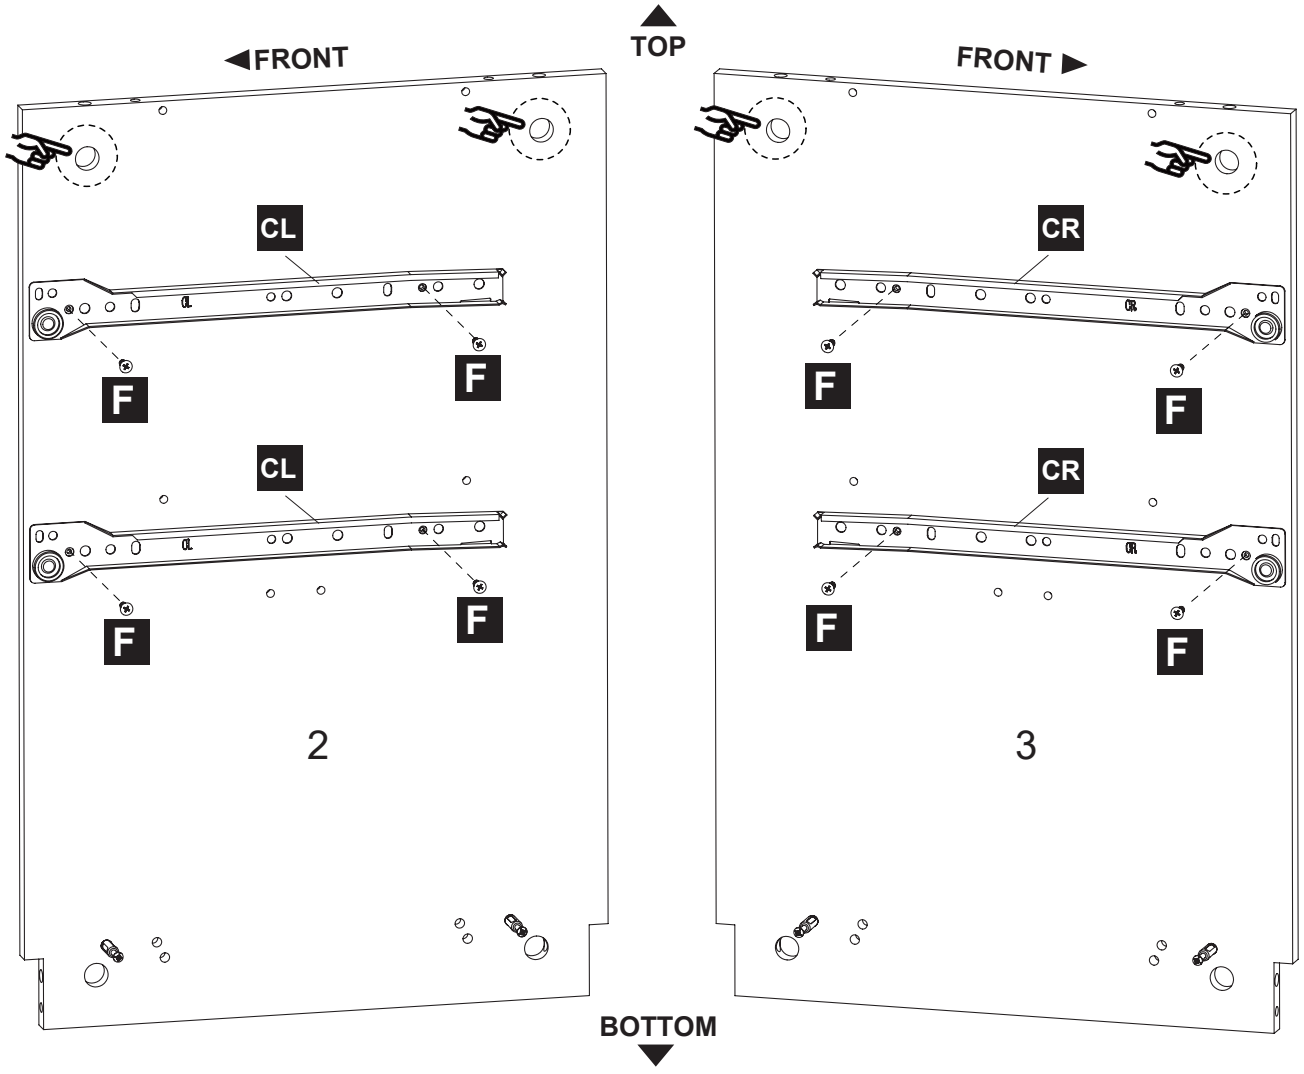



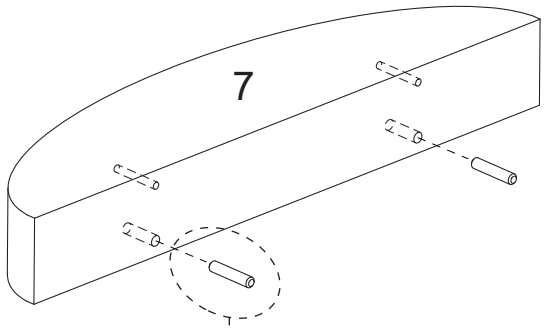
# Step 3

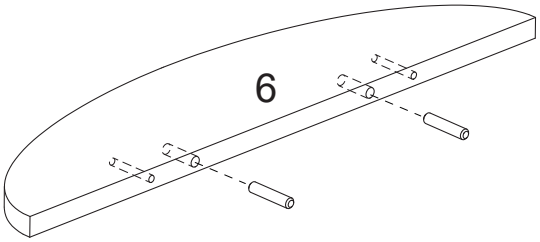


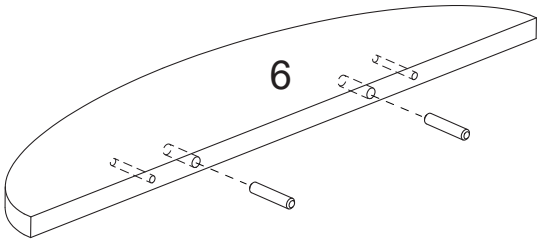


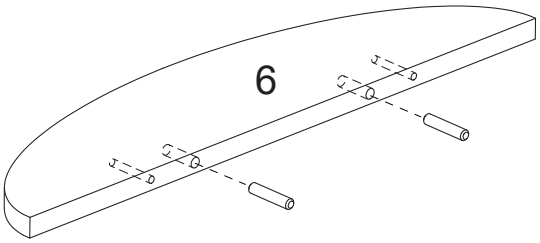
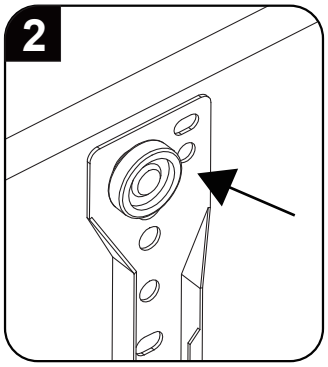


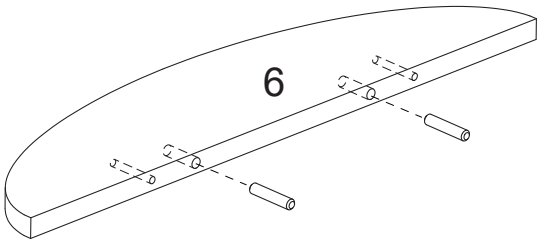
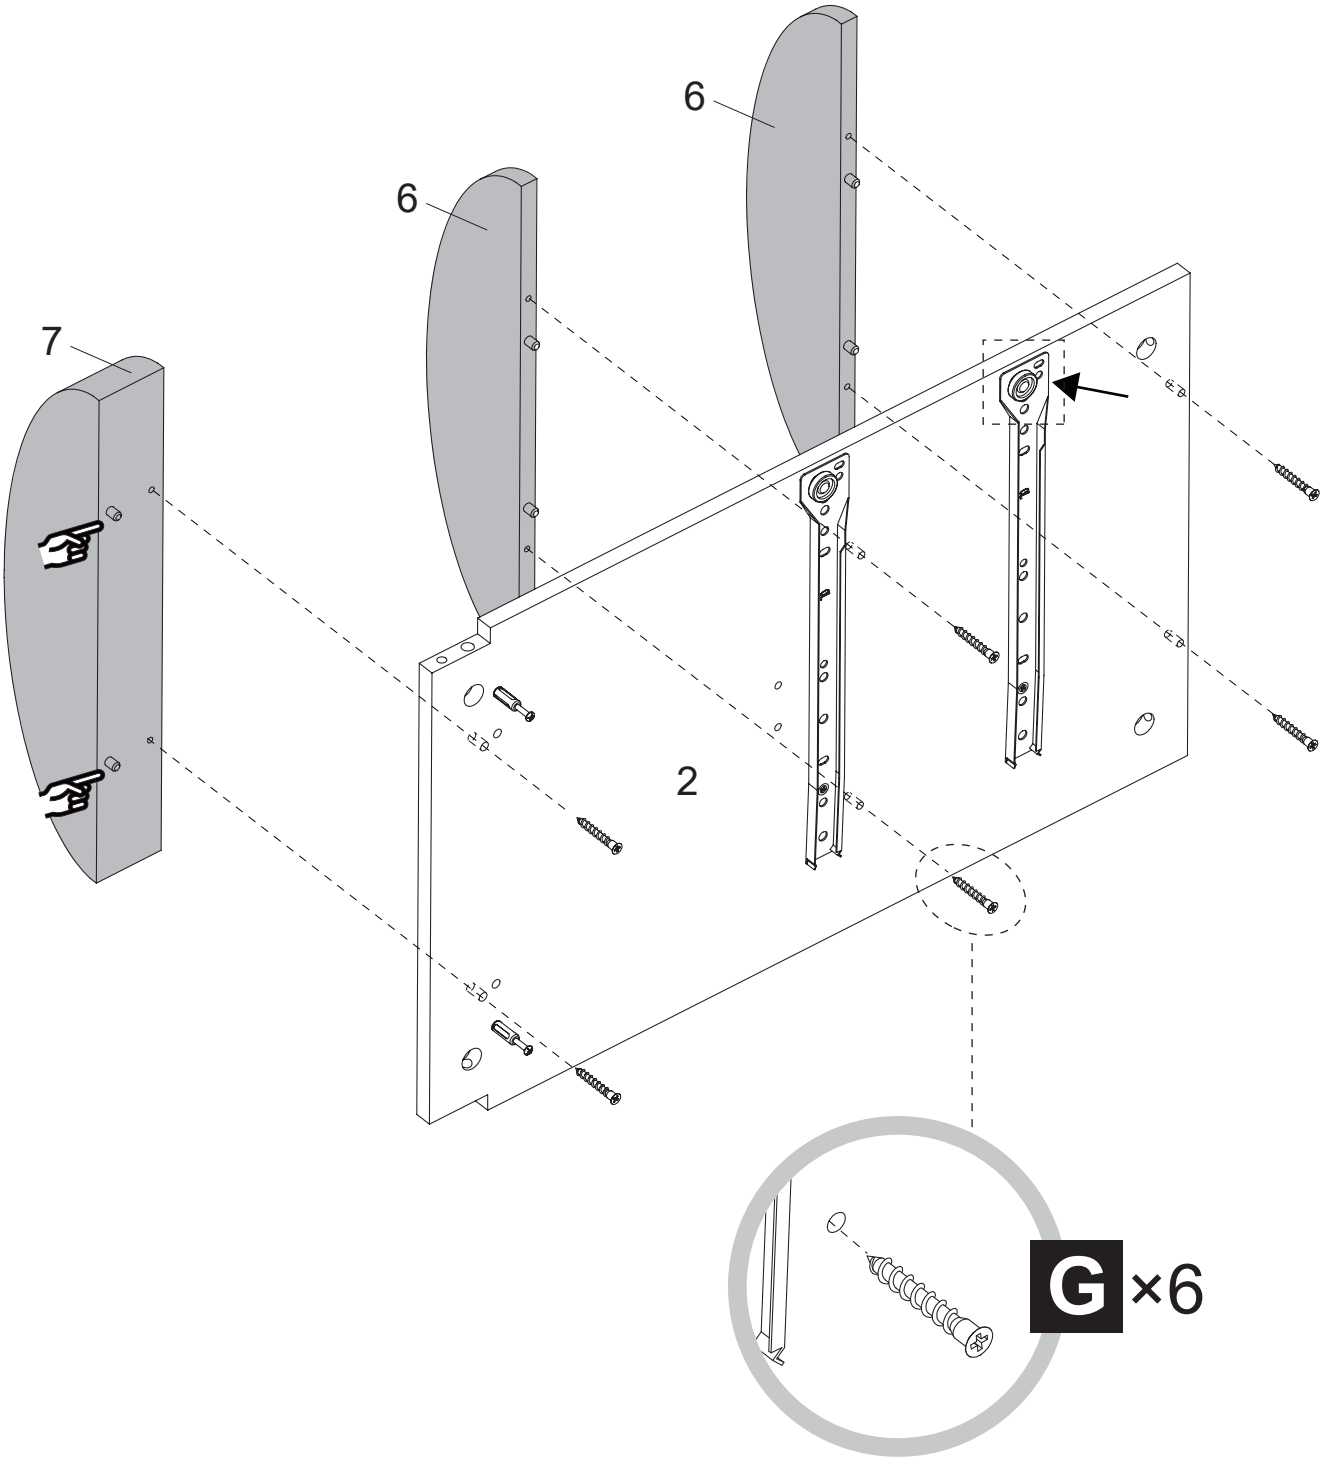



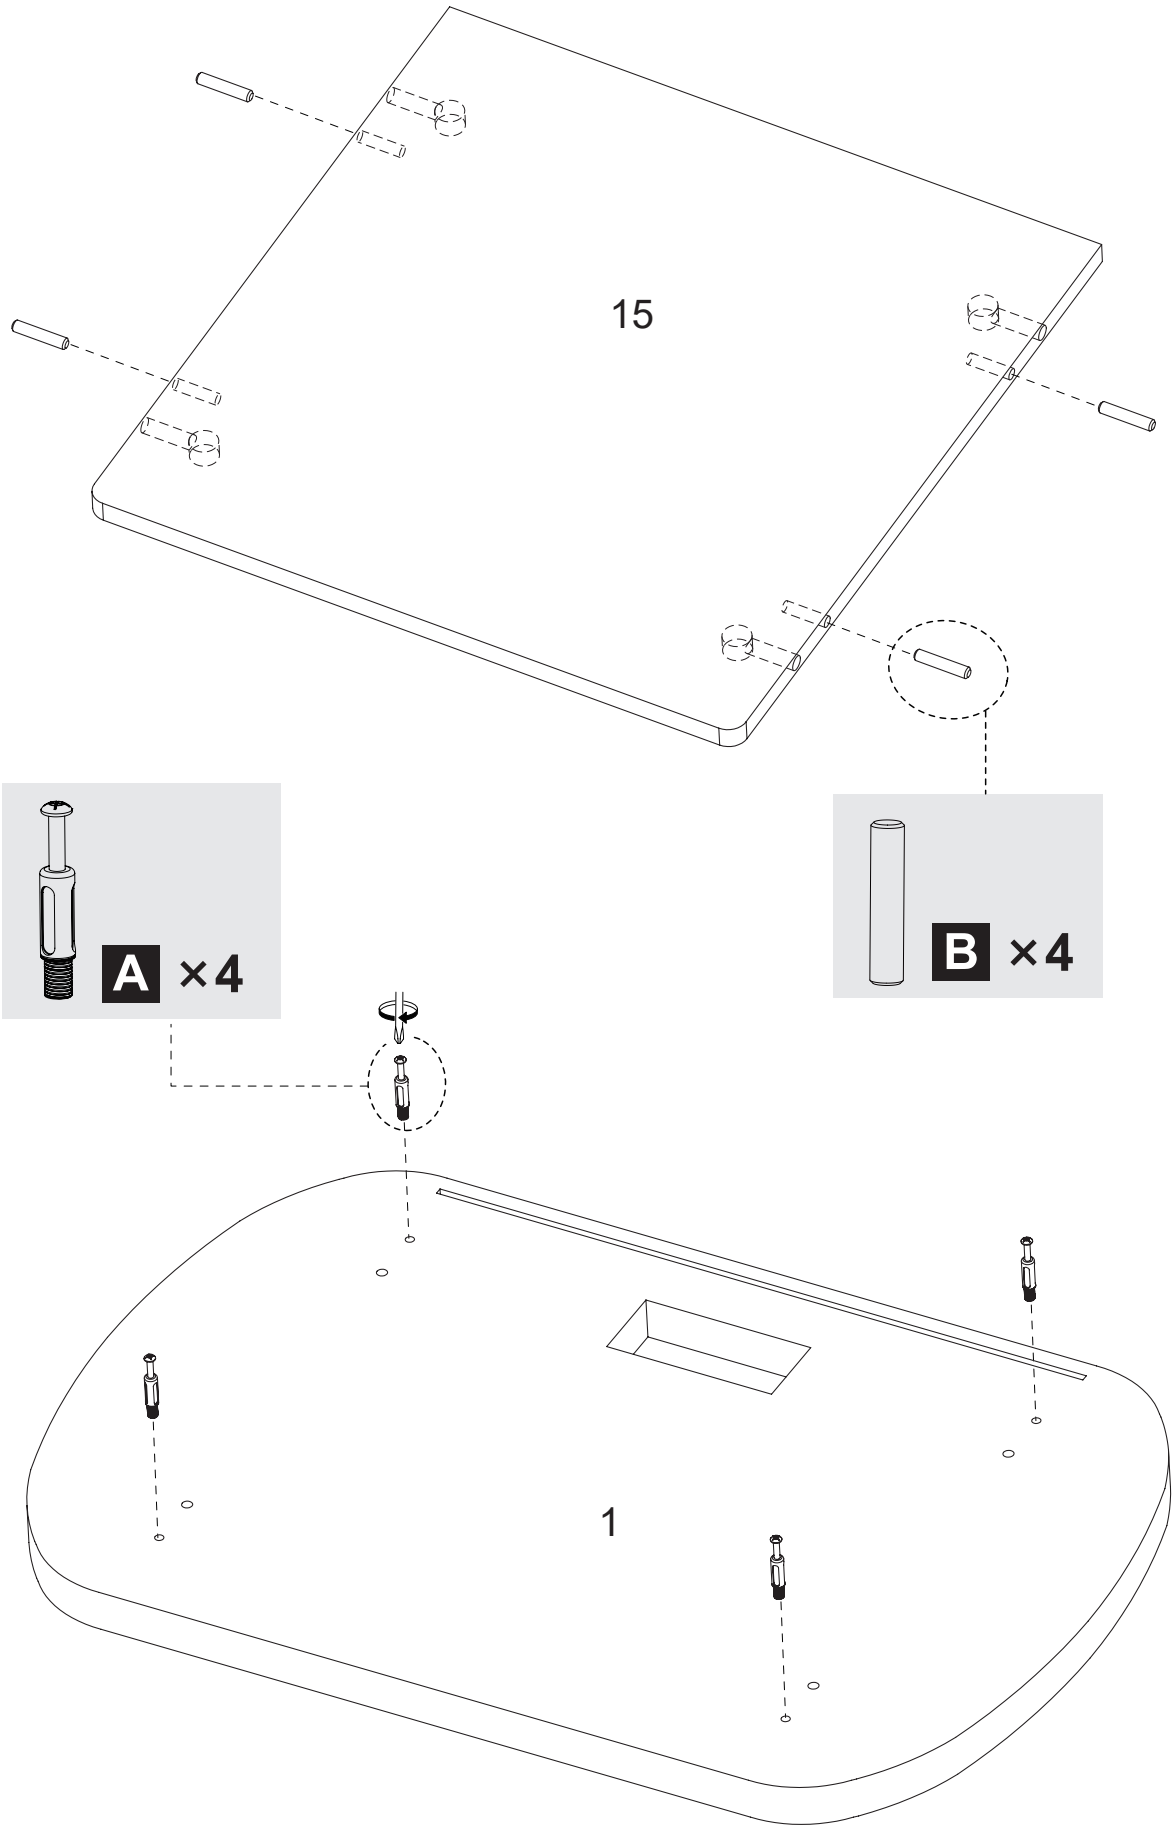
# Step 4

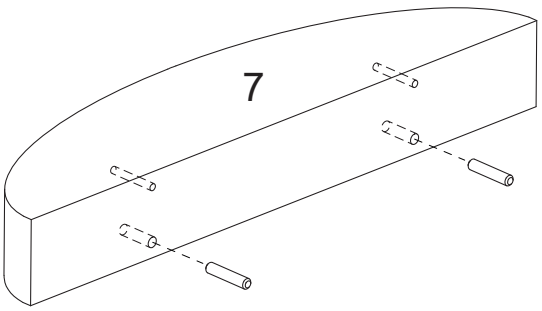Please fully tighten all the screws after they are in right place.

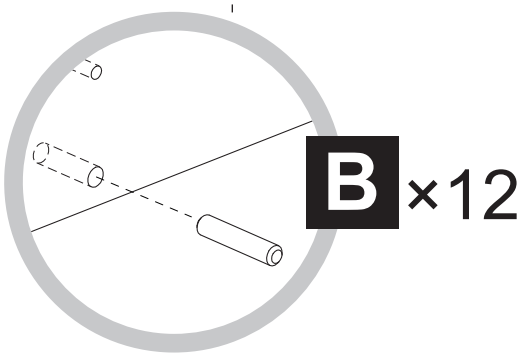





# Step 5





# Step 6


Please fully tighten all the screws after they are in right place.

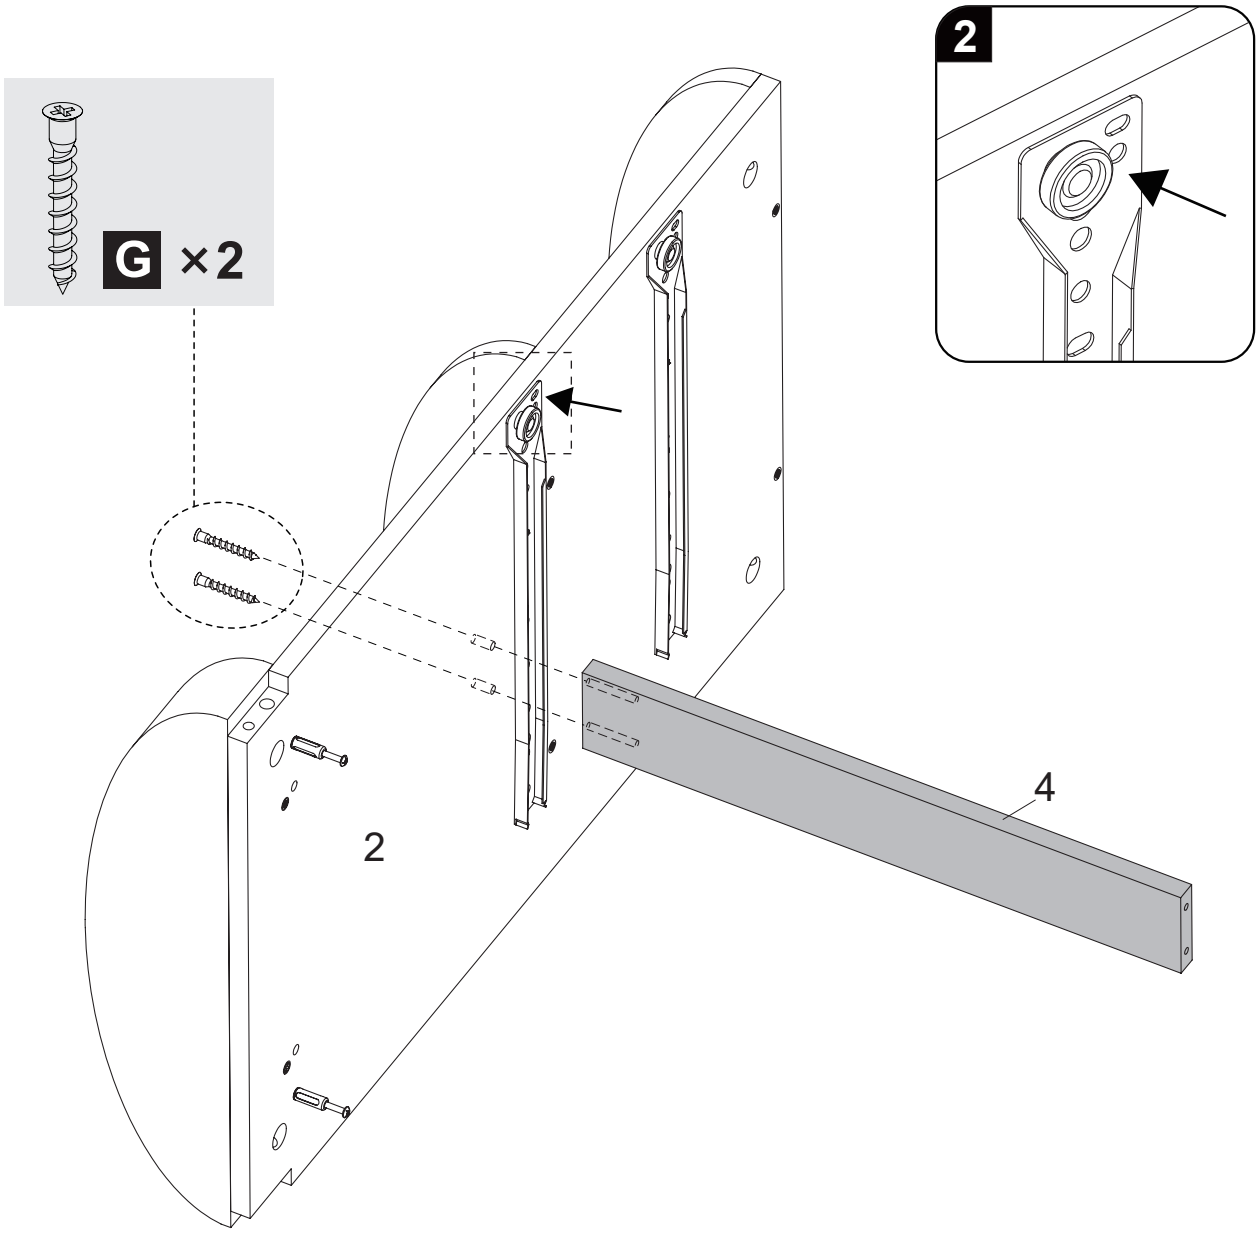


# Step 7

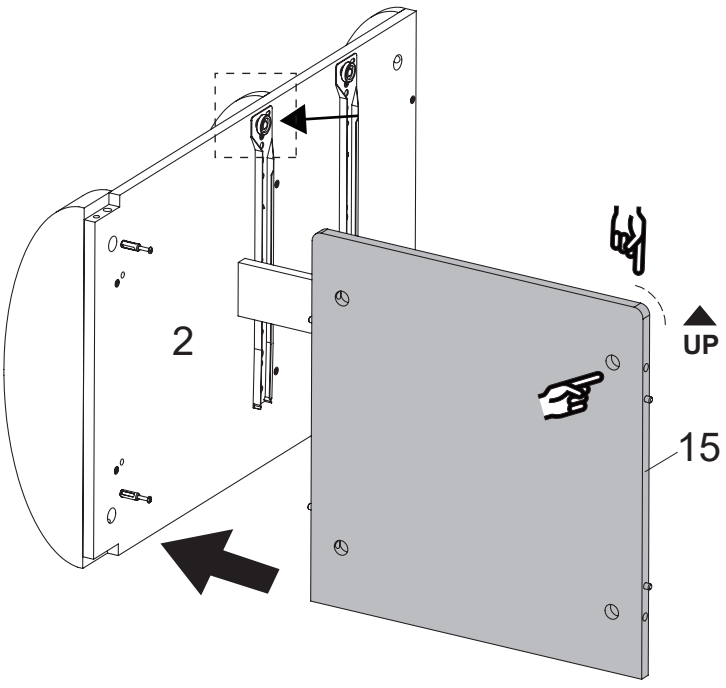

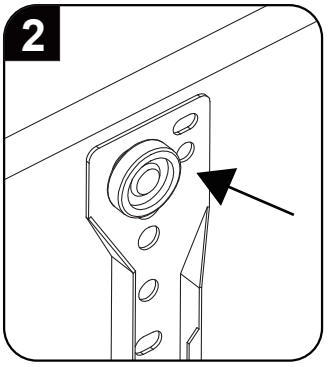


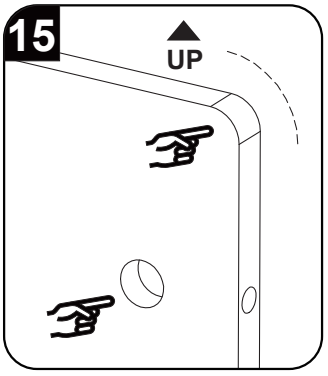
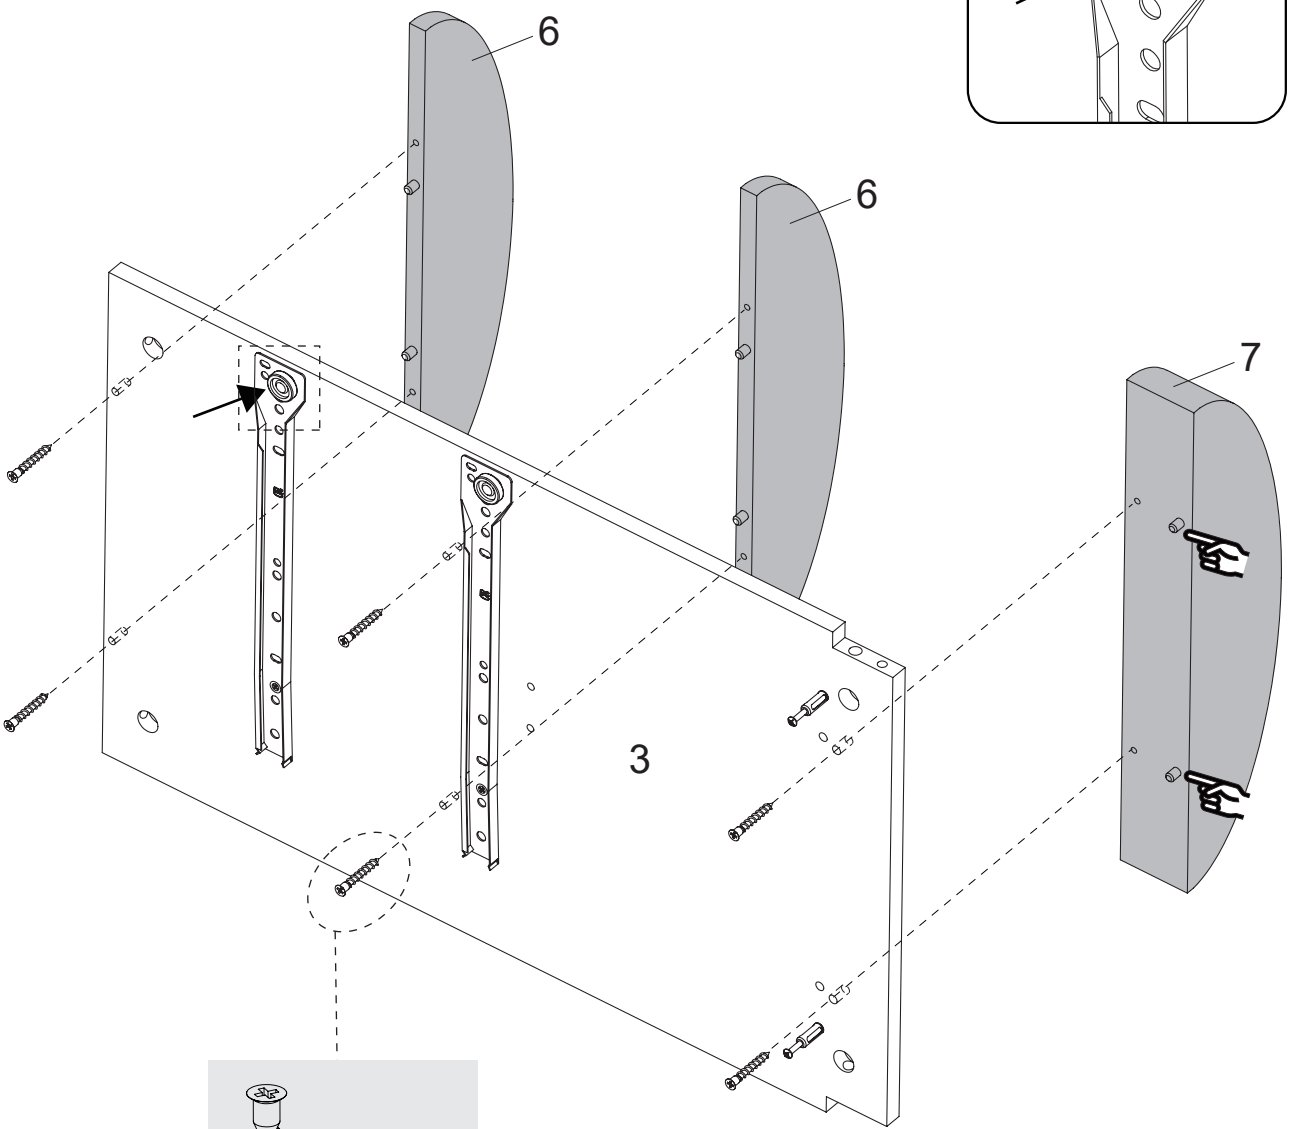


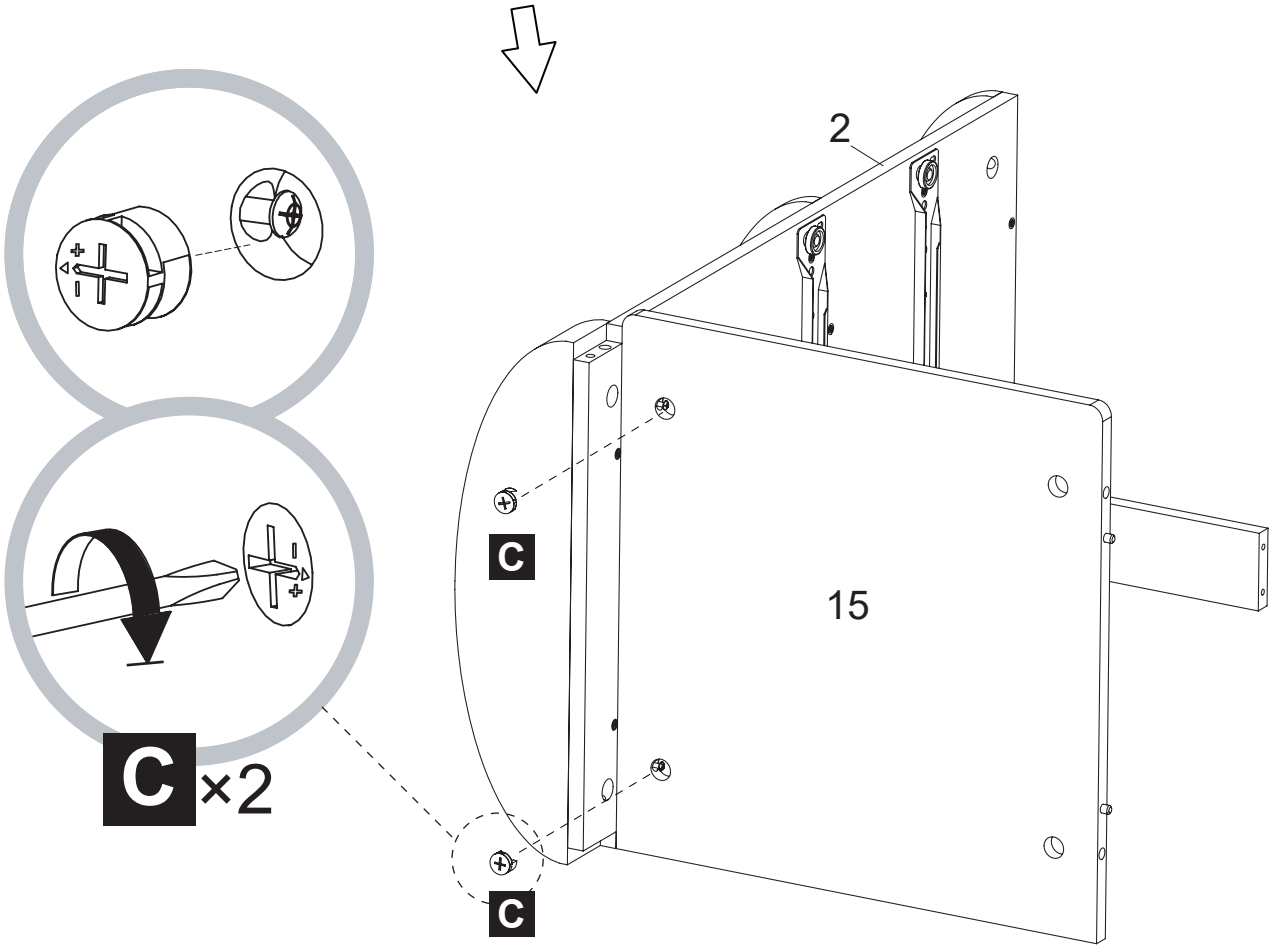
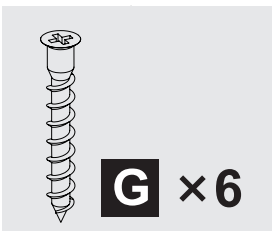



# Step 8

Please fully tighten all the screws after they are in right place.

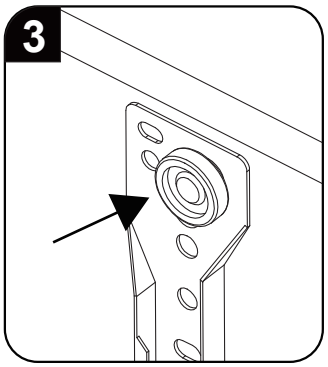






# Step 9


Please fully tighten all the screws after they are in right place.

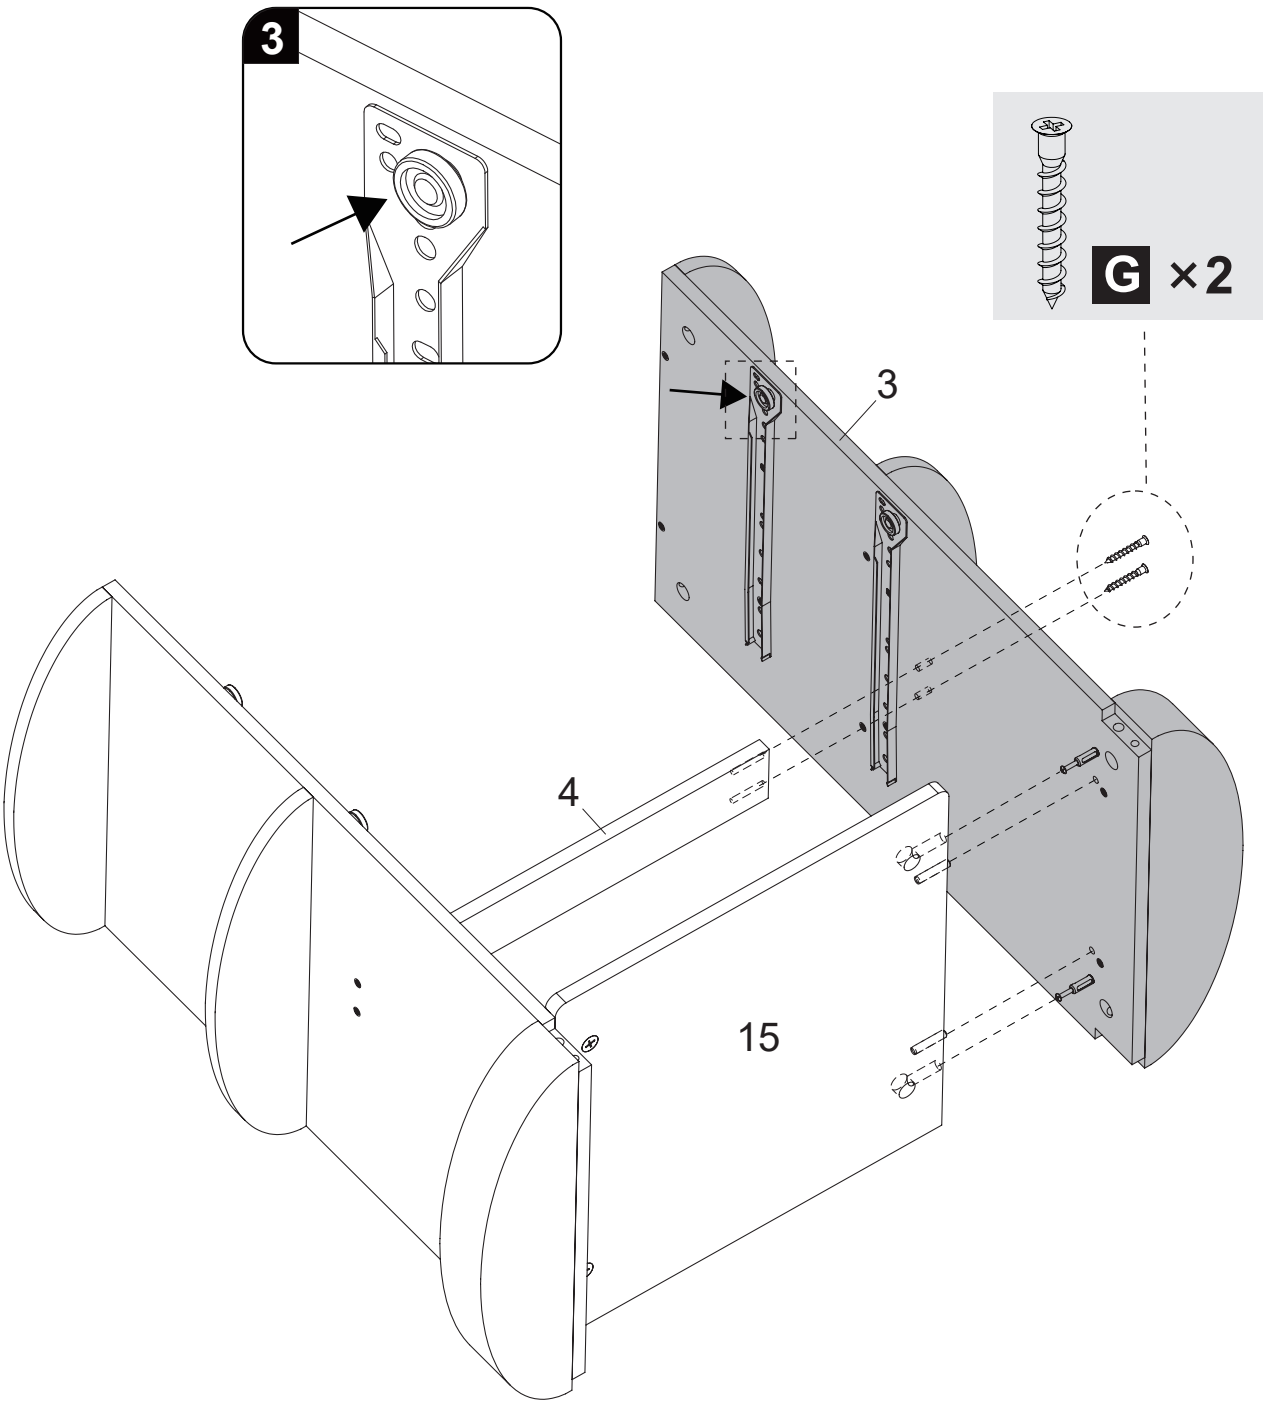


# Step 10

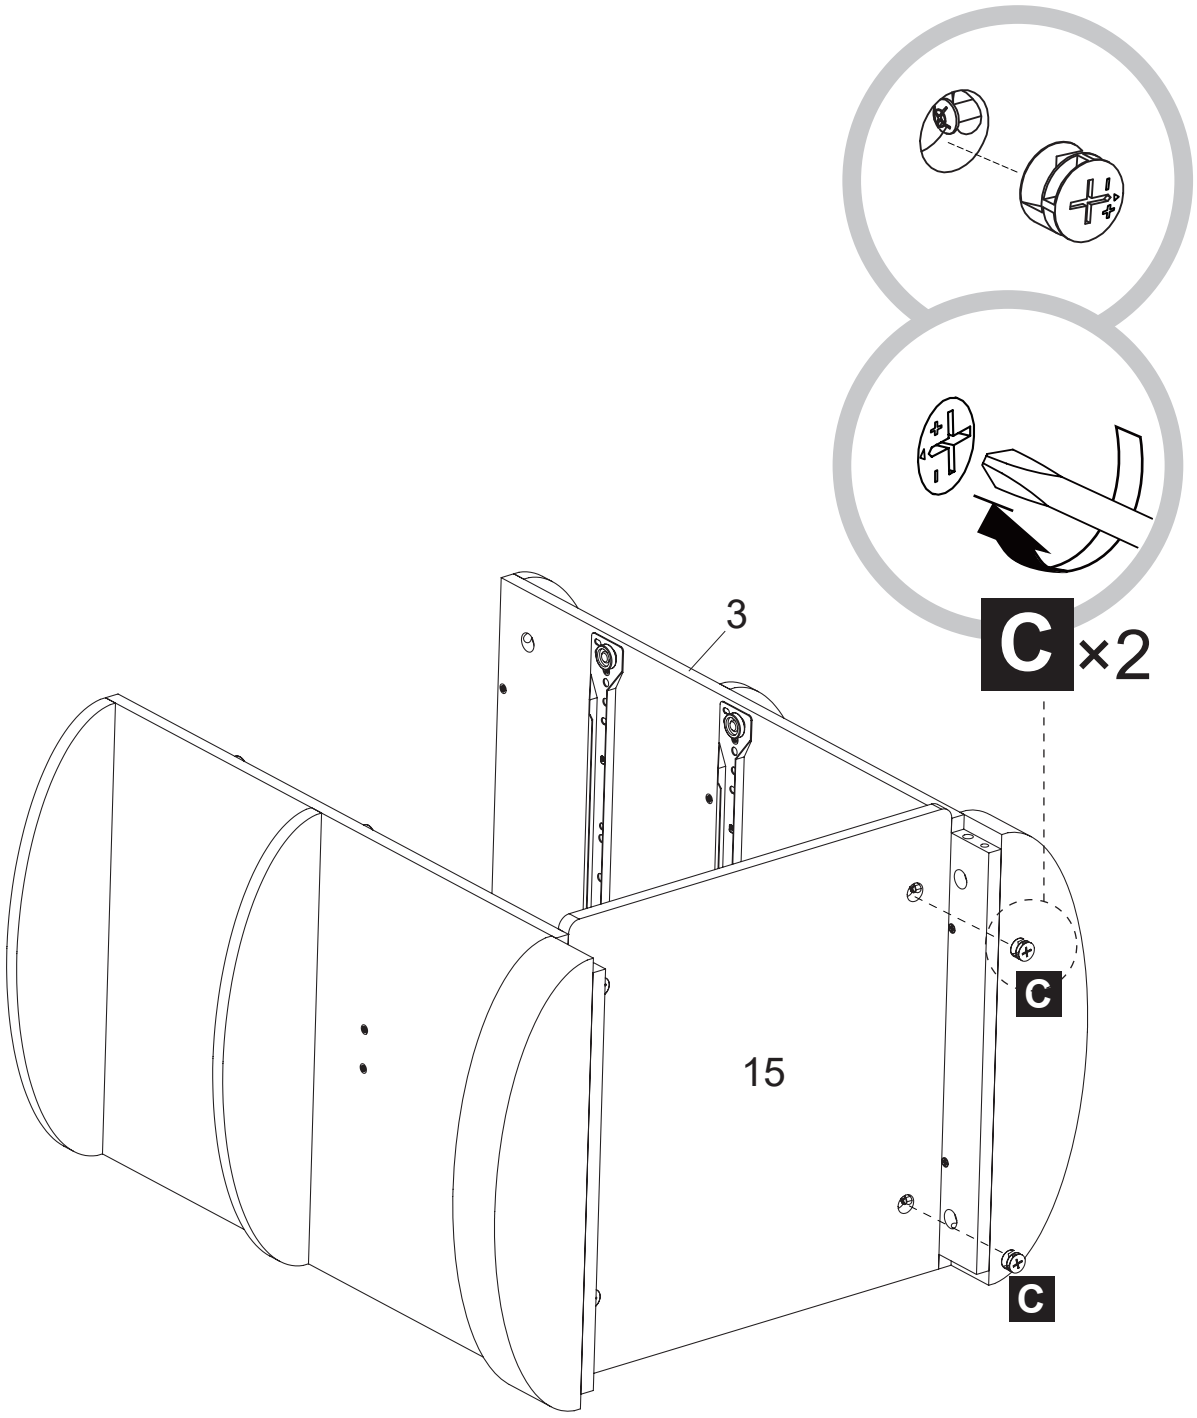


# Step 11

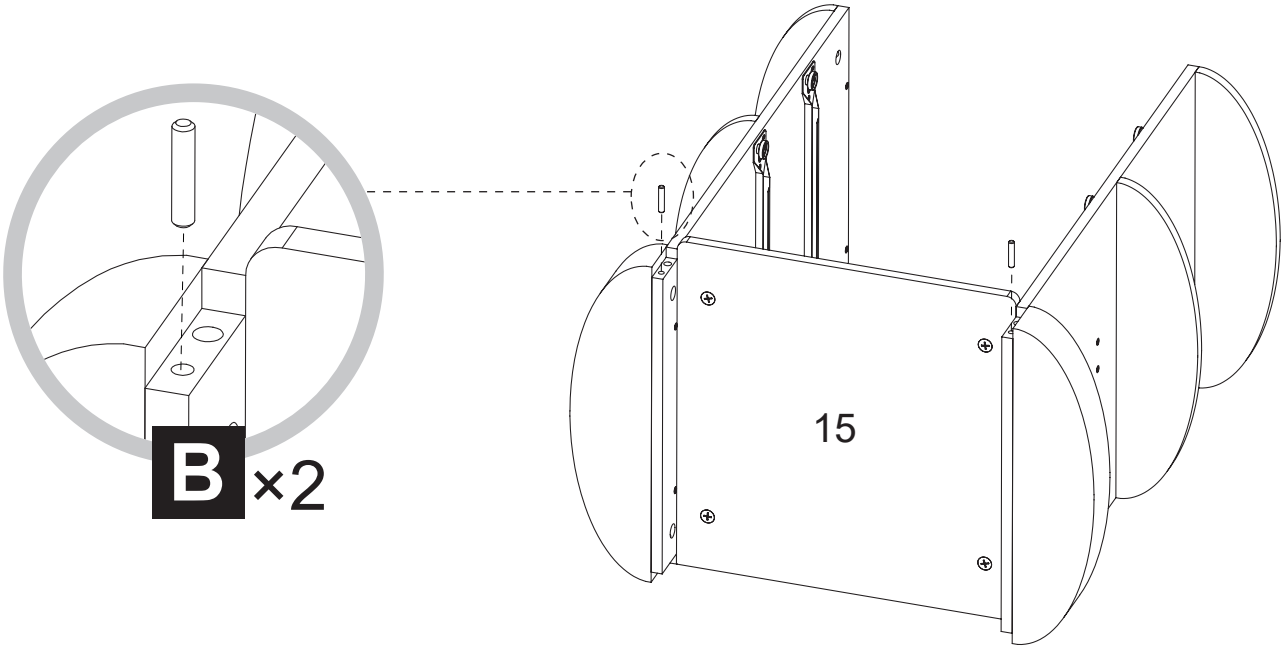

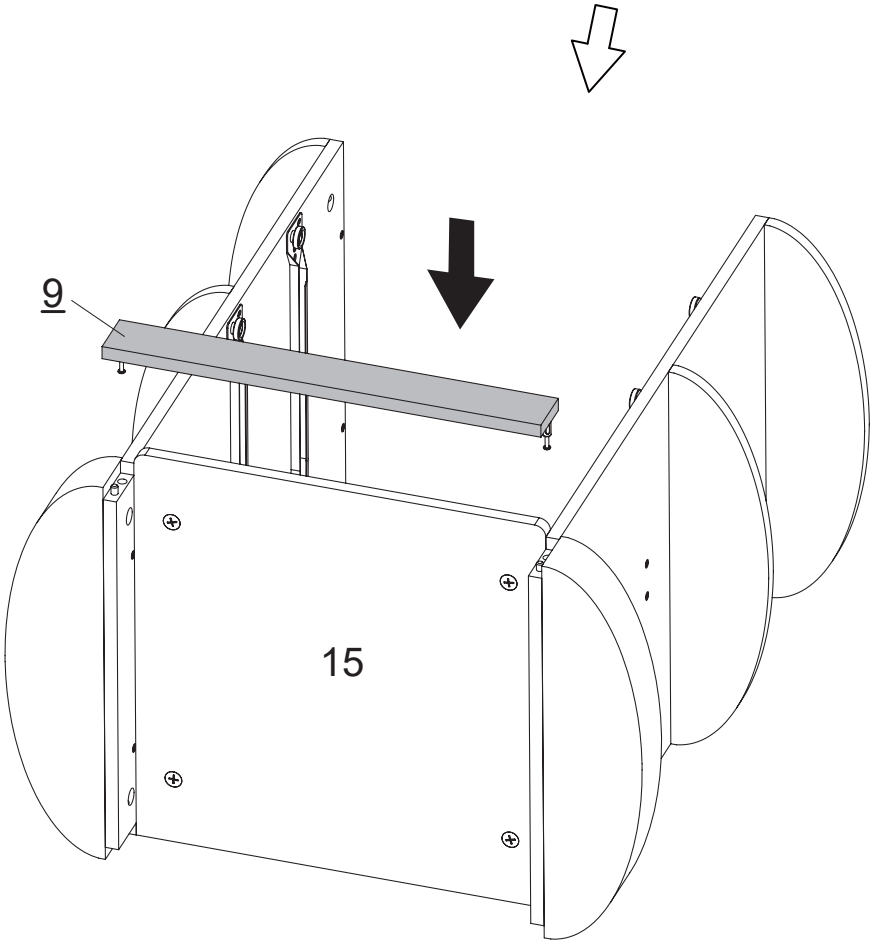



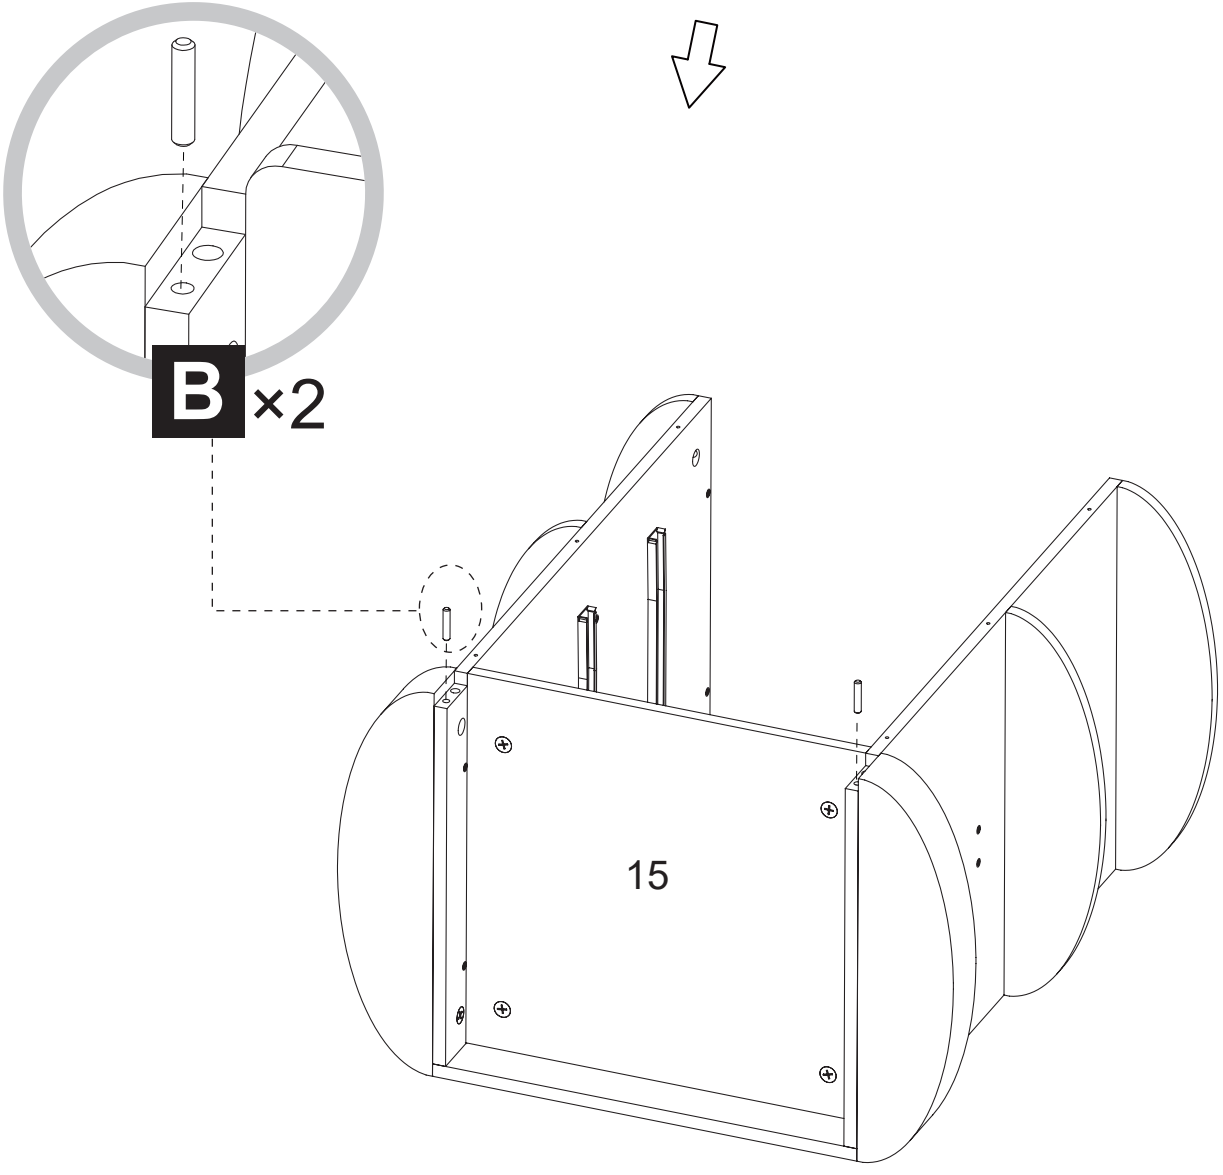
# Step 12

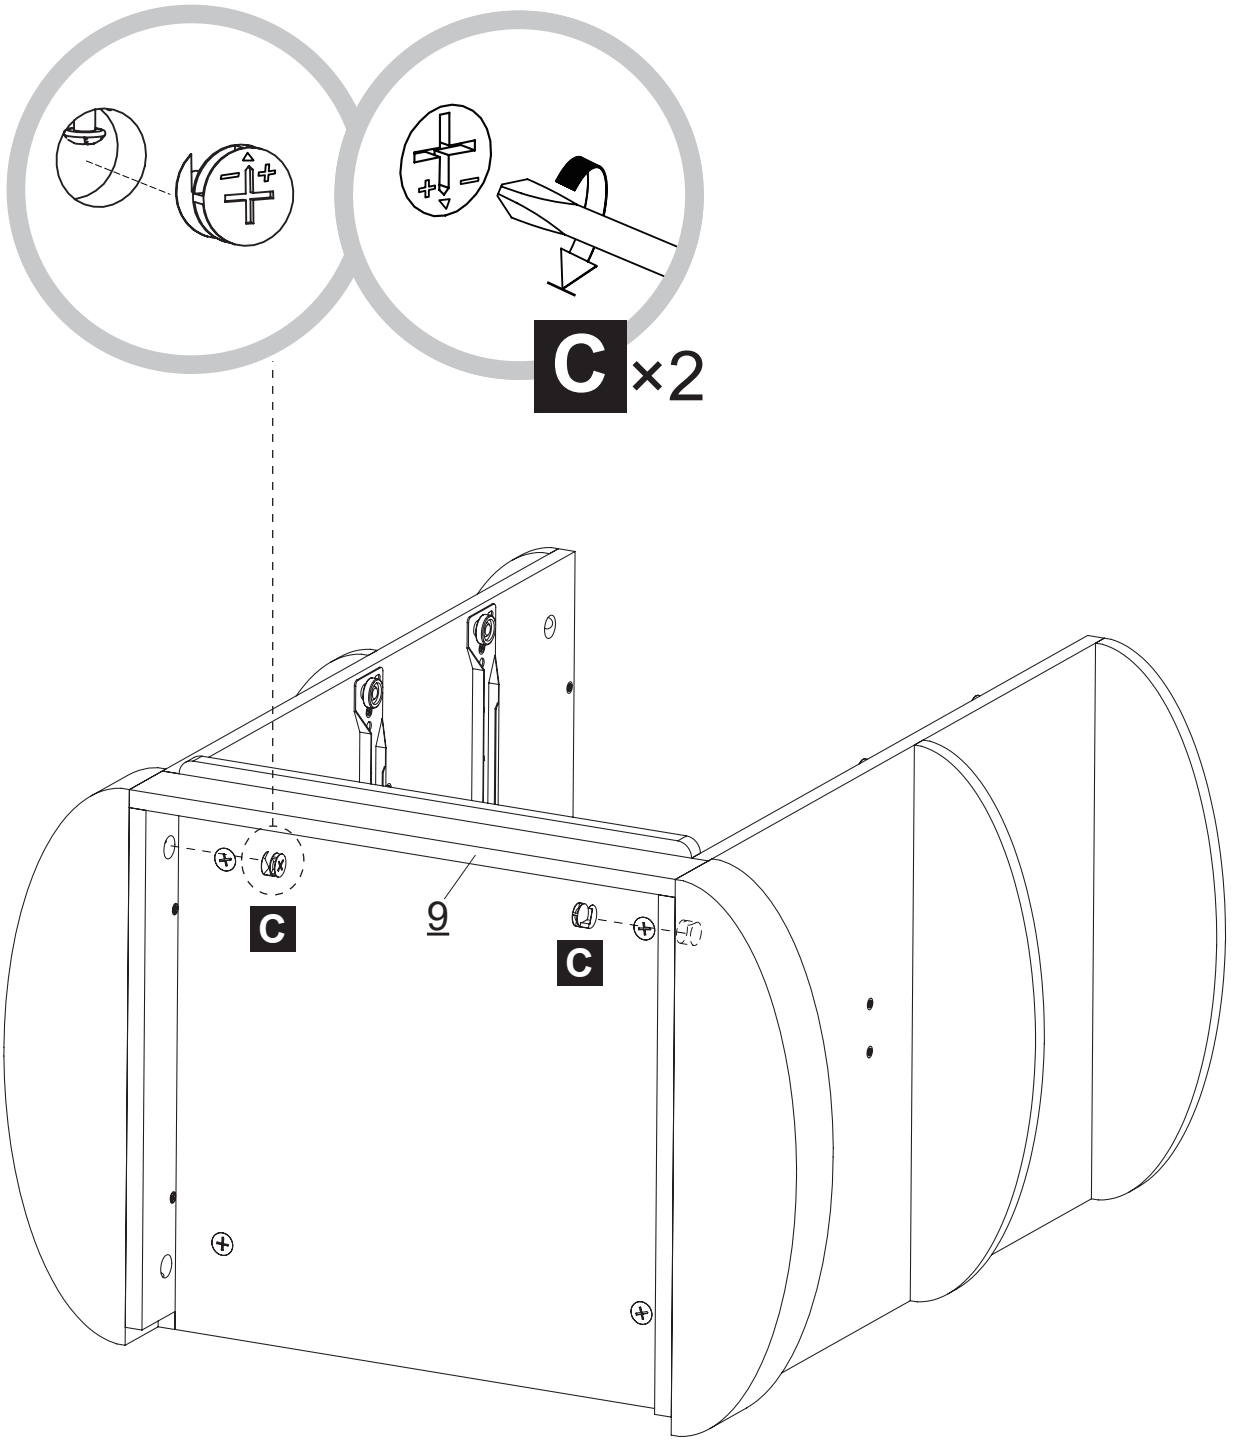


# Step 13


Handle with care when turning the cabinet over.

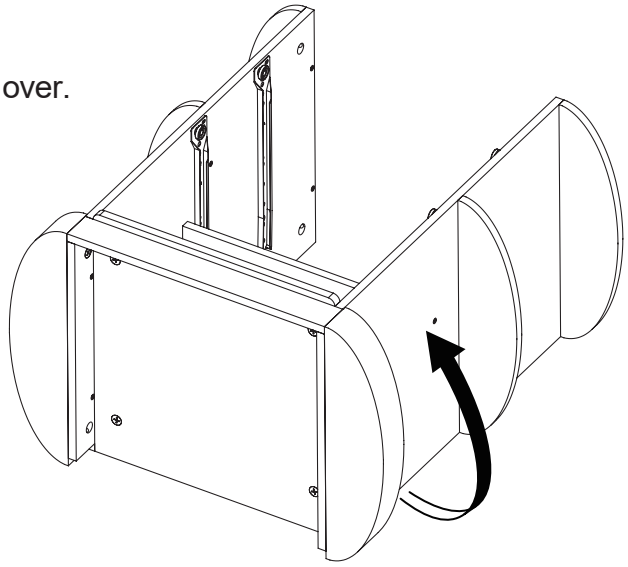




# Step 14

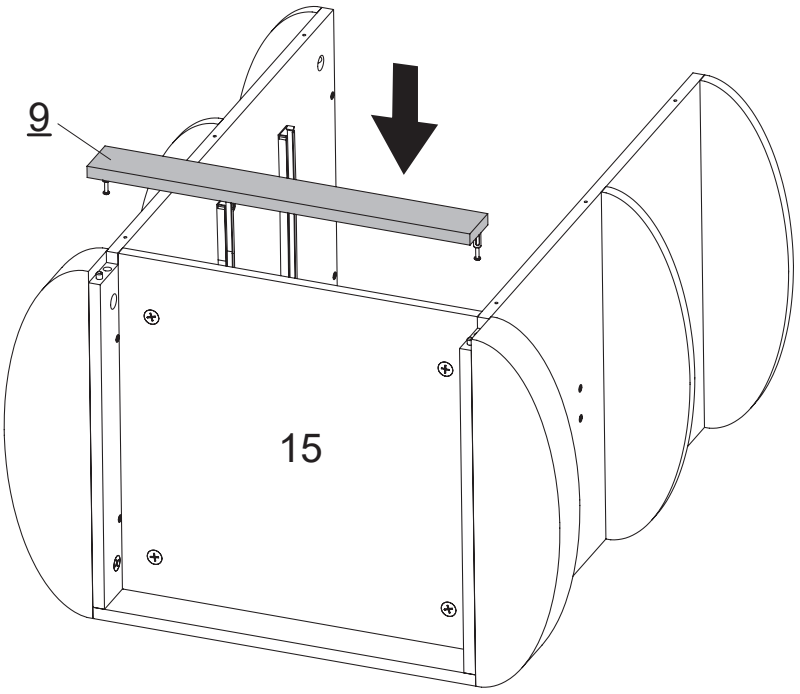


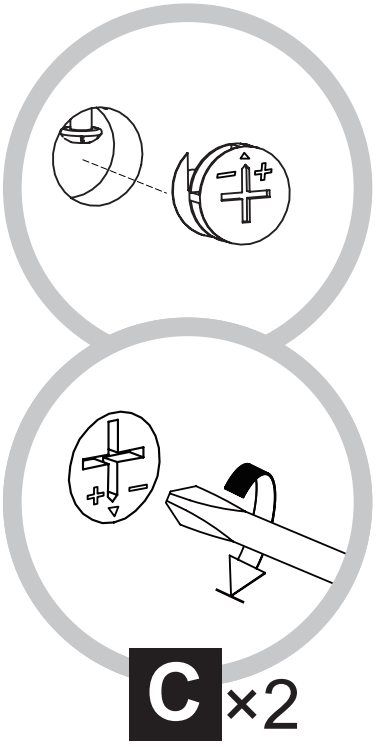


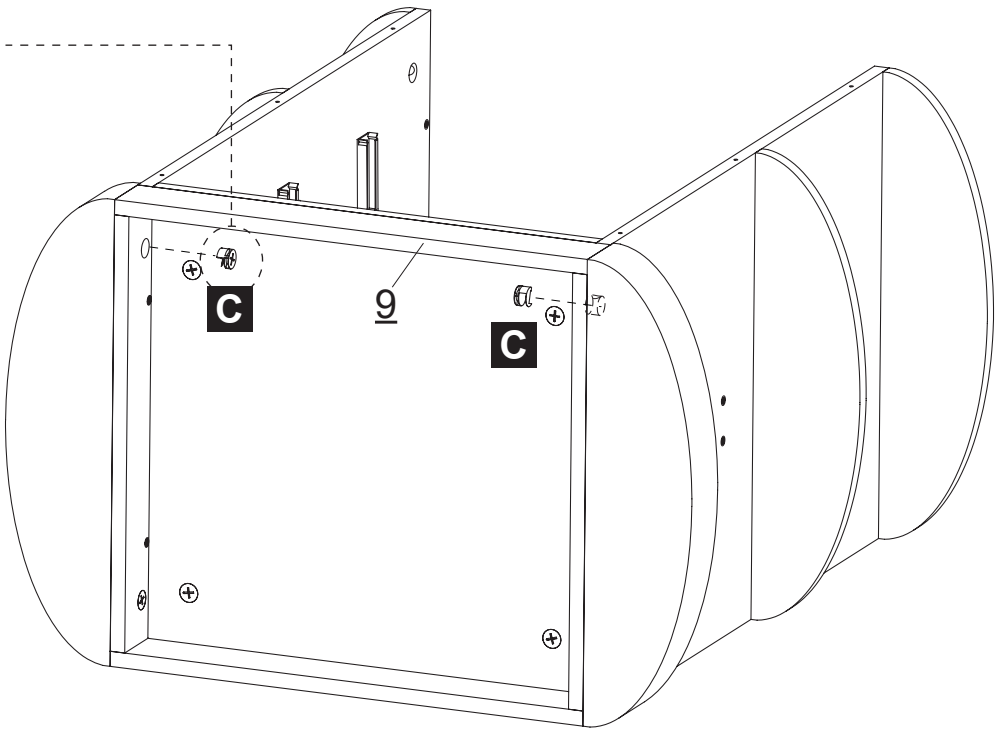
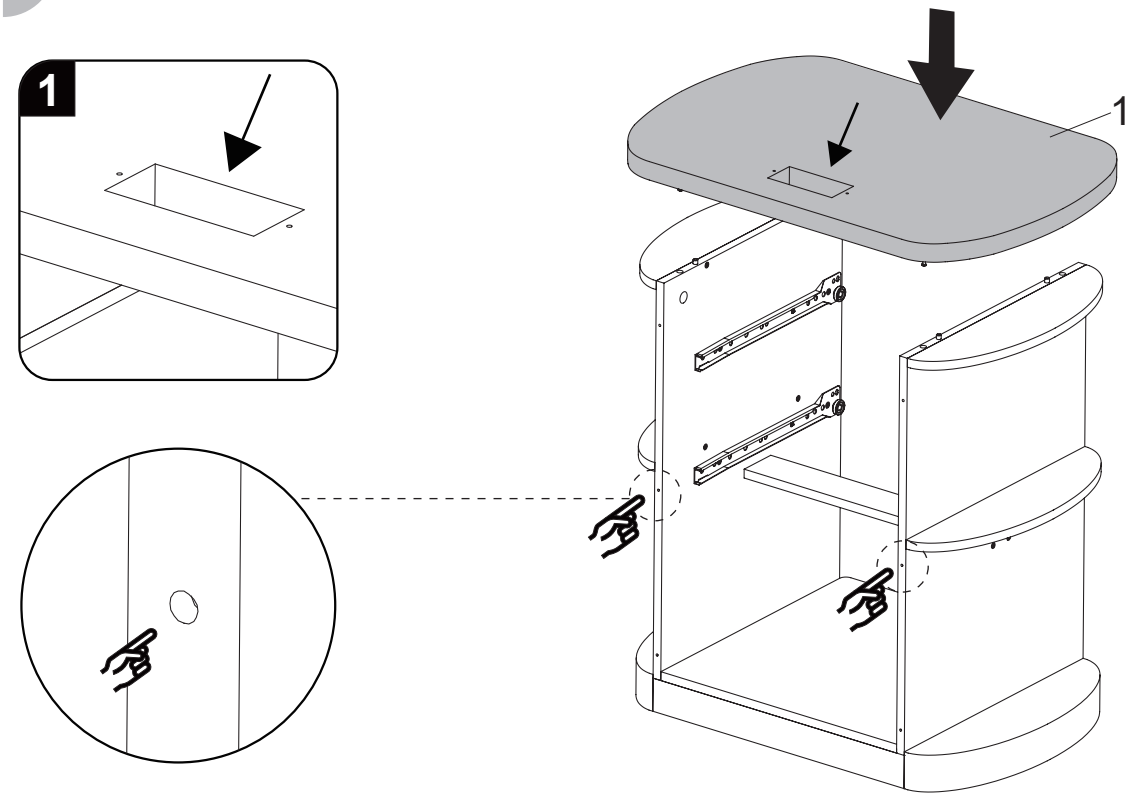
# Step 15


Handle with care when turning the cabinet over.



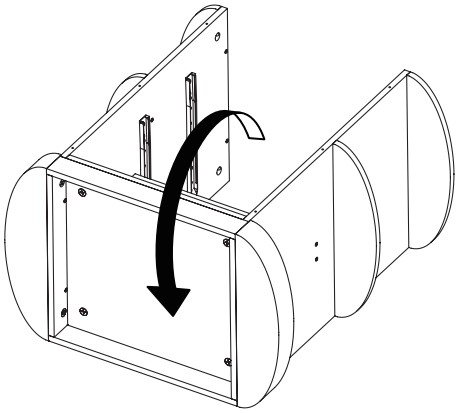

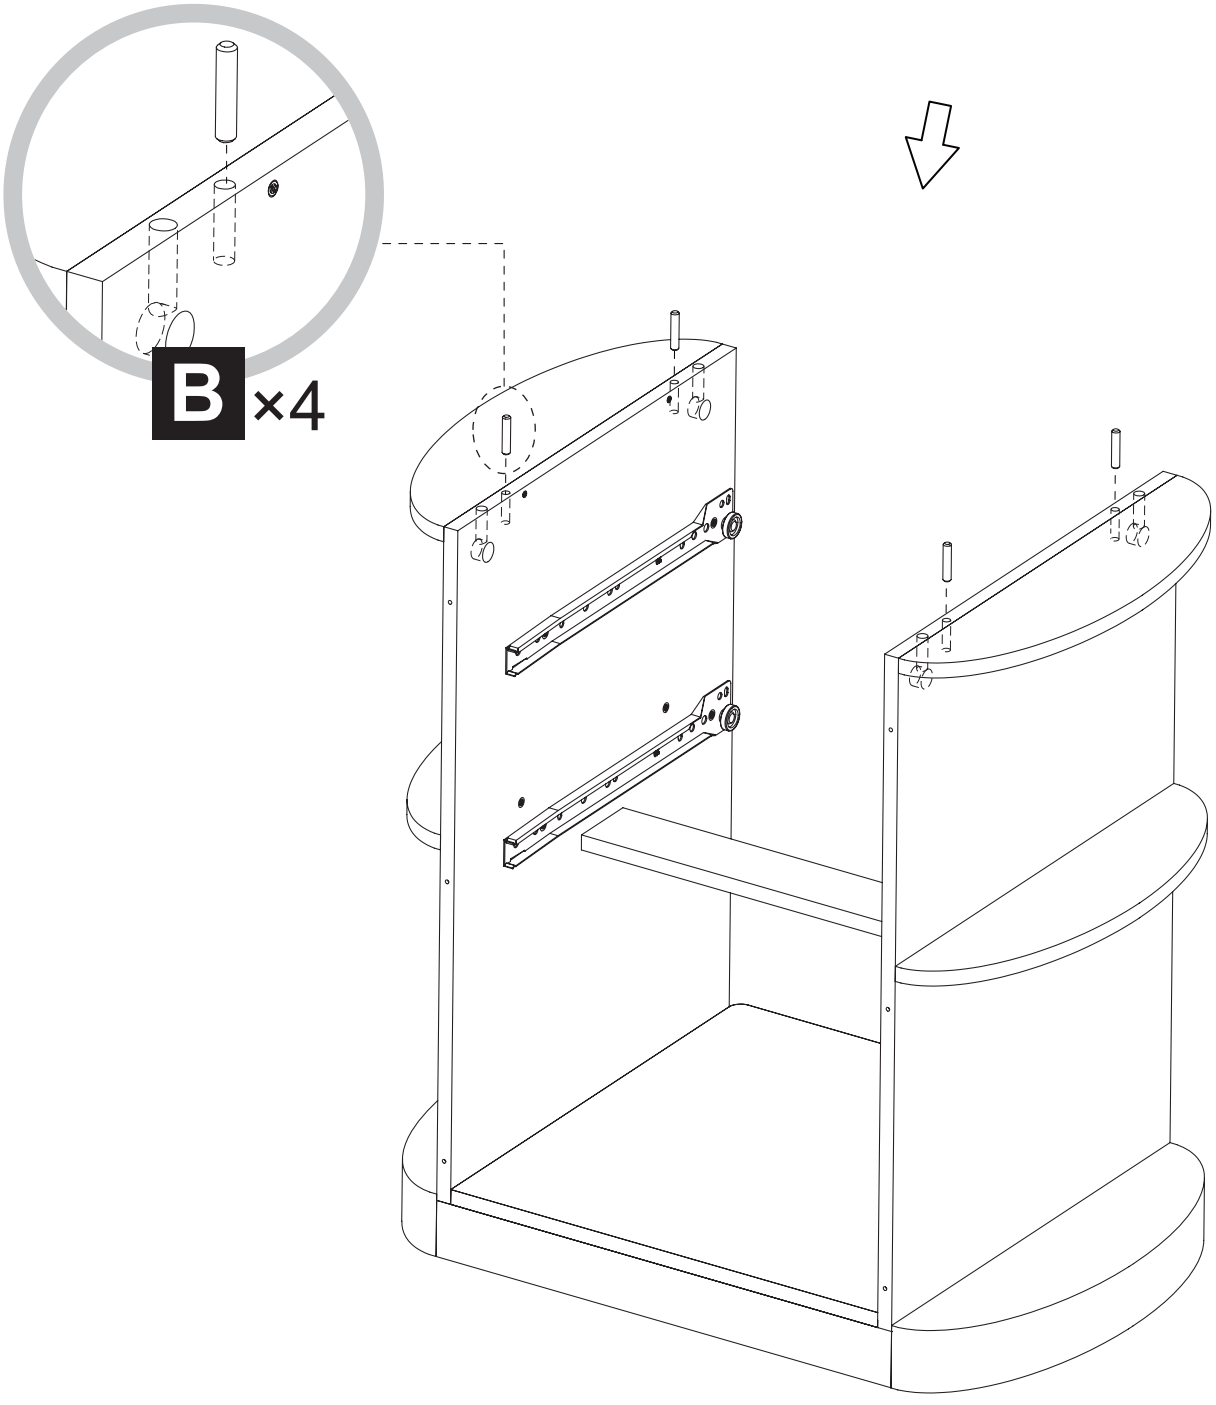
# Step 16




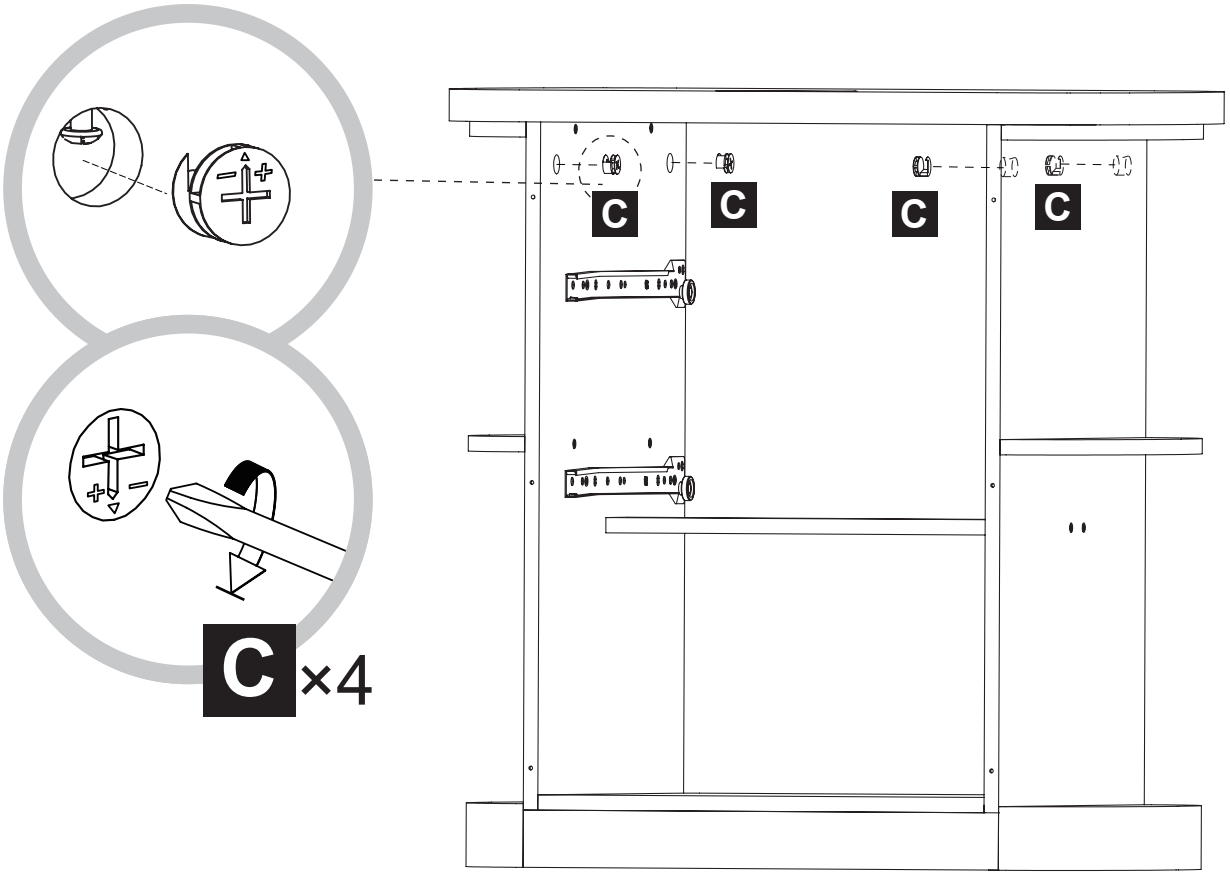



# Step 17

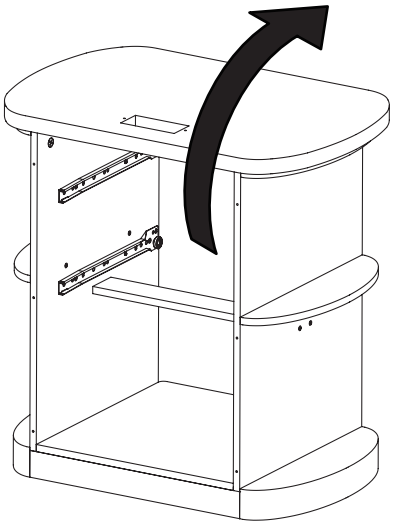


1.Handle with care when turning the cabinet over.
2.Insert the back panel into the groove on the tabletop.

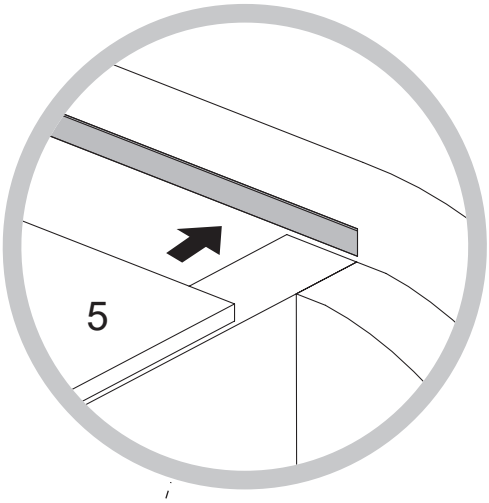

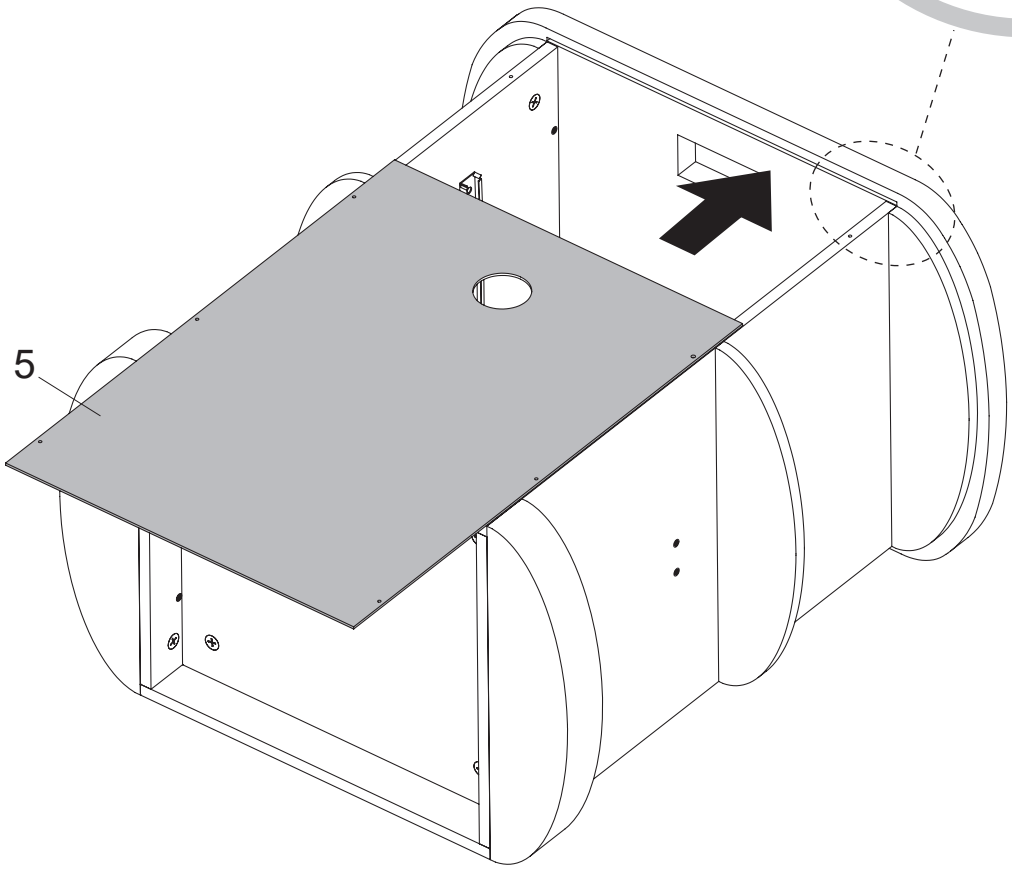
# Step 18

Please fully tighten all the screws after they are in right place.

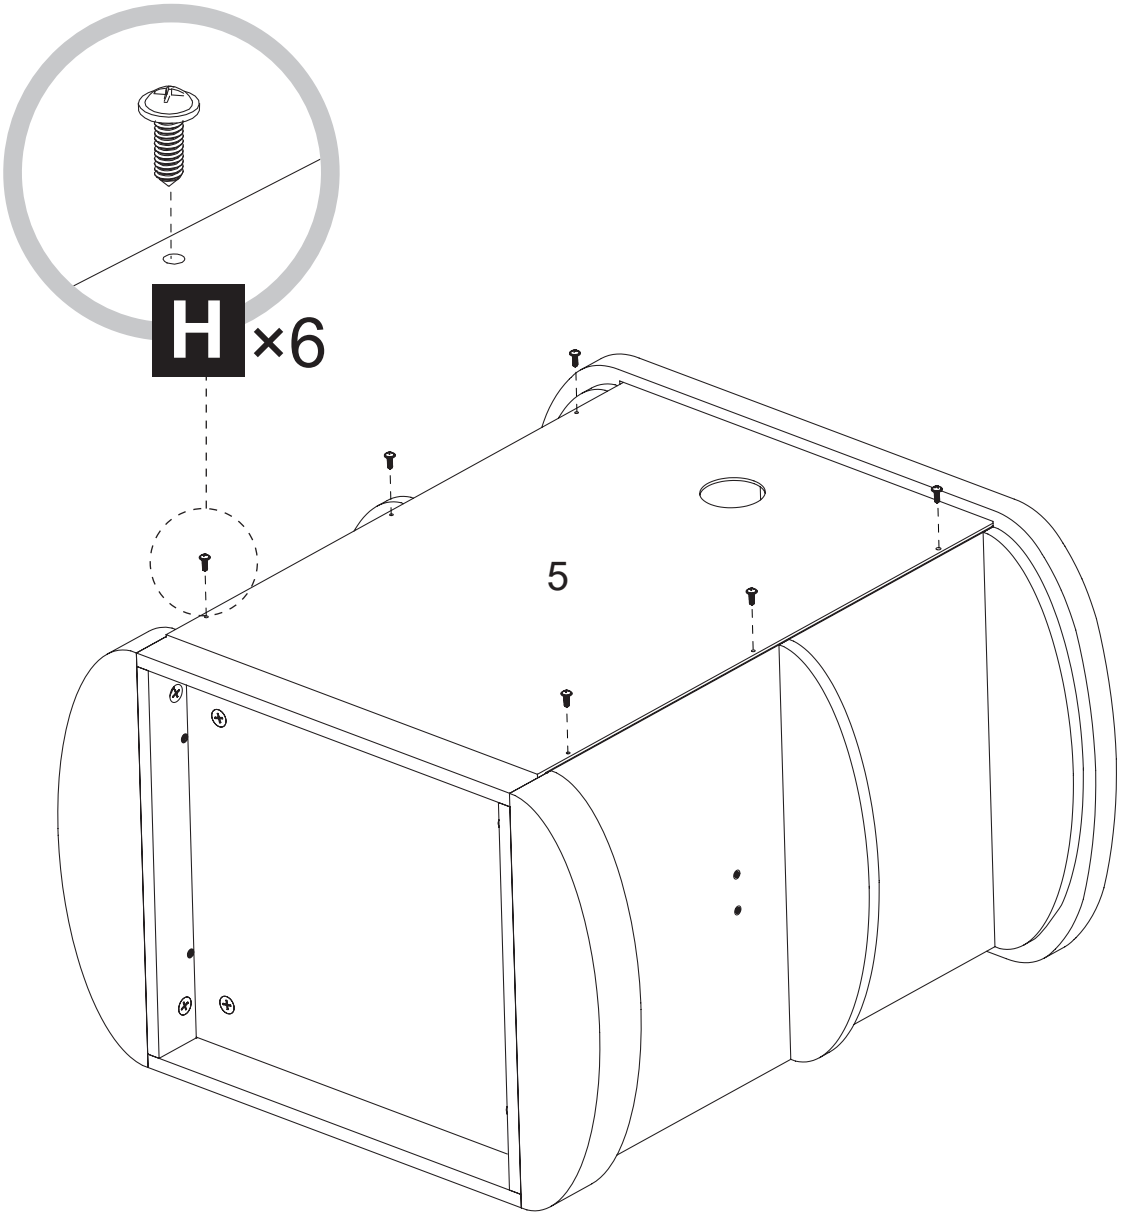


# Step 19

Please fully tighten all the screws after they are in right place.

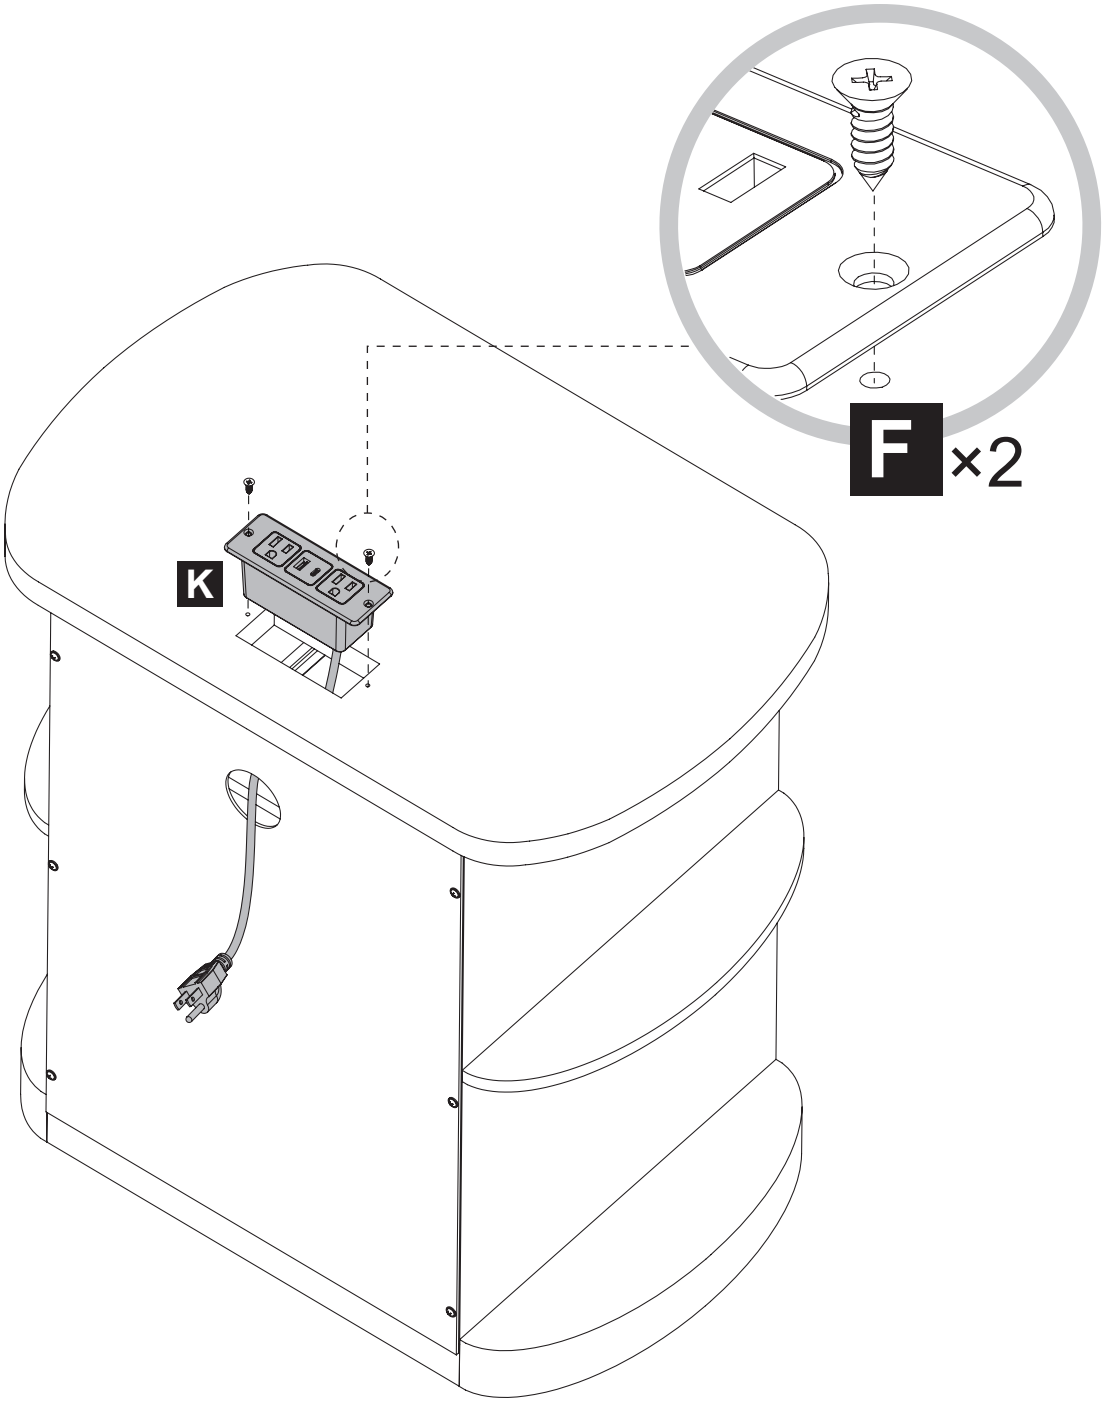


# Step 20

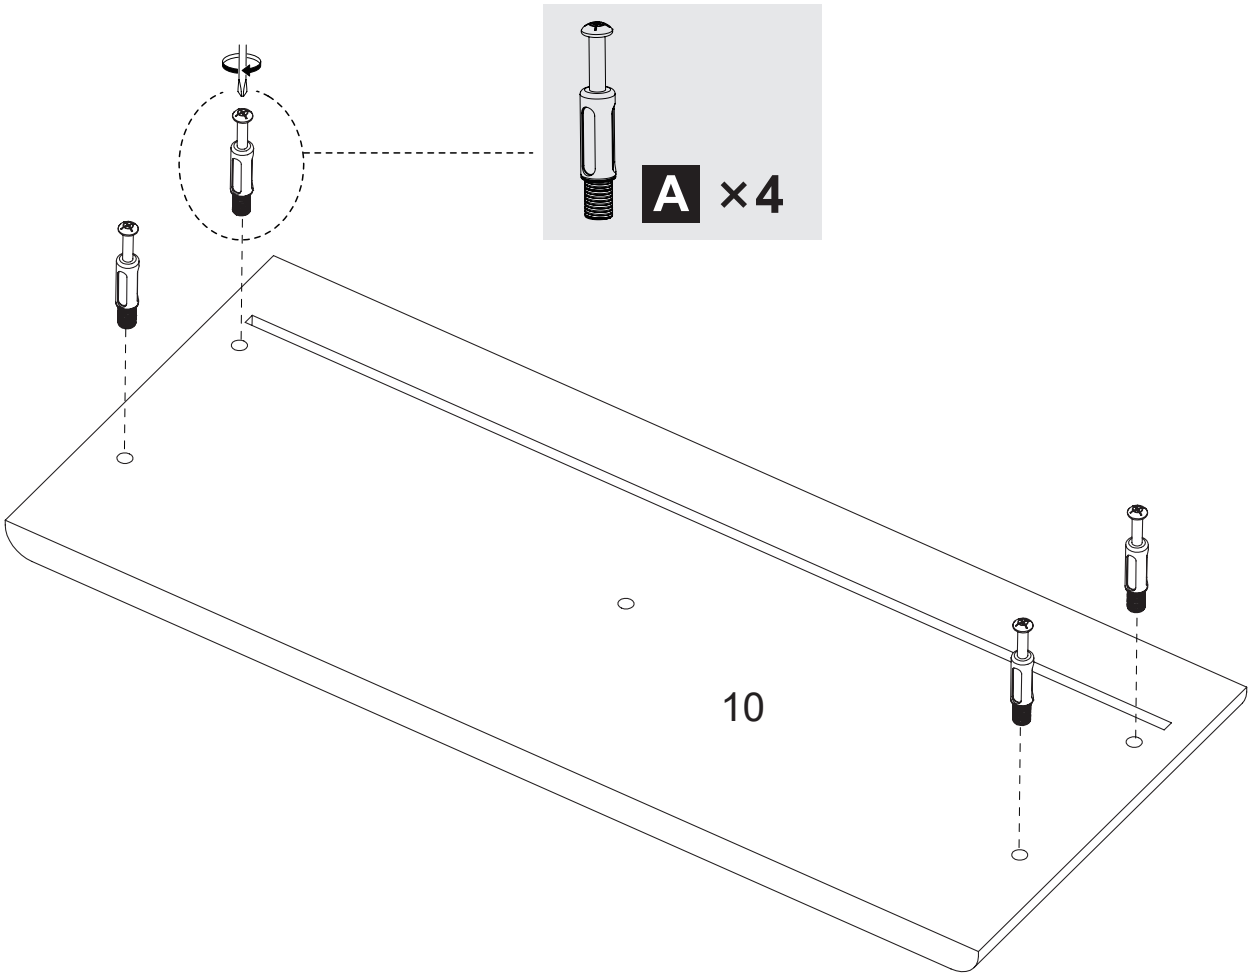



×2

# Step 21

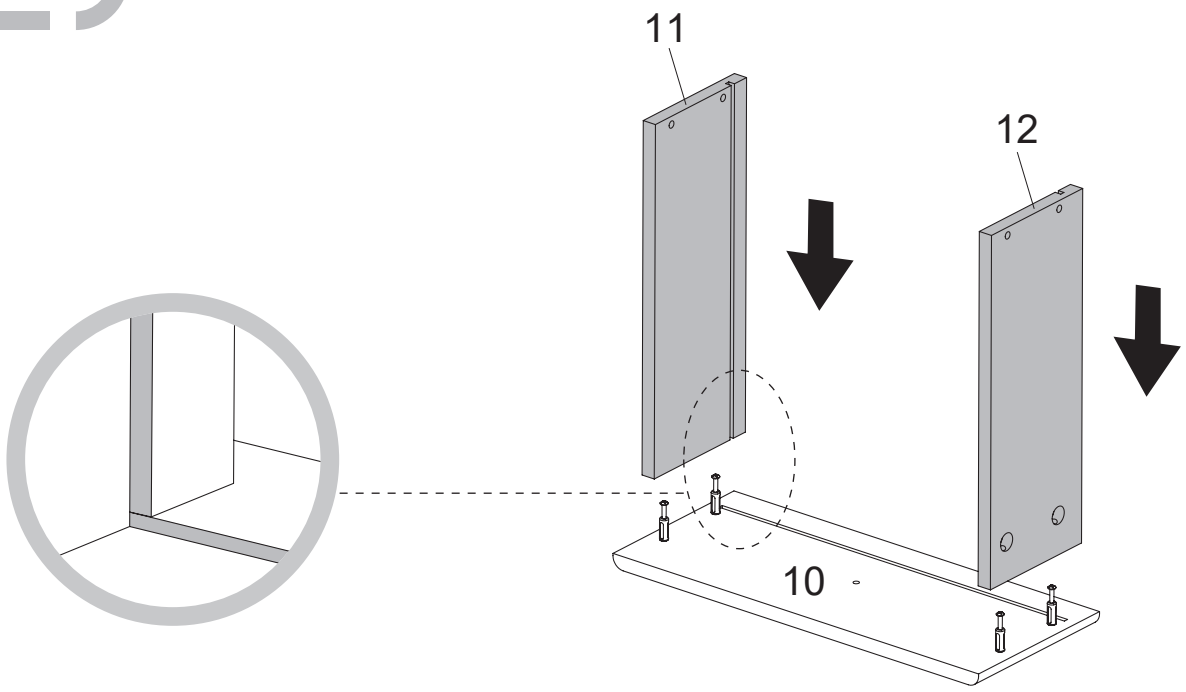



Let the grooves on part **11** **12** be connected to the groove on part **10** .

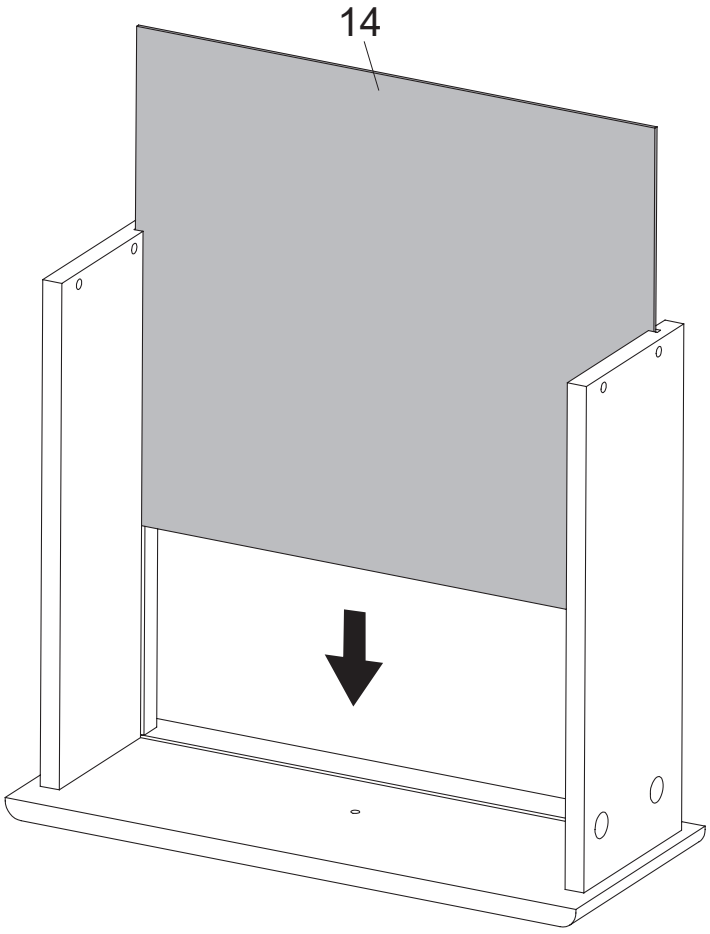


×2


# Step 22

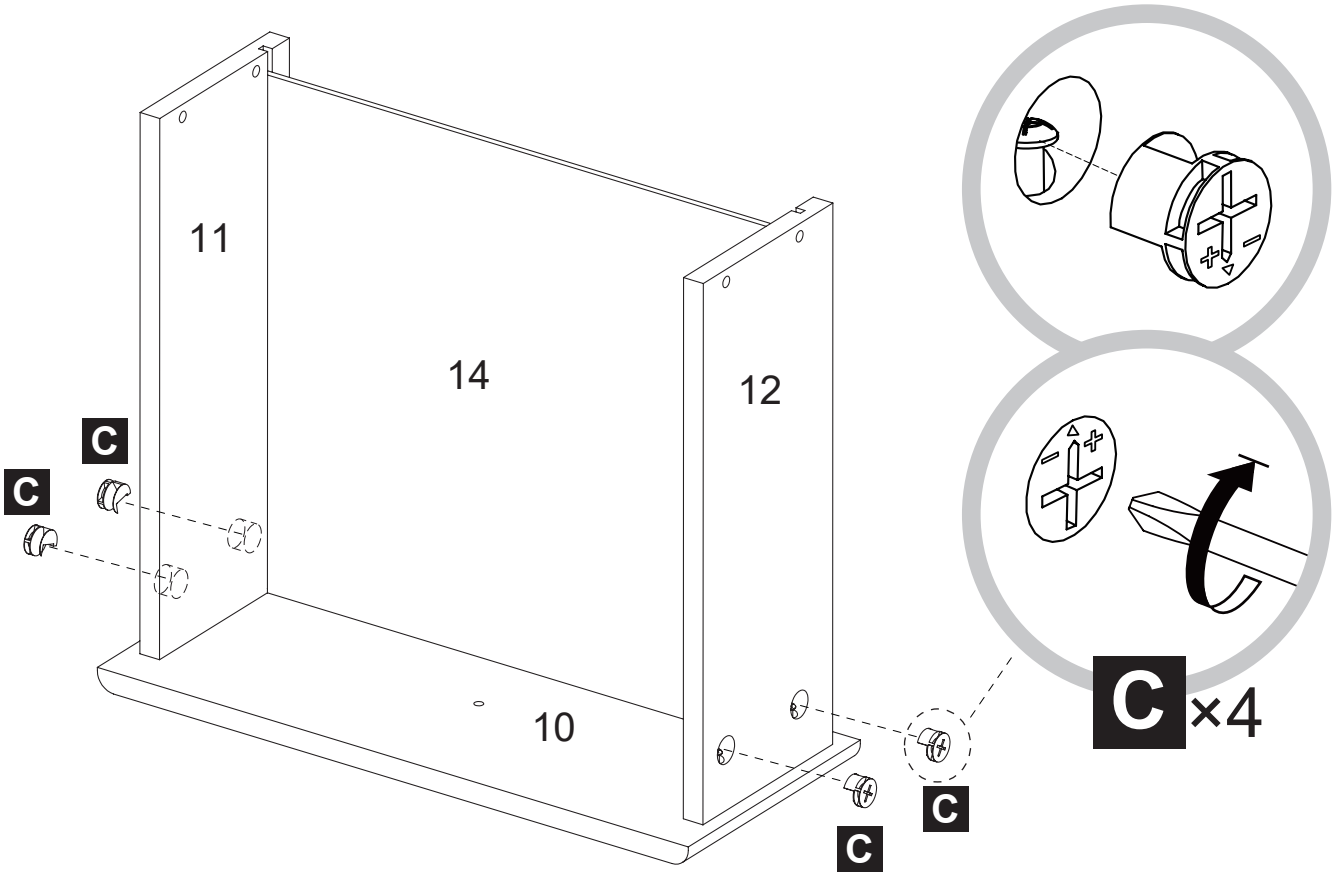



×2

# Step 23


Please fully tighten all the screws after they are in right place.

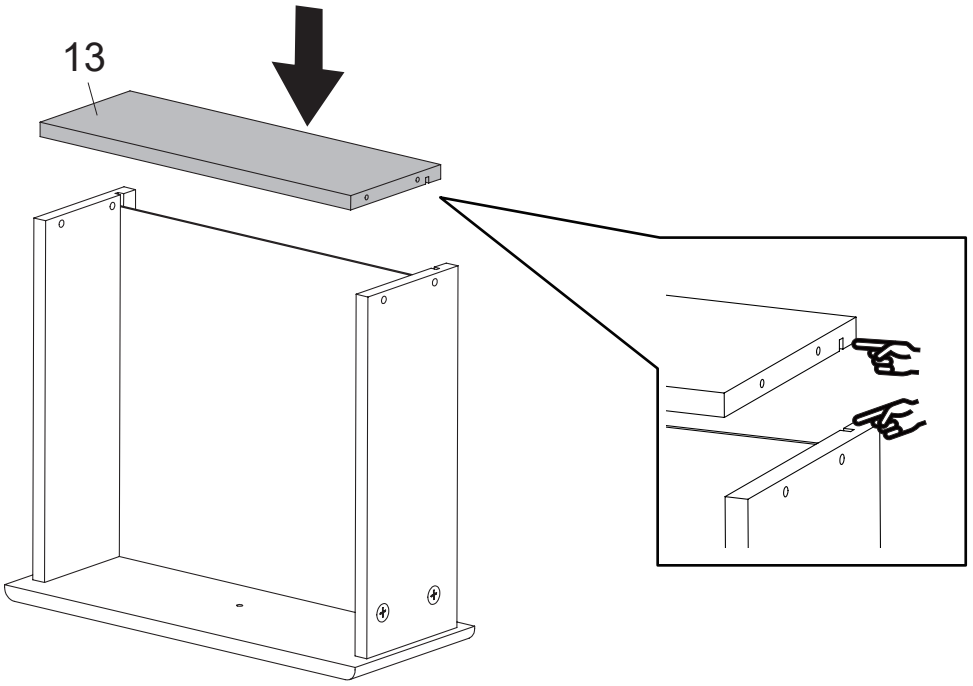

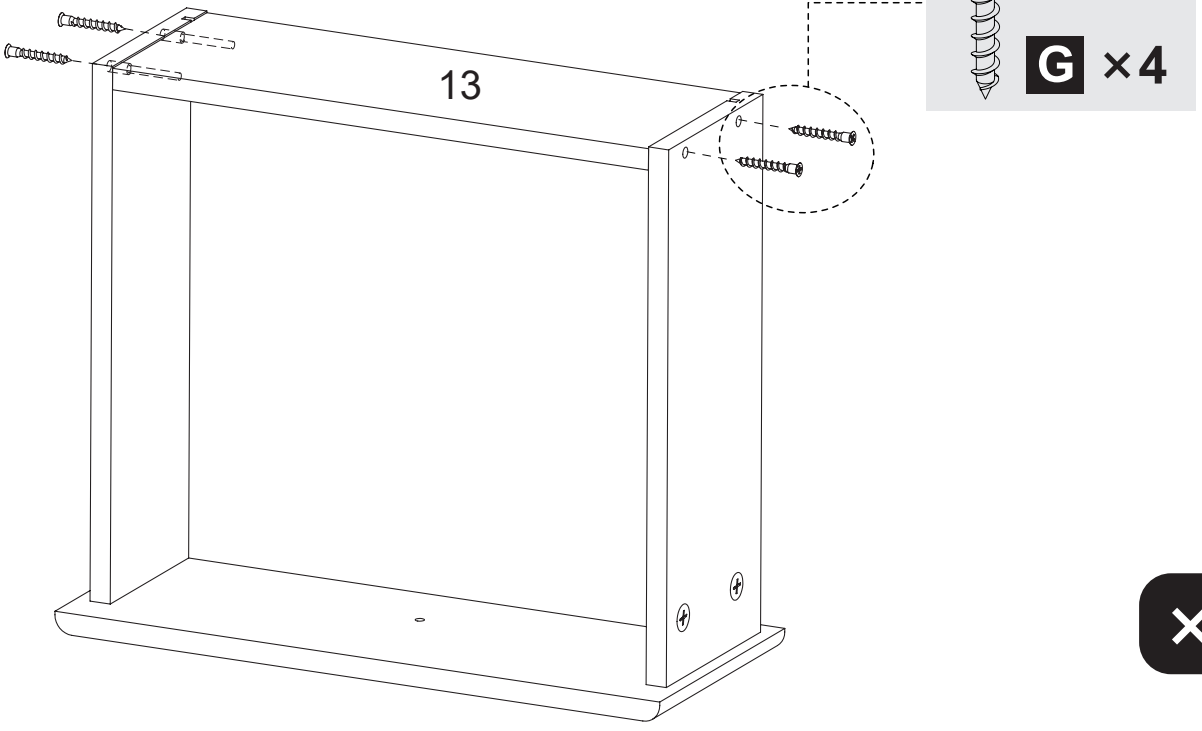

×2


# Step 24

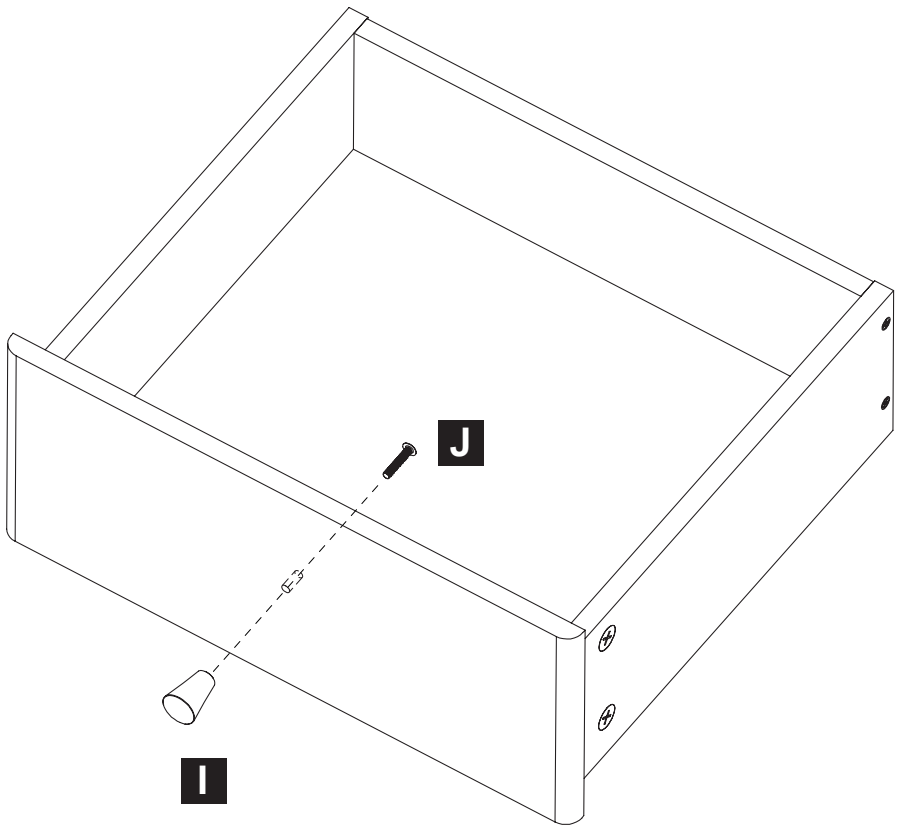


×2

# Step 25

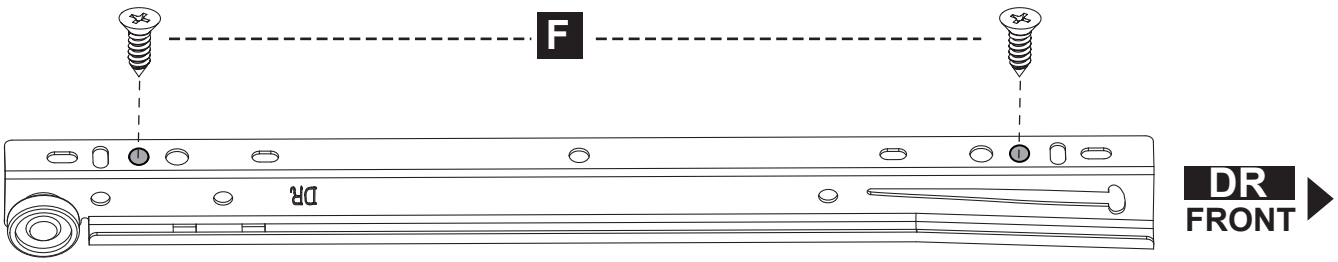


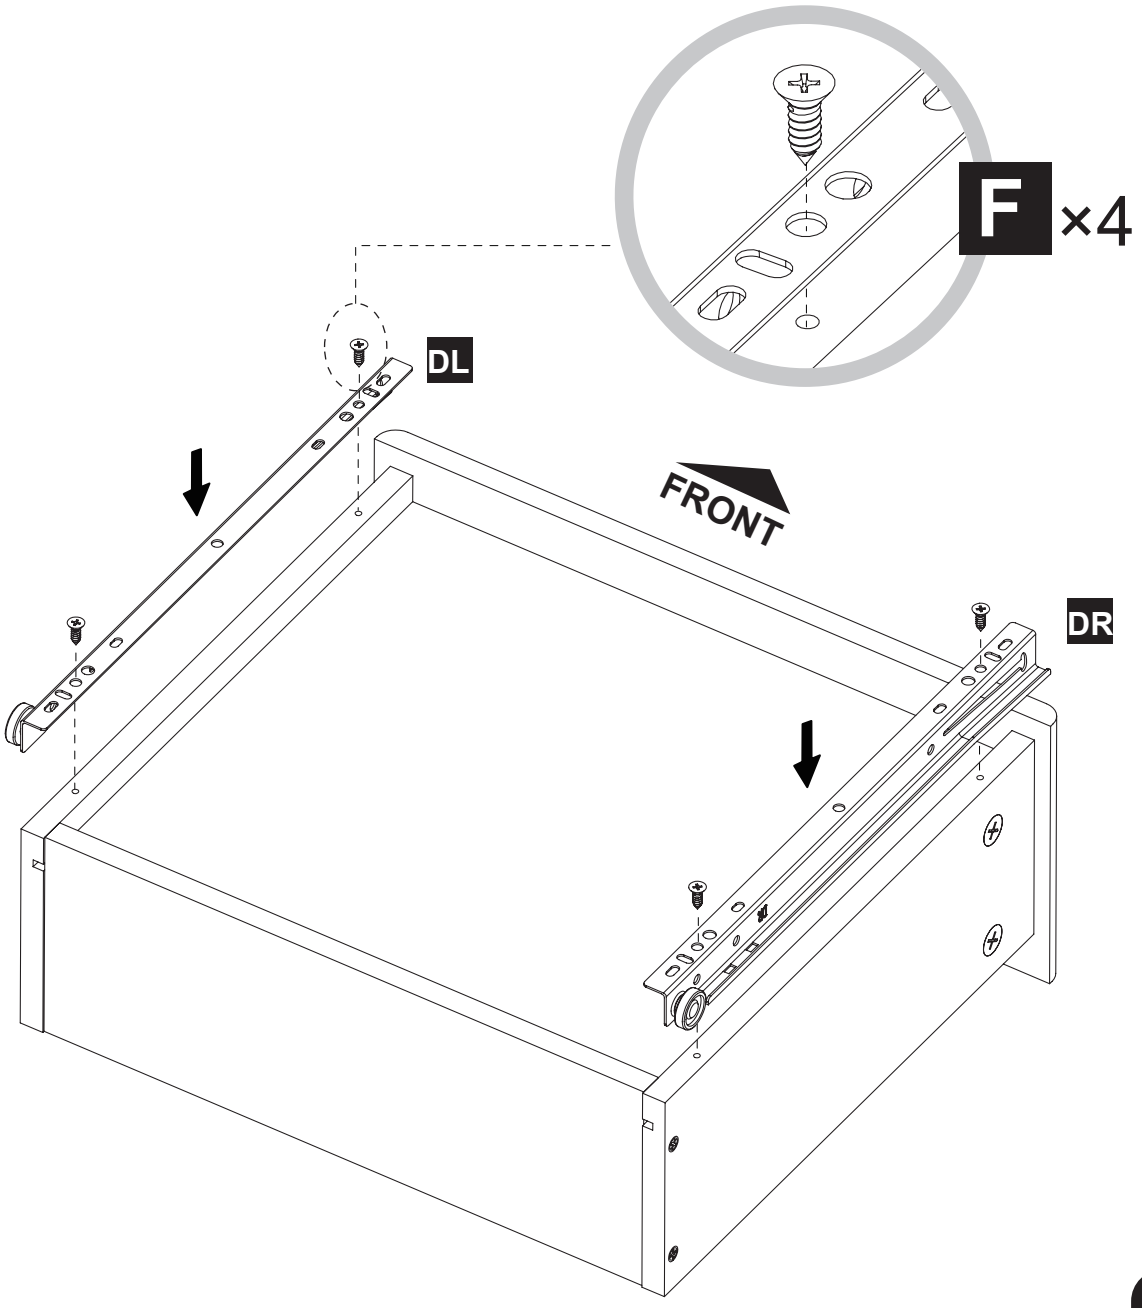

×2

# Step 26


Please paste the hole sticker according to actual needs.

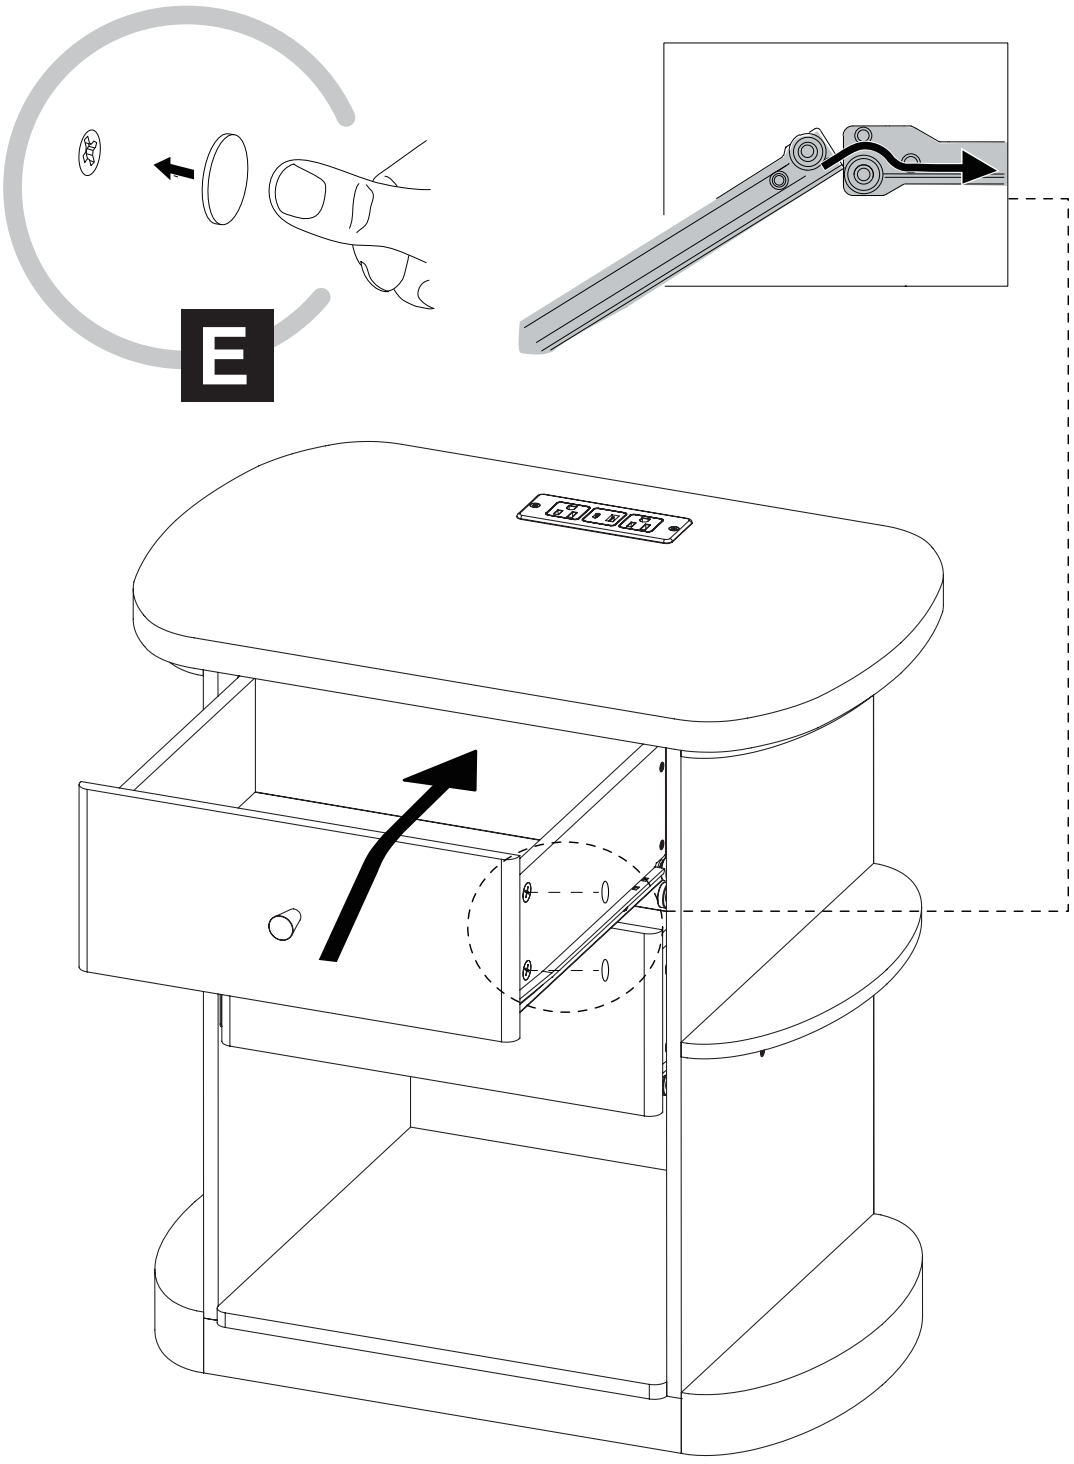

# Step 27

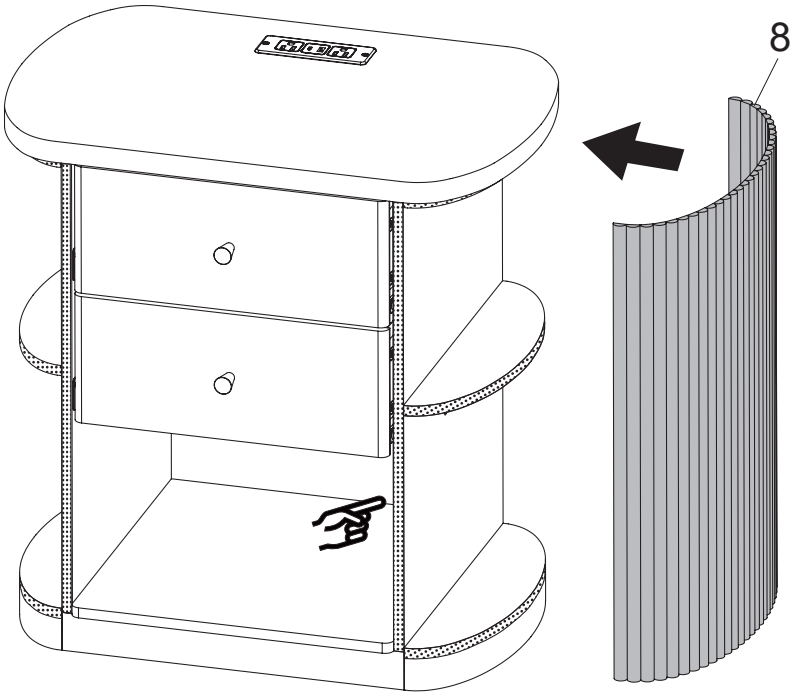




1.Start at the front of the nightstand.
2.Align the wave panel flush with the side edge.
3.Push it up firmly until it fits snugly under the tabletop.
4.Press along the entire panel to secure it.

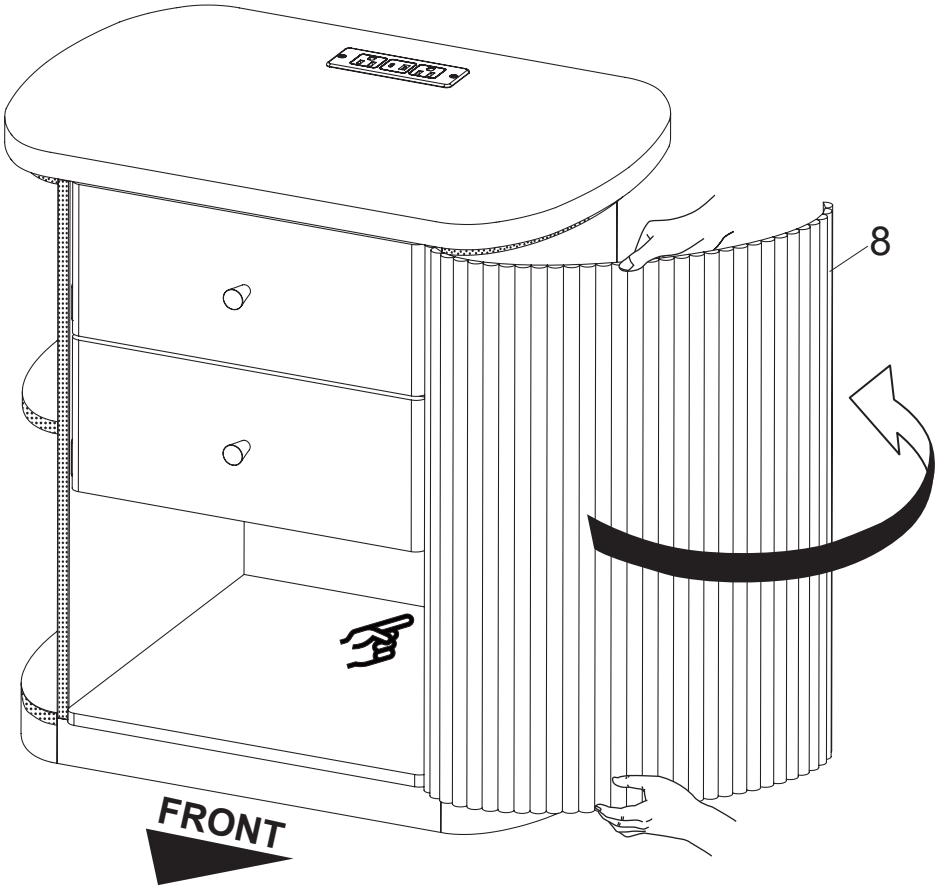


# Step 28


1.If there is a gap behind the fluted panel, use the included adhesive strips.
2.Attach the strips to the fluted panel, then press the panel firmly against the frame behind it.

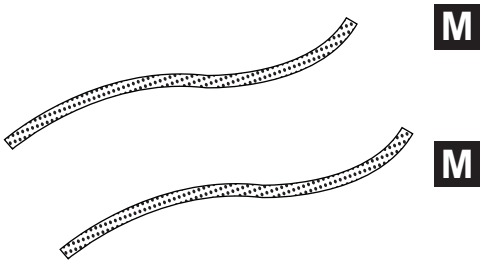

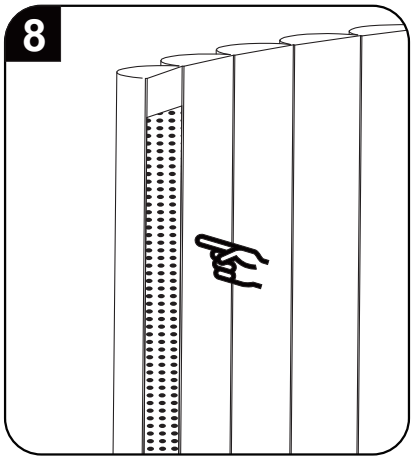


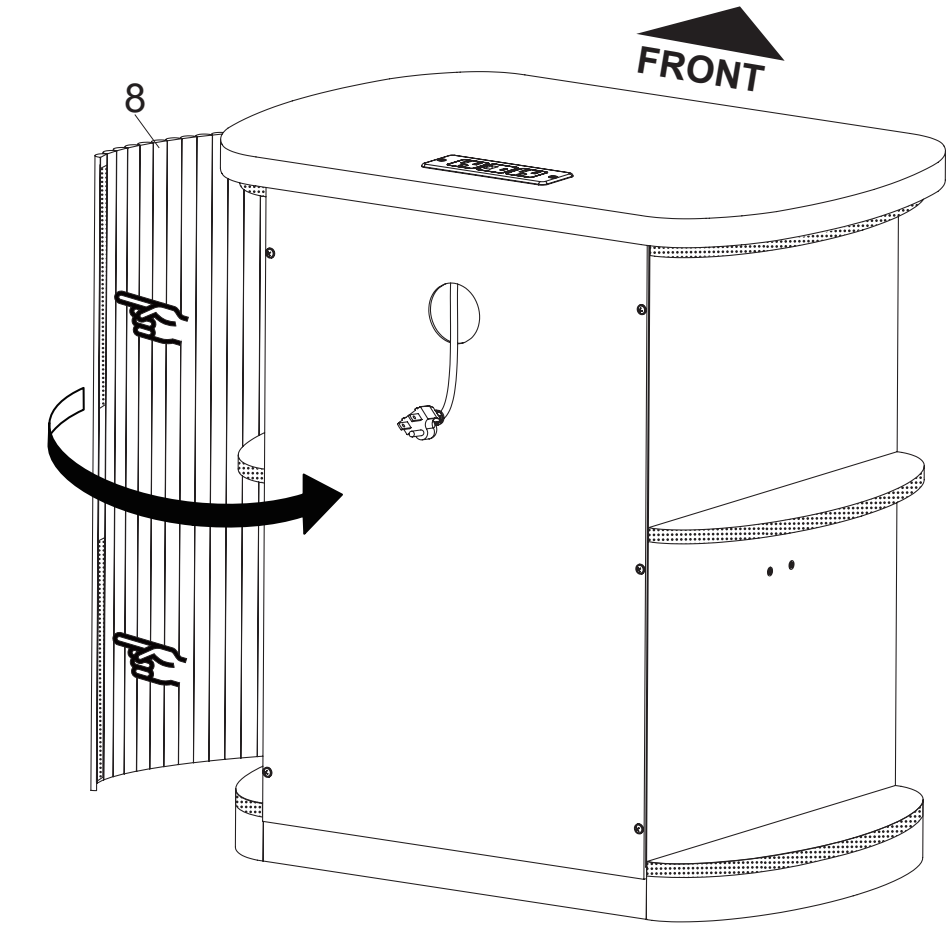
# Step 29

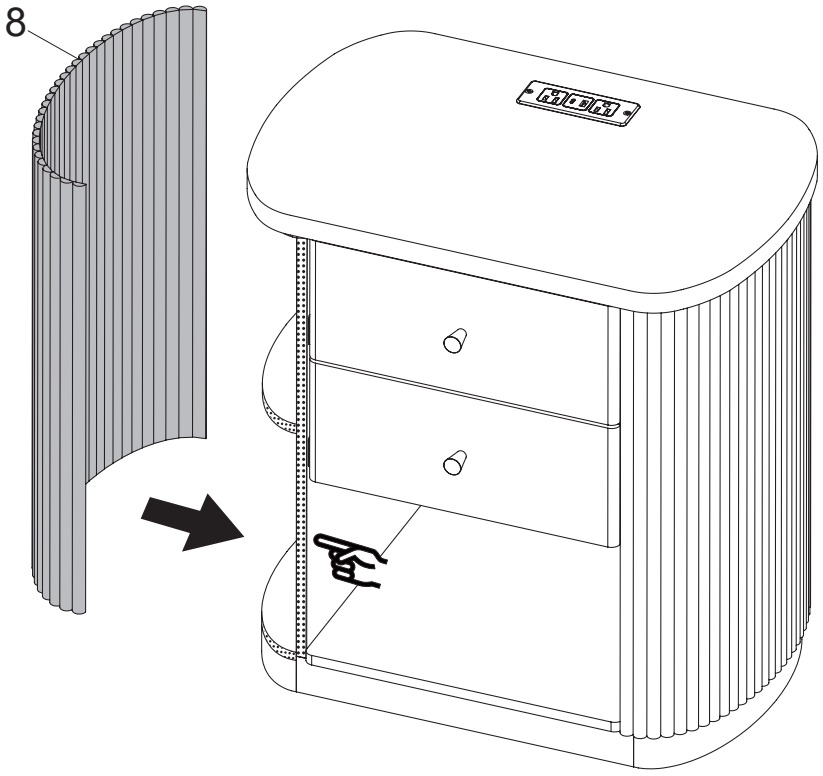




1.Start at the front of the nightstand.
2.Align the wave panel flush with the side edge.
3.Push it up firmly until it fits snugly under the tabletop.
4.Press along the entire panel to secure it.

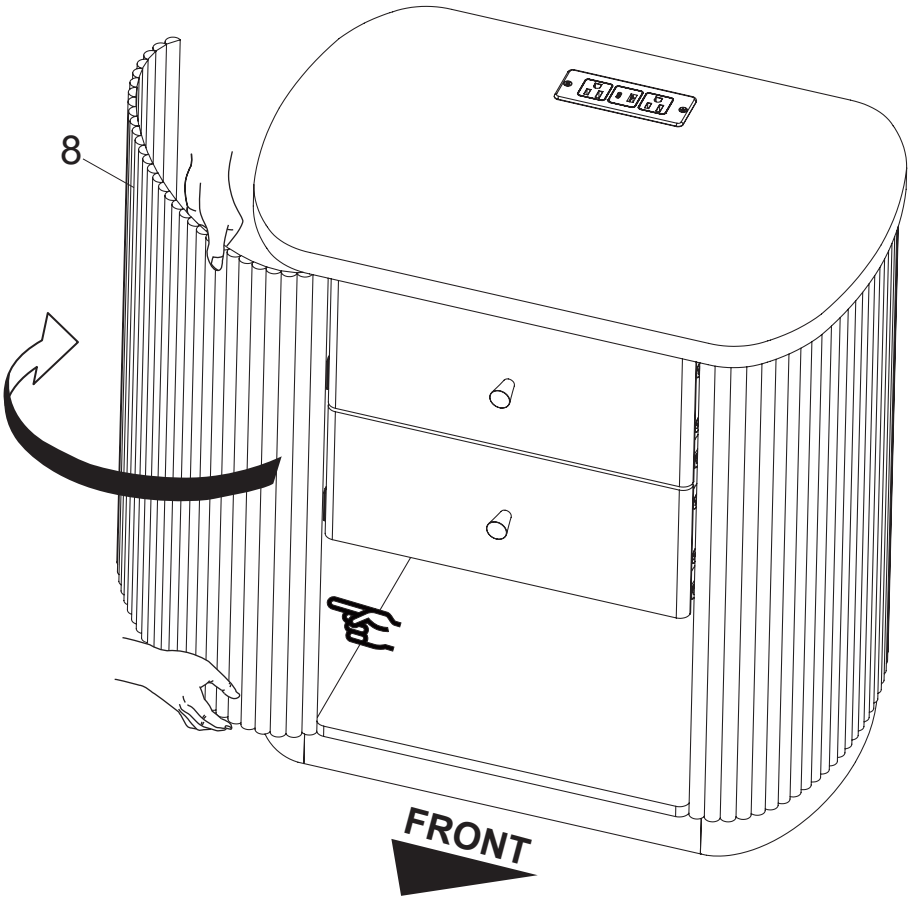


# Step 30

1.If there is a gap behind the fluted panel, use the included adhesive strips.
2.Attach the strips to the fluted panel, then press the panel firmly against the frame behind it.

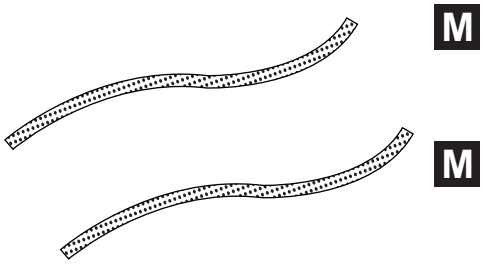
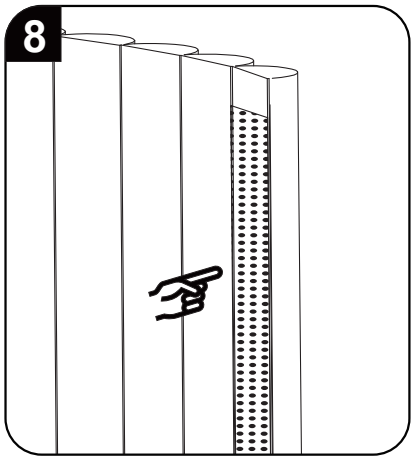
# DESIGN IS IN THE DETAILS

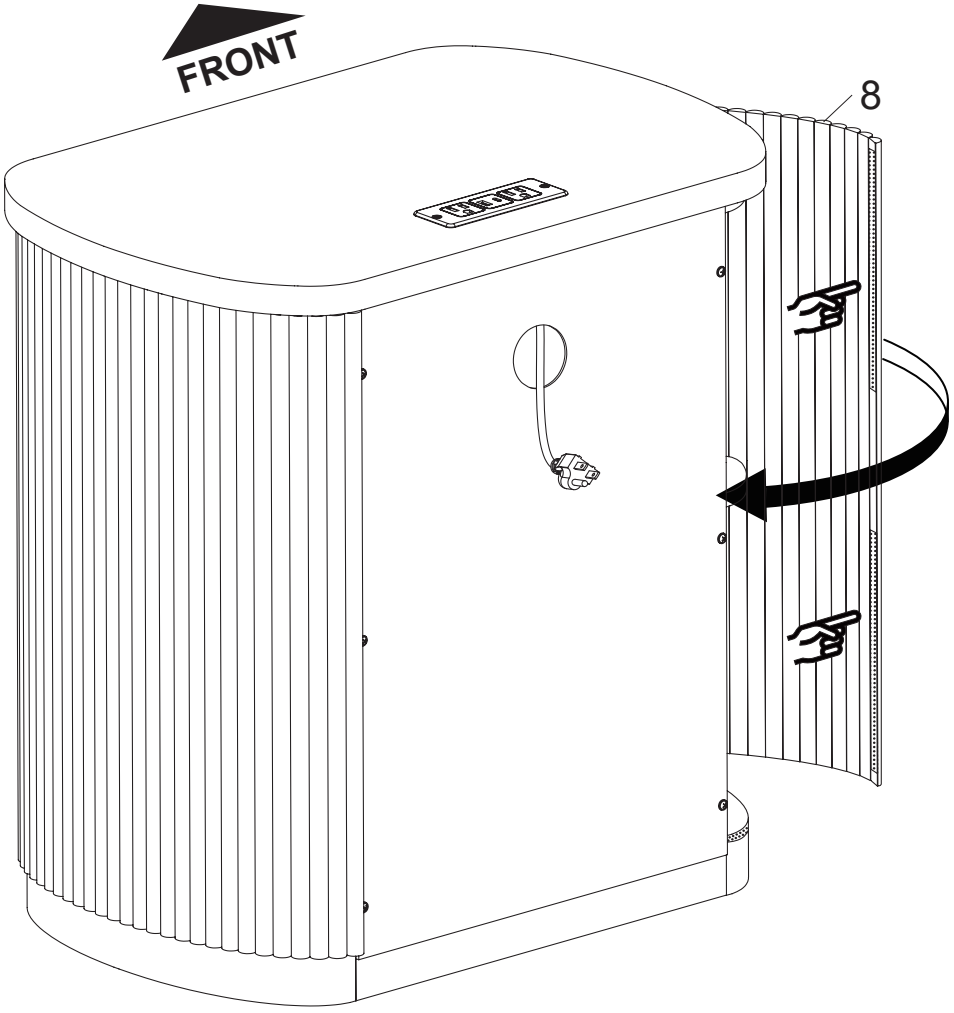Find **5** differences between the **2** images.

