


tool shed

Product ID. 7AJNG

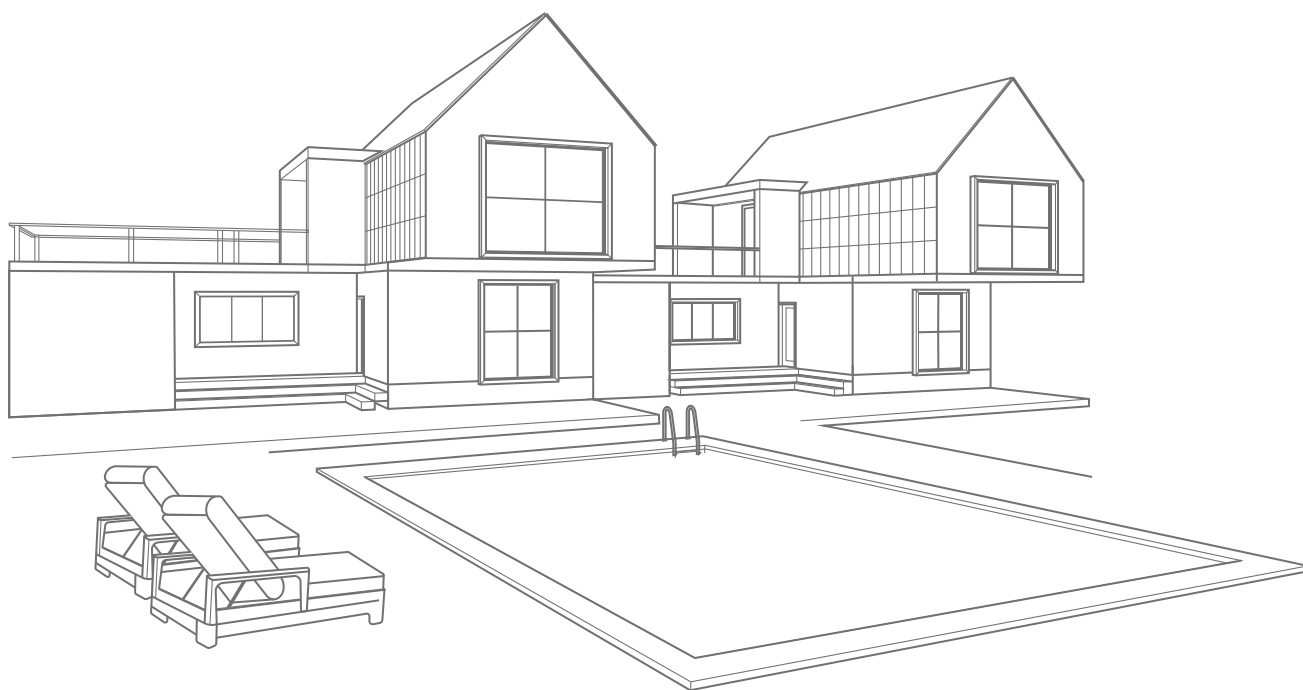

Scan for Support
support@garvee.com



Distributed by
GARVEE.com

V260529H6FE

PLASTIC GARDEN SHED 4X6FT

Instructions for Assembly





WARNING

Please read the instruction manual carefully before assembly.
Please assembly strictly in accordance with the instruction.
Please double-check to ensure that all parts of the package contents intact.
To avoid injury, work gloves are recommended during assembly.

Level the ground surface



Recommendation: Construct a wooden or concrete base as a foundation

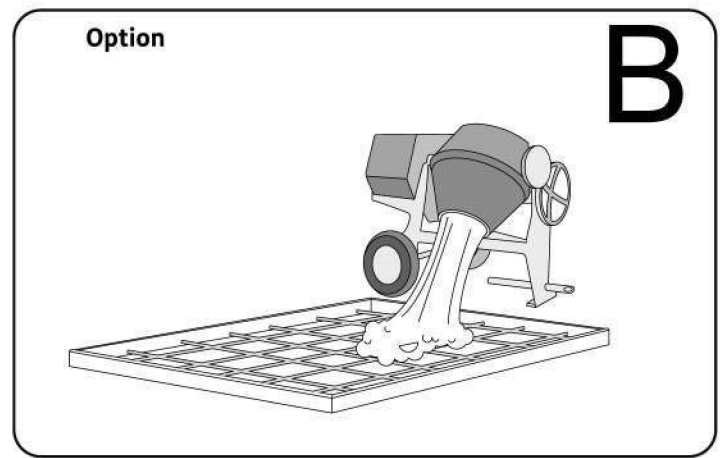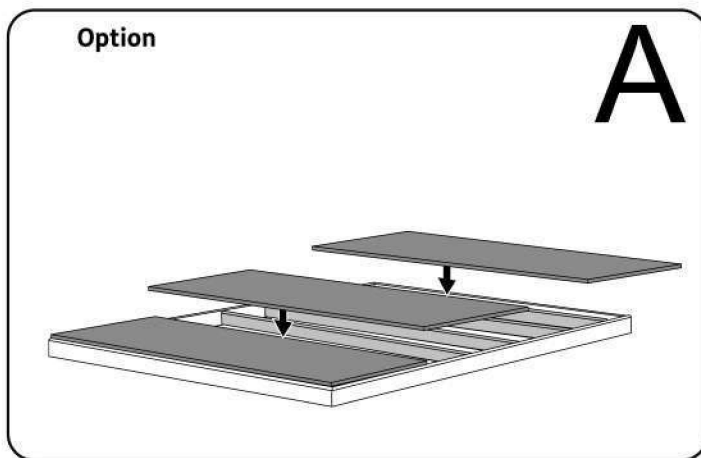

BEFORE STARTING ASSEMBLY

Read the care and safety guidelines at the end of this manual Check to ensure that there are no missing or damaged parts BEFORE starting or arranging assembly Remove all parts from the package(s) and spread them out on a clean work surface Review all assembly instructions Assemble all the parts according to the directions in this manual Do not skip any steps.

REQUIRED TOOLS (Tools Not Included)



(Rubber mallet)



For concrete floors, please prepare 4 pieces of 8*80mm expansion screw, we don't provide them.

For wooden floors, please prepare 4 pieces of 4*60mm wood screws and washers, we don't provide them.




ASSEMBLY REQUIRES TWO PEOPLE

PARTS LIST

NO.	PART.	Qty.
P1		1
P2		1
P3		1
P4		1
P5		2
P6		2
P7		2
P8		3
P9		3
P10		1
P11		1
P12		1
P13		1
P14		4
P15		1
P16		1
P17		1
P18		6
P19		2
BY		2
J1		4
J2		4
J3		2

NO.	PART.	Qty.
J4		2
J5		2
J6		2
M1		1
M2		1
M3		1
M4		1
M5		1
M6		1
M7		2
M8		2
M10		1
M11		3
G		1
L1		1
L2		2
L3		2
L4		4
L5A		4
L5B		4
L6A		2
L6B		2
H1		2

NO.	PART.	Qty.
C1		1
C2		1
C3		2
D1		180
D2		65
D4		35
J7		4
SG		2

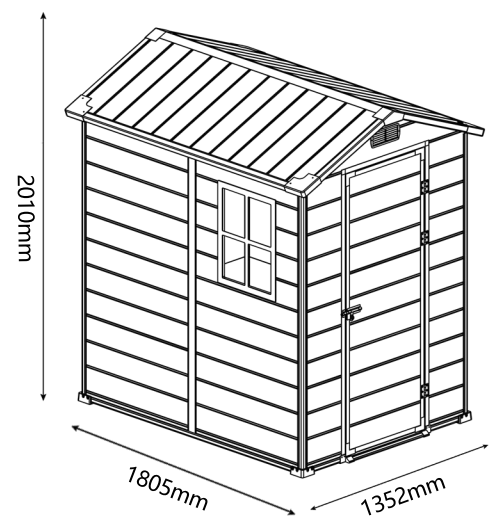

- Use spatula (part" SG") for easier insertion of panel into profile
- Please ensure the panels are all installed on position before screwing




FLOOR ASSEMBLY





● Use spatula  (part "SG ") for easier insertion of panel into profile

Note: The crease line of the floor must be underneath

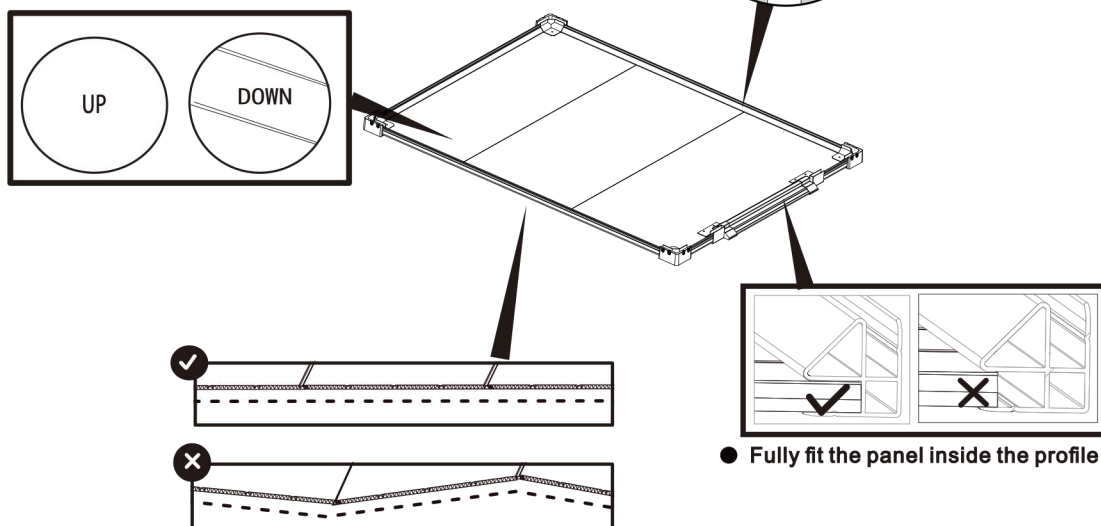


Step 1

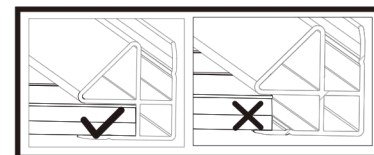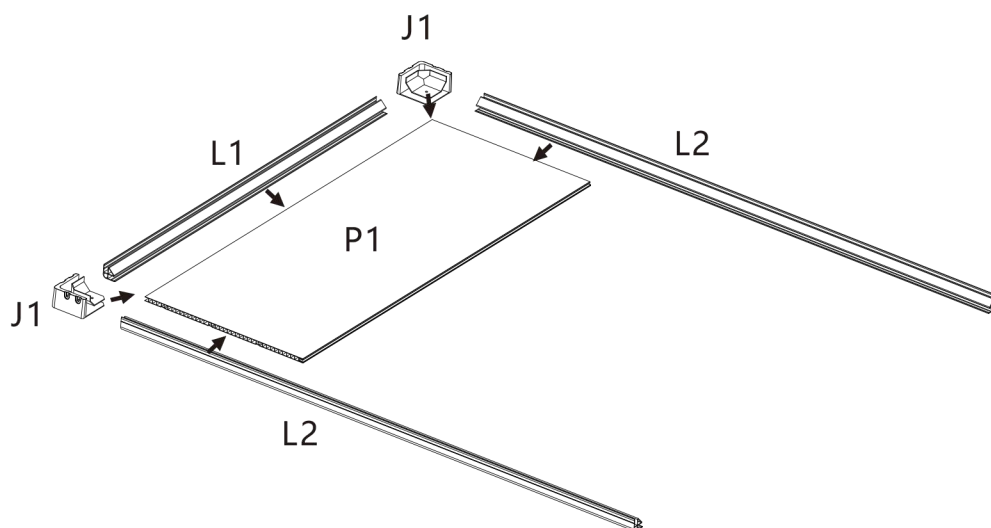


● Fully fit the panel inside the profile


Step 2

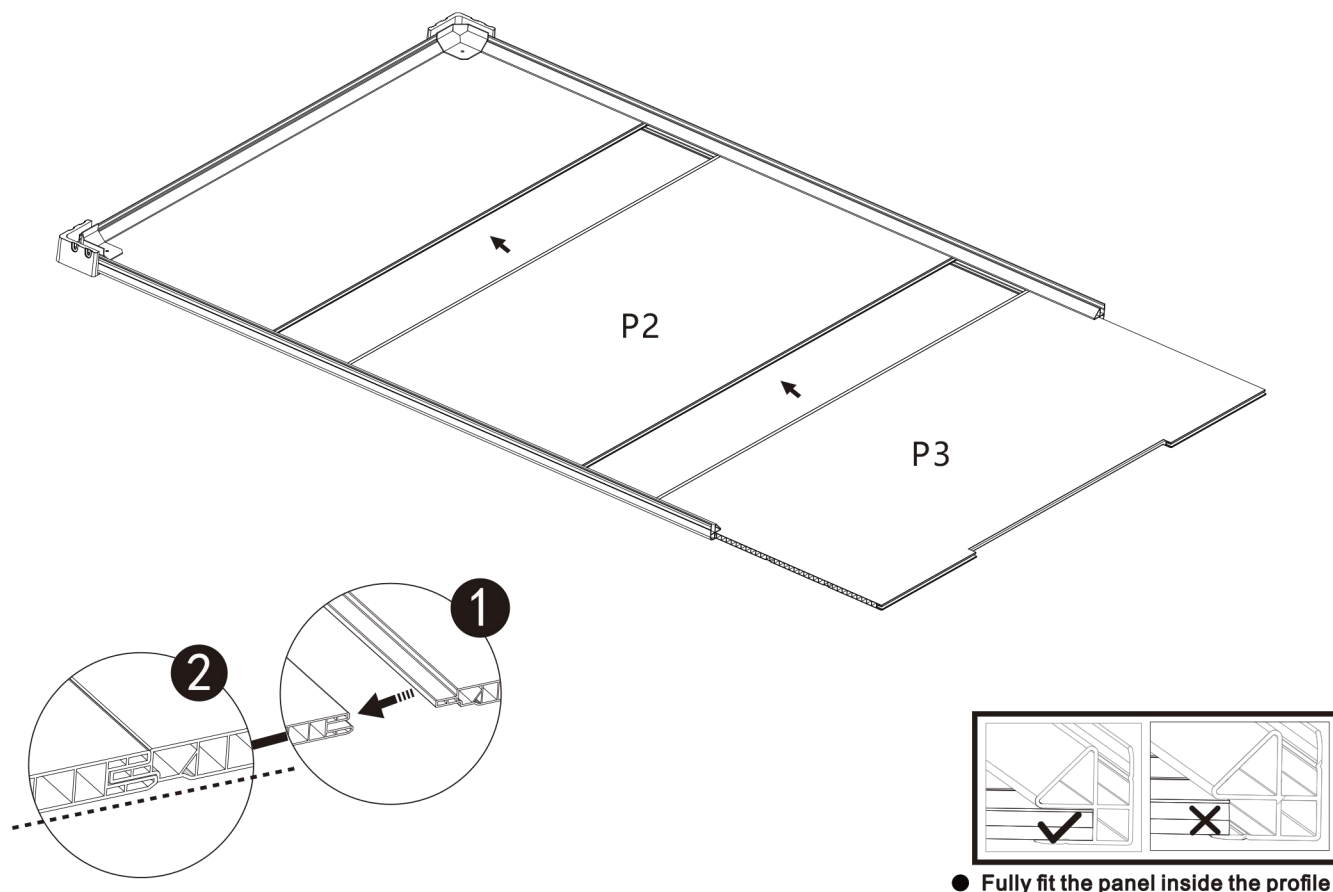


Step 3

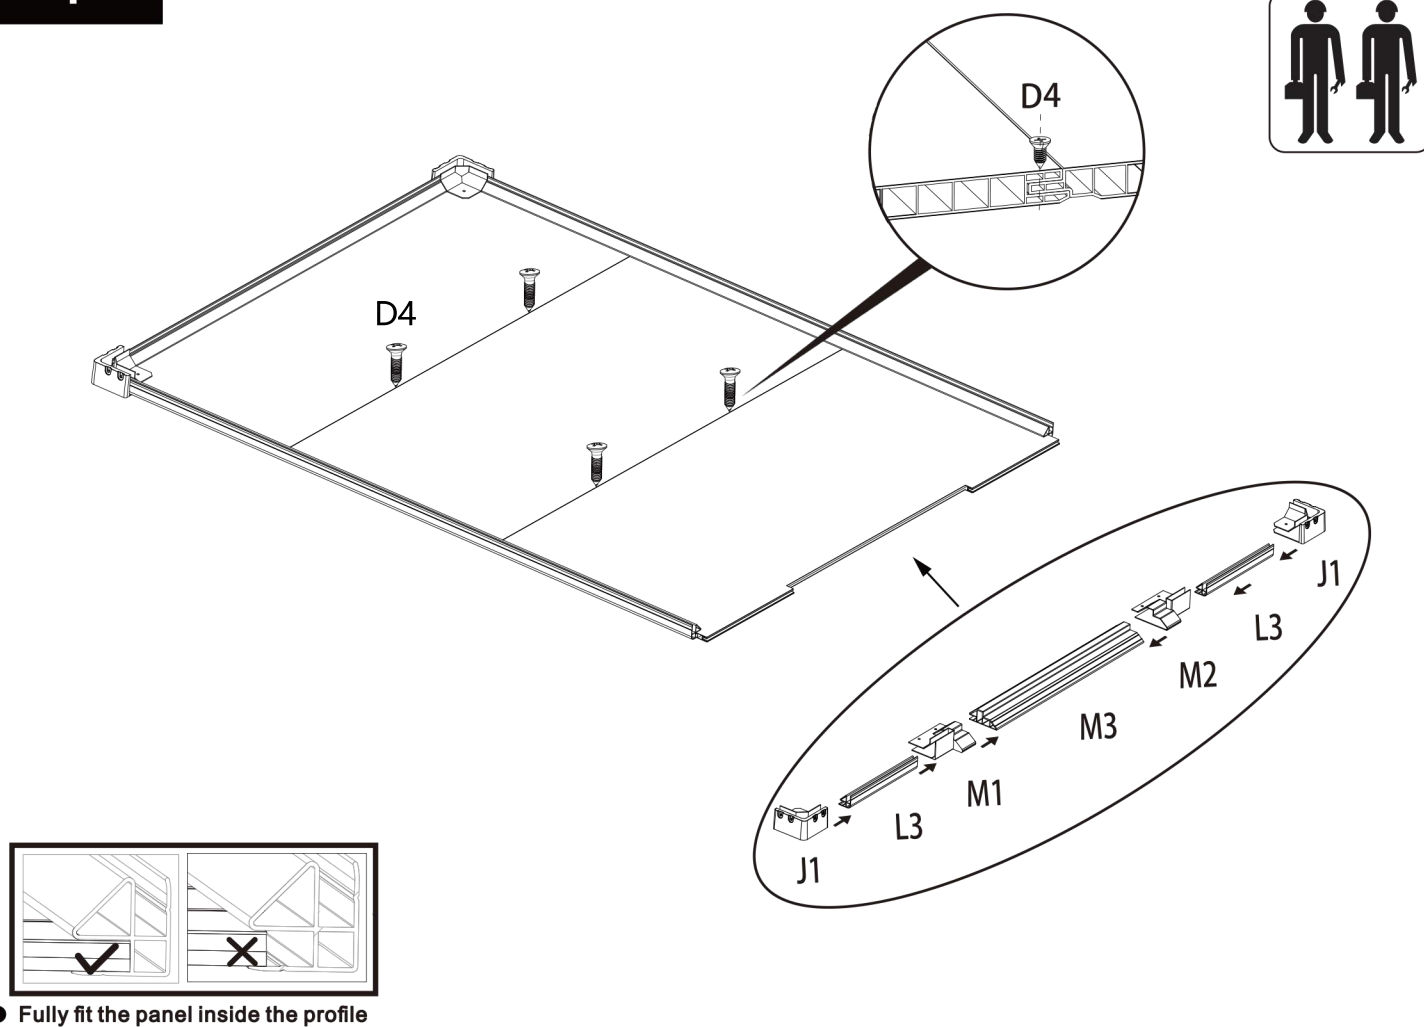


Step 4

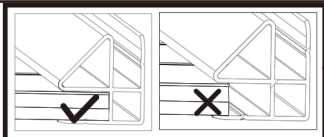

- Fully fit the panel inside the profile

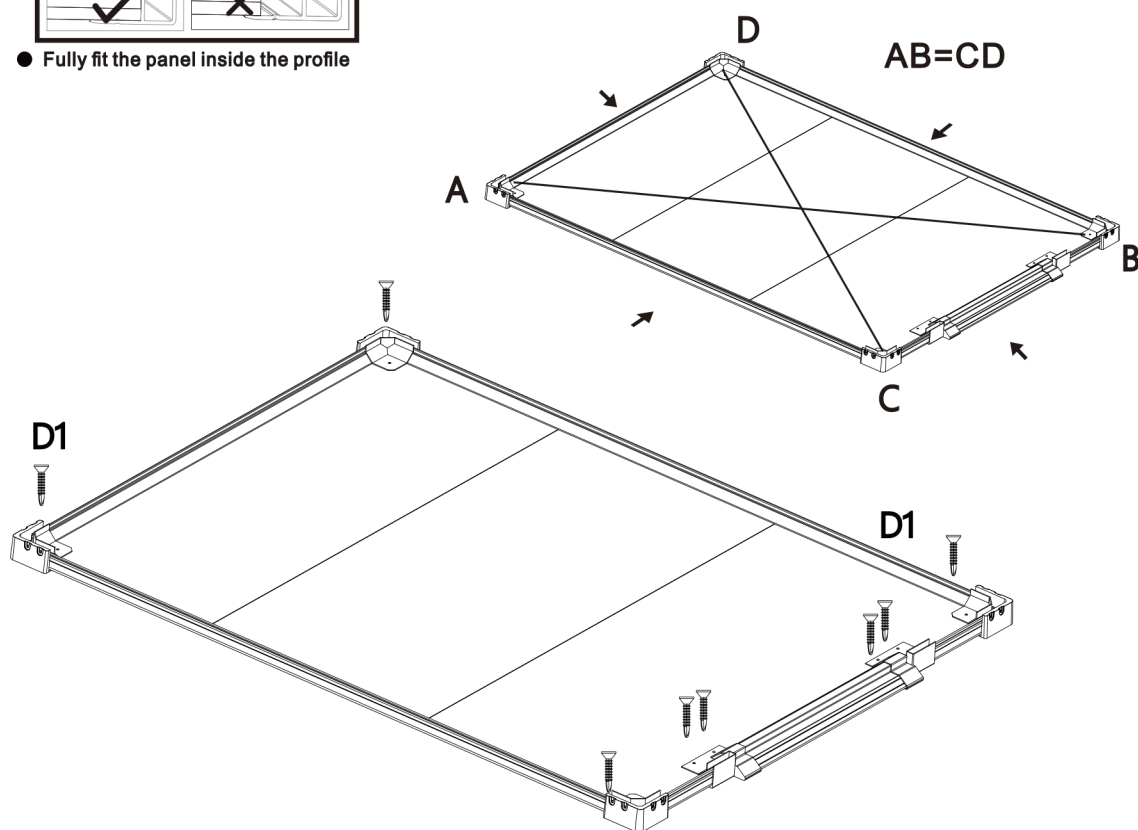


Step 5


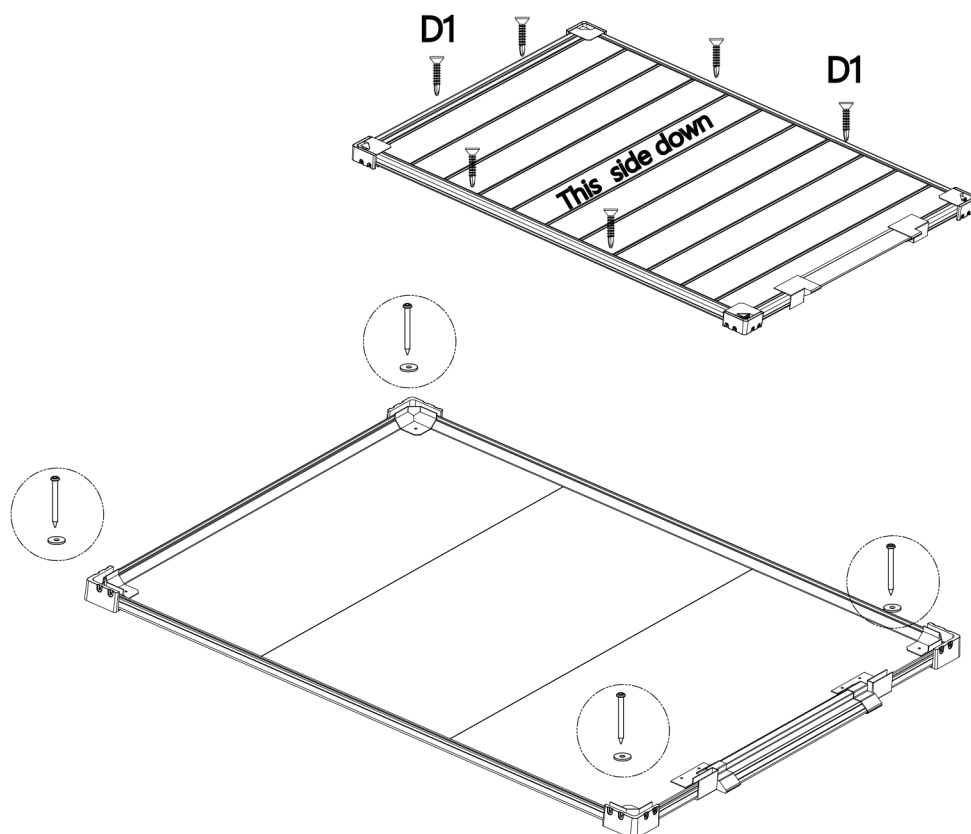


For concrete floors, please prepare 4 pieces of 8*80mm expansion screw, we don't provide them.
For wooden floors, please prepare 4 pieces of 4*60mm wood screws and washers, we don't provide them.





Step 6

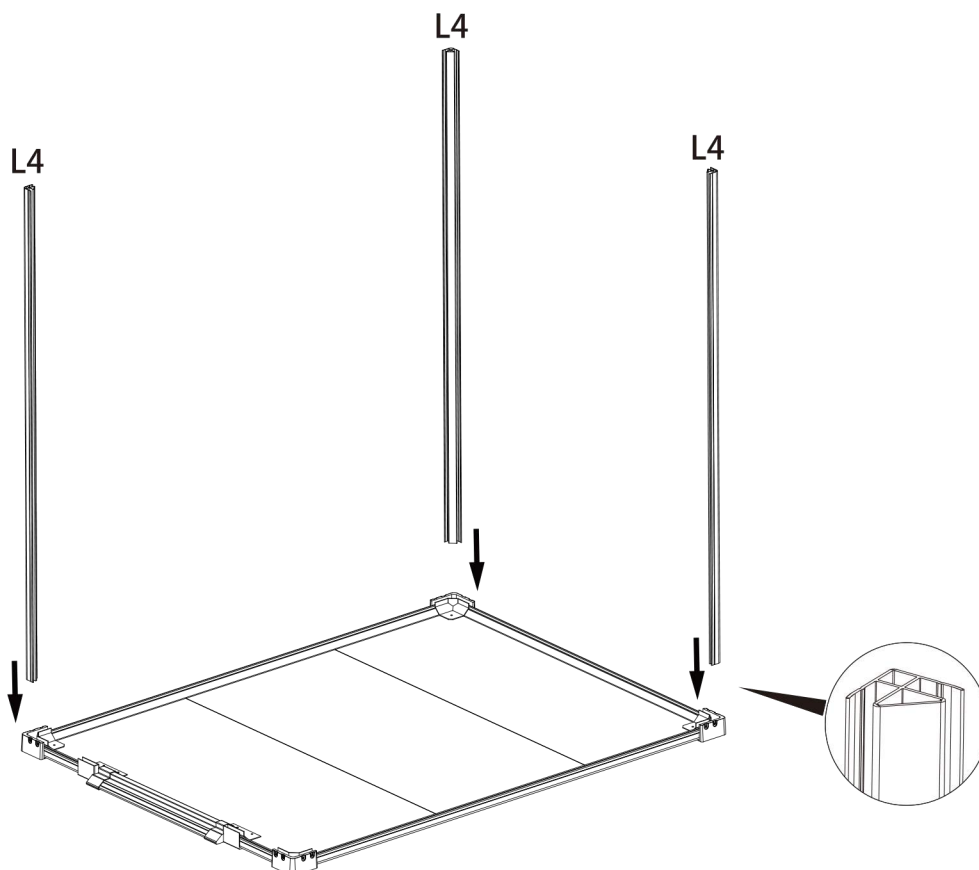






Step 7

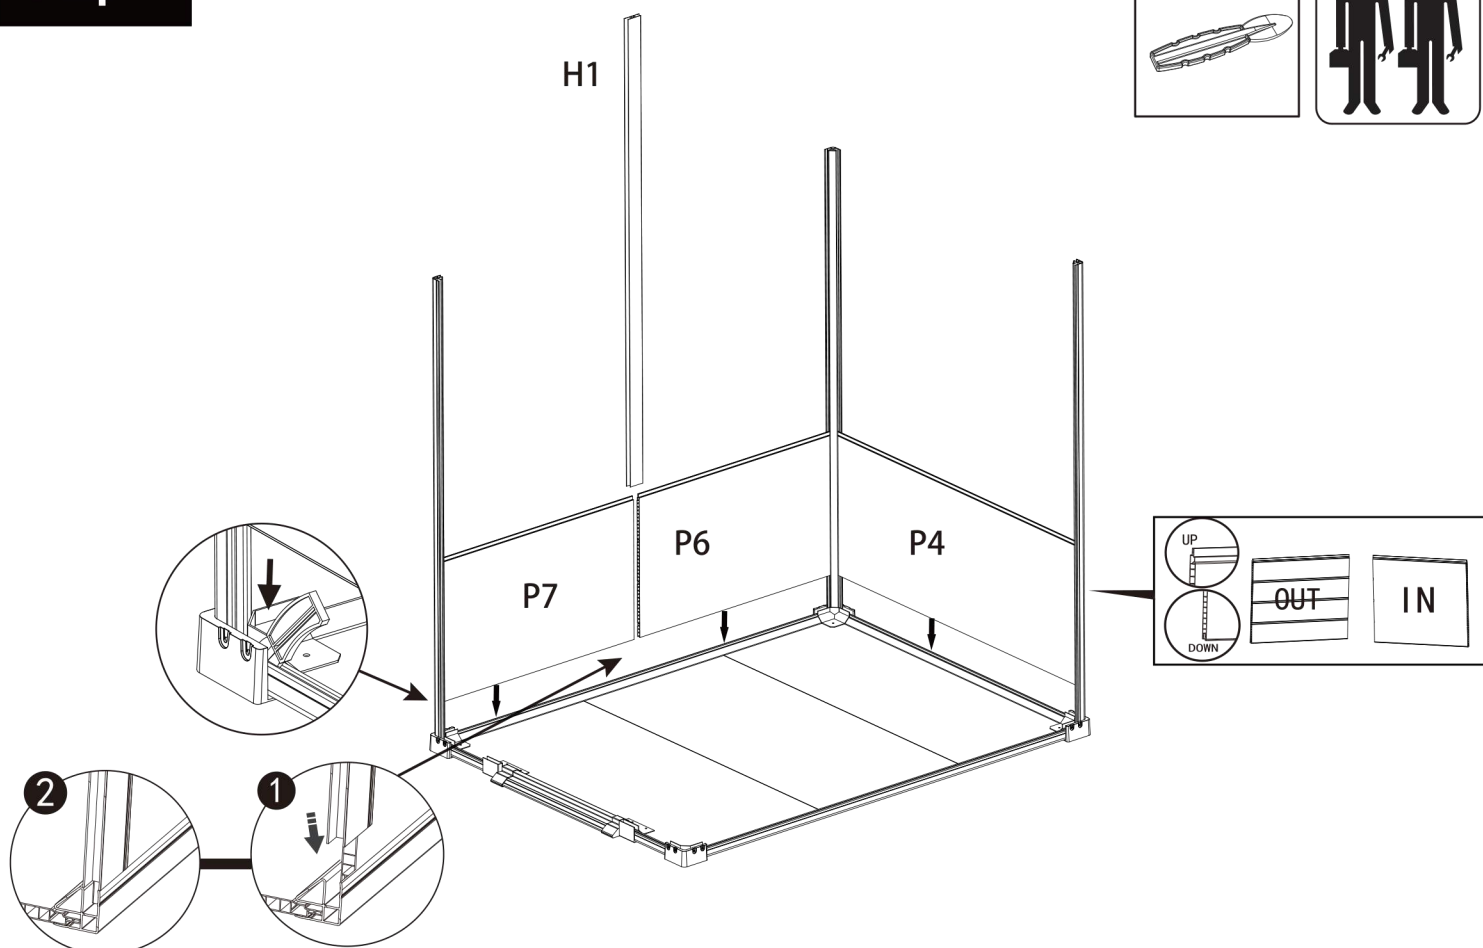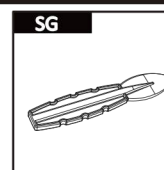


Step 8

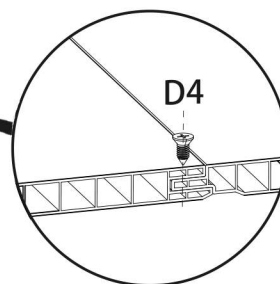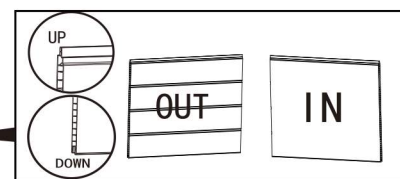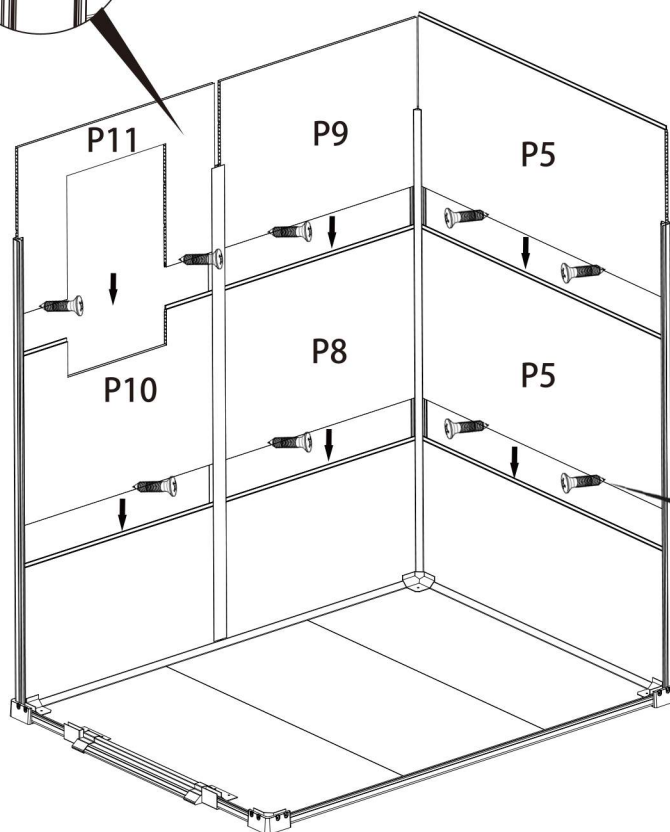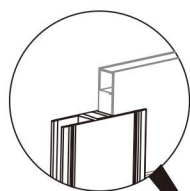


Step 9

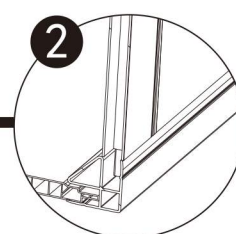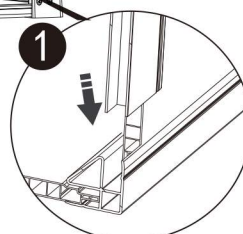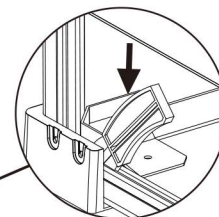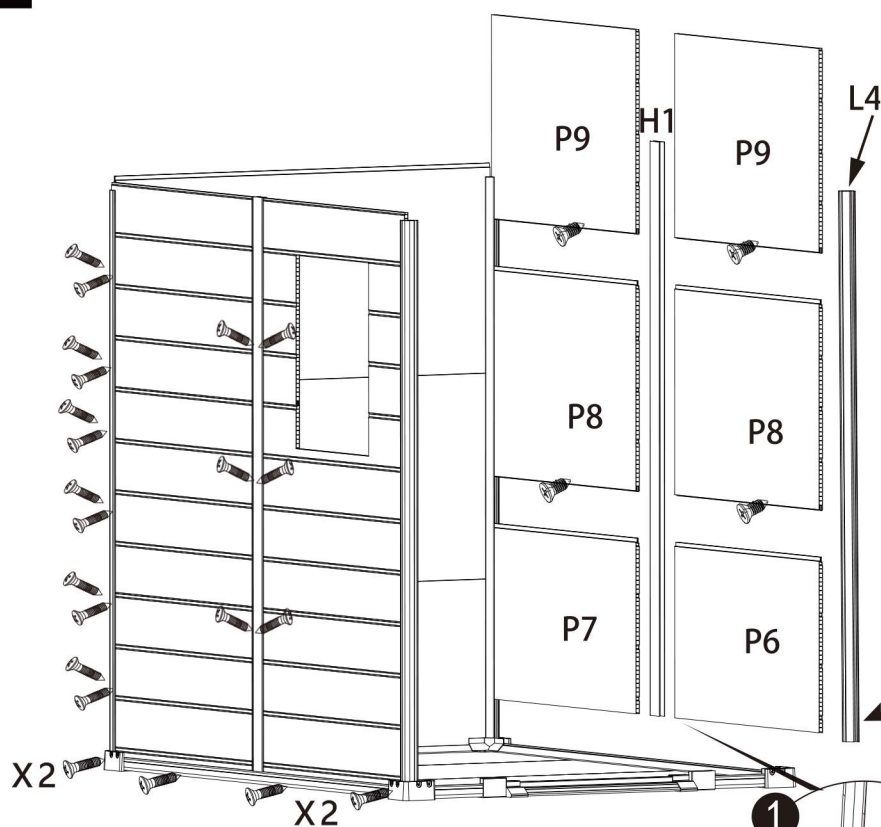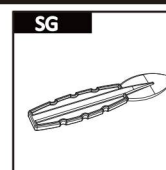



Step 10

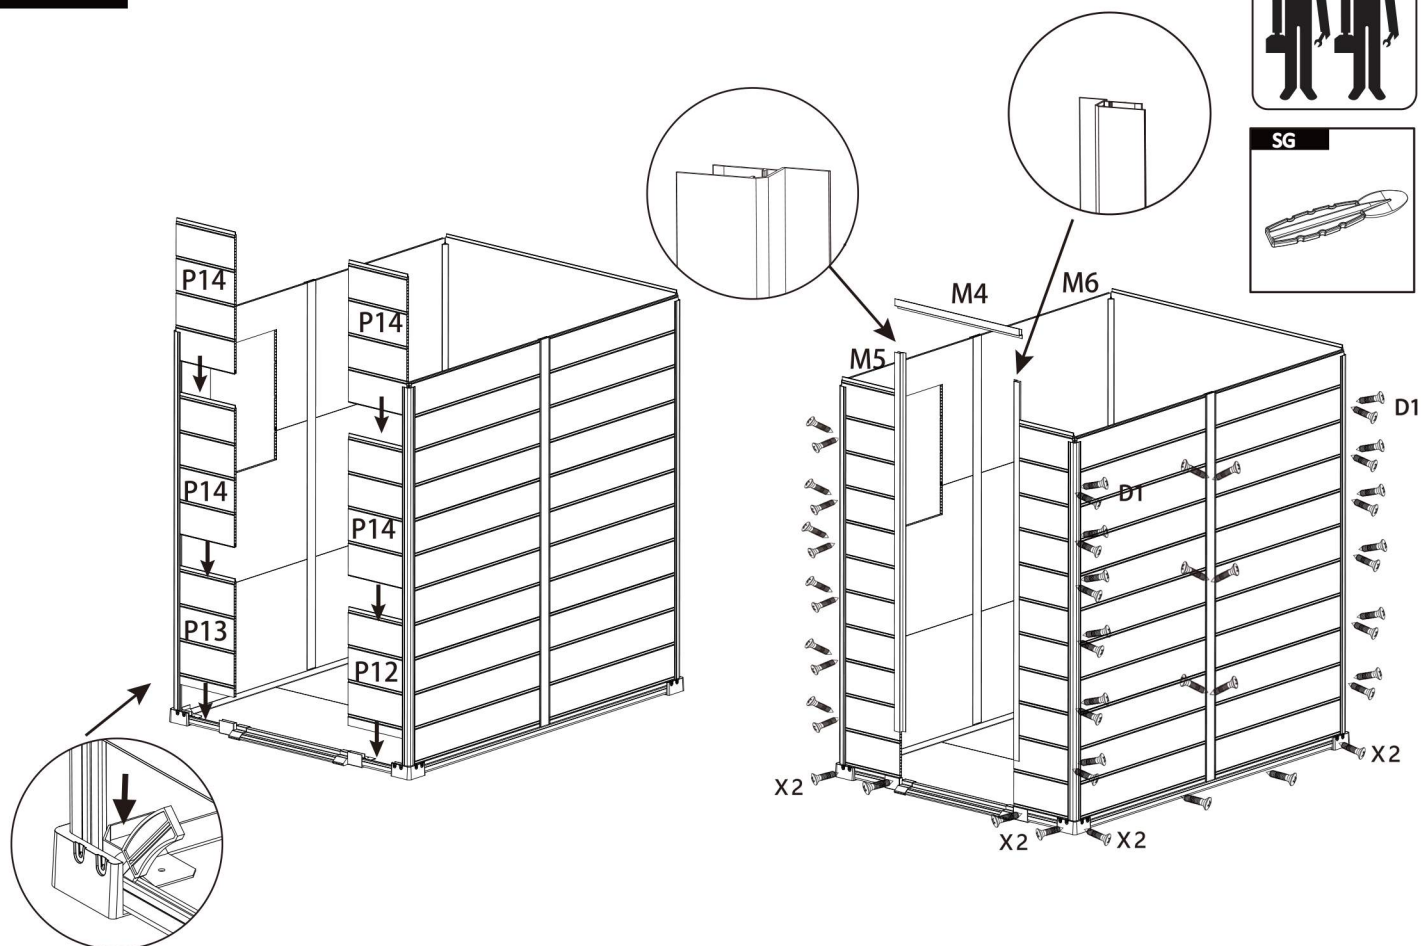




Step 11

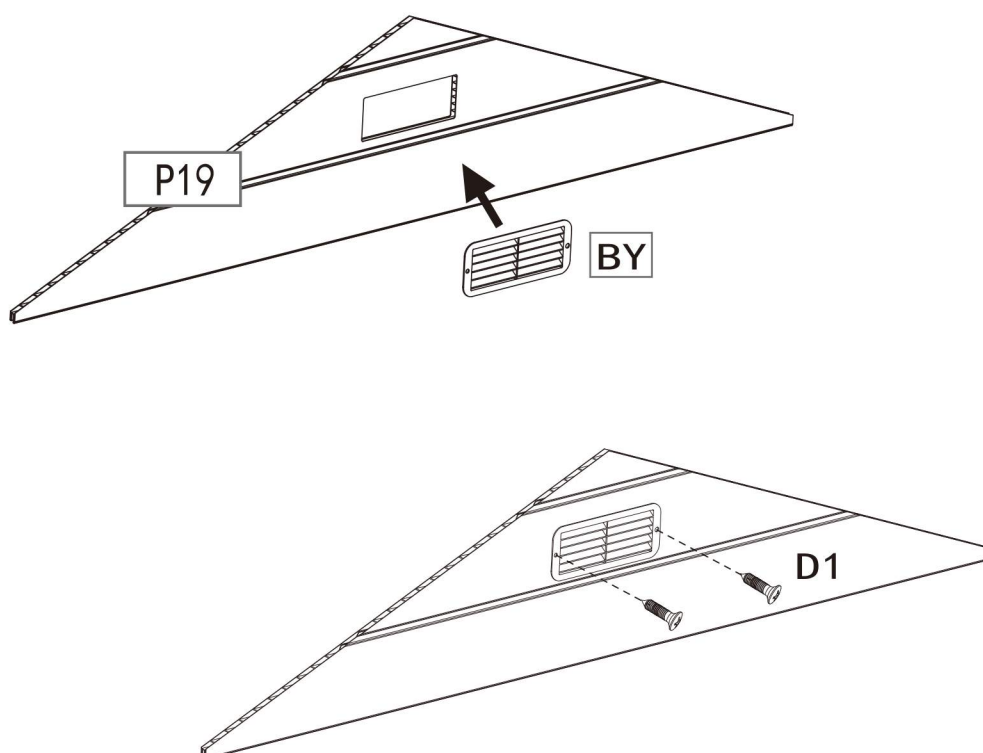

Step 12


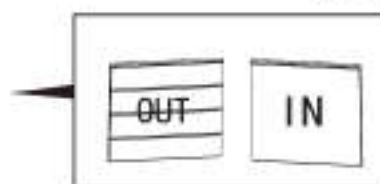
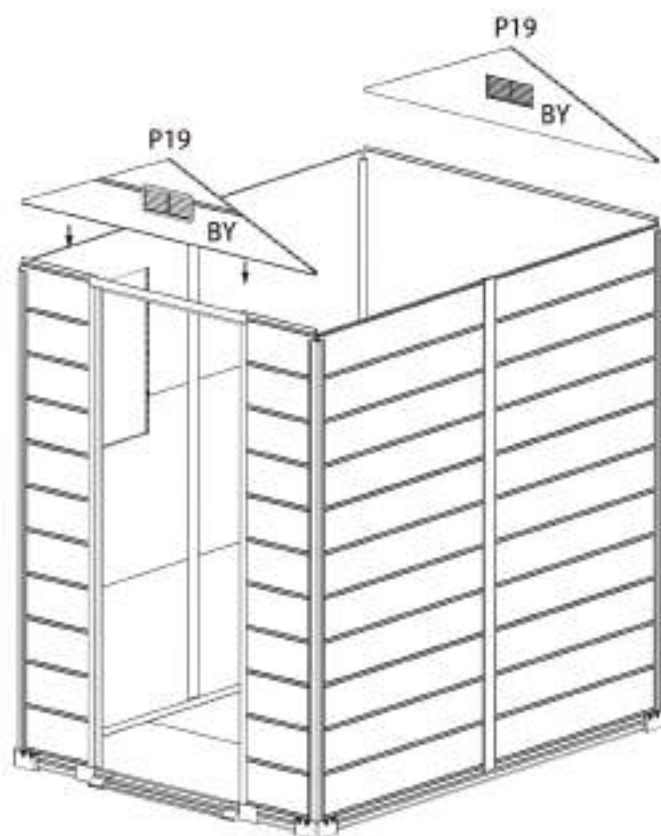


Step 13

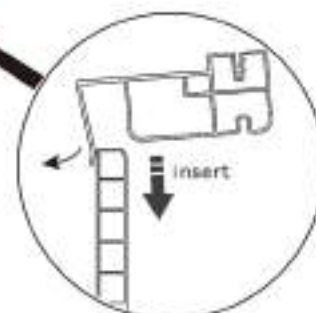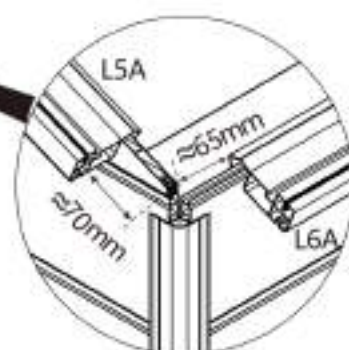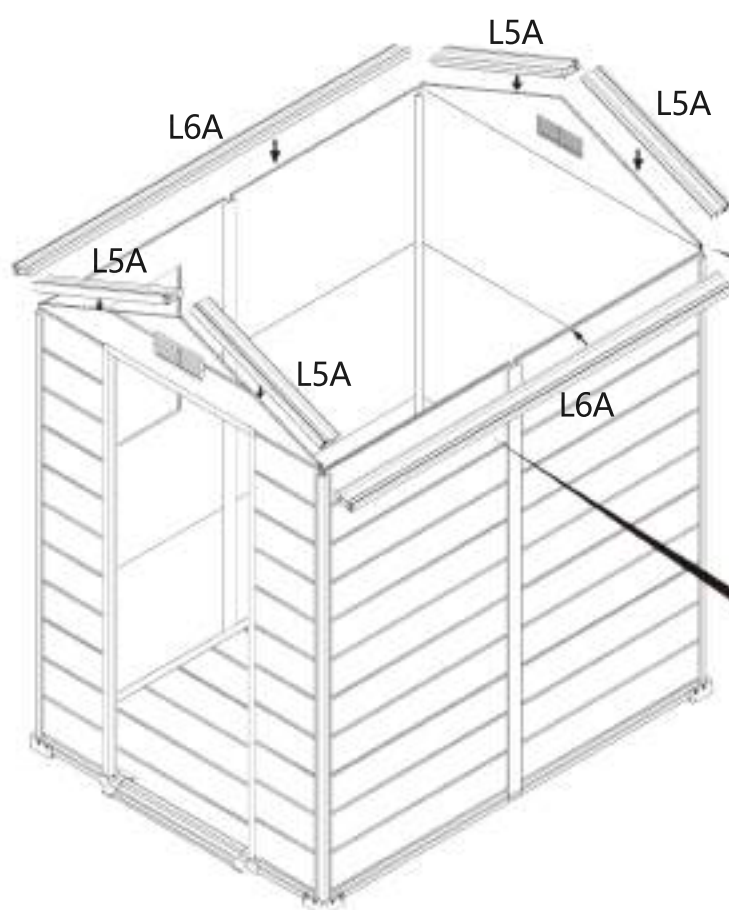




Fully fit the panel inside the profile

Step 14

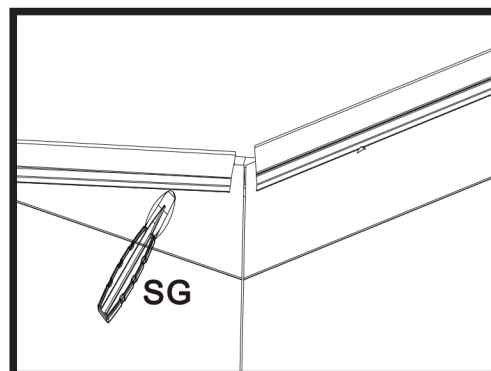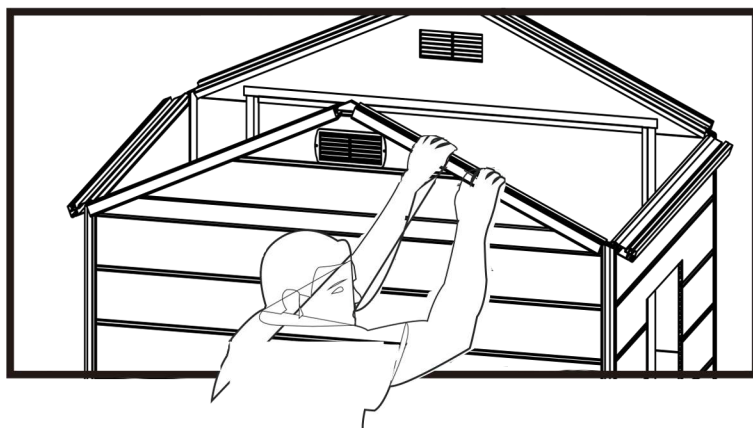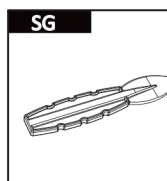

Fully fit the panels inside the profiles of roof

Step 15

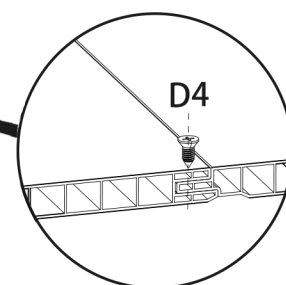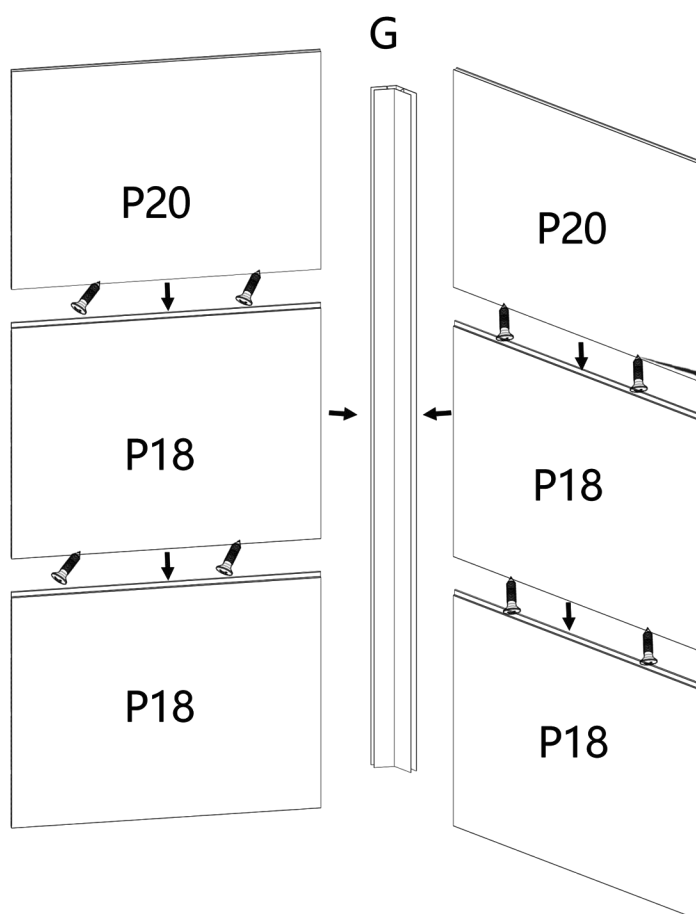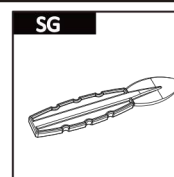


Step 16

SG



D2

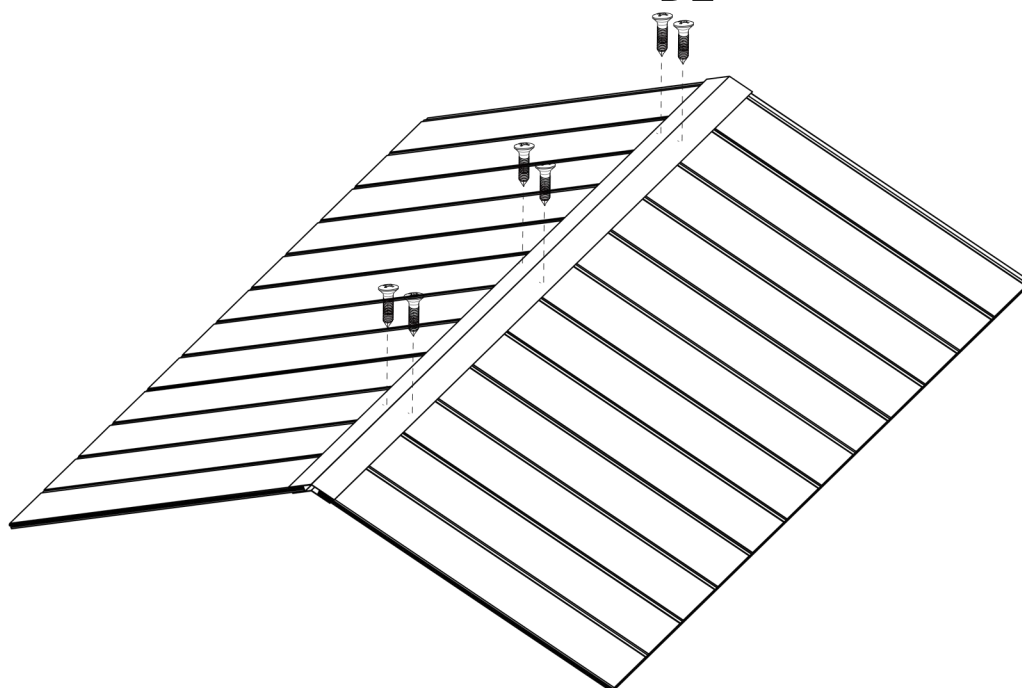




The roof covering is installed onto the roof after the screws are driven in.

Step 17



SG



Step 18

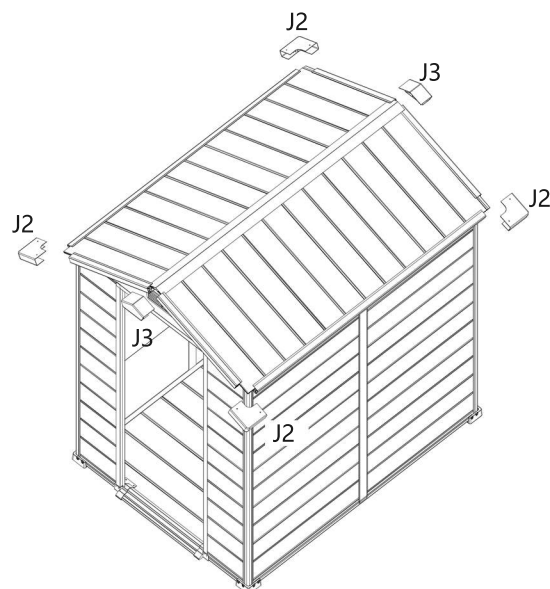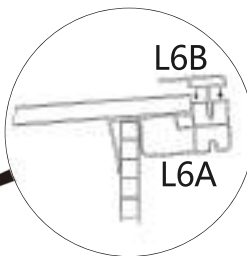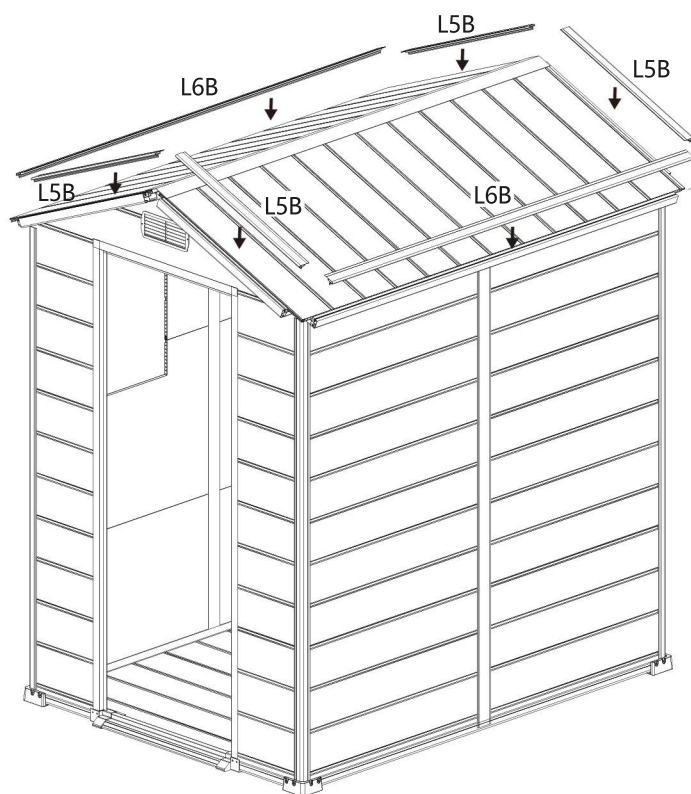


Step 19

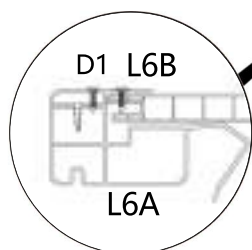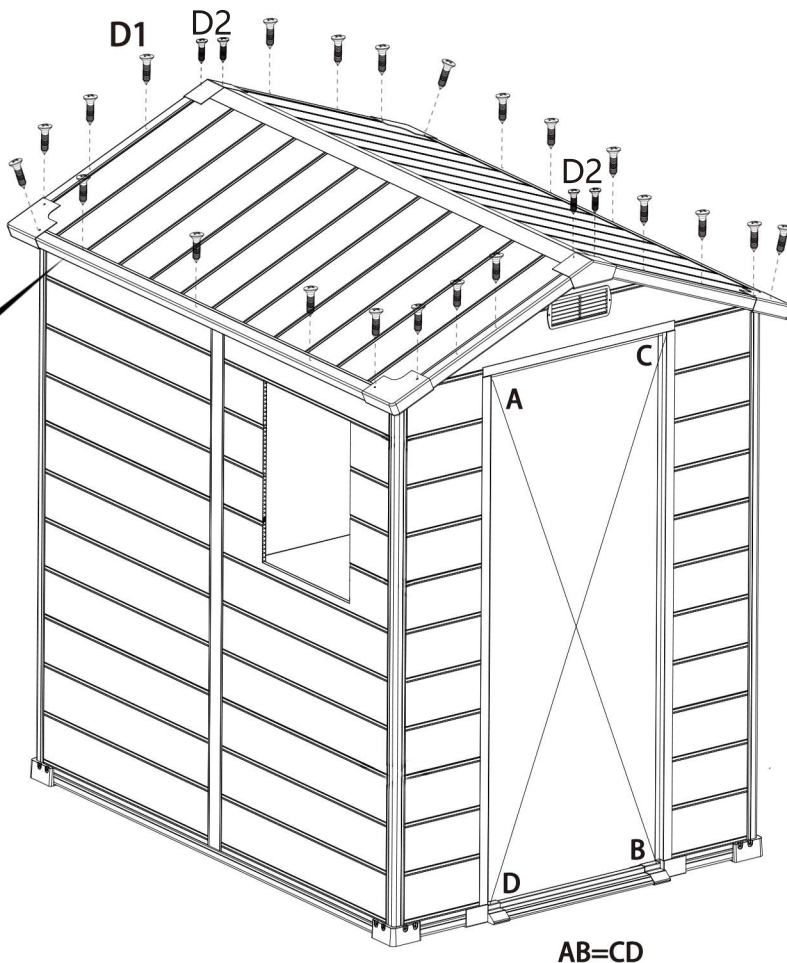


Fixing four-side wall plate by self-tapping


Step 20

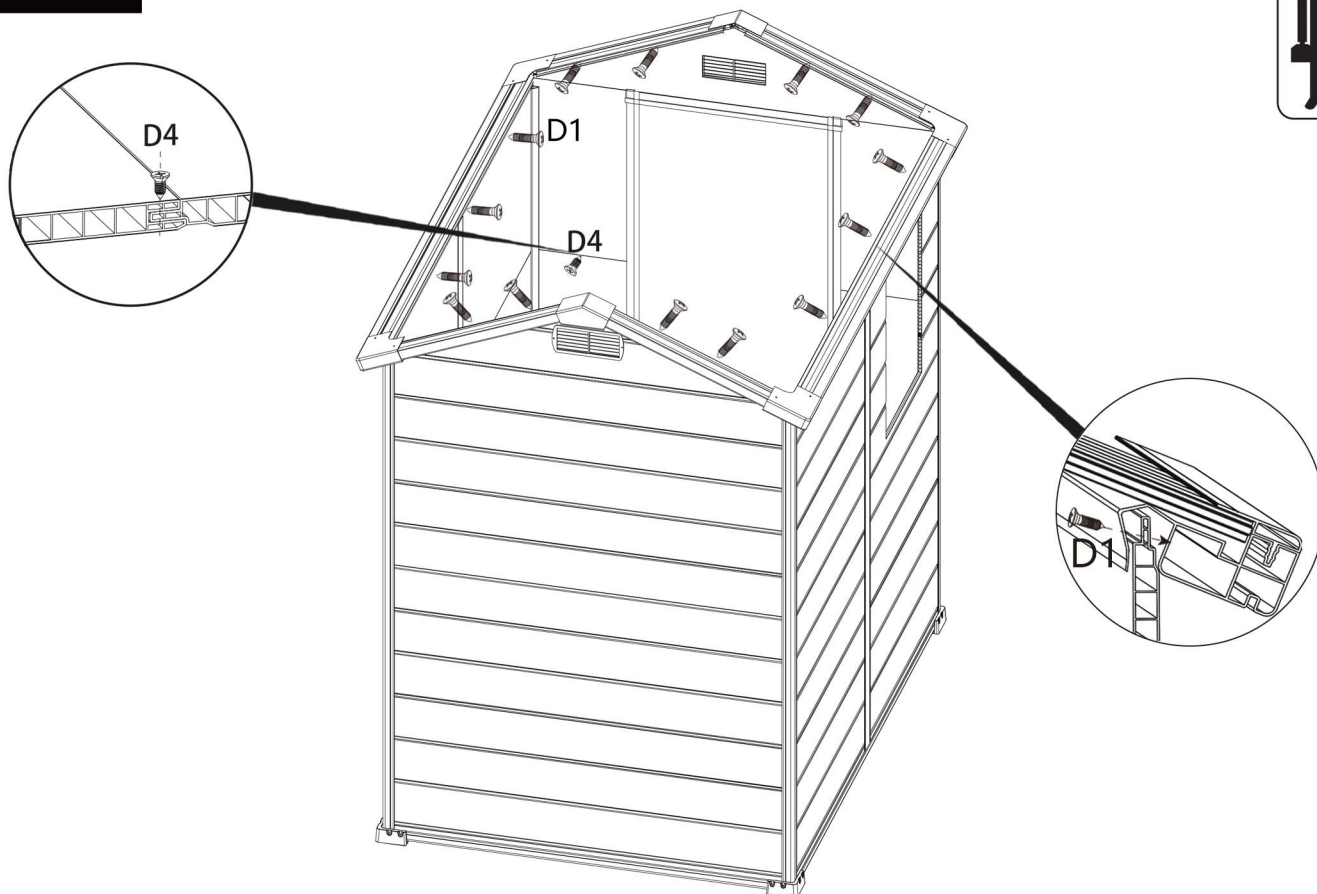


Step 21

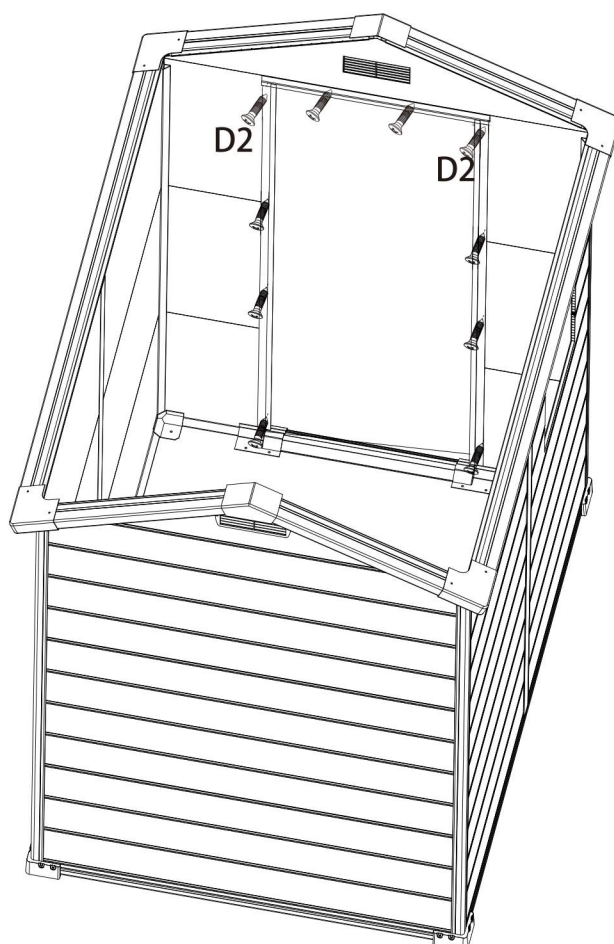

Step 22



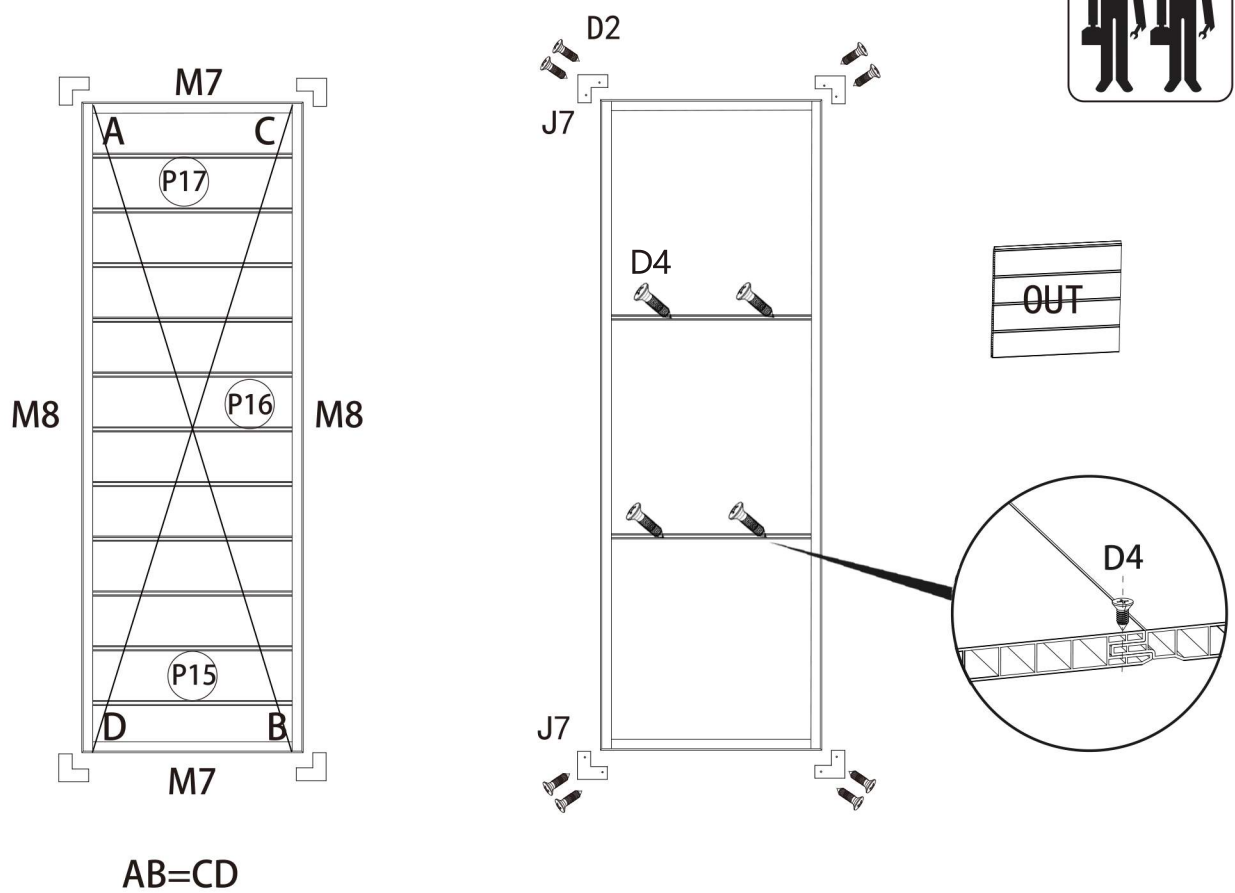


Step 23

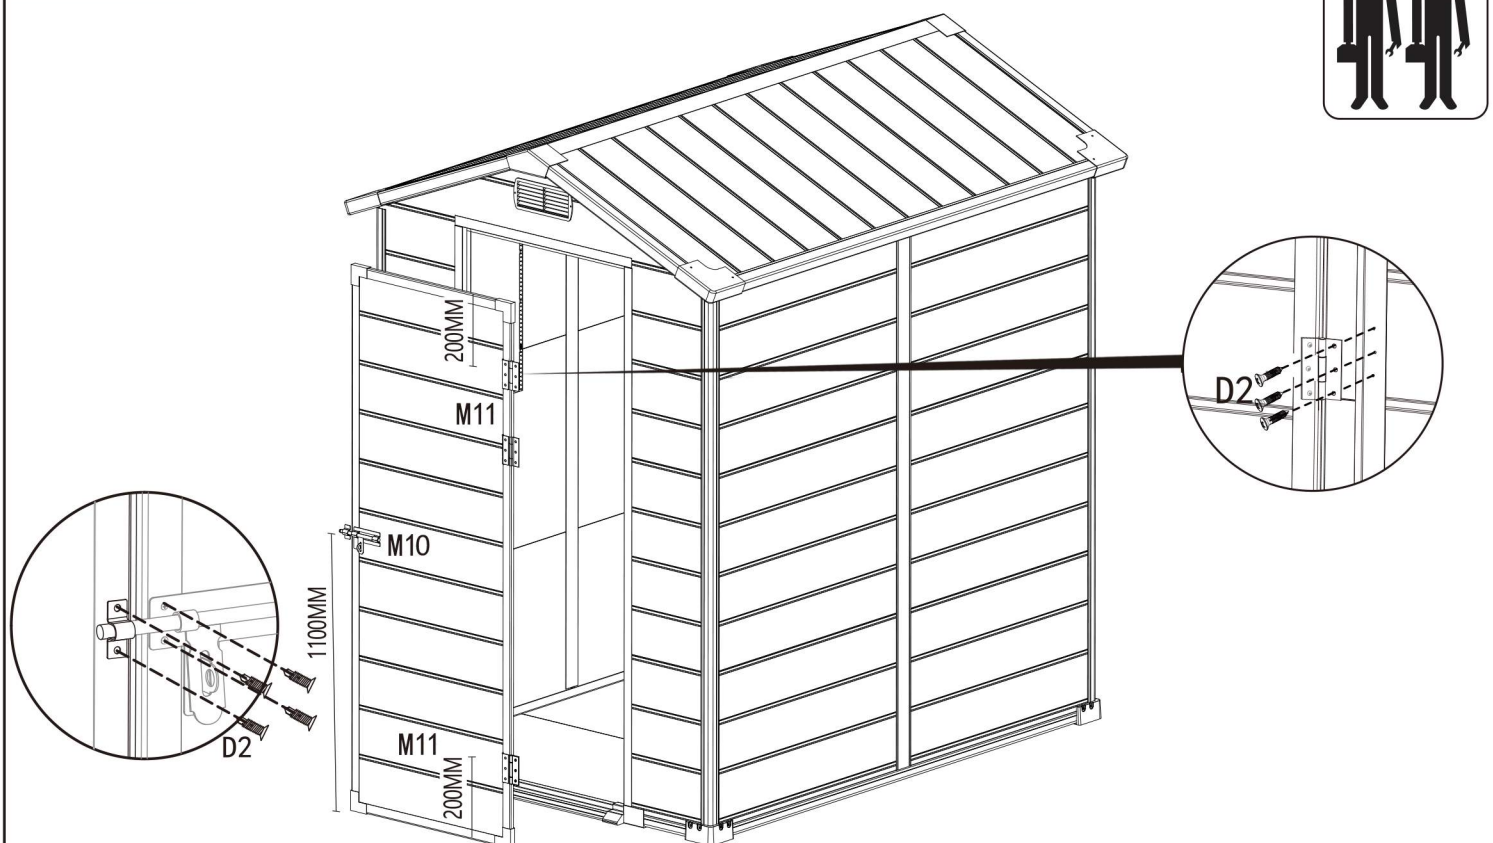


Step 24

- Remove the film before fixing C2

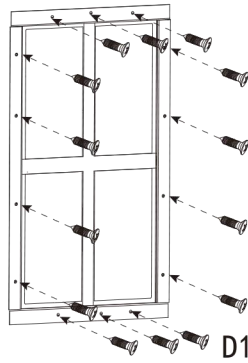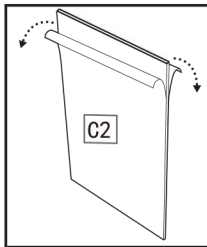

Step 25

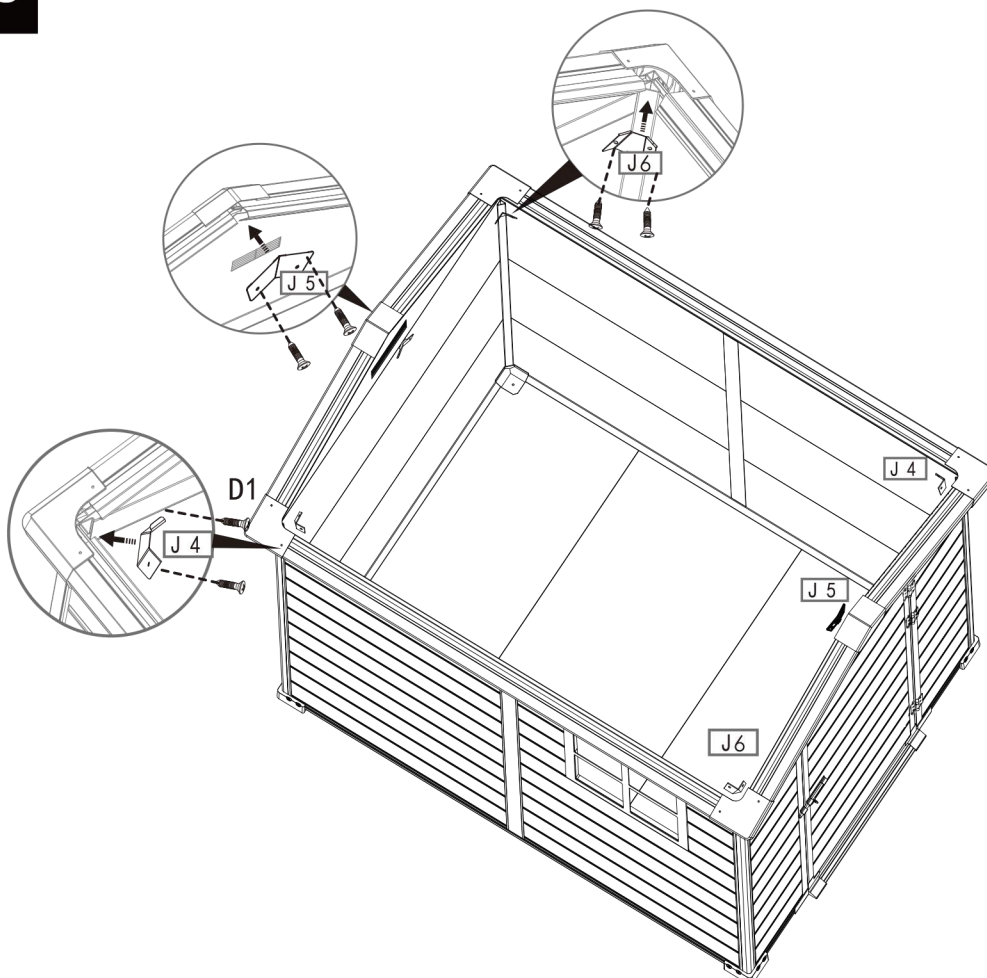



GARVEE
support@garvee.com