


# ASSEMBLY INSTRUCTIONS

## PARTS:

Bottom



Top




Shelf (top view)



Shelf (underside)



(2) Back Panel




Side A



Side B



Divider



16 Hex Screws



2 Hinge Pins




1 Allen Wrench




**NOTICE - KEEP BACK GROOVES ALIGNED**

**Step 1:** Holding **bottom** piece vertically, insert edge of **divider** into mortise in center making sure screw holes line up. Place hex screw in each of (2) holes on **bottom** piece and tighten down half way. **DO NOT DRILL.**

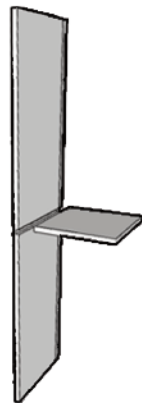


**Step 2:** Place **shelf** piece vertically, aligning grooves to face one another. Insert opposite edge of **divider** into mortise of **shelf** piece. Place hex screw in each of (2) holes on **bottom** piece and tighten down half way. **DO NOT DRILL.**

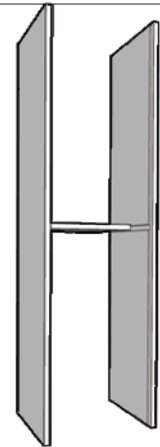


**Step 3:** With fitted pieces still standing vertically, fit the edges into the mortises of **side A**. Be careful to align grooves for back panels correctly. Place hex screw in each of (4) holes on **side A** and tighten down half way. **DO NOT DRILL.**

**Make sure 1 unit has hinge on right side and 1 unit has hinge on left side. See labels on side pieces.**

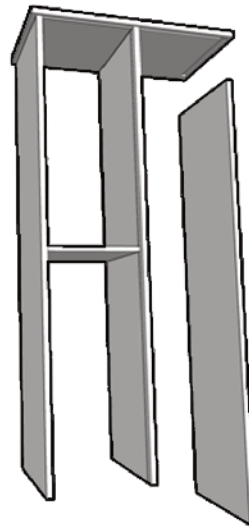


**Step 4:** Place **top** piece vertically and fit edge into remaining mortise of **Side A**, being careful to align grooves for back panels correctly. Place hex screw in each of (2) holes on **Side A** and tighten down half way. **DO NOT DRILL.**

**Step 5:** Rotate unit so it is resting on **bottom** piece. Carefully slide one **back** piece into 1/4 inch grooves on **bottom** piece and underside of **shelf** until edge fits securely into 1/4 inch groove on **Side A**.



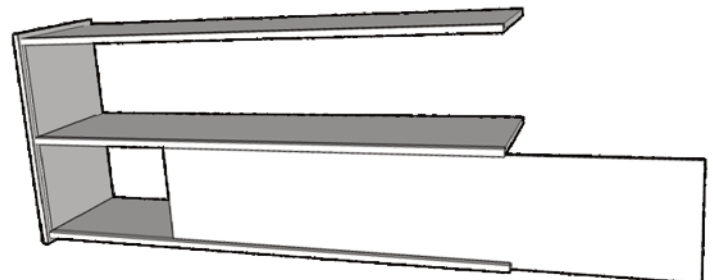


# ASSEMBLY INSTRUCTIONS

**Step 6:** Carefully slide second **back** piece into 1/4 inch grooves on top of **shelf** and **top** piece until edge fits securely into 1/4 inch groove on **Side A**.

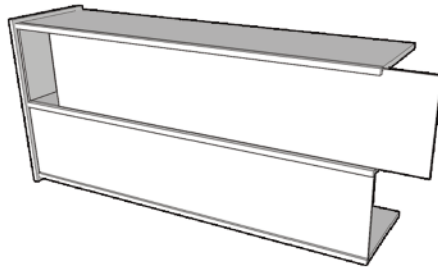

**Step 7:** Rotate unit so that it is standing vertically resting on **Side A**. Place **Side B** over edges of fitted pieces and **back** panels so that all edges fit into grooves of **Side B**. Make sure all edges are securely in grooves before screwing on. Place hex screw in each of (6) holes on **Side B** and tighten down half way. **DO NOT DRILL.**

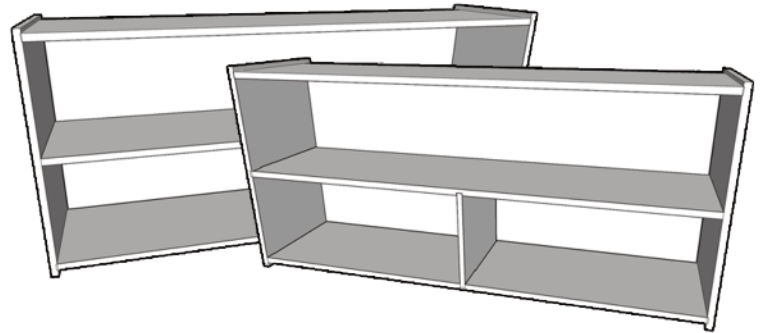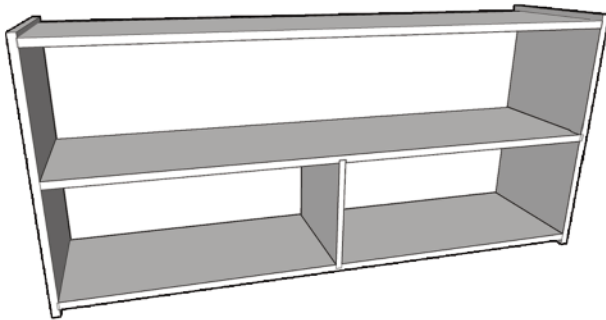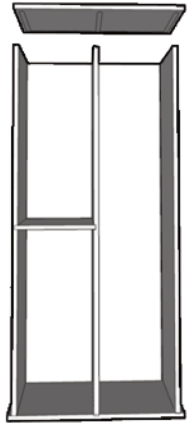

**Step 8:** Tighten all screws until they are snug. **DO NOT OVER TIGHTEN. DO NOT DRILL.** Position unit so that it is resting on bottom piece and edges of side pieces.

**Step 9:** Repeat steps 1-8 to assemble the second unit.



**Step 11:** Line up two units so that the hinges on each one meet. Place hinge pin into holes of each hinge as shown to hinge units together.

**Assembly is now complete.**

