


Bathroom Vanity

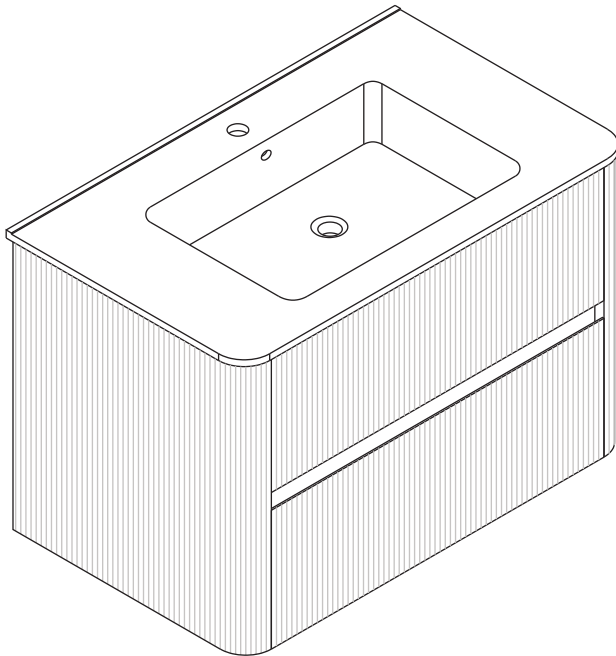


ASSEMBLY INSTRUCTIONS

Notice:


1. Follow the installation instructions. Please confirm all accessories are preset before installation.
2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.
3. If you encounter any problems during installation, please contact our customer service.
4. Please unbox the item from the side with an open-label and put a carpet on the floor to avoid scratching it.






Recommended installers : 2

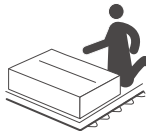


Put a carpet on the floor
before unpacking

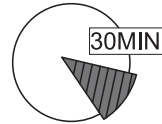




Estimate installation time:
30 minutes

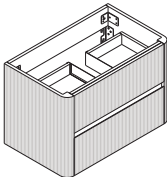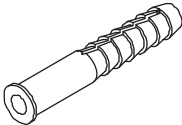Item no.	Reference Image	Qty
A		x1
B		x1
1		x4
2		x4

Item no.	Reference Image	Qty
3		x4
4		x6

ASSEMBLY INSTRUCTIONS

1

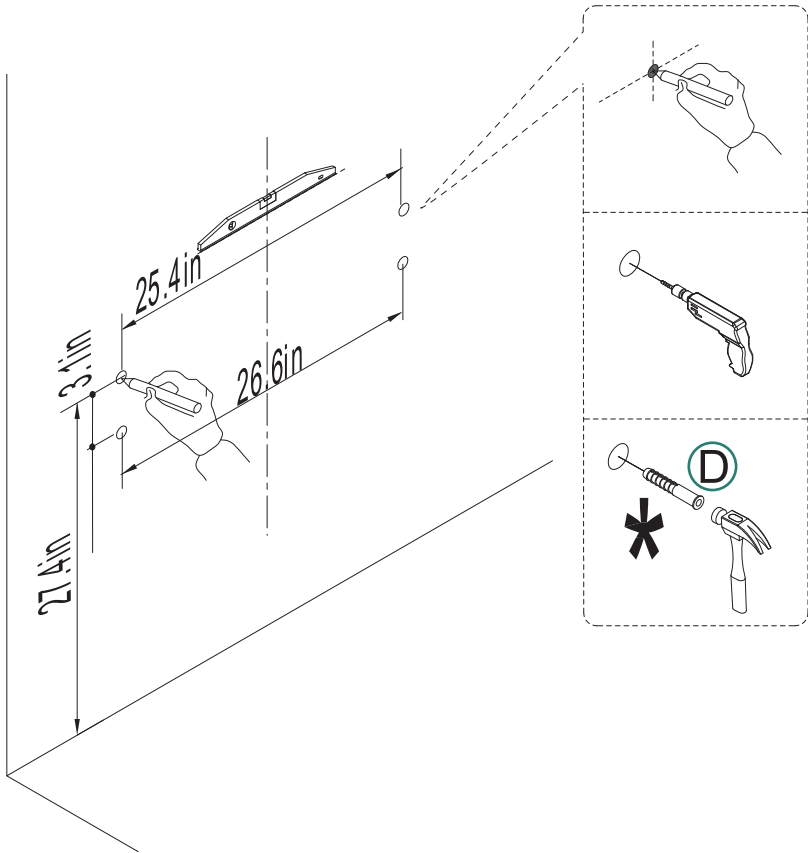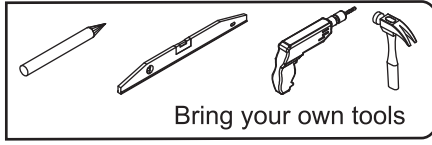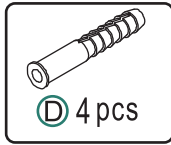

ASSEMBLY INSTRUCTIONS


2




Ⓑ 1pc



② 4pcs



③ 4pcs



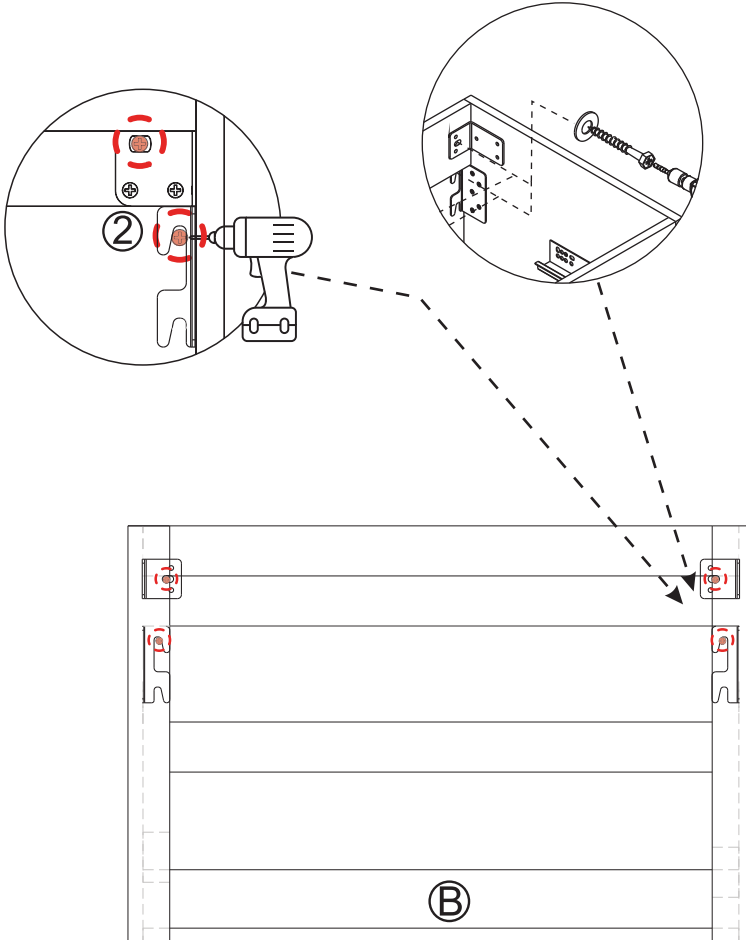


ASSEMBLY INSTRUCTIONS

3



Ⓐ 1pc

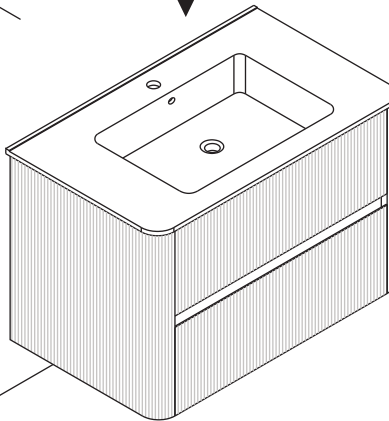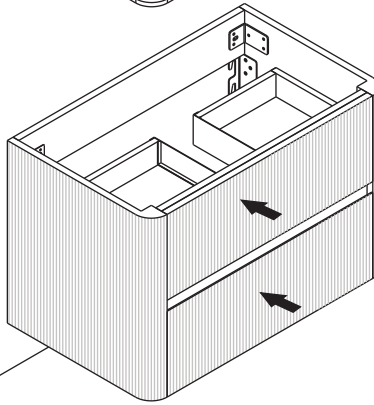
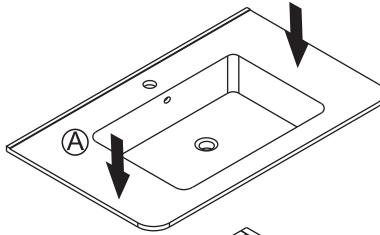


Installation completed


ASSEMBLY INSTRUCTIONS

4

Installation of drain assembly

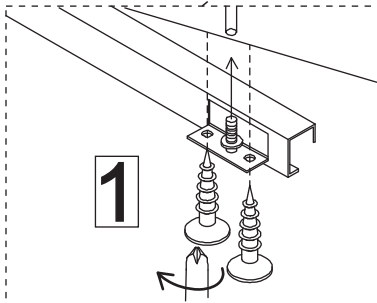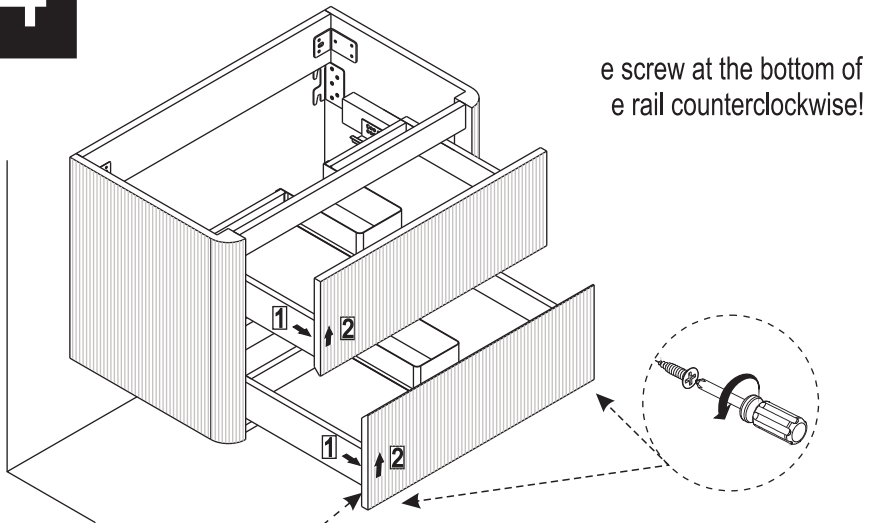

Move out the drawer

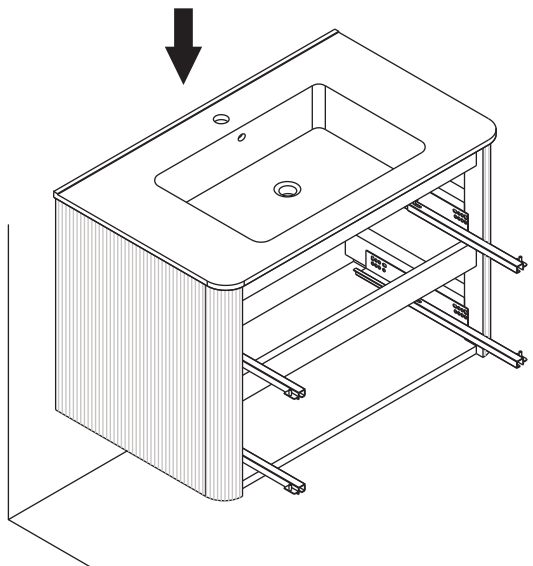


ASSEMBLY INSTRUCTIONS

5








④ 6pcs

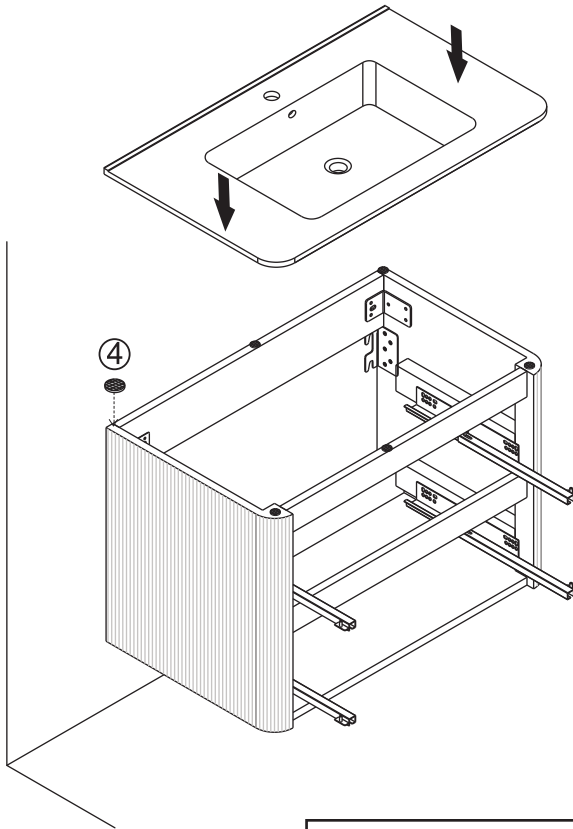

Installation of drain assembly

ASSEMBLY INSTRUCTIONS

6

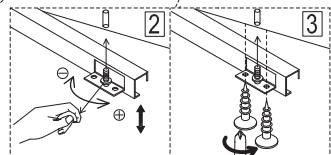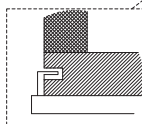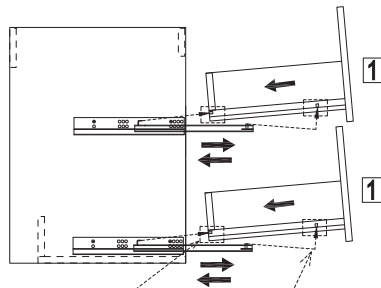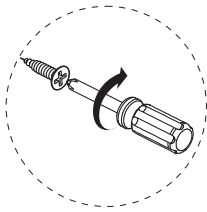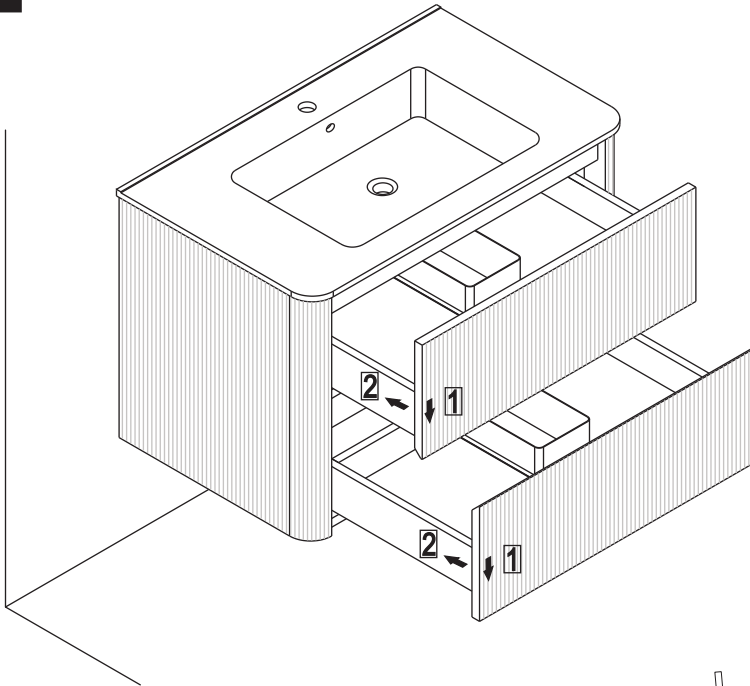

Installation completed