

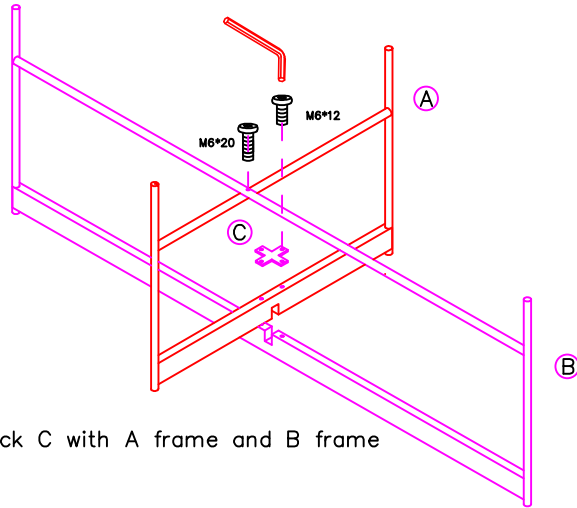


ASSEMBLY INSTRUCTION

1, put A inside the B, stack the frame together

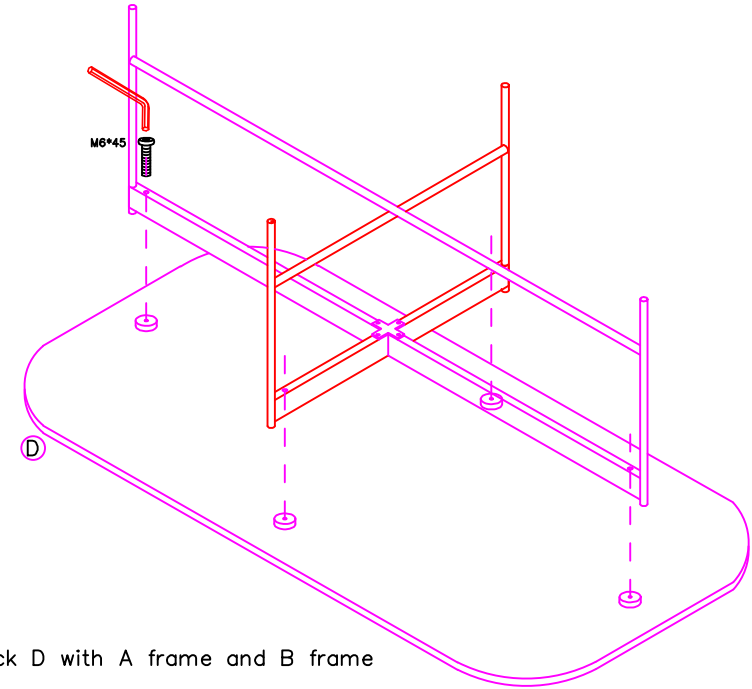

2, Lock C with A frame and B frame

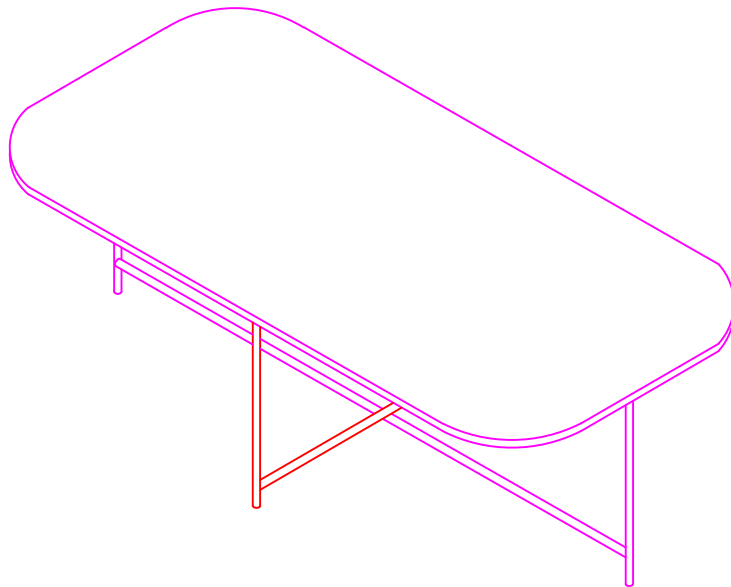

3, Lock D with A frame and B frame

HARDWARE PACKAGE

①	BOLT M6*12mm		4 PCS
②	BOLT M6*45mm		4PCS
③	BOLT M6*20mm		1 PCS
④	ALLEN KEY		1 PCS

