
Shower Door
1/4" glass (6mm)

S9902-LG INSTALLATION GUIDE

Installation Dimensions:

55" - 60" W x 78" H
61" - 66" W x 78" H

CAUTION:
To reduce the risk of breakage, keep corner protectors on glass while installing. Keep corner protectors for use in case future adjustments are needed.
Read the instructions carefully before installation.

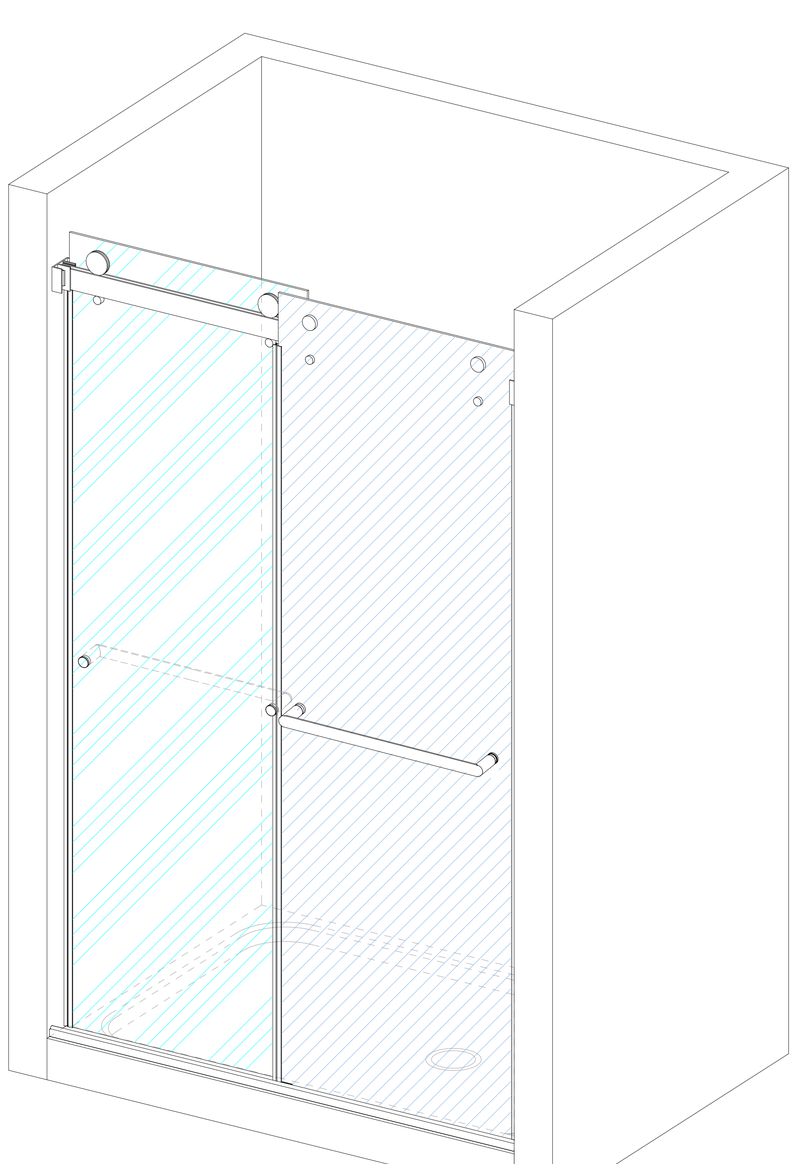


Installation Video

Please spend two minutes watching the installation video to save half an hour of installation time

SZ-DJ-S9902-LG



Scan the QR code

Detailed Diagram







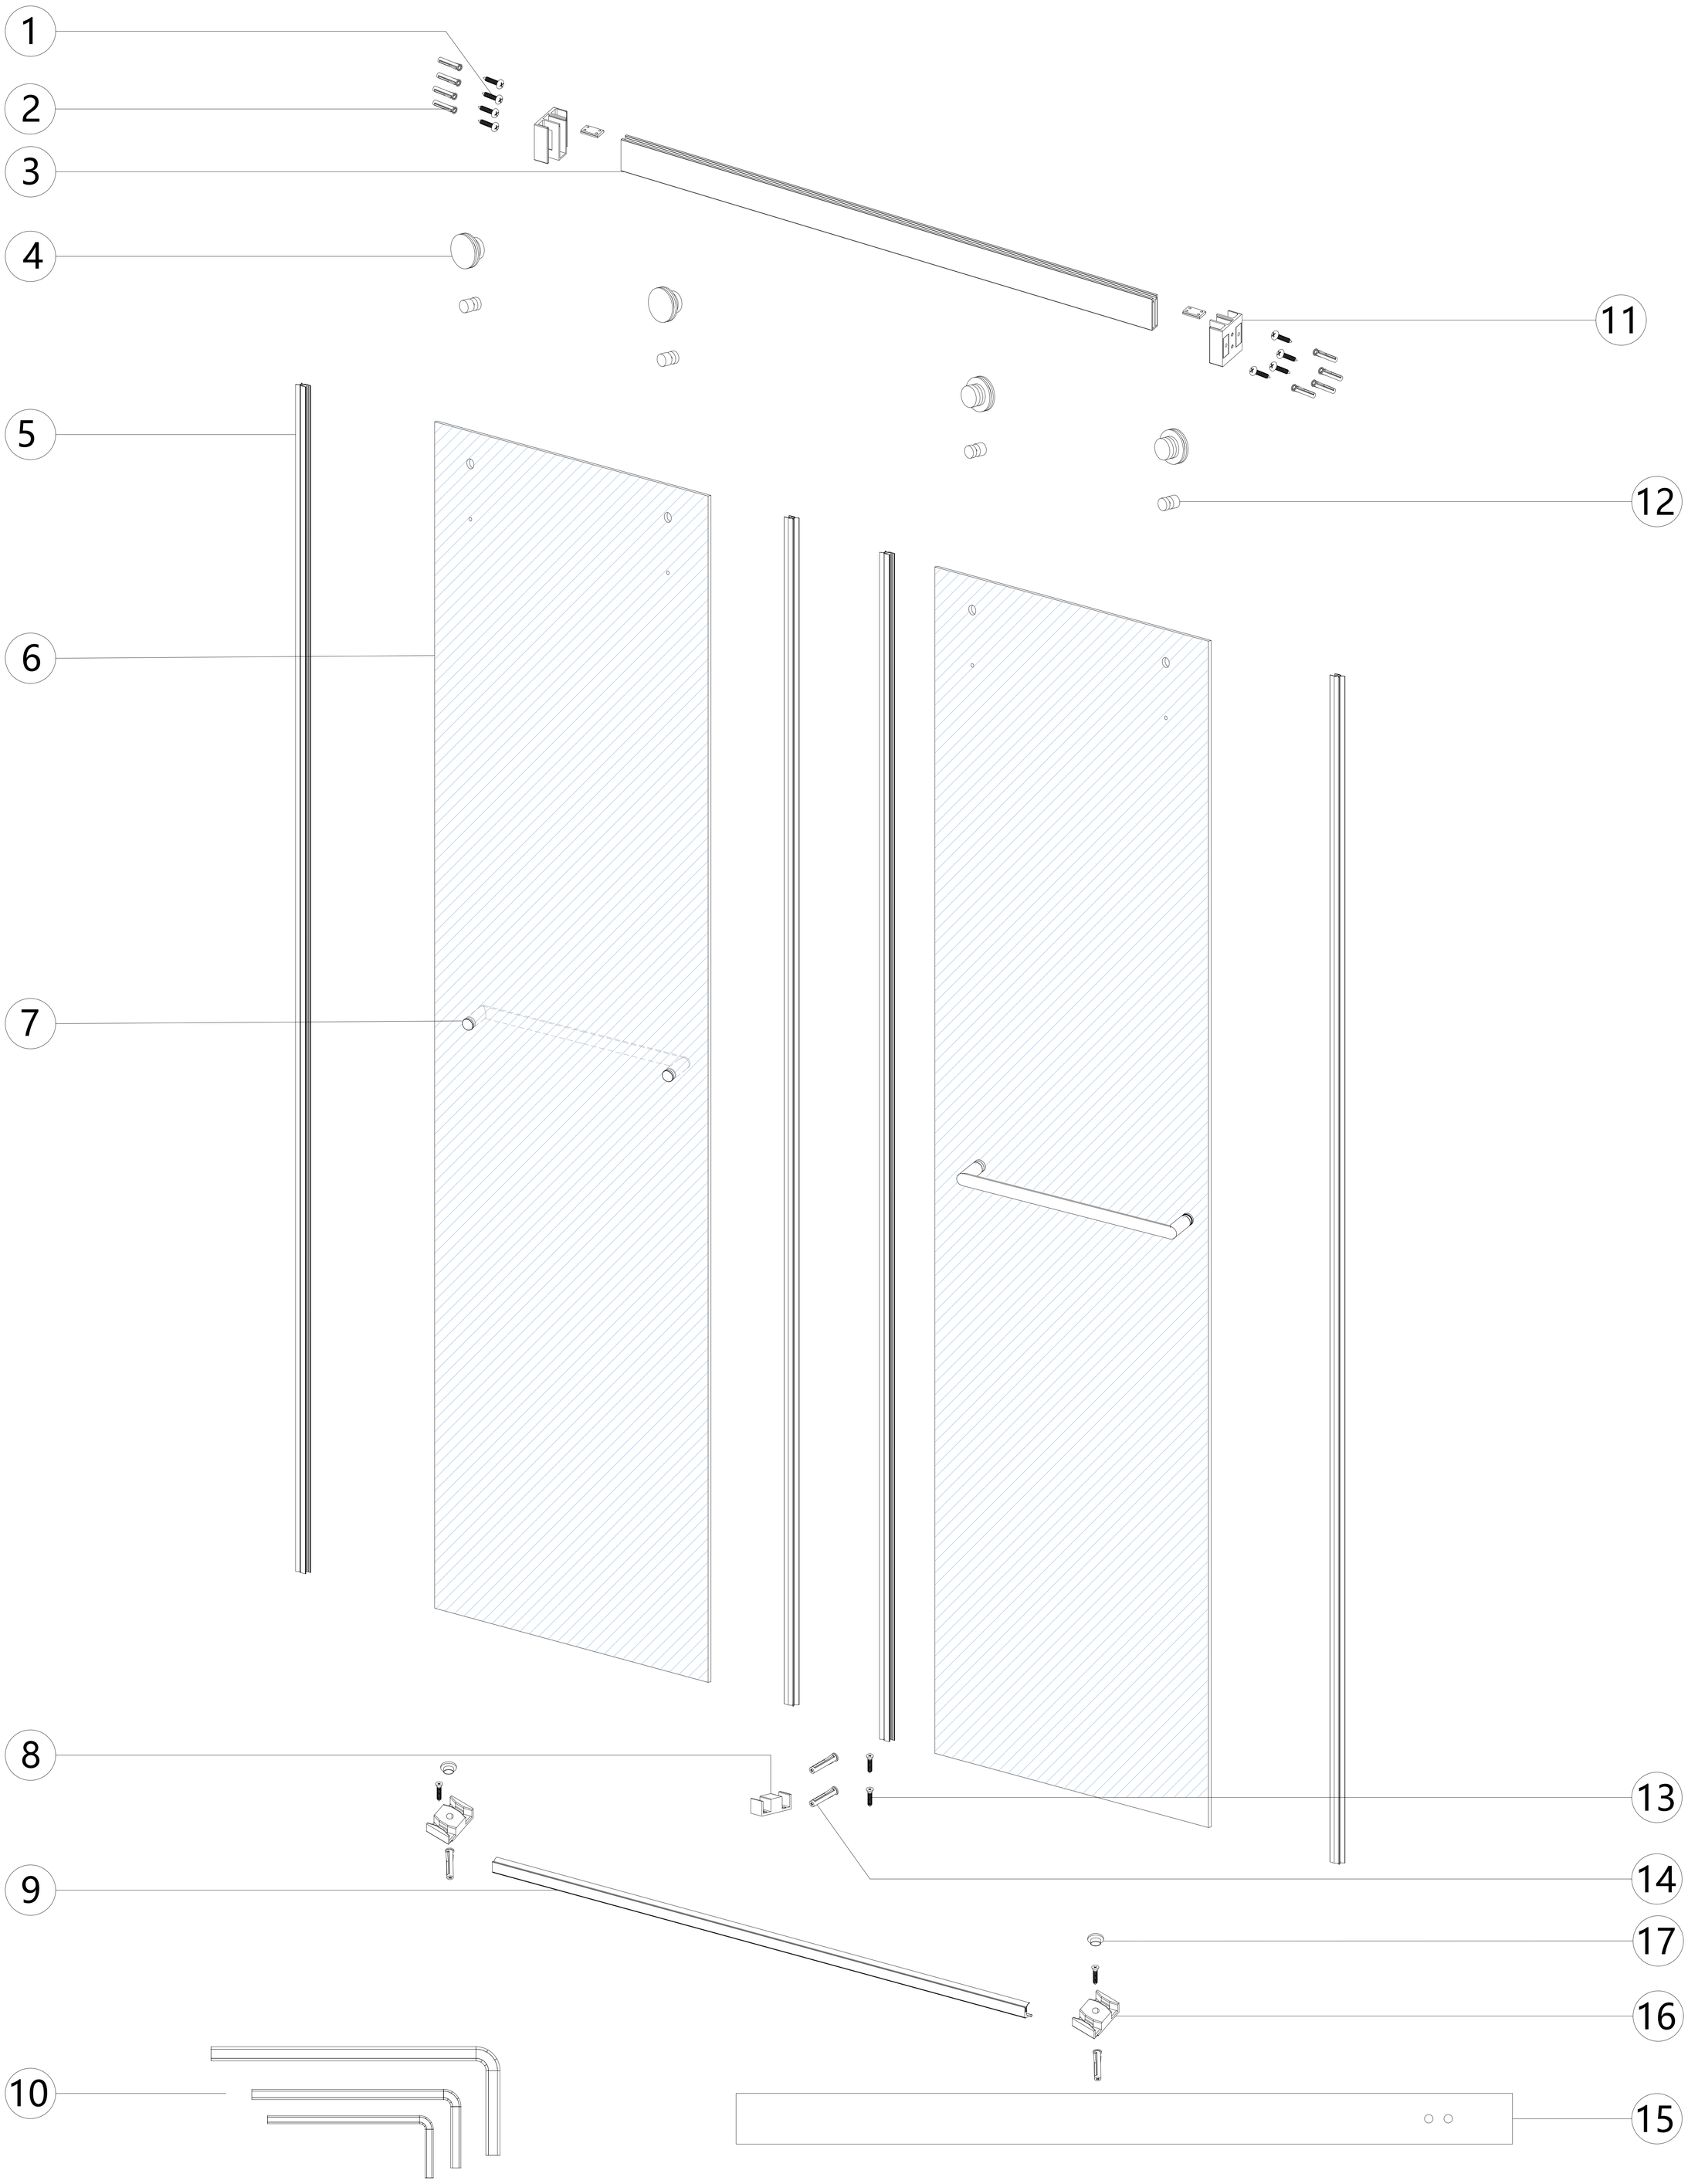


PART LIST

Check all parts according to the list before assembly

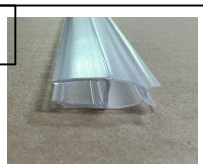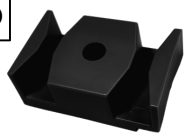1 	2 	3 	4 	5 
ST5.0X40 screw (8pcs)	8mm Rubber particles (8pcs)	top rail (1 pc)	roller (4 pcs)	waterproof strip (4pcs)
6	7 	8 	9 	10 
Active Panel (2 pcs)	Handle (2pcs)	guidance block (1pc)	Threshold (1pc)	Hex key (3pcs)
11 	12 	13 	14 	15 
Pull rod wall connector (2 pcs)	Anti-jumper (4pcs)	M4.0X35 Screw(7pcs)	6mm Rubber particles (7pcs)	Template (1pc)
16 	17 			
Slider block (2 pcs)	ϕ10 decorative cover (2 pcs)			

Recommended Tools

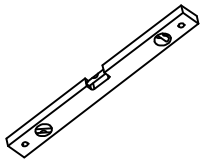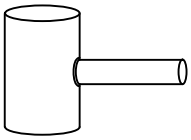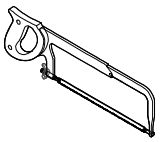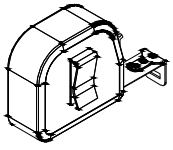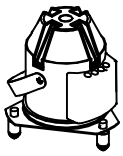				
Silicone	Safety Glass	Pencil	Drill	Level
				
Rubber Hammer	Hacksaw	Screw Driver	Safety Gloves	1/4"Drill Bit
				
Tape Measure	laser level	5/16"Drill Bit		

* Utilize Safety Glasses and Safety Gloves when constructing this shower door
* We recommend that 2 people work together to complete this installation


Measure the finished opening width


STEP 1


1.Measure the opening for the correct Shower Door diatance " W1".


2.For 60" Shower Door, the opening should be 55-60" between the lines.

3.For 66" Shower Door, the opening should be 61-66" between the lines.

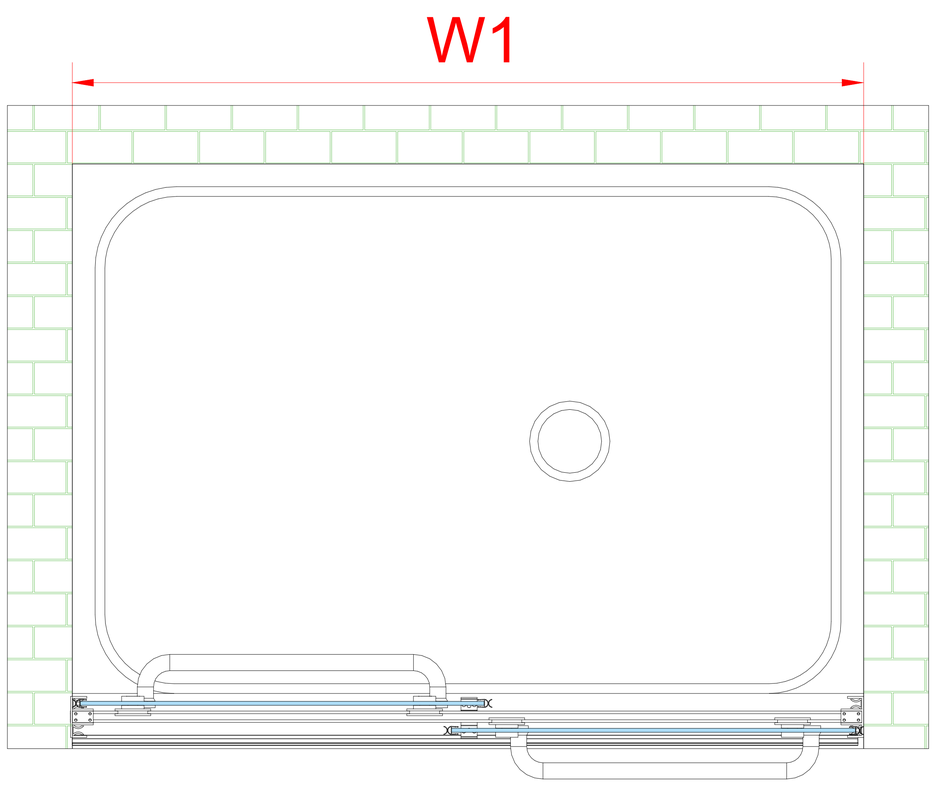

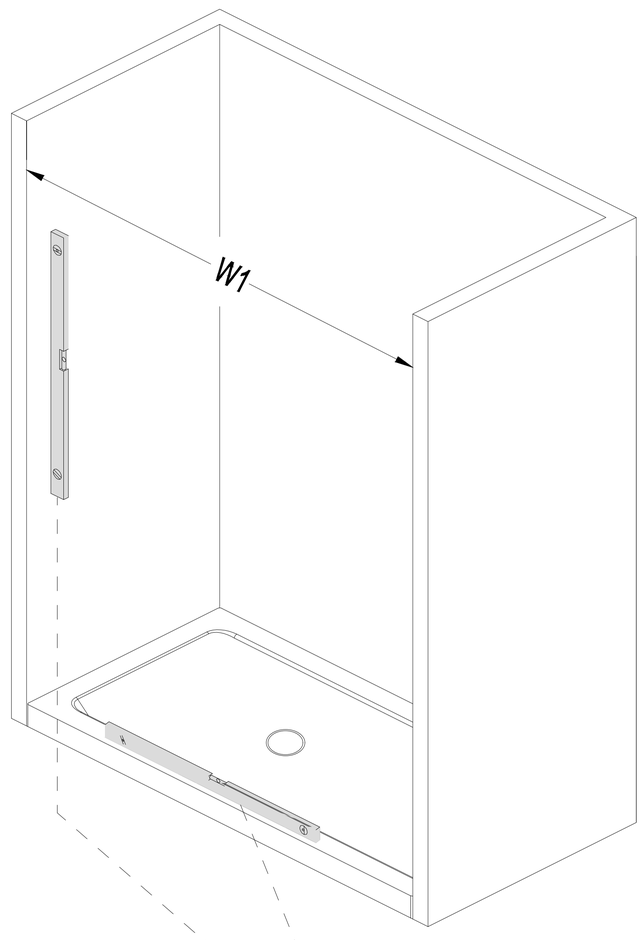

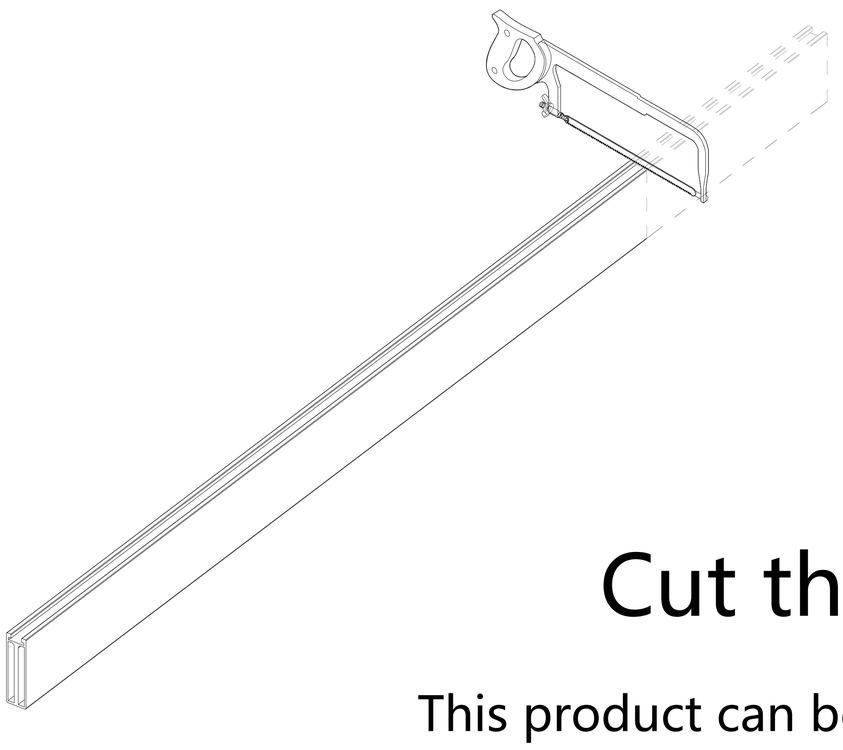

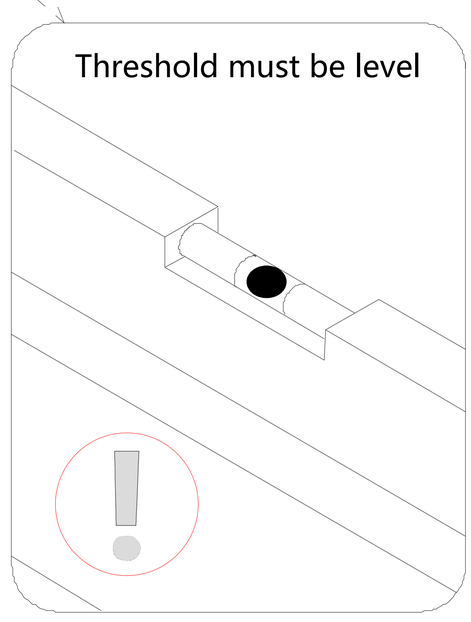

Cut the Top Rail ③

This product can be installed with a size reduction of 5”. If "W1" size is smaller than the standard specification, the Top Rail needs to be cut.
Top Rail Length=W1 -1"


Drilling with template (15)

STEP 2

1.Lean the template on the wall.

2.Make sure to level the template.


3.Use pencil to mark the hole on the template.

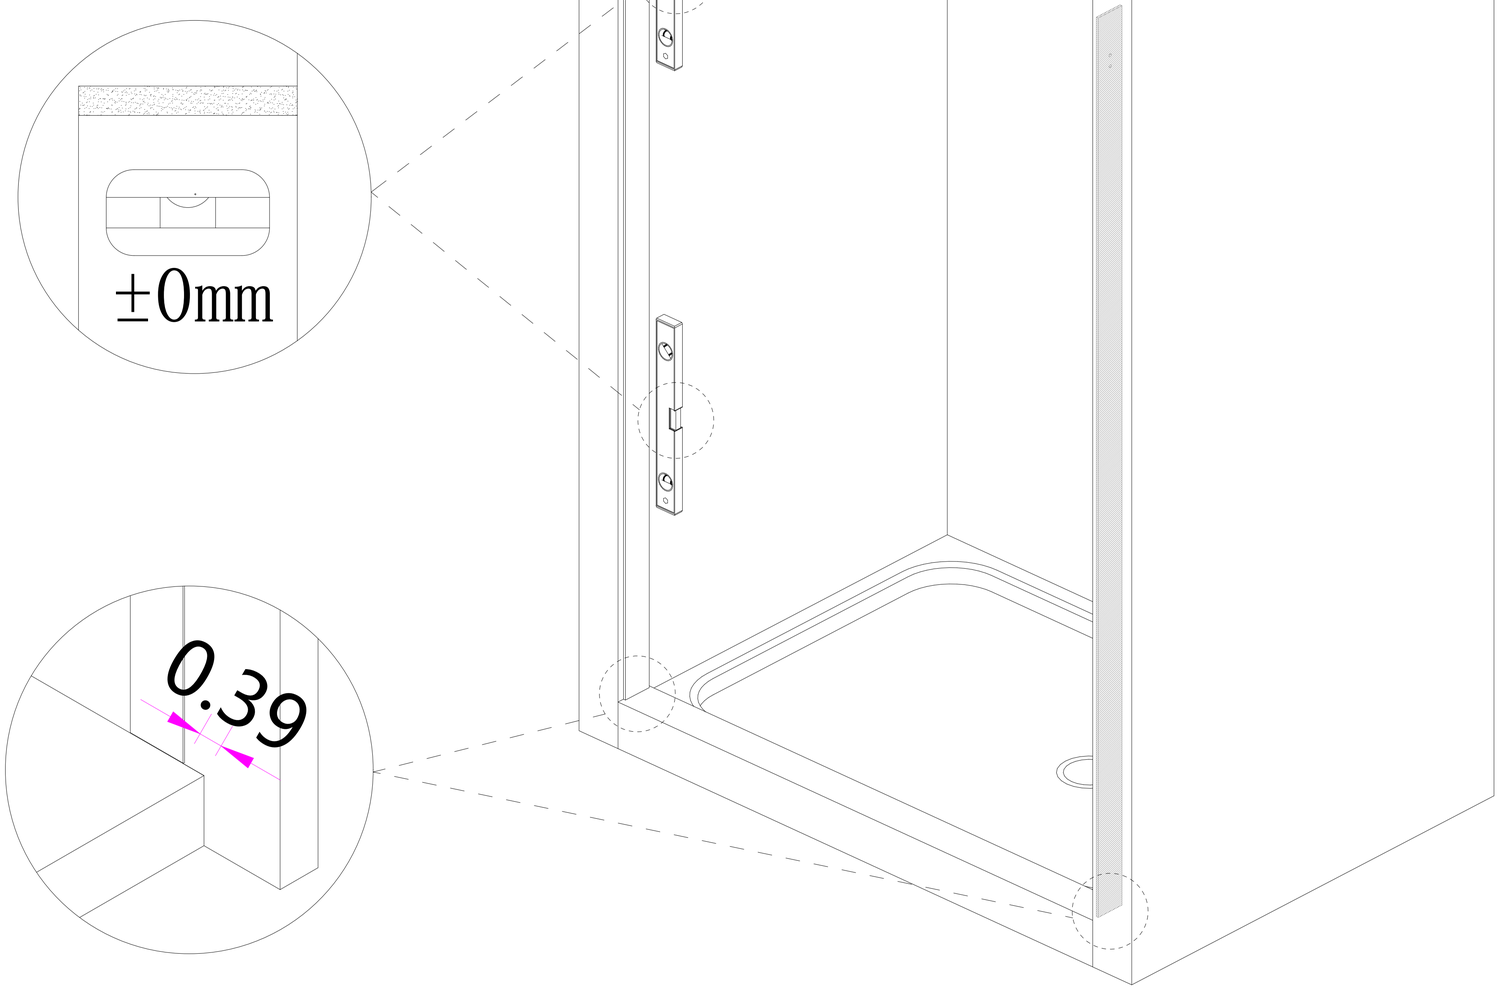


Place the template 0.39 inch away from the edge of the floor or stone foundation.



1.Lean the template on the wall.

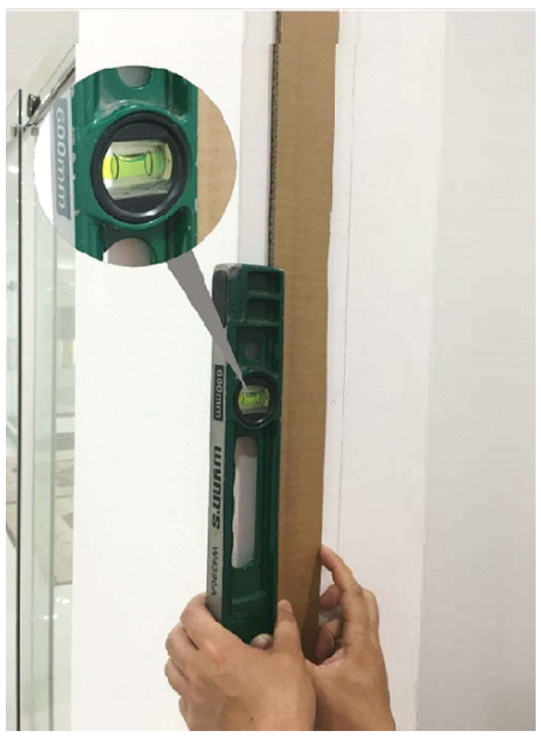

2.Make sure to level the template.

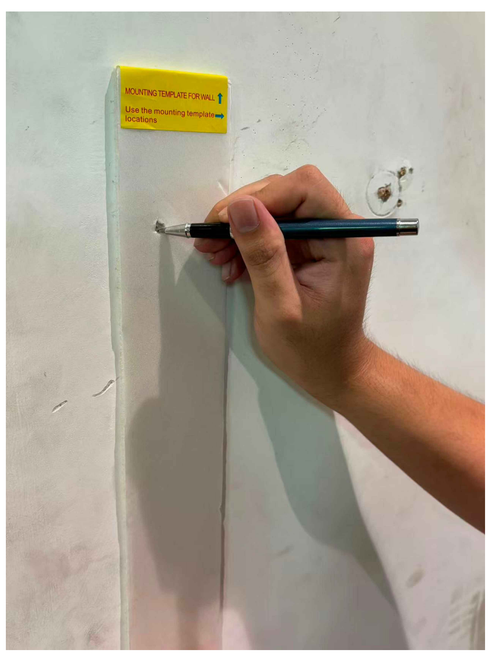

3.Use pencil to mark the hole



4.Make two holes at the marked position.

Guide block (8) installation and punching

STEP 3


1. Align the laser path to the center of the hole in the wall, and place the guide block (8) as shown in fig. a.


2.Mark the places to be punched with a pencil.


3.Drilled hole and inject rubber particles inside.


4.Fixed guide block (8).


Note: If laser level is not available, please ensure that the center of the screw hole position of the guide block (8) to the size of the outer edge the bathroom is 0.9 inches.

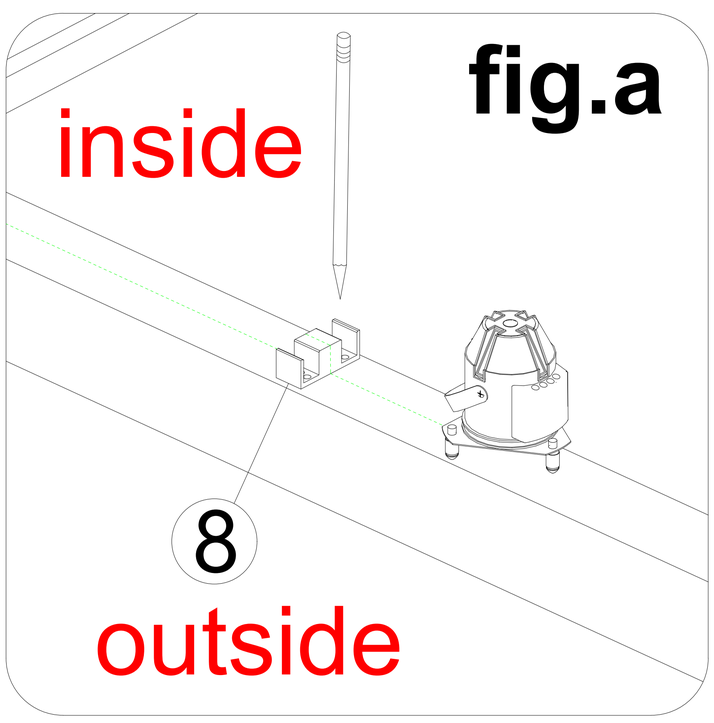


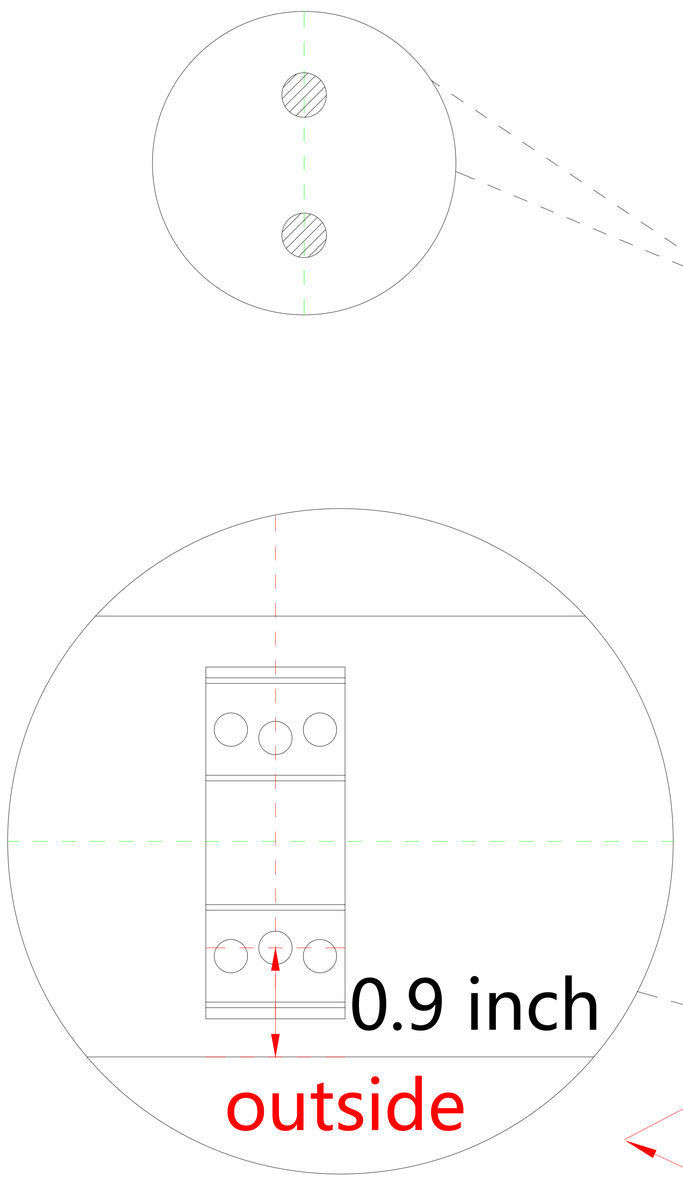

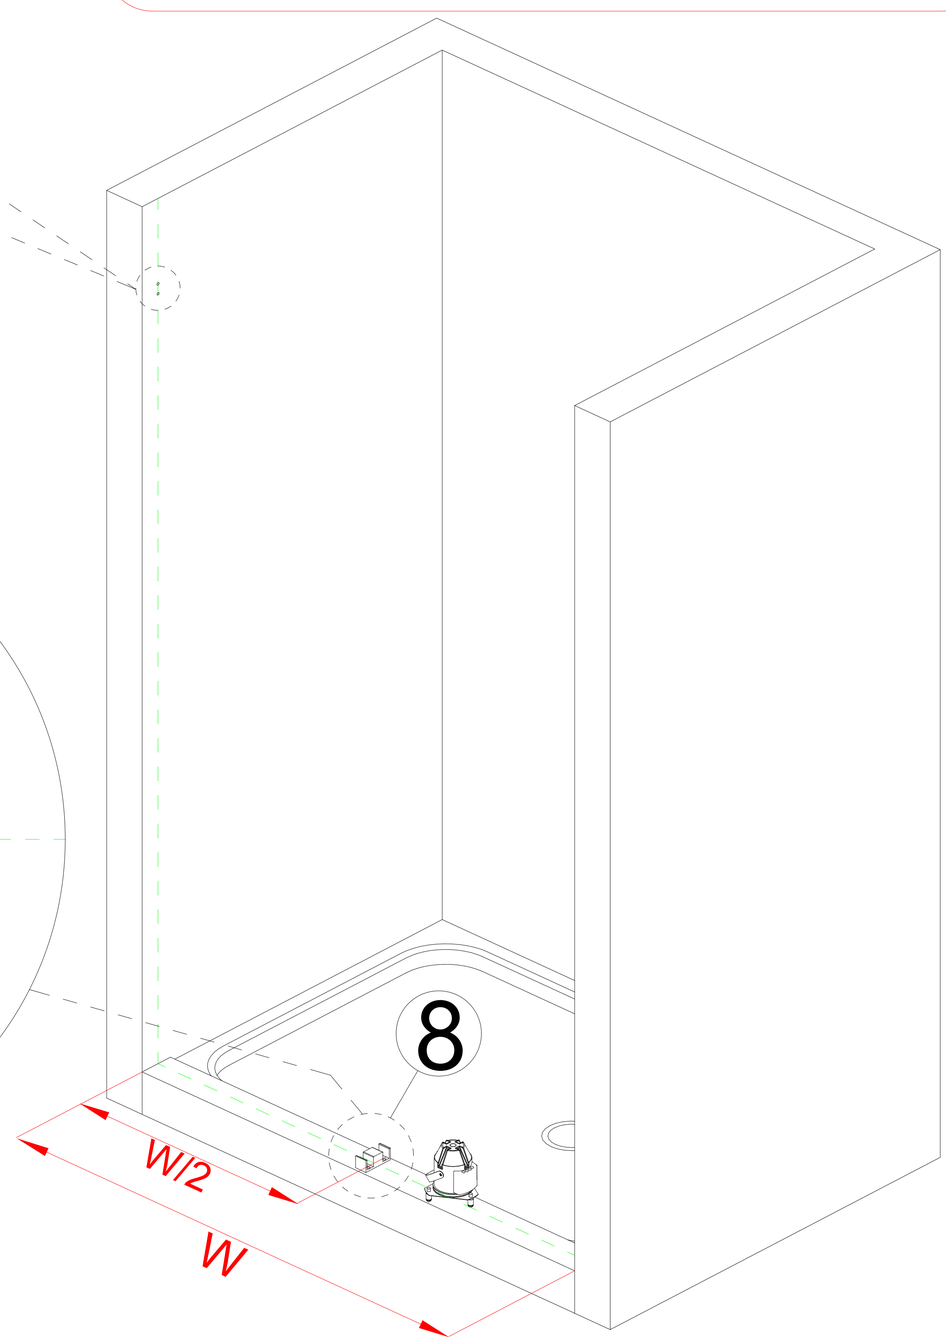

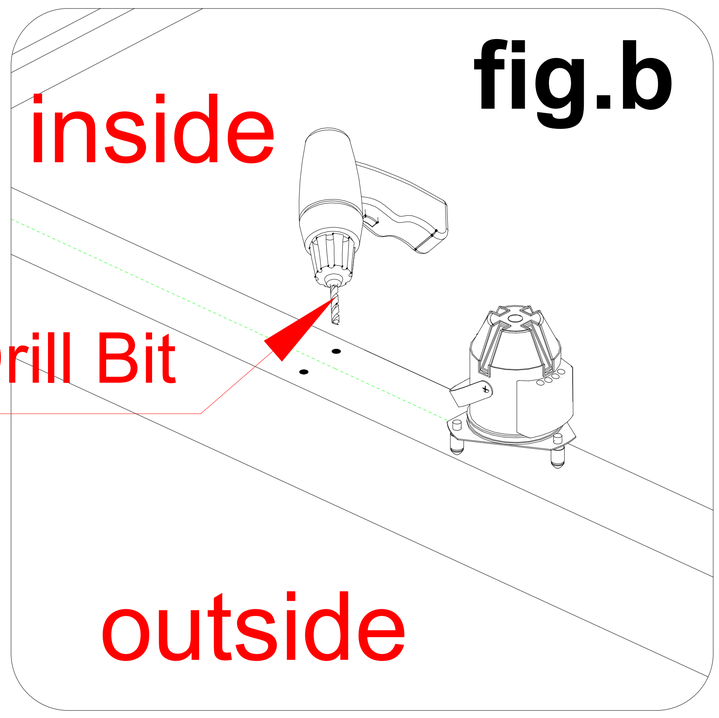

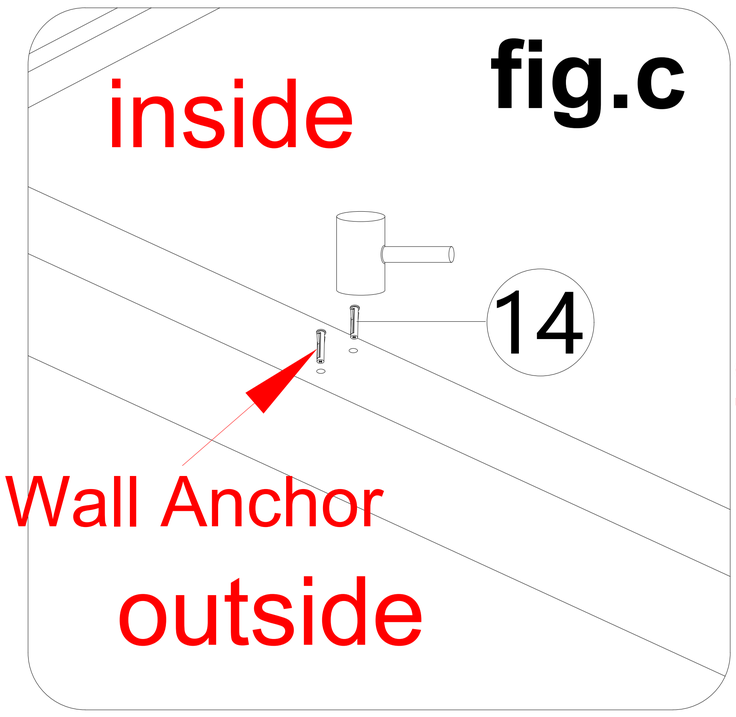

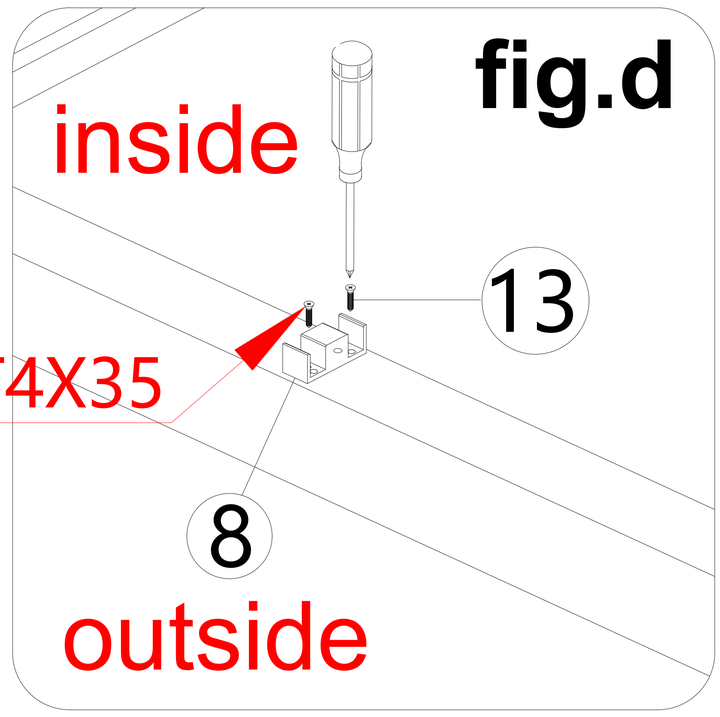



Note： When using the laser level, ensure the laser path is on the centre point of the guide block (8) and the wall hole position.


Guide block (8) is installed without hole


STEP 3.1


1. Align the laser path to the center of the hole in the wall, and place the guide block (8) as shown in fig. a.
2.Mark the places to be punched with a pencil.
3.Apply glass gule to the bottom of the guide block (8).
4.Fixed guide block (8).

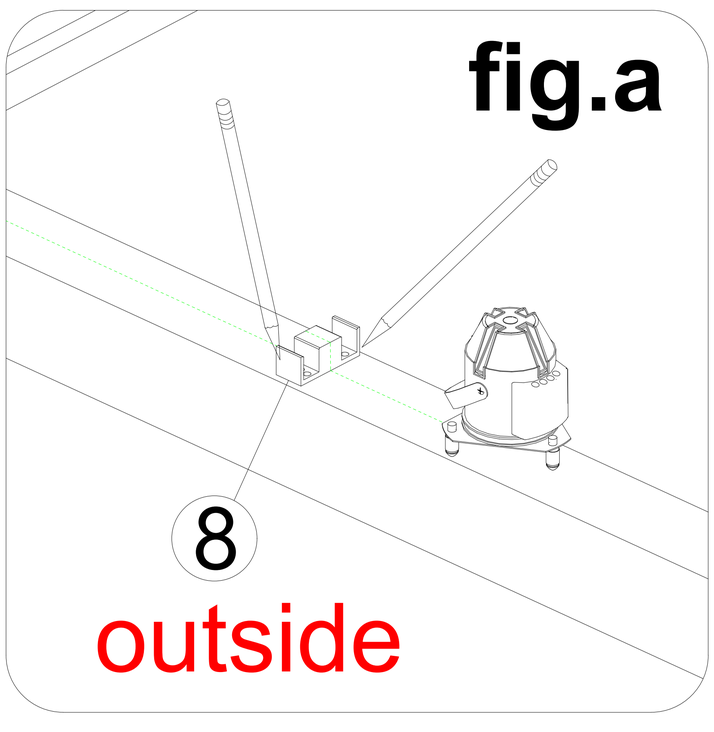

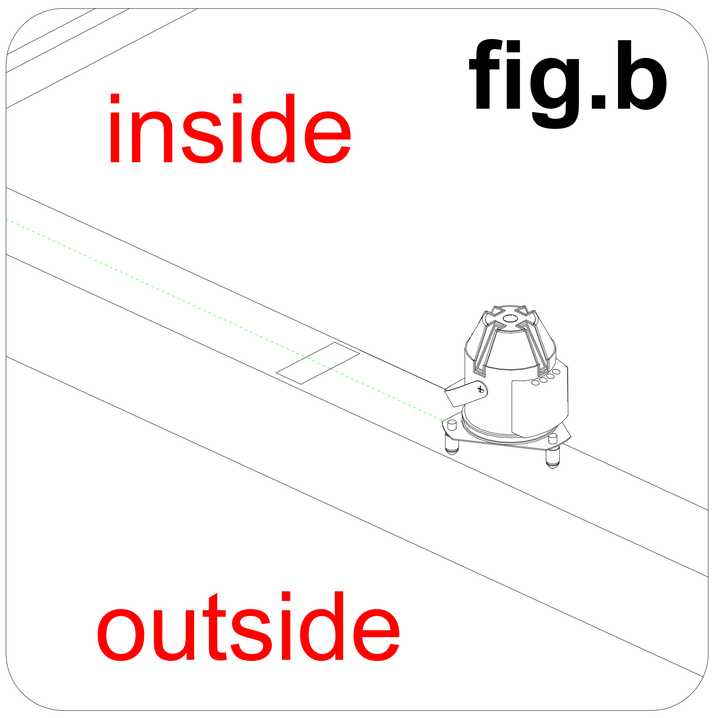

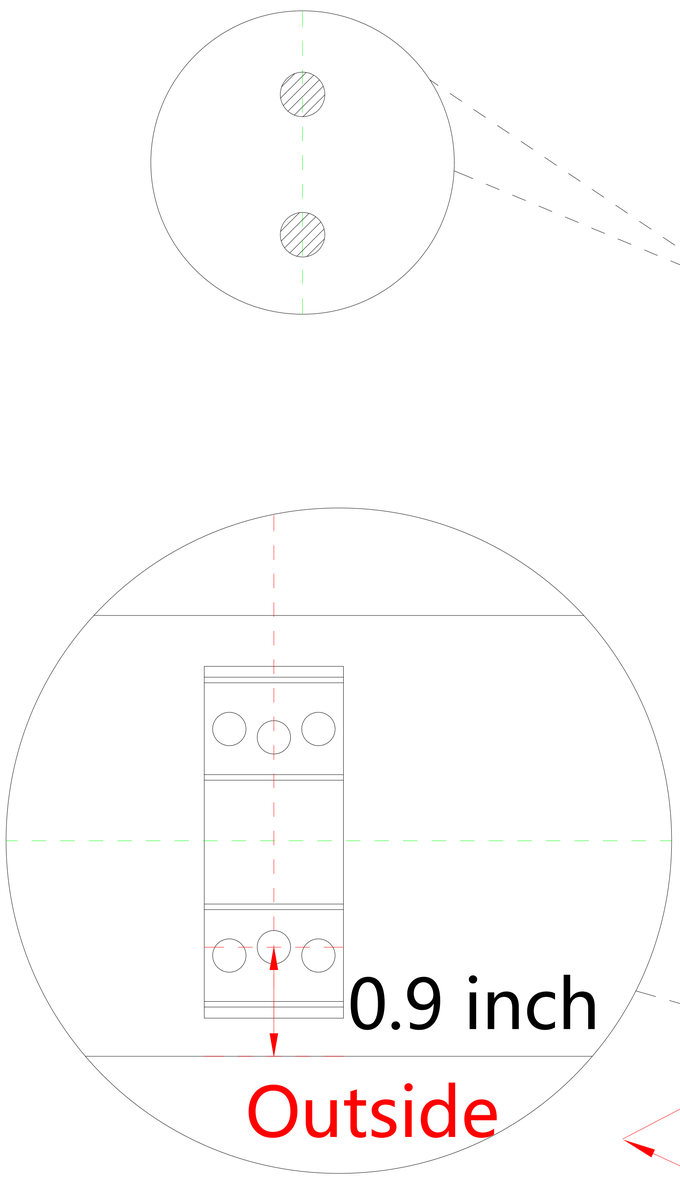

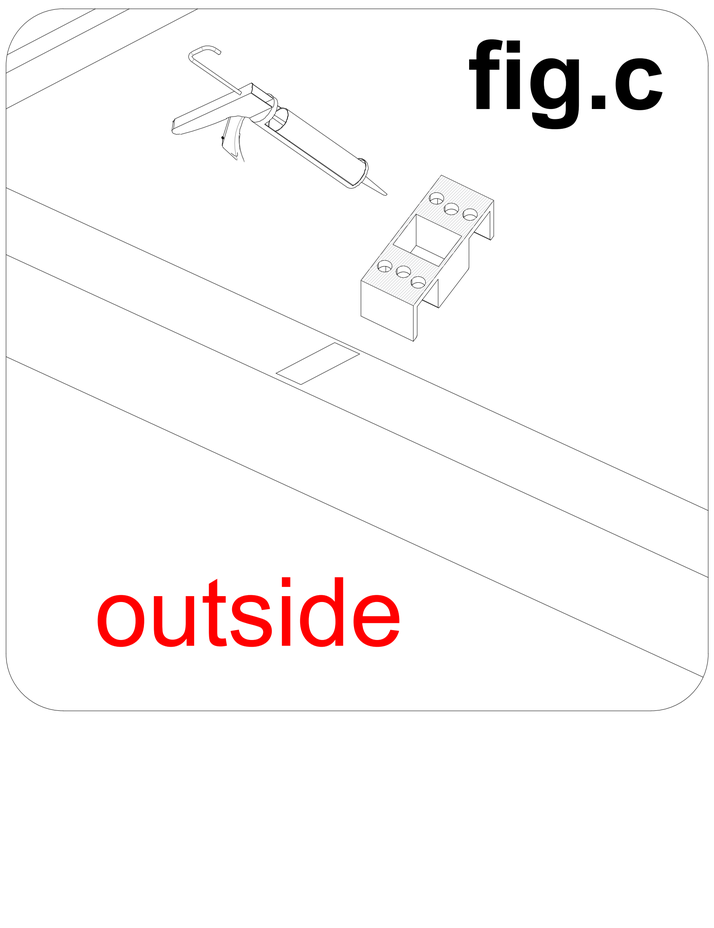

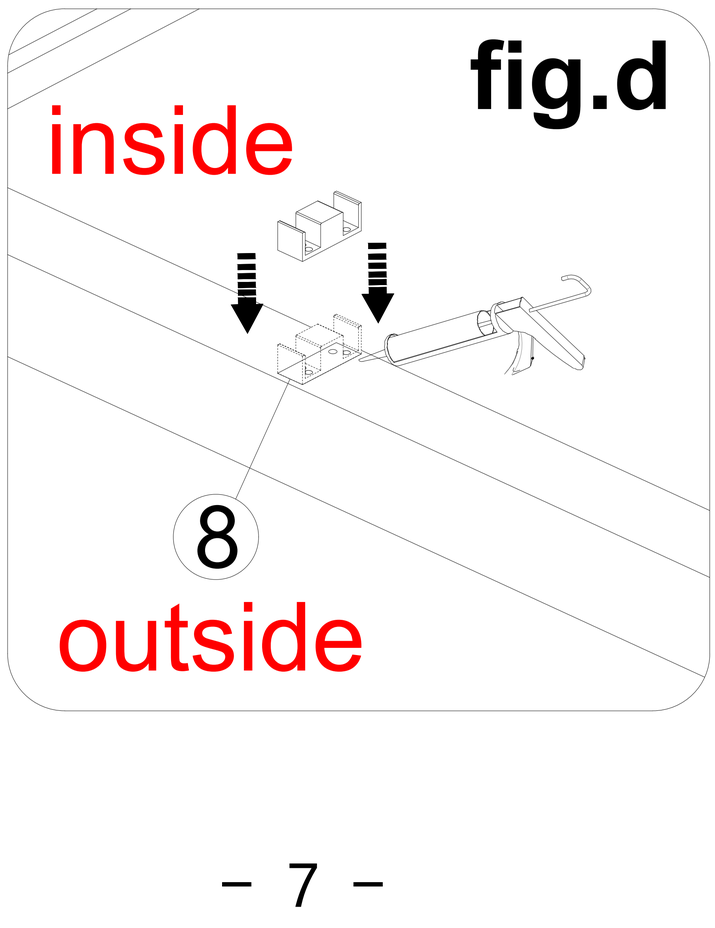


Note: If laser level is not available, please ensure that the center of the screw hole position of the guide block (8) to the size of the outer edge the bathroom is 0.9 inches.

Note： When using the laser level, ensure the laser path is on the center point of the guide block (8) and the wall hole position.

Pull rod wall connector (11) Installation prerequisites

STEP 4

1.Firstly, move one of the active panel (6) into the shower area, so that when the other ative panel (6) is installed later, does not occupy the entrance position, and also does not cause unnecessary damage when moving the active panel (6).

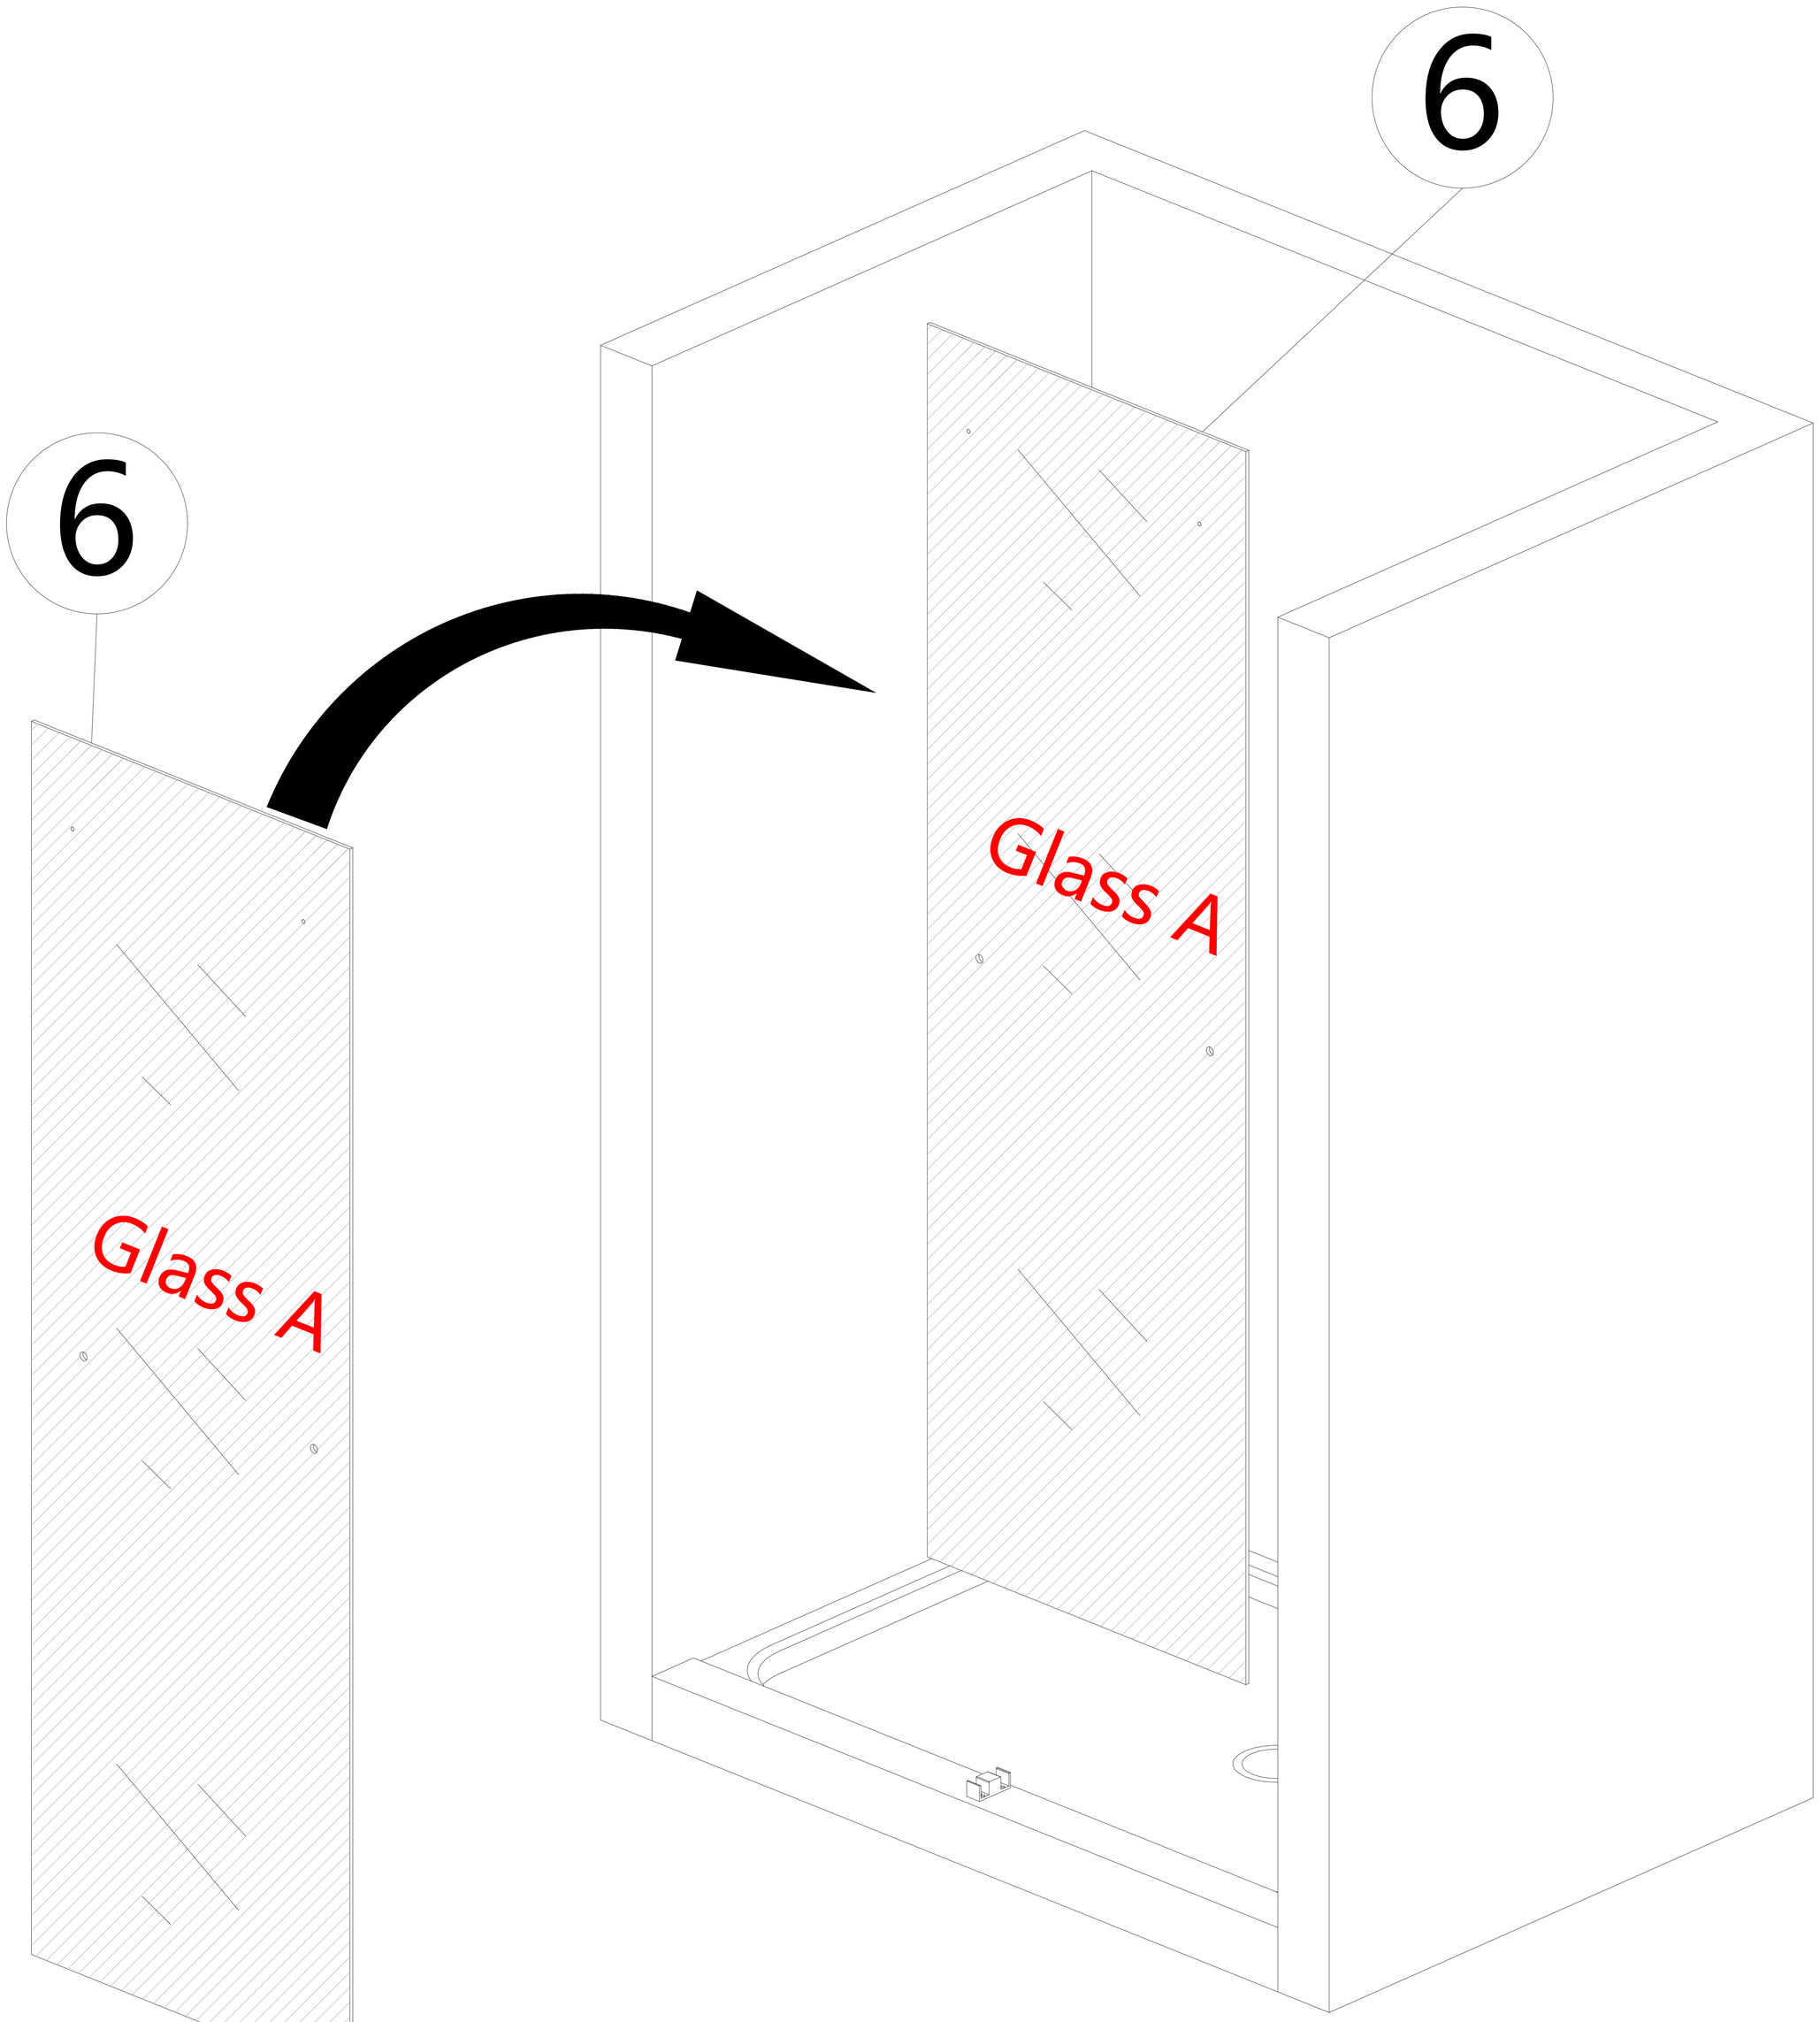

roller (4) Installation

STEP 5


When installing the roller (4), pay attention to the position of the roller (4).

In front, glass A has been moved into the shower area so the position of the roller (4) of glass A is towards the outside of the shower area;


While glass B is placed outside the shower area, so the position of the rolller (4) of glass B is towards the inside of the shower area.





Note:The glass side with the Nano explosion-proof film sticker needs to face inside the shower door!

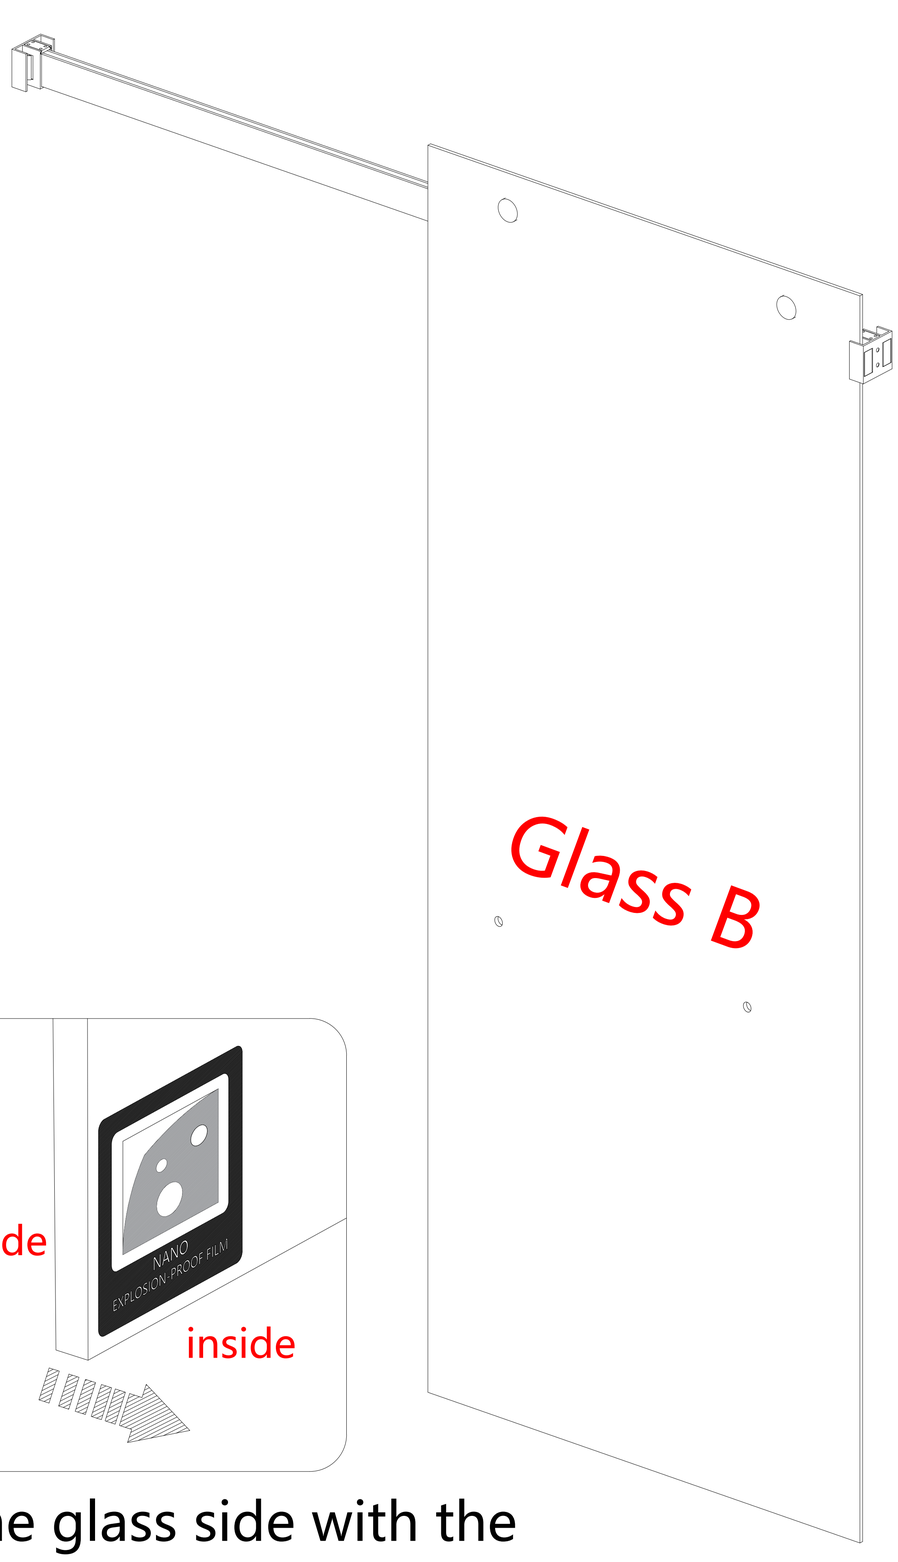


Note:The glass side with the Nano explosion-proof film sticker needs to face inside the shower door!

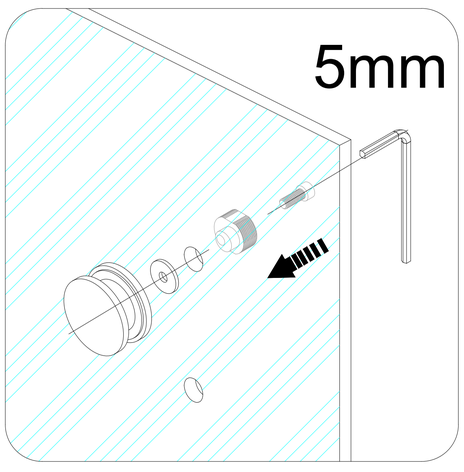

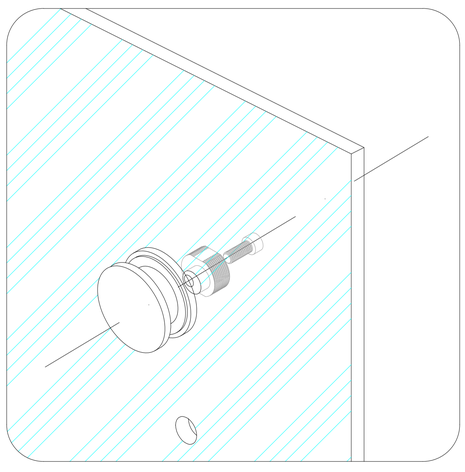

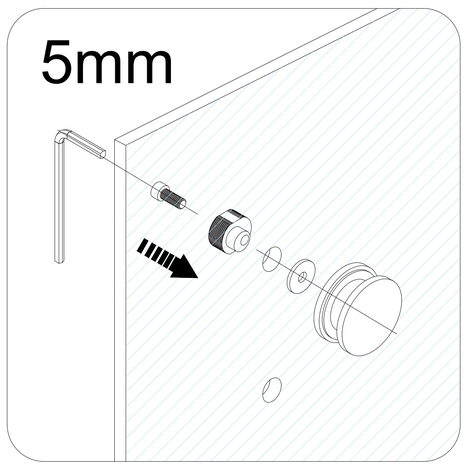

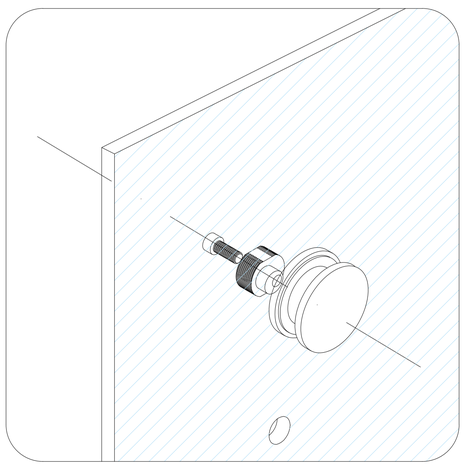

pull rod wall connector (11) and top rail (3) installation

STEP 6


1.Drilled two holes on the wall.


2. Hammer the rubber particles into the punched holes.


3.Fixed pull rod wall connector (11) on the wall.


4.Clip the top rail (3) into the pull rod wall connector (11) and tighten it with Allen key.


Note： The two holes here are the ones drilled in the template on page 5

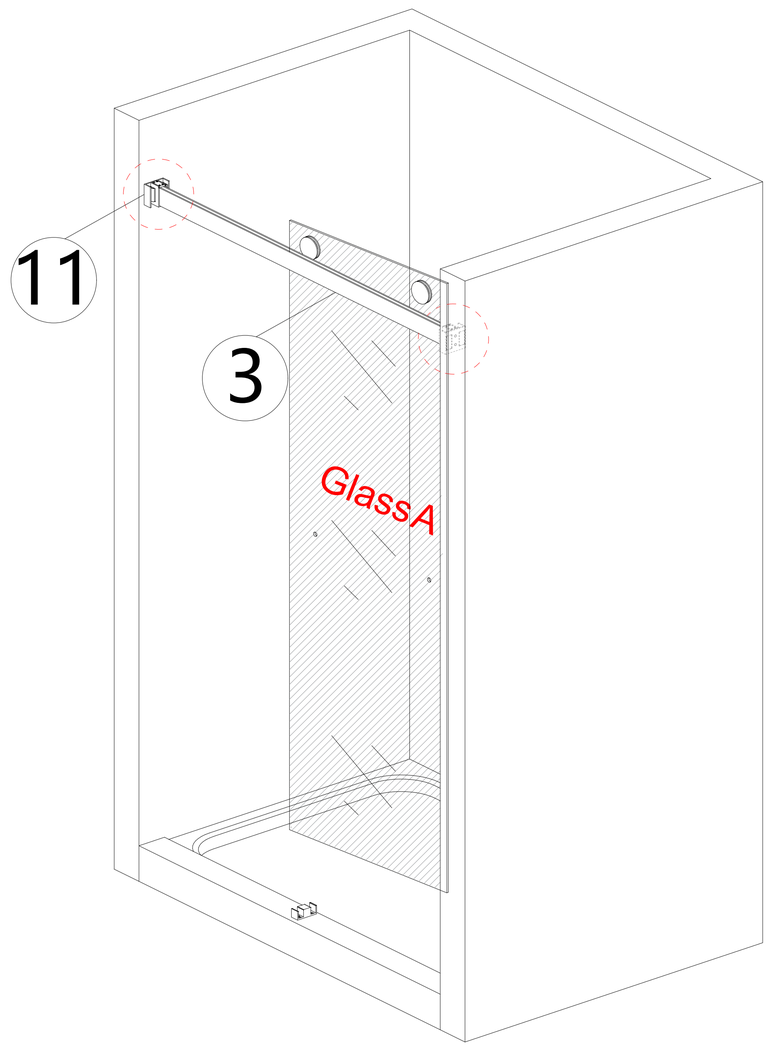


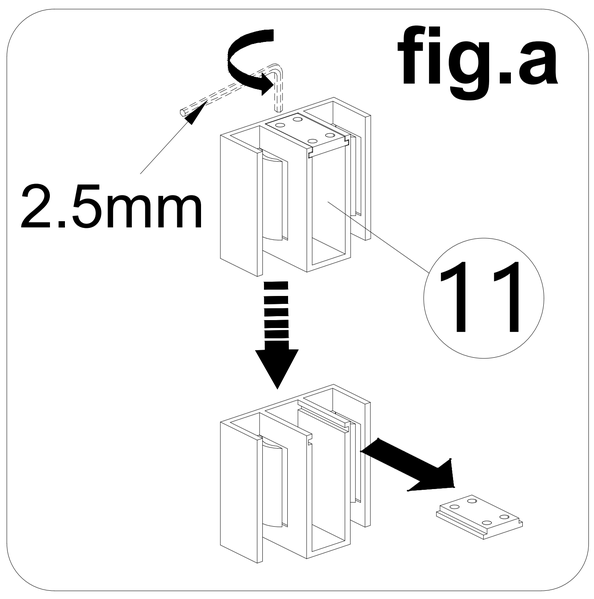


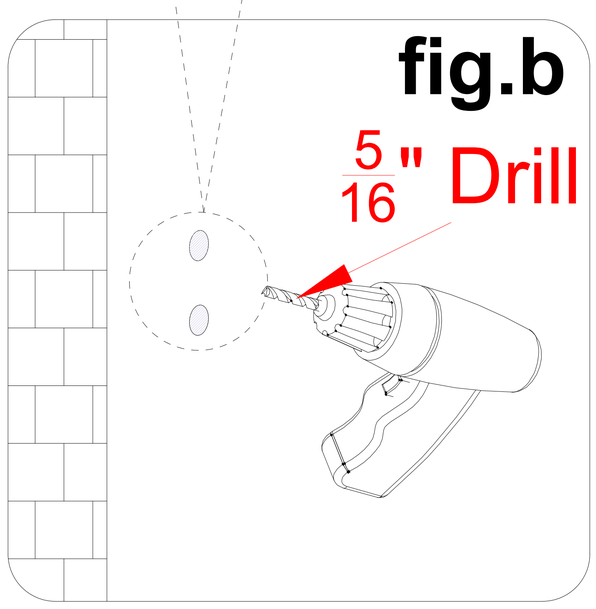


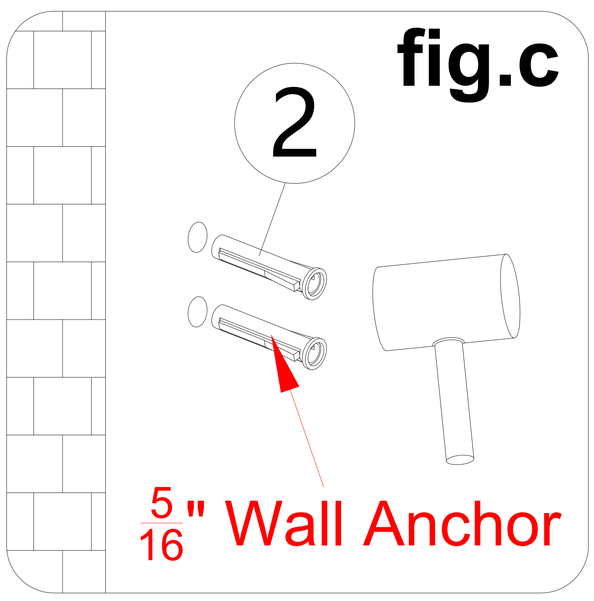


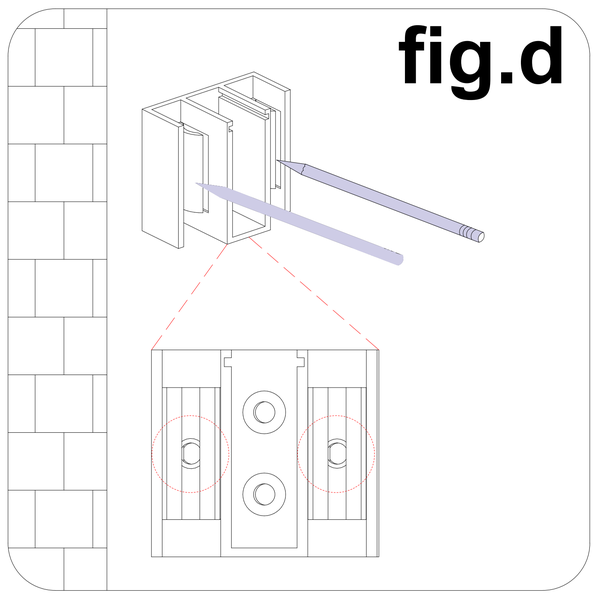


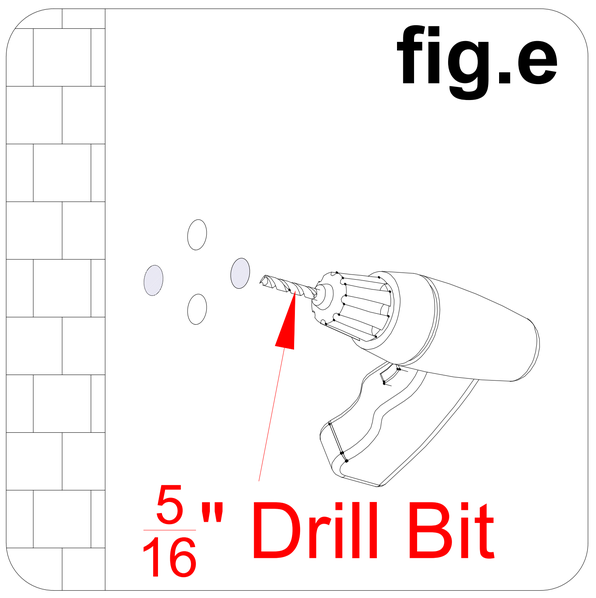


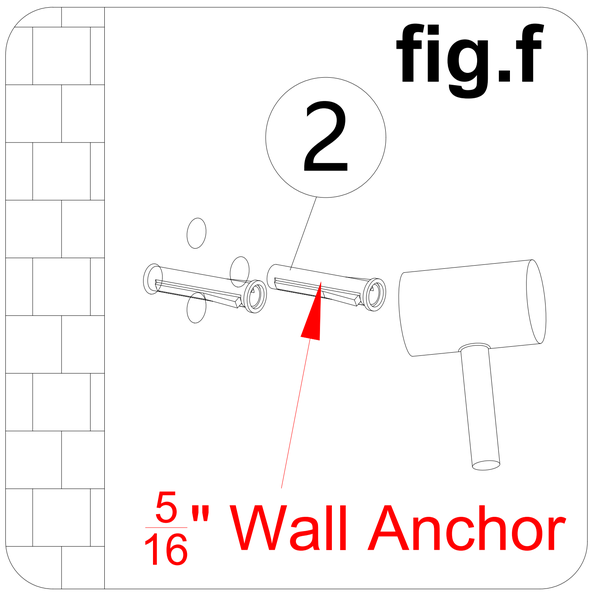

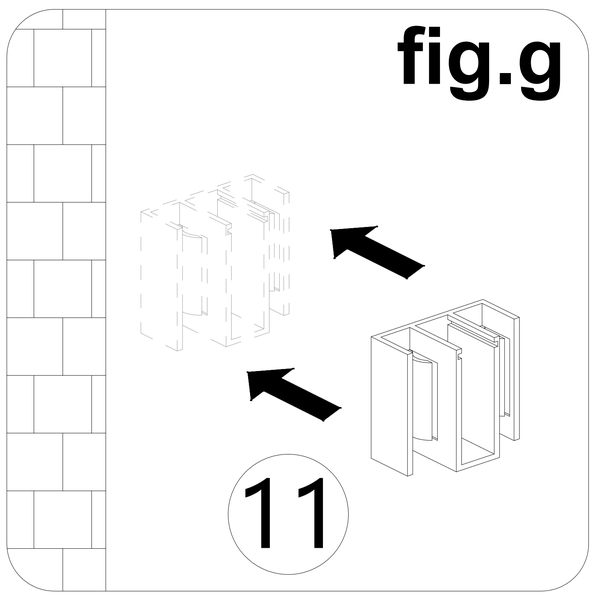

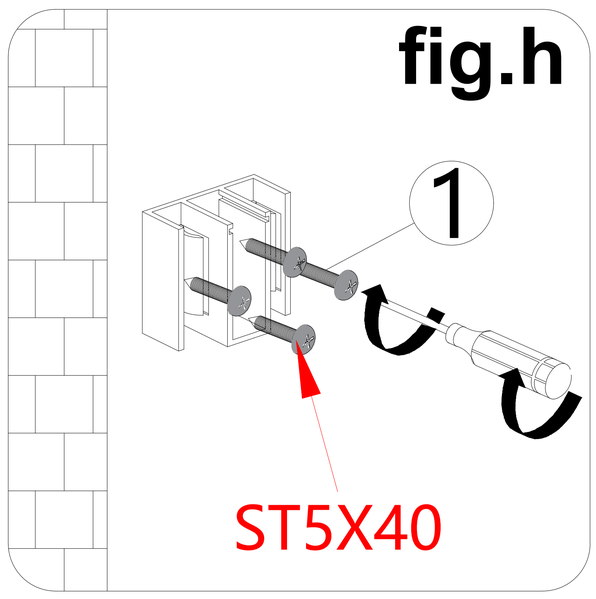

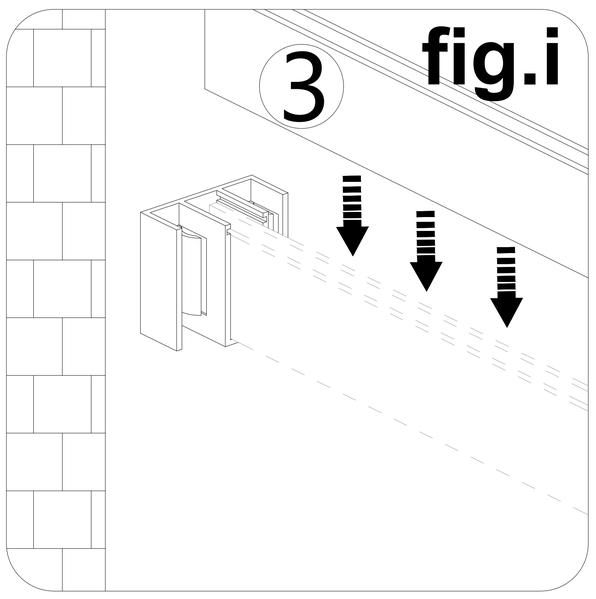


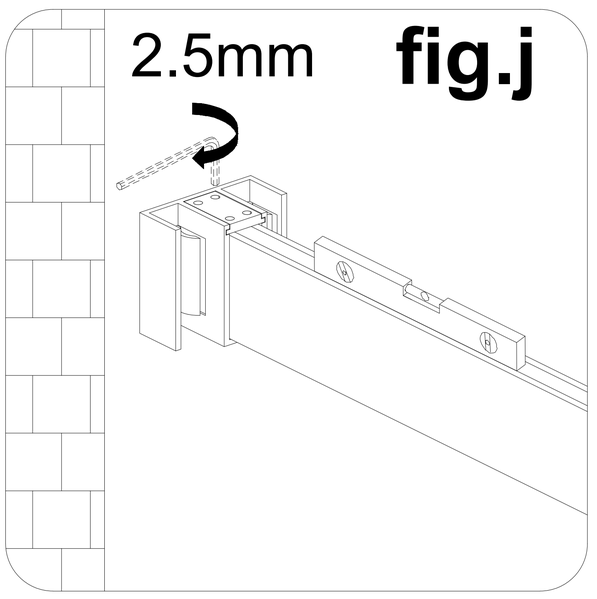



Active panel（6）Installation


STEP 7


Note：It is recommended to install the inner shower door first.

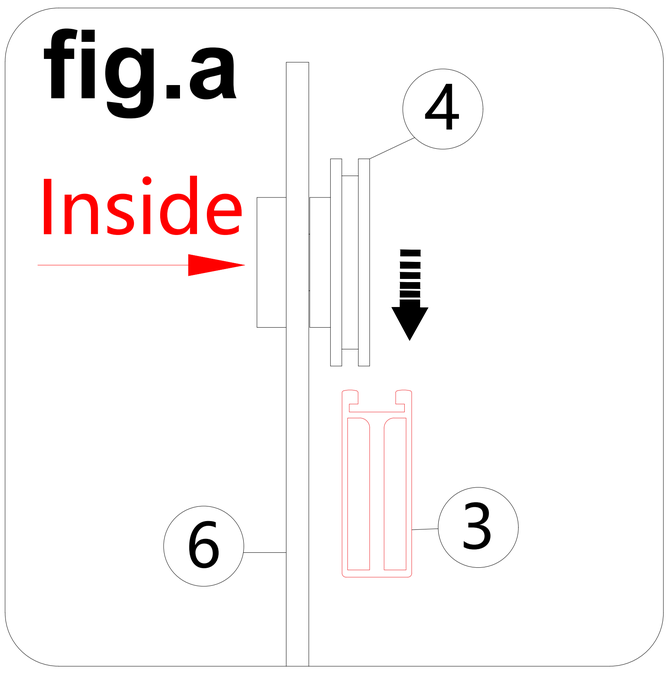

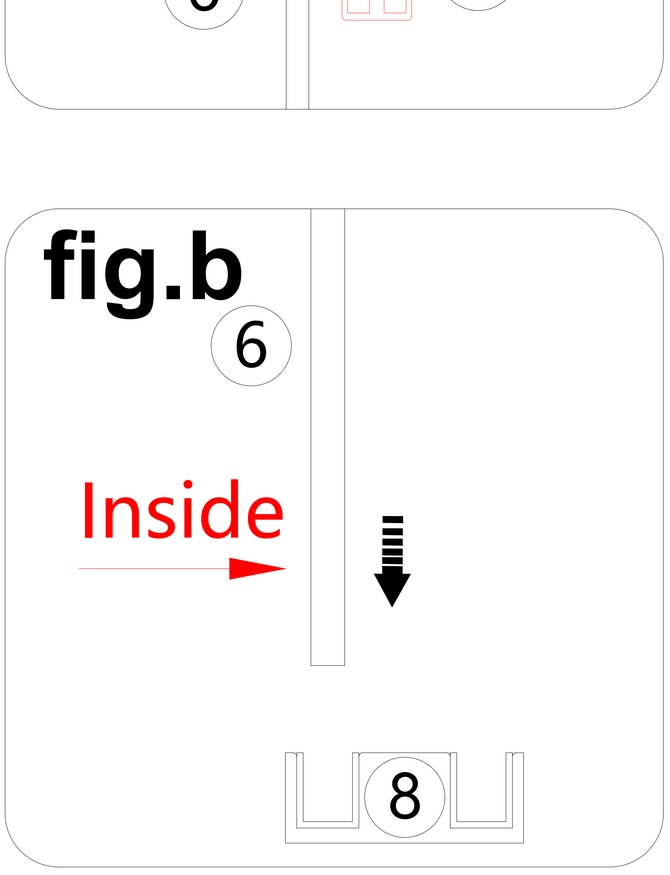

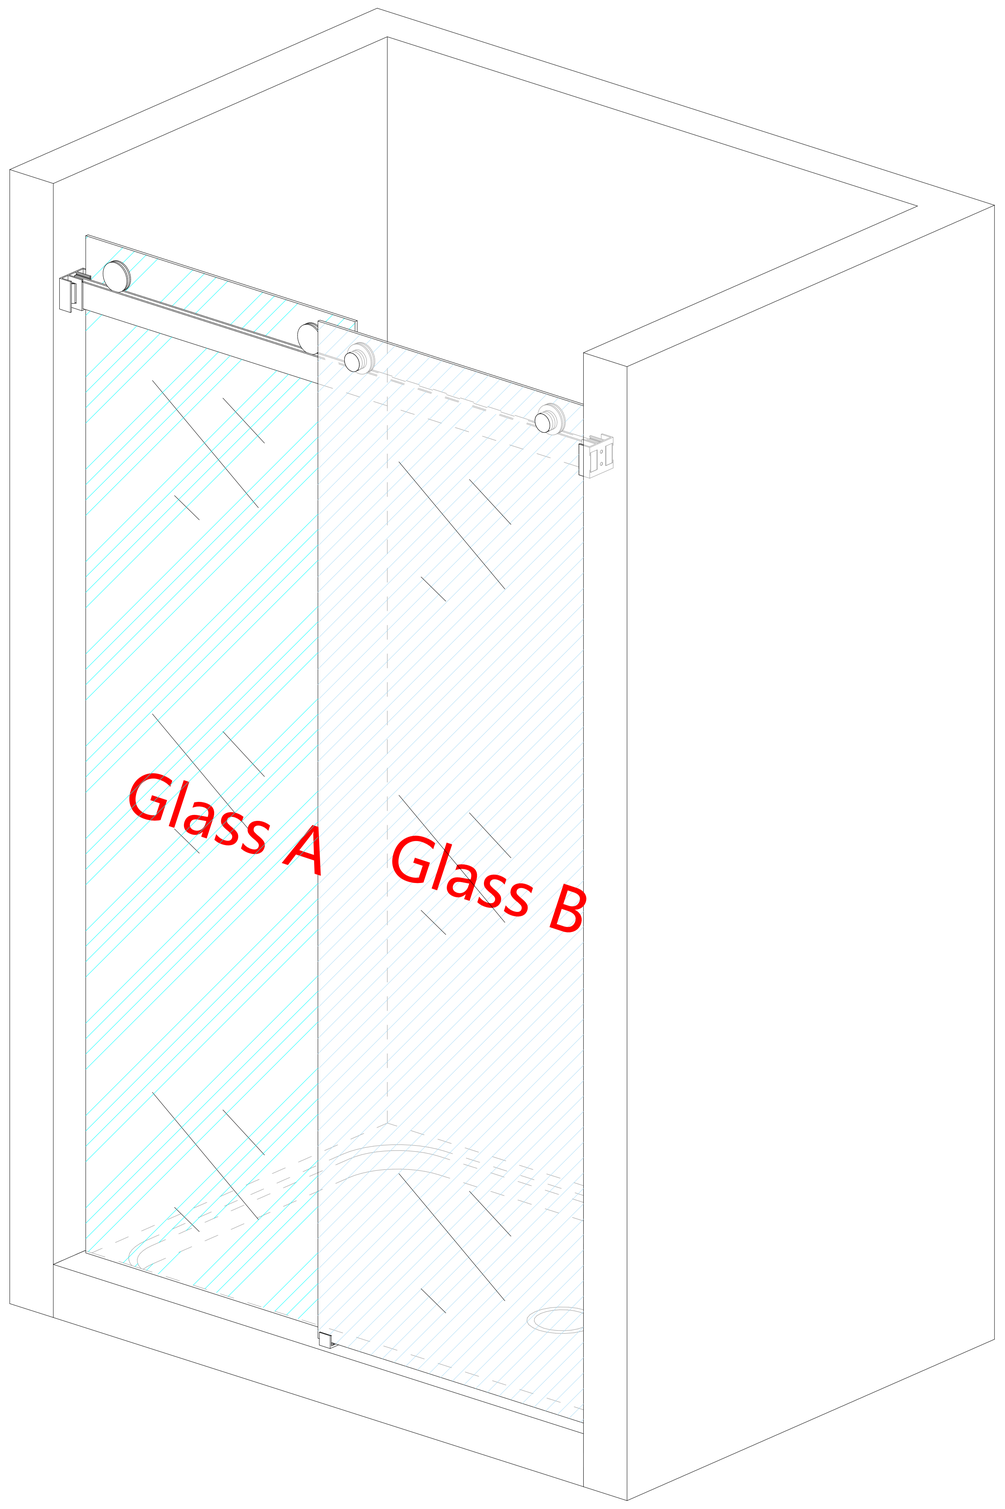

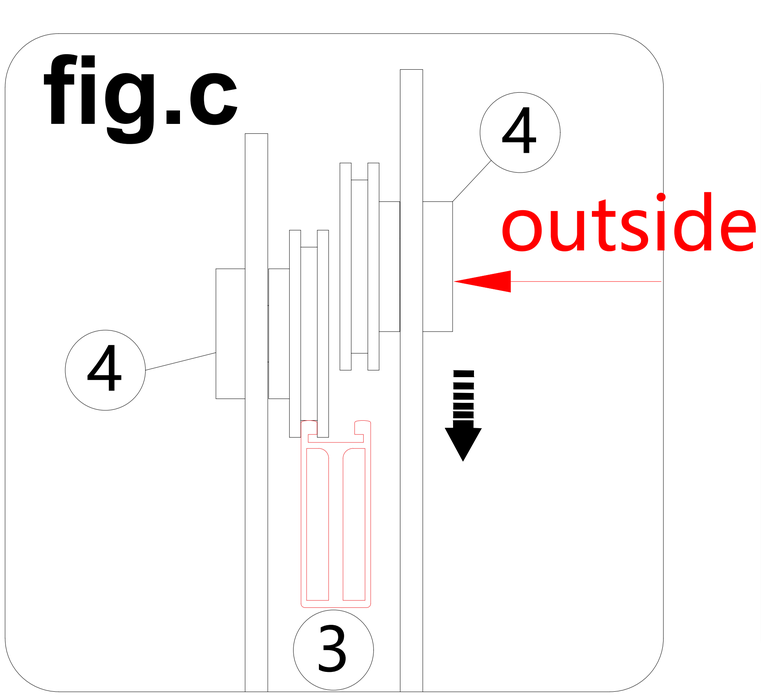

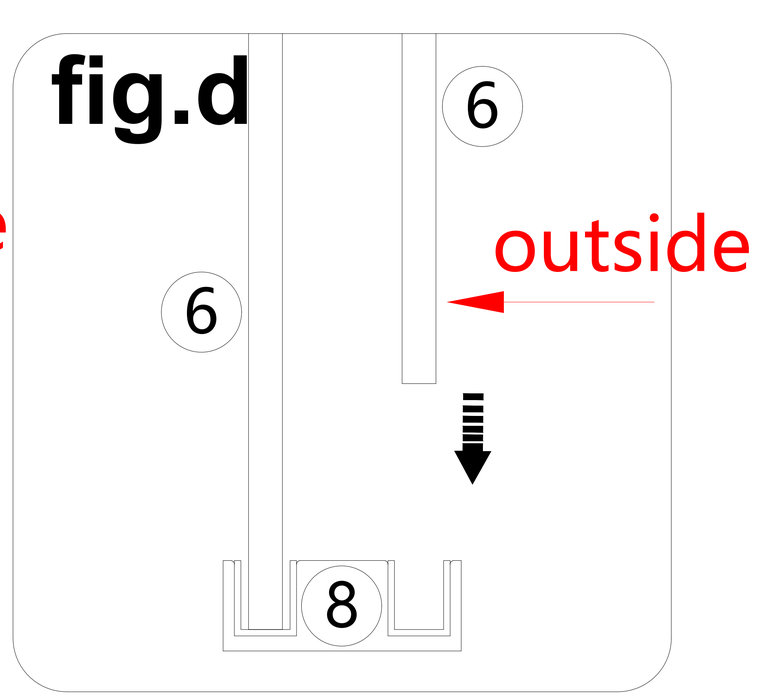


Adjust the roller (4) to control the height of the active panel (6)


STEP 8

1.Use 2.5mm Allen key to rotate the eccentric shaft of the roller, adjust the height of the sliding panel.


2.Use 5mm Allen wrench to tight the roller.



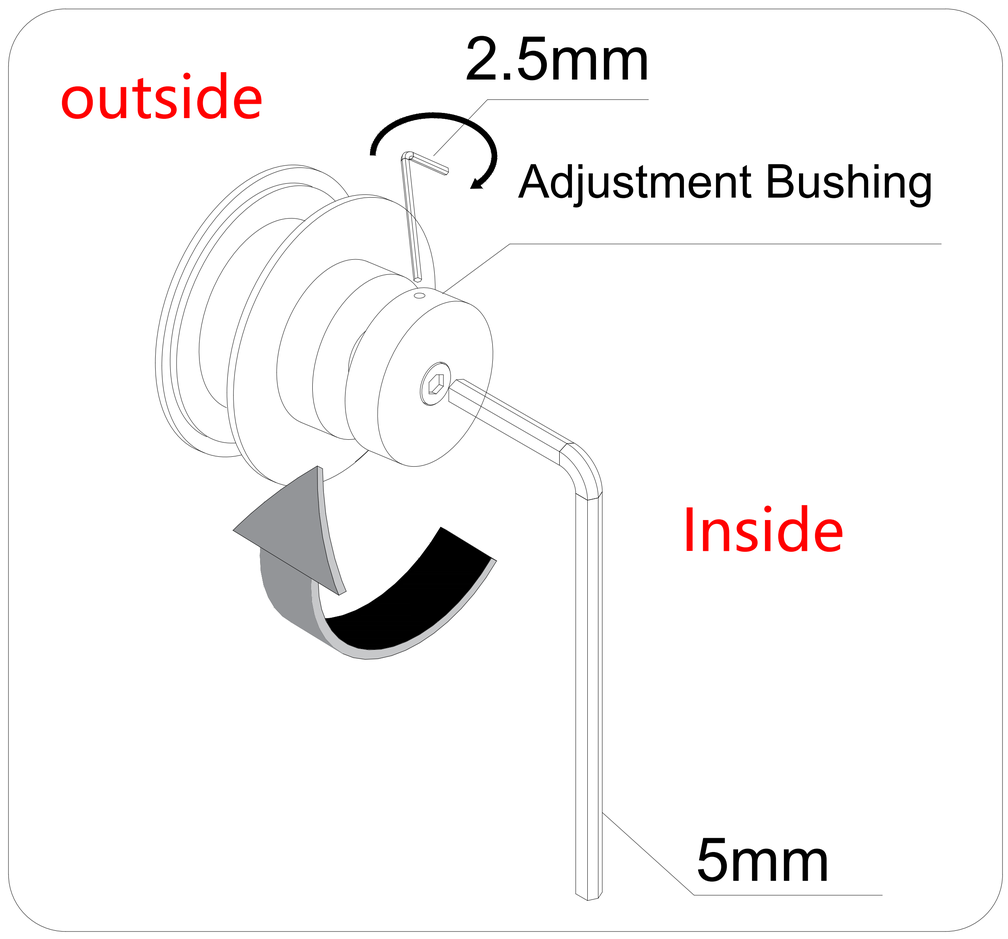

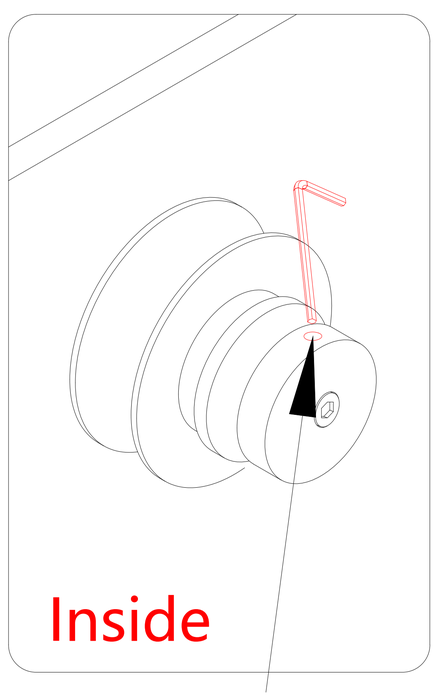


When the position of the small hole is facing upwards, the height of the active panel (6) is the lowest

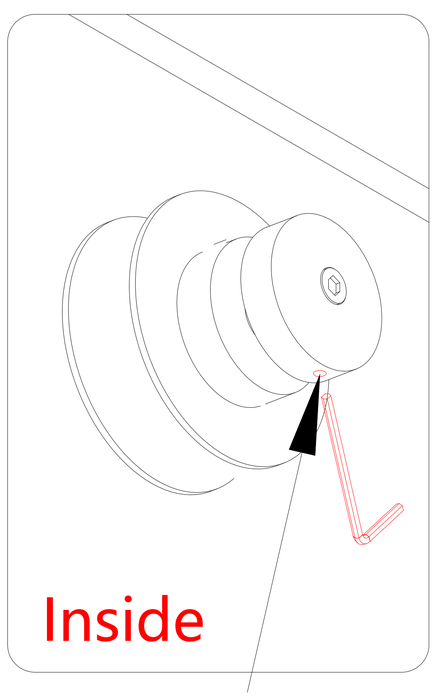



When the position of the small hole is facing downwards, the height of the active panel (6) is the highest

Anti-jumper (12) and handle (7) installation

STEP 9

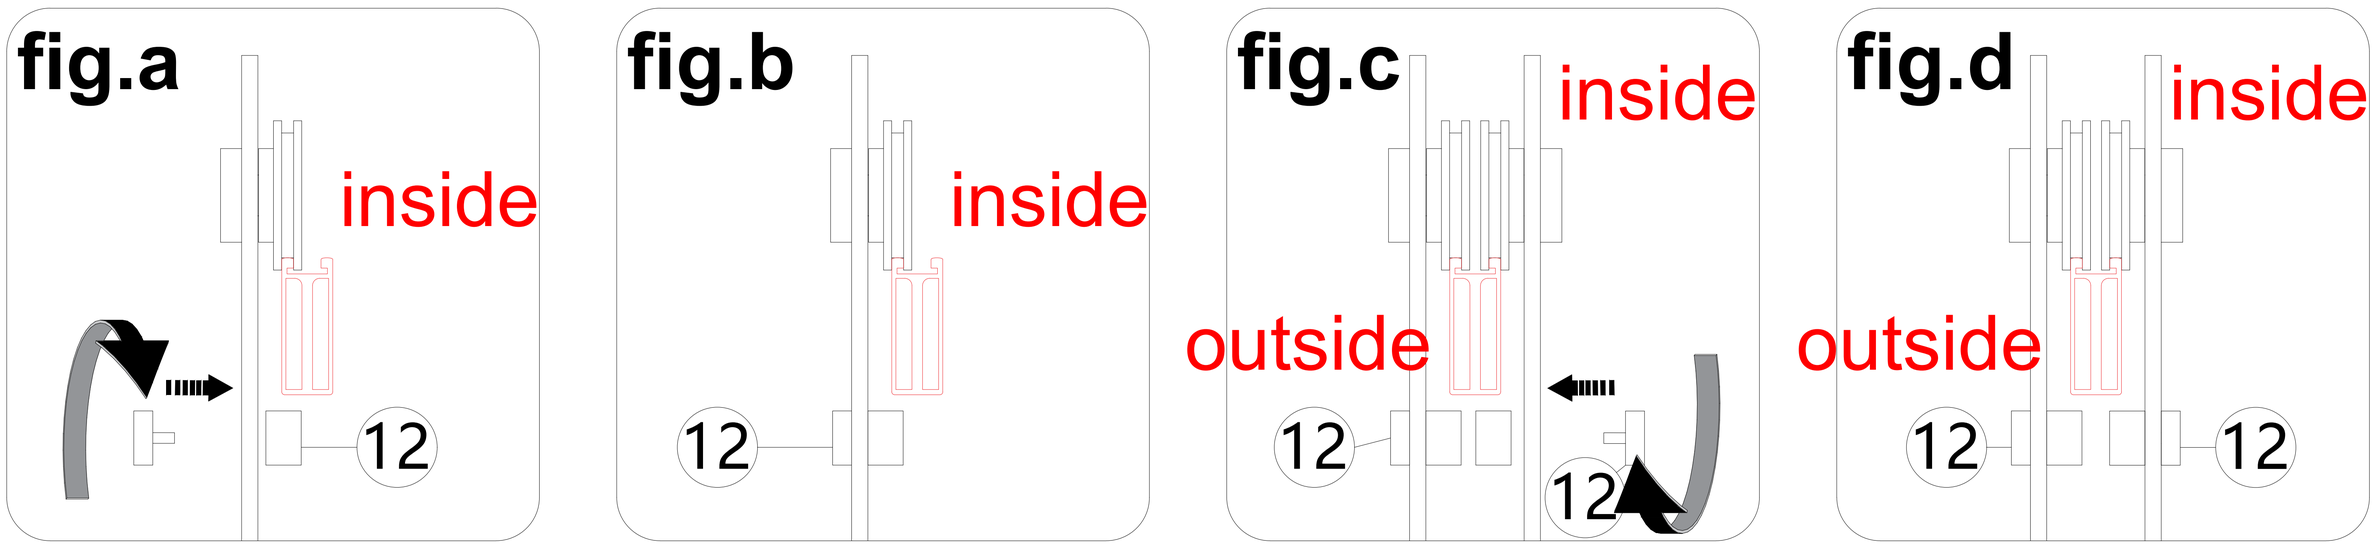


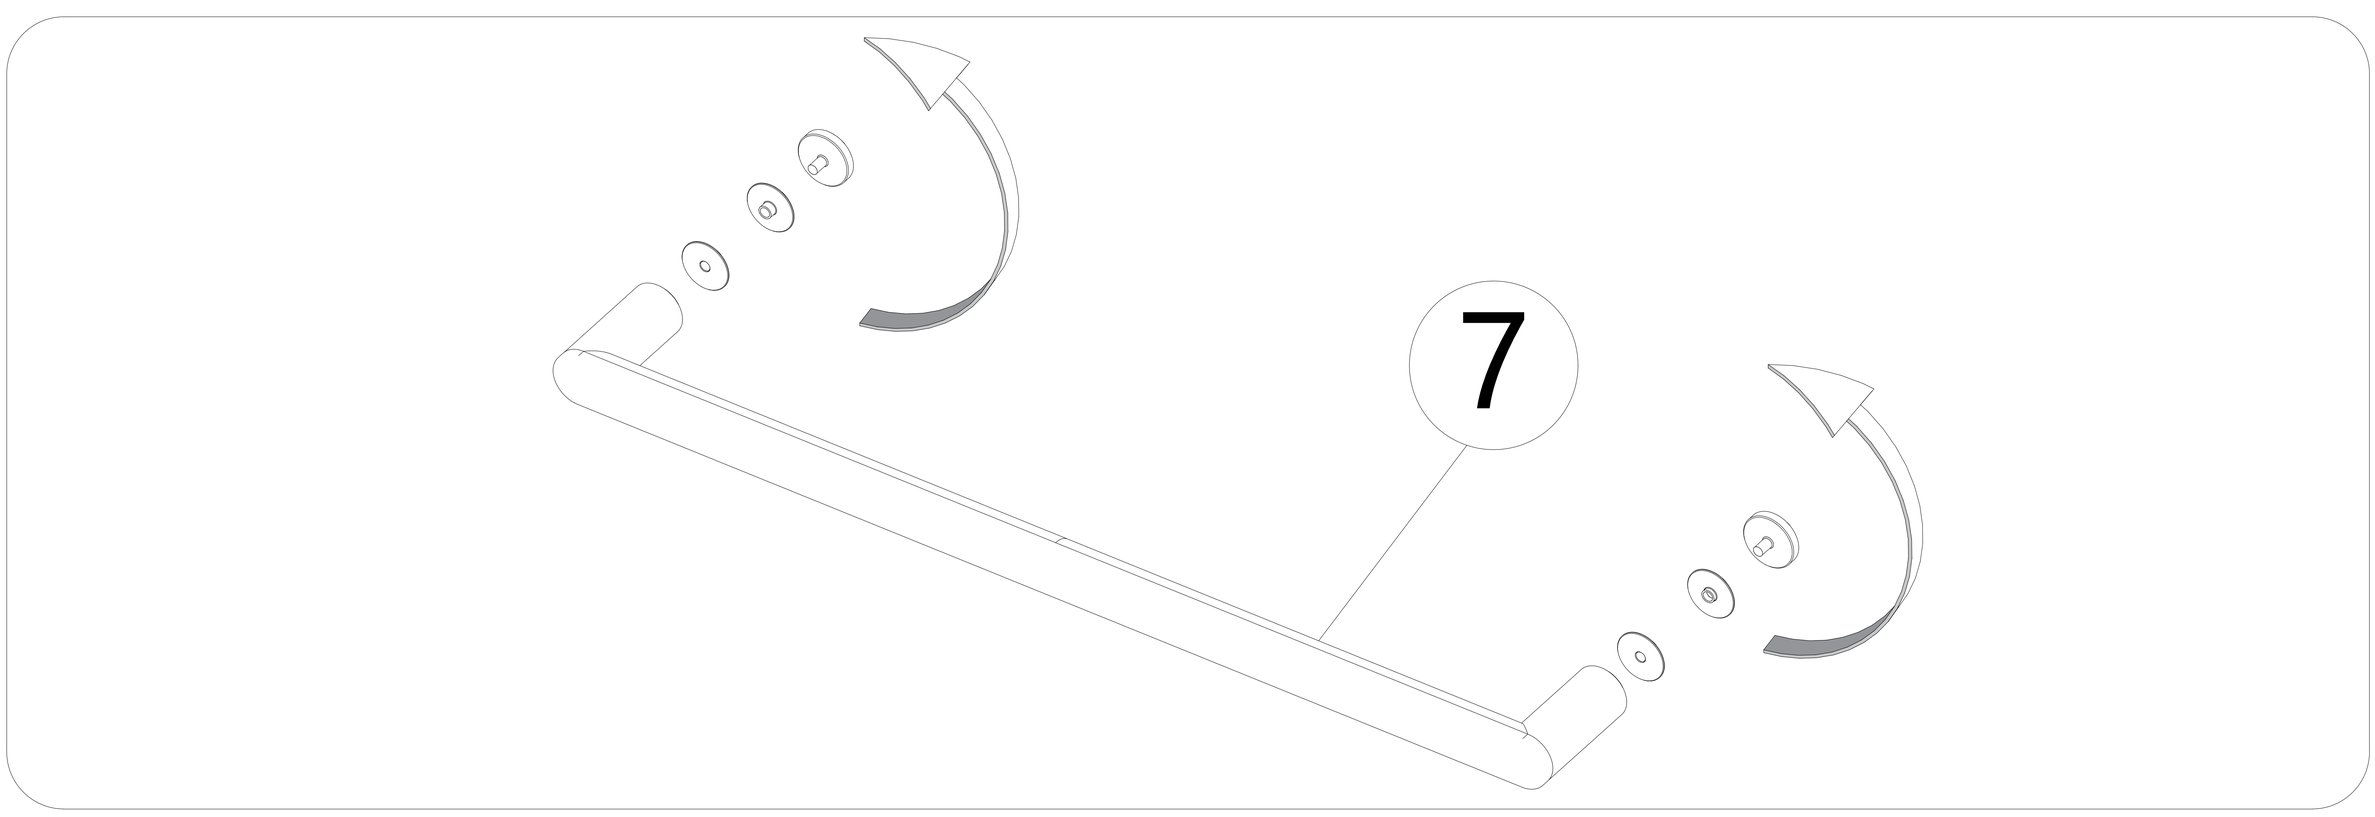


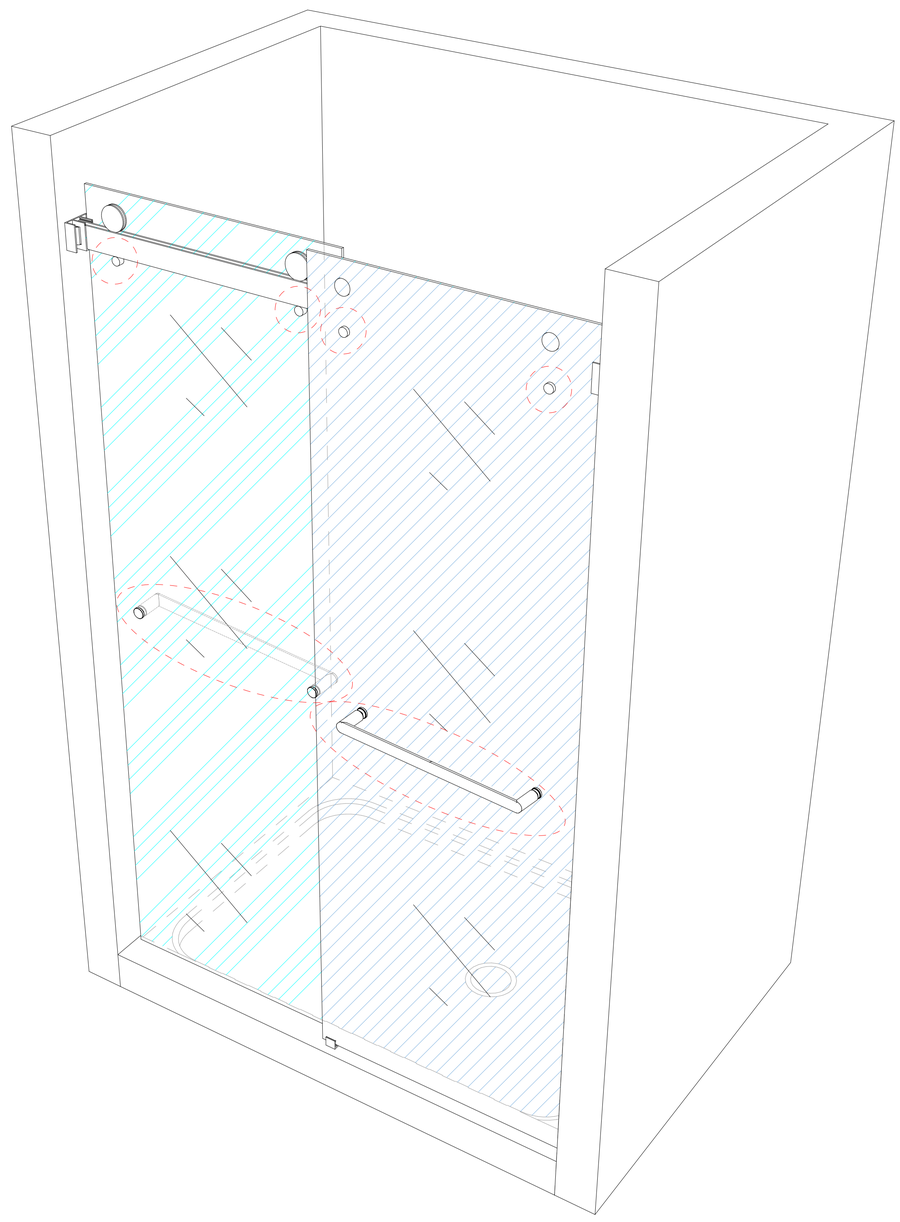



waterproof strip (5) installation

STEP 10

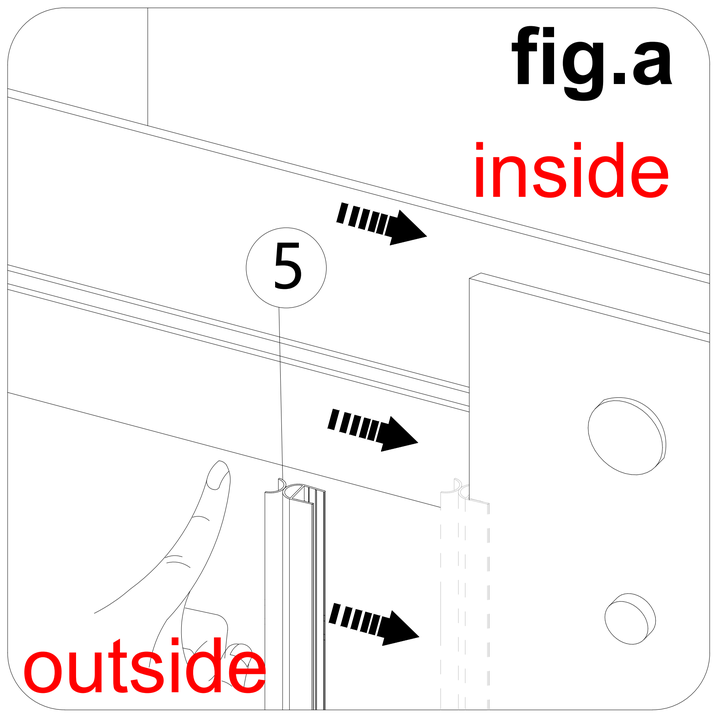

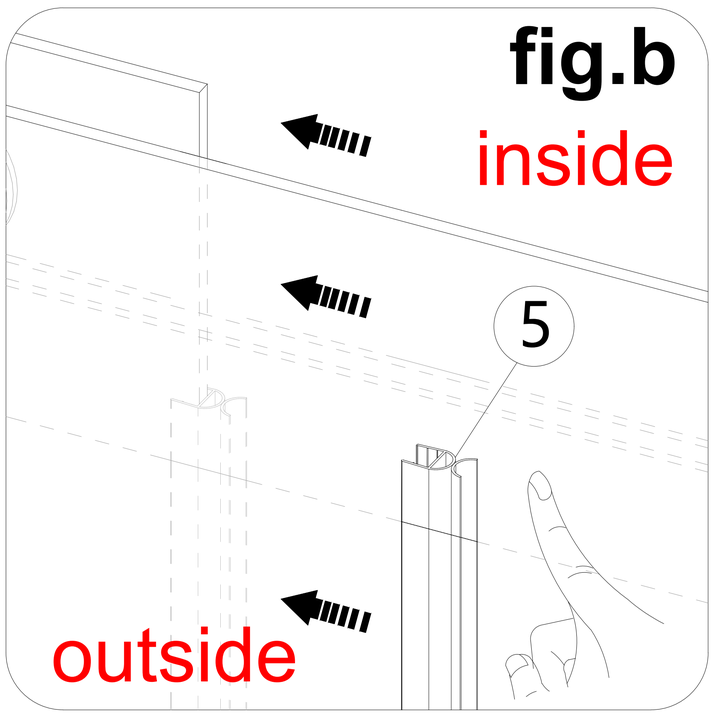

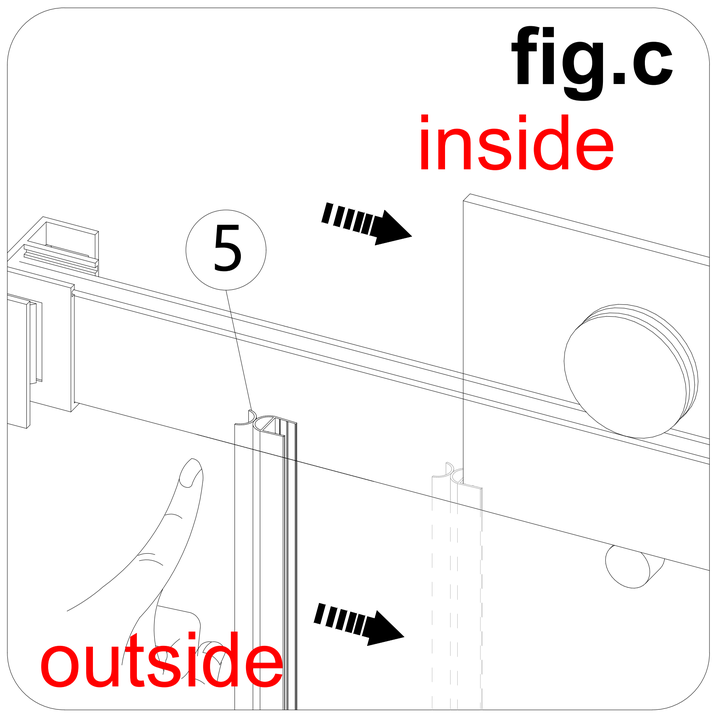

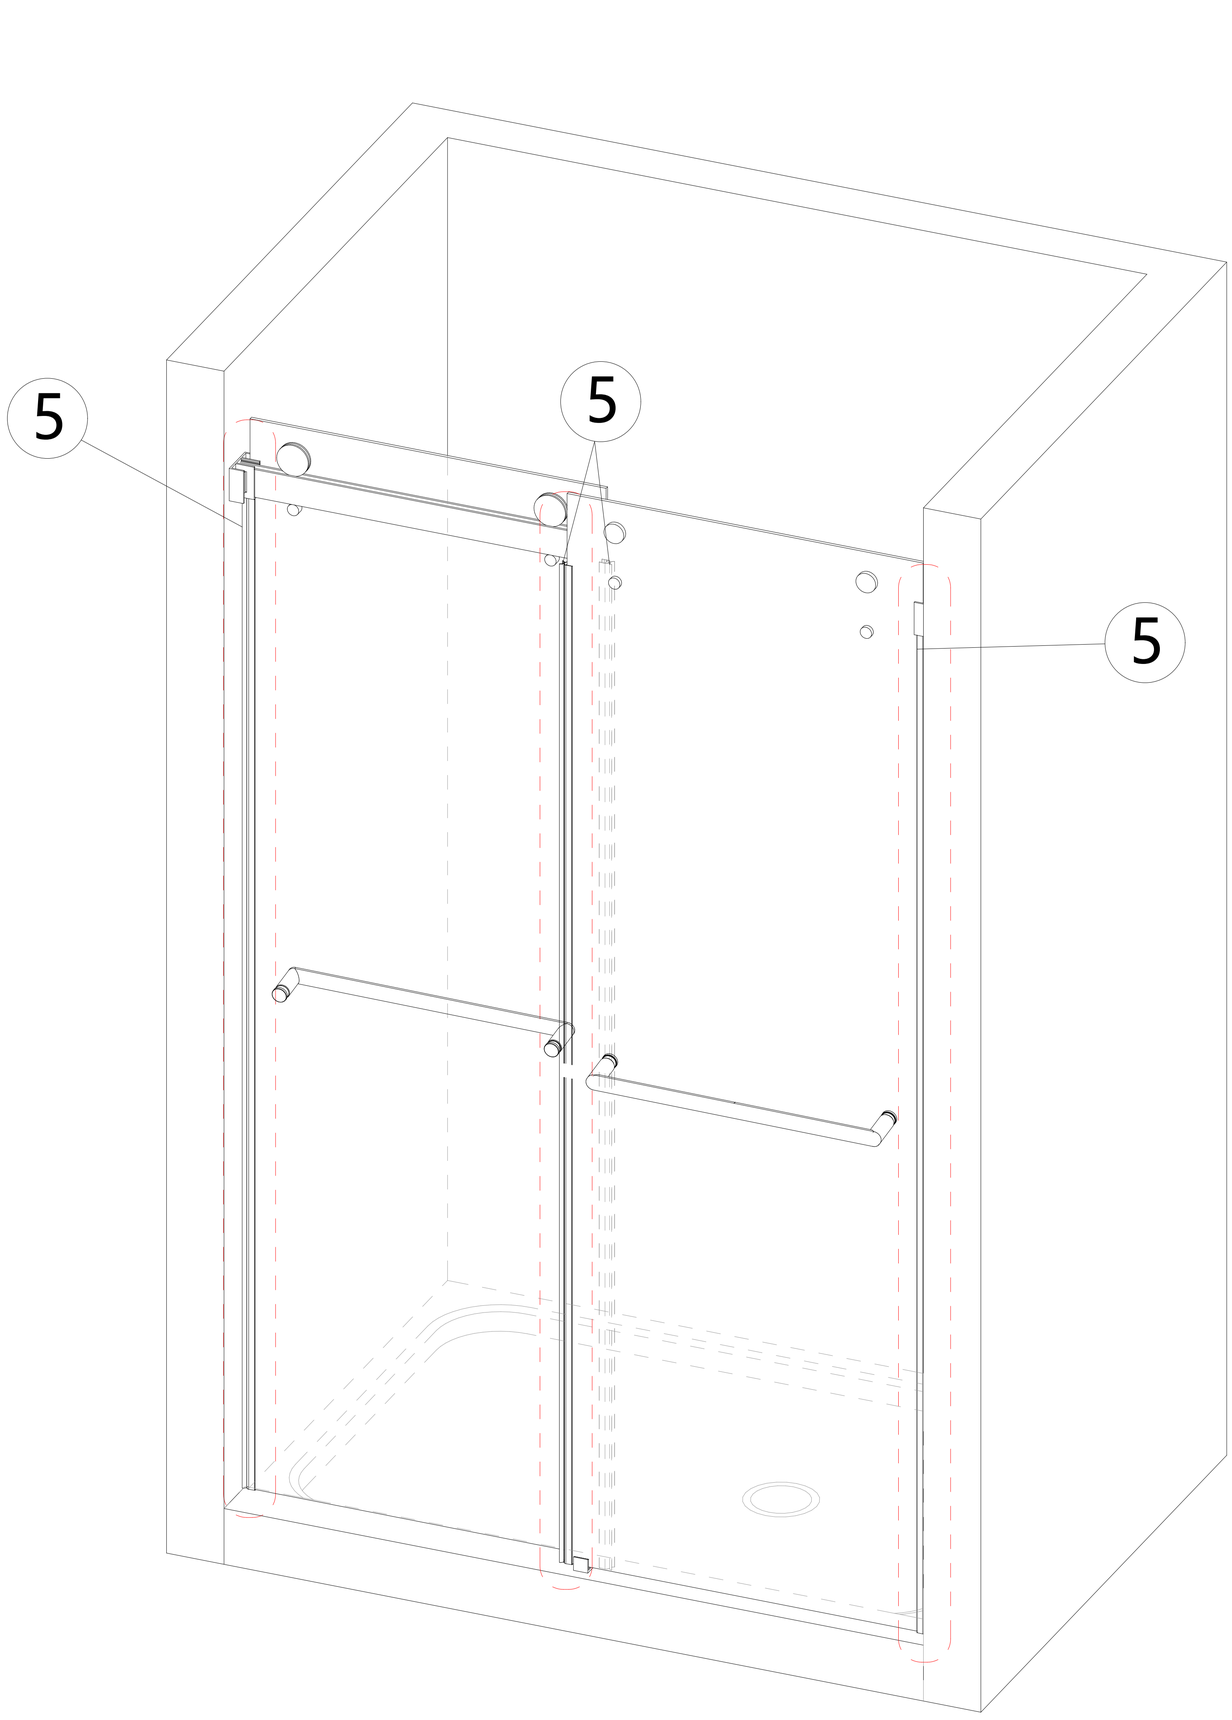

Threshold（9）installation

STEP 11

1.Ensure the distance of the W.

2.If W < 60 inch ,you can cut the threshold (9) to size.
Note：If W=58，each side needs to be trimmed (60-58)/2=1 inch.

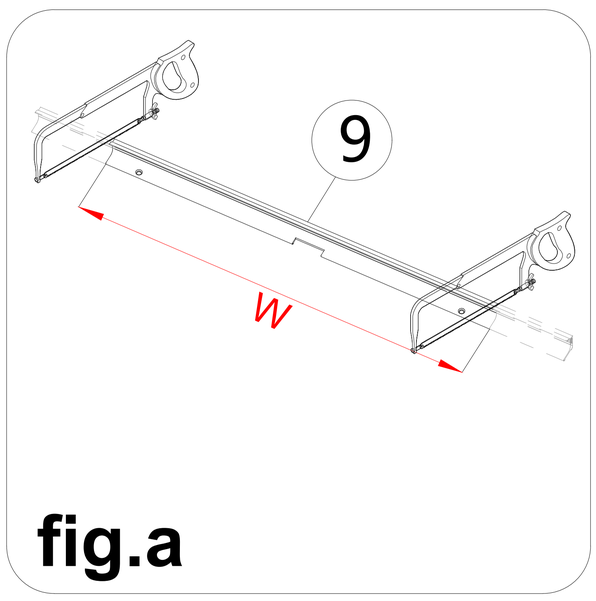


fig.a

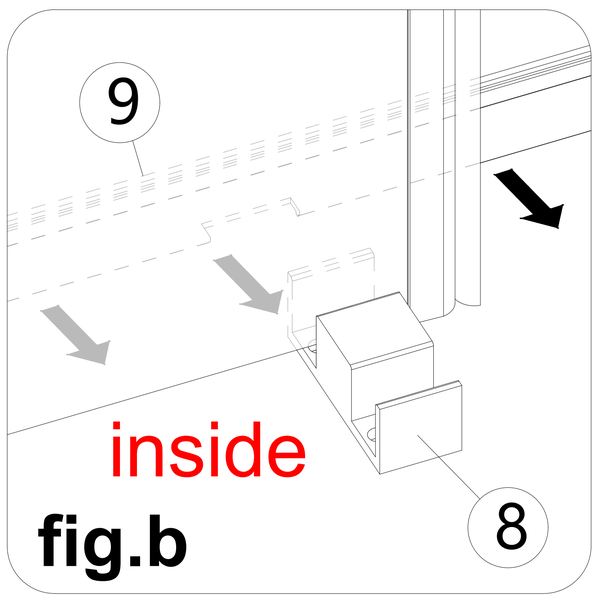


fig.b

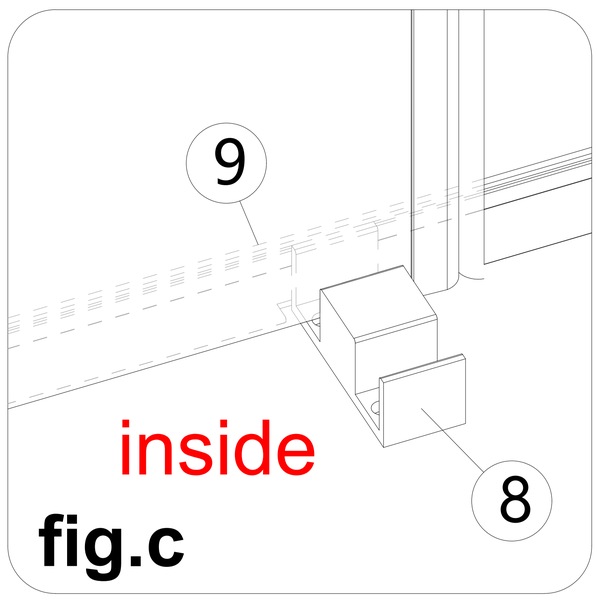


fig.c

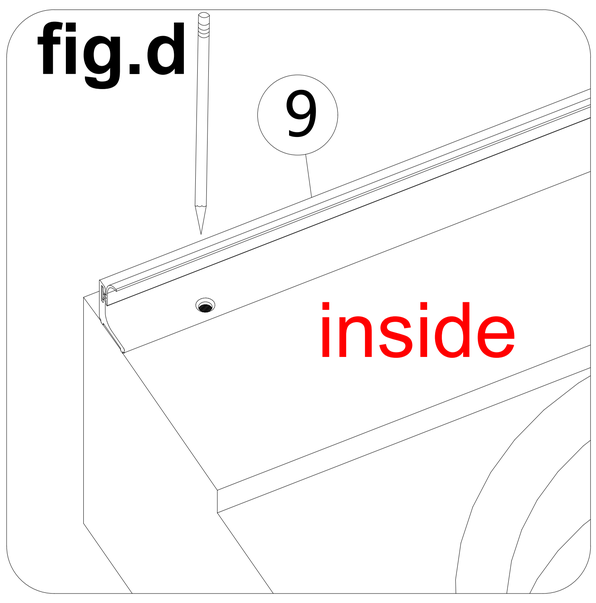


fig.d

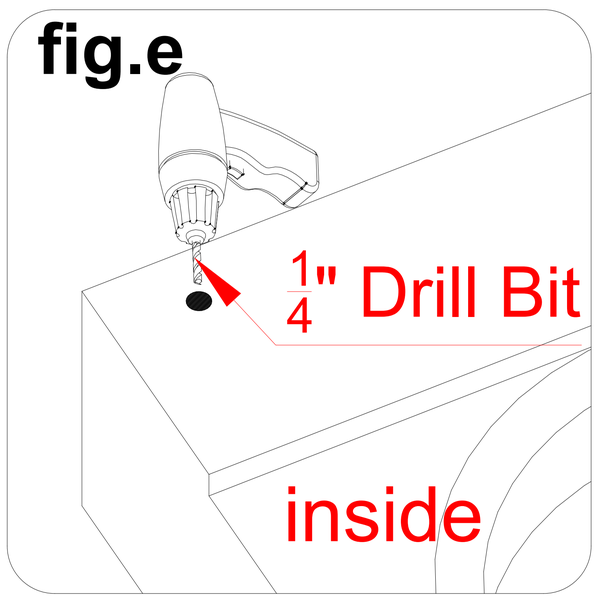
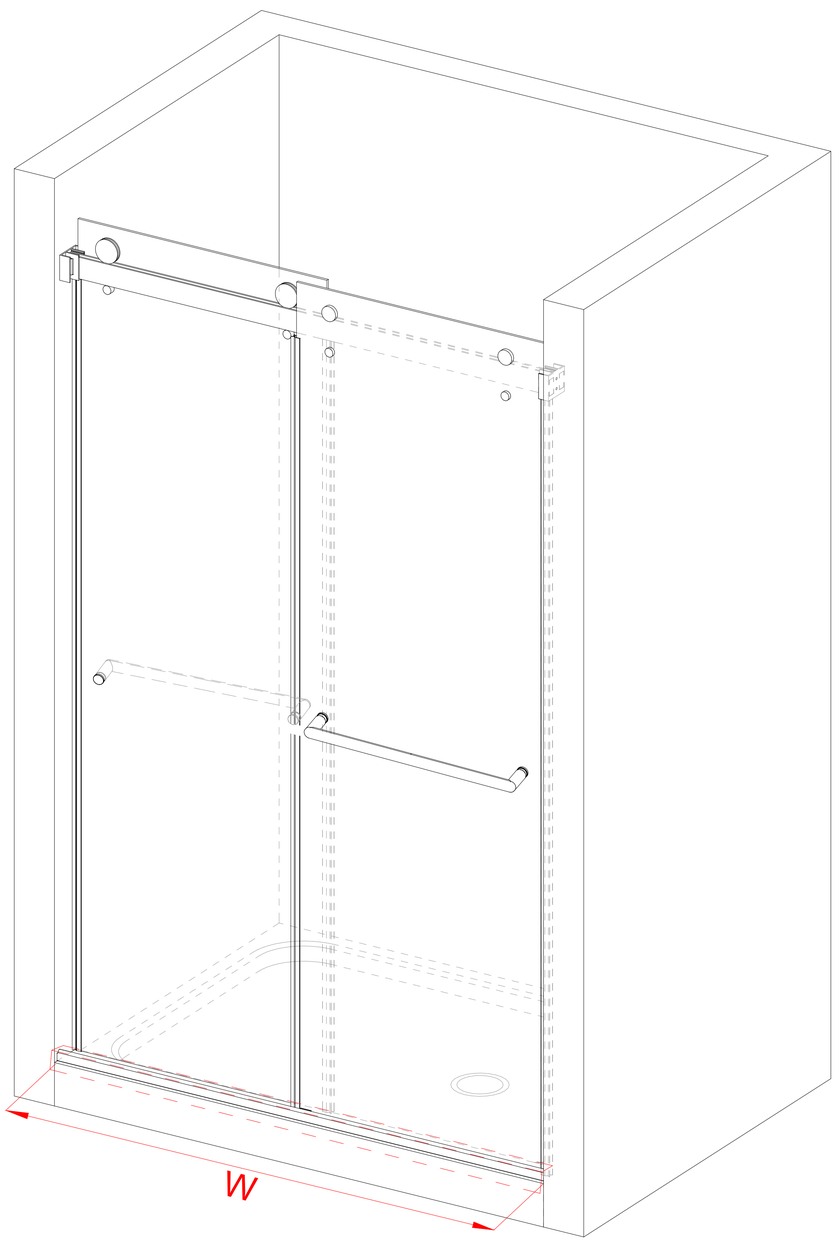


fig.e



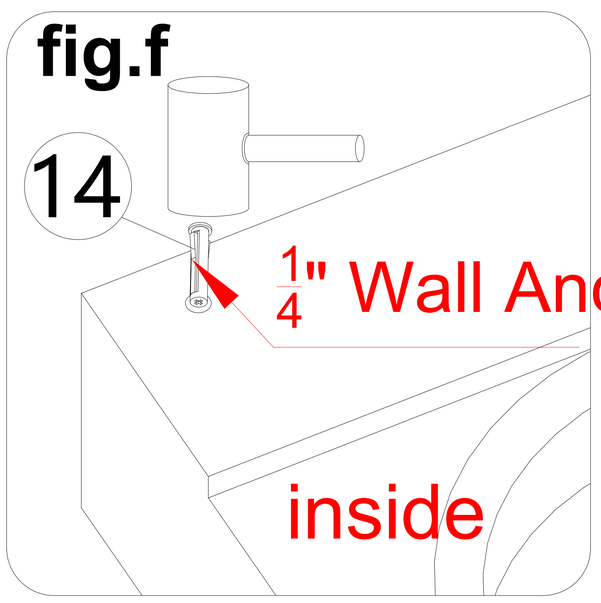


fig.f

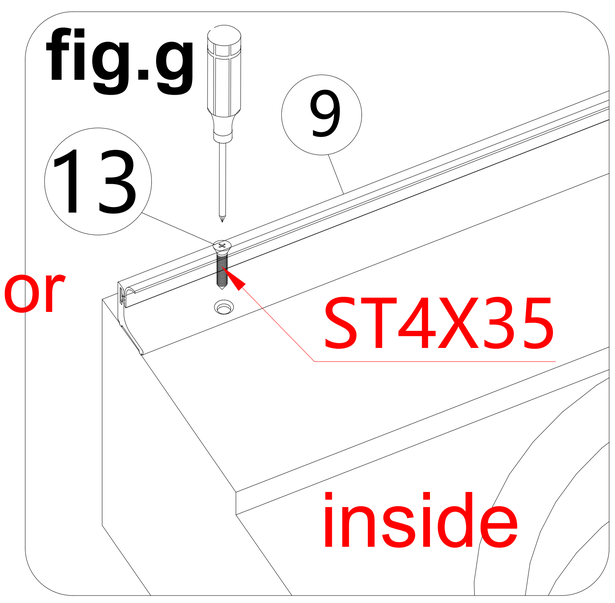



fig.g

Note：If shower base or foundation cannot be drilled，please fixed threshold (9) with glass gule.

Slider block installtion

STEP 12

1.Move the active Panel (6) from both sides to the middle.
2.Put the slider block (16) to the side near the wall to block the threshold (9), and then mark hole position.
3.Drill the holes according to the marked position.
4.Drive in the 6mm Rubber particles (14).
5.Fasten with M4.0X35 Screw (13) .

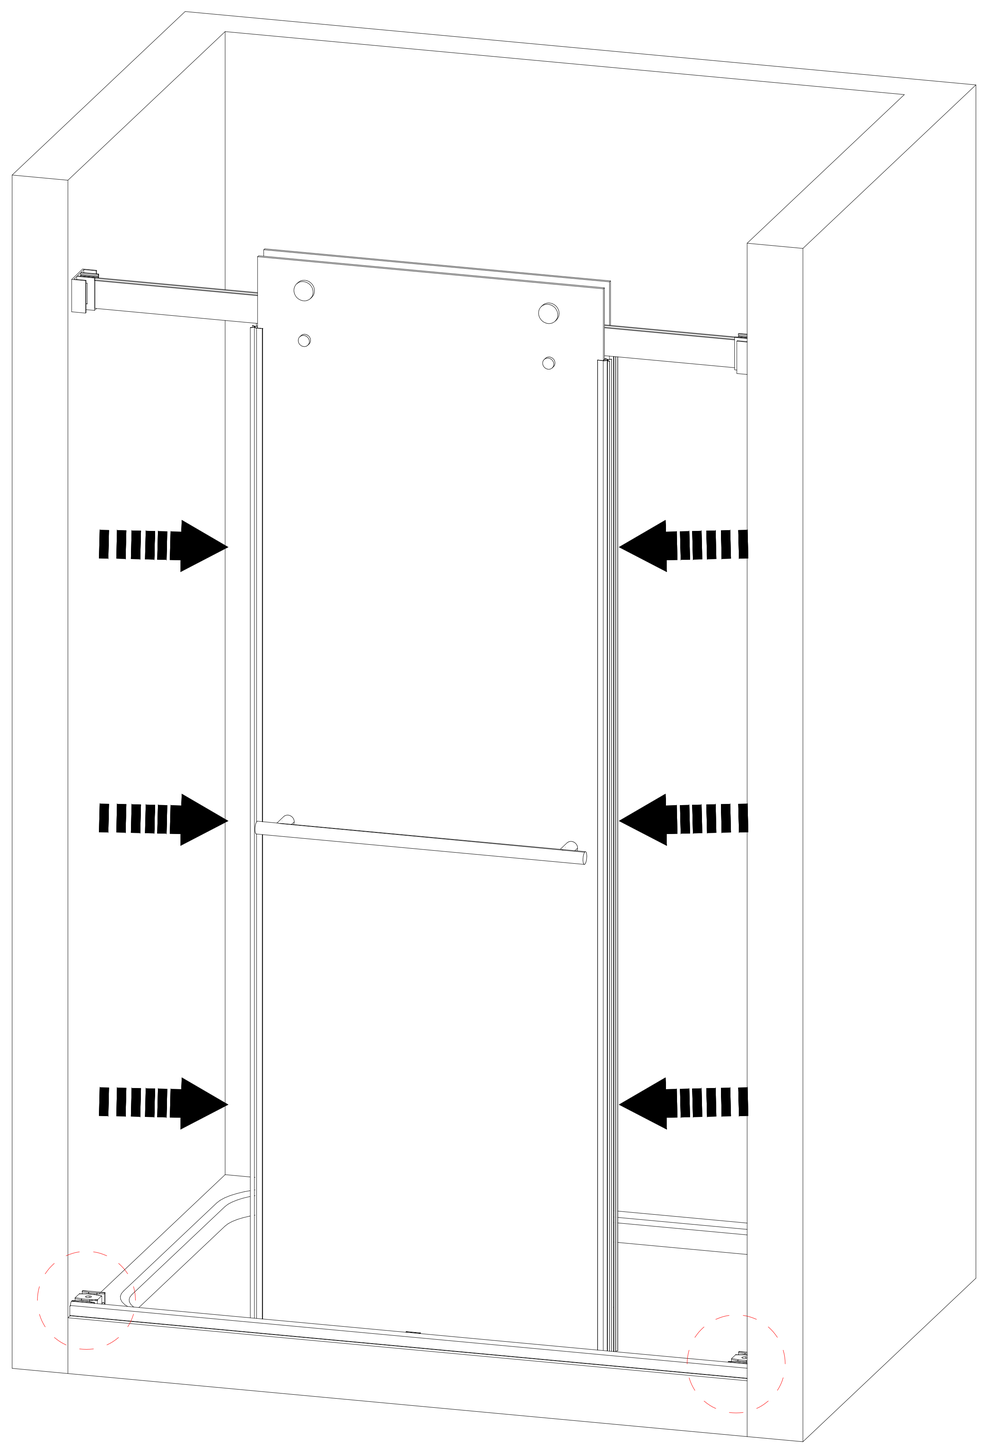

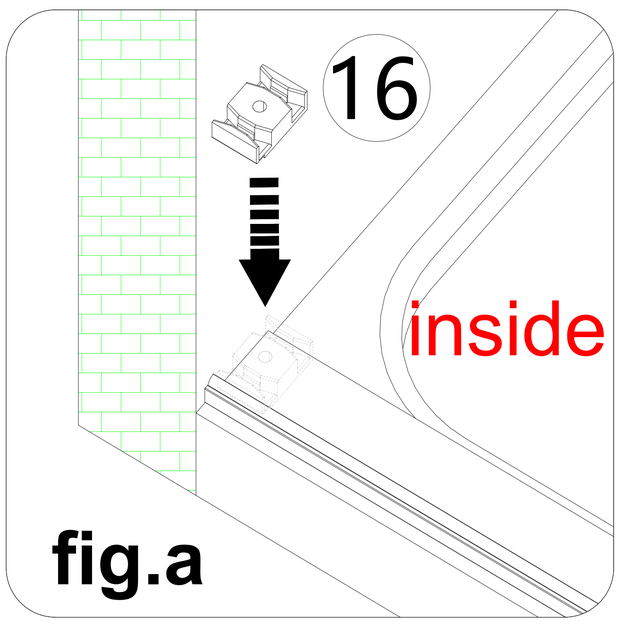


fig.a

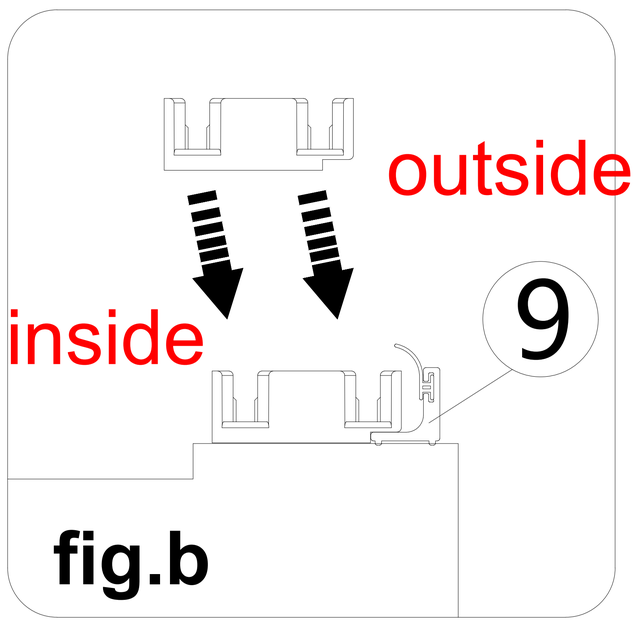


fig.b

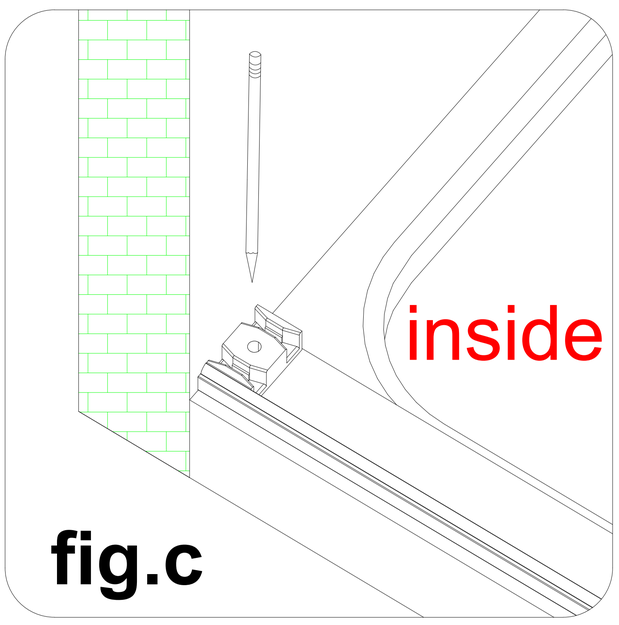


fig.c

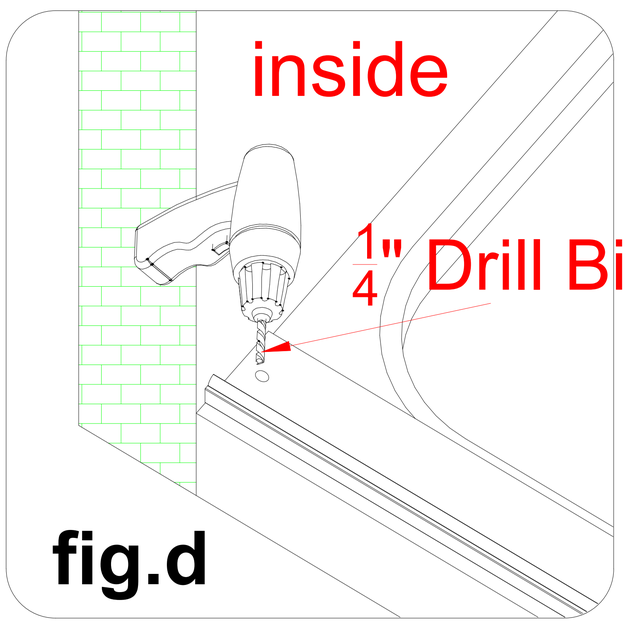


fig.d

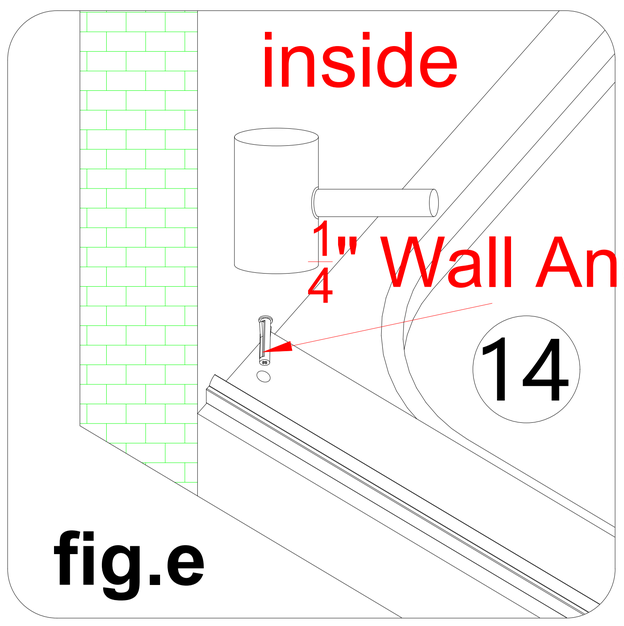


fig.e

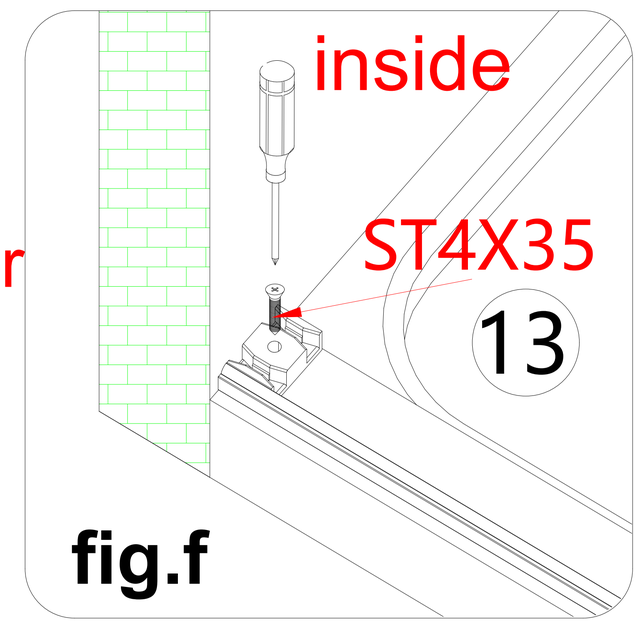


fig.f

Threshold gluing and final precautions


STEP 13


The surfaces need to be clean and free of debris before applying silicone.


Ensure that the shower door closes tightly and opens smoothly.

Uniformly apply high-quality silicone sealant along the threshold.

Allow 24 hours for the silicone to cure before using the shower.

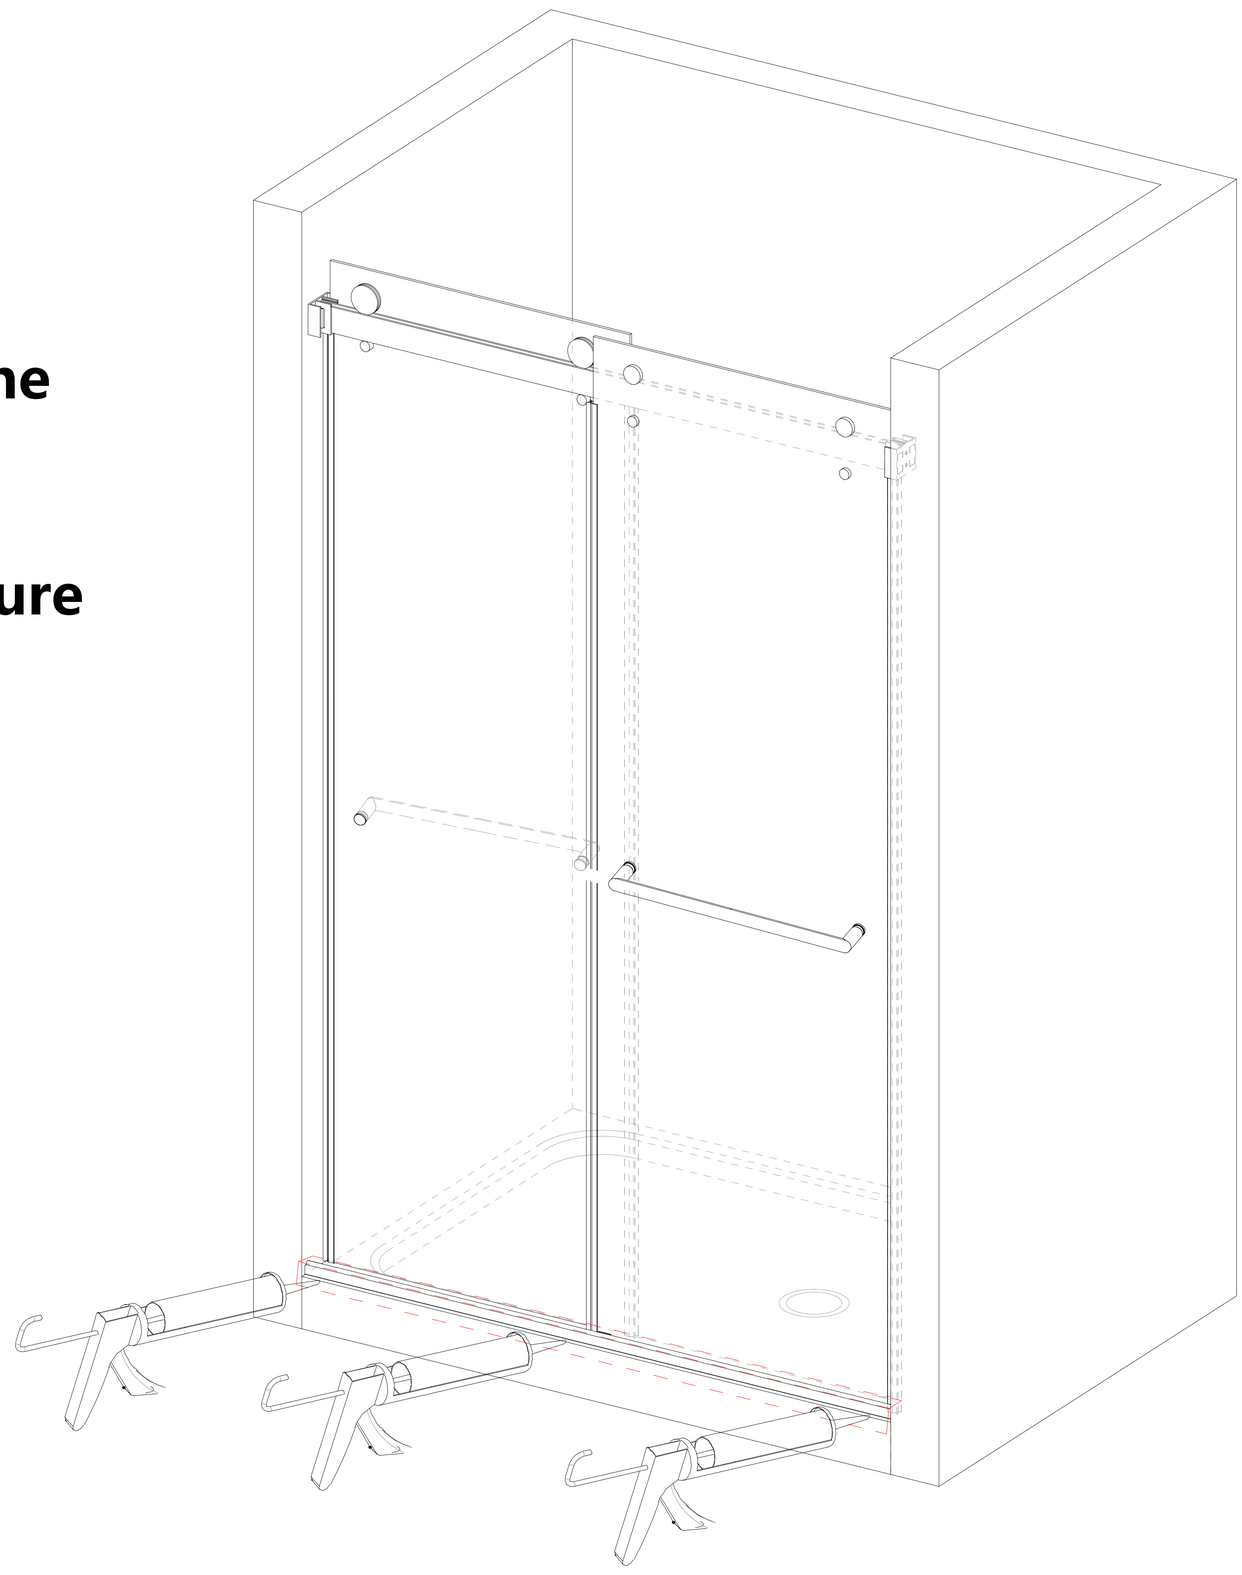

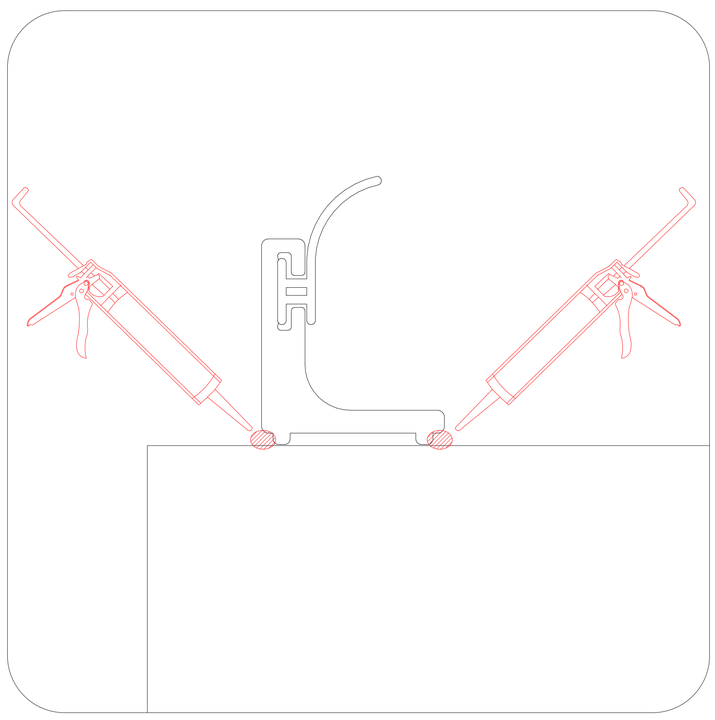

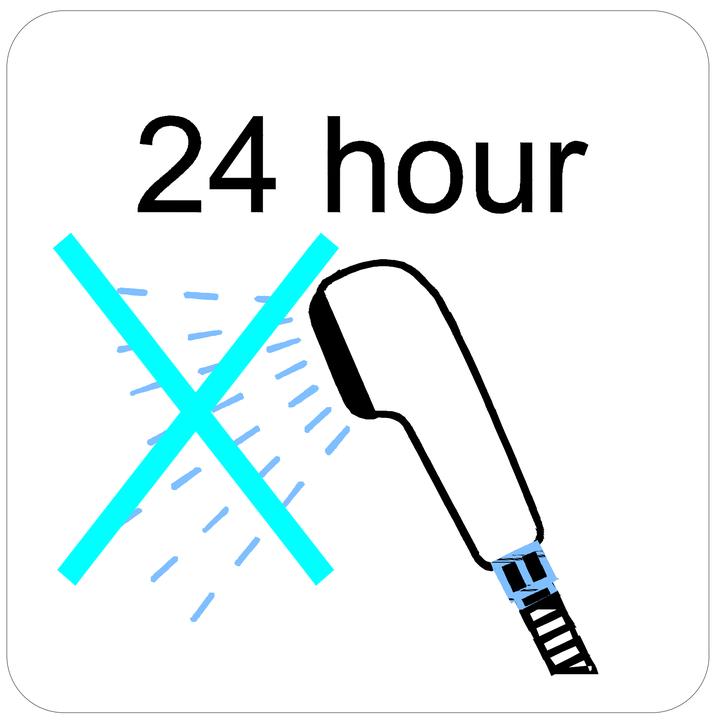

! Apply Silicone Sealant,(not supplied).