




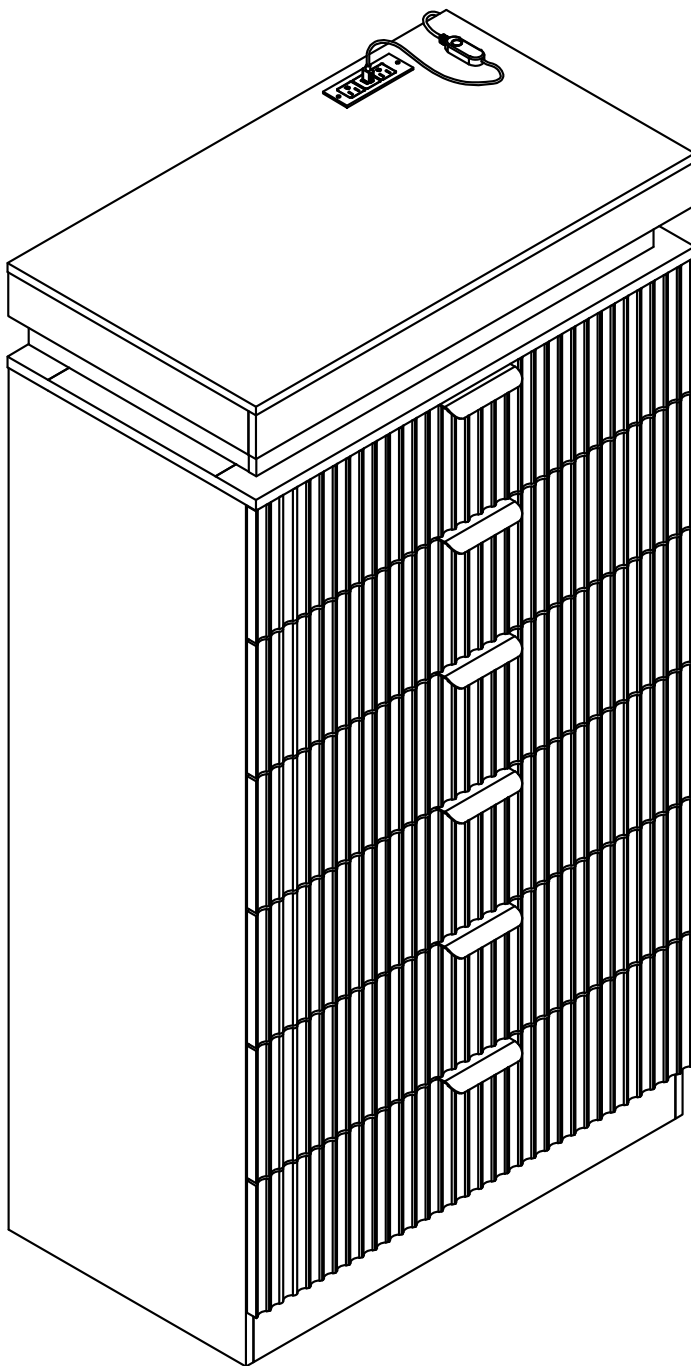


Please note: Items cannot be returned once assembled.


Installation & Assembly




IT IS RECOMMENDED
TO USE POWER TOOLS

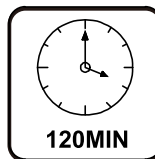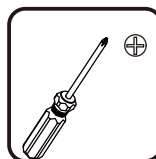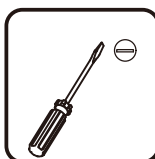


120MIN

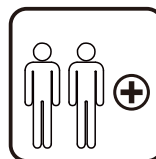


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

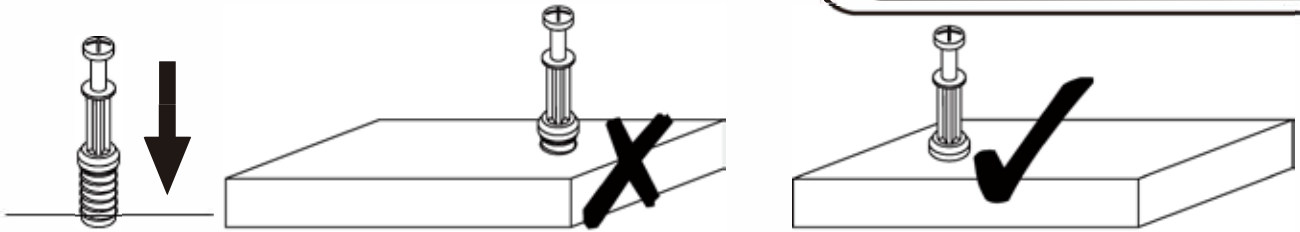


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

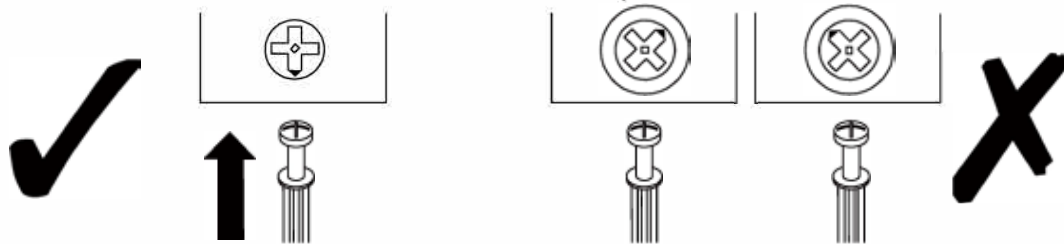











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










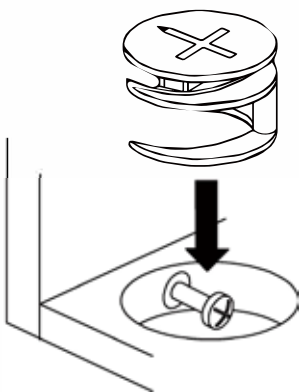




EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.


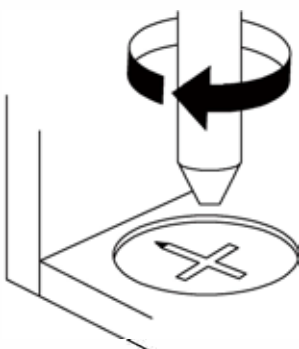


EN_Turn cam lock clockwise to tighten.

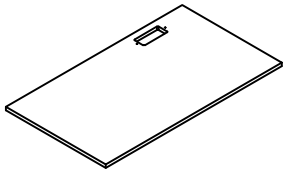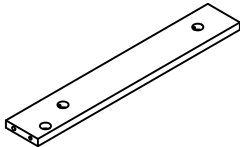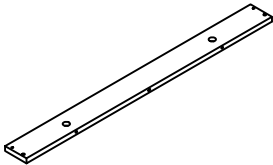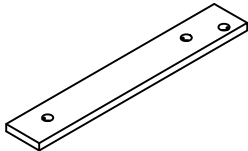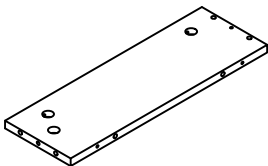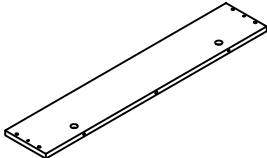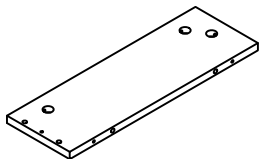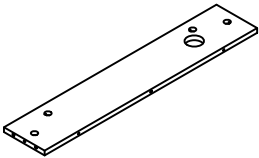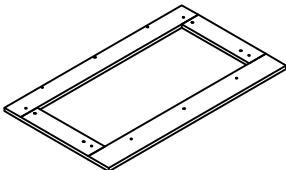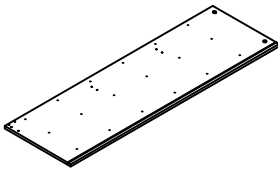
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x1	
⑧		x1	
⑨		x1	
⑩		x1	

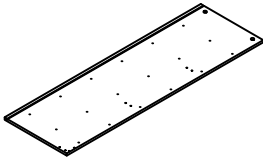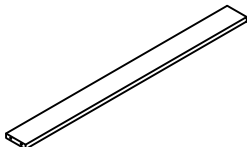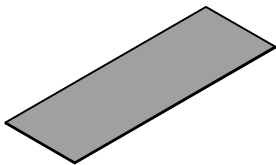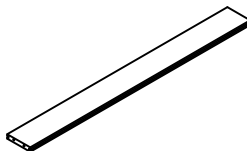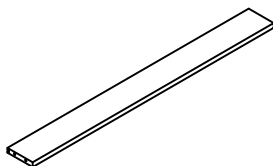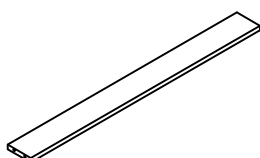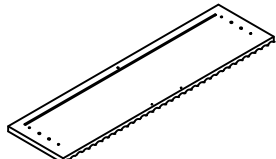
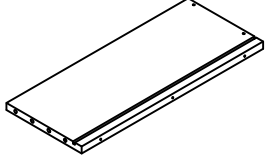
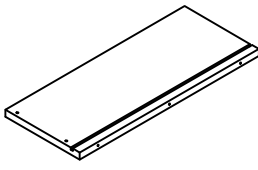
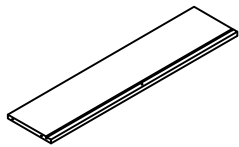
NO.		QTY	SPARE
⑪		x1	
⑫		x2	
⑬		x4	
⑭		x3	
⑮		x1	
⑯		x1	
⑰		x6	
⑱		x6	
⑲		x6	
⑳		x6	

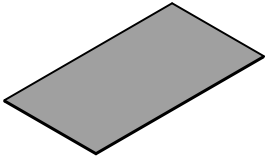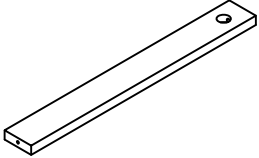NO.	PARTS	QTY	SPARE
②1		x6	
②2		x6	
	 Hardware Kit		

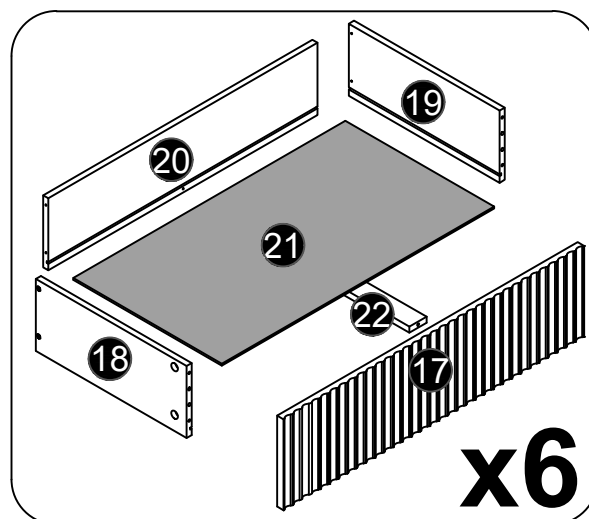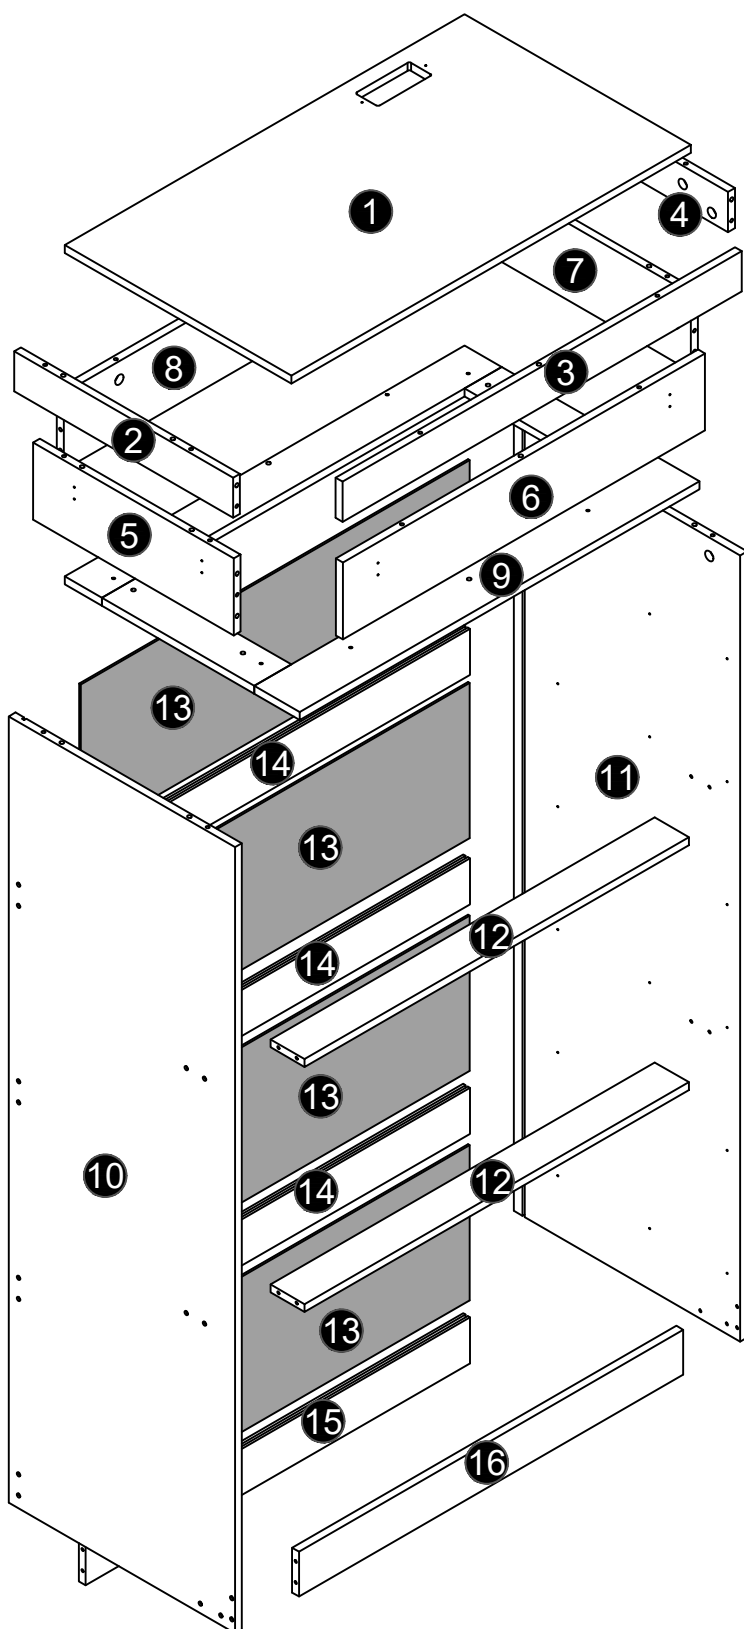


A x54 Ø6x35mm +3(spare)	B x54 Ø15x10mm +3(spare)	C x55 Ø6x30mm +3(spare)	D x32 Ø4x35mm +3(spare)	E x84 Ø3.5x12mm +3(spare)	F x6
G x36 +3(spare)	H x2 H-1 H-2	I x2	J x1	K x5 +1(spare) K-1 K-2	L x1 L-1 L-2
M x32 +2(spare)	N x16 Ø3x16mm +2(spare) N-1 N-2	O x1	P x2	Q x4	R x4 R-1 R-2
S x2					
CL x6 L330mm	CR x6 L330mm	DL x6 L330mm	DR x6 L330mm		

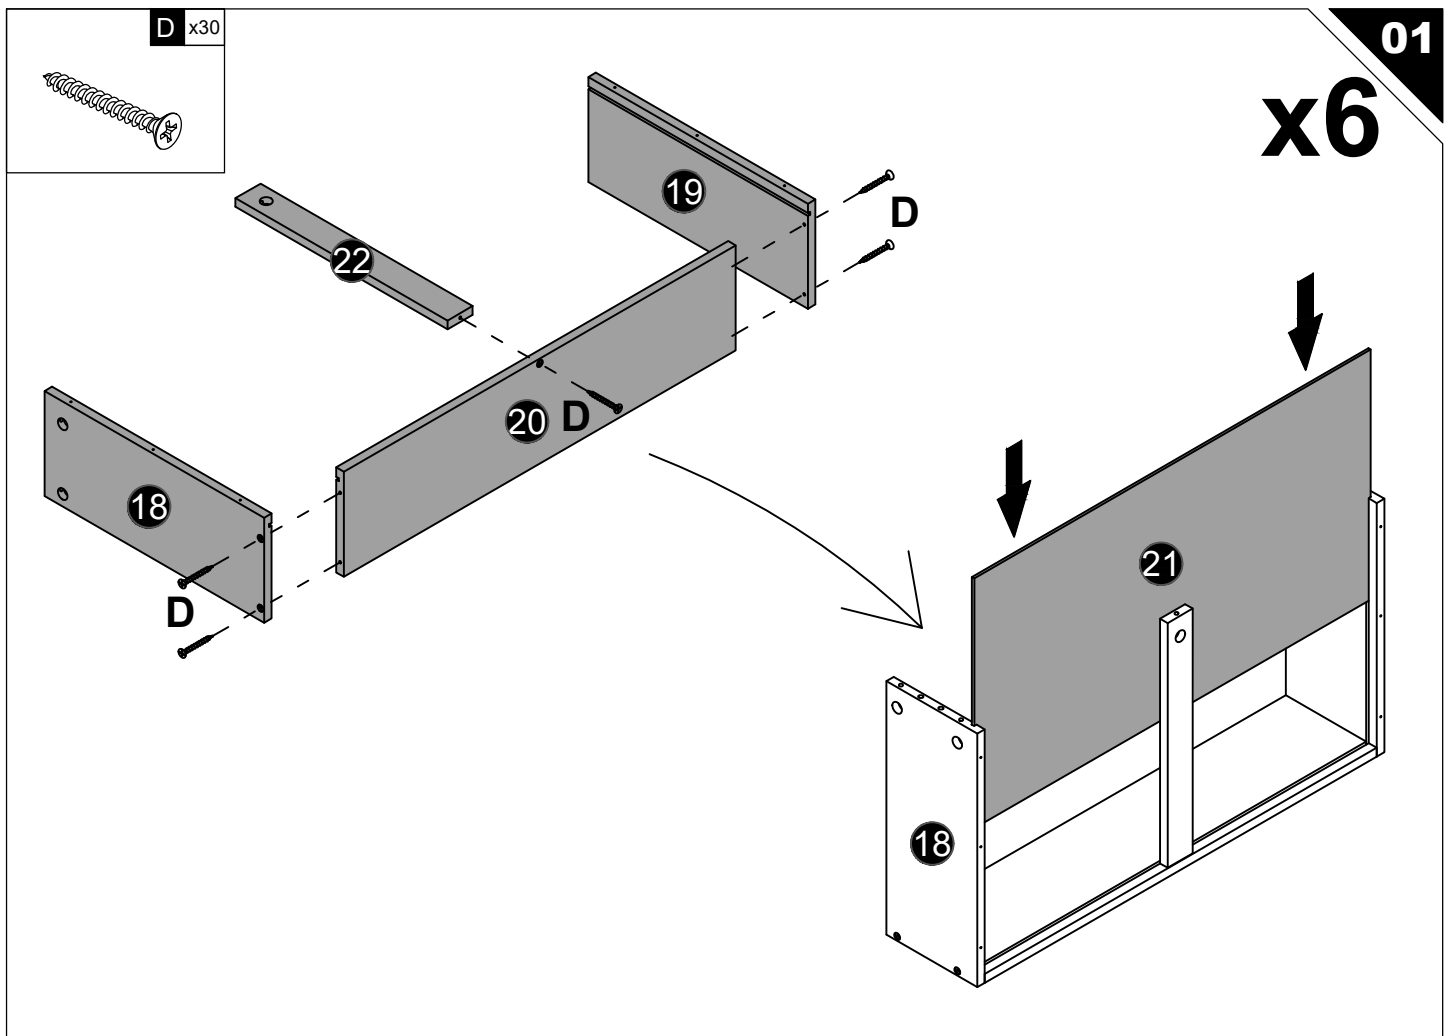

A x30 	B x30 	C x24 	E x48 	F x6 
DL x6 	DR x6 			

02
x6

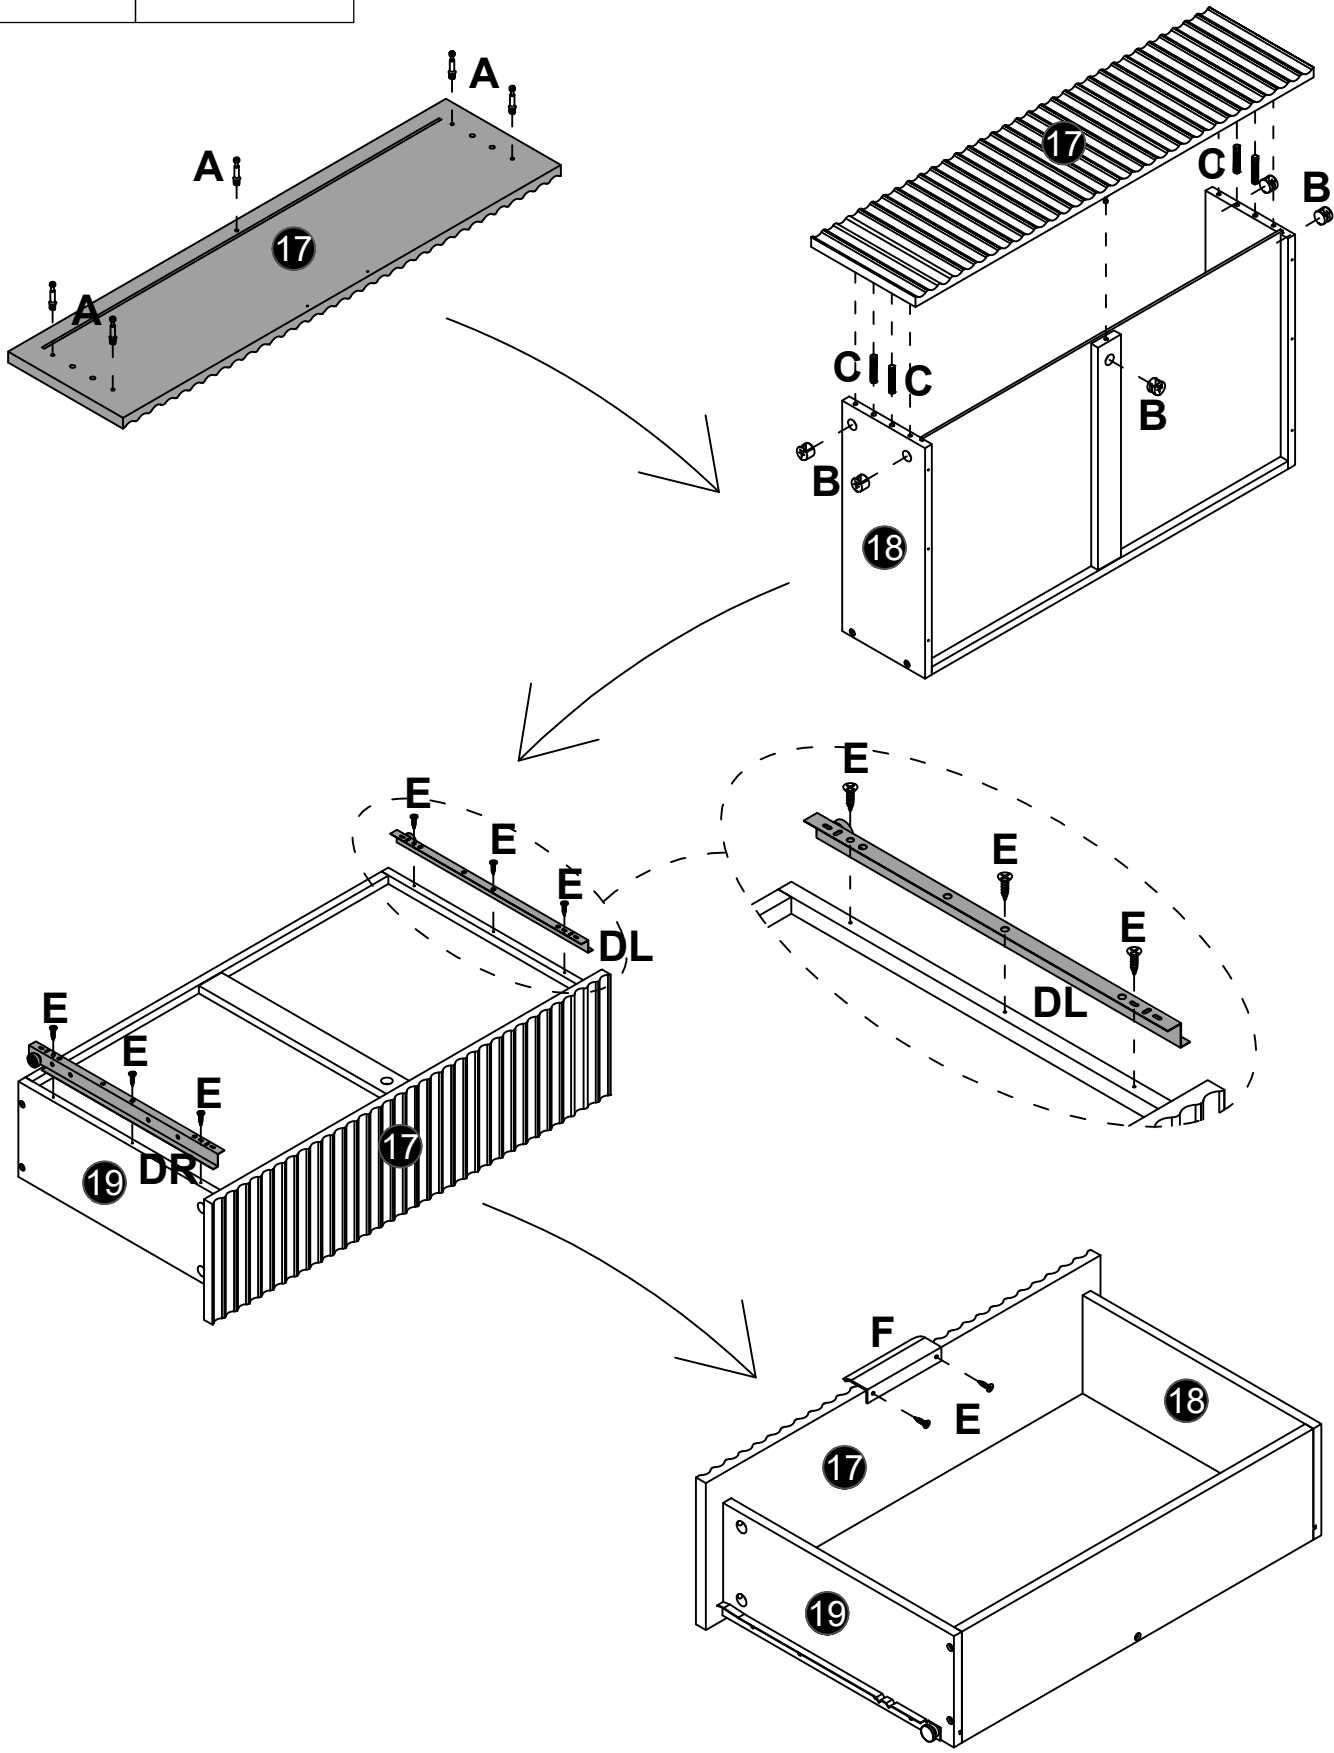


E x18

CL x6



Notice

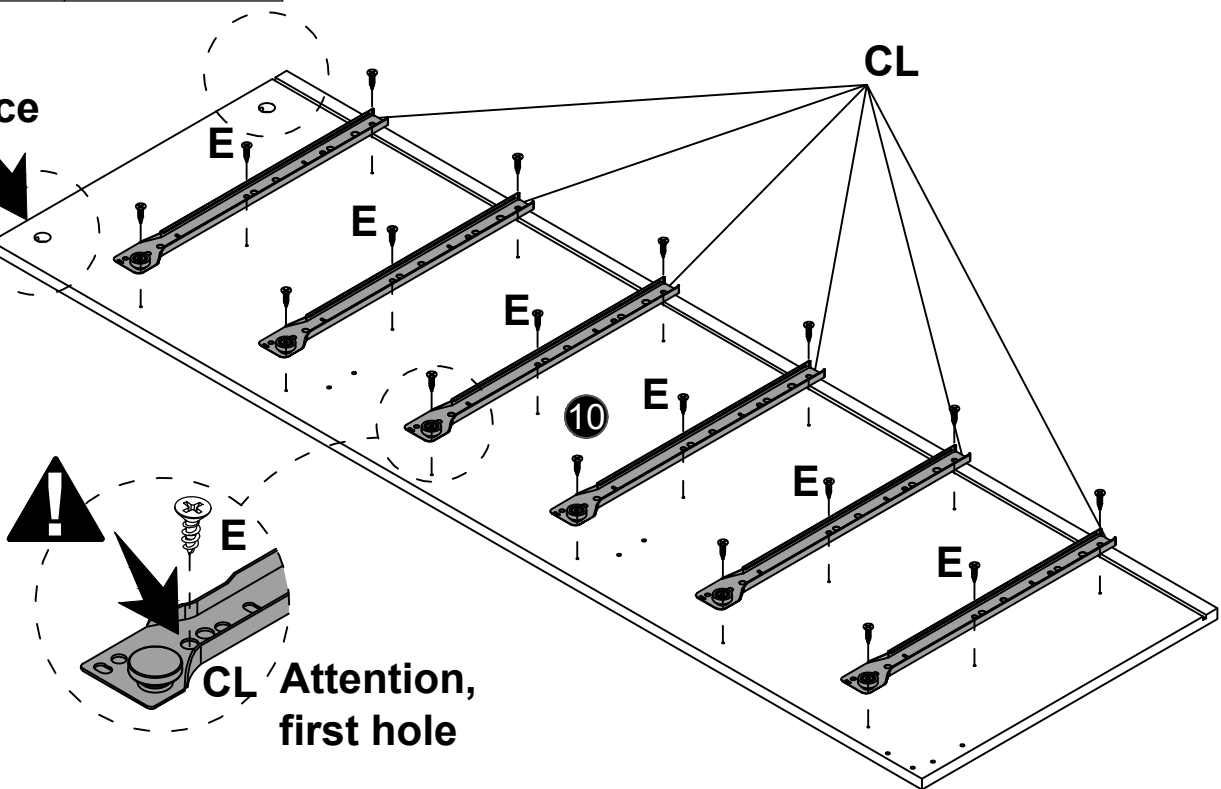


E x18

CR x6




Notice


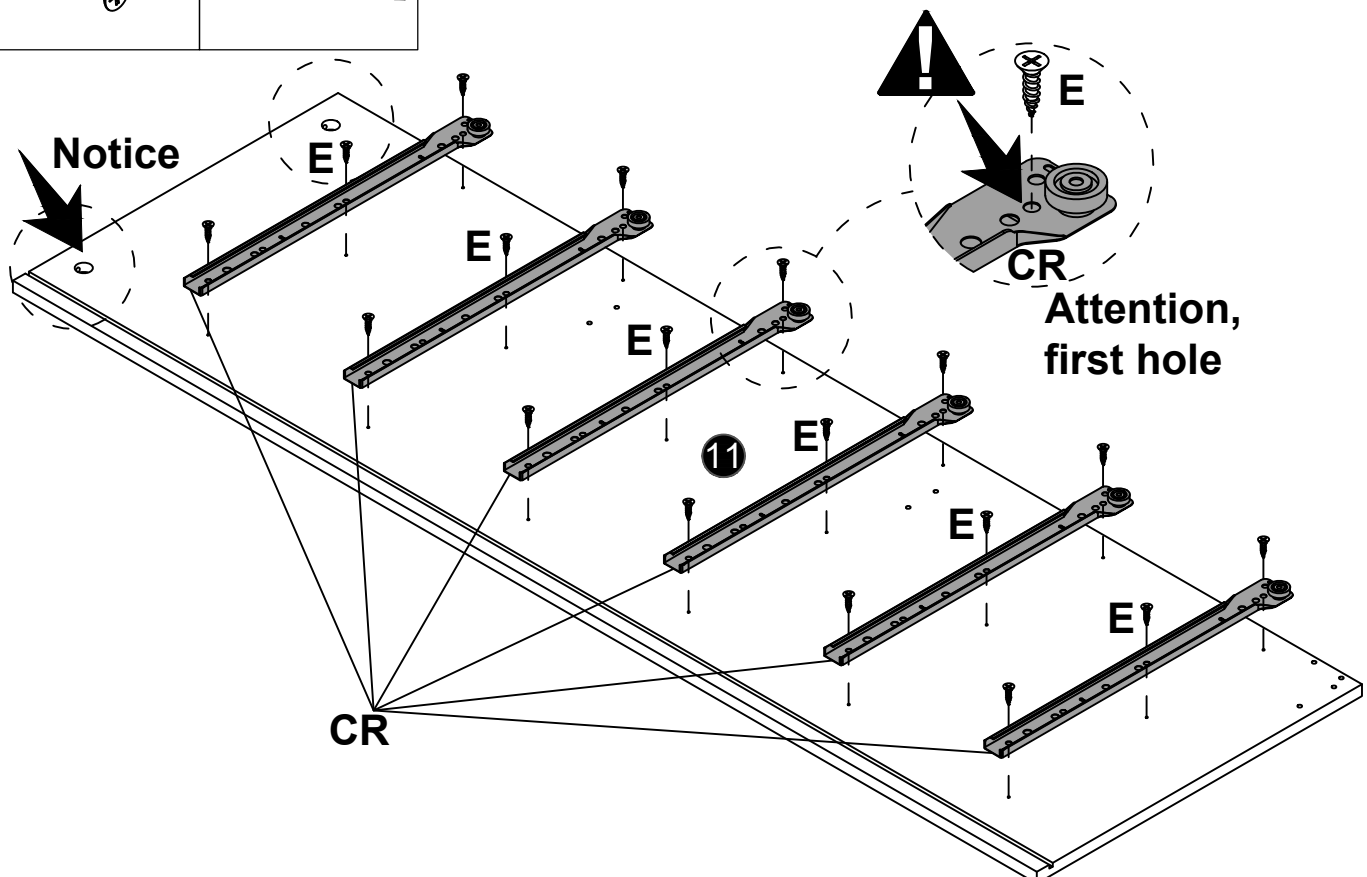


05


G x14





Notice

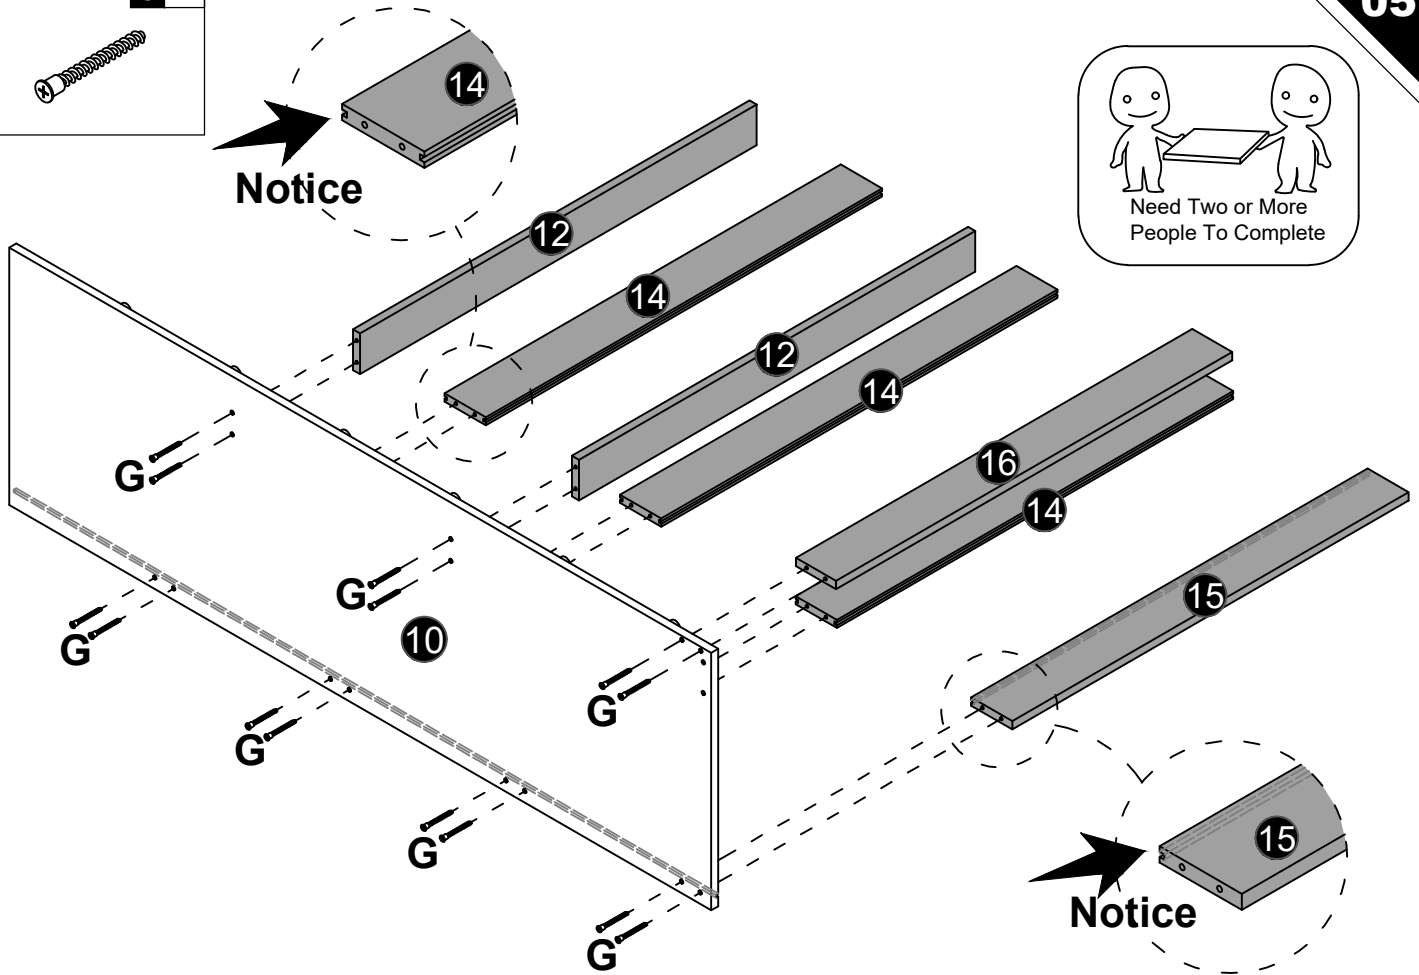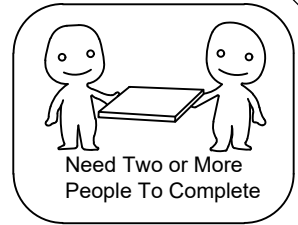


06


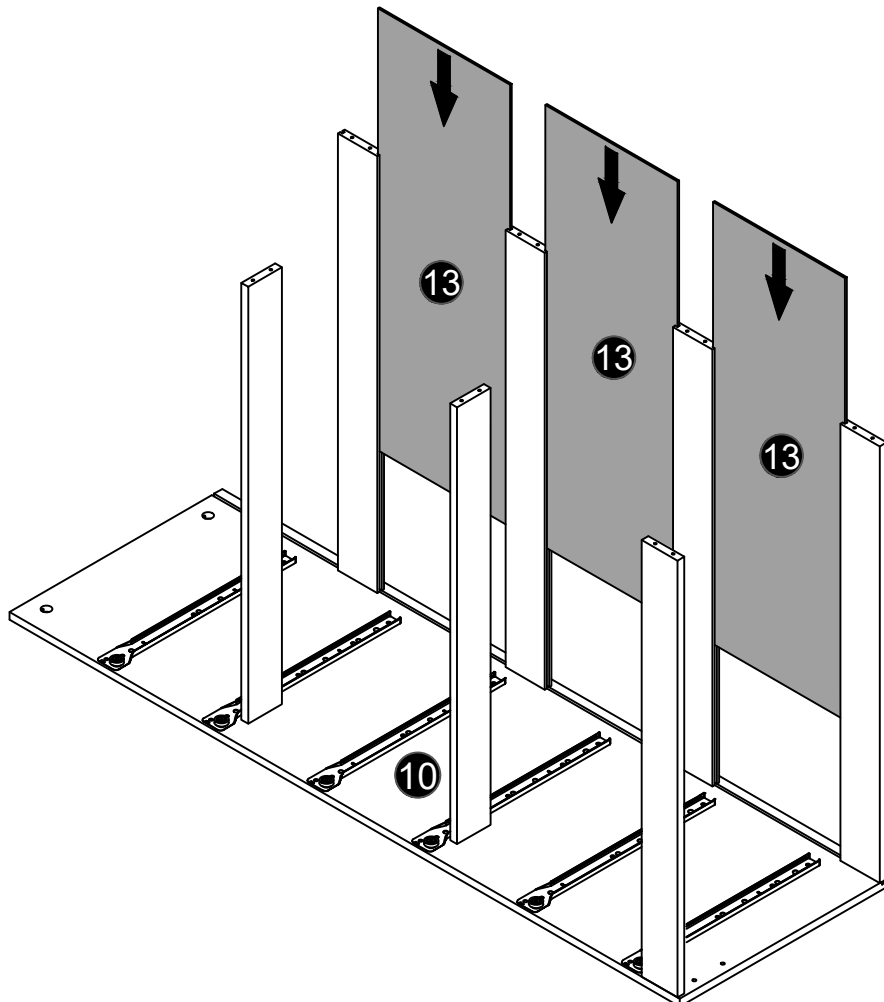


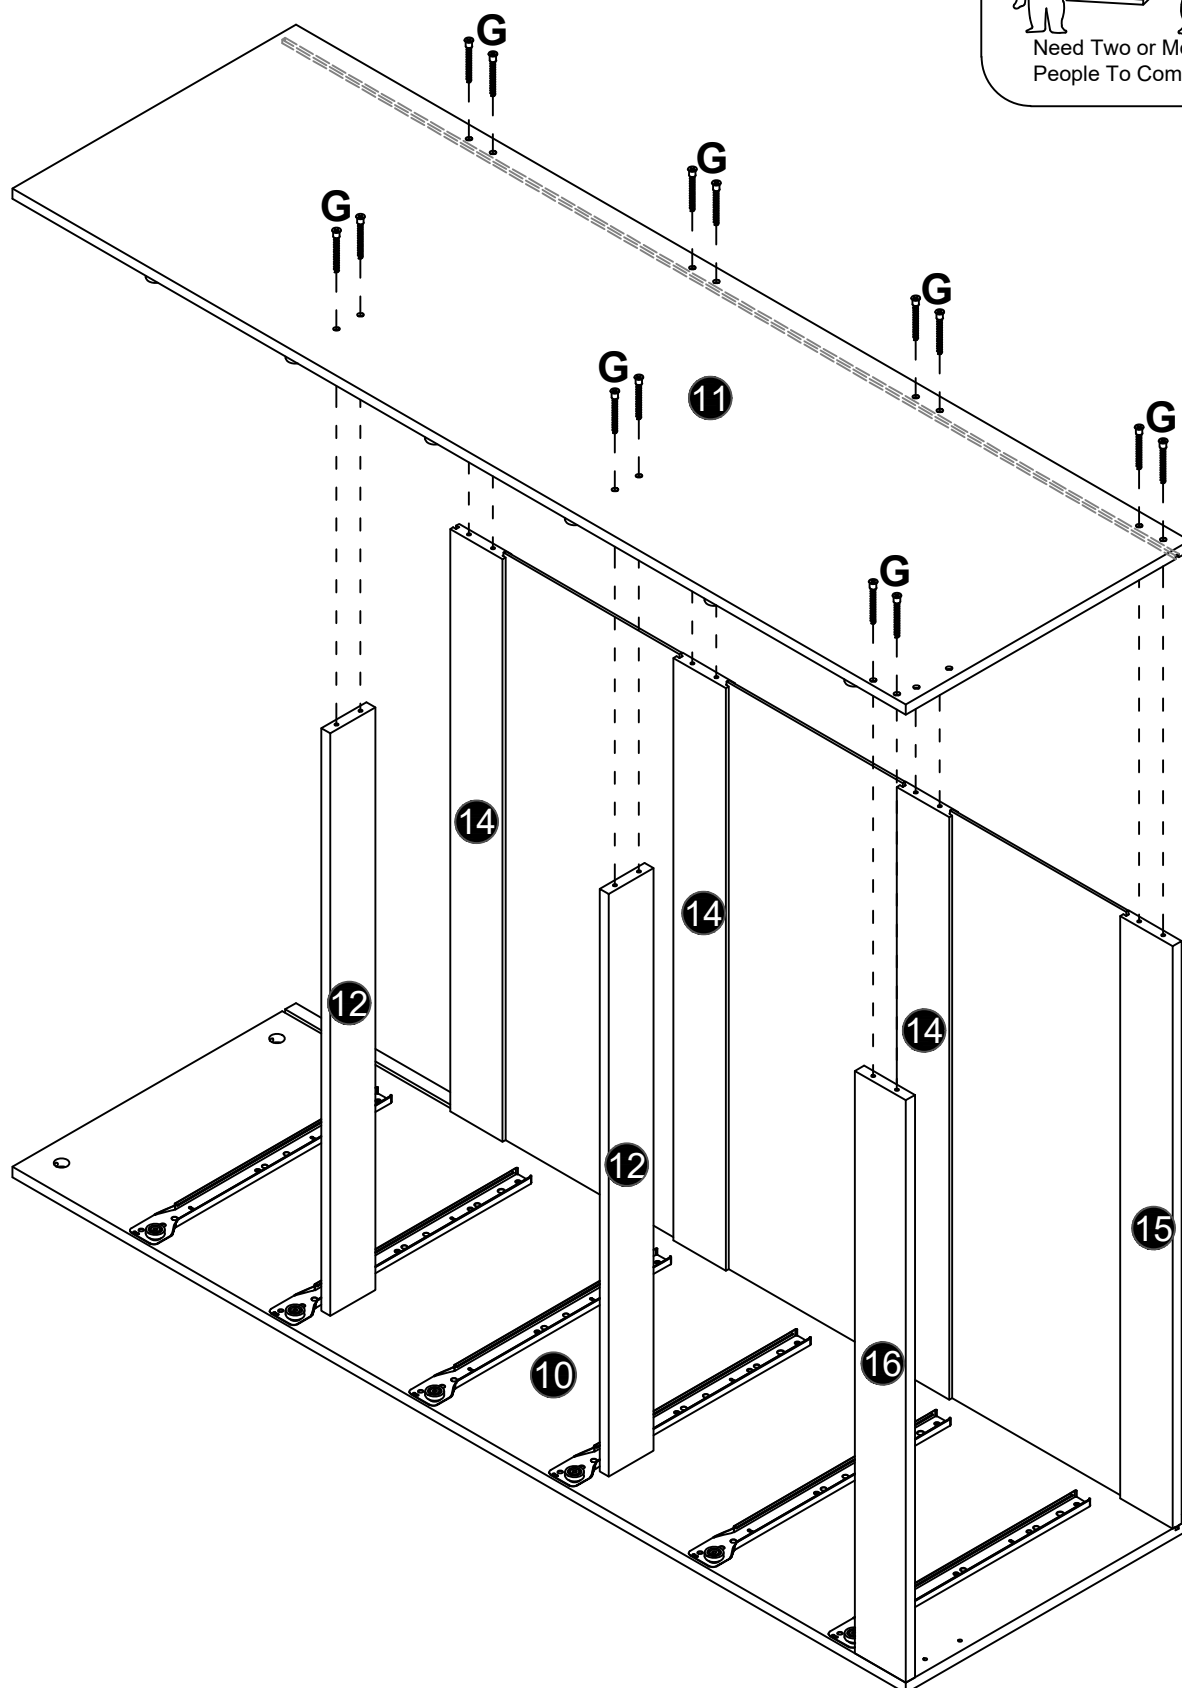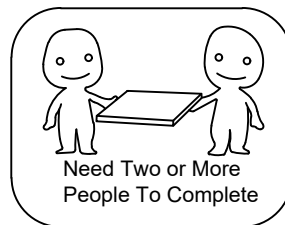

First align the holes, then install the screws; otherwise, it may cause damage to the product.

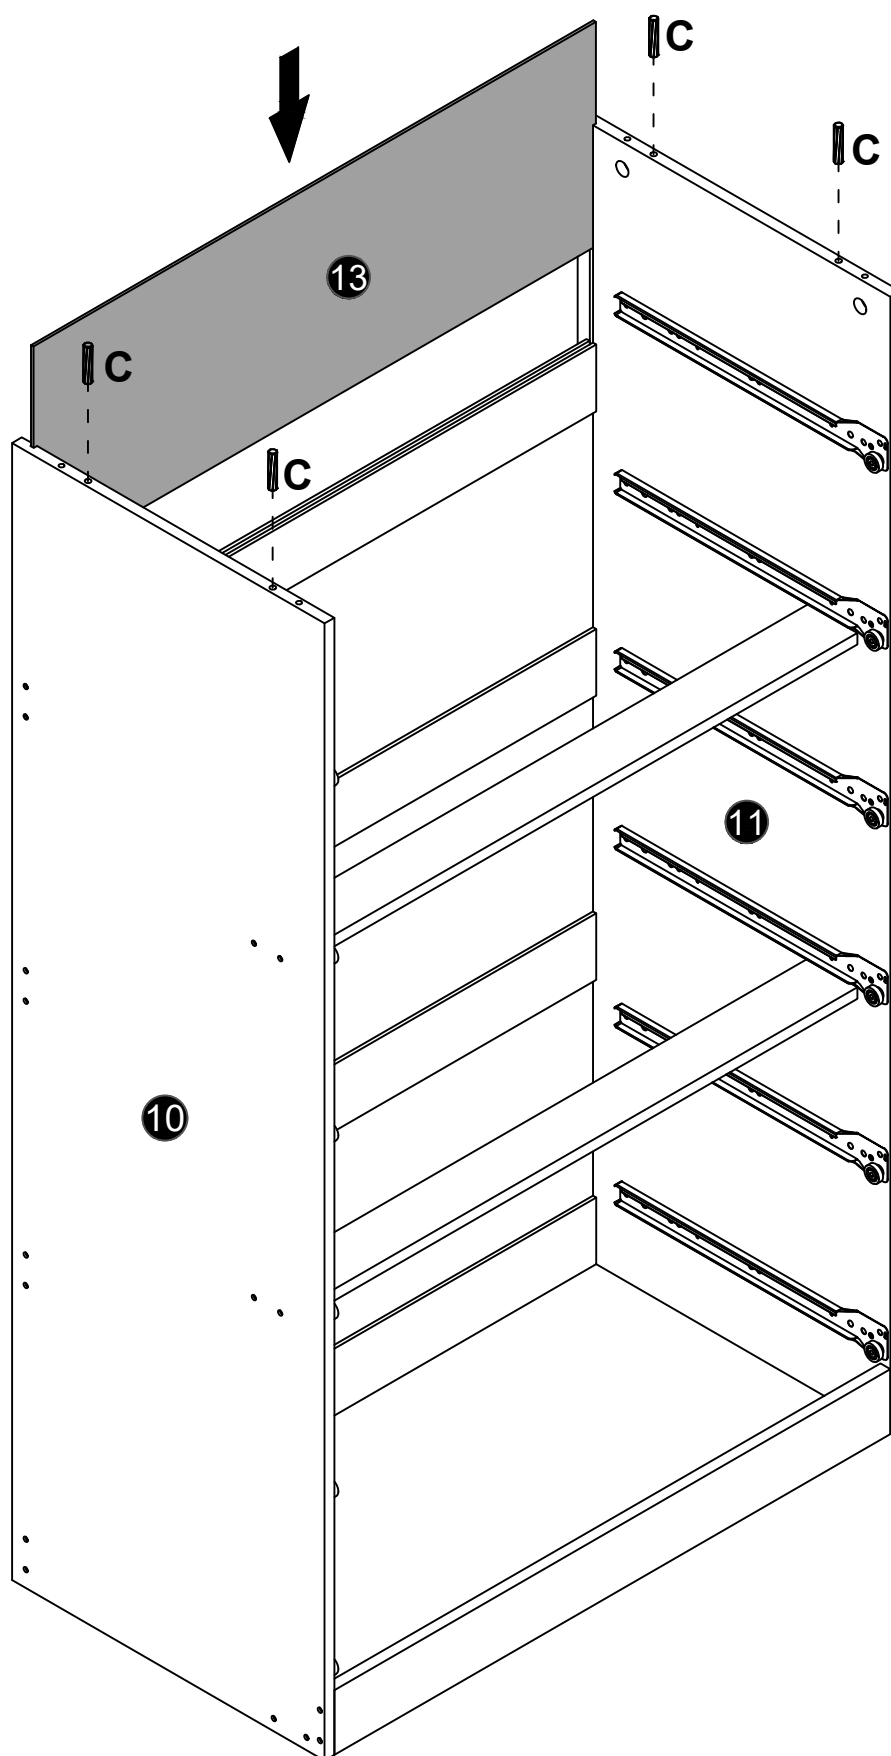


A x2

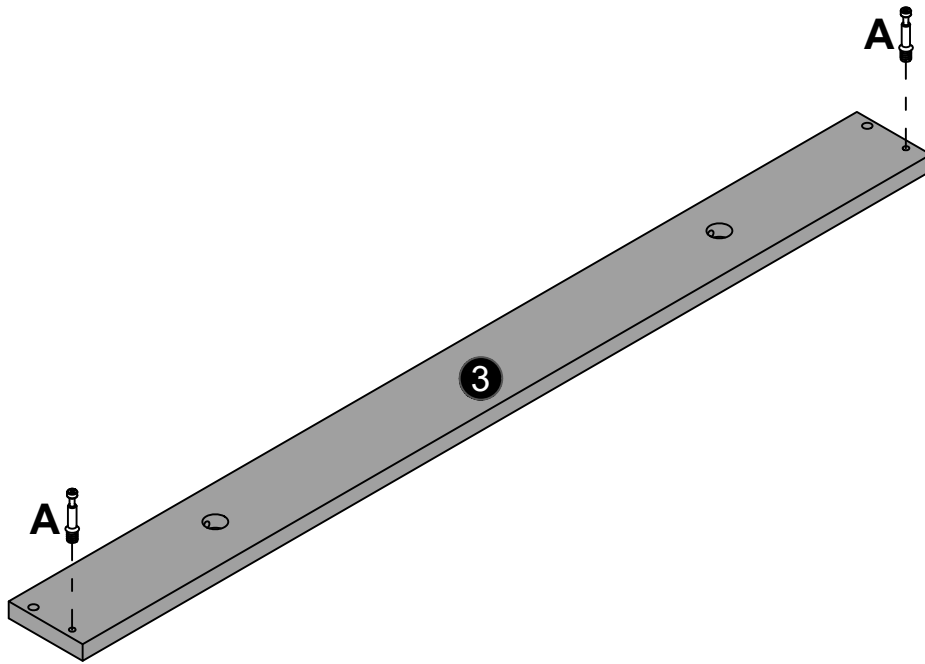



B x2



C x2

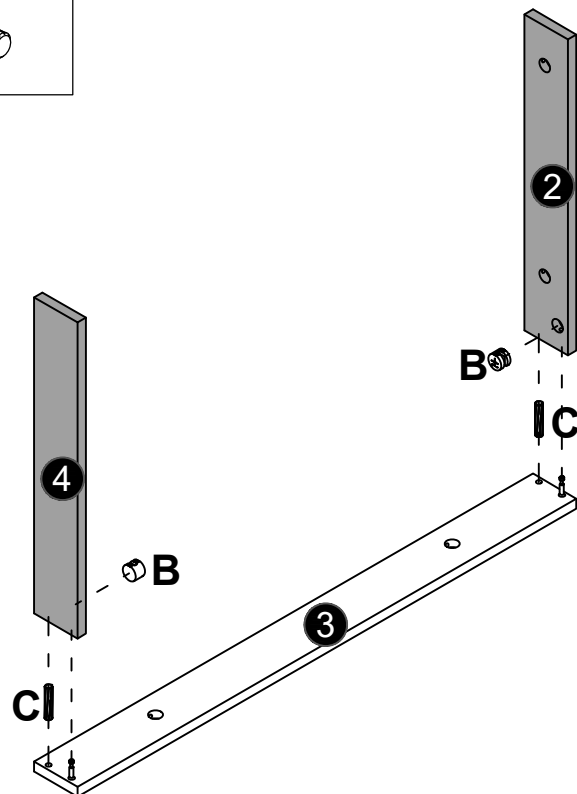


A x6

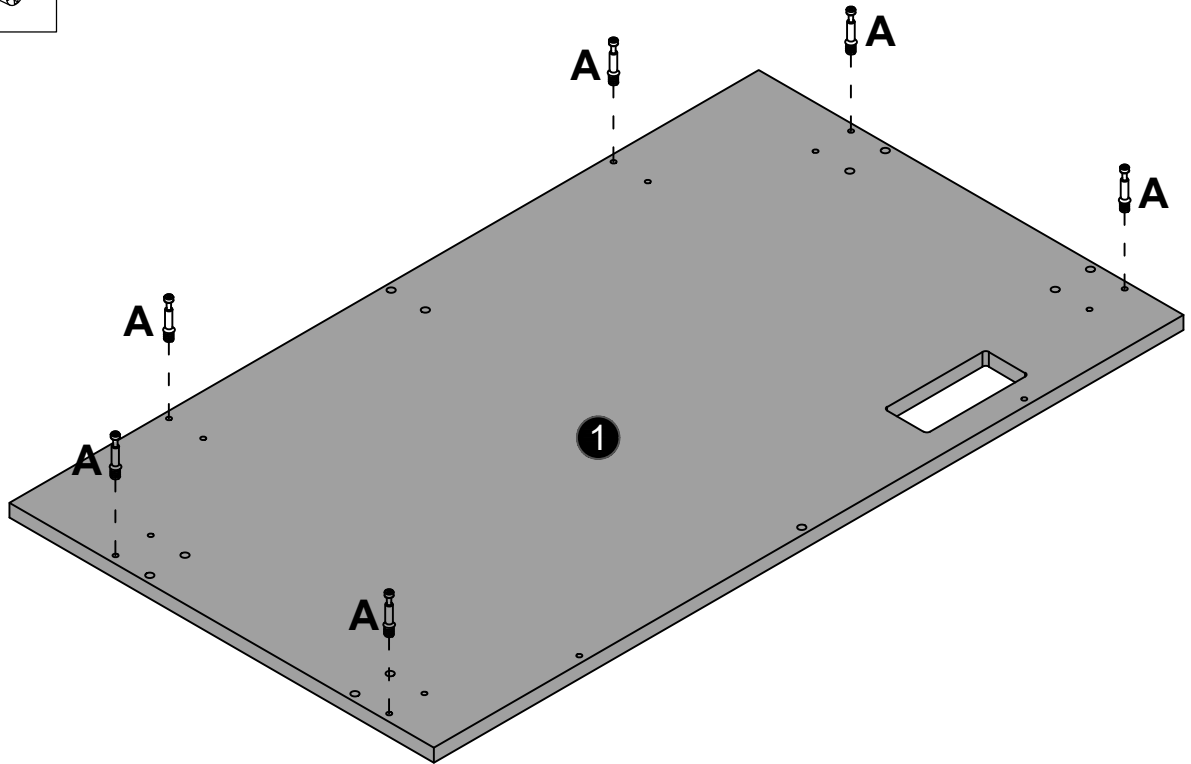

B x6





C x5

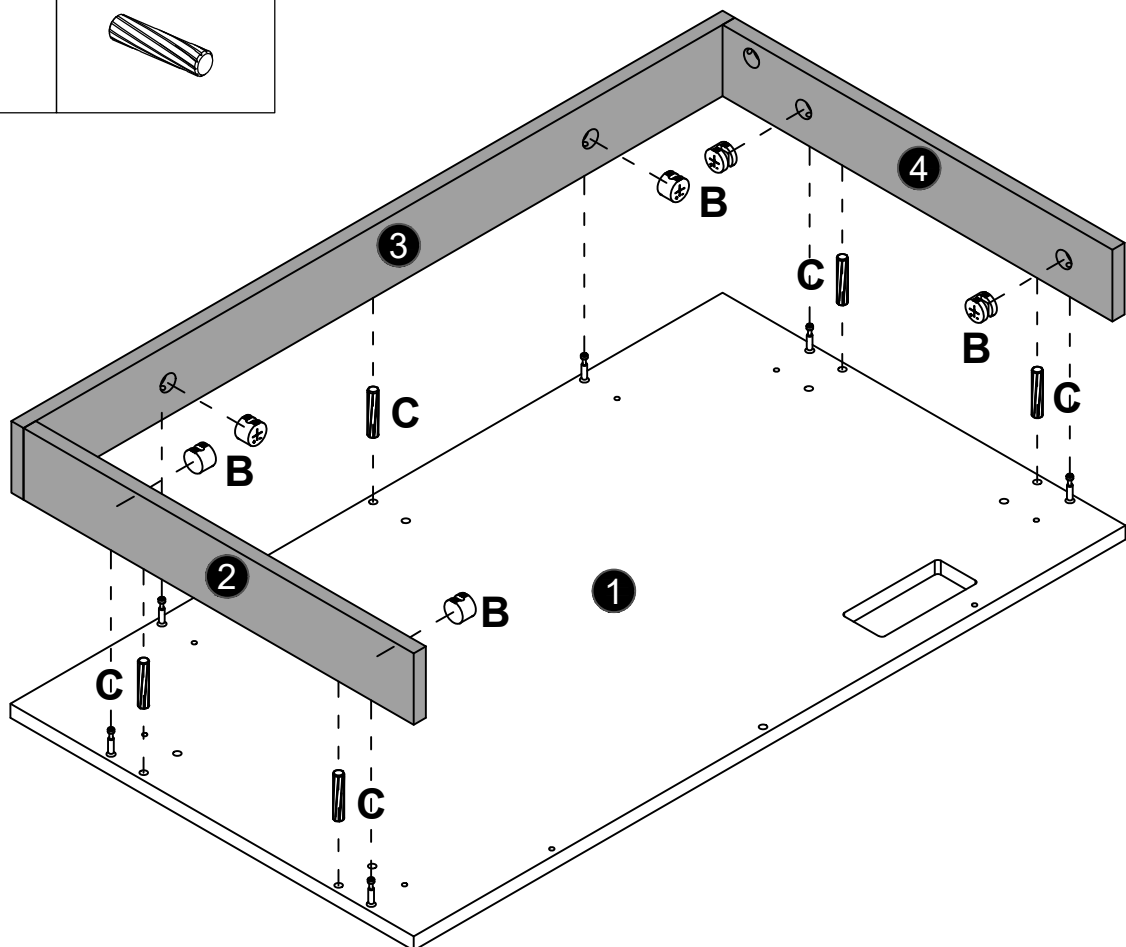



13

A x8

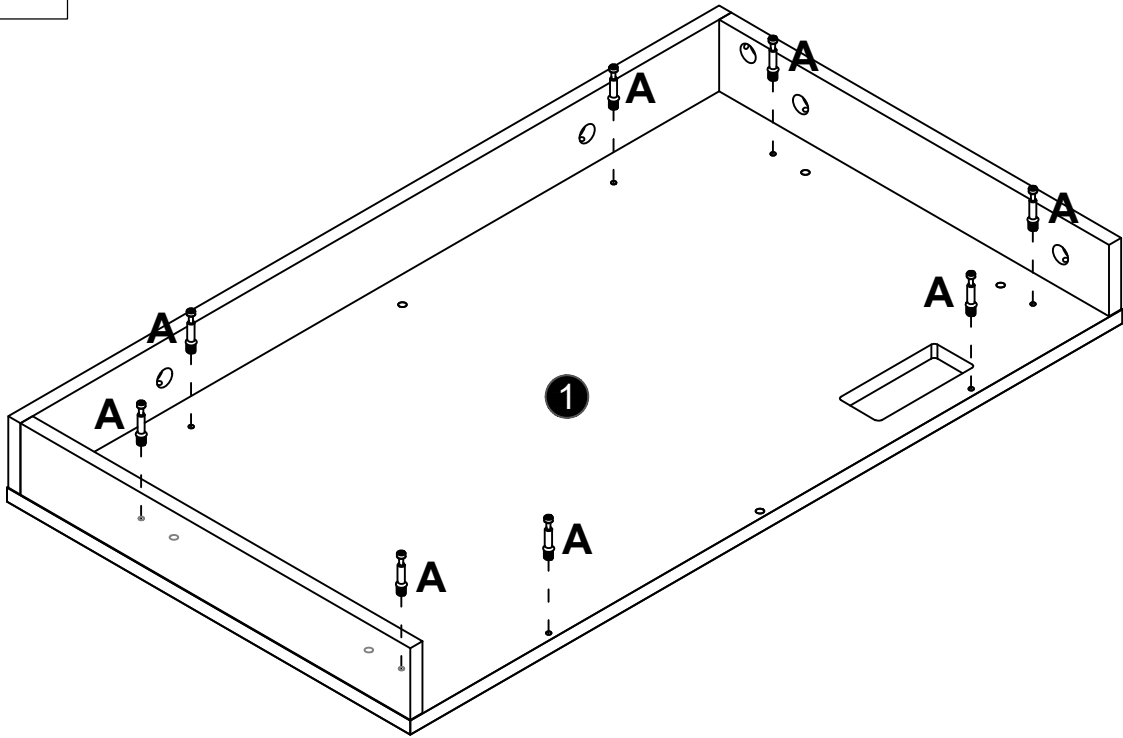

14


A x4

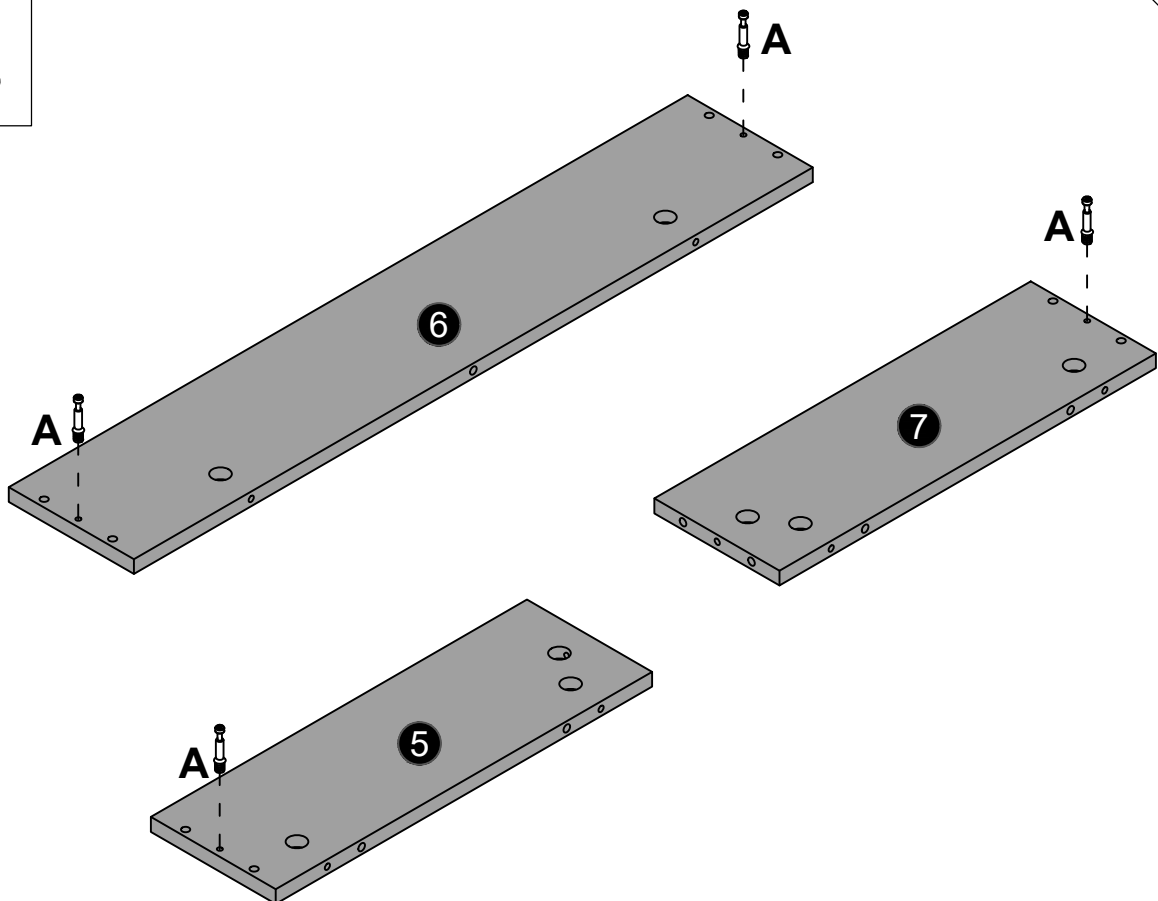

B x2




C x4

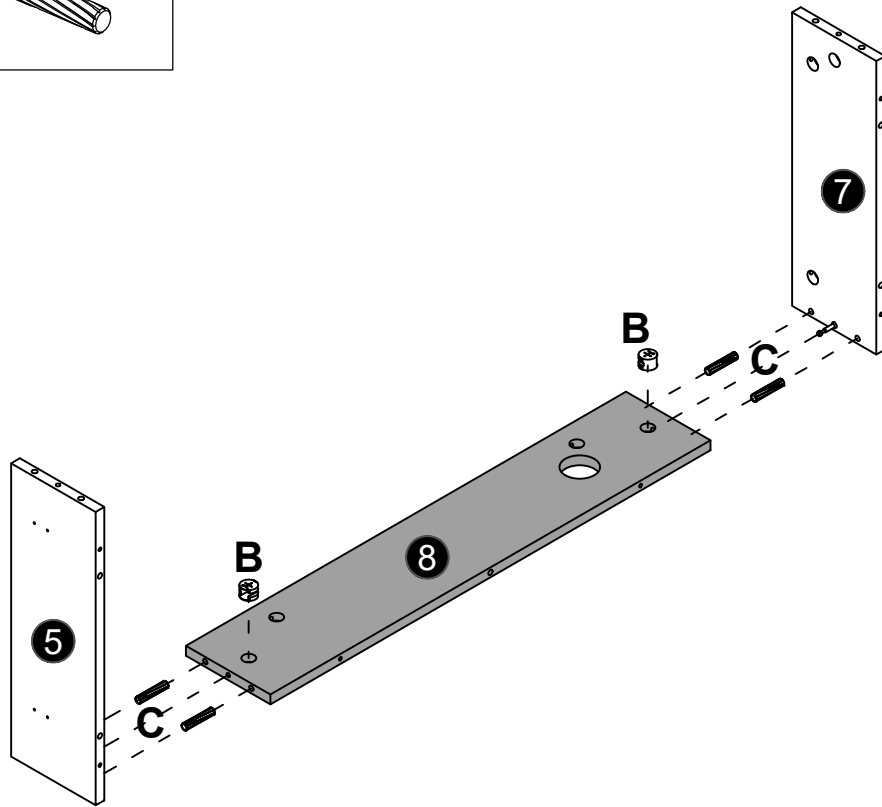


B x2







C x4

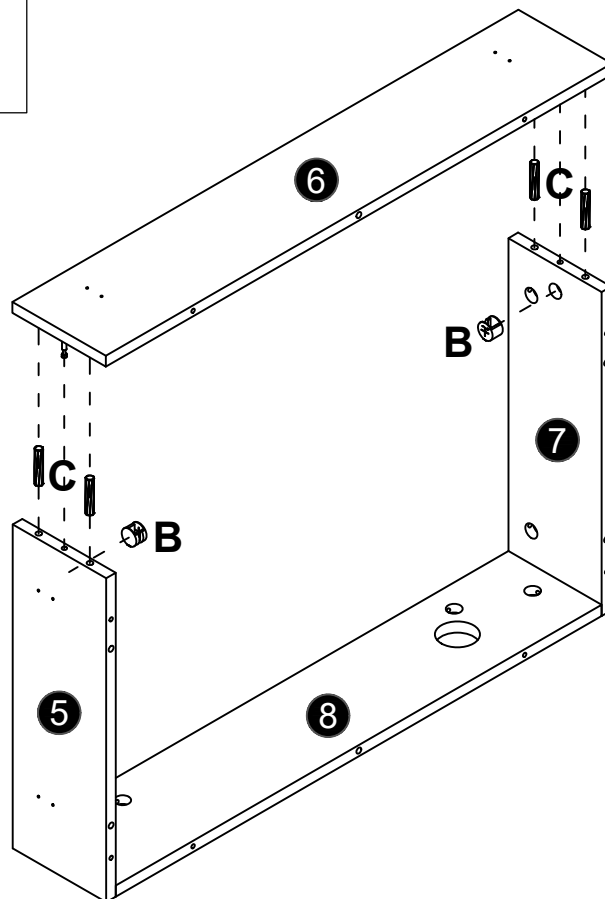

J x1

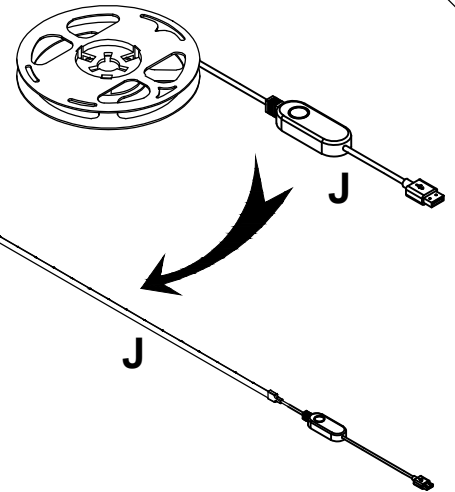

Before installing the light strip, use K to compare the installation path to avoid deviation.

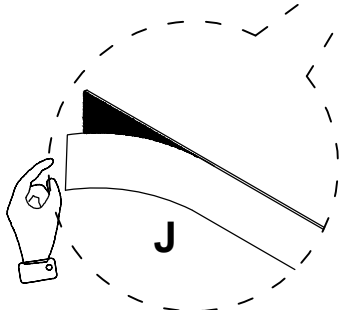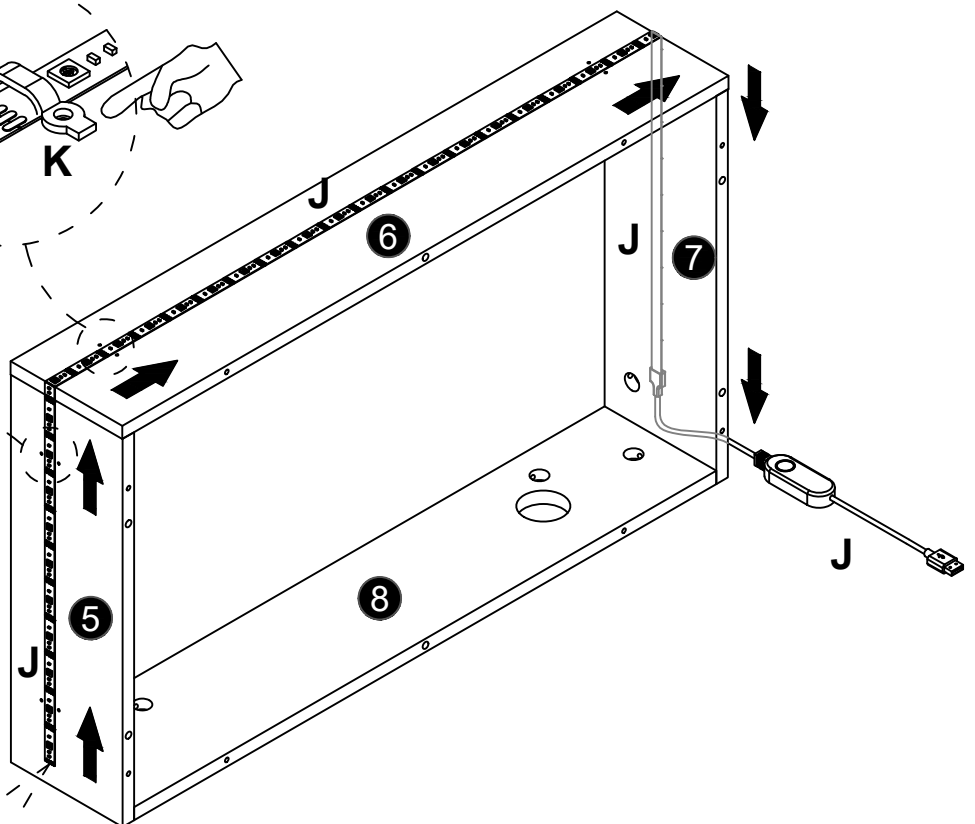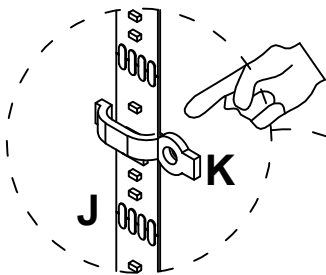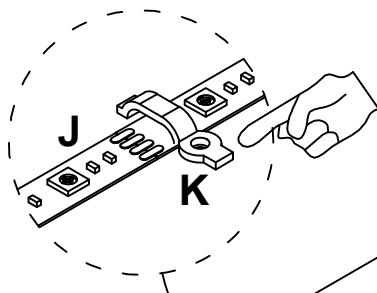

After comparing the installation path, peel off the backing paper slowly. It is recommended to peel along the path while installing the light strip, rather than removing it all at once, to prevent dust from sticking to the light strip, which may cause the adhesive to fail.

K x5

L x1



K-1




K-2



L-1




L-2

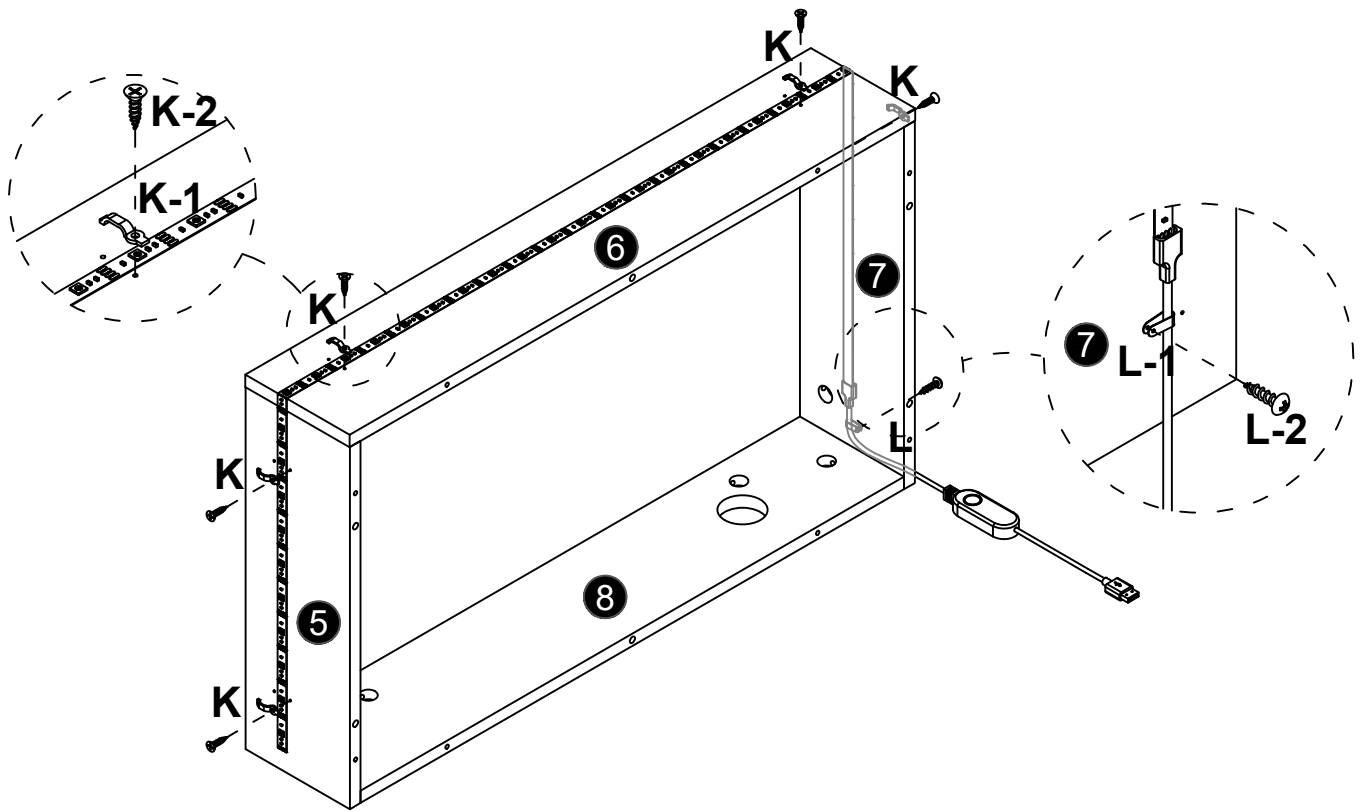




B x8

C x6


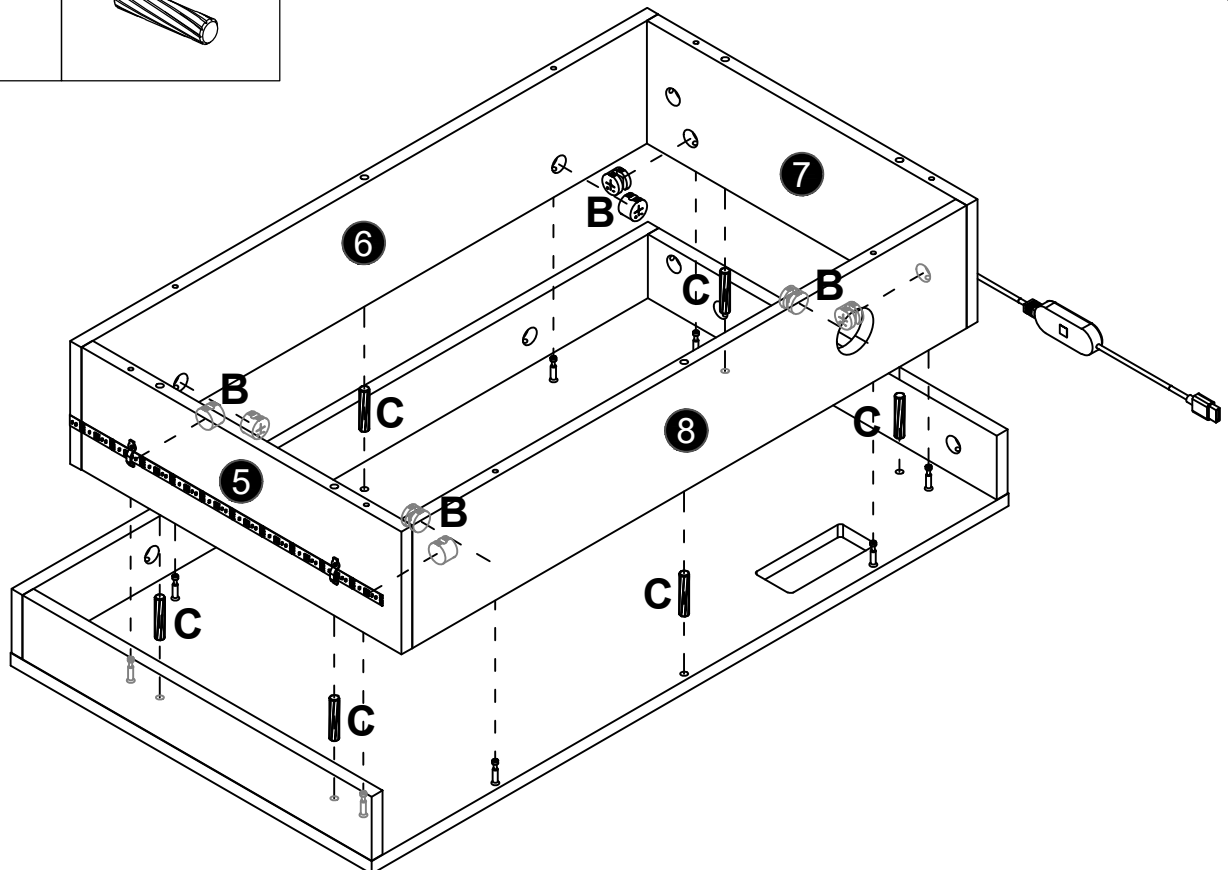




C x6



G x8

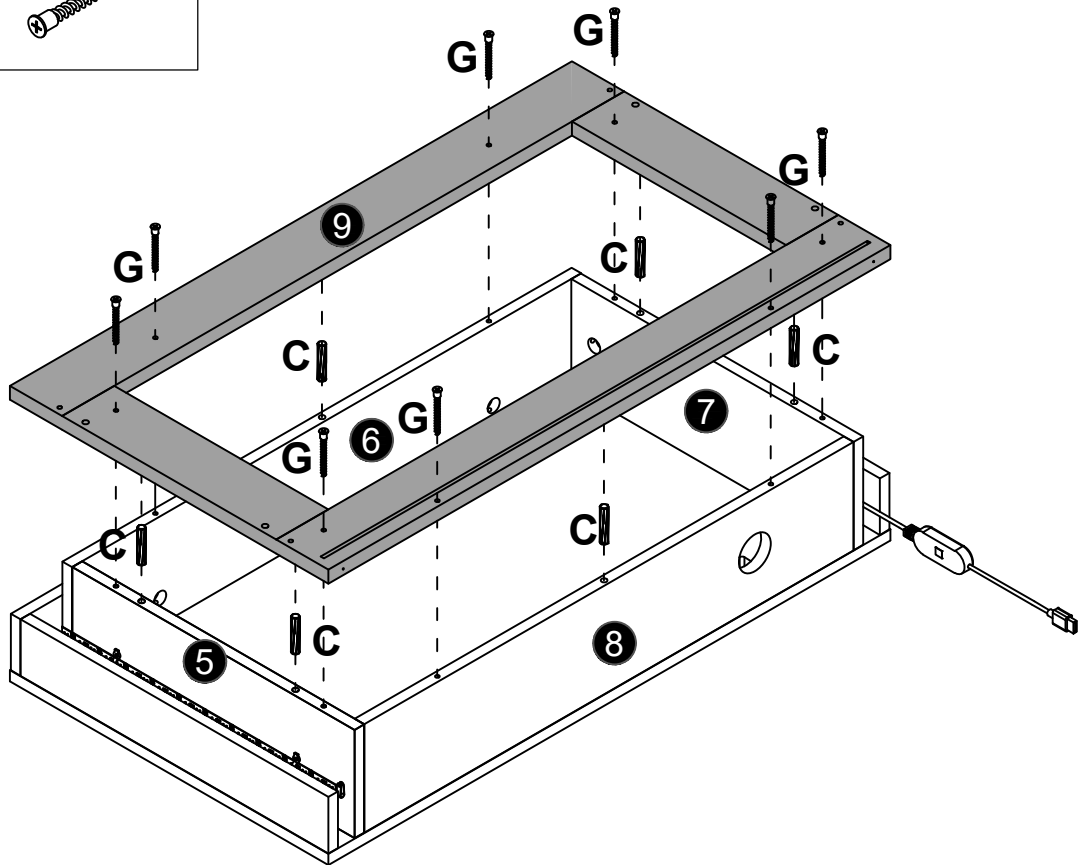


A x4

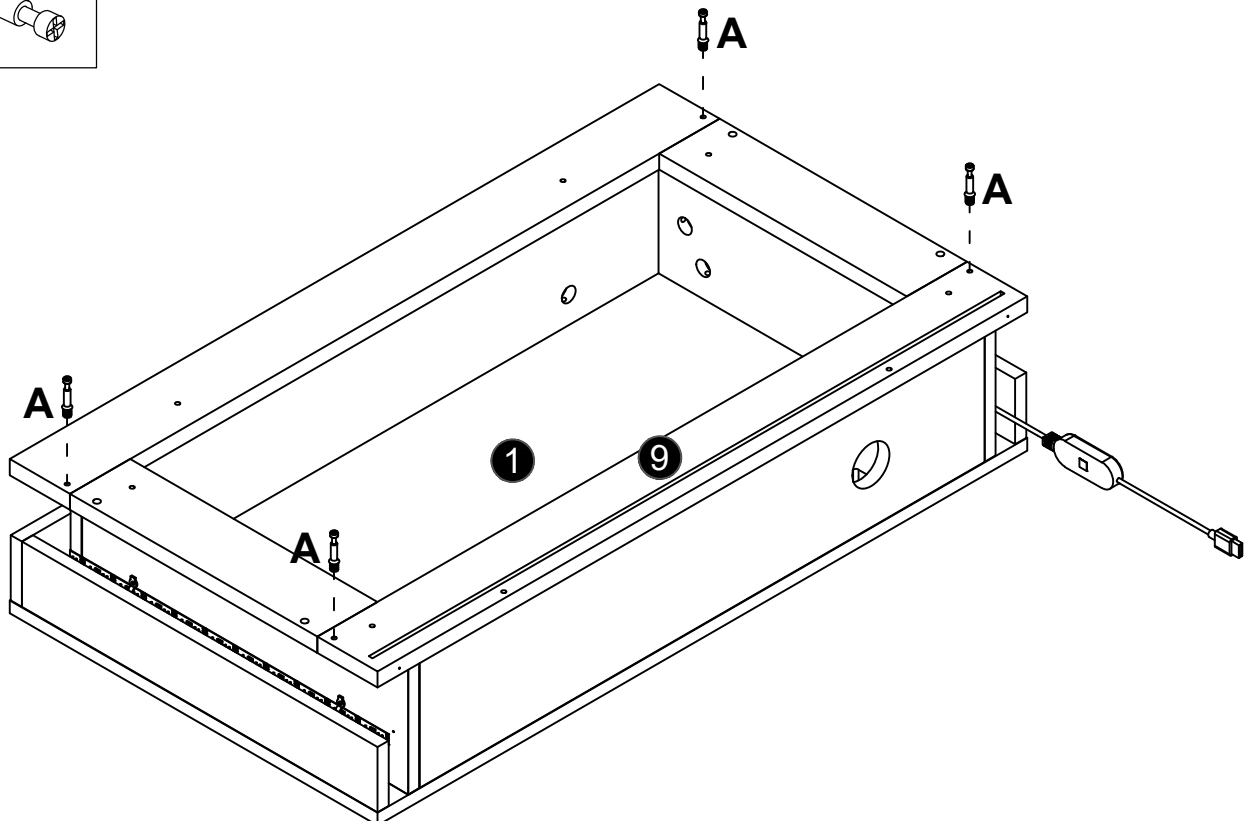

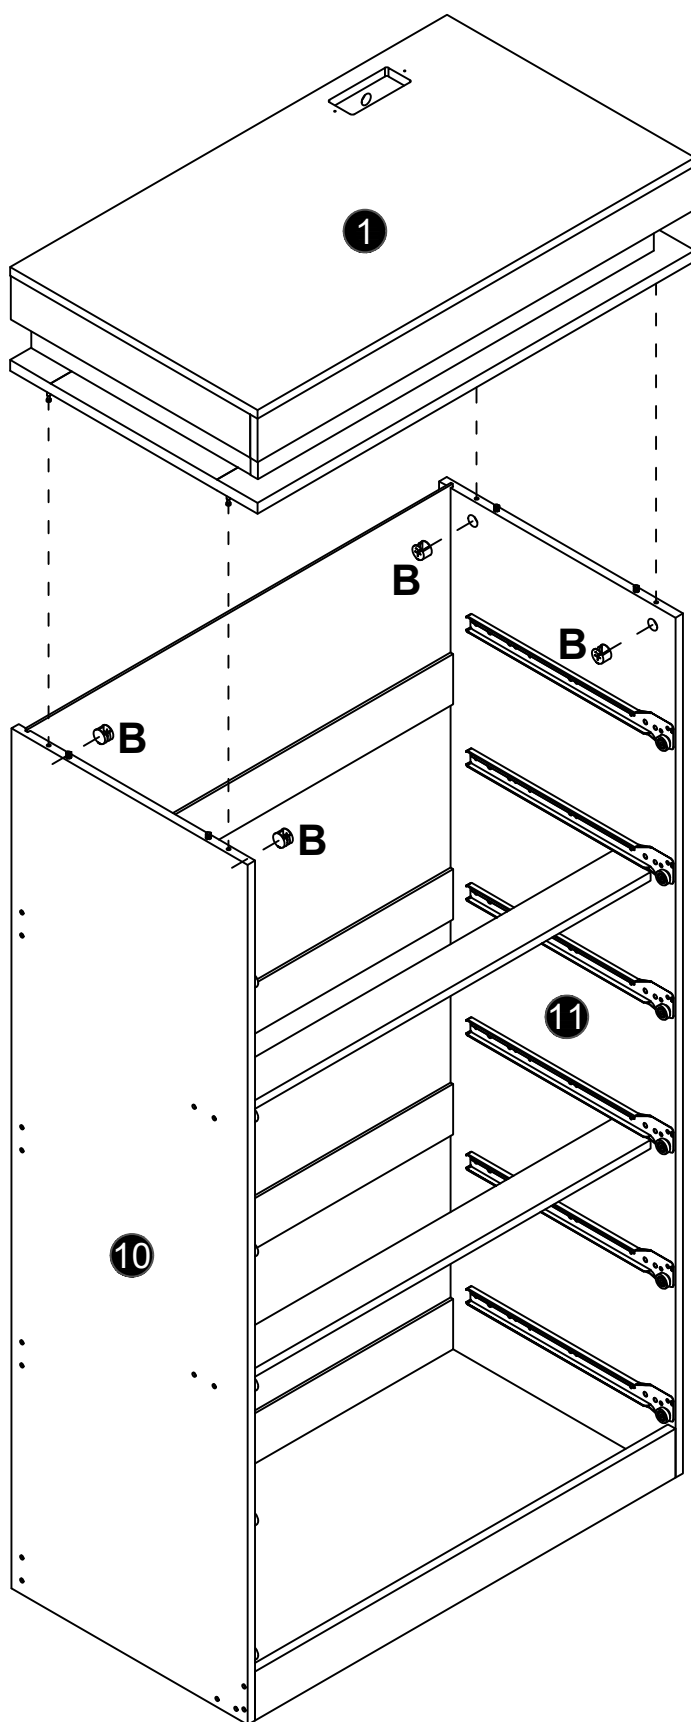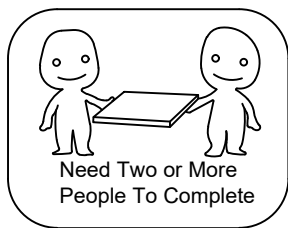


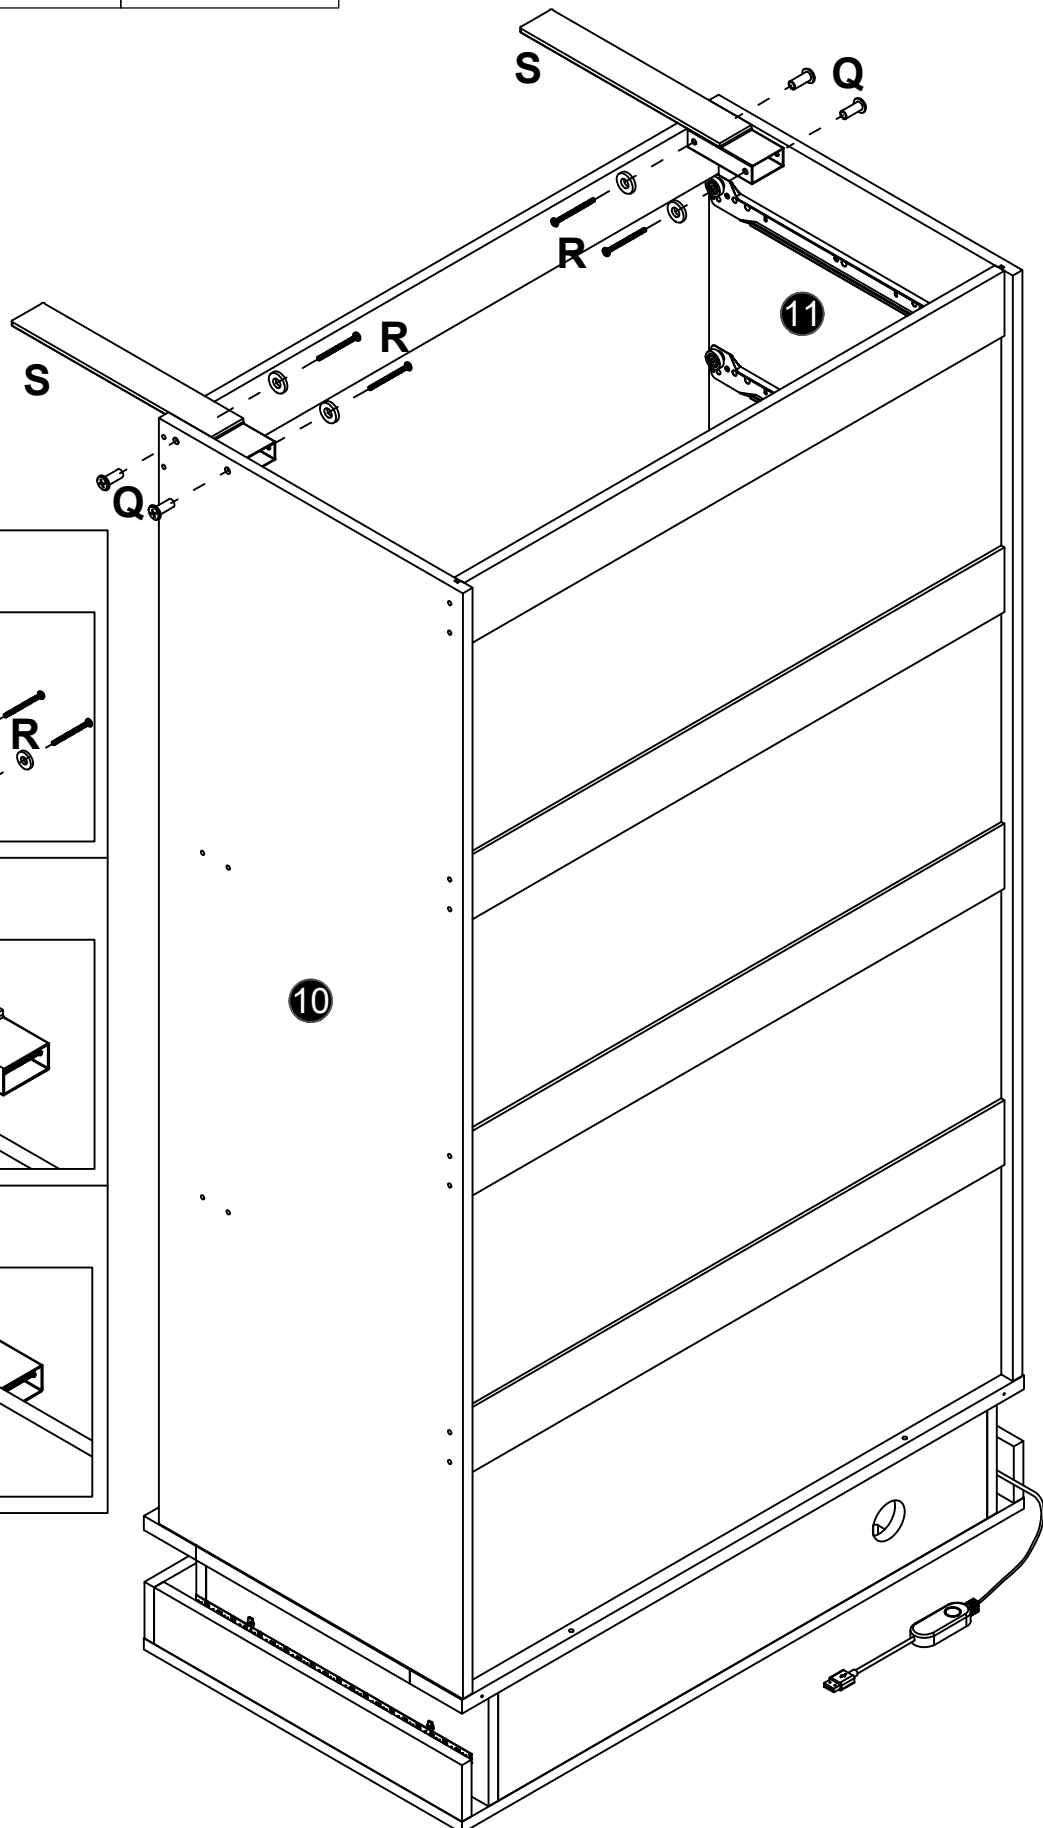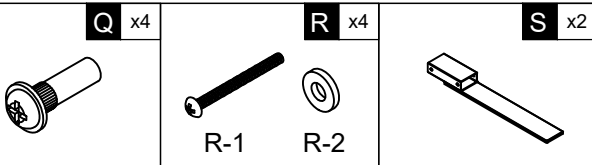


(1)

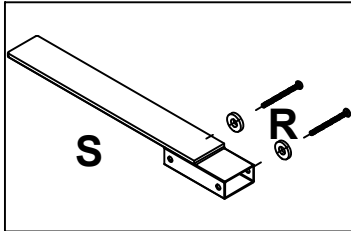

(2)

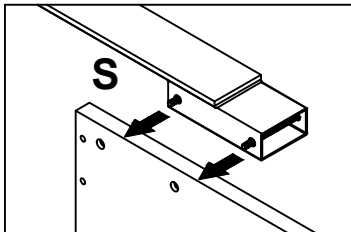


(3)

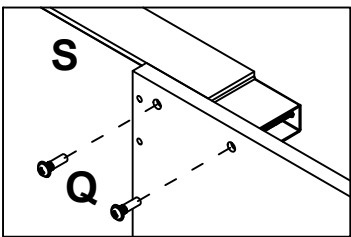

O x1



P x2

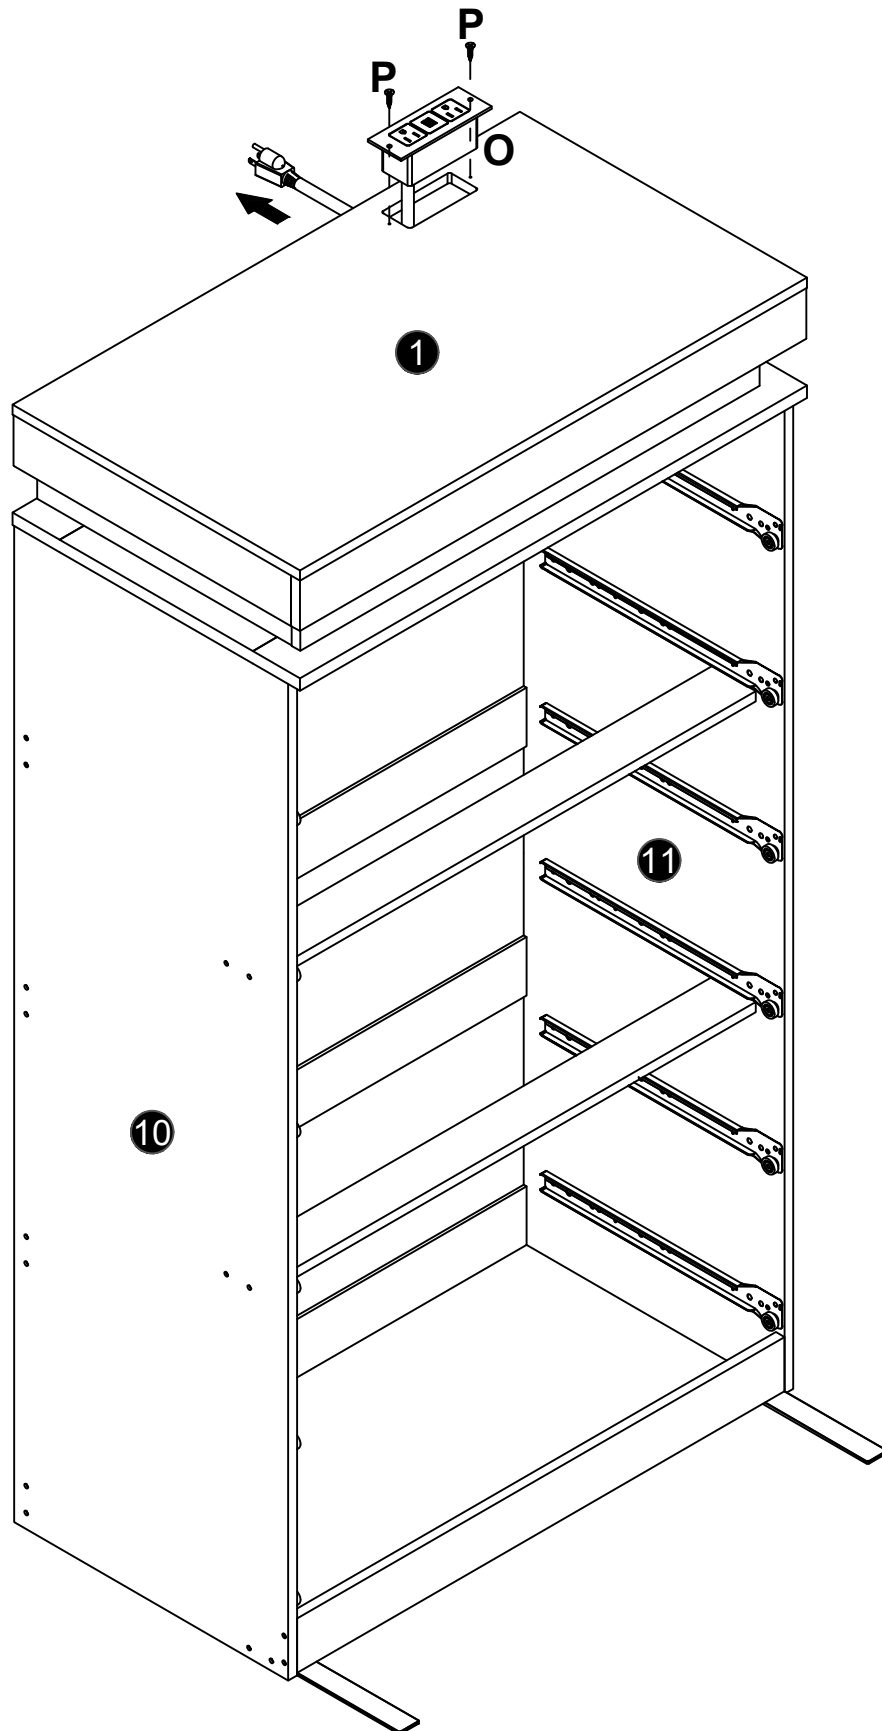

M x32


N x16





N-1




N-2

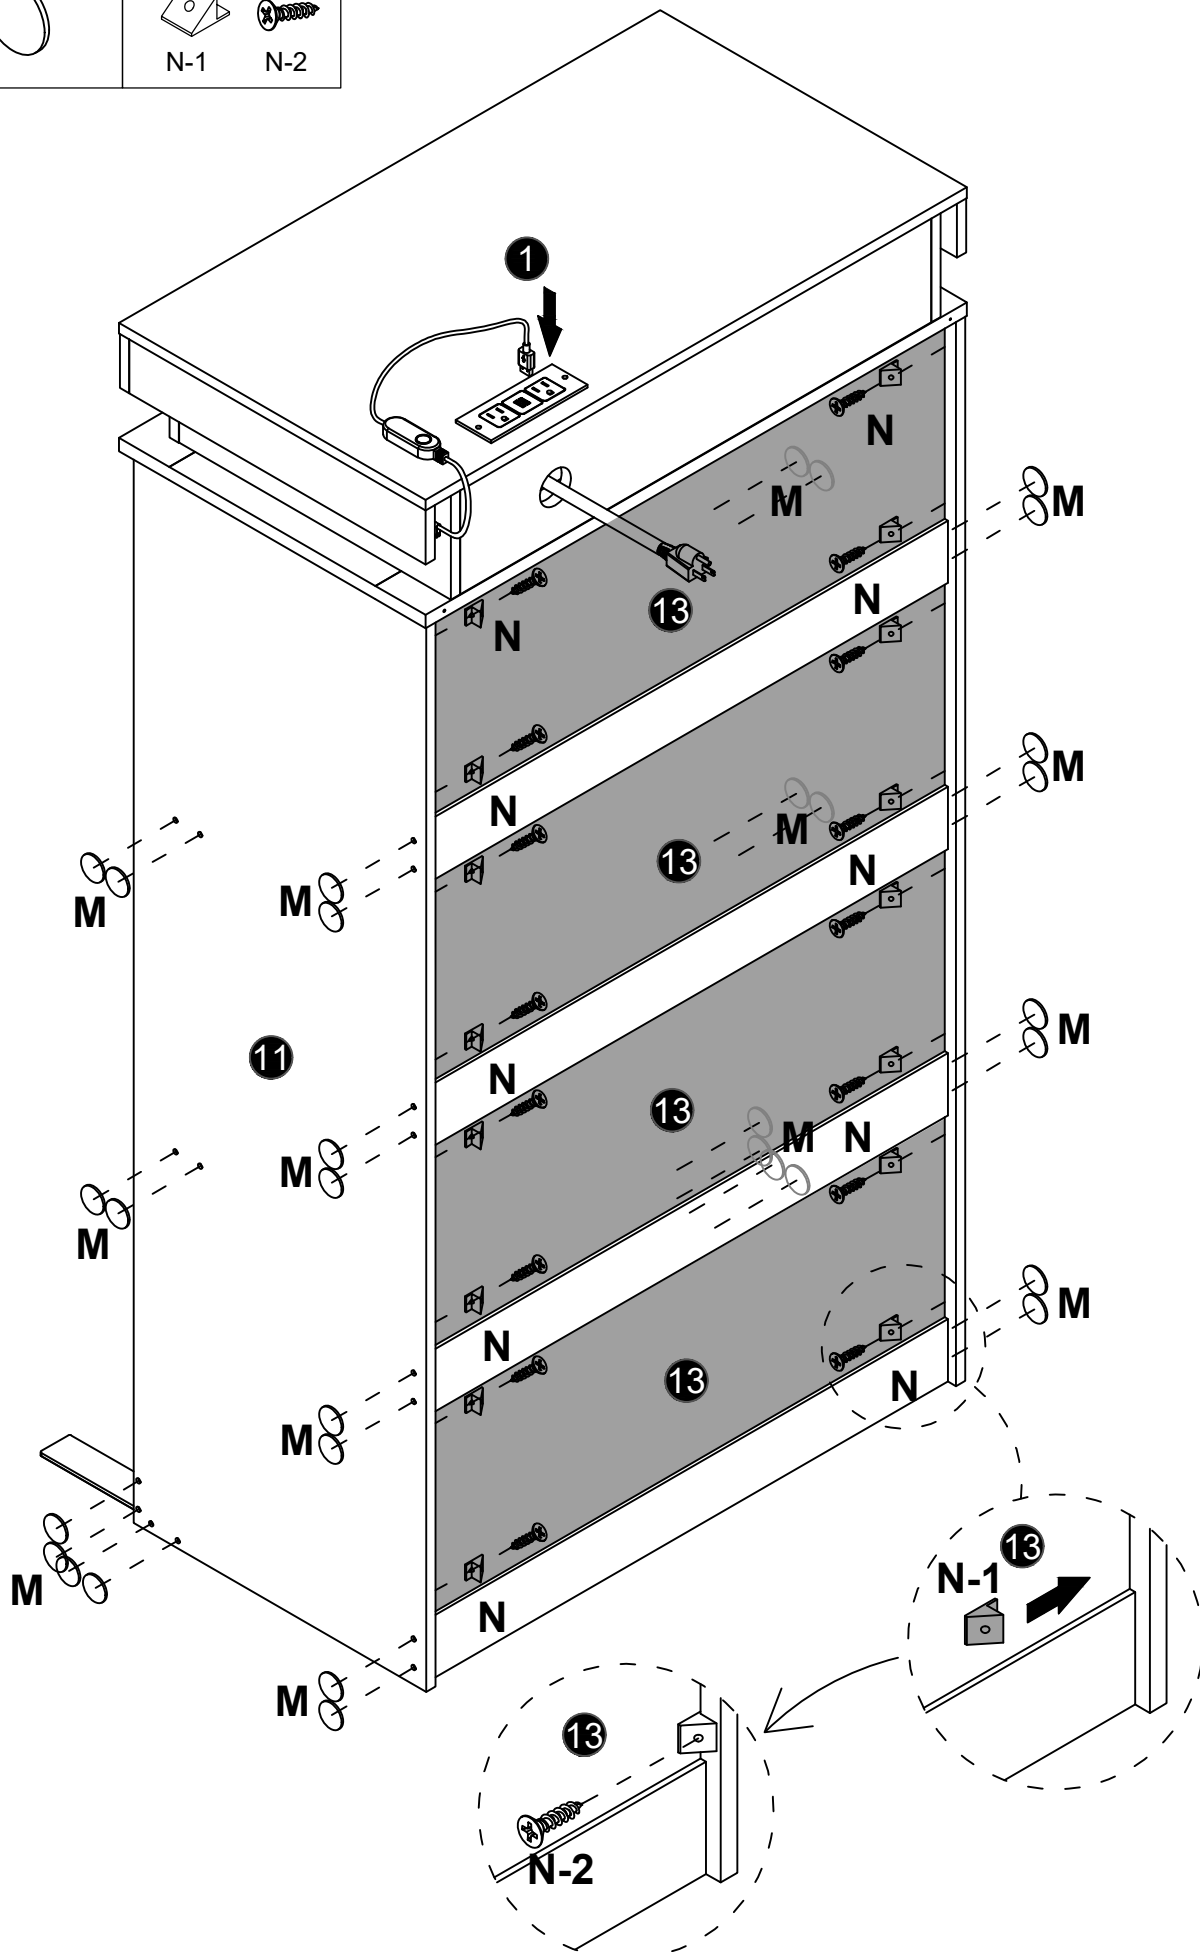

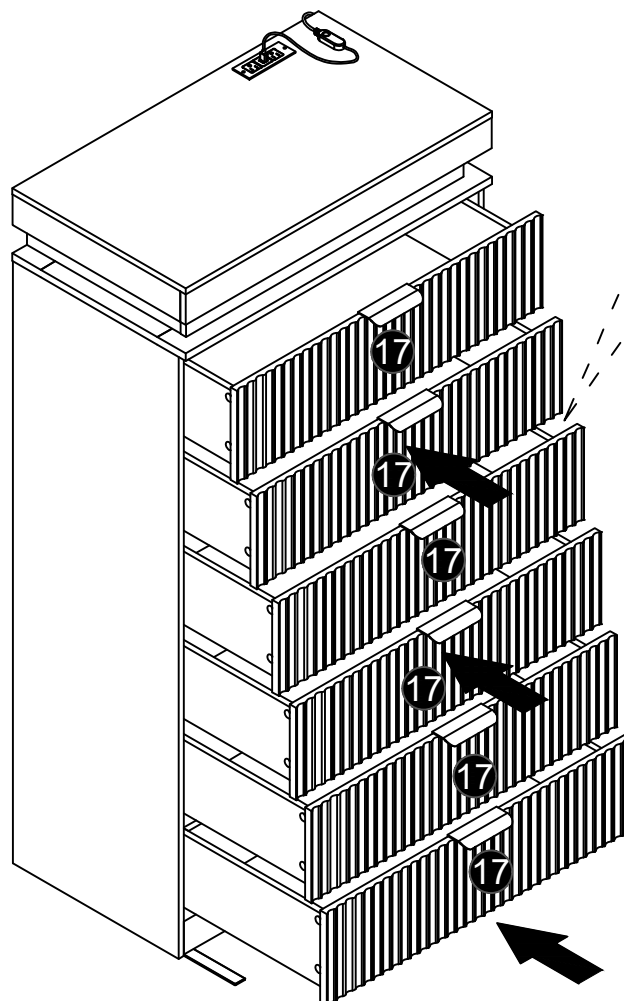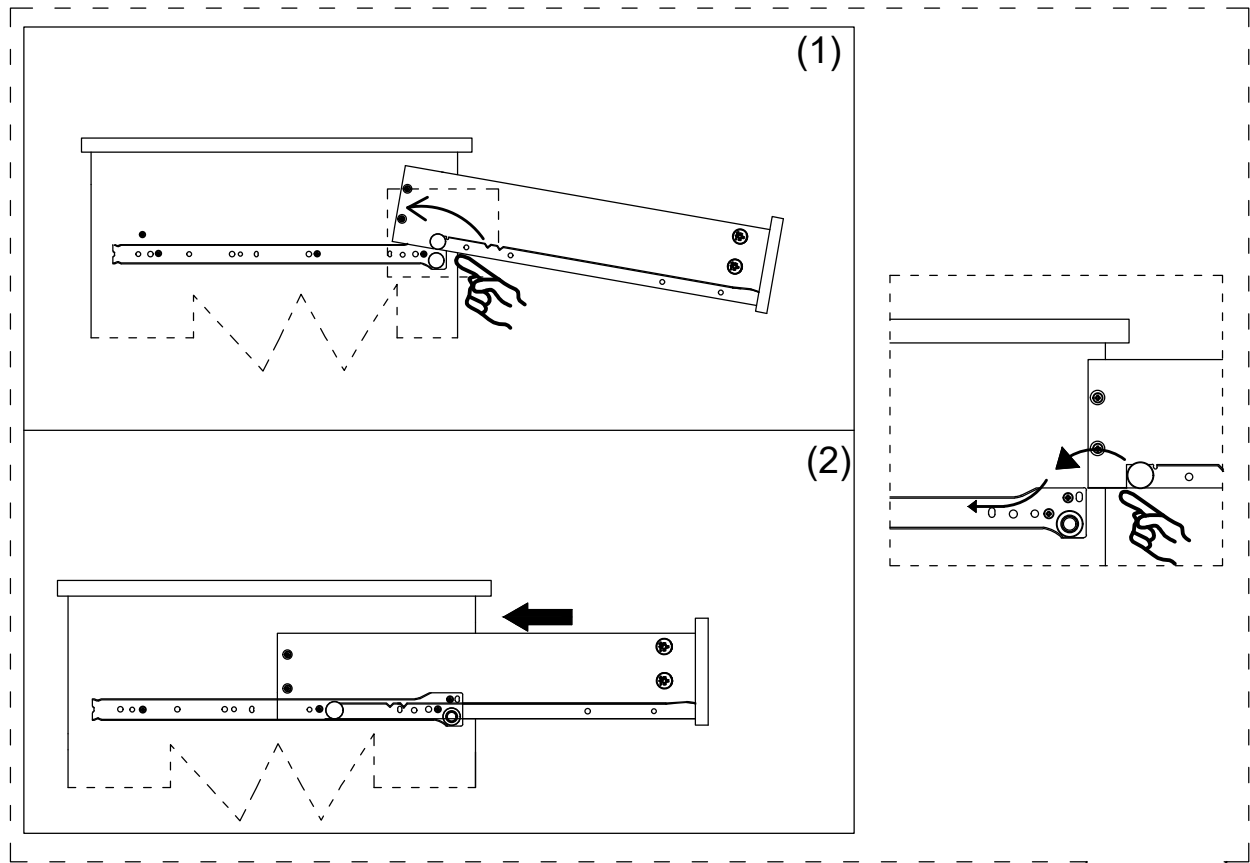


Done

D x2



H x2





H-1




H-2


I x2

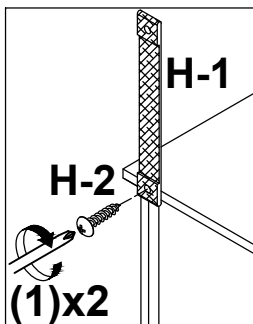


First fix the anti-rewind screw in the reserved hole of the product.

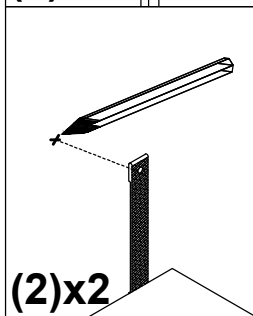

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

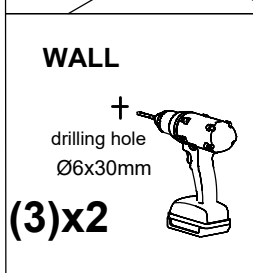


Then use a tape drill to make holes in the wall that are suitable for the product screws.

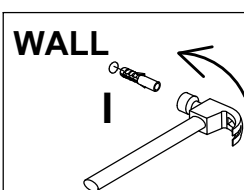


Then, put the expansion bolt into the hole

(4)x2

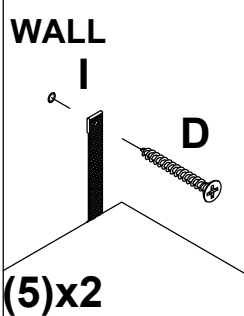

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

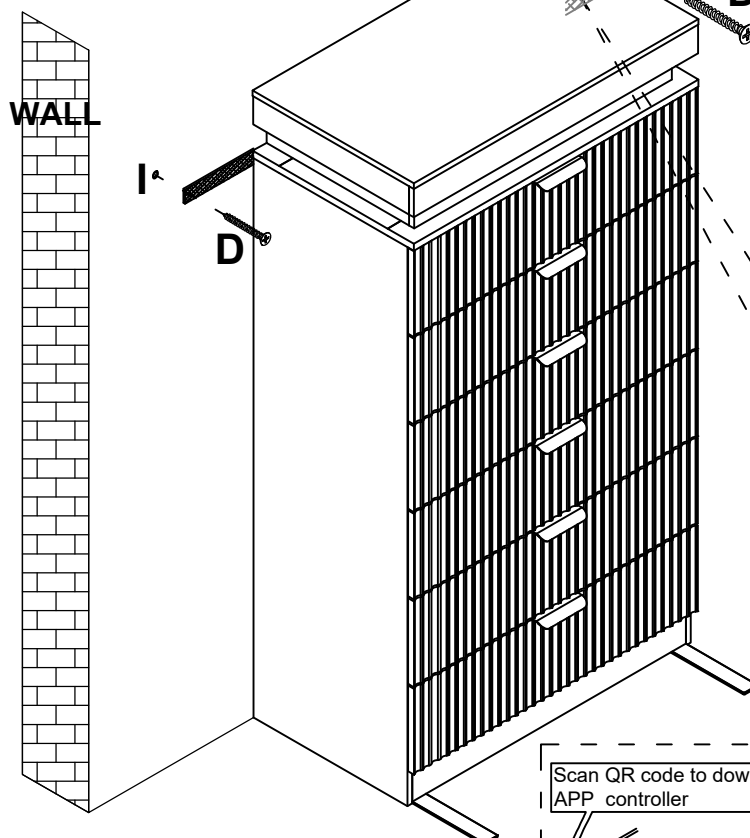

Scan QR code to download APP controller

OR

Flip to the other side to find the control button

