



Installation & Assembly

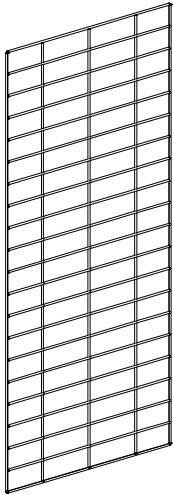

350x1000
13.8x39.4

Ax5

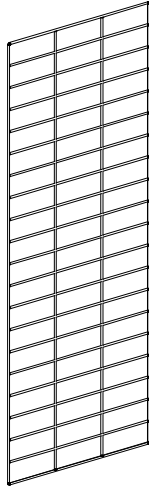


300x1000
11.8x39.4

Bx2




100x1000
4x39.4

Cx1

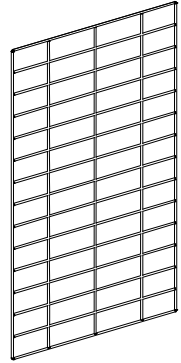


350x700
13.8x27.6

Dx4

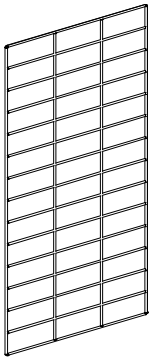

300x700
11.8x27.6

Ex4




200x700
7.9x27.6

Fx4




200x650
7.9x25.6

Gx4



Hx14



Ix3



Jx3



$\frac{1000}{39.4}$

Kx8



$\frac{700}{27.6}$

Lx12



$\frac{650}{25.6}$

Mx10



$\frac{200}{7.9}$

Nx8



$\frac{600}{23.6}$

Ox4



$\frac{200}{7.9}$

Px8



$\frac{100}{4}$

Qx9



M4x $\frac{32}{1.3}$

Rx96



Sx6




$\frac{\text{mm}}{\text{inch}}$

x2


①

Rx54
M4x $\frac{32}{1.3}$

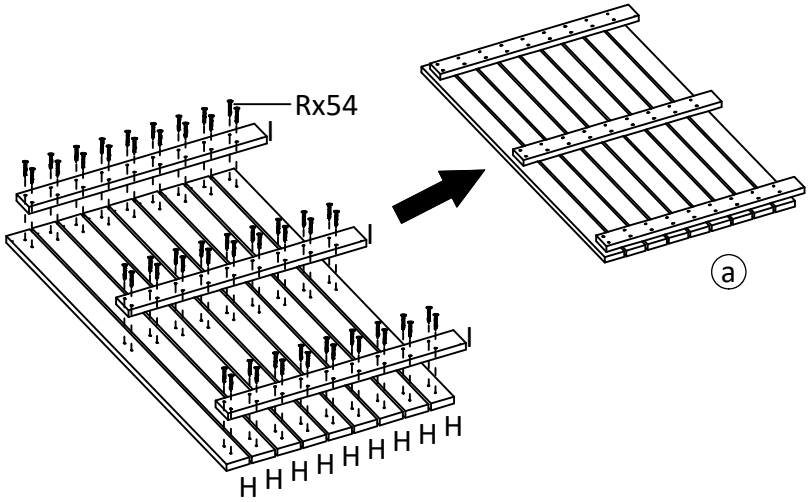


②


Rx30
M4x $\frac{32}{1.3}$

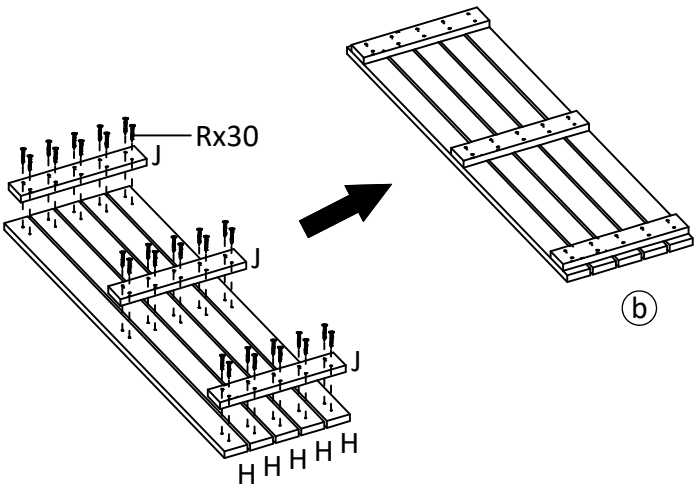


③ x2

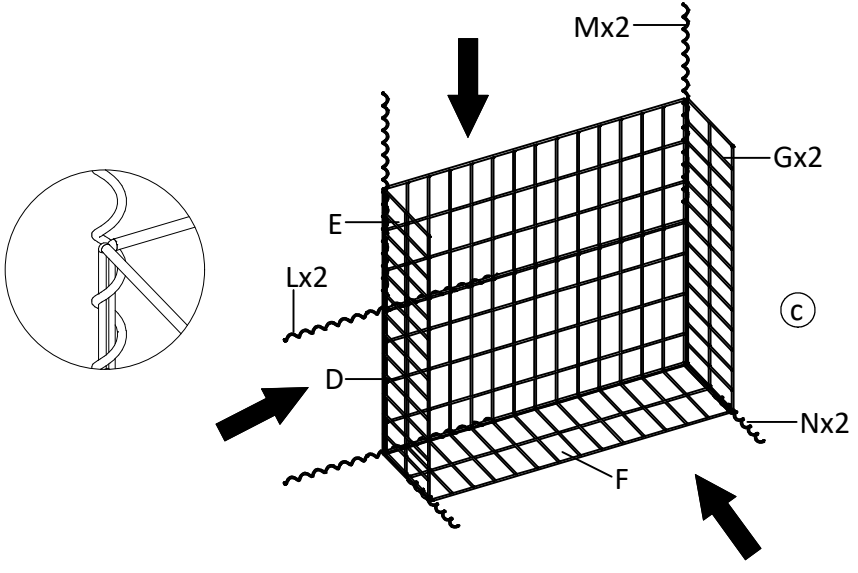


④

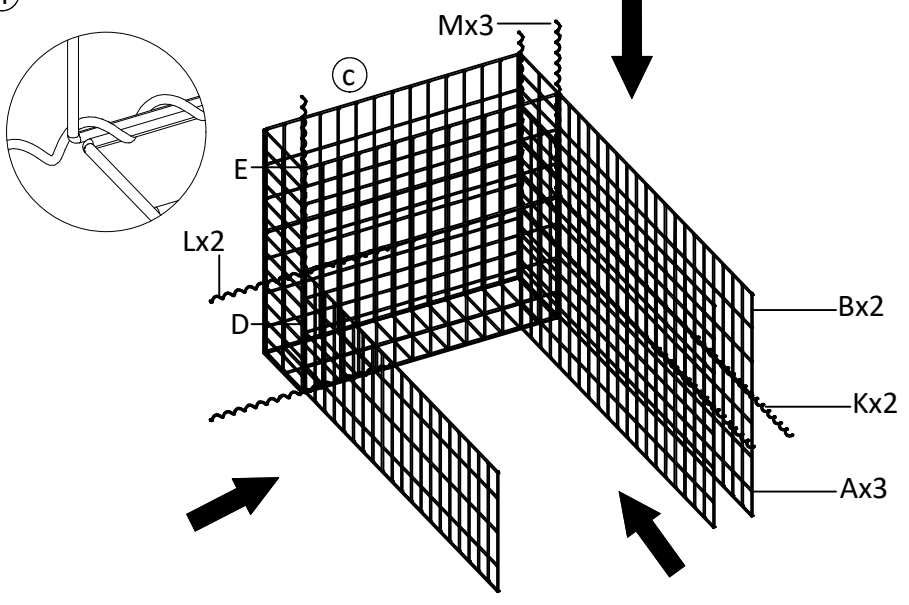


5

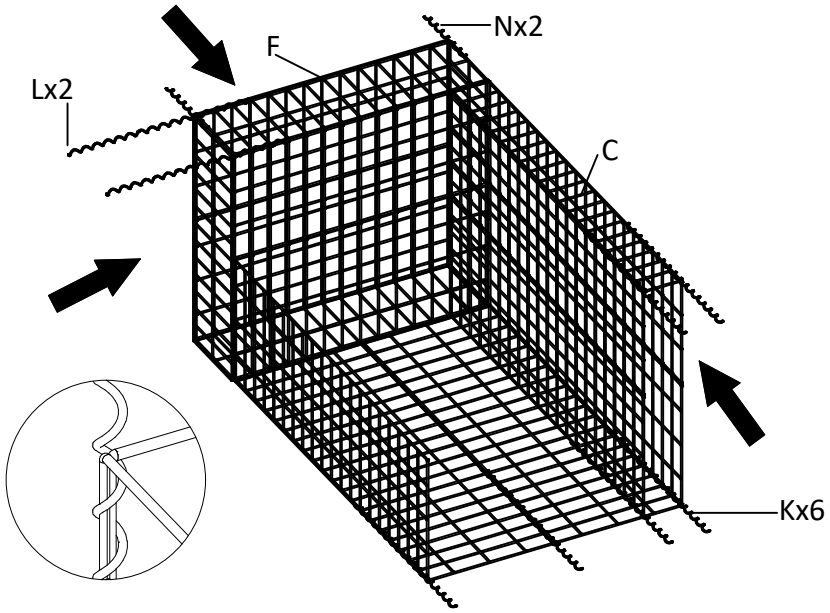


6

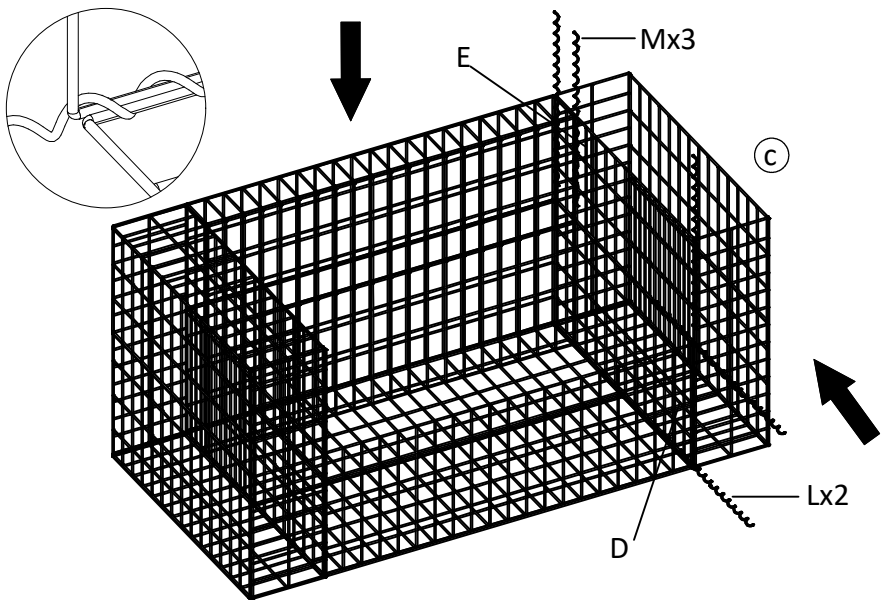


7

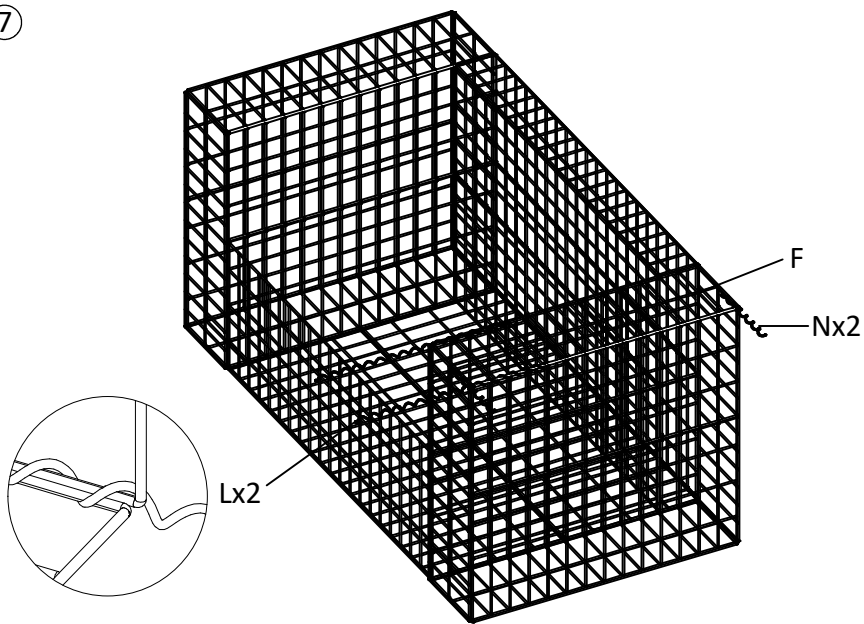


8

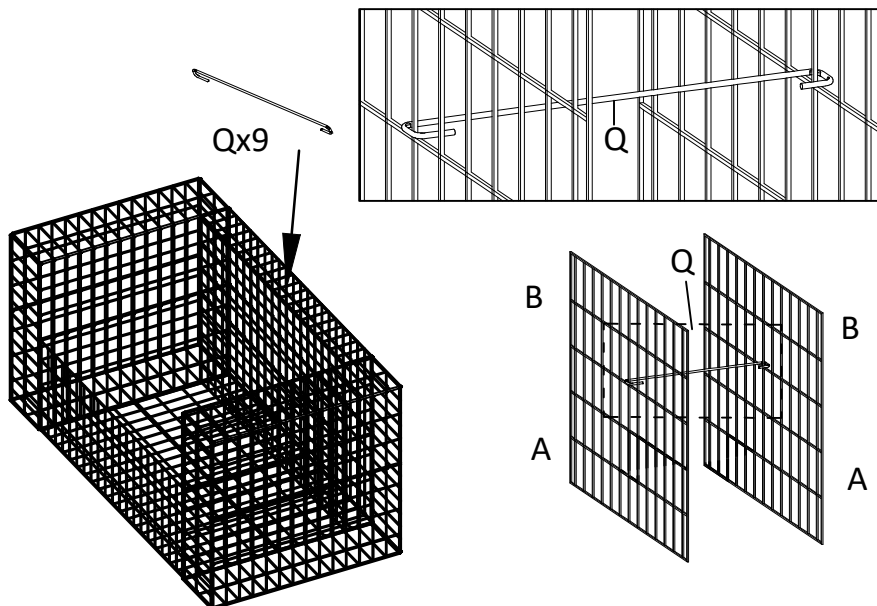


9

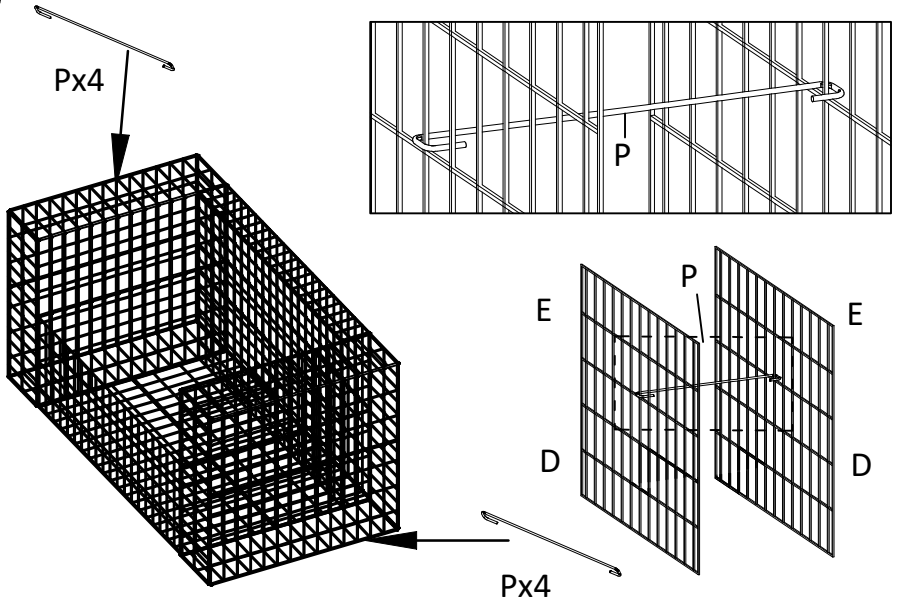


10

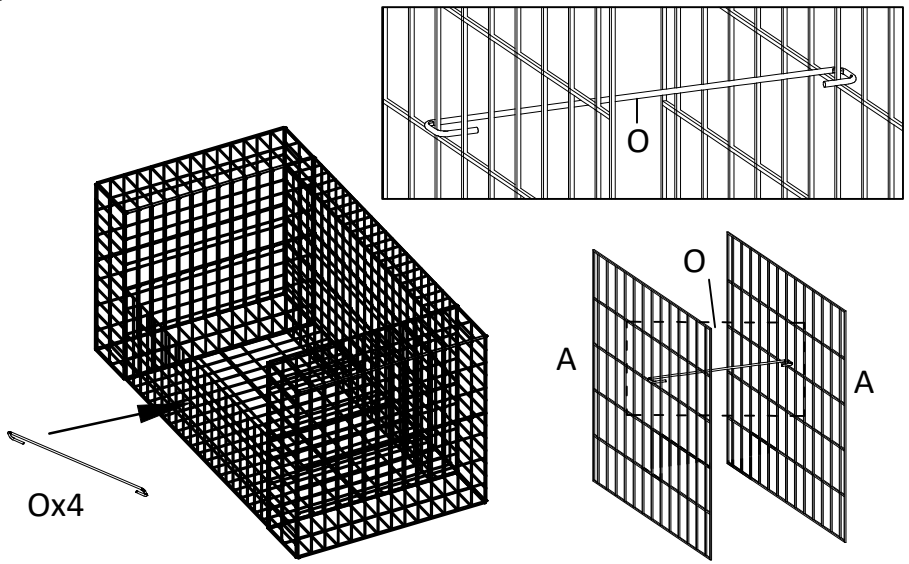


11

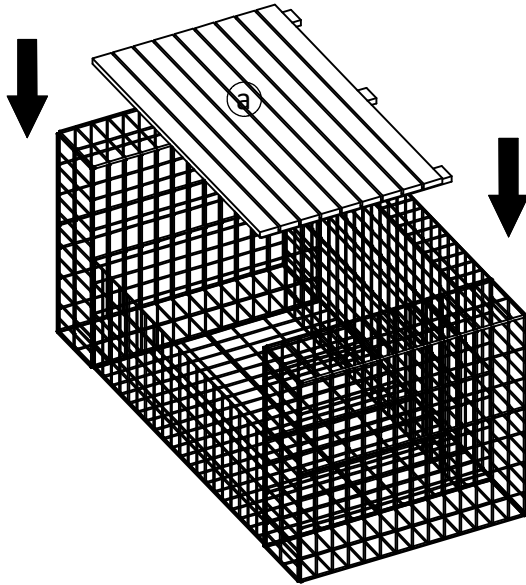


12

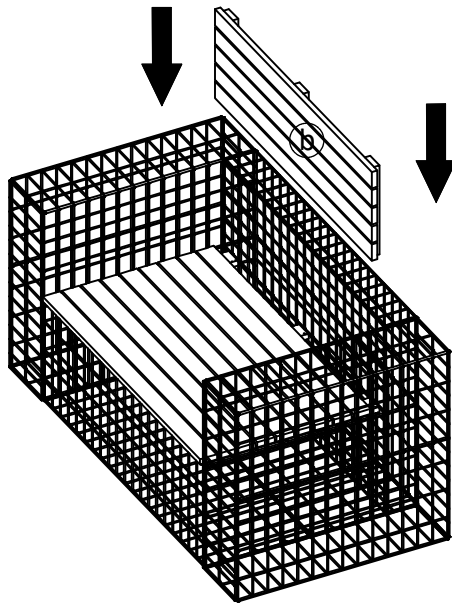

13

Sx6


Rx12

M4x $\frac{32}{1.3}$

