




ASSEMBLY INSTRUCTION

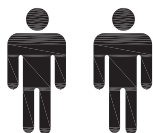


2 PERS

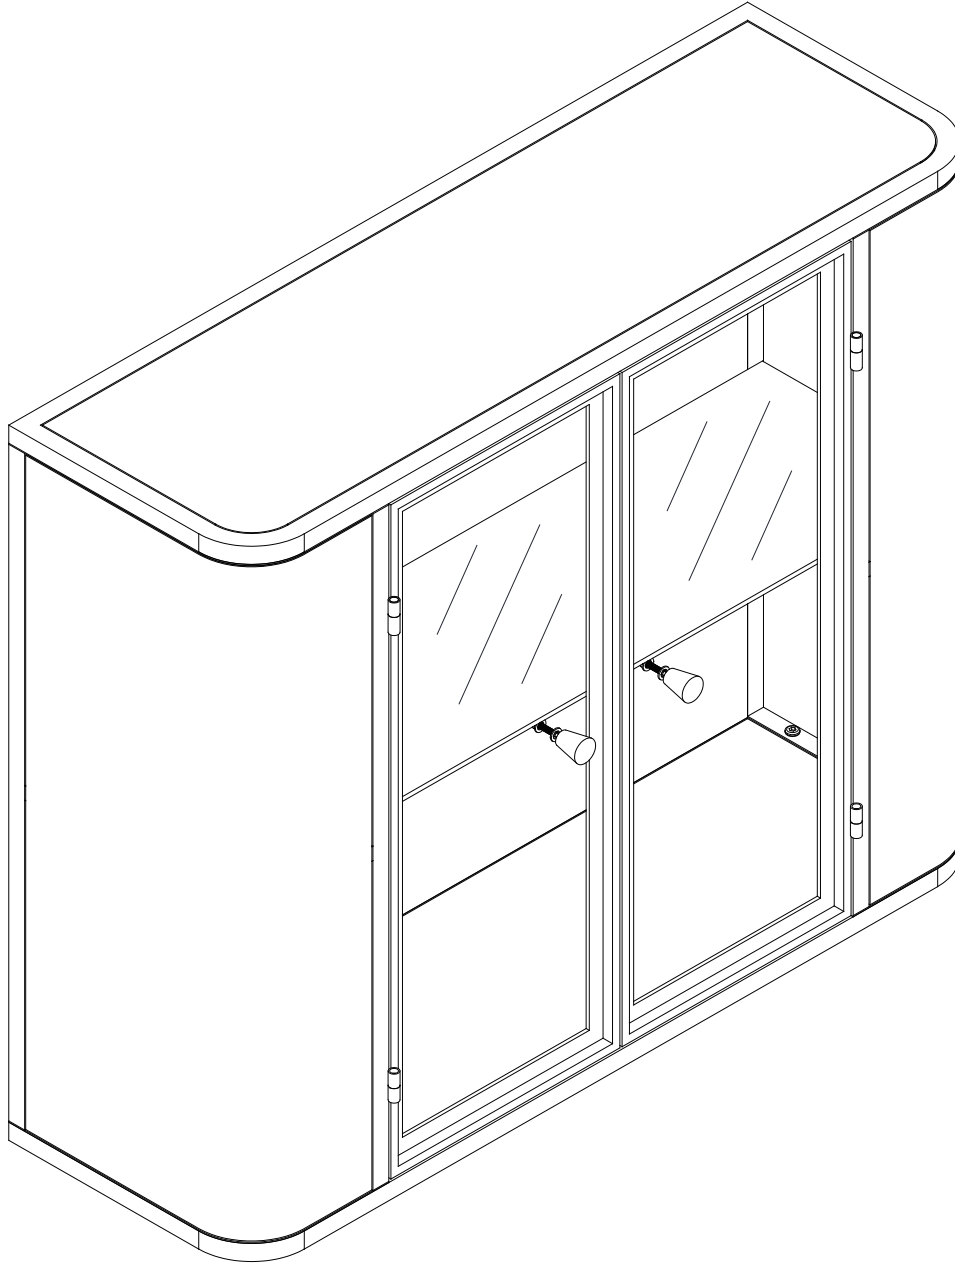

40 MIN









Pozi Screwdriver(Not Provided)










Hexagonal wrench(Provided)

Assembly Instruction


HARDWARE LIST

A1  A2 	B  M6x25mm	C  M6x10mm	D  M4x10 mm	E 
2 PCS	8 PCS	12 PCS	2 PCS	2 PCS
F 	G 	H  M4x30mm	I 	
4 PCS	2 PCS	2 PCS	2 PCS	


PART LIST

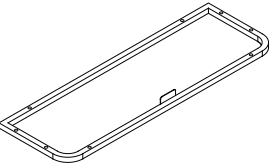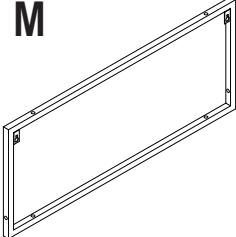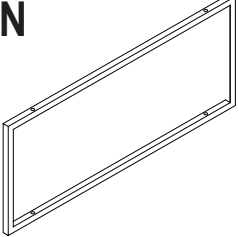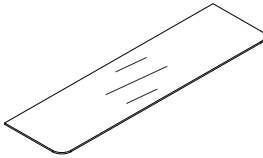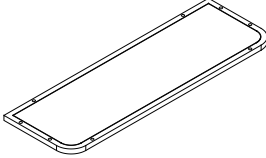J 	K 	L 	M 	N 
1 PC	1 PC	1 PC	1 PC	1 PC
O 	P 	Q 	R 	
1 PC	1 PC	1 PC	1 PC	

- Do not use power tools to assemble your furniture.
Power tools may strip or damage the parts.


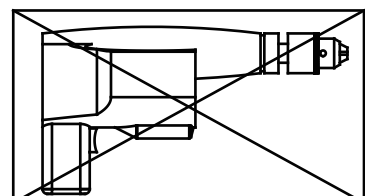


Explosive View

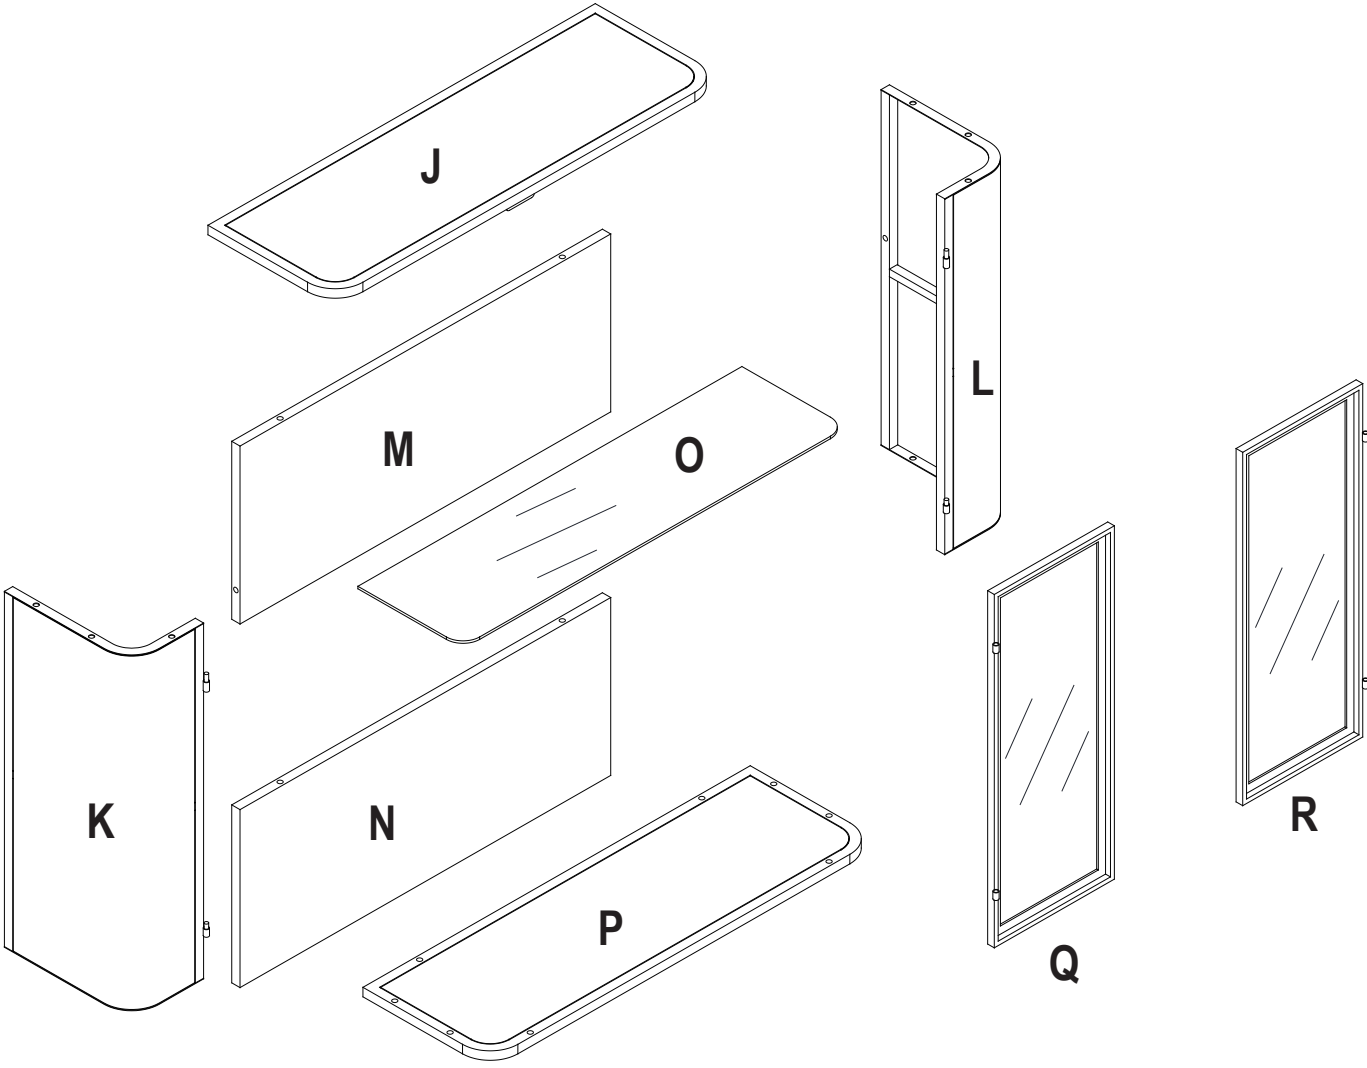

IMPORTANT NOTE: DO NOT tighten all screws and bolts until completely assembled



Step 1

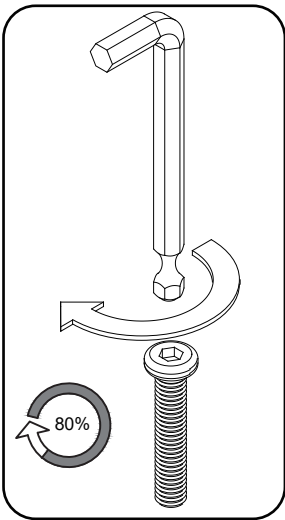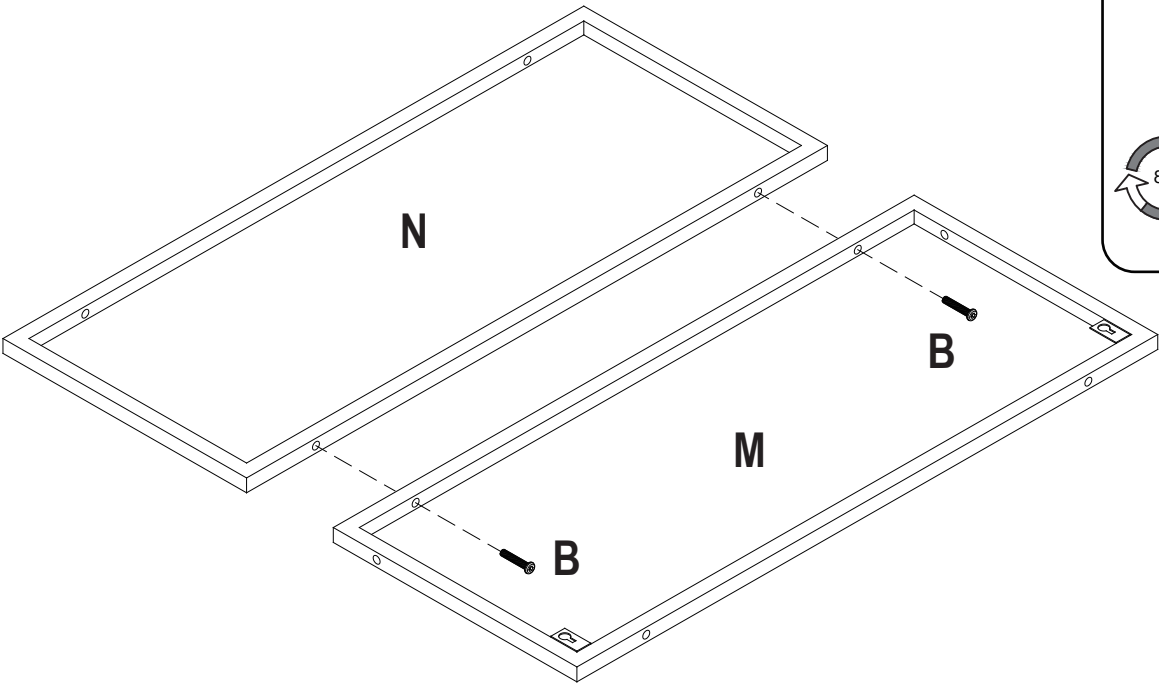

B X 2 PCS



A2 X 1 PC

Step 2

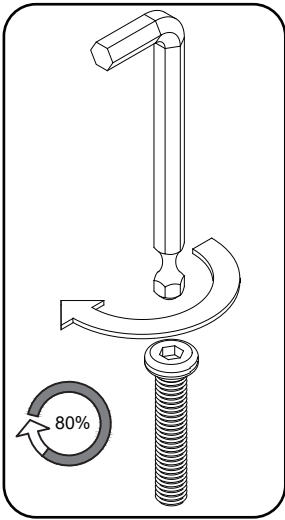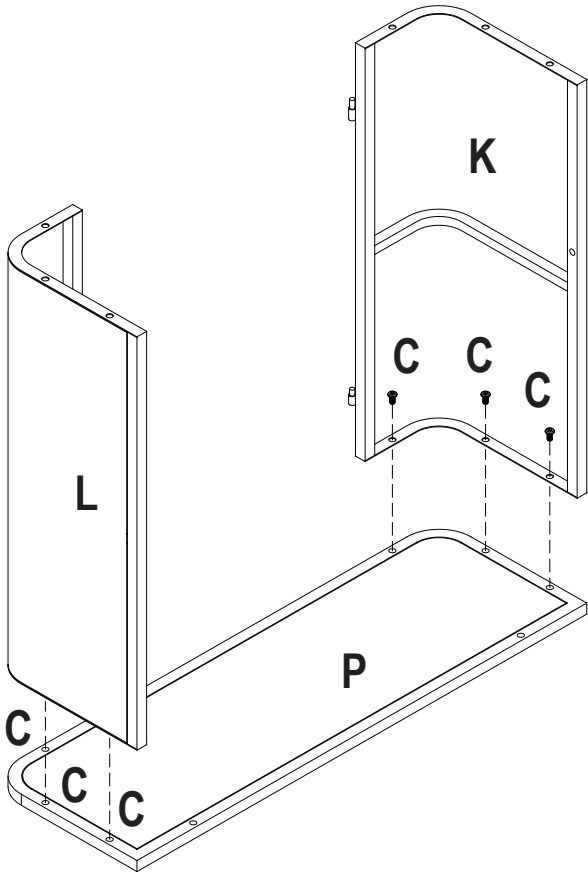


C X 6 PCS

Step 3

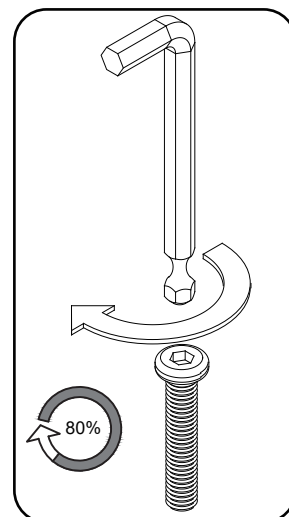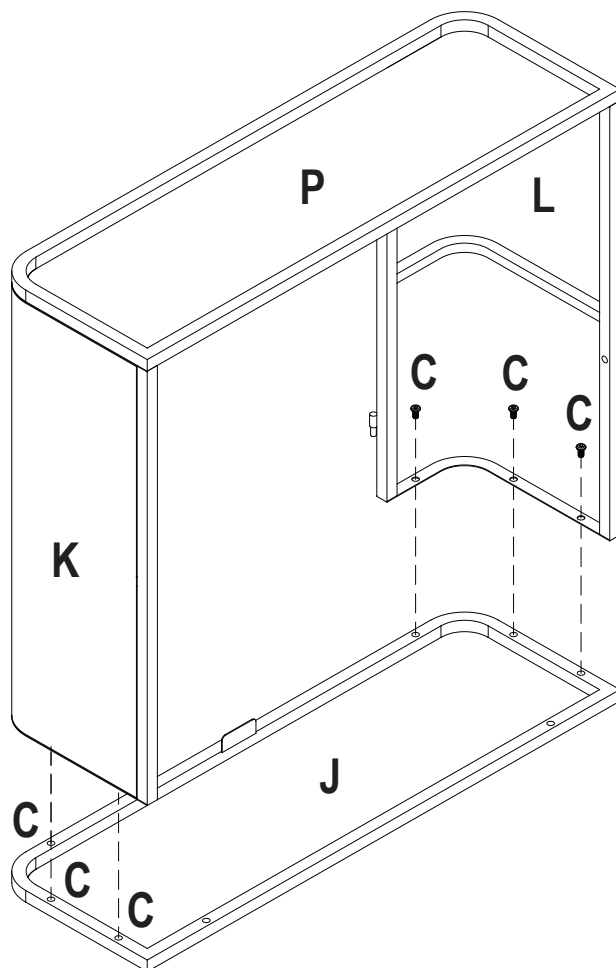


C X 6 PCS

Step 4

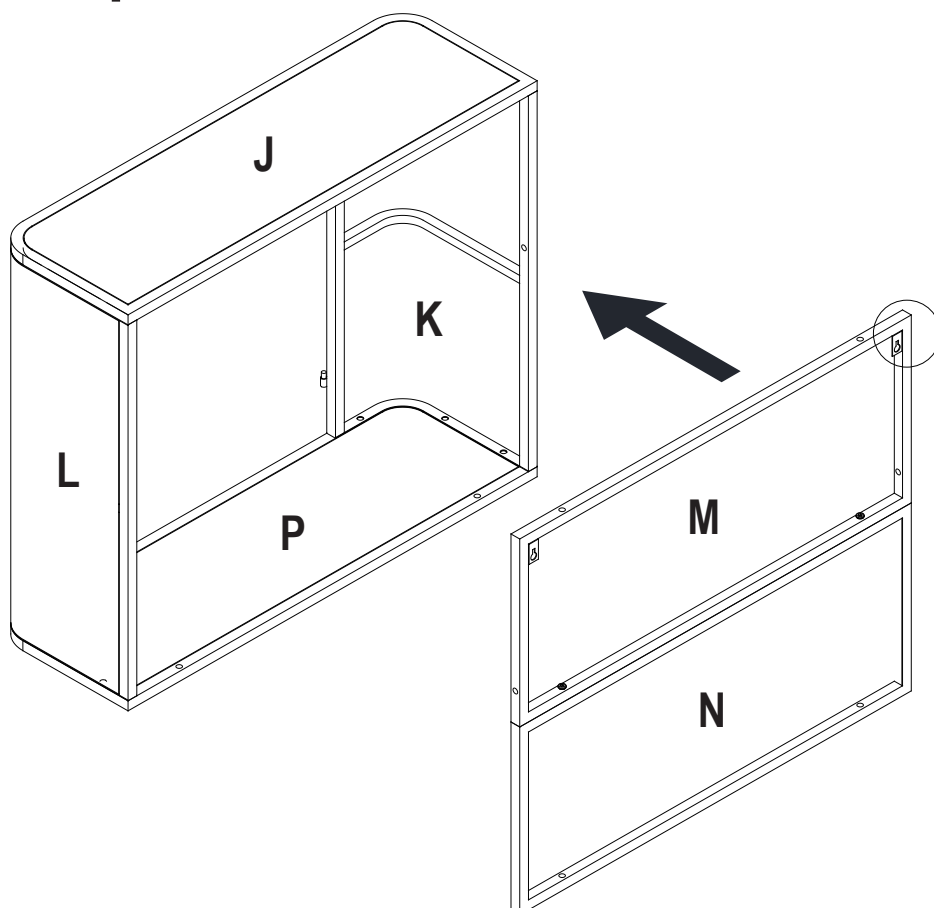


Step 5



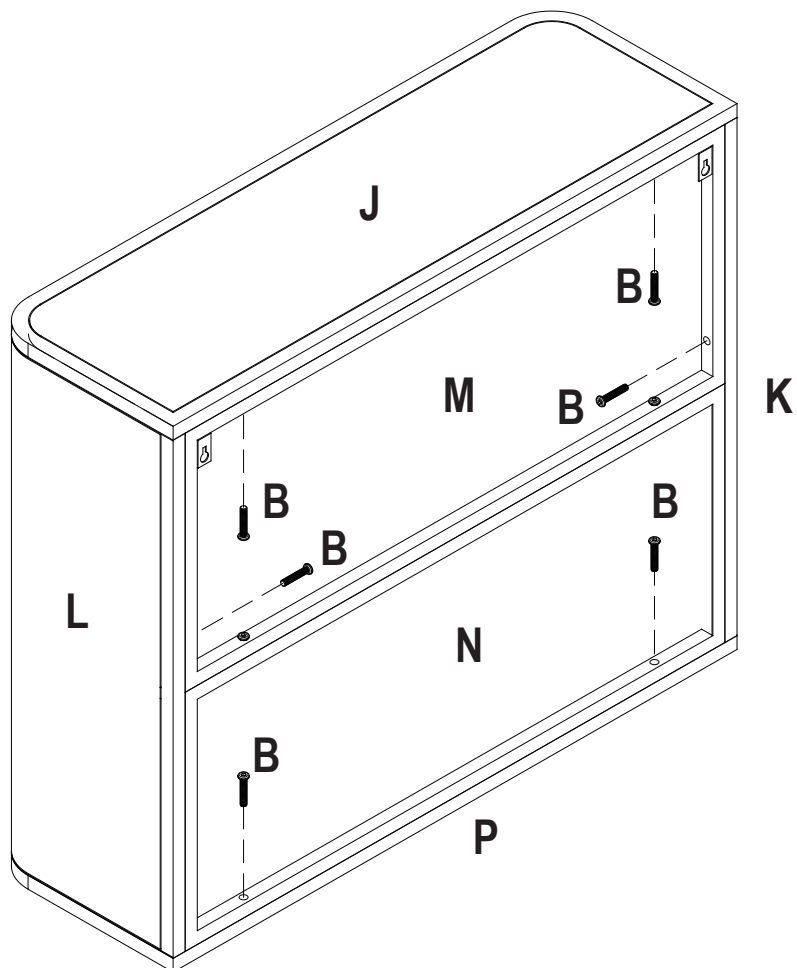


B X6 PCS

Step 6

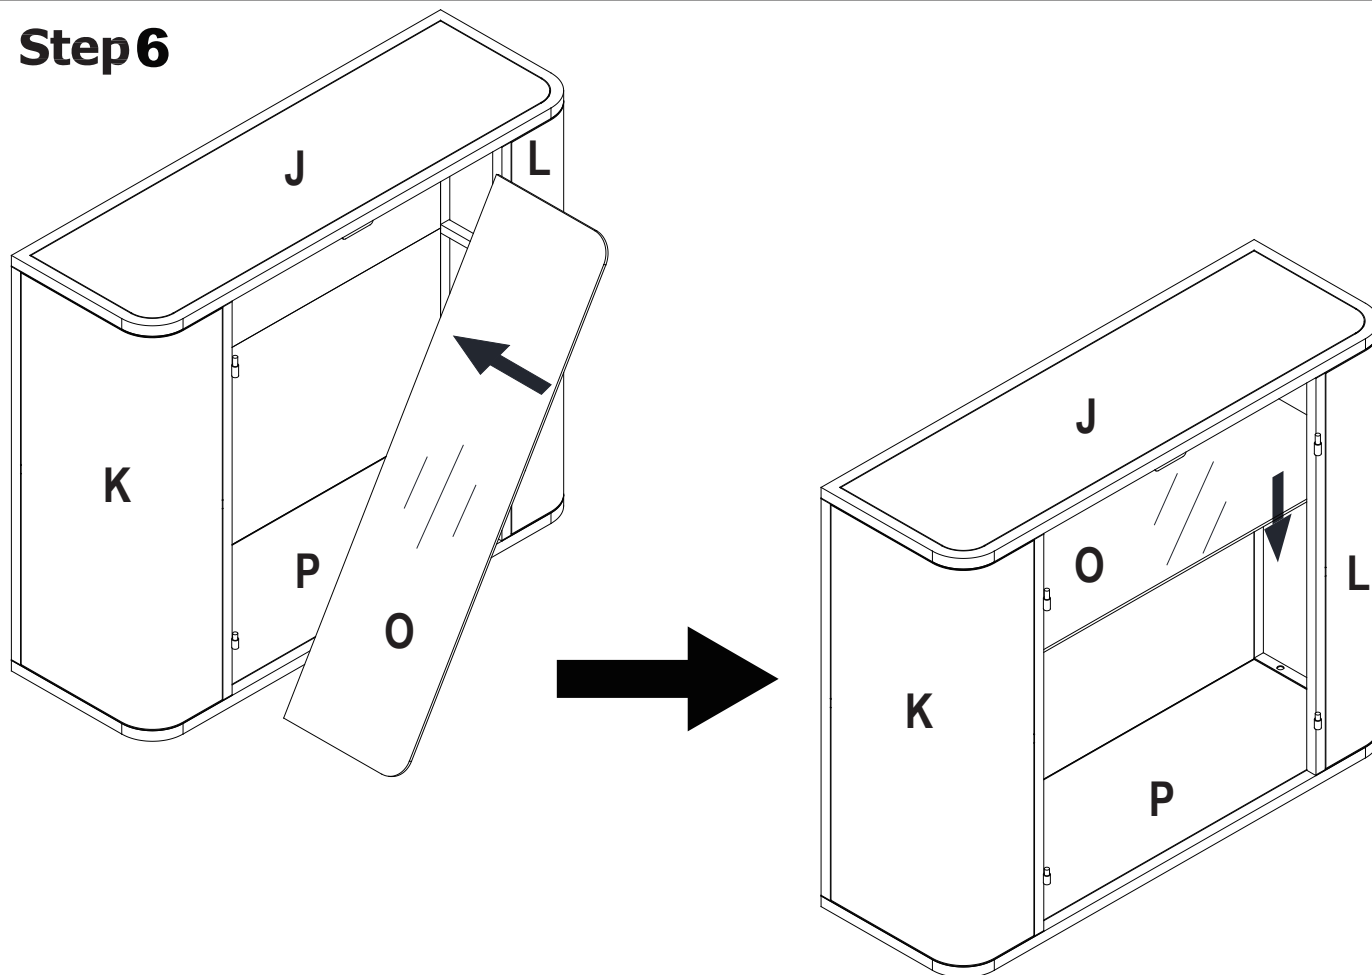

Step 7

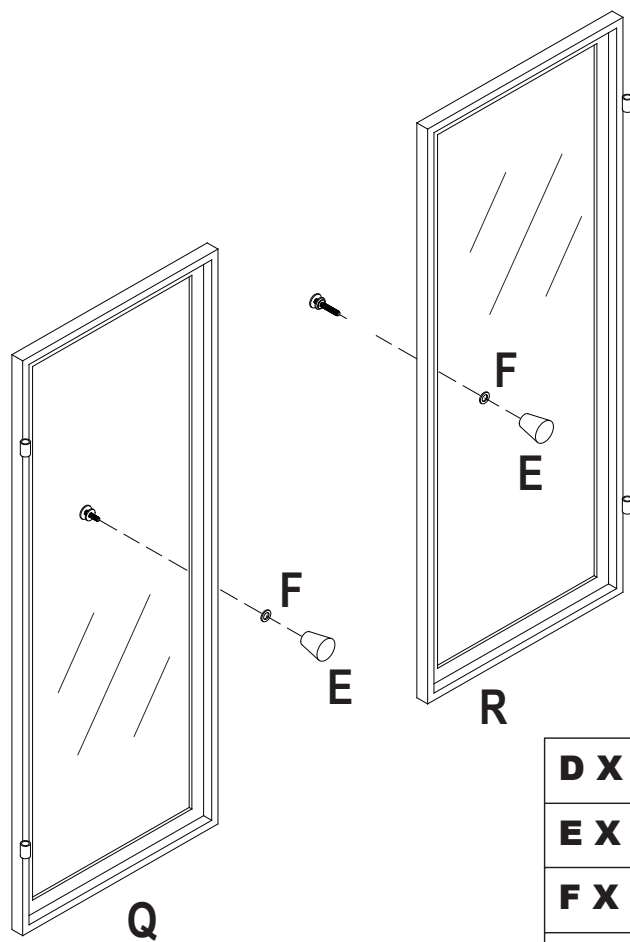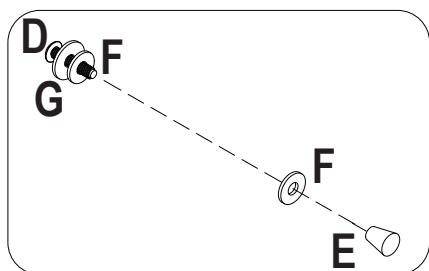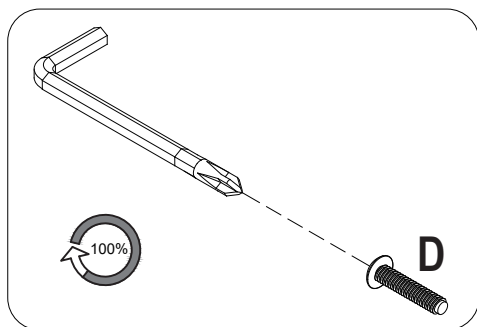



D X 2 PCS

E X 2 PCS



F X 4 PCS

G X 2 PCS

Step 8

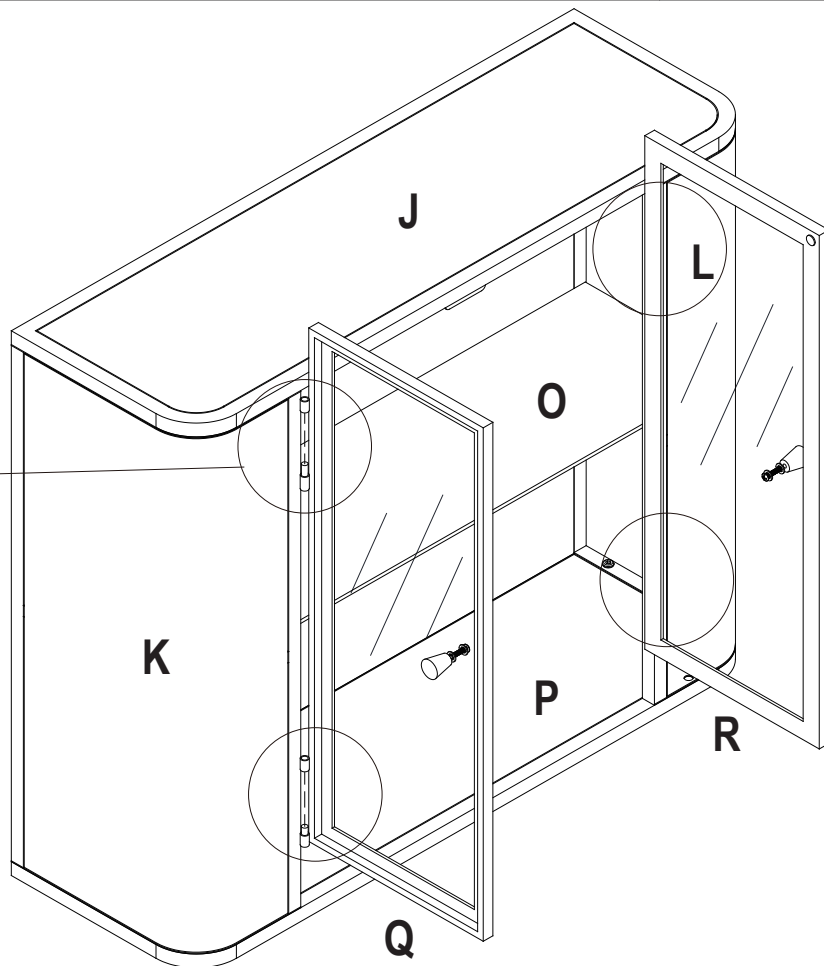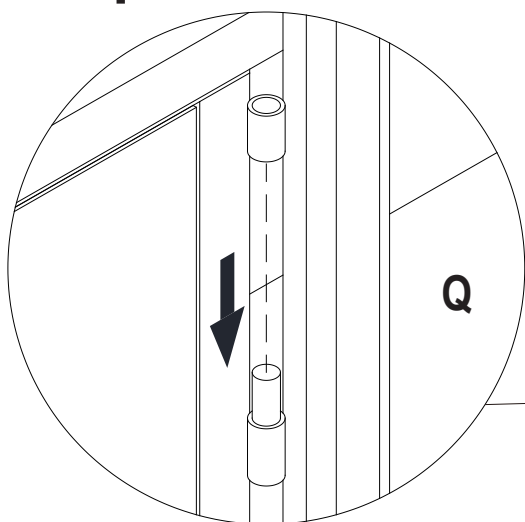


Step 9

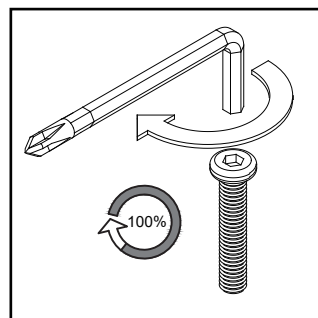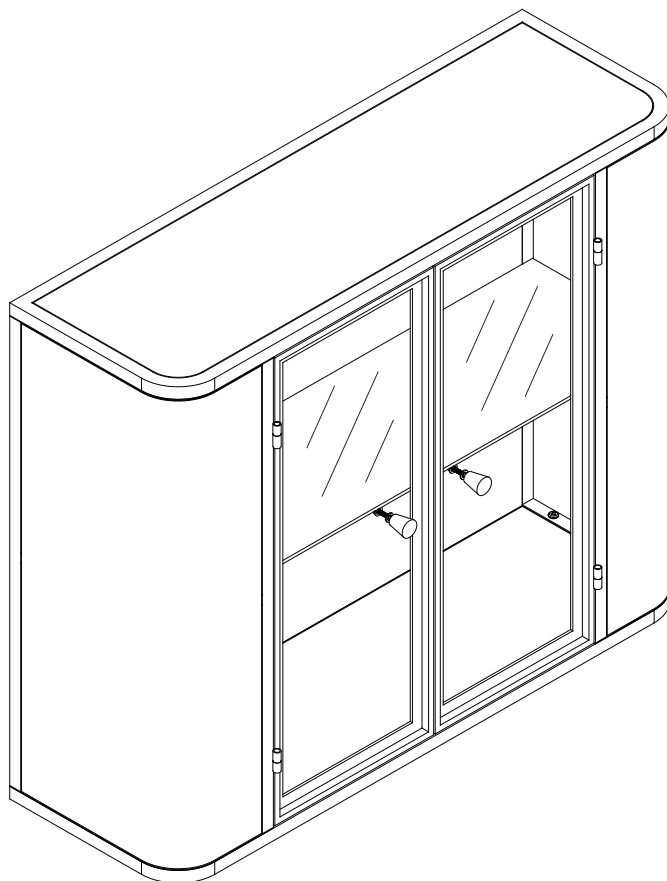

NOTE:AFTER ASSEMBLY,PLEASE MAKE SURE THAT ALL SCREWS ARE 100% LOCKED

Step 10

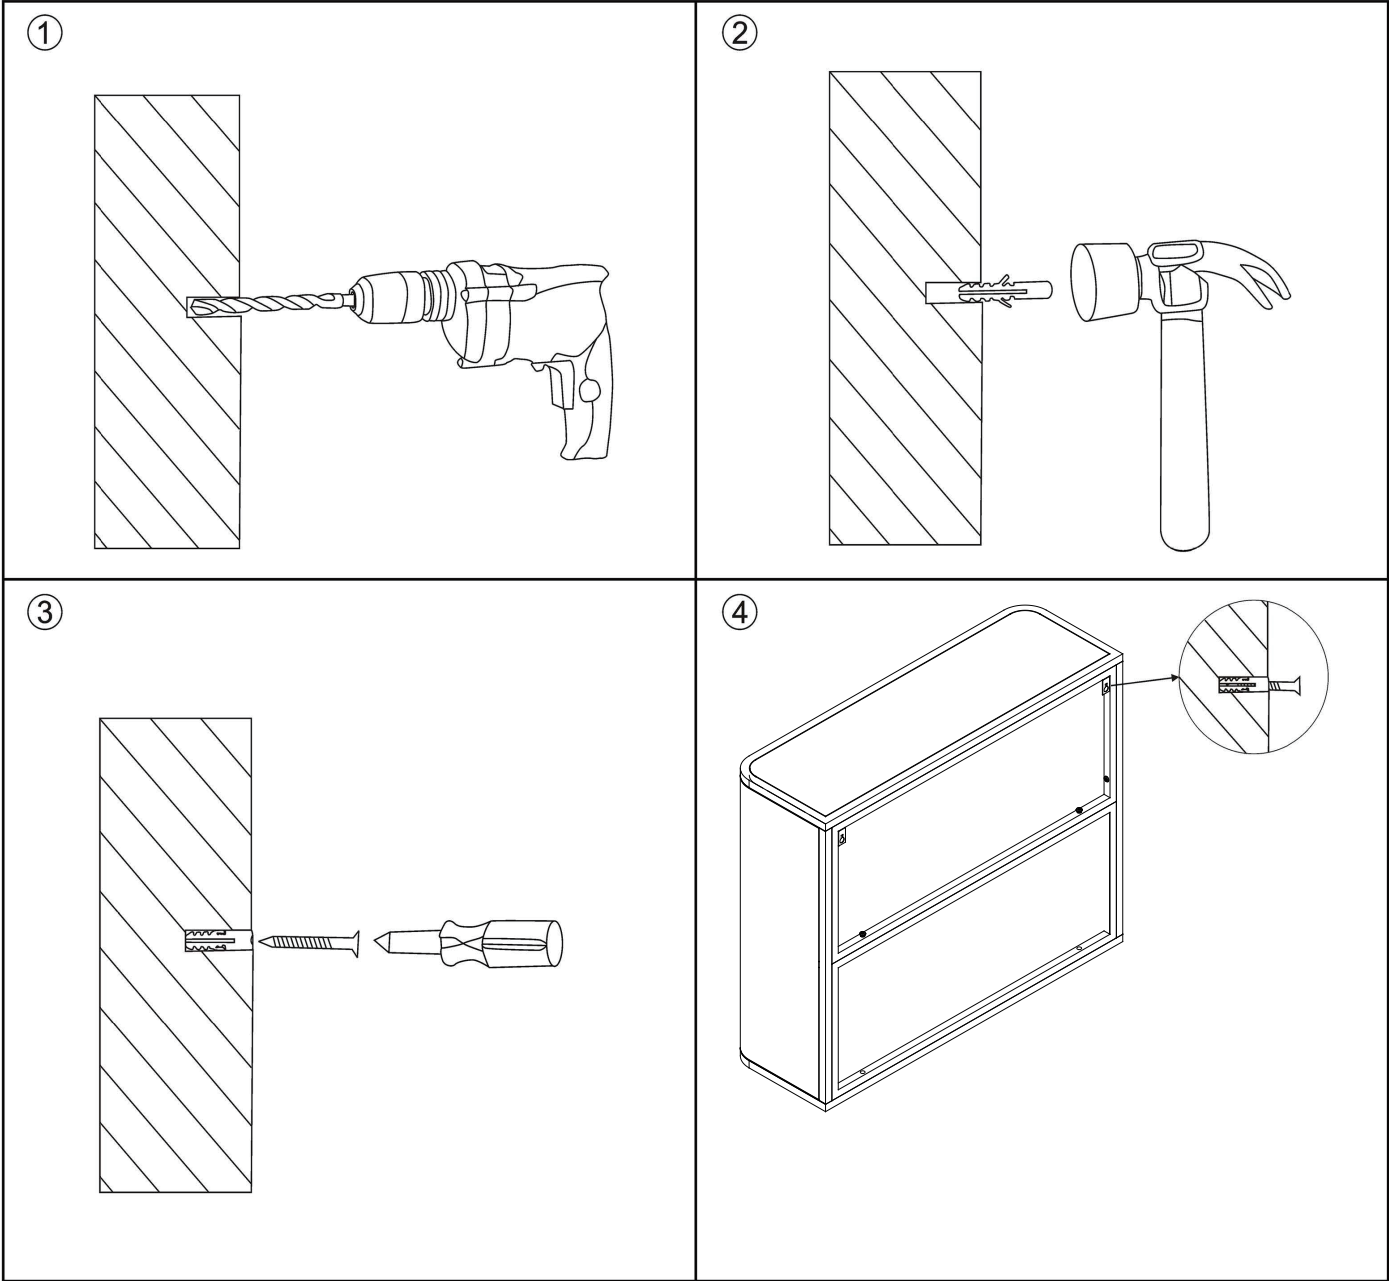

H X 2 PCS
I X 2 PCS