



GALEY ALIX DESIGN

Removable
Repositionable &
Easy to Install

 Follow @galeyalex & tag us in your projects! #galeyalexdiy



 Follow @galeyalex for ideas!

For all things Galey Alix visit
www.galeyalexdesign.com

Lot 1

68.5 cm x 5.5 m, 3.7 m² | 27.0 in x 6.0 yd, 40.5 ft²

Design Match: Half Drop **Repeat:** 68.5 cm / 27 in

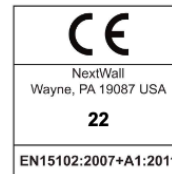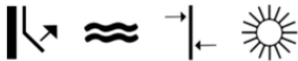

Preparation

Make sure to purchase all of the rolls needed to complete your project in one single order to ensure you receive the same dye lot. After receiving the product confirm that the pattern number and dye lot number match for all rolls. The wall surface should be clean, dry, smooth and free from mildew. We recommend not using NEXTWALL products on textured walls; over existing wallpaper, brick, cinderblock, non-stick paint, unpainted drywall, outdoor surfaces, or plaster. Allow newly painted surfaces to fully cure for 4 weeks before applying.

Hanging Instructions

1. These wallcoverings are inspected and tested - however, they should be checked for defects before hanging. We will replace defective merchandise but assume no responsibility for labor charges for the application or removal of any wallcoverings or for improper hanging. The installation of more than 1 strip constitutes acceptance of the product.
2. Starting on the left side of your wall or surface, measure out from the corner 20.5" or 27" depending on the width of the product and mark the wall lightly with a pencil. Using a level, draw a straight vertical line. This line is the guide for your first strip so it is important that it is straight. If installing a feature wall it is recommended to start installation in the middle of the wall instead to create symmetry.
3. Peel about 12" (30.48cm) of the backing away from the paper. Apply the paper to the top of the wall, allowing that 1-2 extra inches to overlap the ceiling which will be trimmed off later. Align the right side of the strip with your vertical line and lightly press the edge to the wall along the line. If needed you can reposition to ensure a vertical seam. Working from the top to the bottom, pull the backing away from the paper as you evenly press the paper to the wall. Do not force the paper

and be careful not to pull or stretch the product or the pattern will not align. To achieve the best results we recommend having one person guide the paper at the top and along the seam, while the second holds the opposite edge away from the wall until the seams are aligned. We advise that you overlap the seam between neighboring panels by 1/16 inch to avoid any shrinking that may occur due to varying room temperatures.

4. Using a wallpaper smoothing tool and moderate pressure, make your way down the wall smoothing the material from the middle of the panel outwards to push out any air bubbles and ensure firm adhesion.
5. Trim off the excess material at the ceiling and baseboard with a ruler and sharp razor. Be sure to change the blade often to maintain a smooth, clean cut.
6. Repeat this process matching the pattern of your next strip to the right edge of your previous strip and overlapping slightly.

Removal

To remove NEXTWALL products, slowly pull the edge from the top corner directly downward. NEXTWALL products can be repositioned and easily removed.

Cleaning

NEXTWALL products may be wiped clean with a damp cloth. We do not recommend using excess liquid as it may damage the product.