





















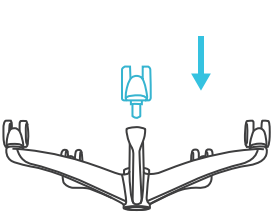
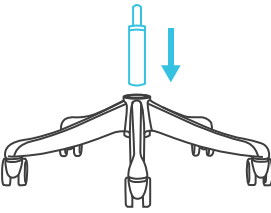
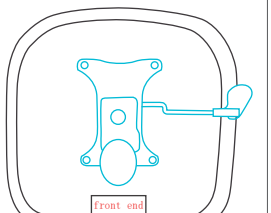
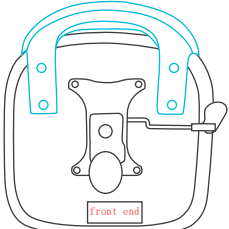
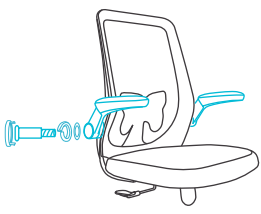

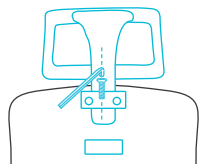

Parts list (Subject to actual size; each type of screws and washers has one spare)

					
Wheel x5	Chair Base x1	Hydraulic Cylinder x1	Mechanism x1	Seat x1	Backrest x1
					
Armrest x2	Allen Wrench x1	Decorative Cover For Armrest x2	Washer (M6) x8 <small>No this accessory can be ignored</small>	Washer (M10) x2 <small>No this accessory can be ignored</small>	Lock Washer (M10) x2 <small>No this accessory can be ignored</small>
					
Mechanism Screw (M6x20) x4	Armrest Screw (M8x40) x2	Backrest Screw (M6x30) x4	Headrest x1	Decorative Cover x1	Headrest Screw (M6x30) x2

Note: Before installing the chair, please sort the screws and measure the length of the screws for easy installation.



Assembled Instructions (Subject to actual size)

			
1 Press the wheels into the chair base.	2 Put the hydraulic cylinder into the hole of the chair base.	3 Secure the mechanism and seat with mechanism screws (M6*20) and washers (M6). Pay attention to the direction of installation.	4 Secure the backrest and seat with backrest screws (M6*30) and washers (M6).
			
5 Secure the armrests and backrest with armrest screws (M8*40) and lock washers (M10) and washers (M10) as picture shown.	6 Set the upper part of assembled chair on the hydraulic cylinder.	7 Secure the headrest and backrest with headrest screws (M6*30), and then put on the cover.	
			

Note: Before installing the chair, please sort the screws and measure the length of the screws for easy installation.