




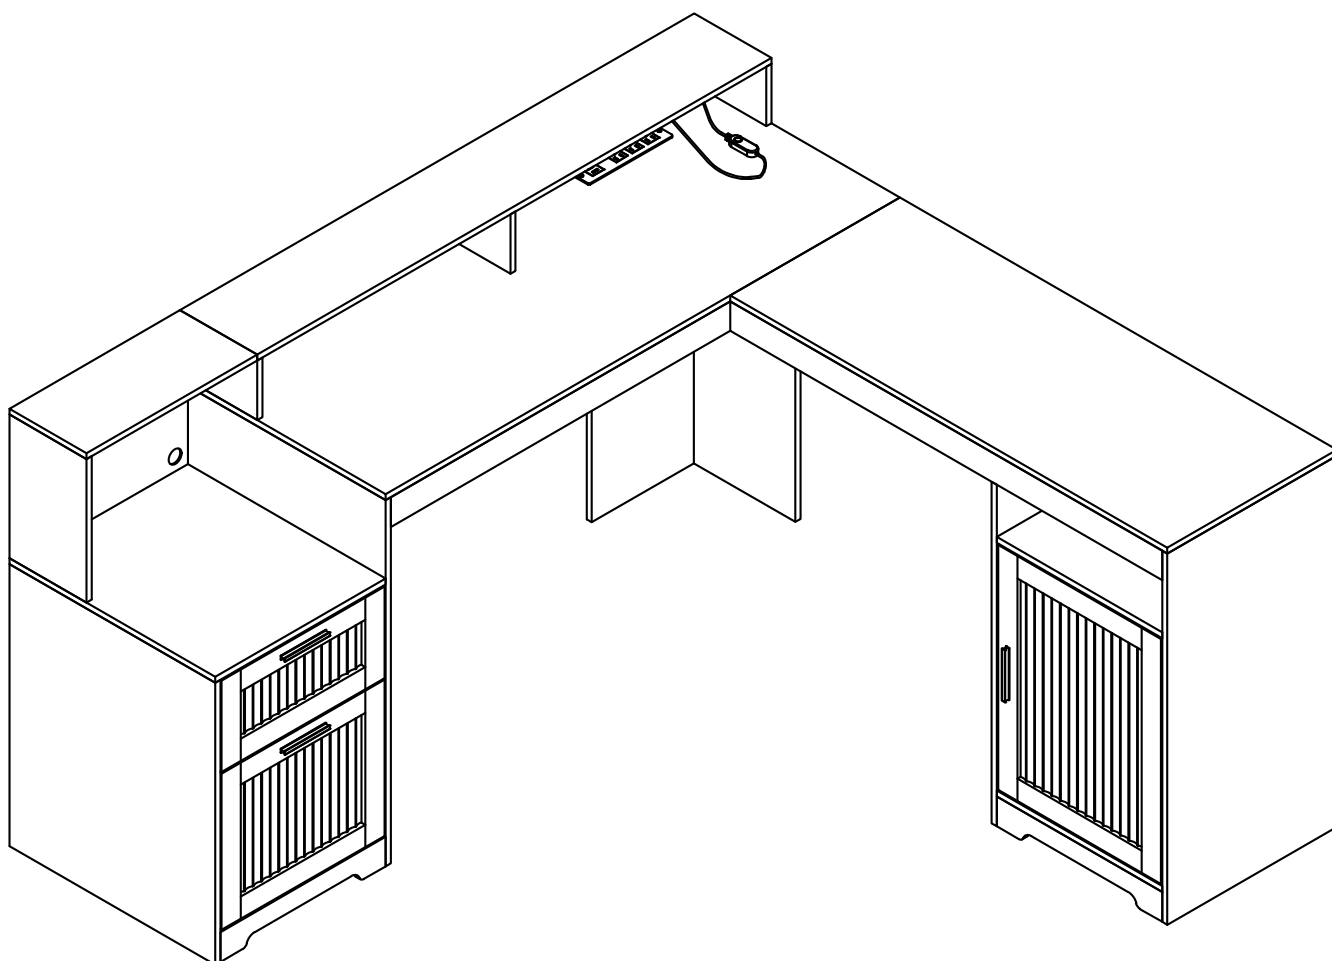


Please note: Items cannot be returned once assembled


Installation & Assembly




IT IS RECOMMENDED
TO USE POWER TOOLS

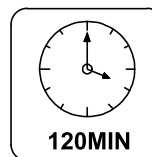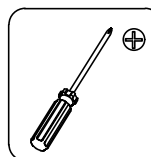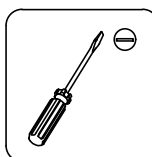


120MIN

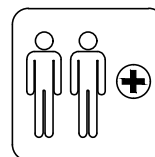


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

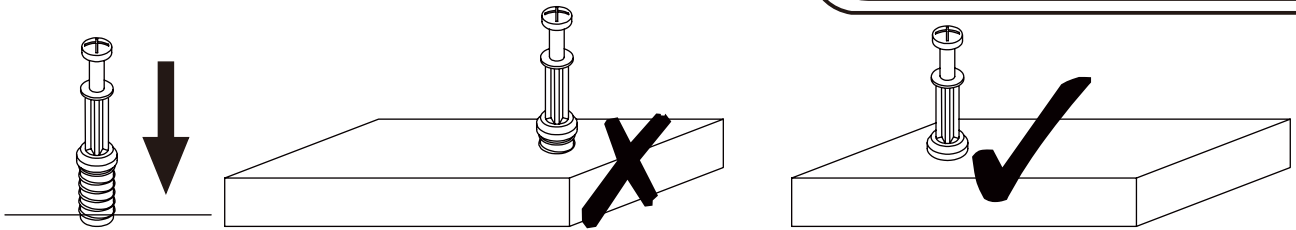


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

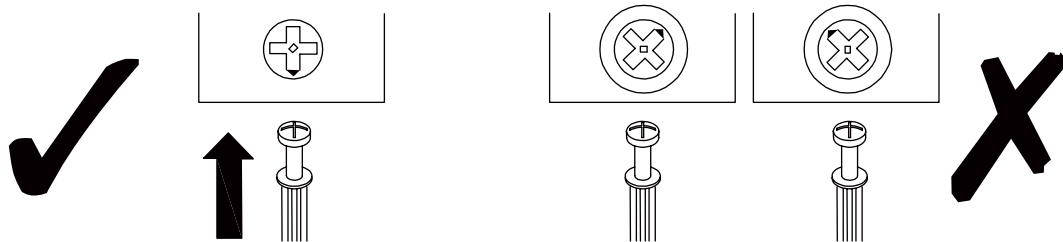











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










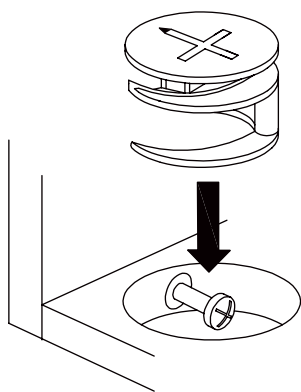












EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.










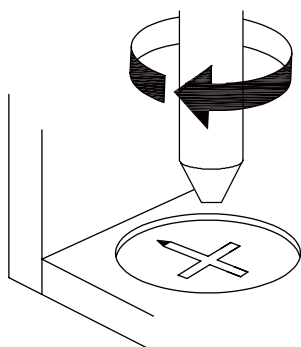



EN_Turn cam lock clockwise to tighten.

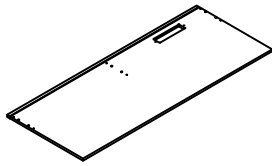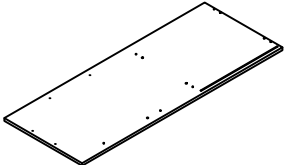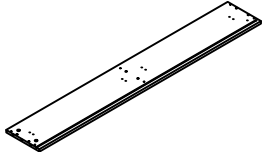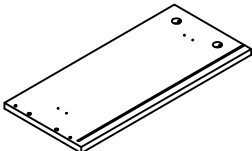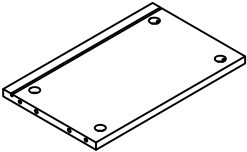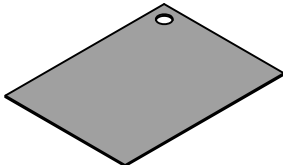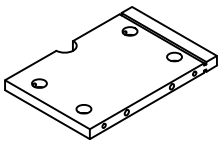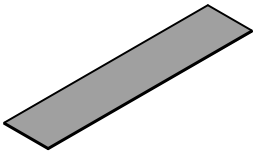
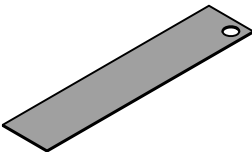
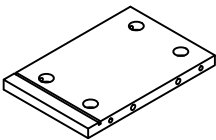
NO.	PARTS	QTY	SPARE
①		x1	
②		x1	
③		x1	
④		x1	
⑤		x1	
⑥		x1	
⑦		x2	
⑧		x1	
⑨		x1	
⑩		x1	

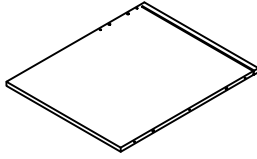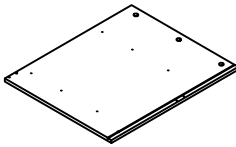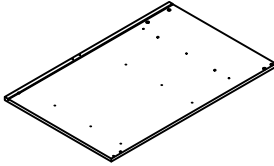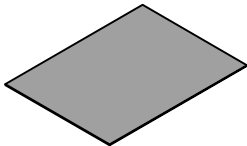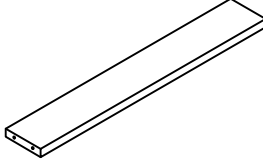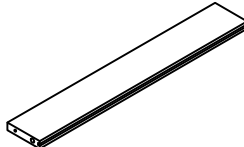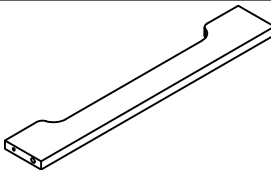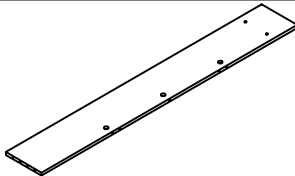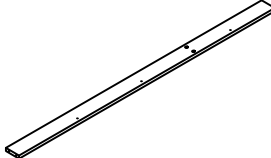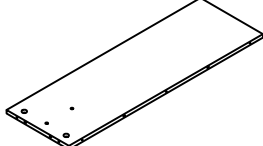NO.		QTY	SPARE
⑪		x1	
⑫		x1	
⑬		x1	
⑭		x1	
⑮		x1	
⑯		x1	
⑰		x2	
⑱		x1	
⑲		x1	
⑳		x1	

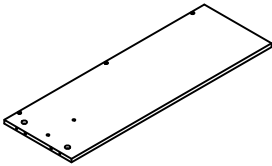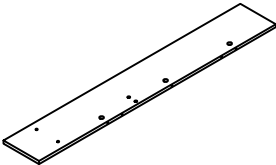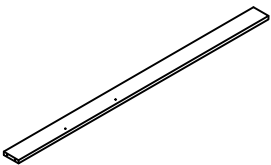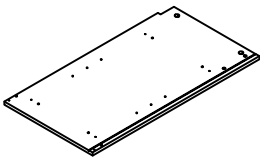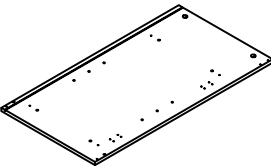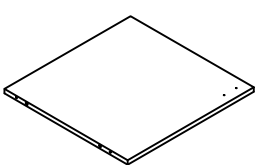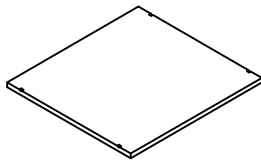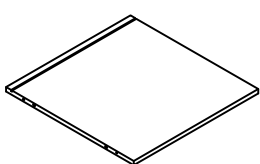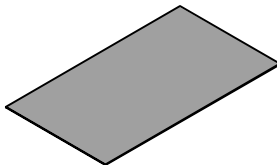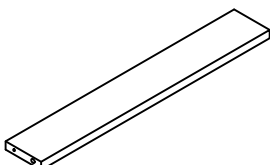
NO.	PARTS	QTY	SPARE
21		x1	
22		x1	
23		x1	
24		x1	
25		x1	
26		x1	
27		x1	
28		x1	
29		x1	
30		x1	

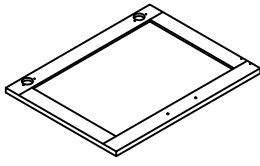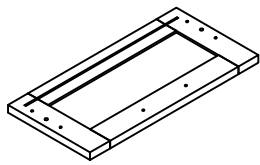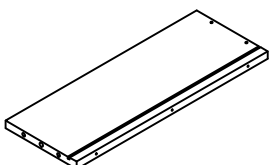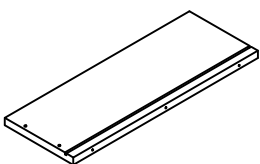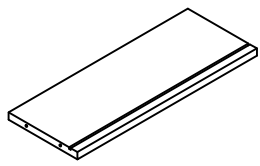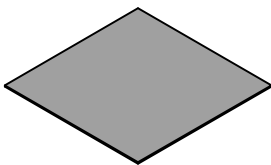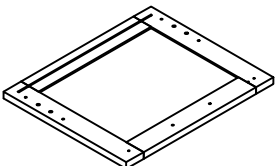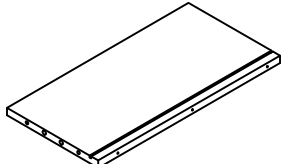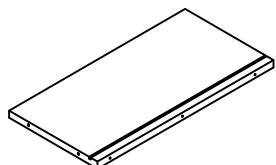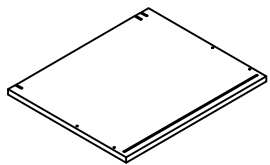
NO.		QTY	SPARE
31		x1	
32		x1	
33		x1	
34		x1	
35		x1	
36		x2	
37		x1	
38		x1	
39		x1	
40		x1	




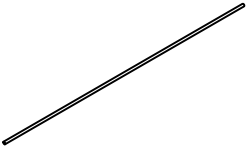
NO.	PARTS	QTY	SPARE
④1		x2	
	 Hardware Kit	x1	

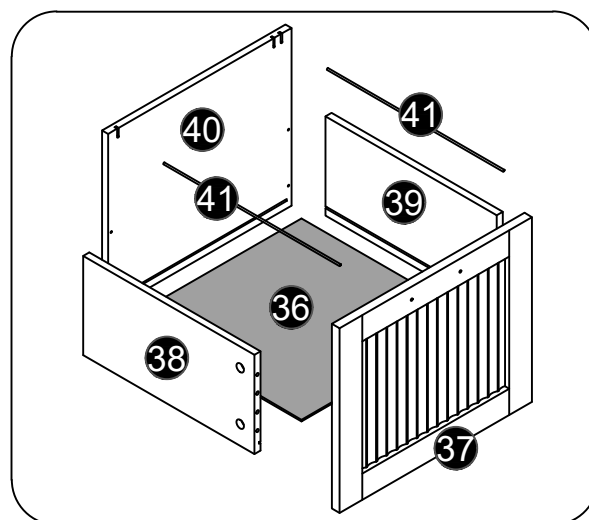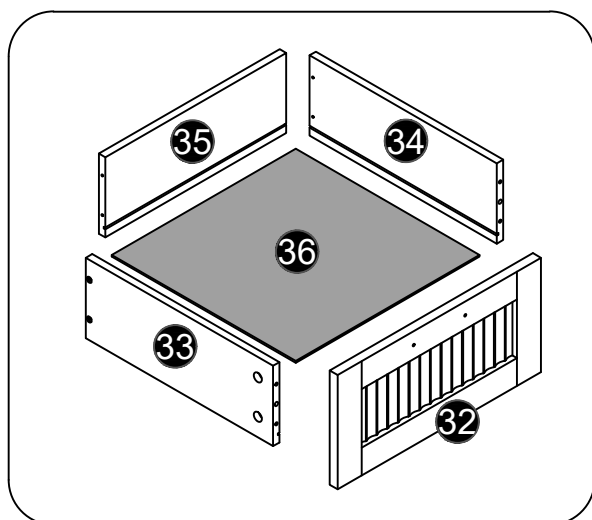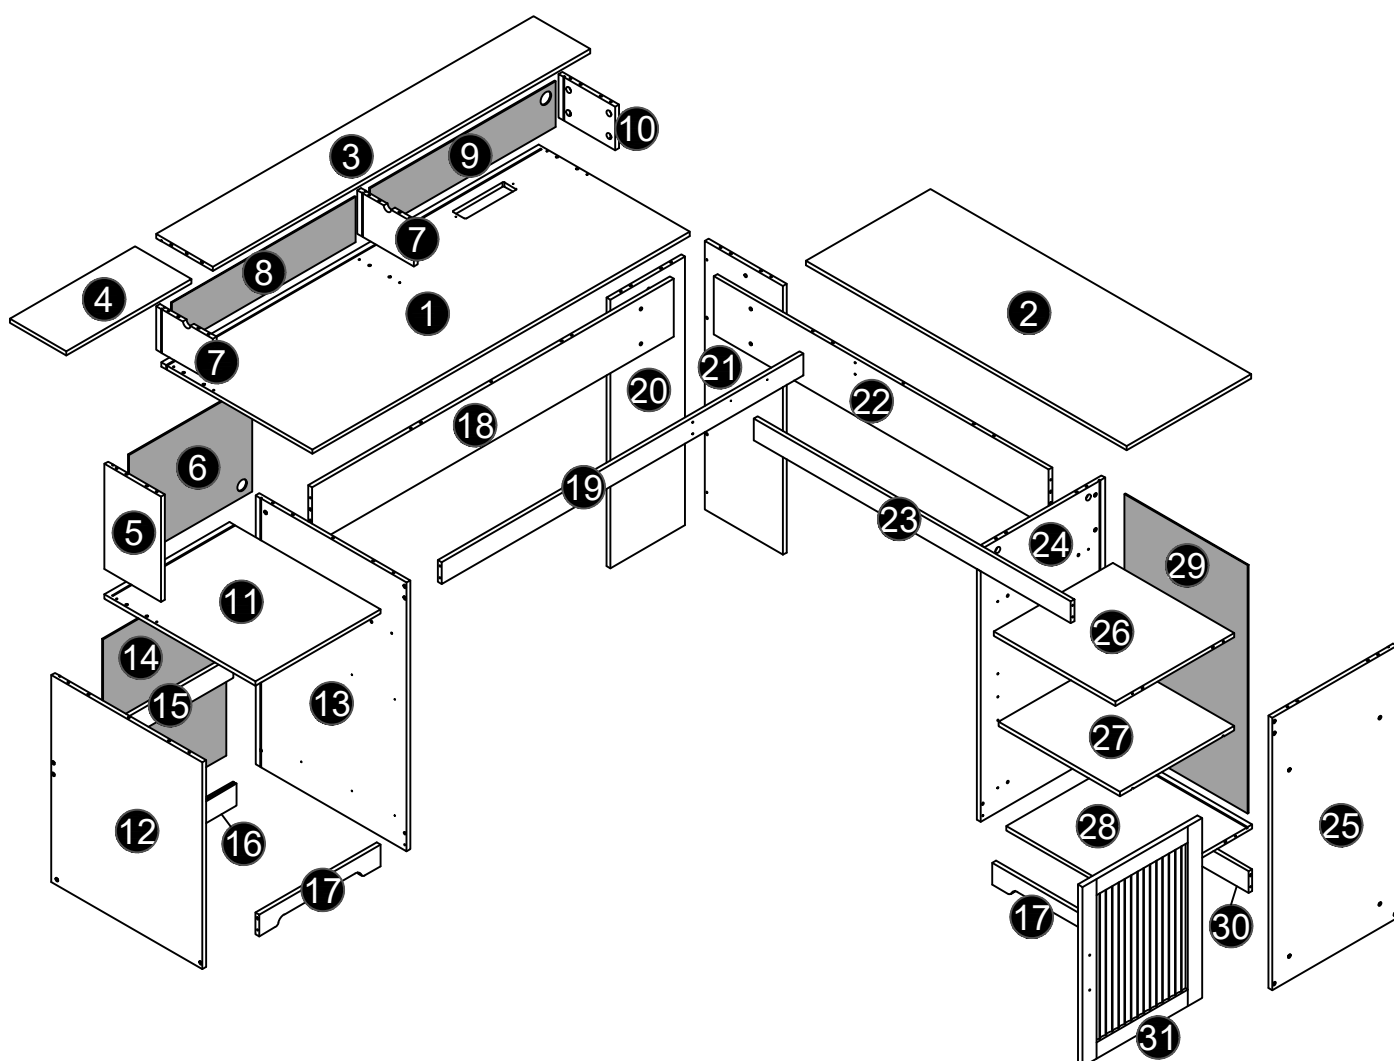


A x44 Ø6x35mm +3(spare)	B x46 Ø15x10mm +3(spare)	C x63 Ø6x30mm +3(spare)	D x46 Ø4x35mm +3(spare)	E x58 Ø3.5x12mm +3(spare)	F x3
G x6	H x1 Ø3x14mm	I x1	J x4	K x22 Ø3x16mm +2(spare)	L x7
M x1	N x2 Ø3.5x12mm	O x2	P x1	Q x6	R x1
S x45 +4(spare)	T x2				
CL x2 L350mm	CR x2 L350mm	DL x2 L350mm	DR x2 L350mm		

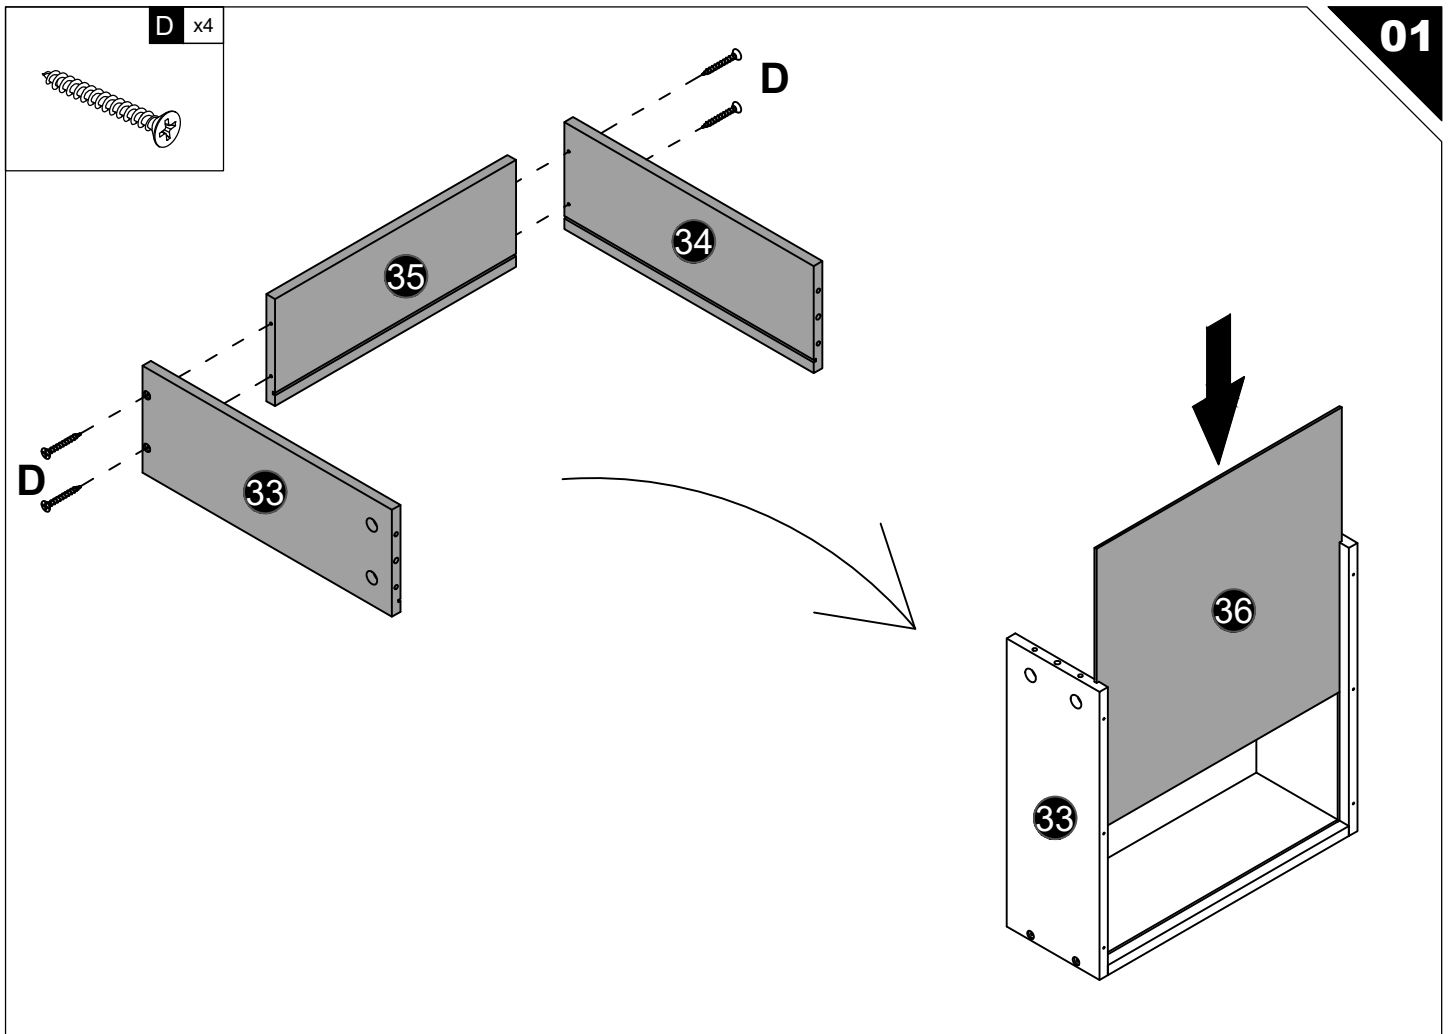

A x4	B x4	C x2	E x6	F x1
				
G x2	DL x1	DR x1		
				

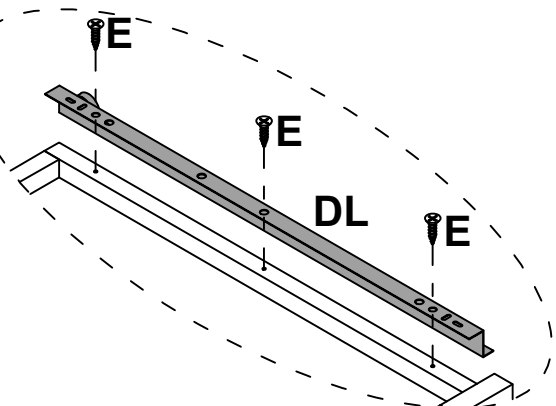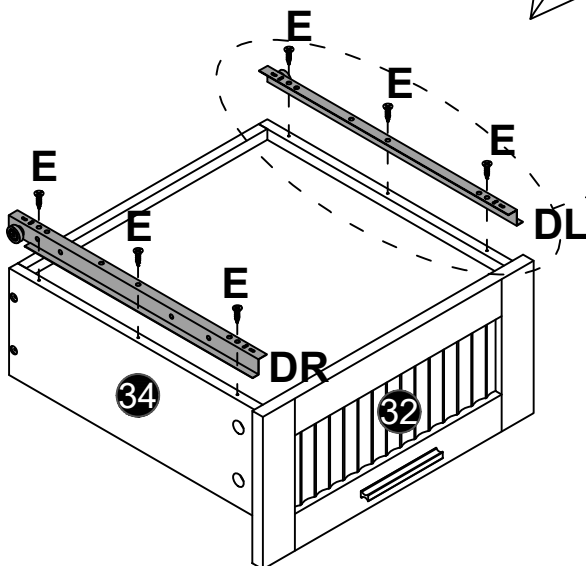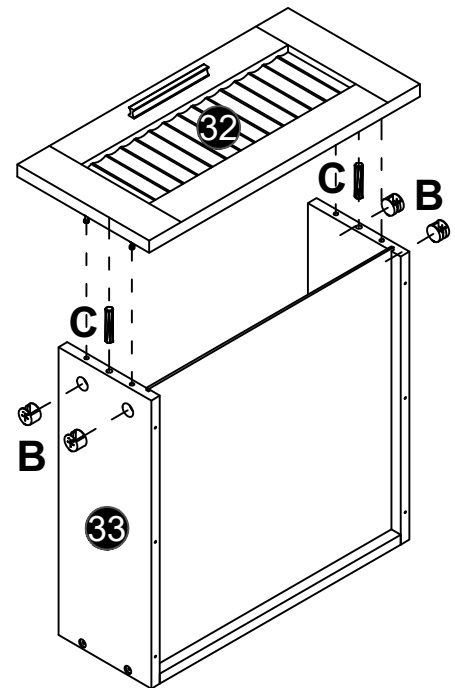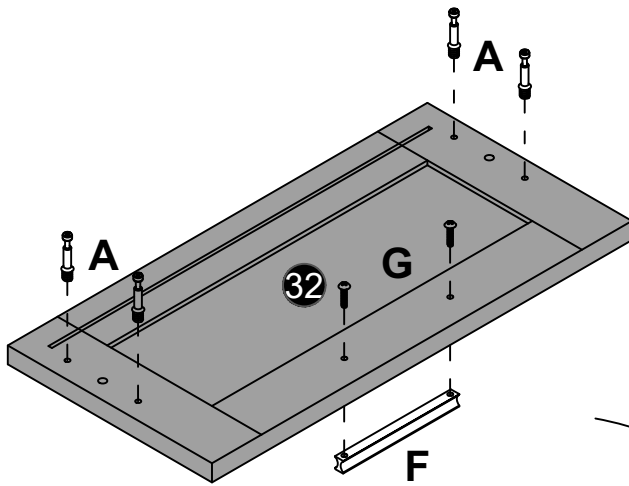

A x4




B x4



C x4







D x4



F x1





G x2

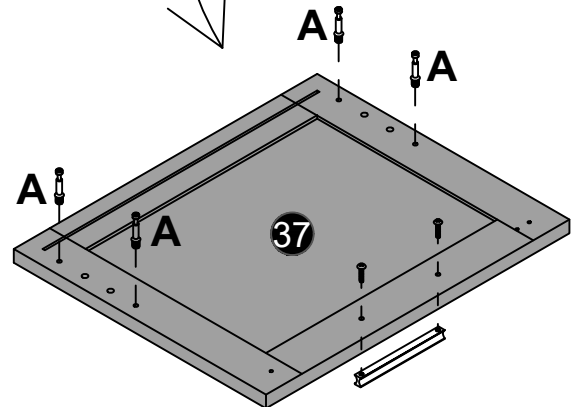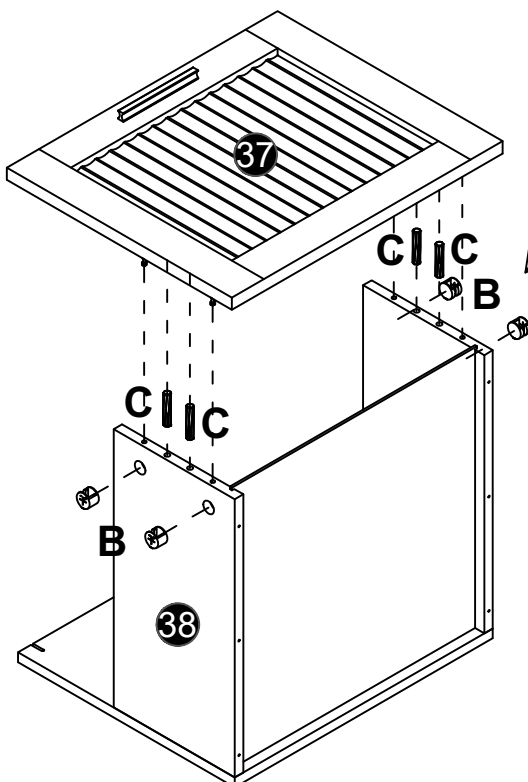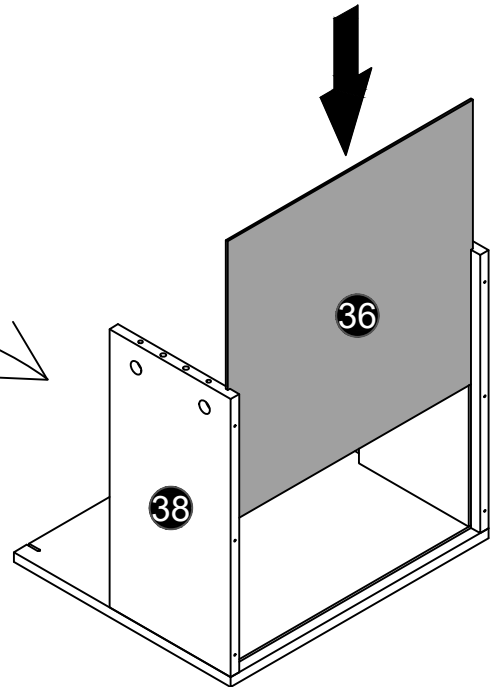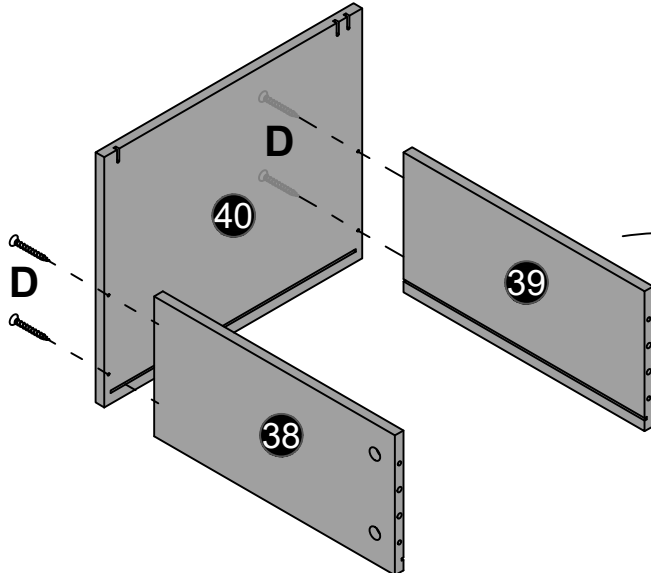




E x6

DL x1

DR x1

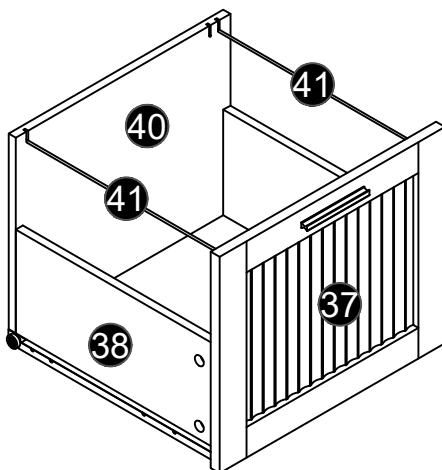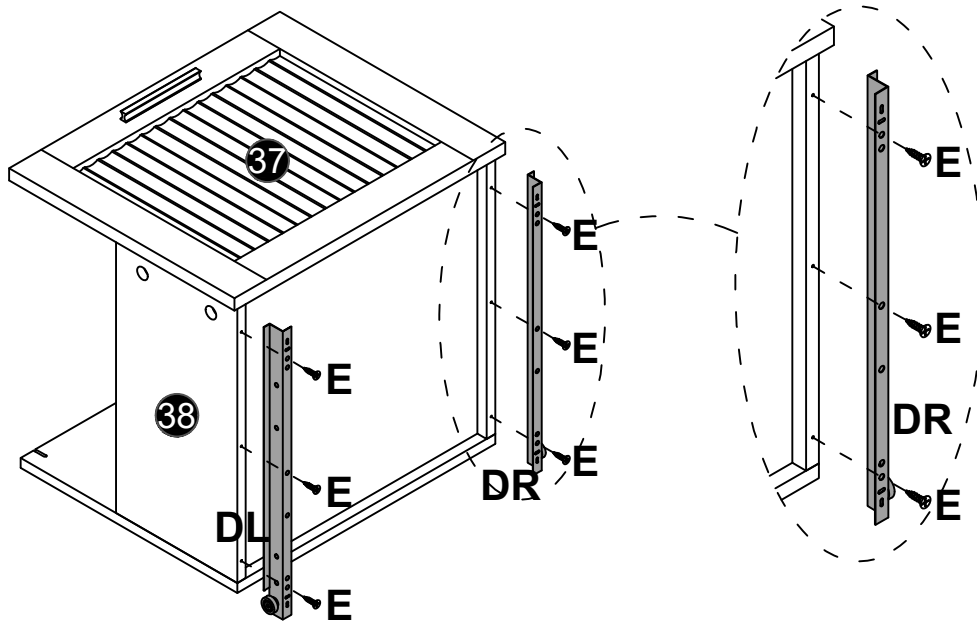

OR

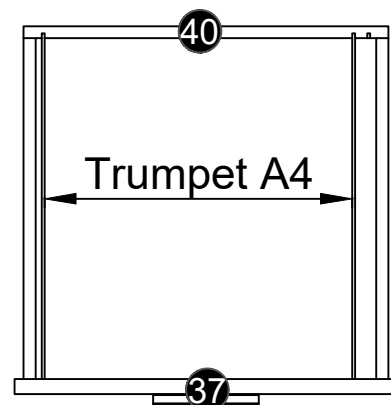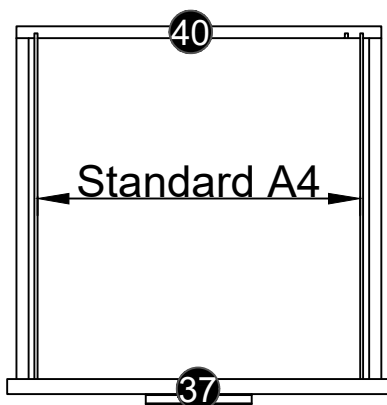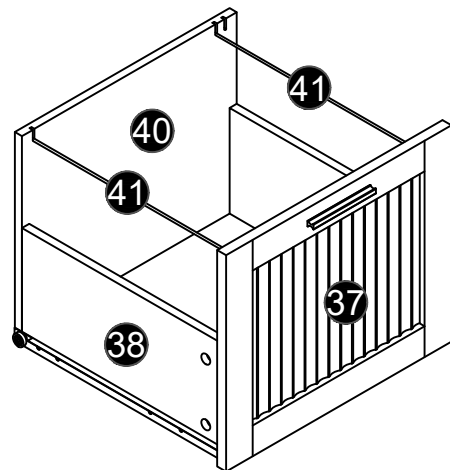


You can adjust the position of the iron bar according to your own file size.

H x1




06

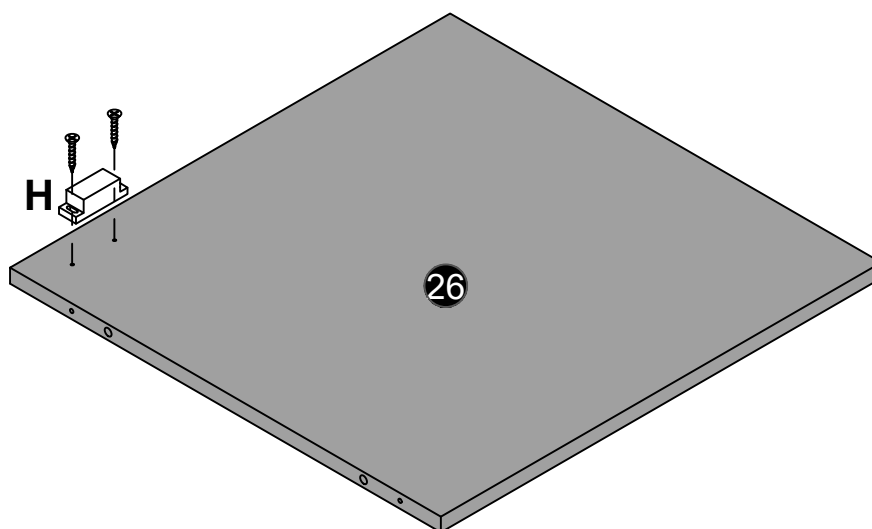


C x6



D x6






07

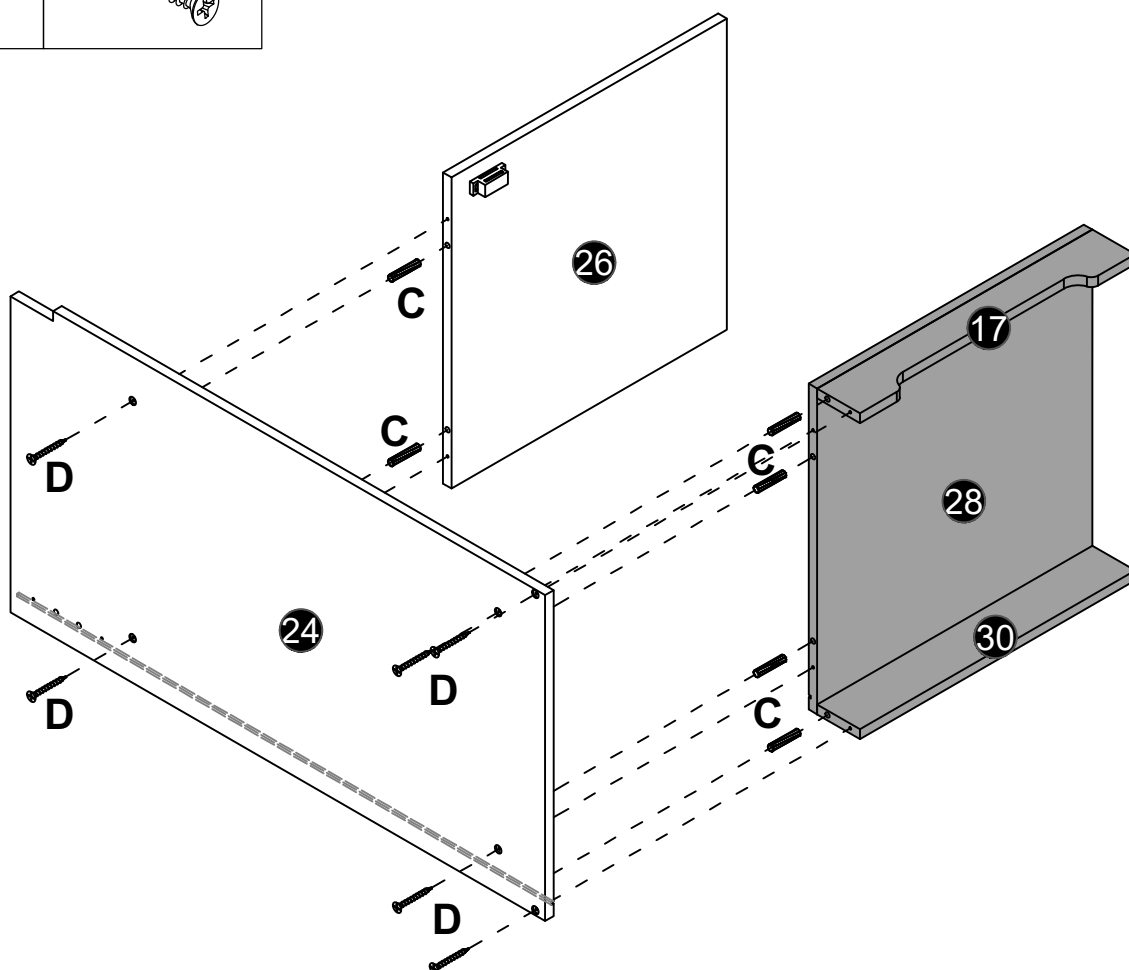



C x6



D x6

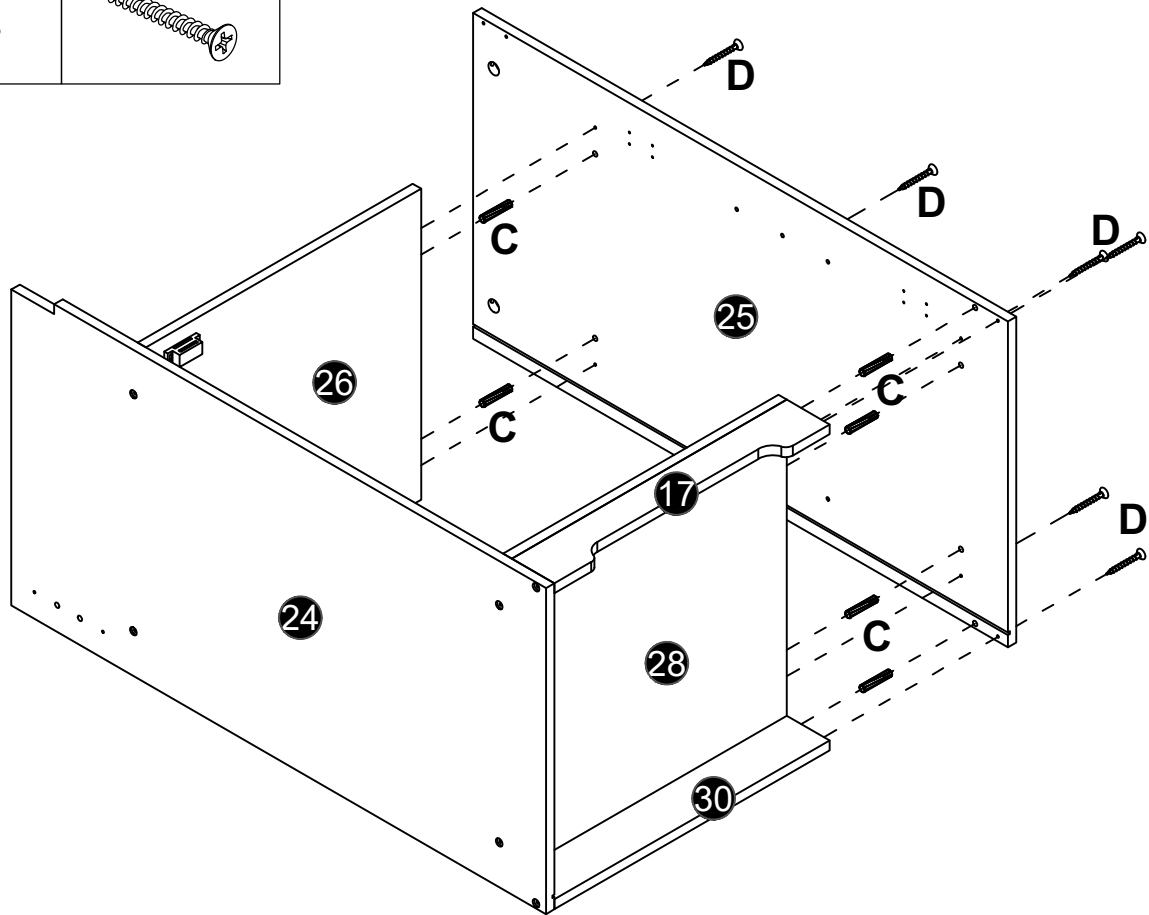

C x2


D x3

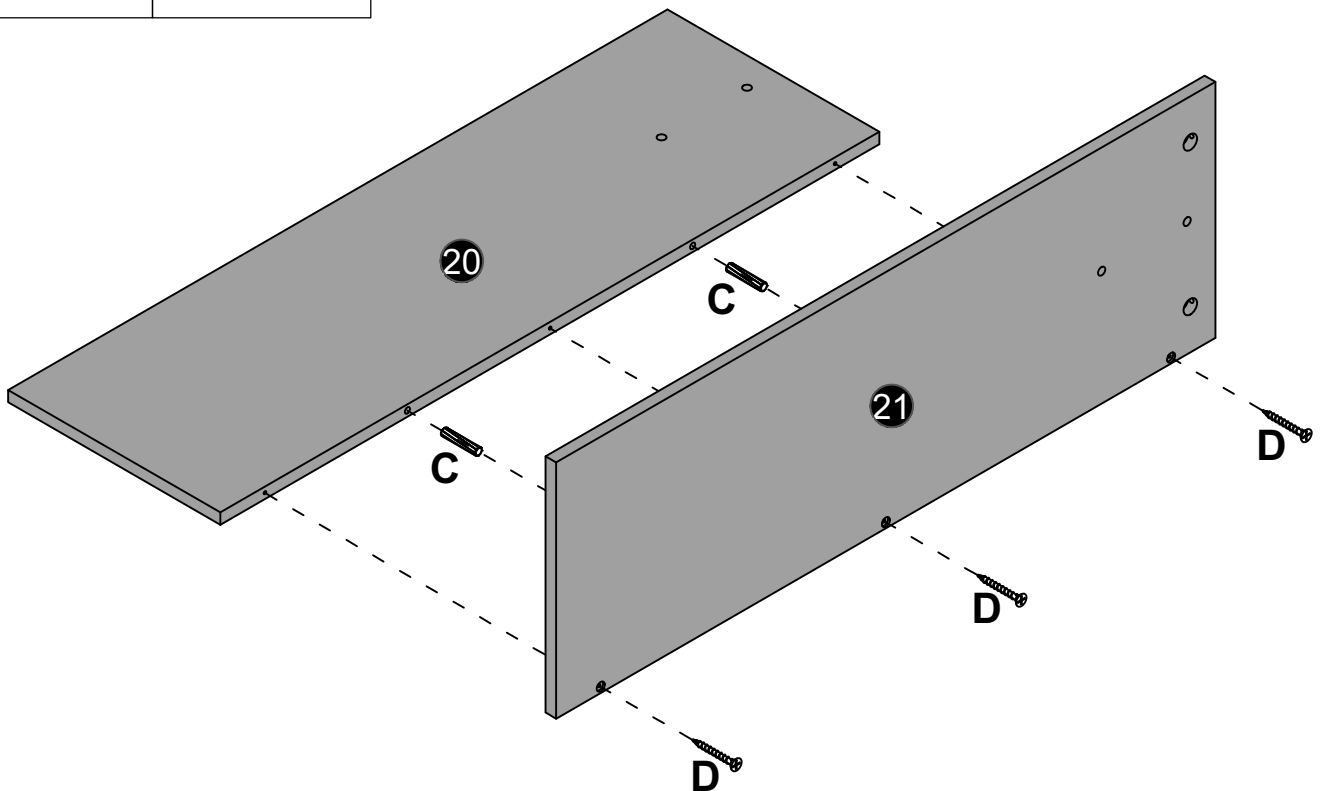

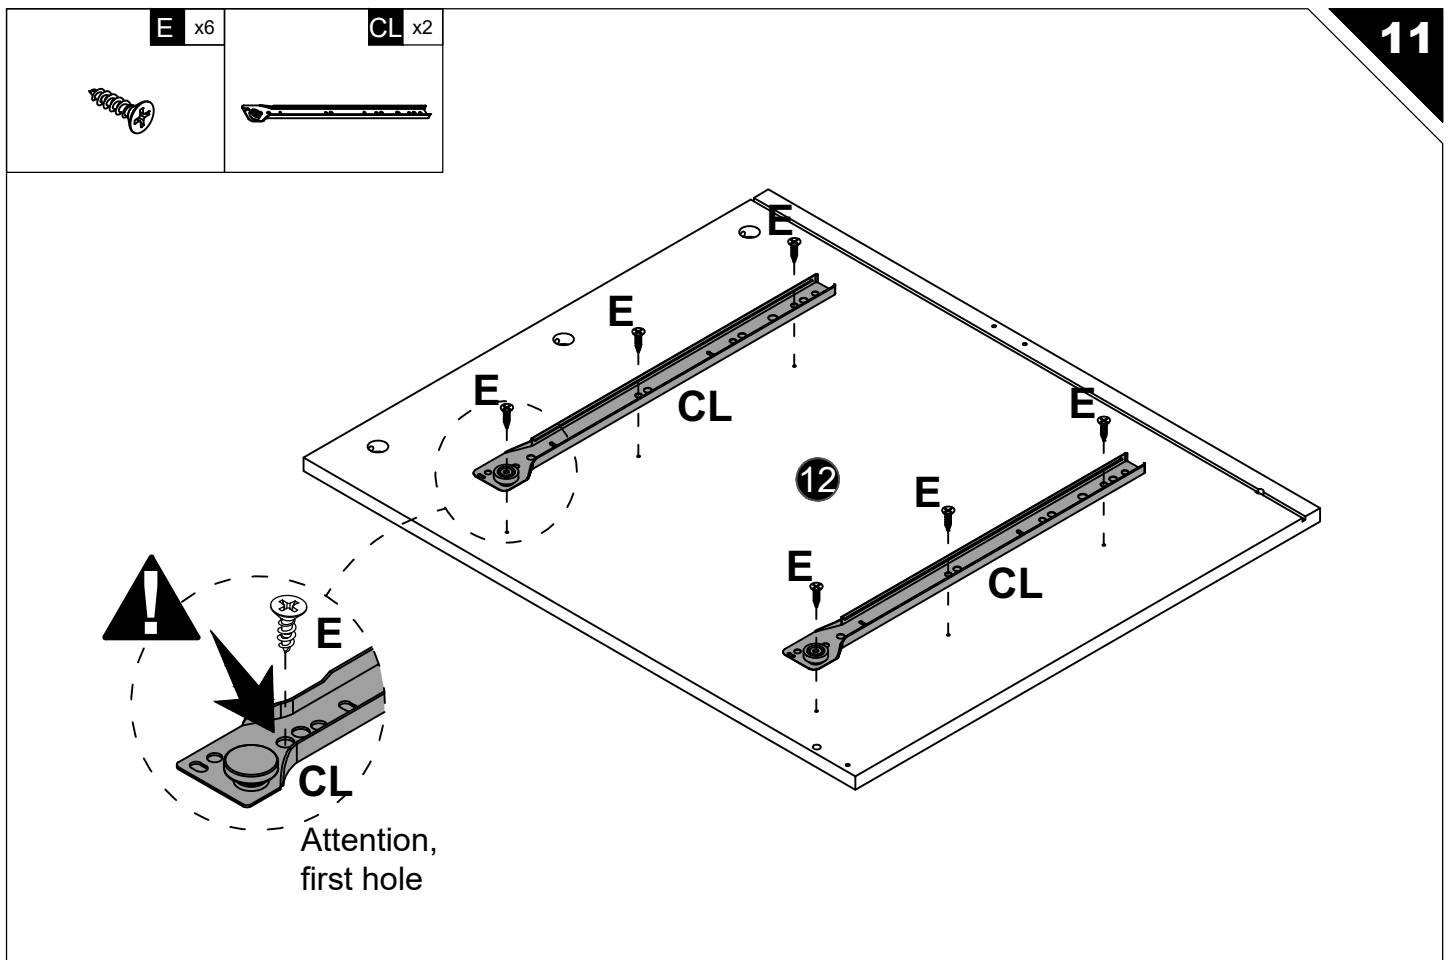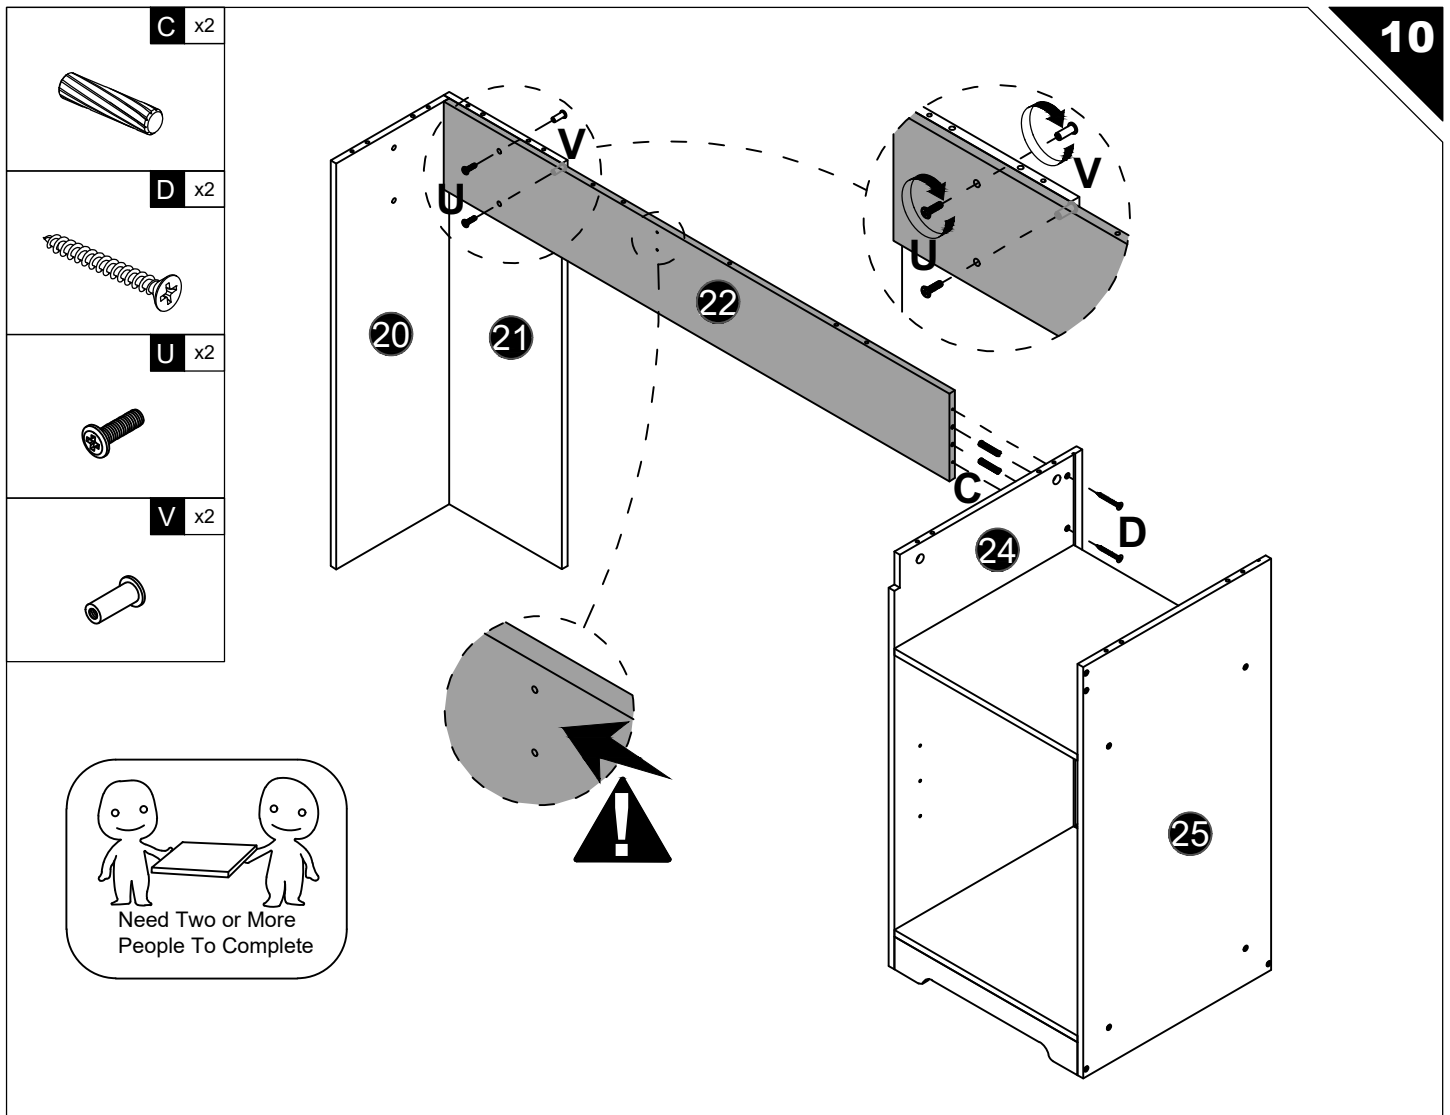




E x6

CR x2


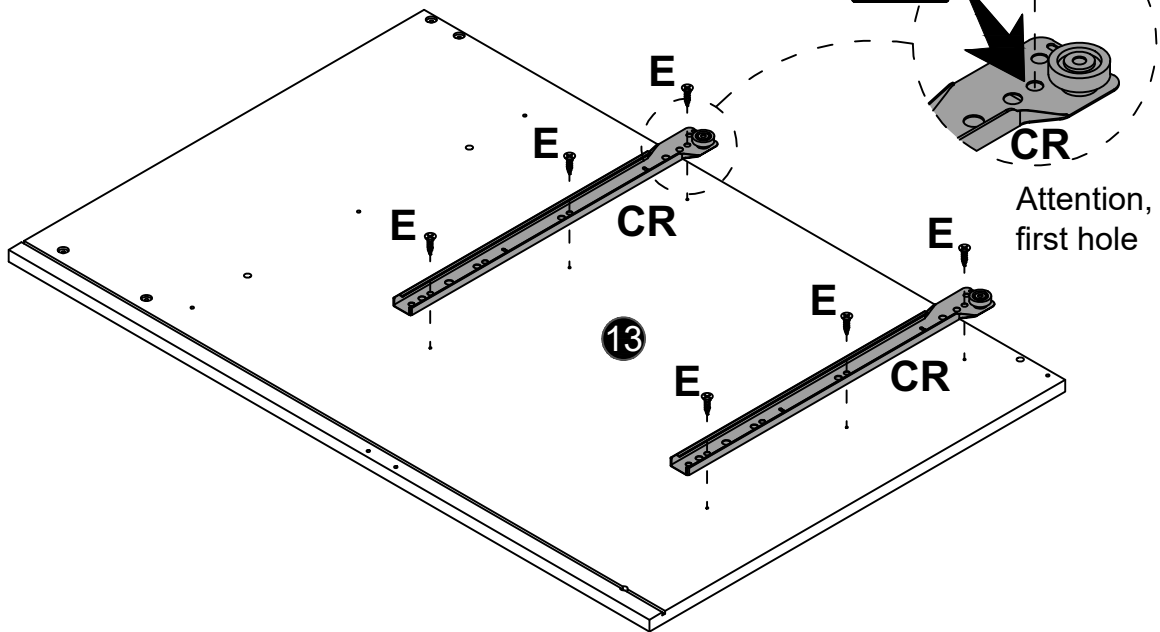


C x2

D x4

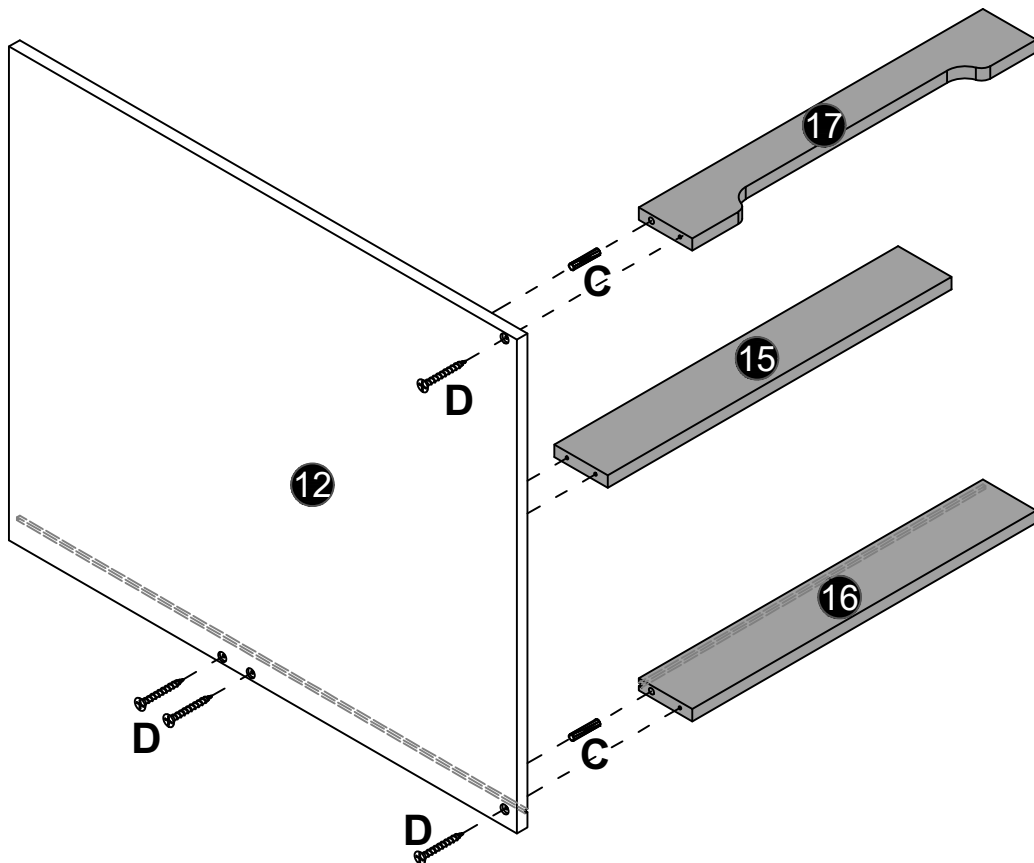


A x3

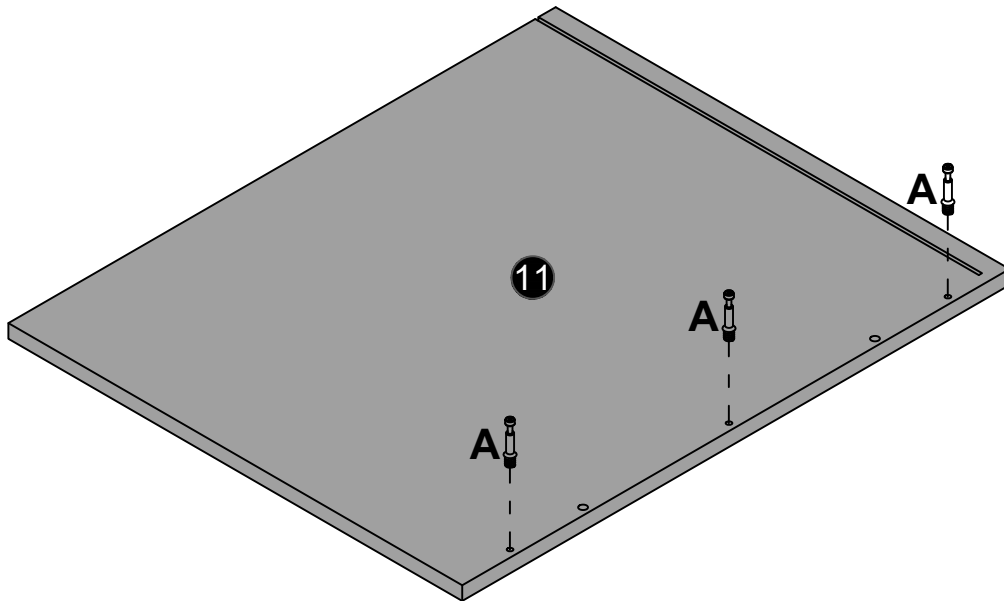

B x3




C x2

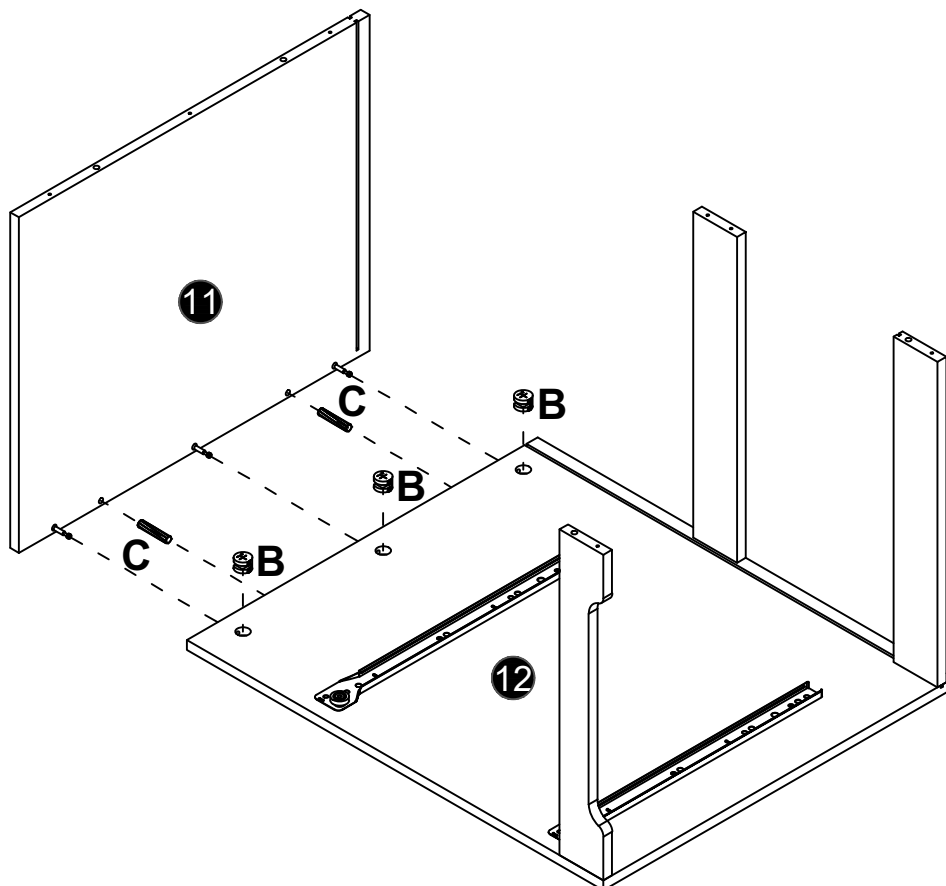


C x4




16





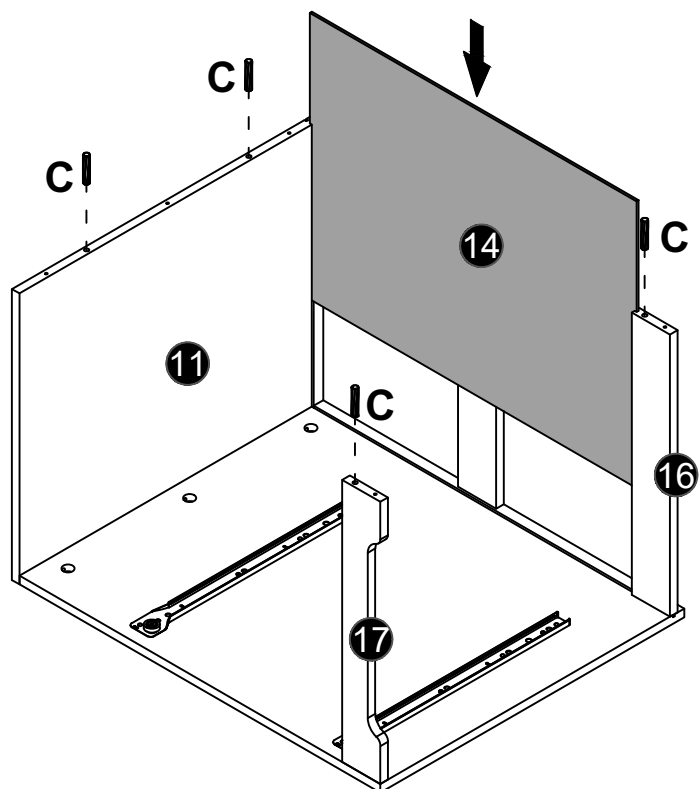


D x7





17


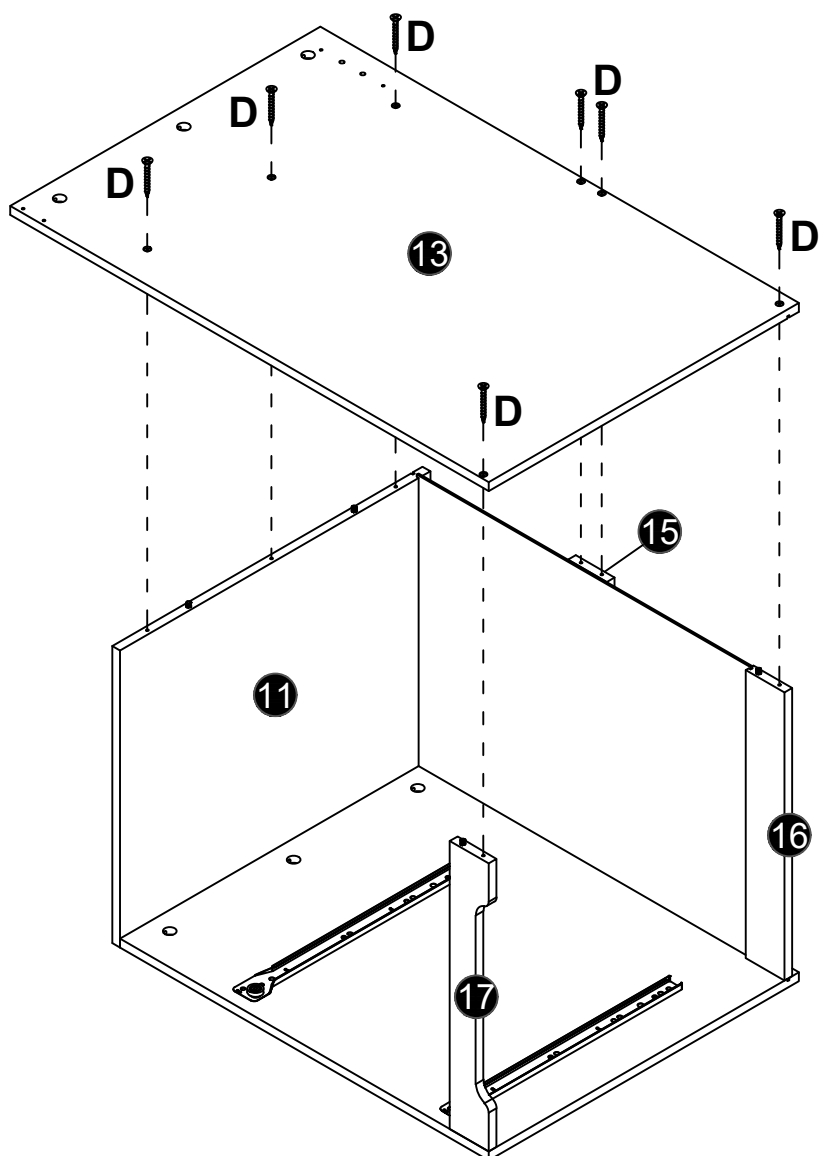


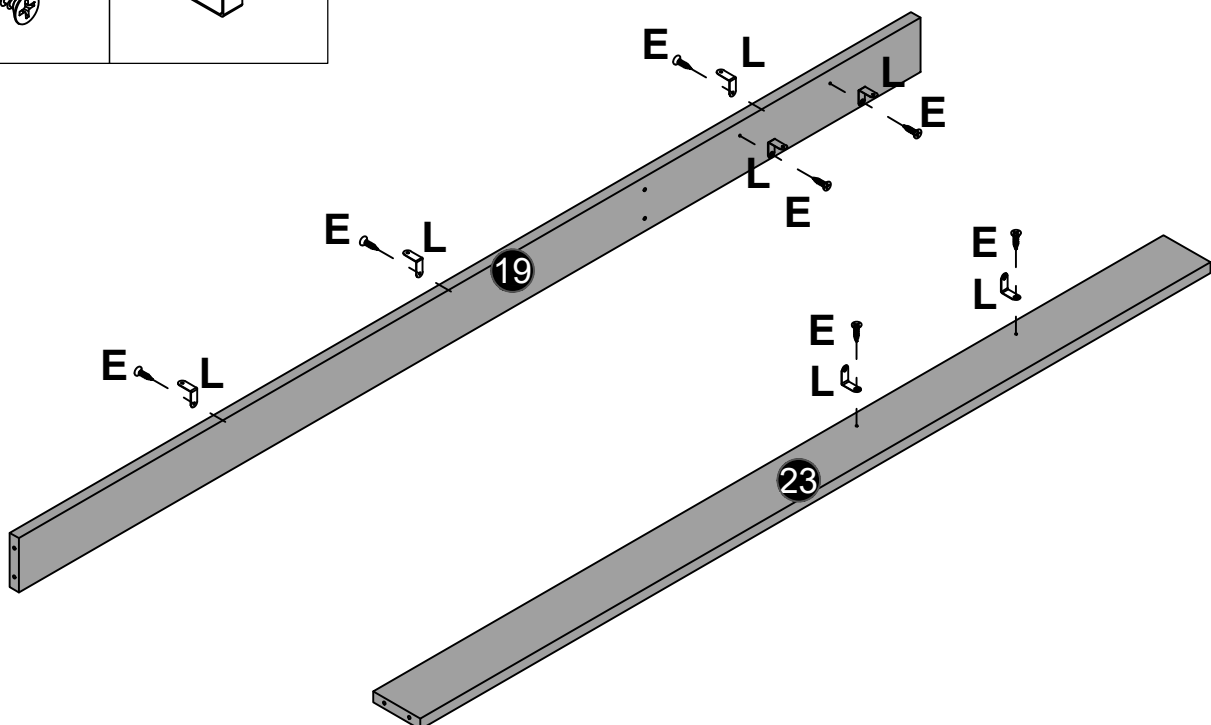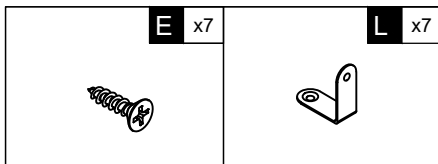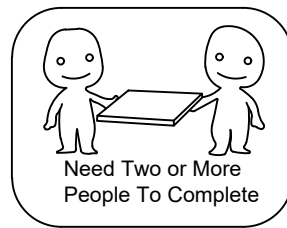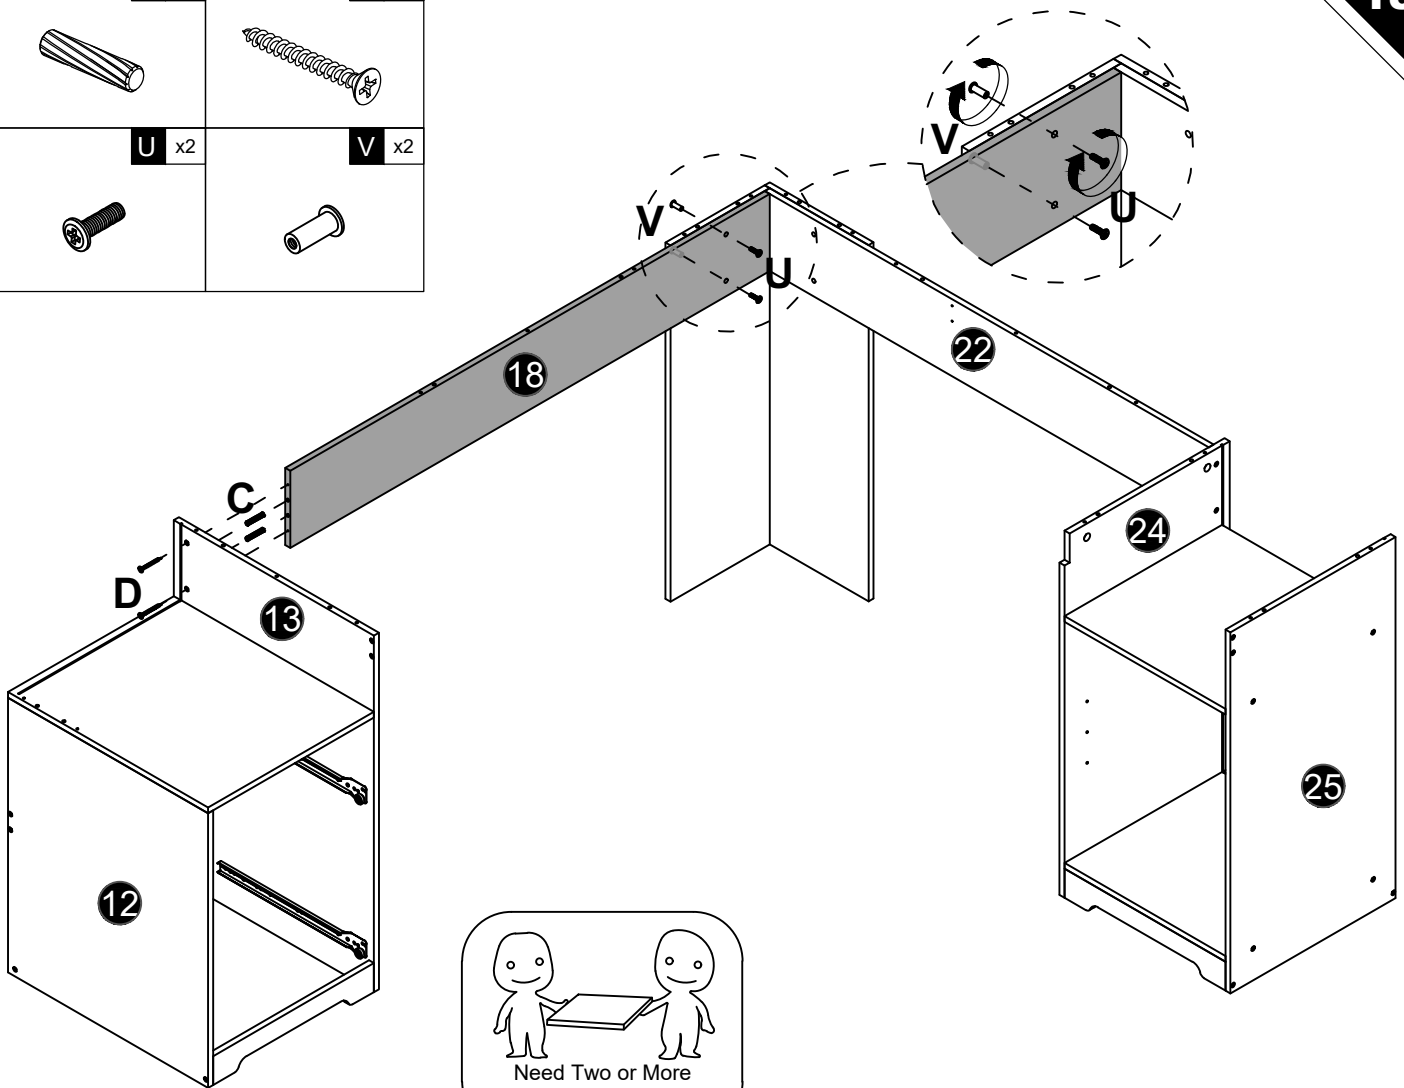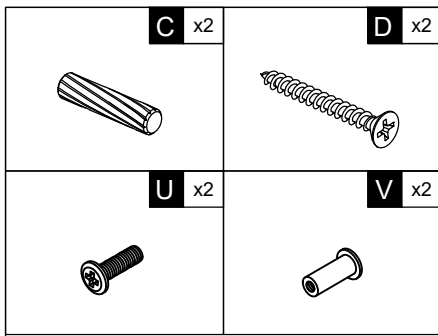

D x4

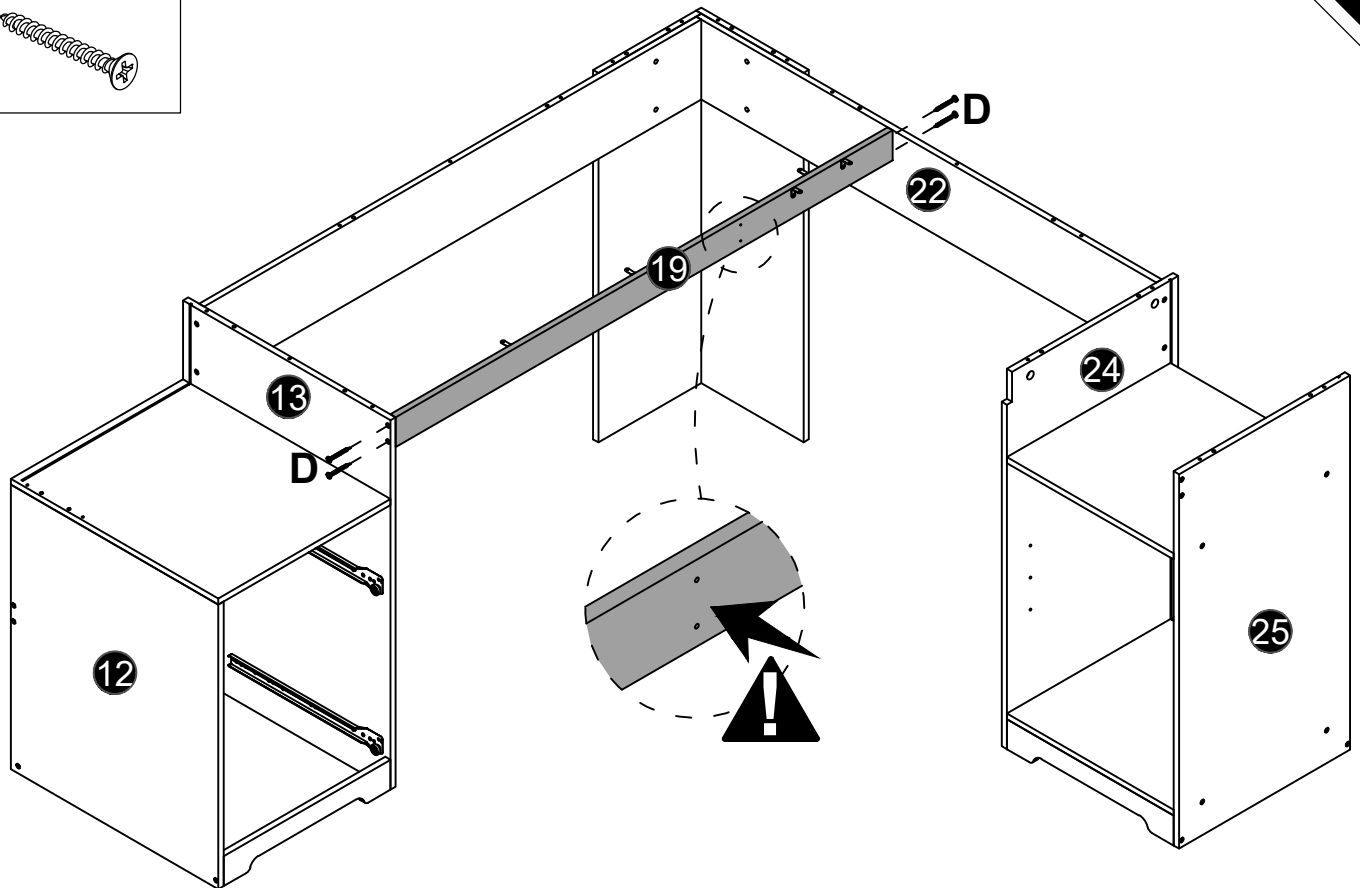


D x4

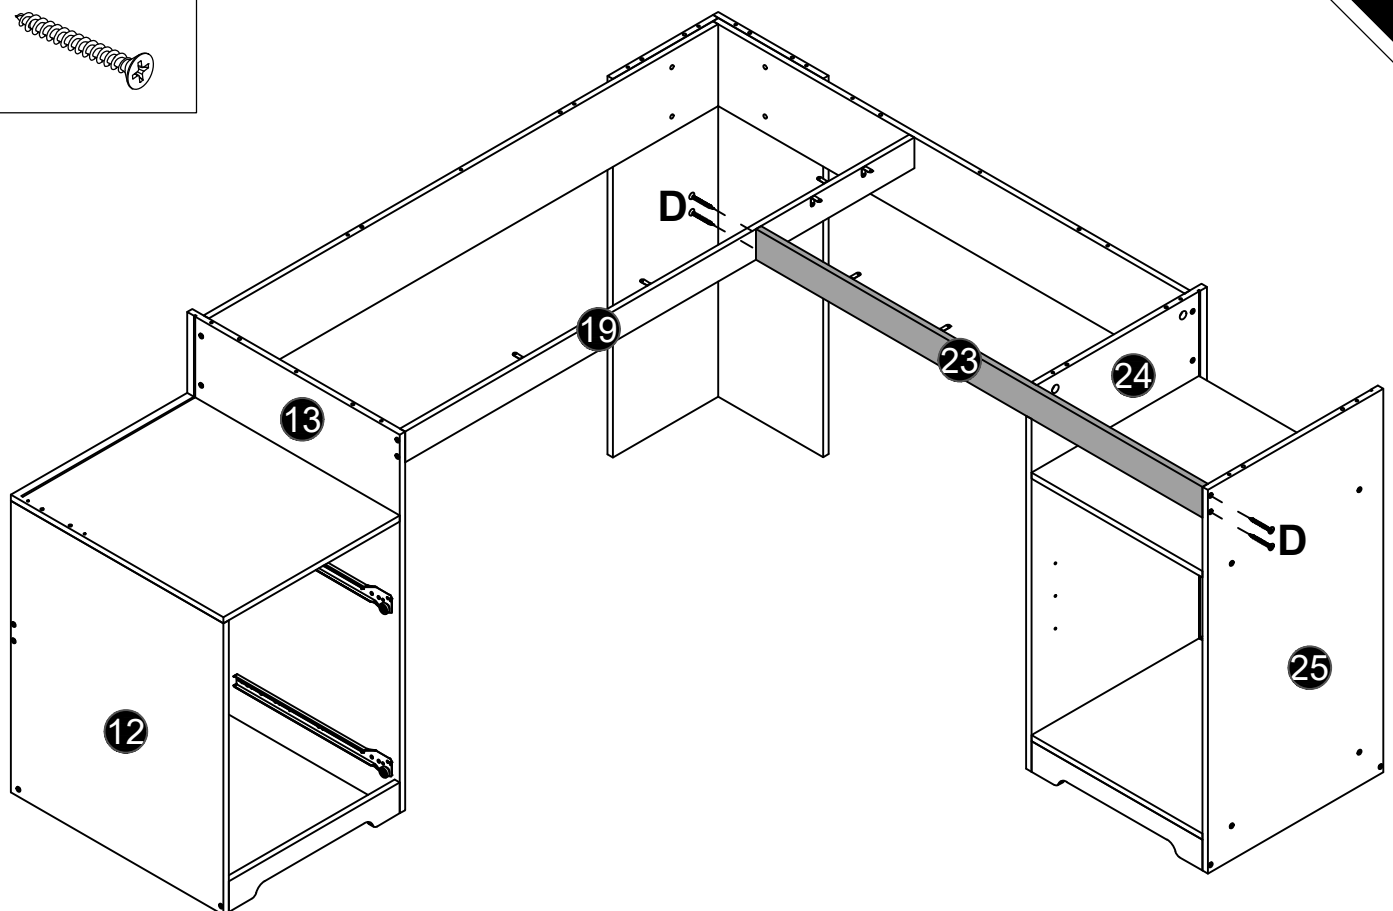



C x14

22

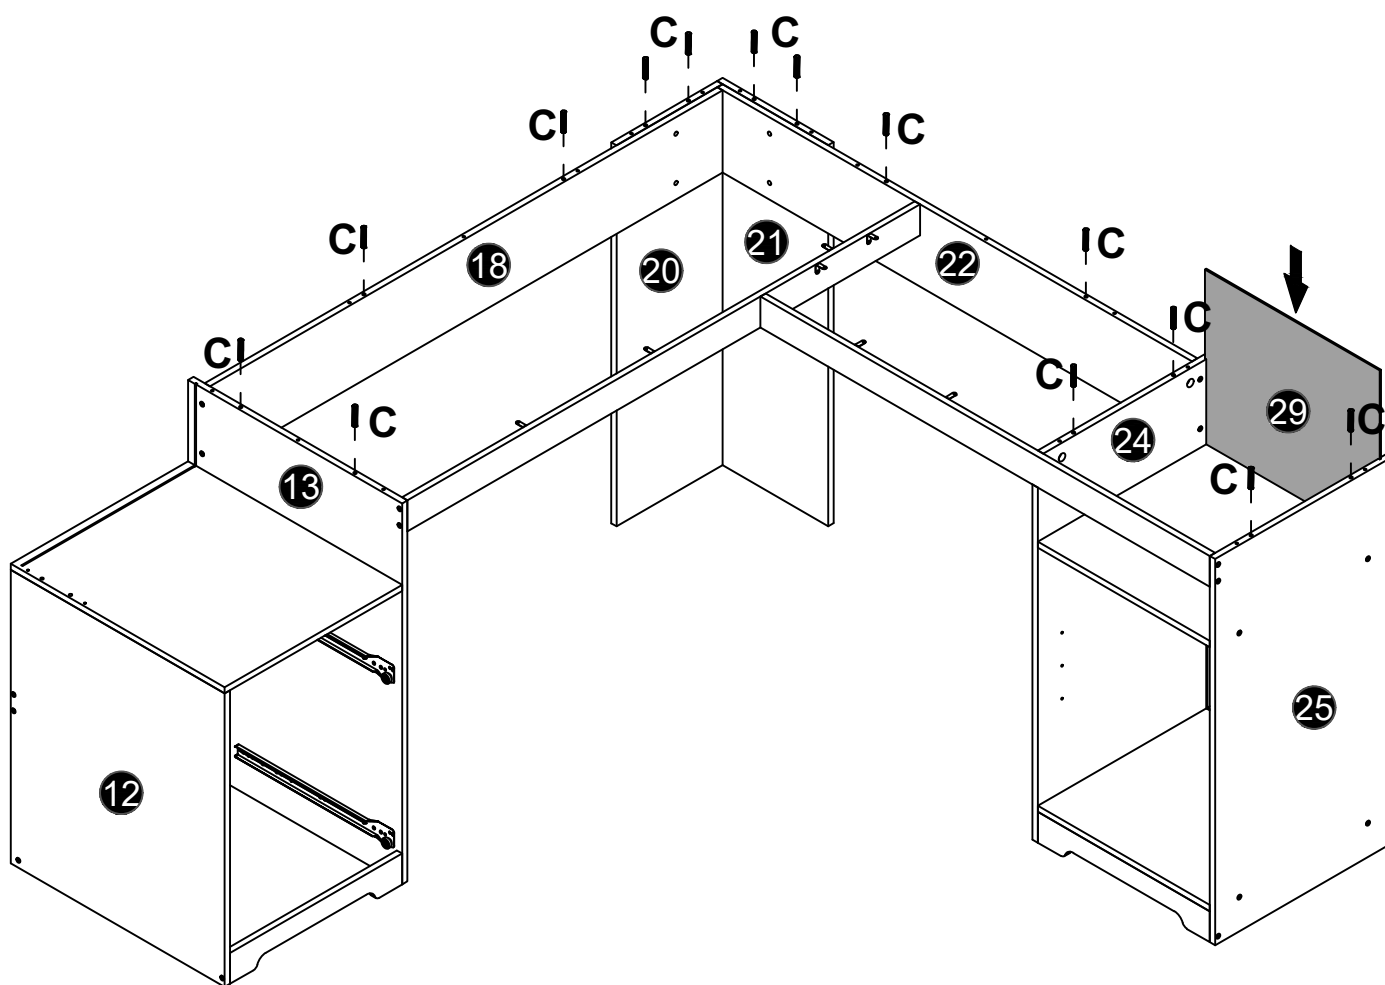


A x11

23

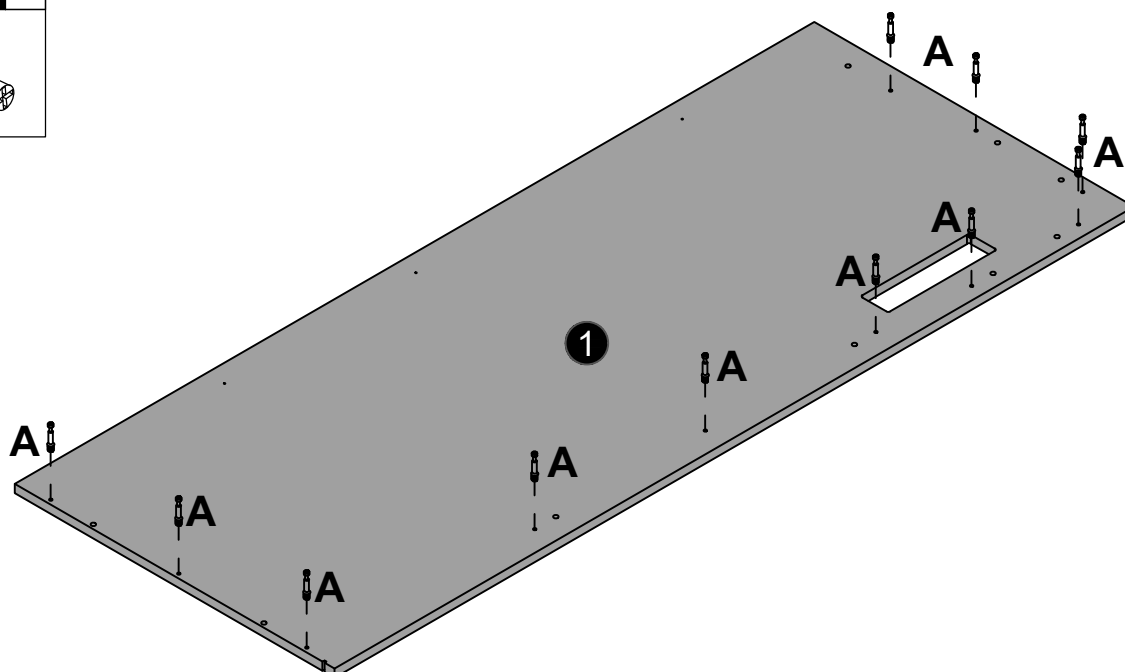



B x11

E x3

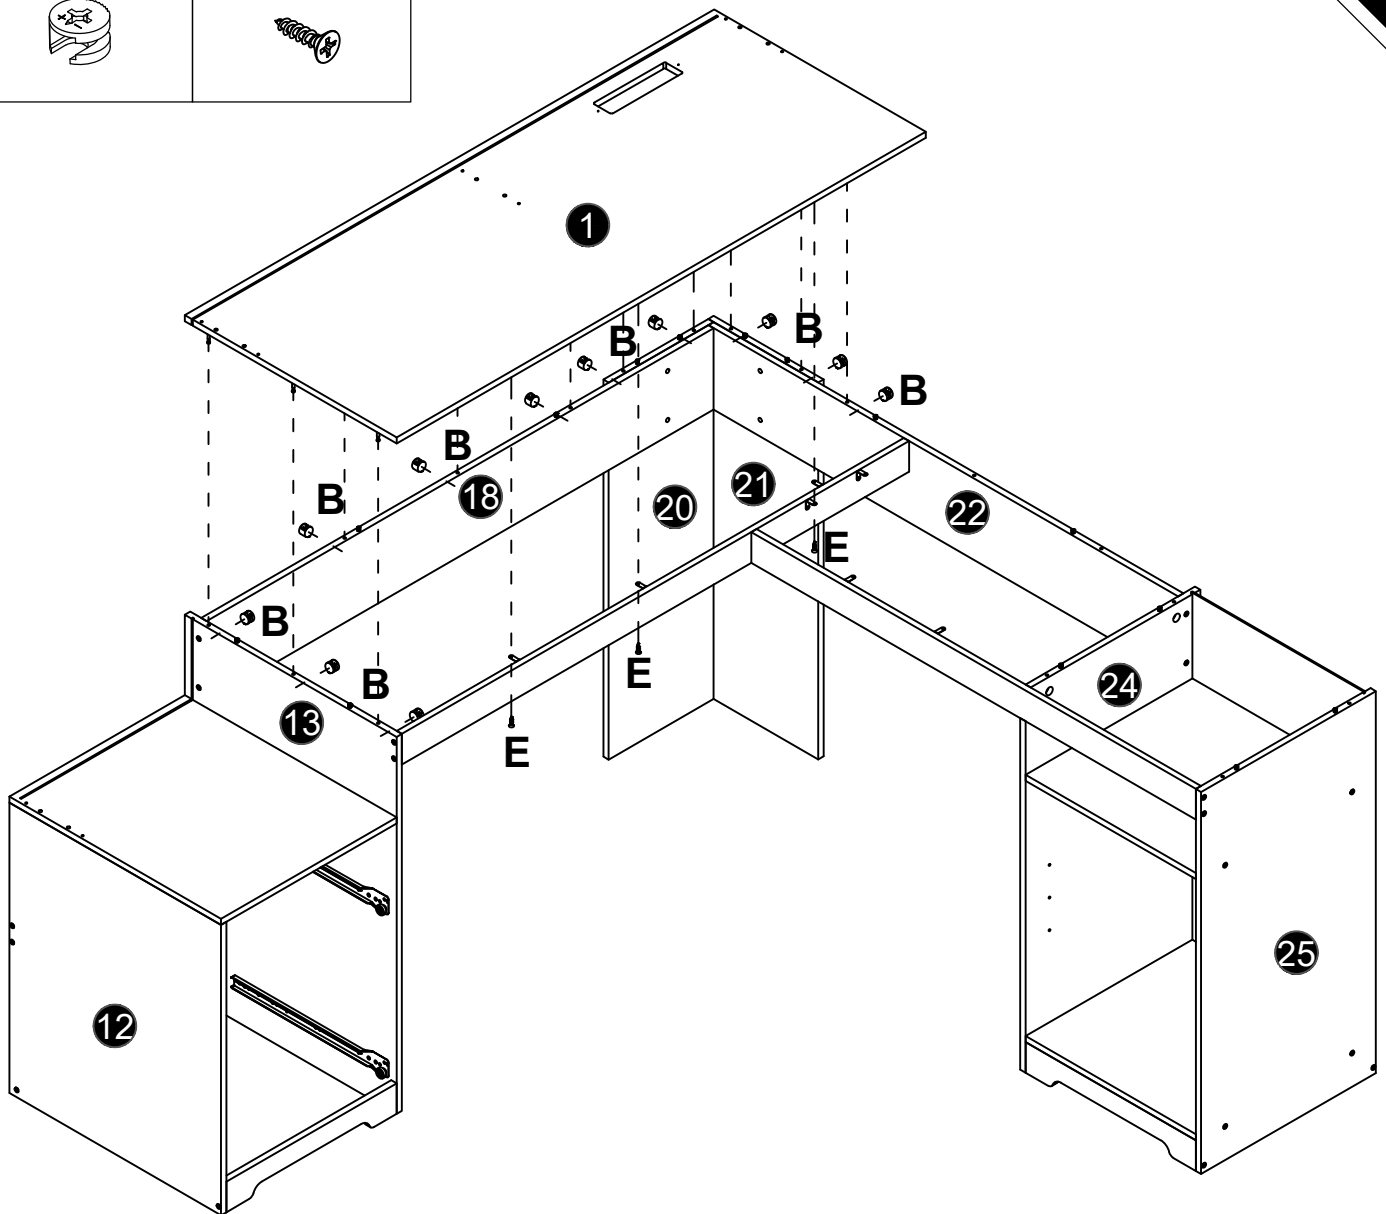


A x6

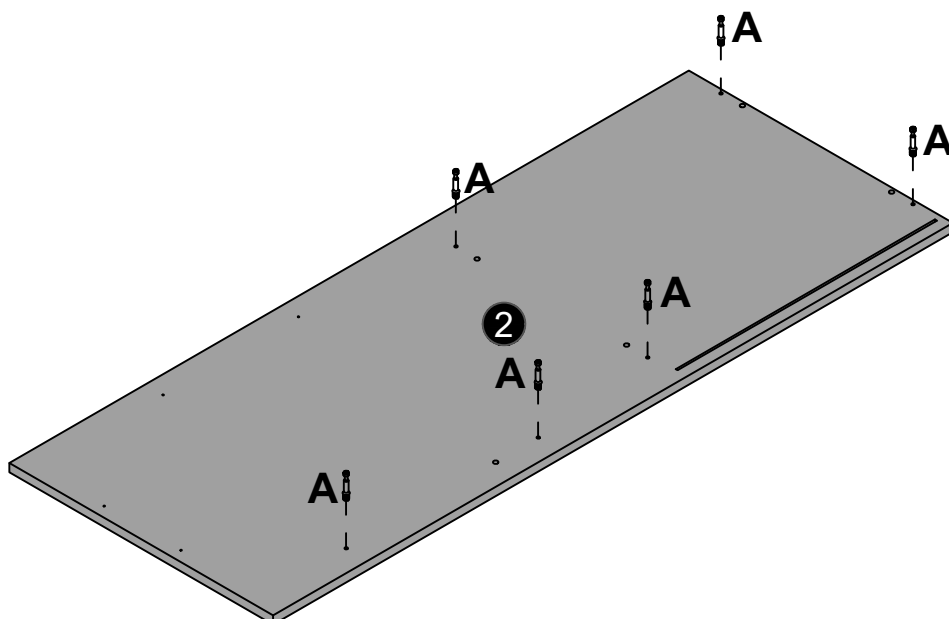


B x6



E x4

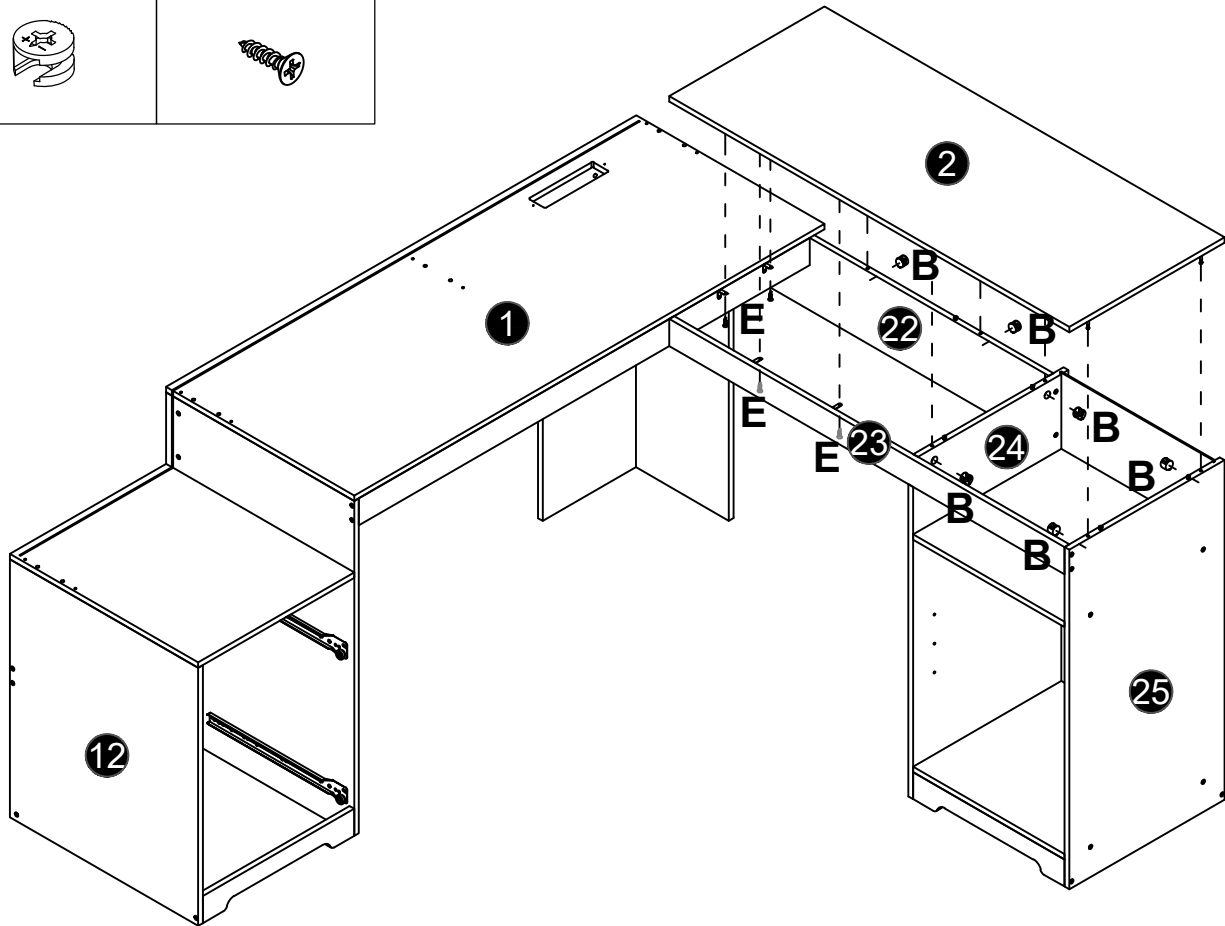


A x8





M x1




N x2

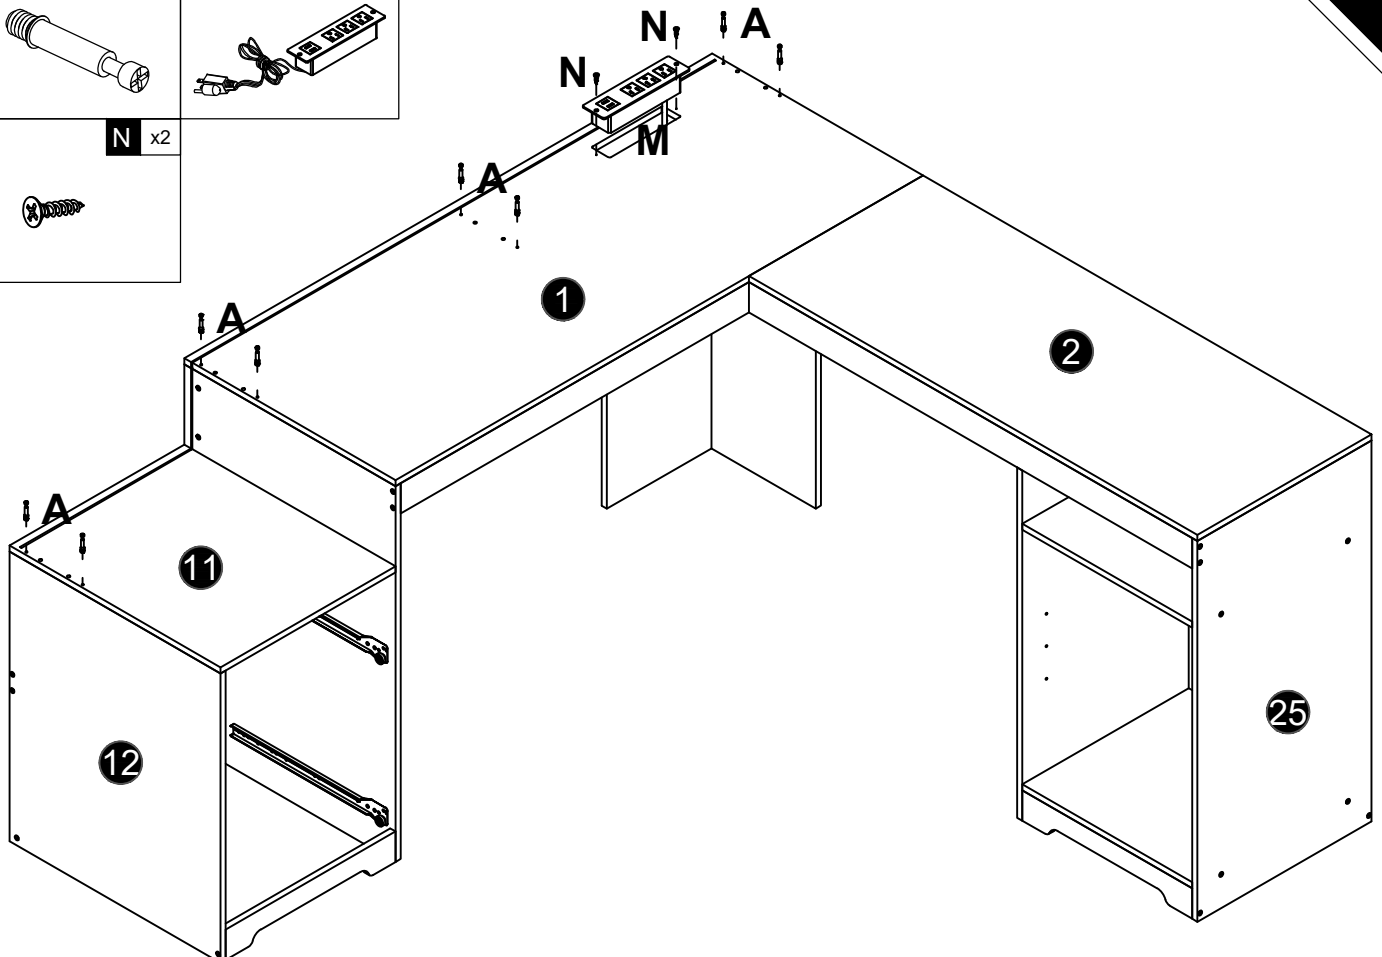

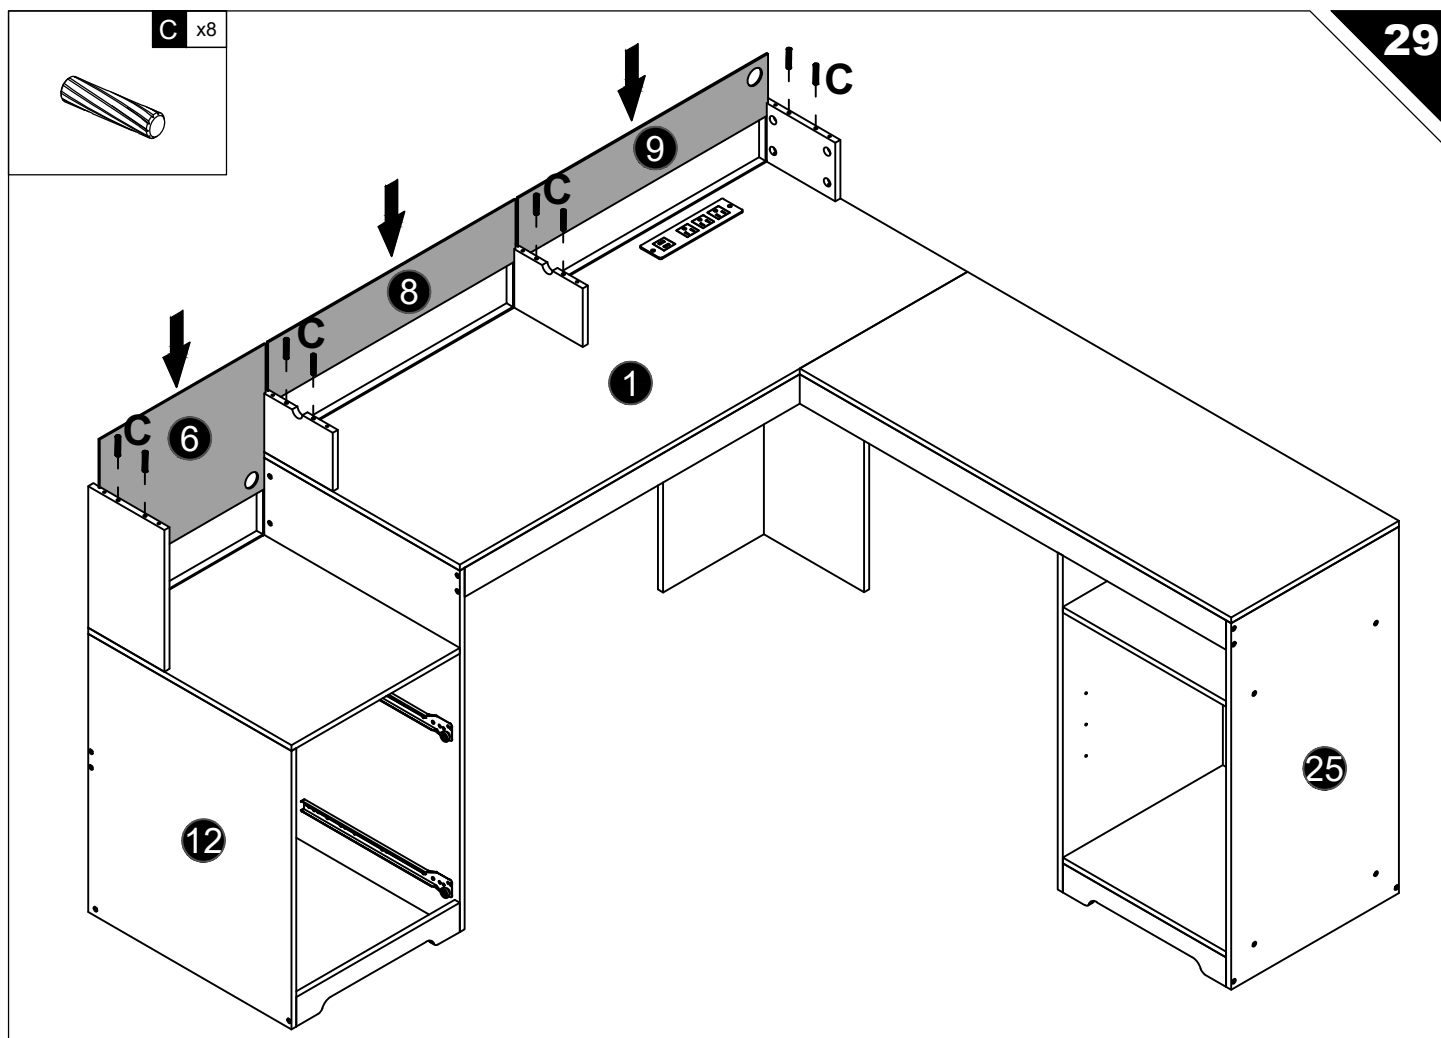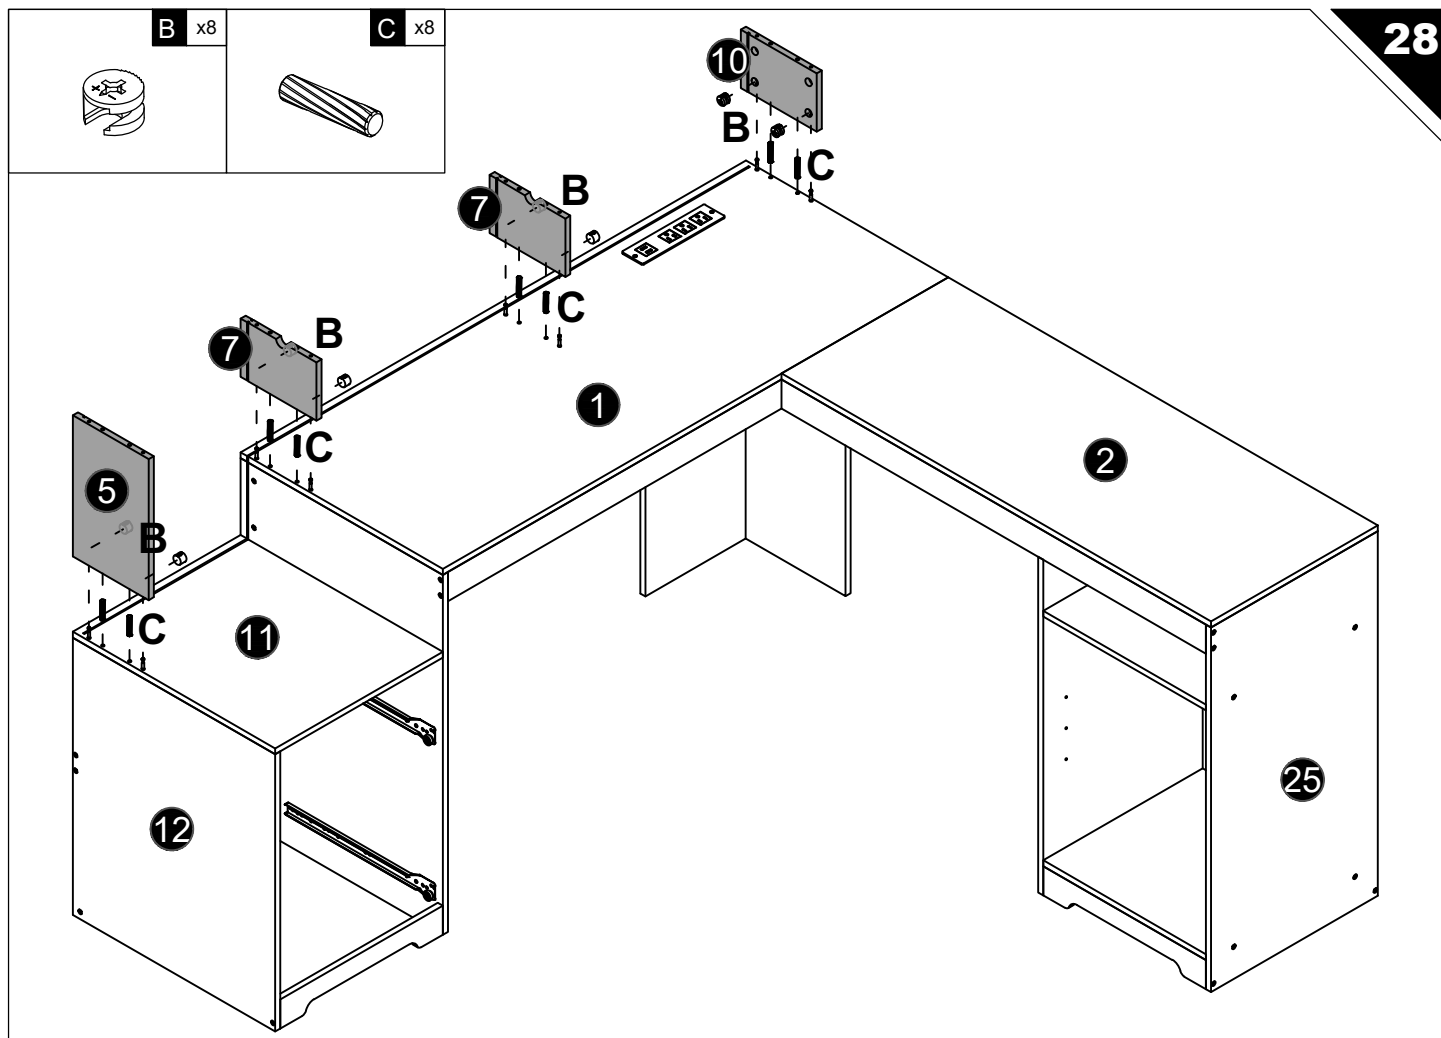


O x2

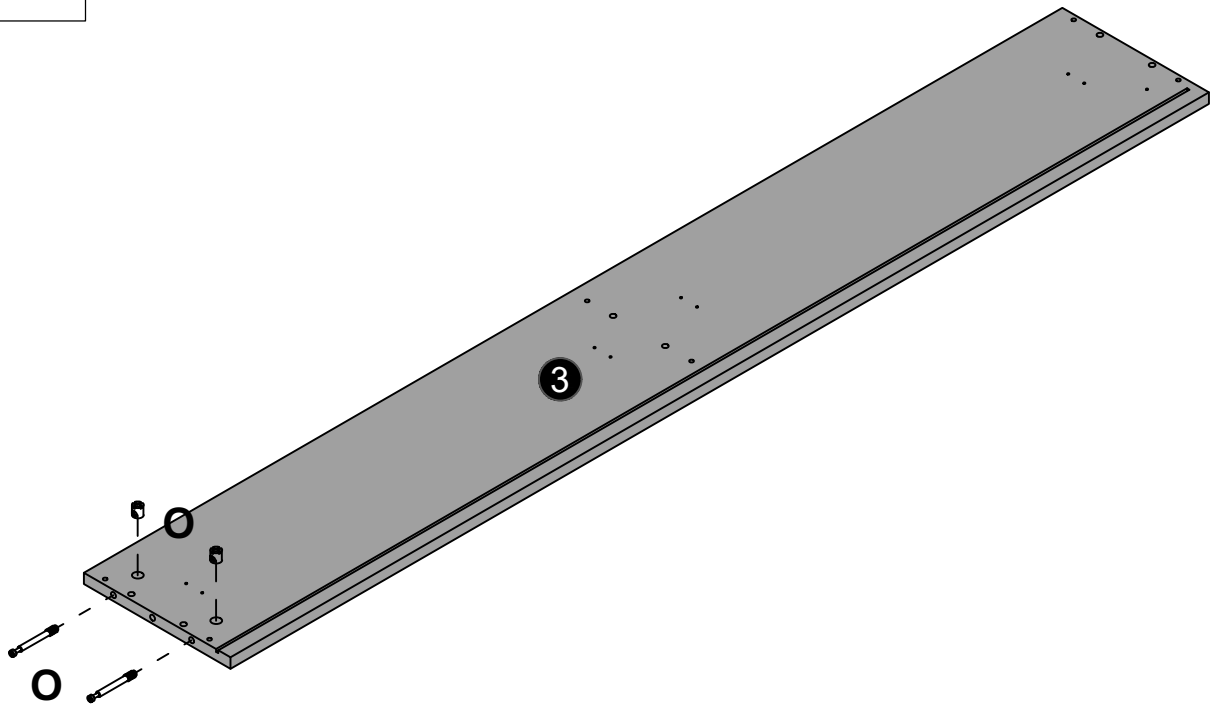


B x2



C x1

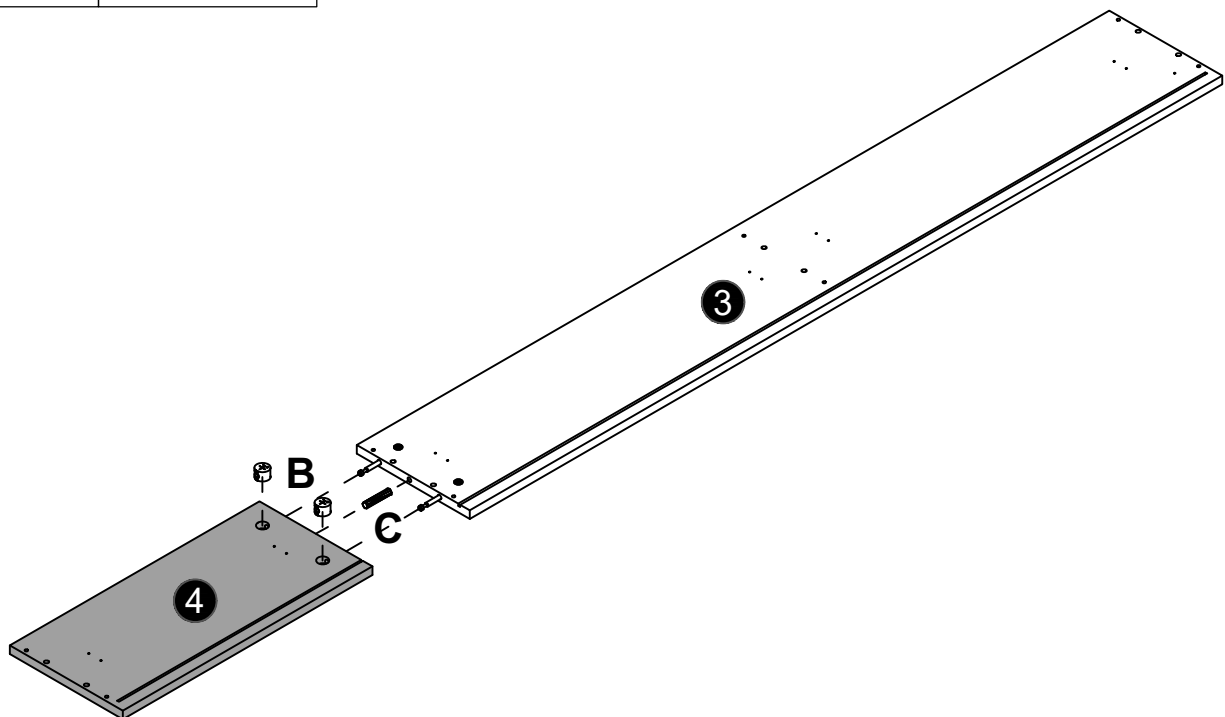



P x1






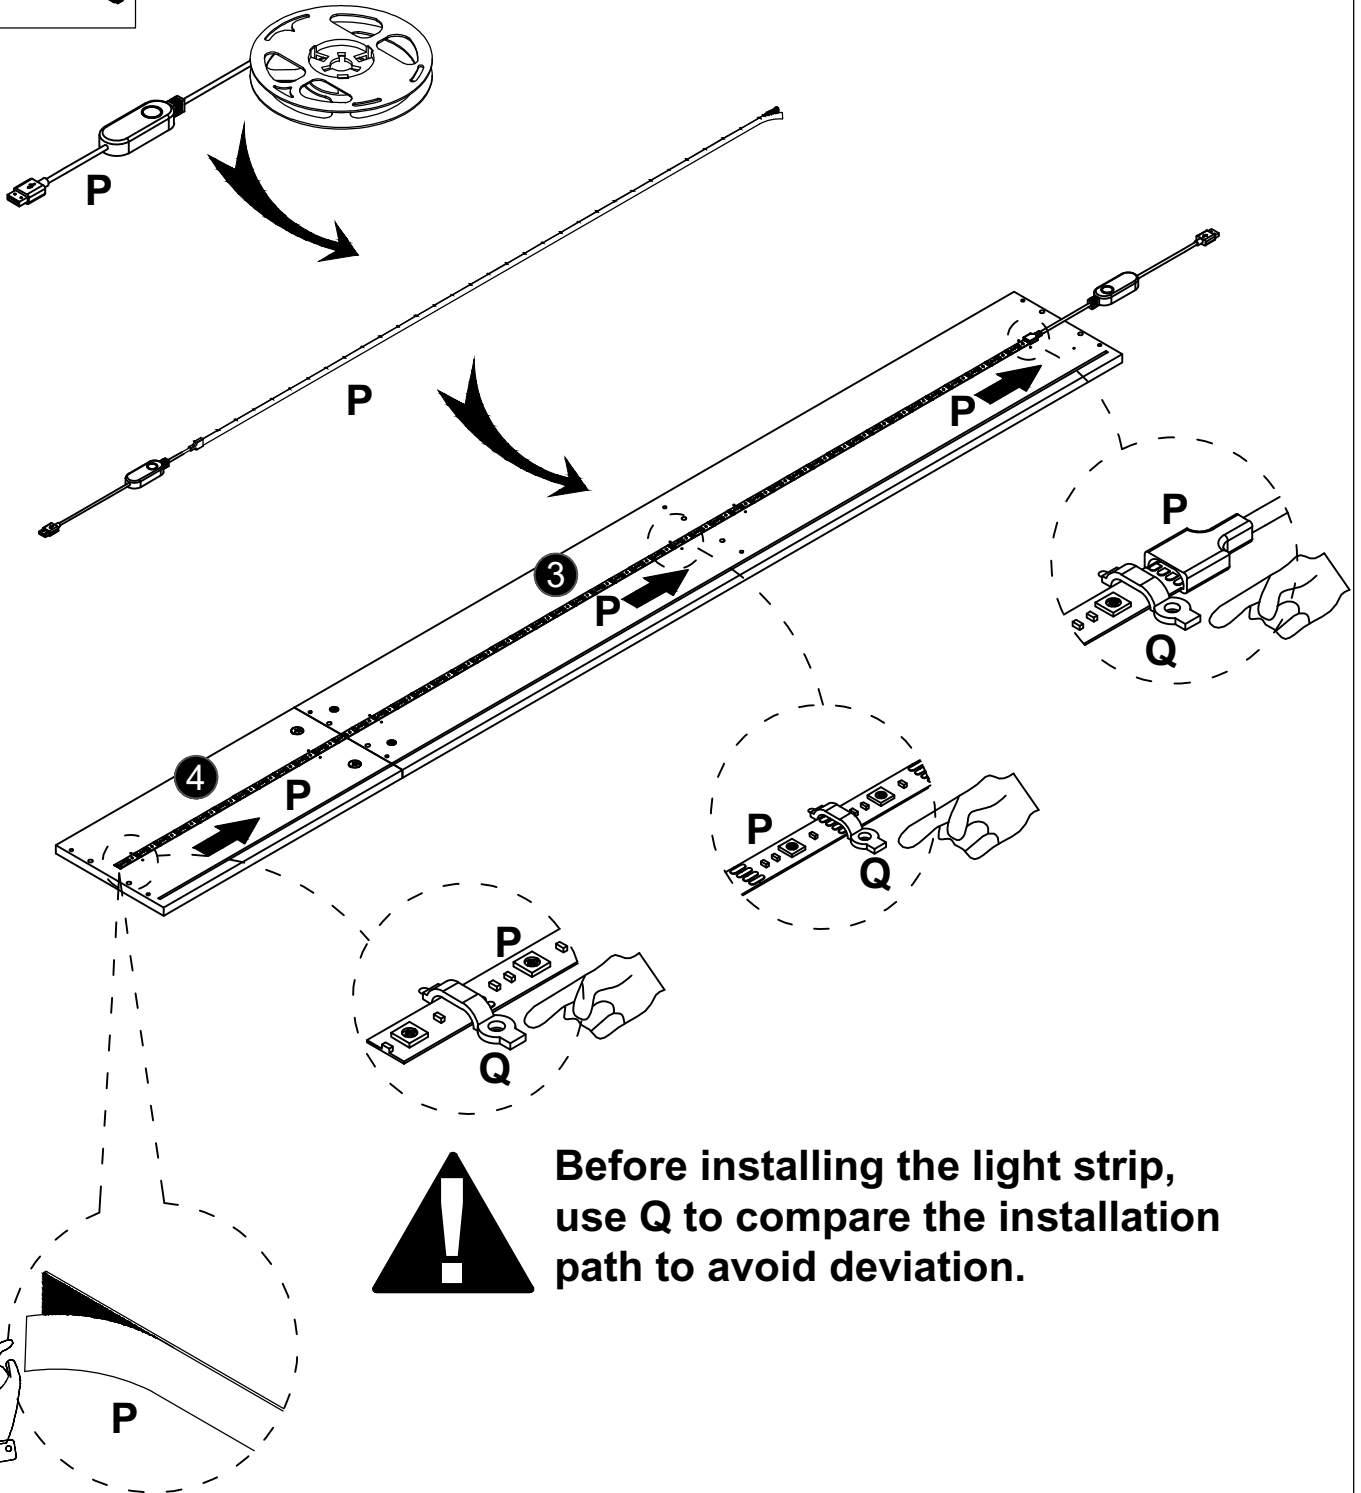





Before installing the light strip, use Q to compare the installation path to avoid deviation.

After comparing the installation path, peel off the backing paper slowly. It is recommended to peel along the path while installing the light strip, rather than removing it all at once, to prevent dust from sticking to the light strip, which may cause the adhesive to fail.

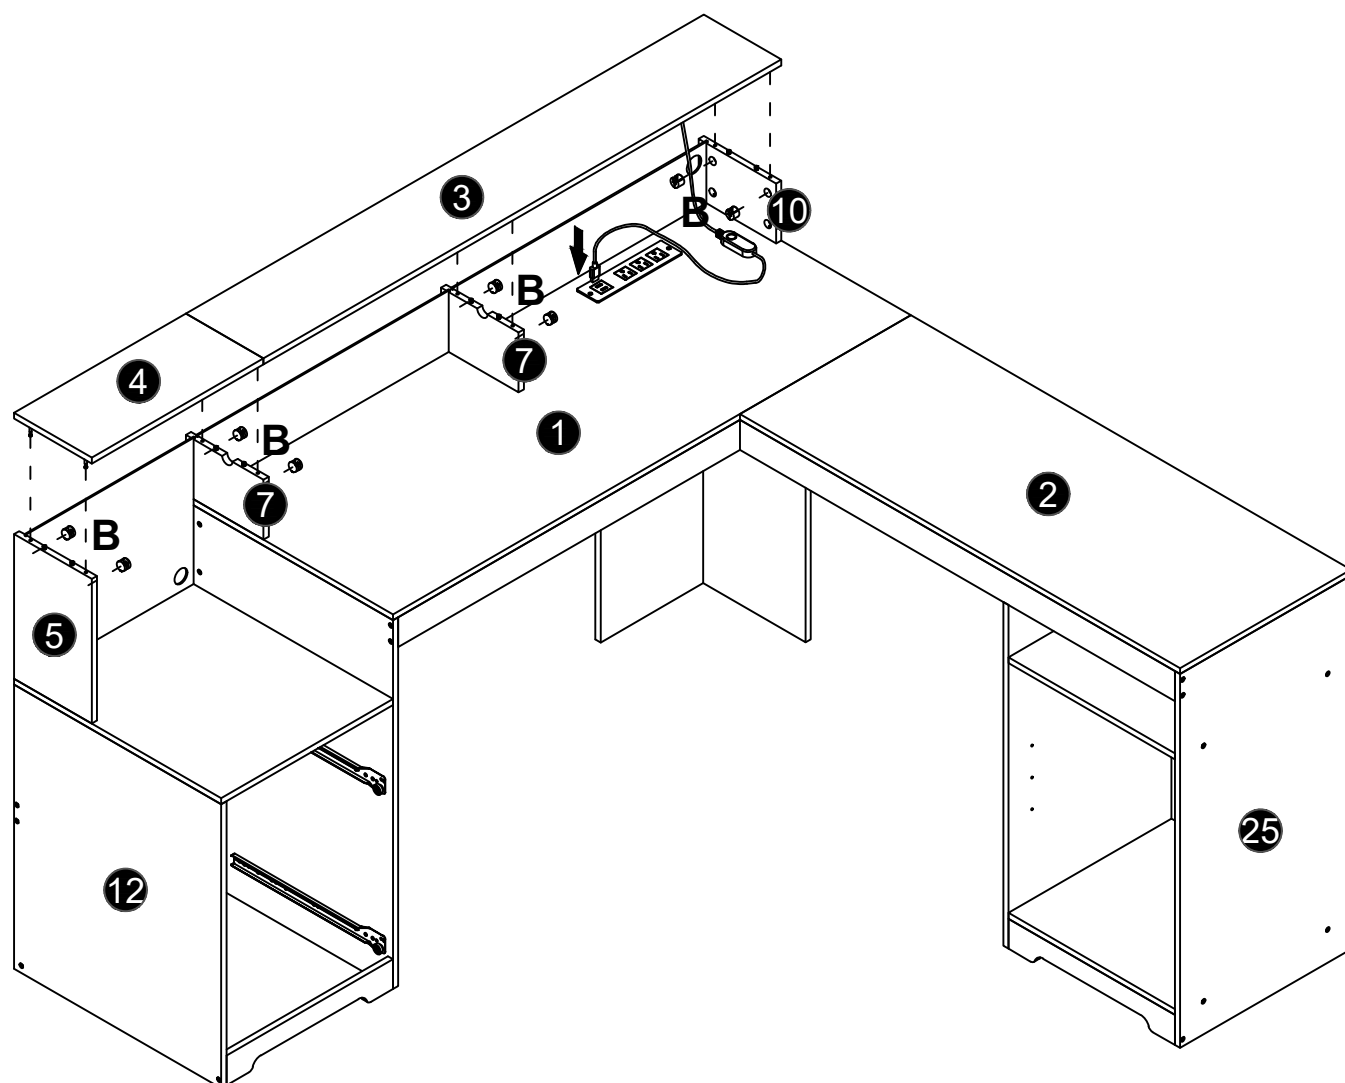


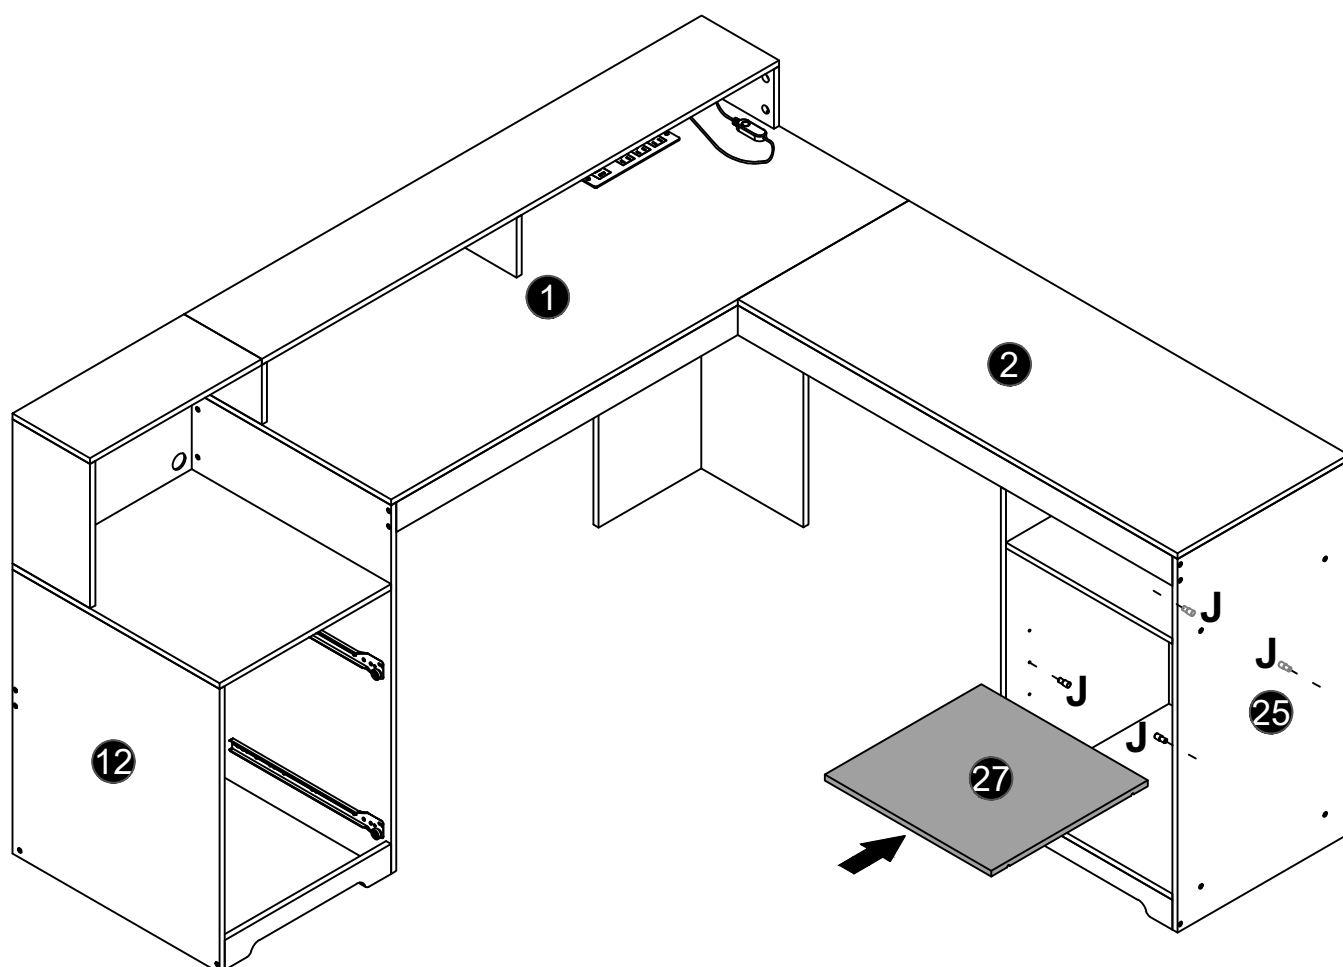


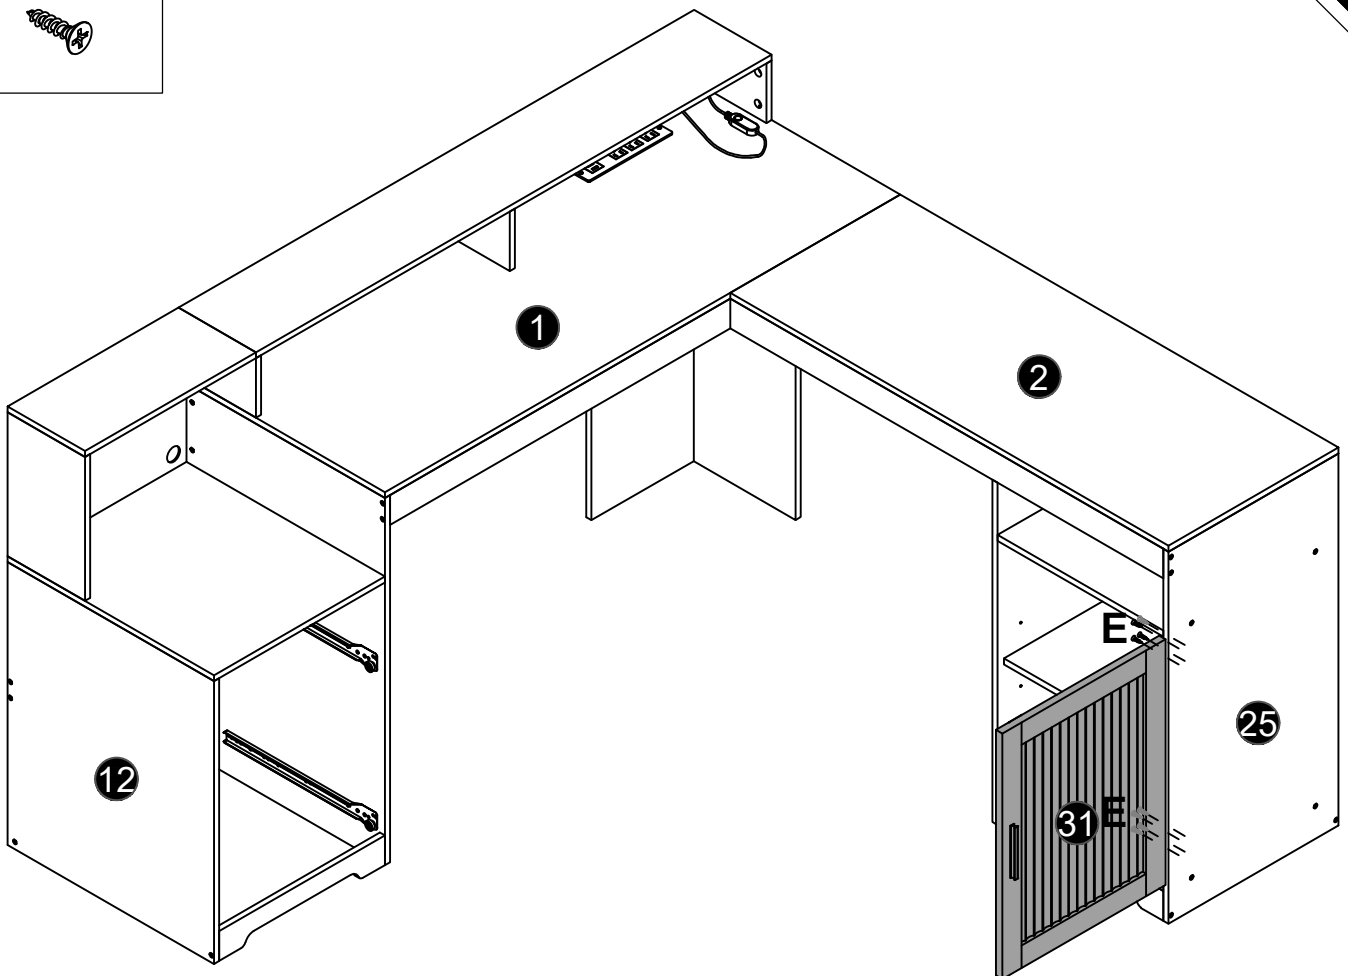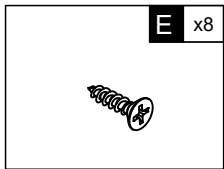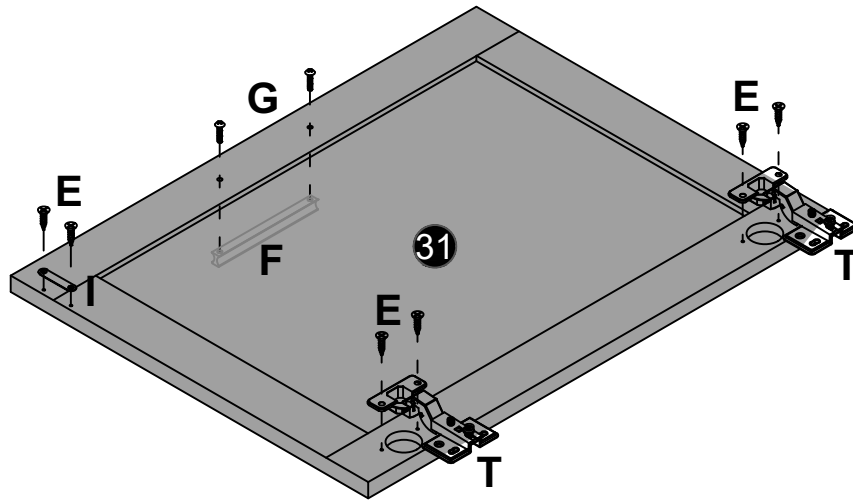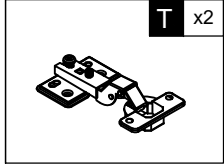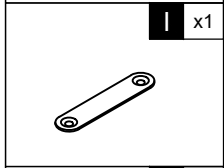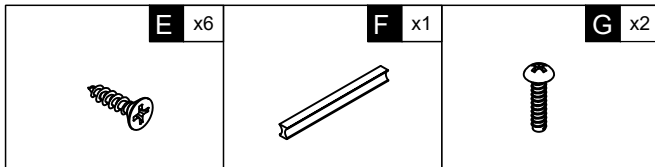

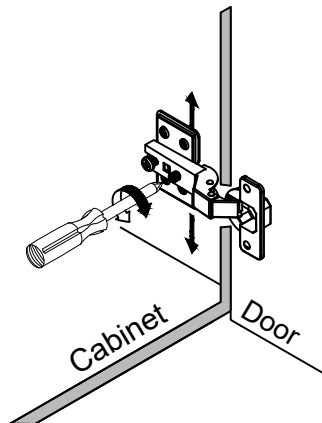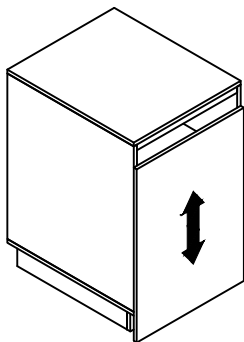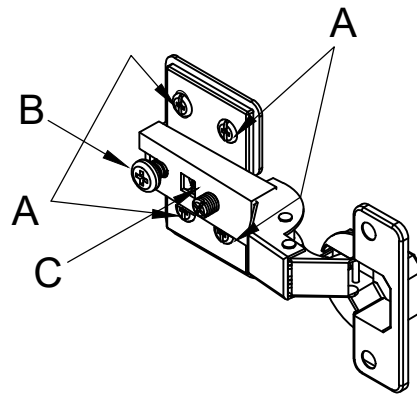



To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

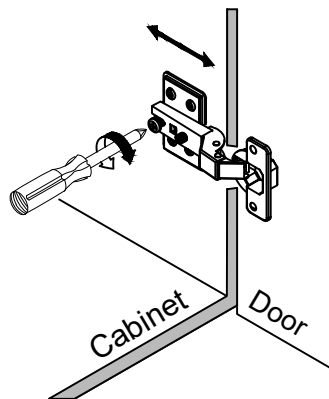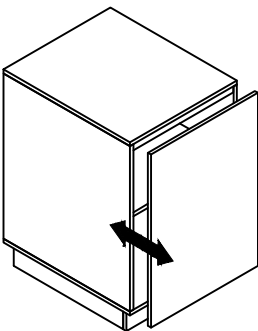

To adjust depth.


Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

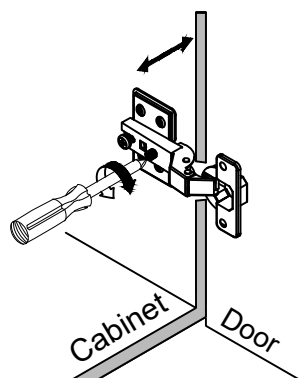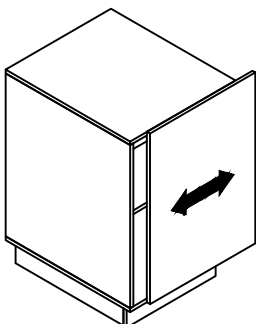

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

(1)

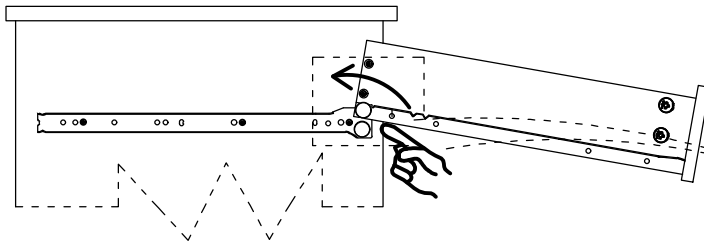

(2)

