
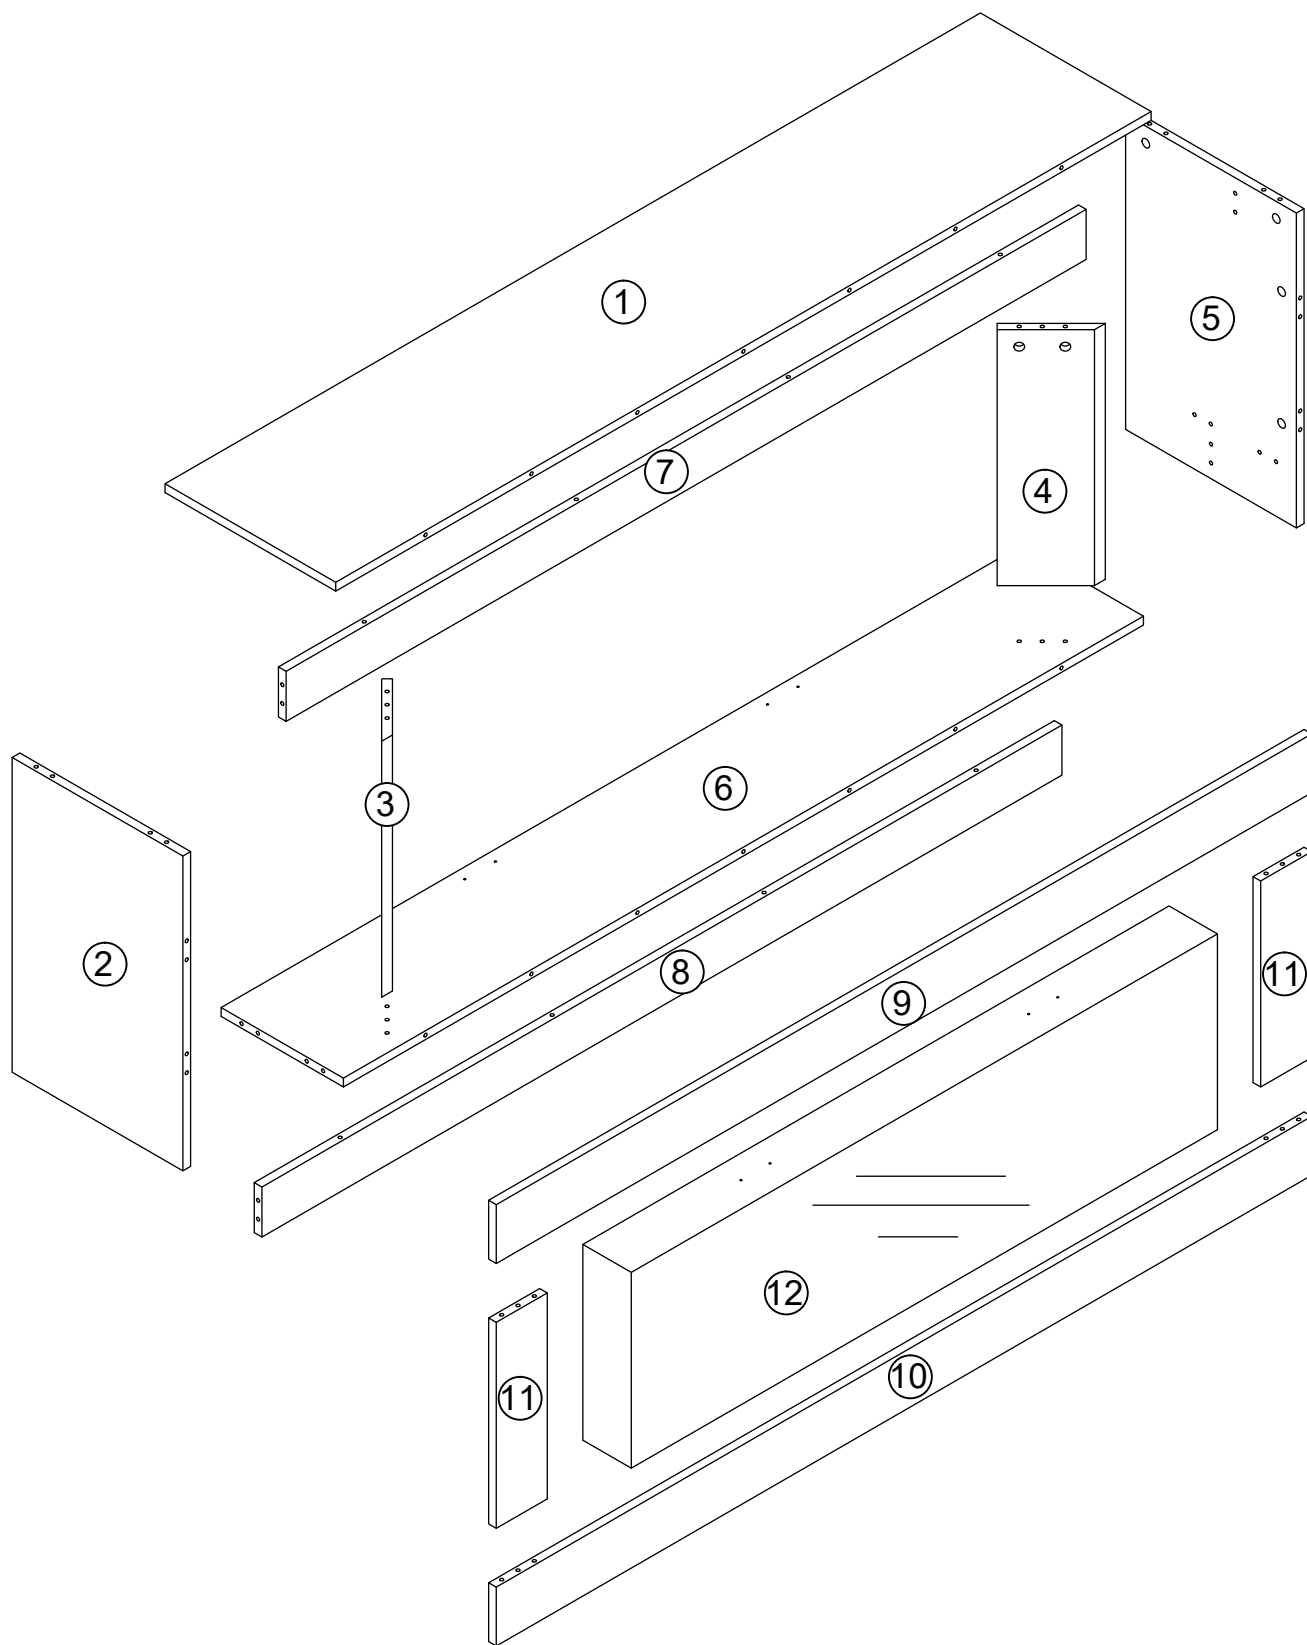
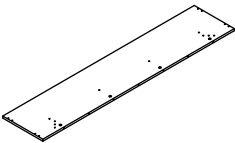
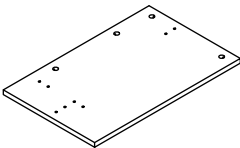
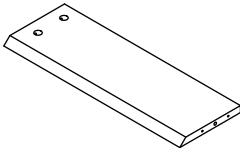
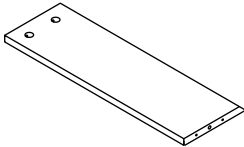
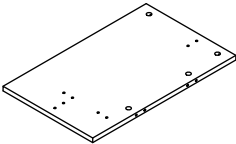
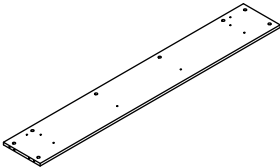
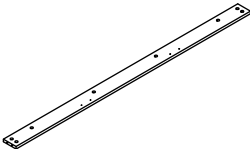
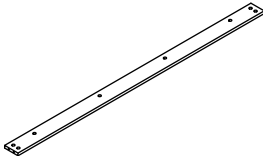
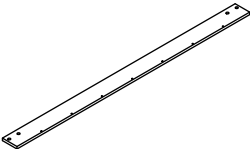
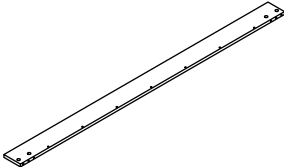
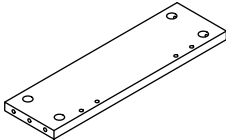







Installation instruction

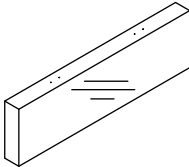

Parts and Operation Elements

			
①1pc	②1pc	③1pc	④1pc
			
⑤1pc	⑥1pc	⑦1pcs	⑧1pc
			
⑨1pc	⑩1pcs	⑪2pcs	⑫2pcs





Hardware

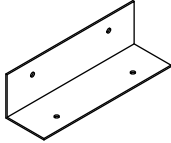 Cam bolt		 Cam Lock		 6x40mm Wood dowel		 4x35mm screw		 3x10mm screw	
A	40pcs	B	56pcs	C	4pcs	D	4pcs	E	8pcs
 4x12mm screw		 6x30mm Wood dowel							
F	8pcs	G	22pcs	H	8pcs	J	4pcs		





SPARE BAG



THE SPARE BAG INCLUDED EXTRA HARDWARE FOR DAMAGED OR MISSING SMALL HARDWARE WHILE YOU ARE ASSEMBLING

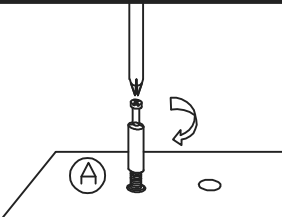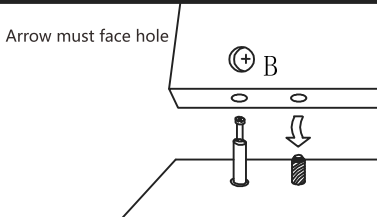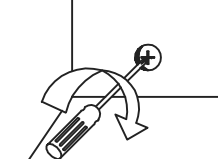			
Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.		Screw the camlock firmly into locked position.



1

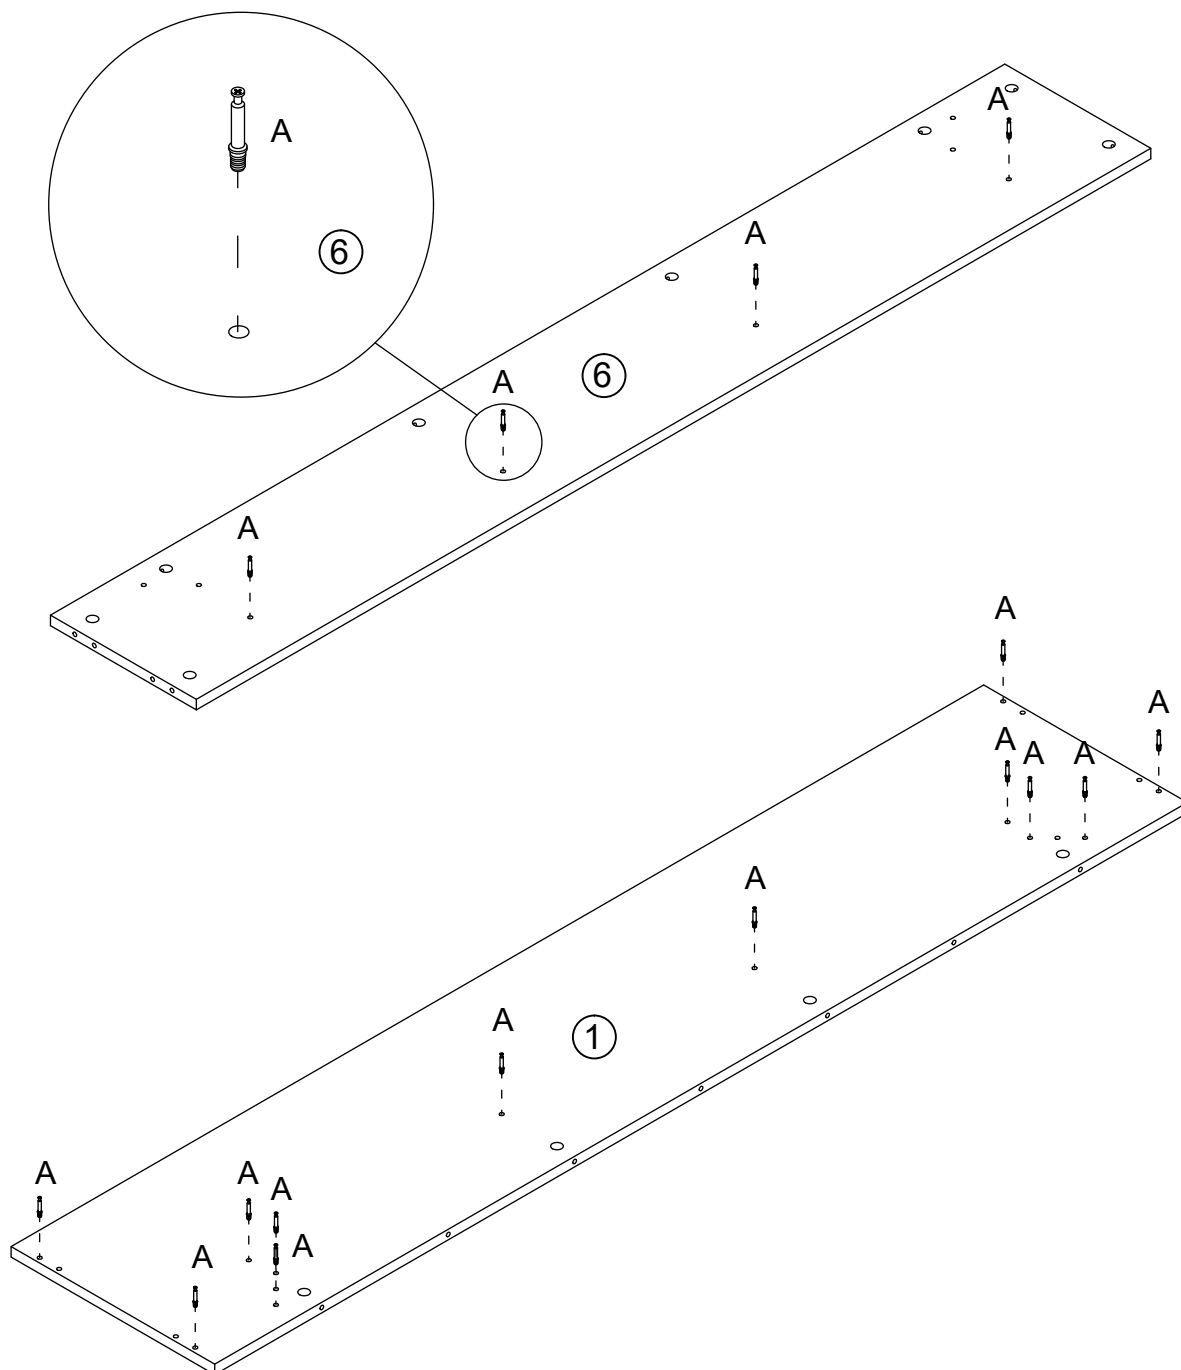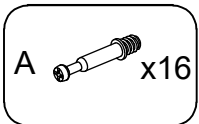

2

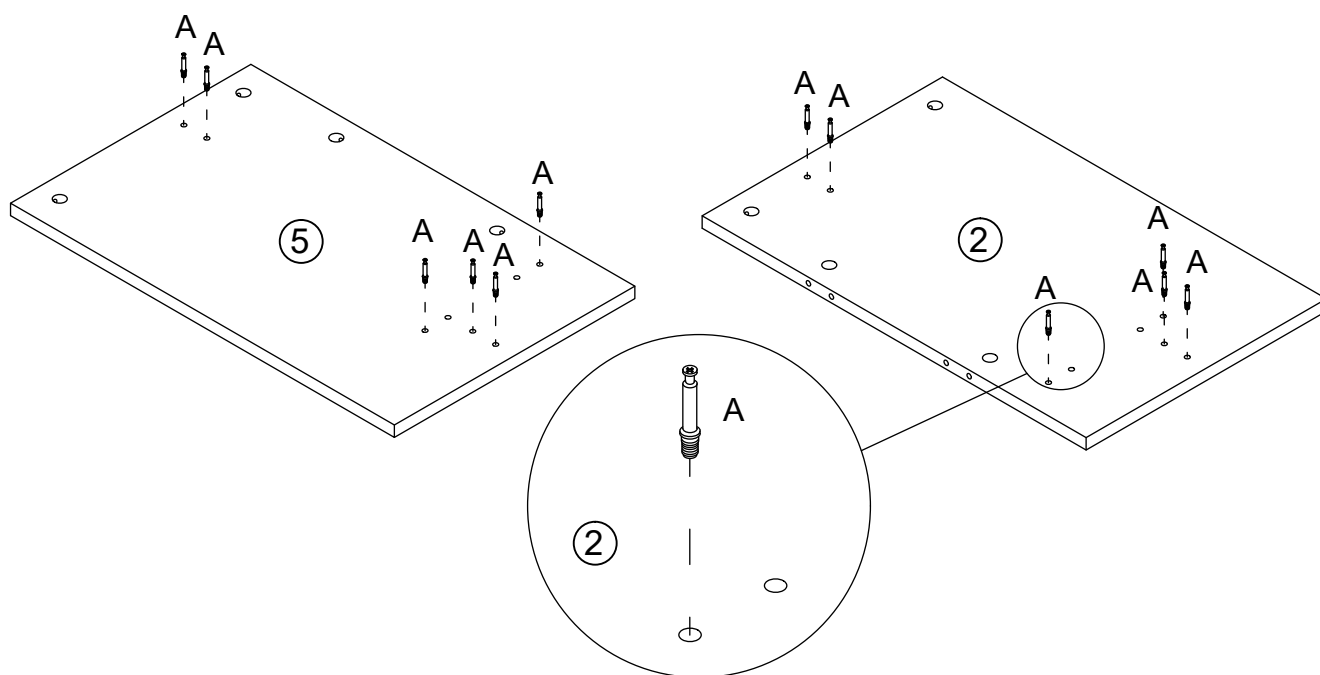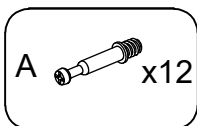


3

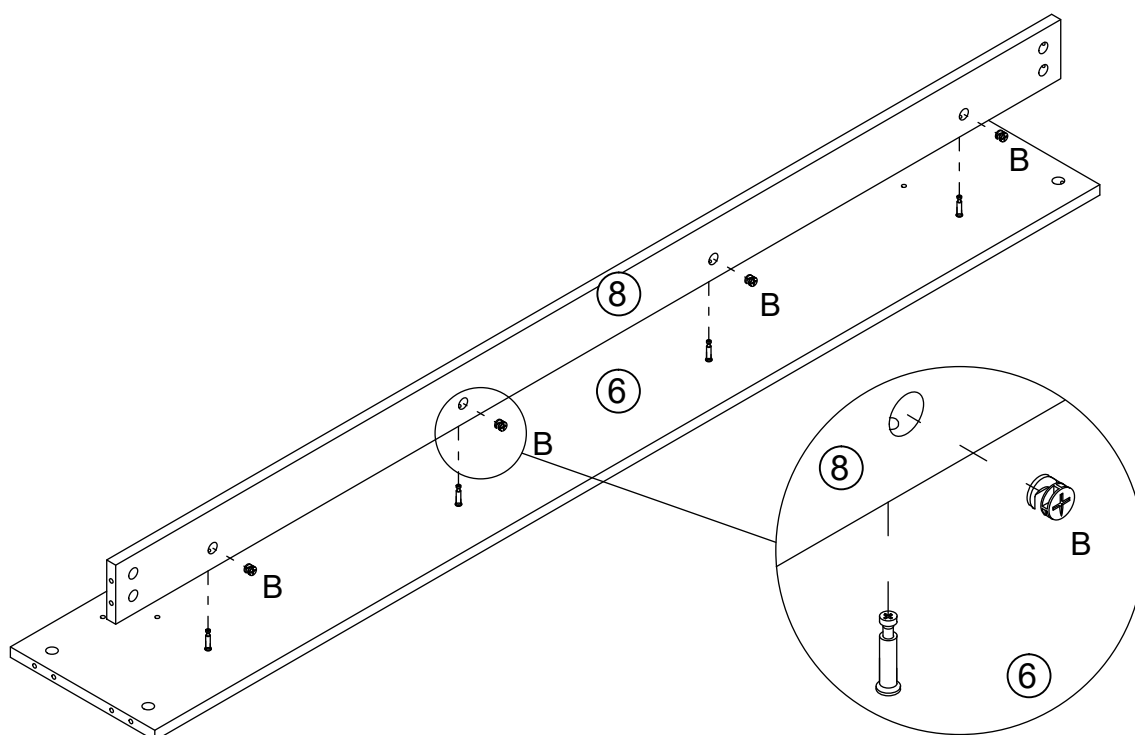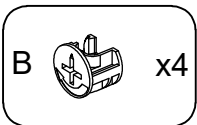

4

B  x12


G  x4

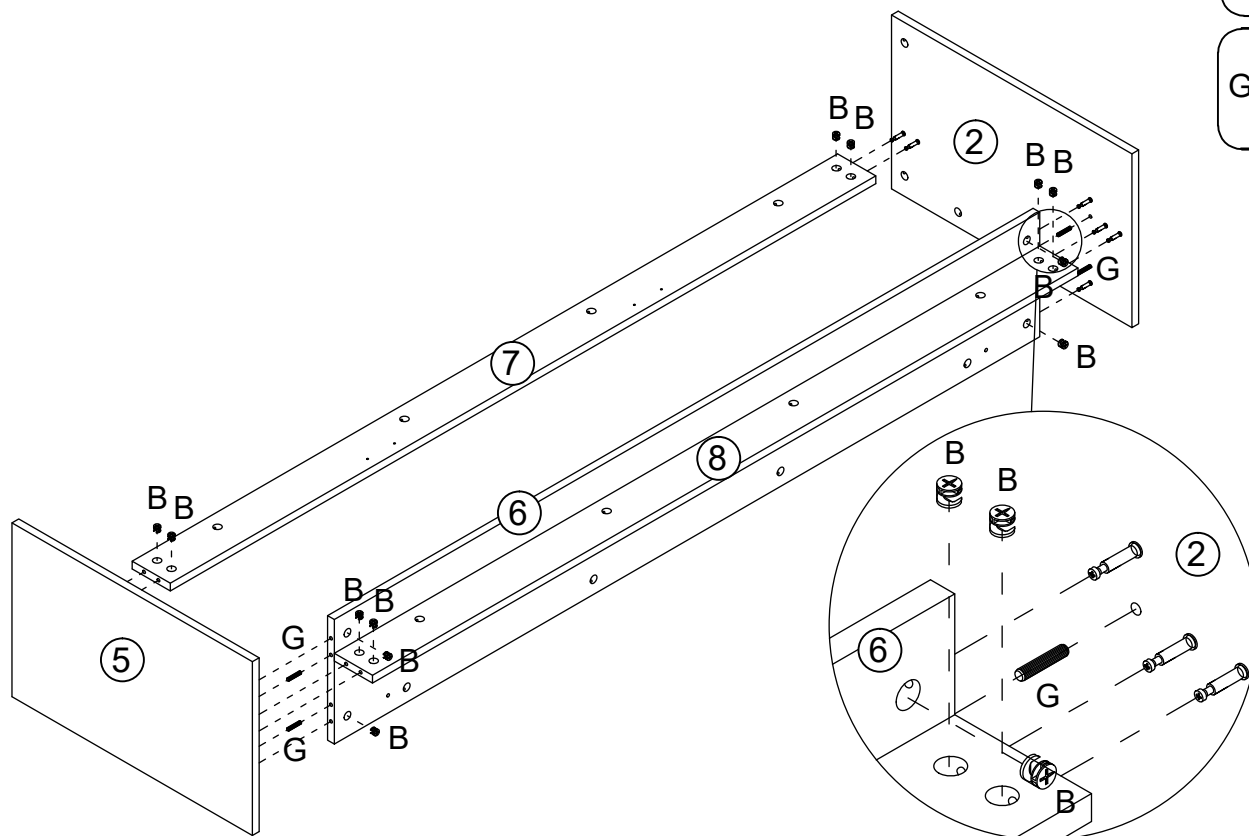

5

D  x4


G  x2

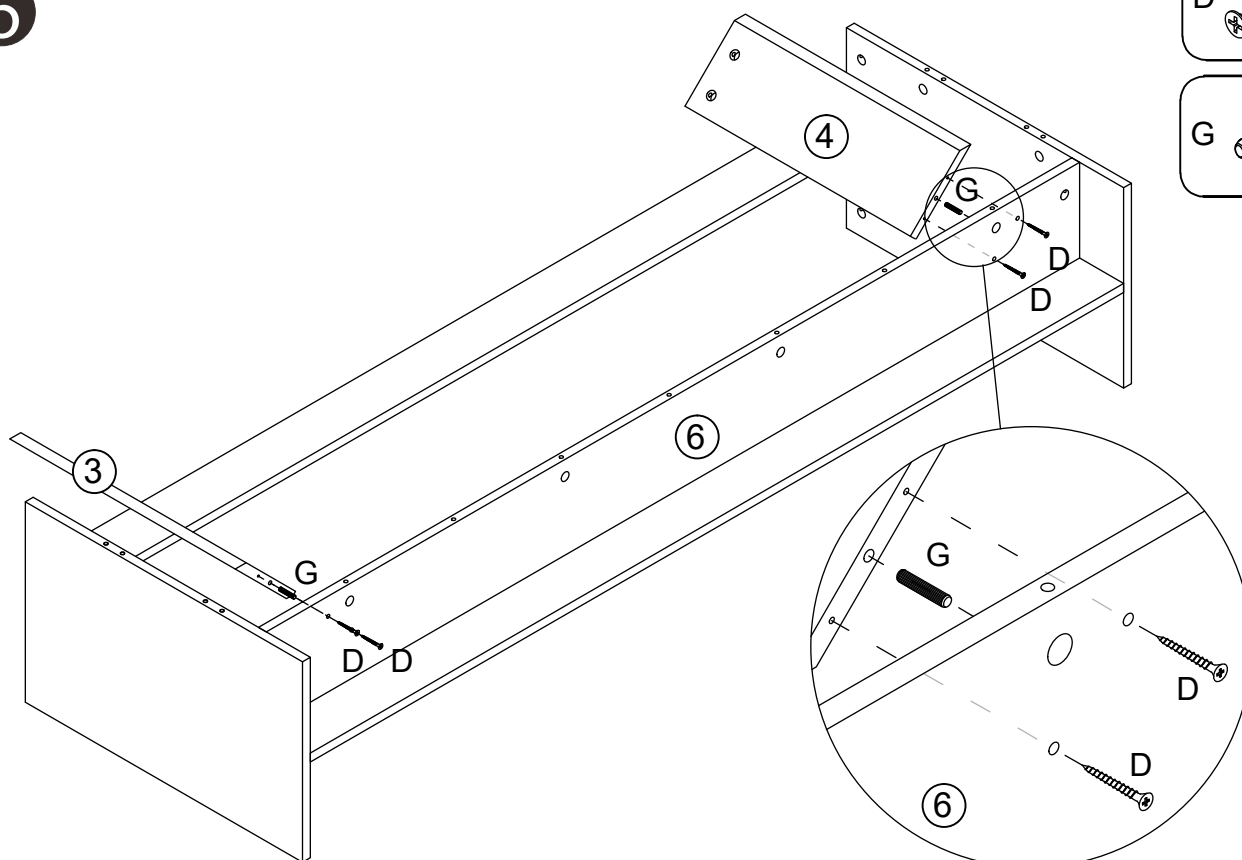





6

B  x12

G  x6

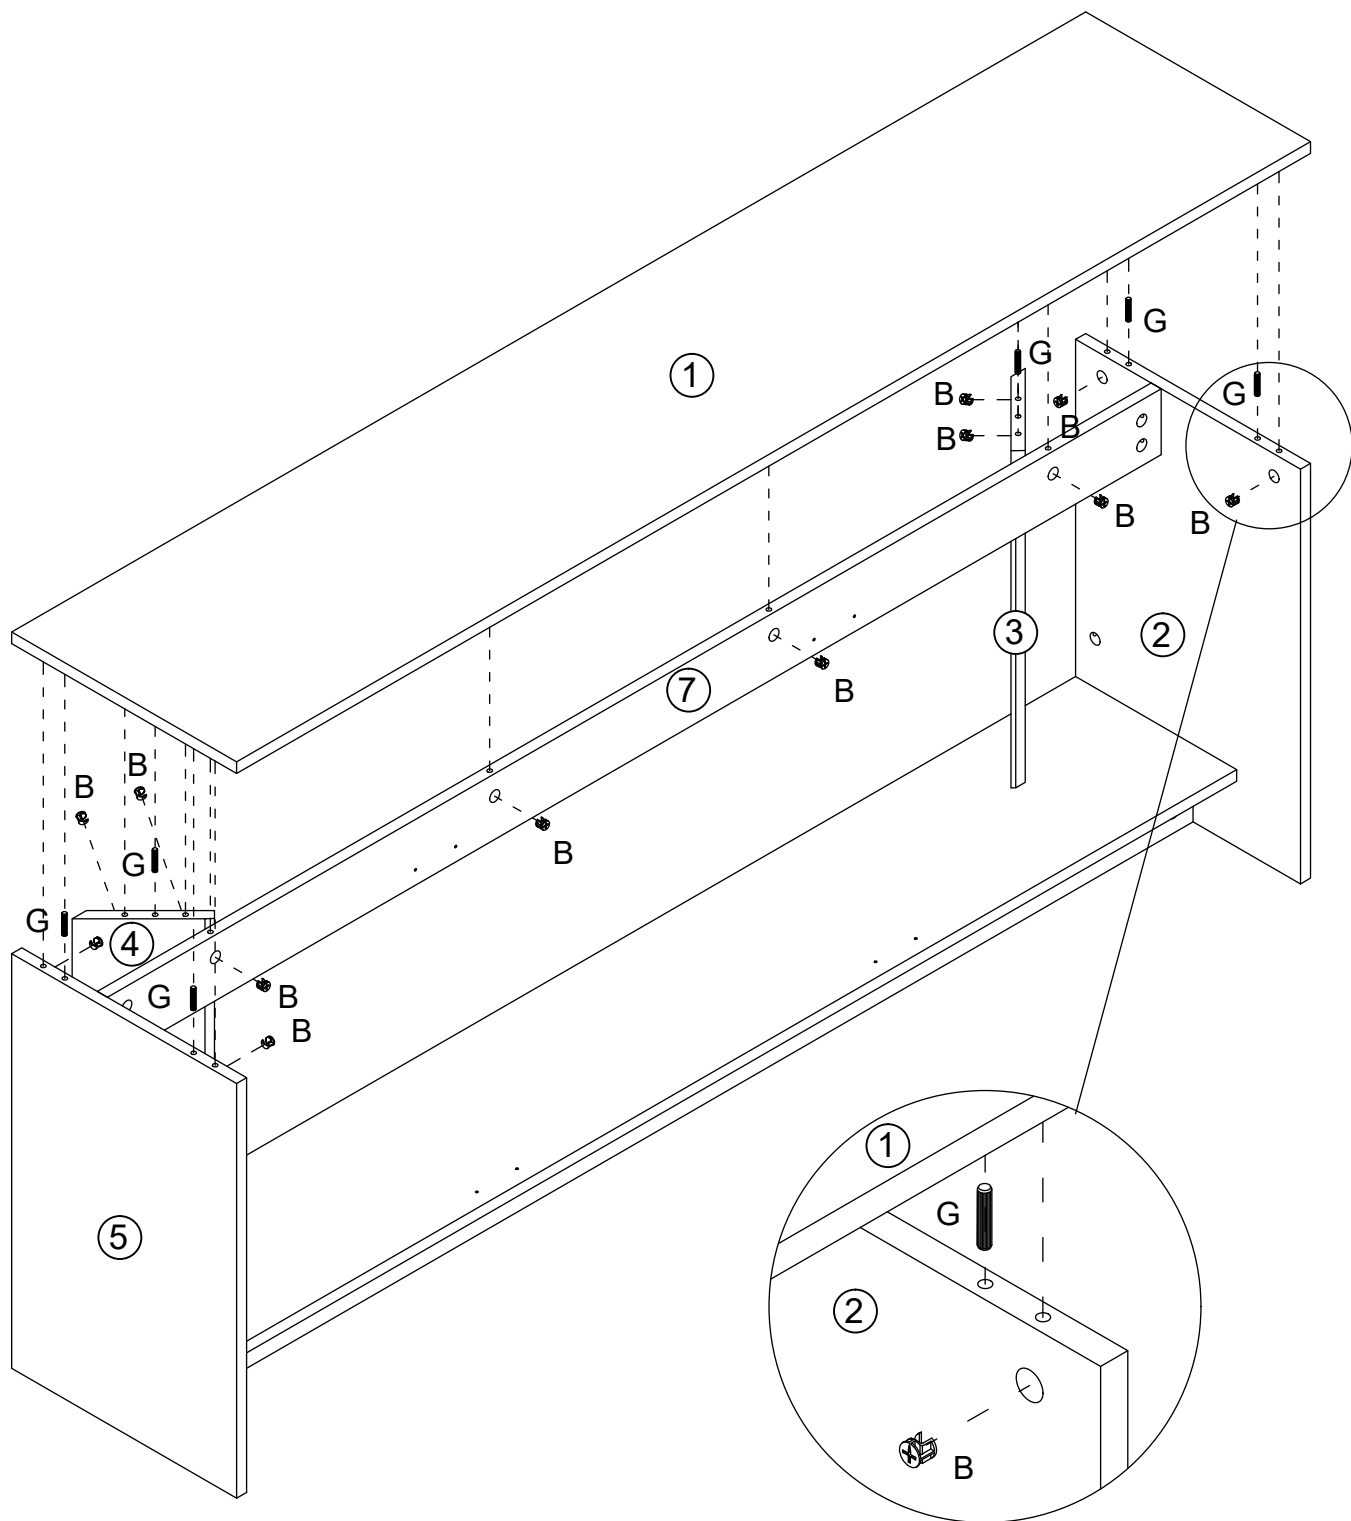


7

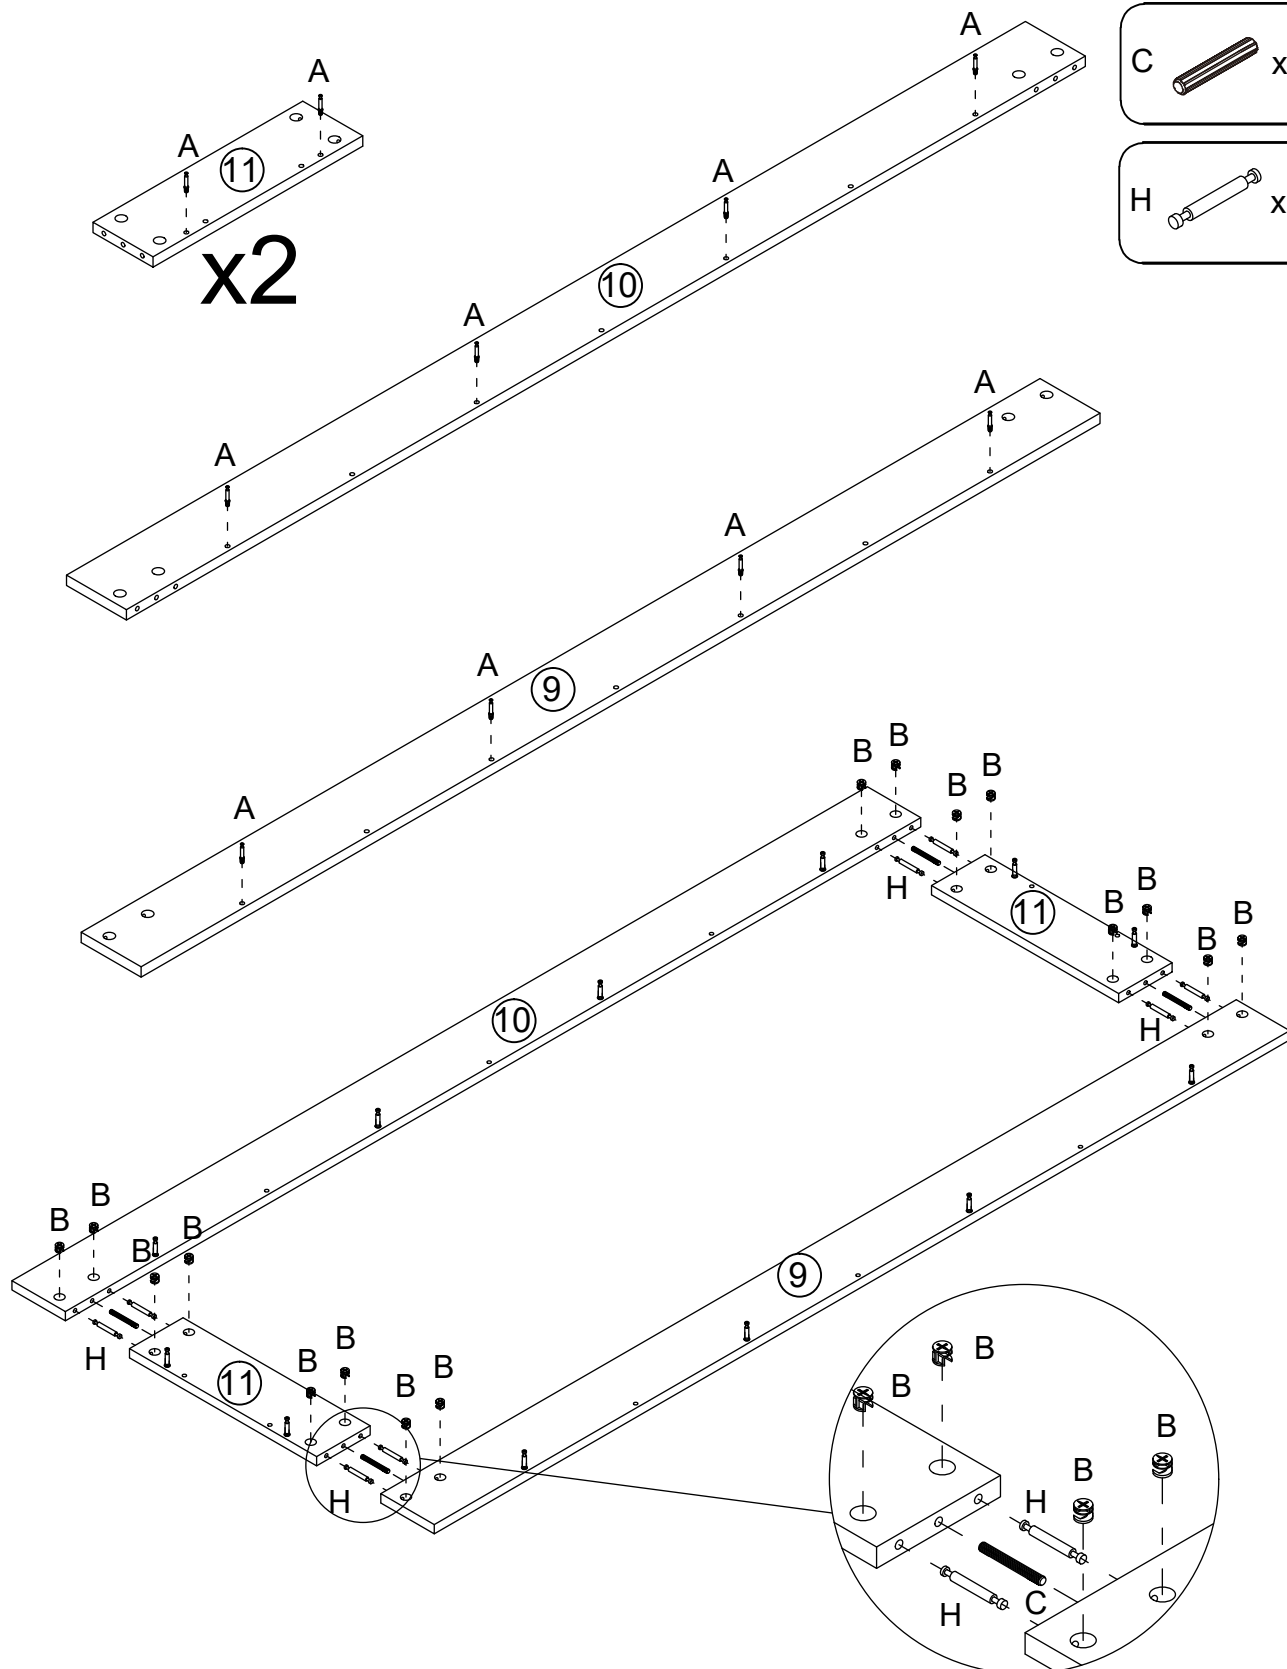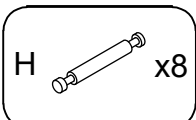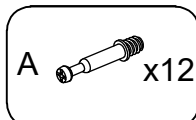




8

B  x12

G  x10

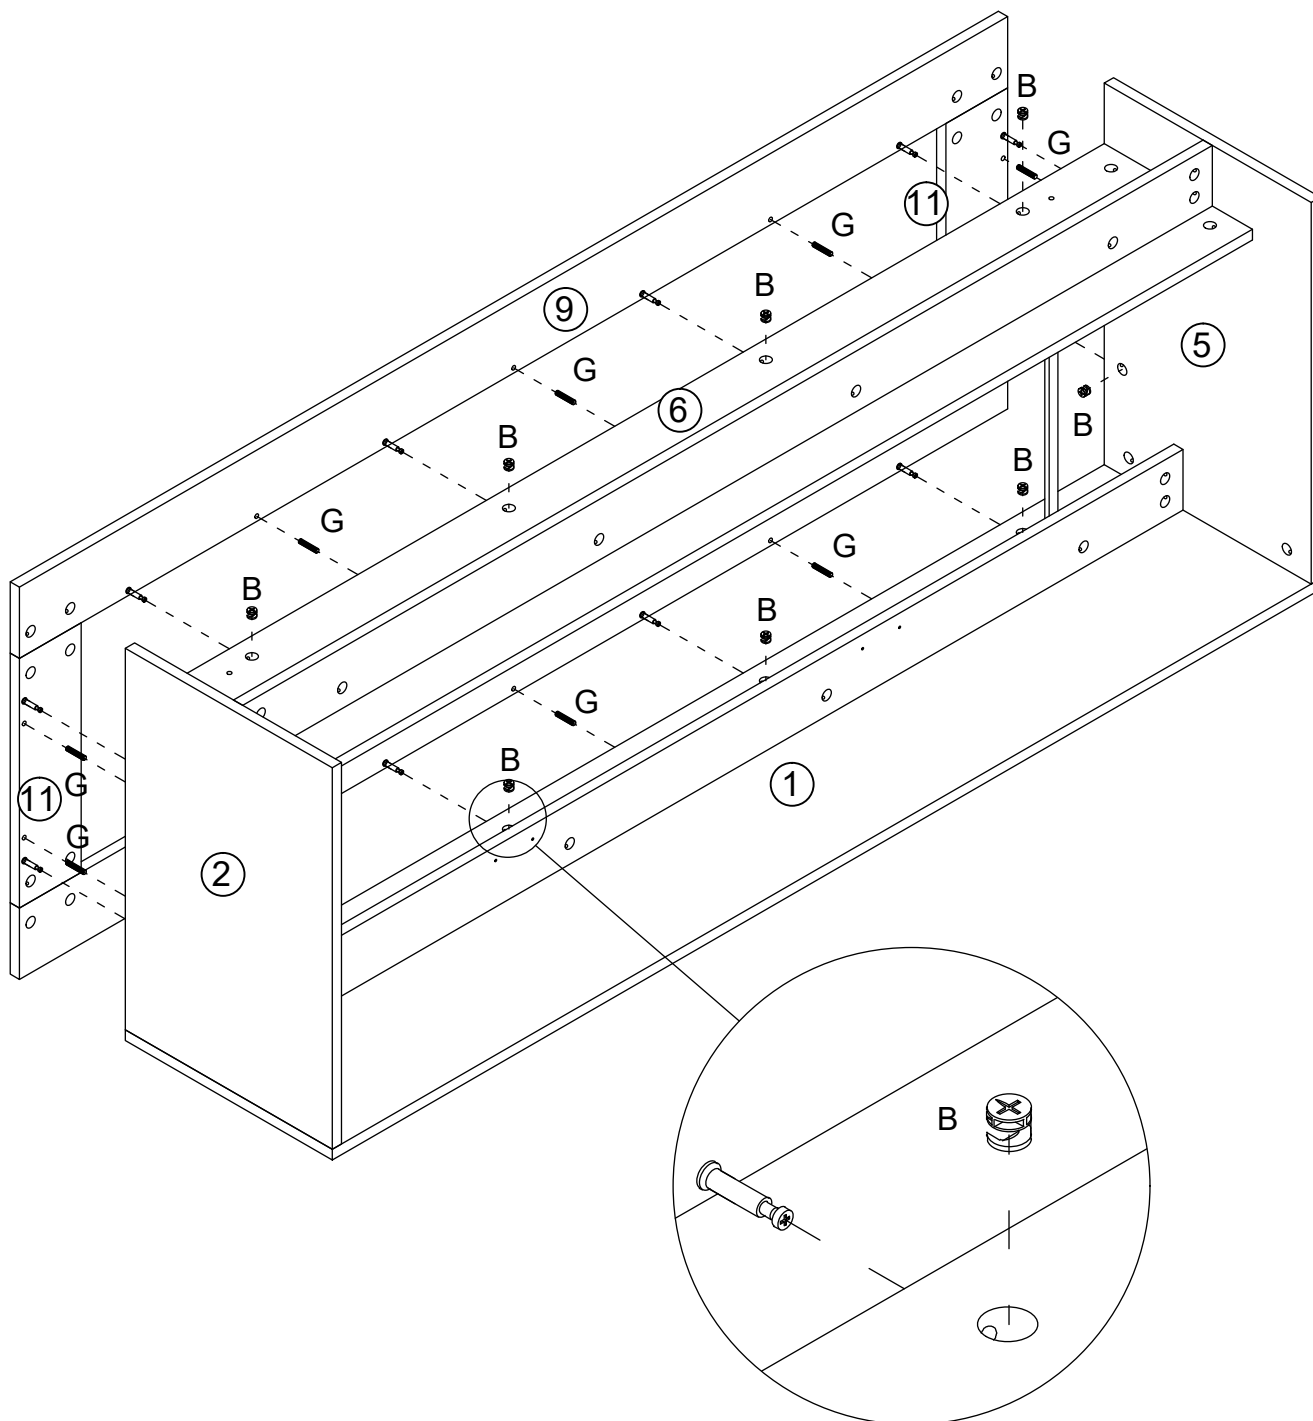


9

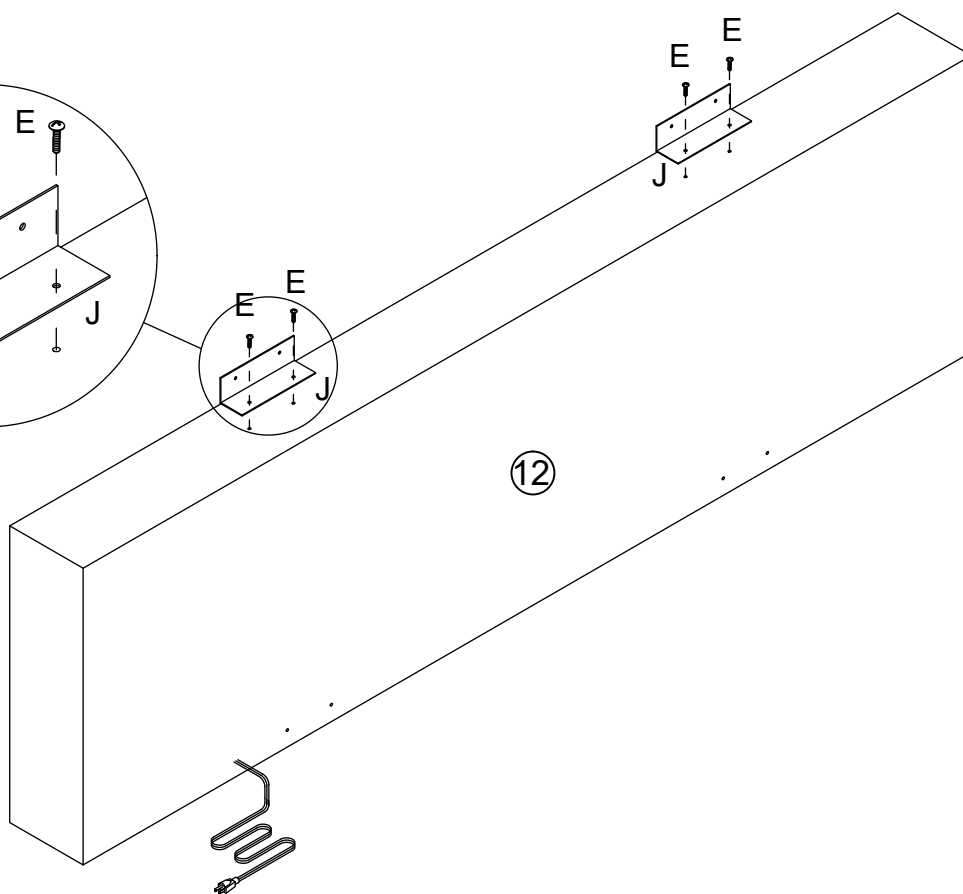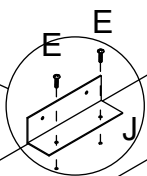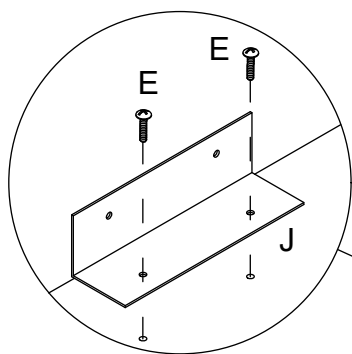

E  x4

J  x2

10

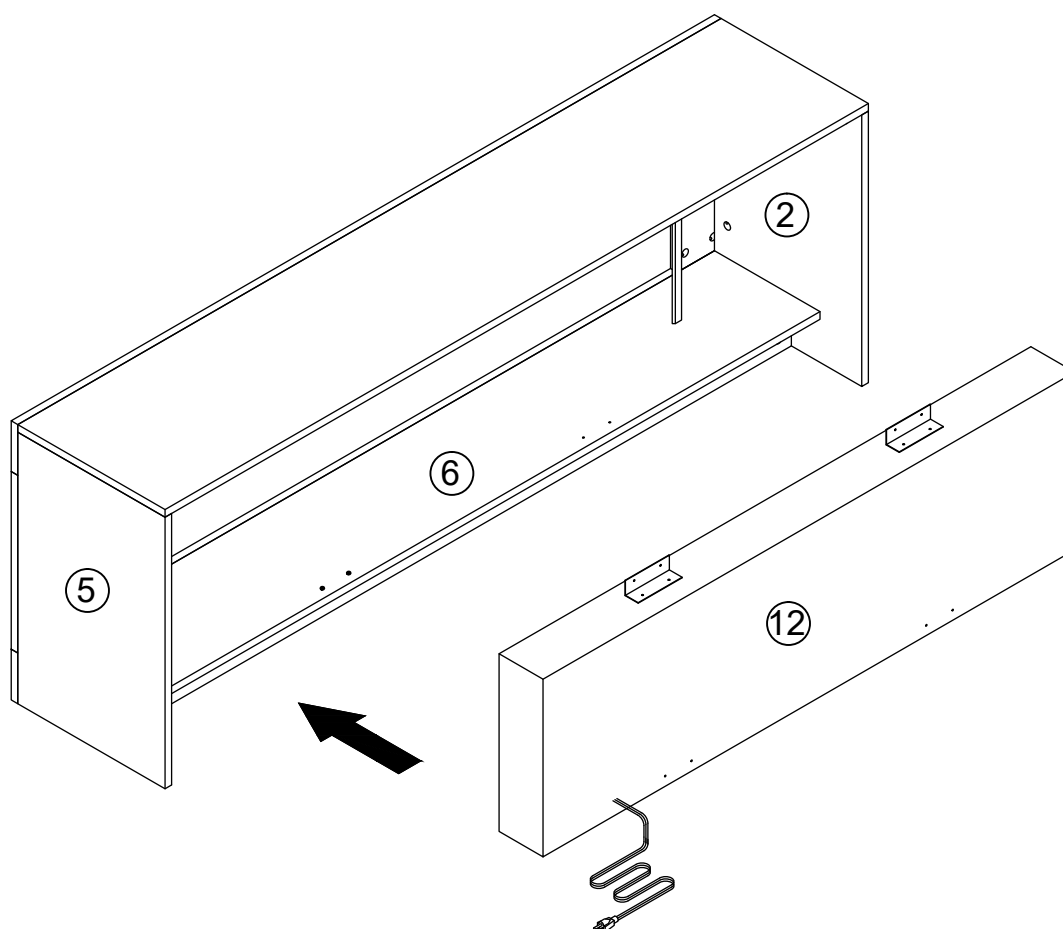

11

E  x4

F  x8

J  x2

