

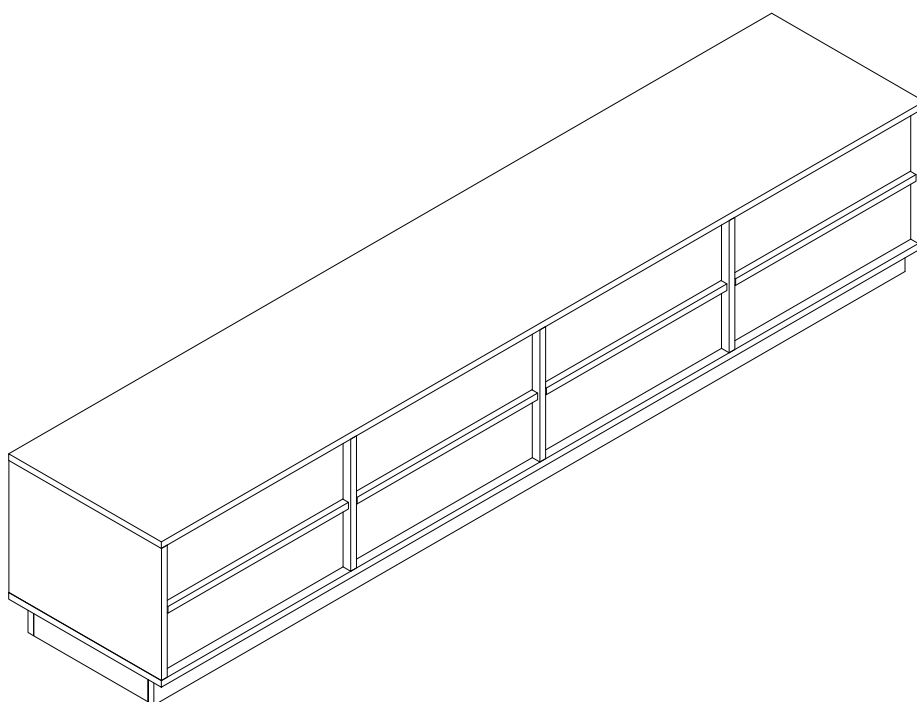
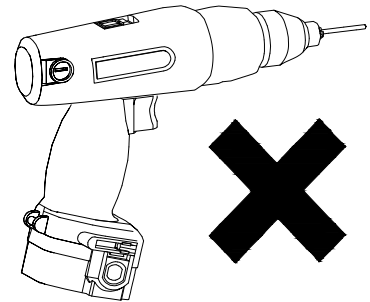


Assembly Instructions

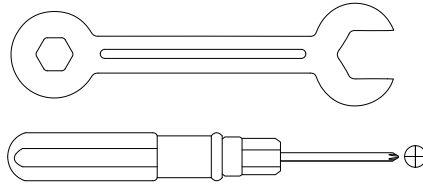


TV stand

The beginning of installation may feel confusing and painful, but it will get better.

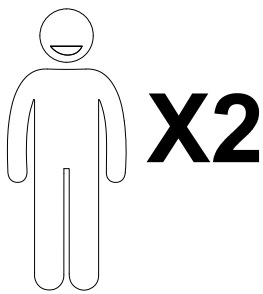



We recommend using hand tools for assembly.


If an electric screwdriver is used, reduce power and torque to avoid damage to the product.

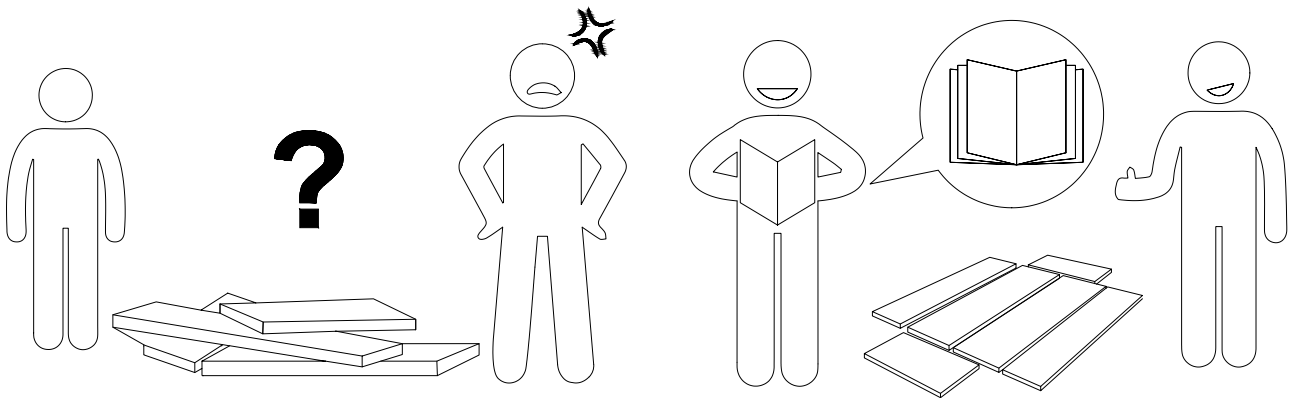

AVOID SCRATCHES

In order to avoid scratching this furniture should be assembled on a soft layer—could be a rug.












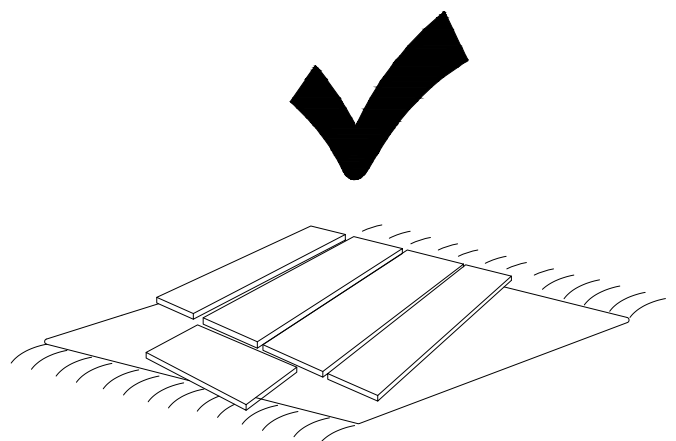
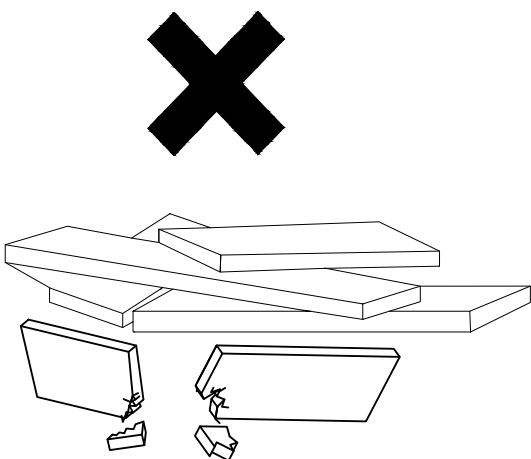


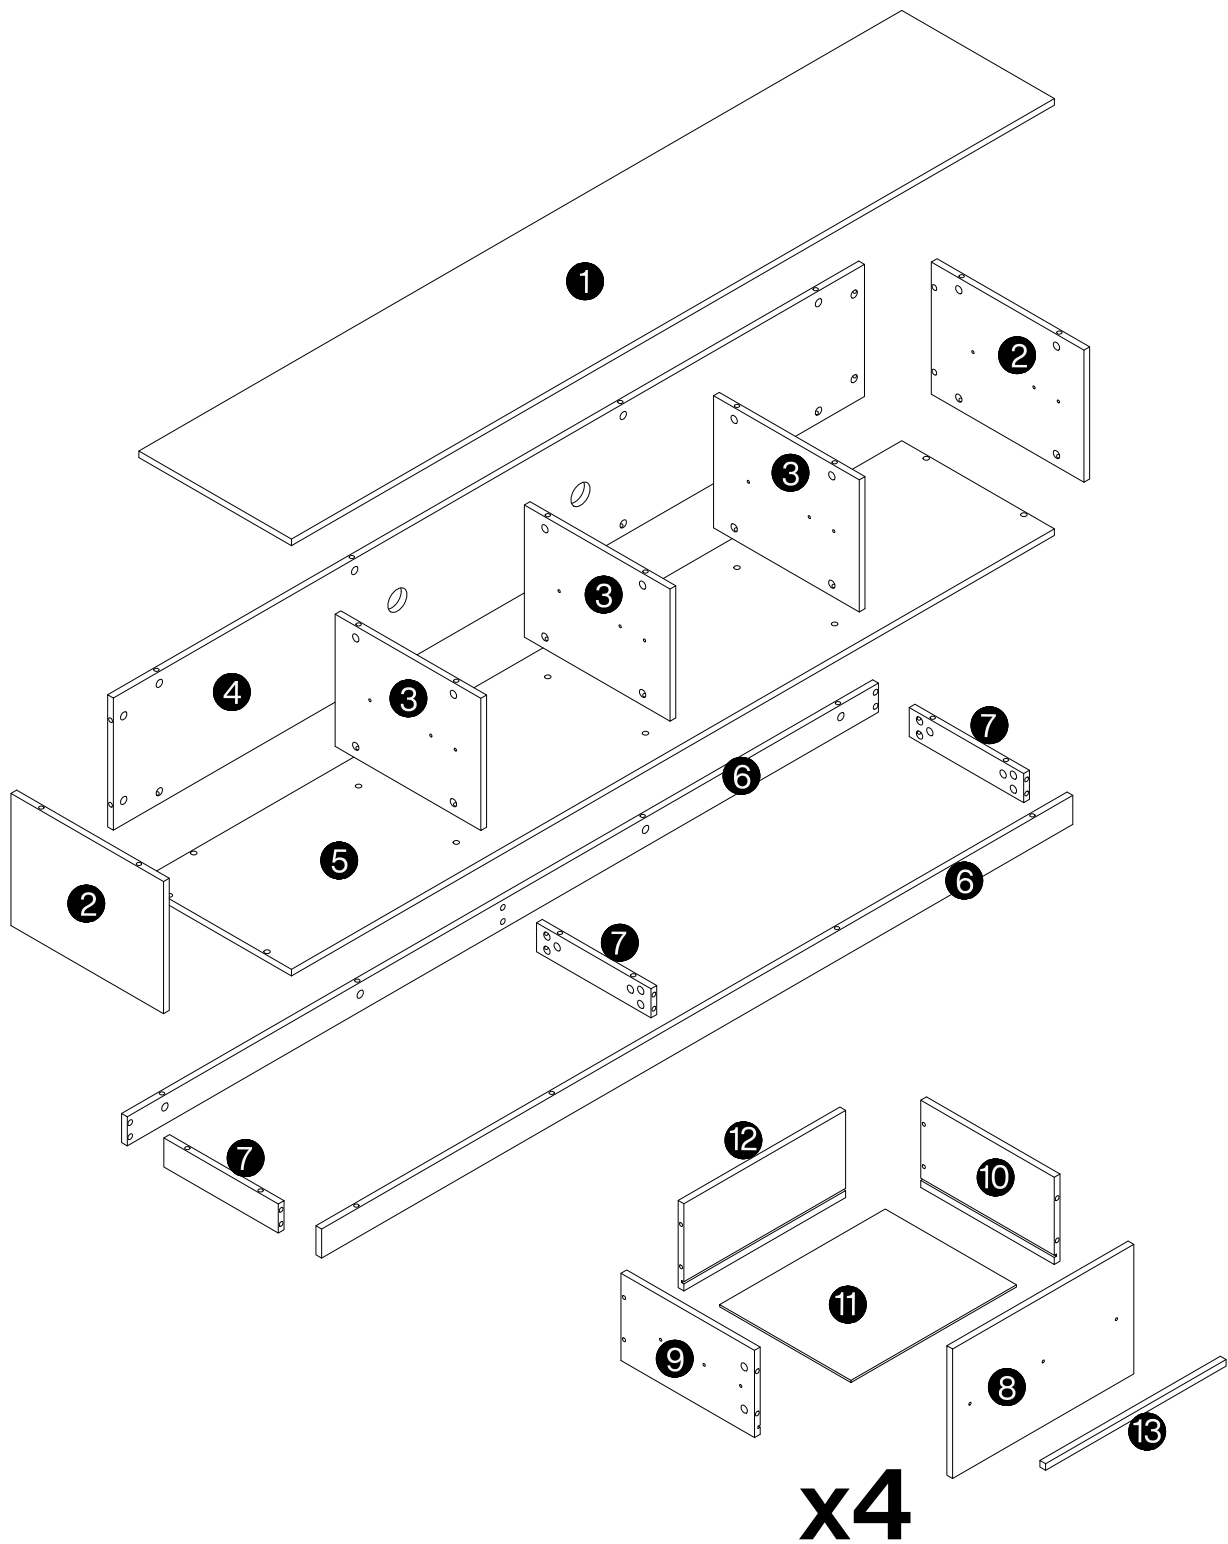





 Caution


Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.

Parts List

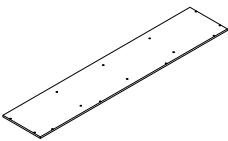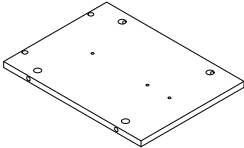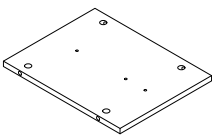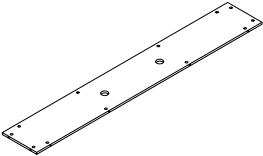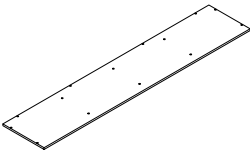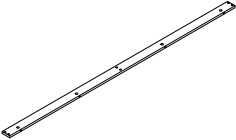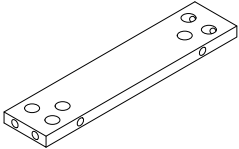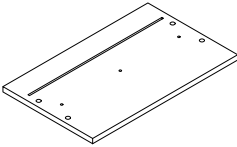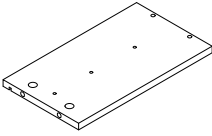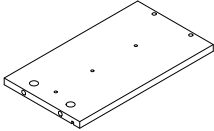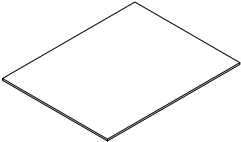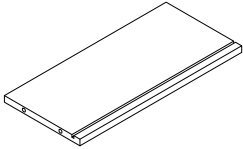1  1pc	2  2pcs	3  3pcs	4  1pc	5  1pc
6  2pcs	7  3pcs	8  4pcs	9  4pcs	10  4pcs
11  4pcs	12  4pcs	13  4pcs		


Hardware List

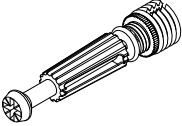A	B	C	D	E	F
					
M6x40mm	Ø15x10mm	300 mm	Ø3.5x14mm	Ø4x22mm	Ø3.5X35 mm
74+2 pcs	74+2 pcs	4 sets	48+4 pcs	12+2 pcs	16+2 pcs


G	H	I			
					
M6X14 mm					
6+2pcs	2 pcs	1pc			

Installation of Cams and Pins

Step 1-2: Align the plastic part with the mounting hole and press it in. If you can't press it in, loosen the screw counter clockwise or completely remove the screw from the plastic part and try again.
Step 3-4: After pressing the plastic part into place, use a screwdriver to tighten the screw clockwise.

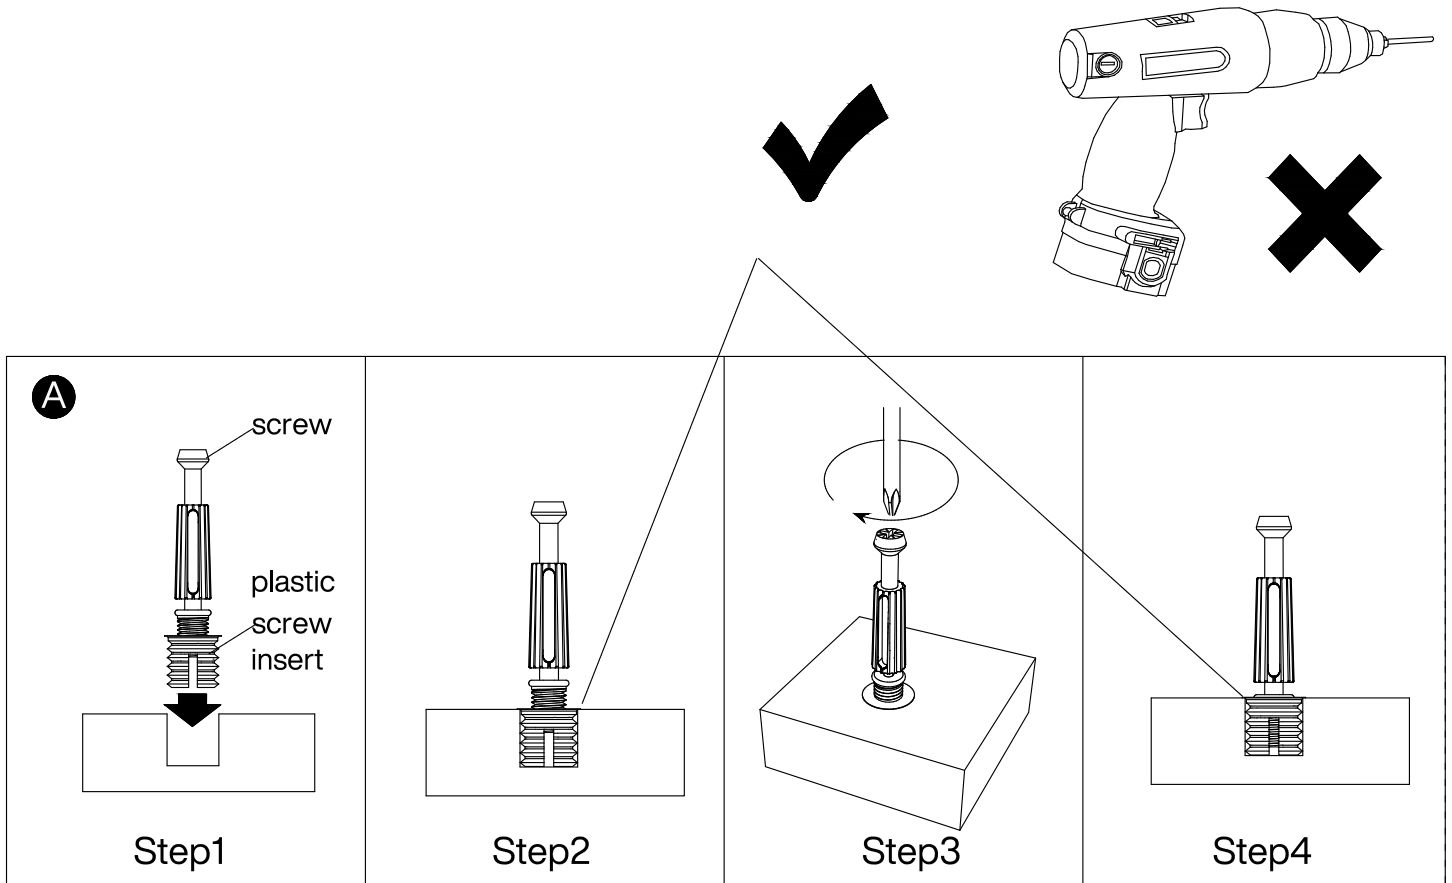


Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

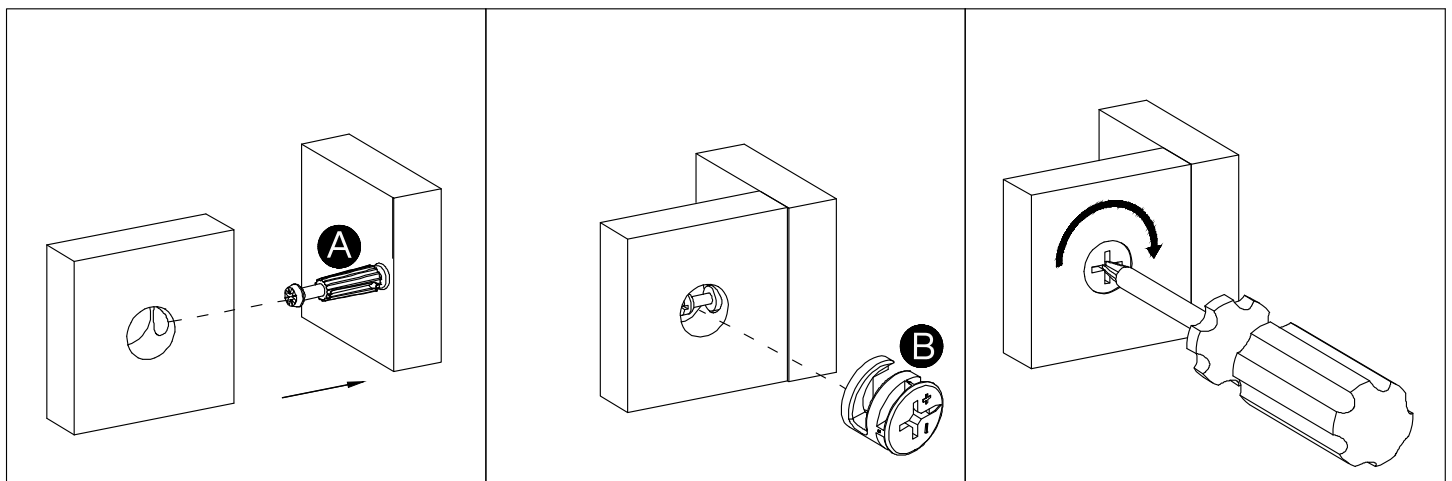

Please split component "C" into "C-1" and "C-2" before assembling the slide rail component, and then proceed to the next step of assembly


Step 1

Pull apart component "C" to each side, and then gently push up the lever of component "C-2"

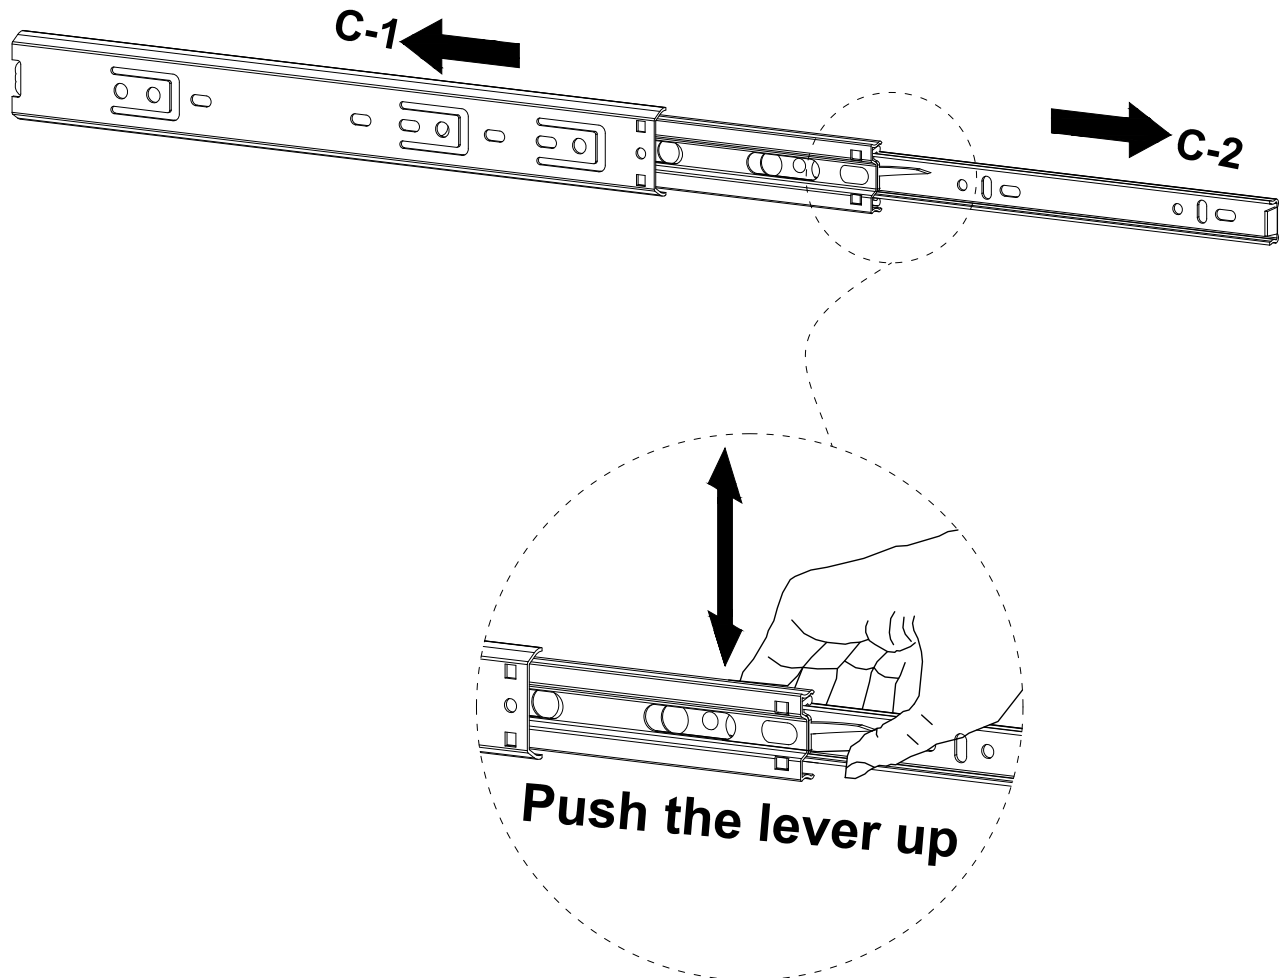

Step 2



Split component "C-1" and "C-2"

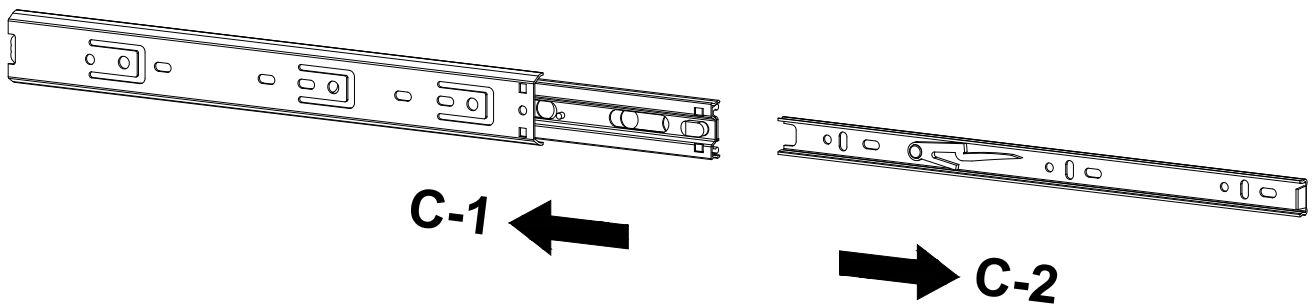

1

A



M6x40mm
16 pcs

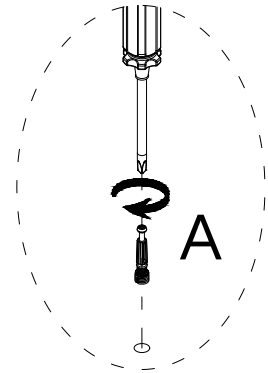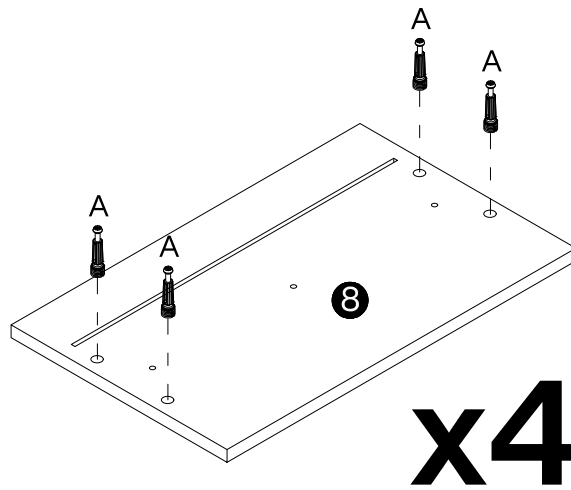


2

B


Ø15X10 mm
16 pcs

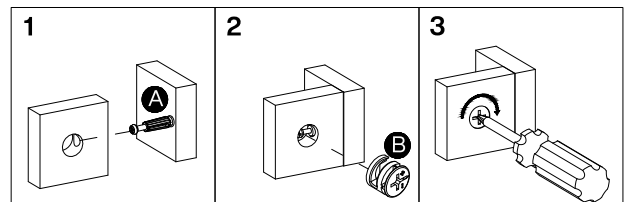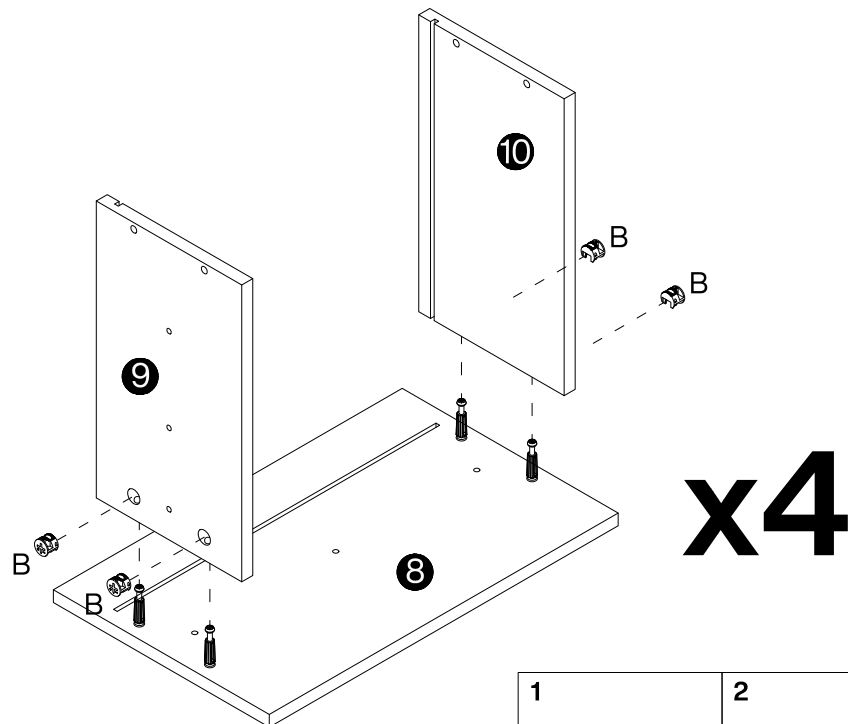

3

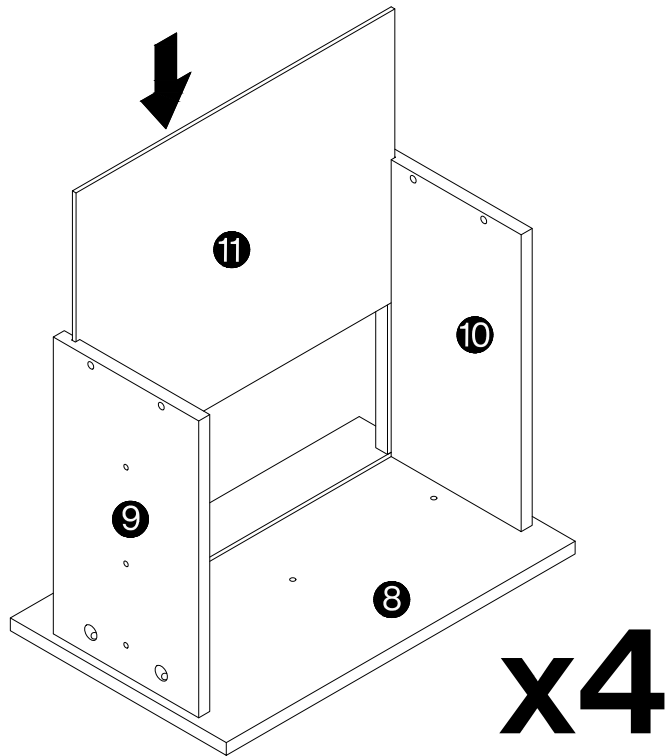


4

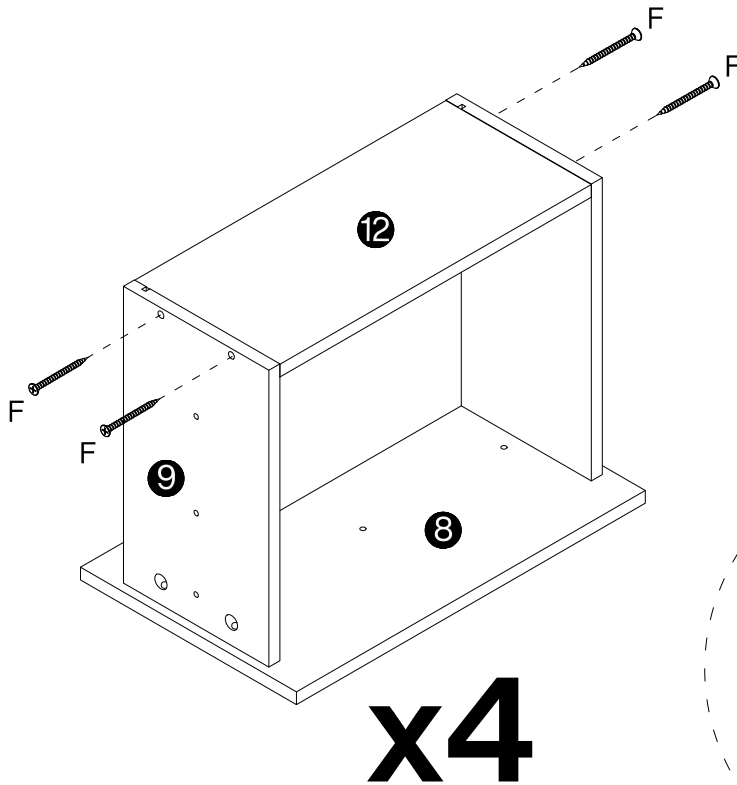


F


Ø3.5x35mm
16 pcs

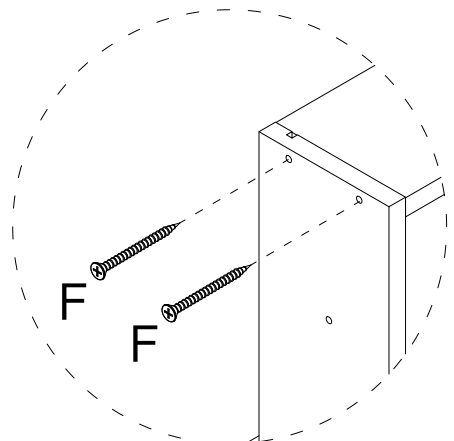

5

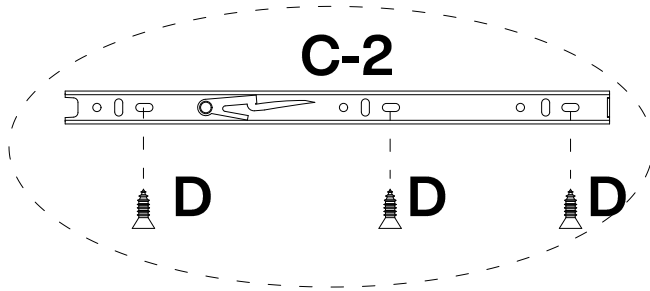



C-2	D
	
8 pcs	Ø3.5x14mm 24 pcs

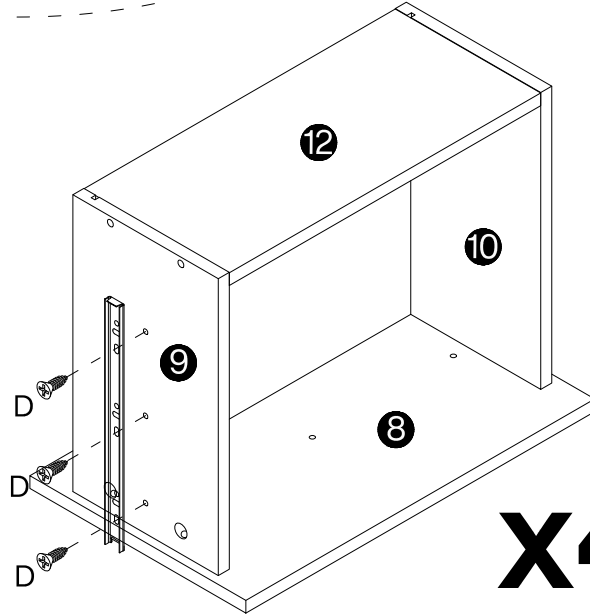

x4


6

E

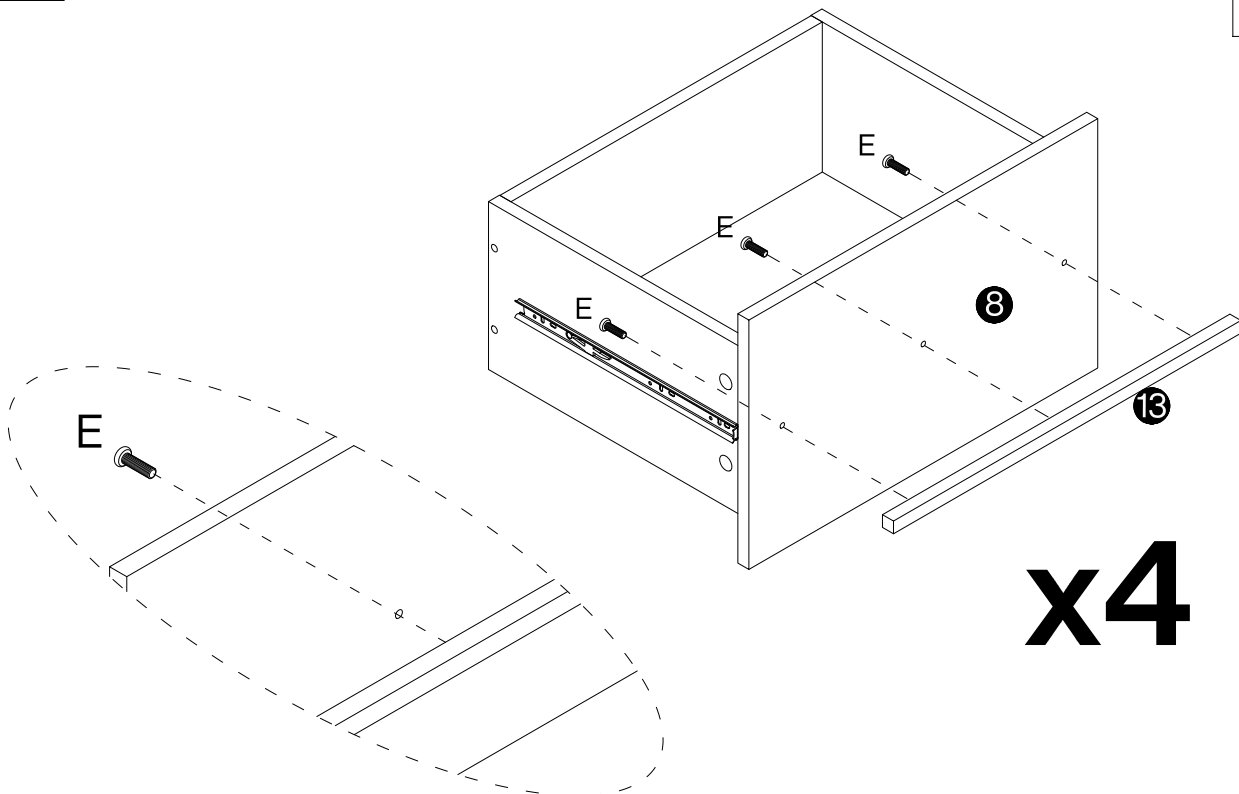Ø4x22mm 12 pcs




x4

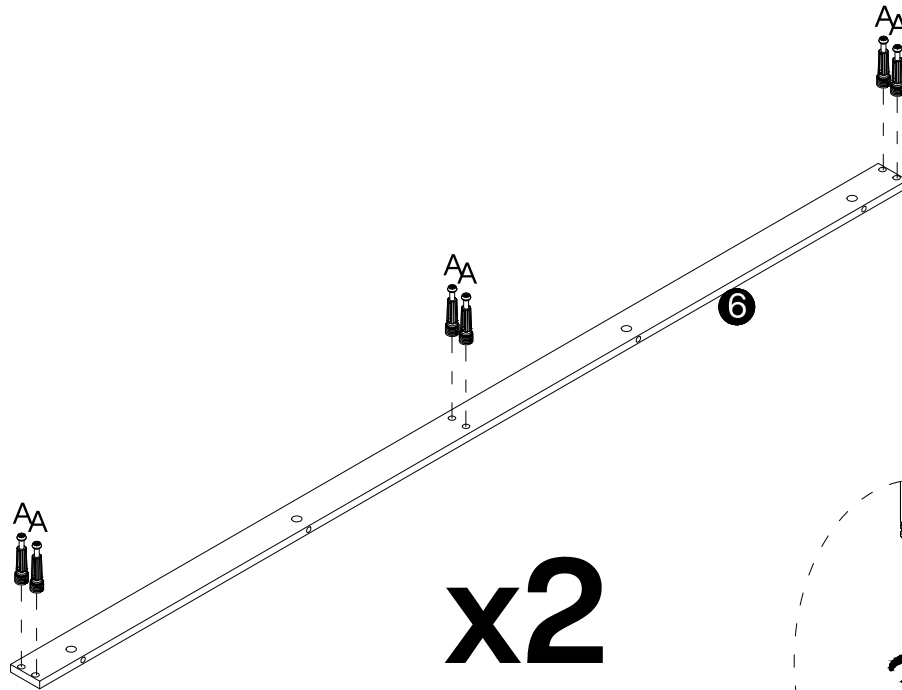7




A
M6x40mm
12 pcs


8

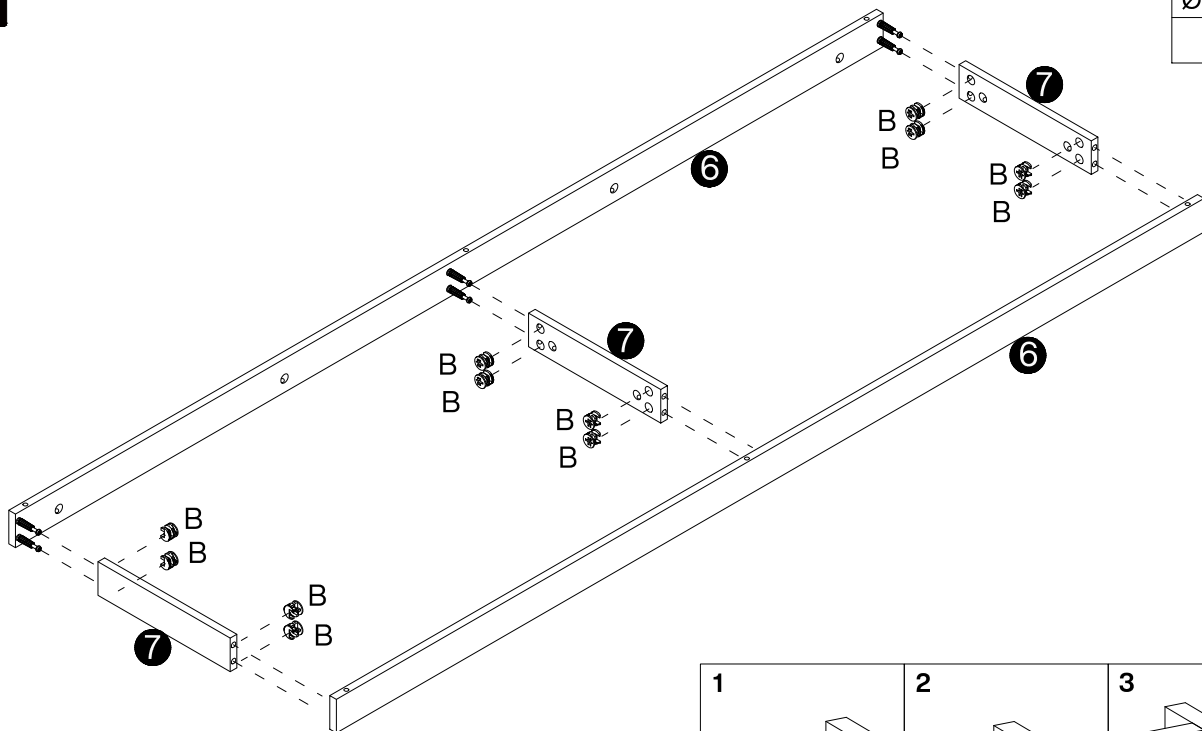

B
Ø15X10 mm
12 pcs

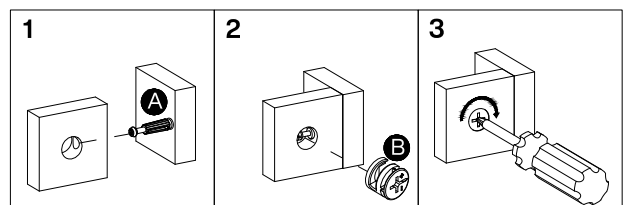


9

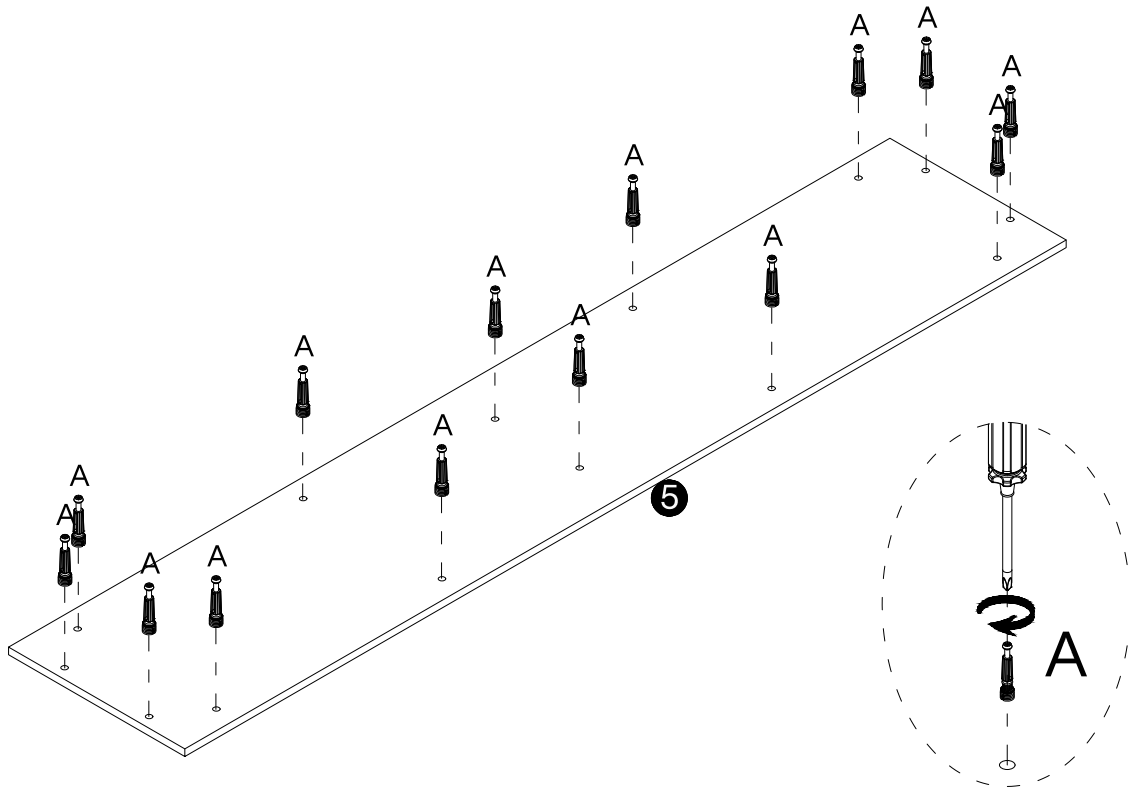

A


M6x40mm
14 pcs

10

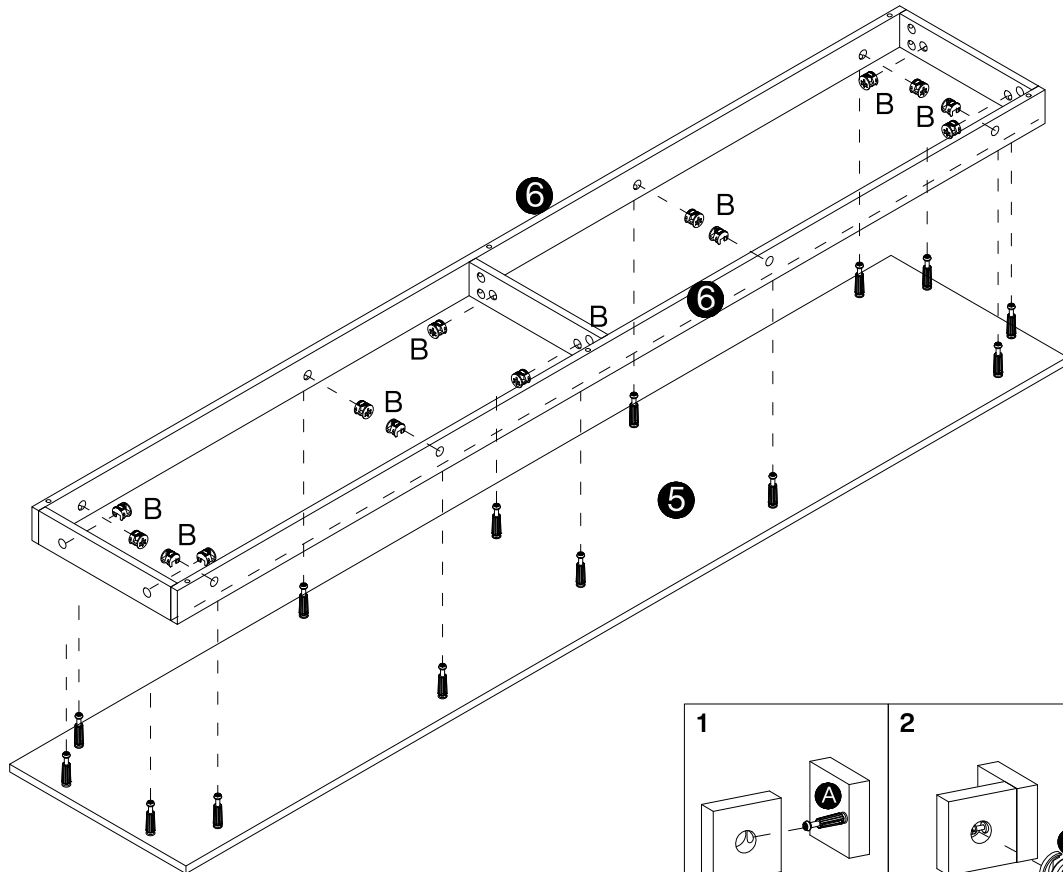


B

Ø15X10 mm
14 pcs

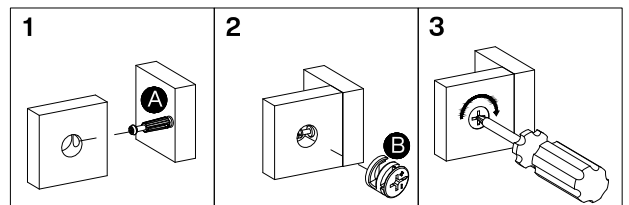


11

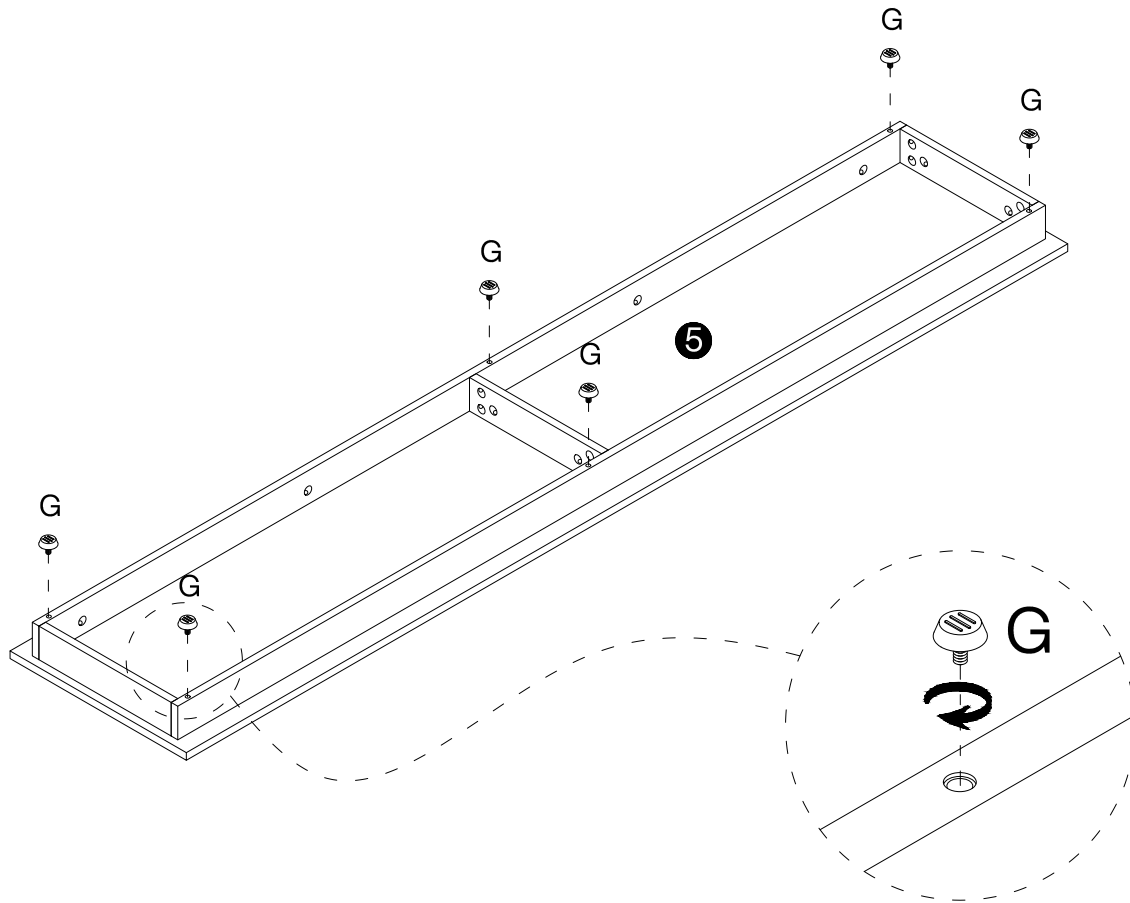

G

Ø15X12 mm
6 pcs


12

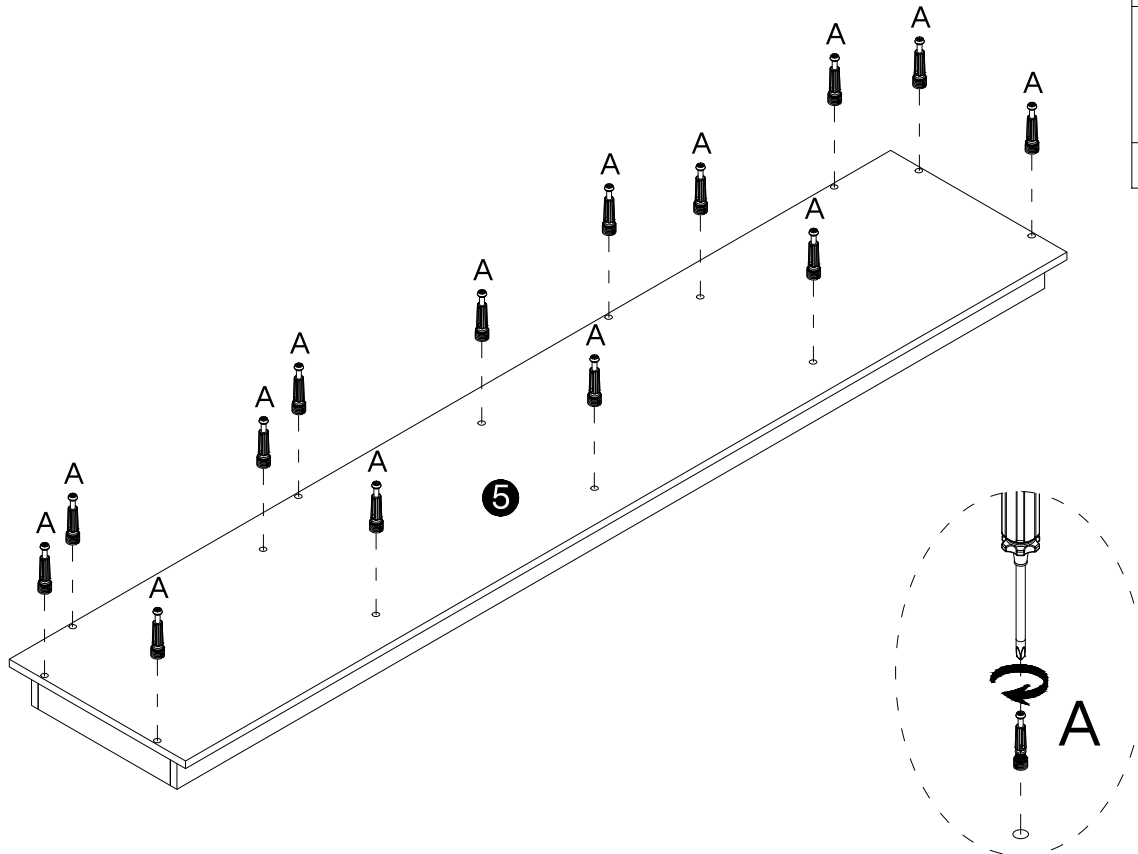



A

M6x40mm
14 pcs

13

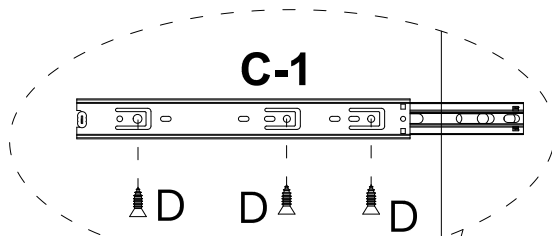


C-1	D	A
	 Ø3.5x14mm	 M6x40mm
2 pcs	4 pcs	4 pcs

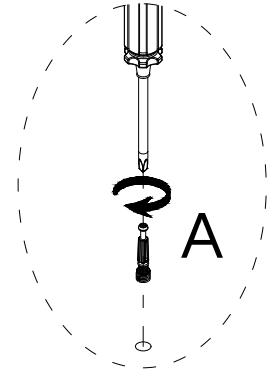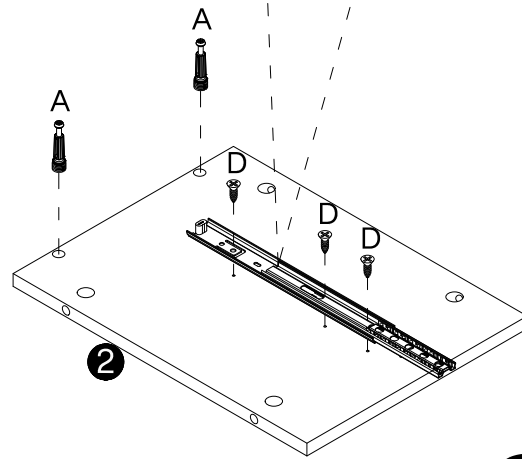


x2

14

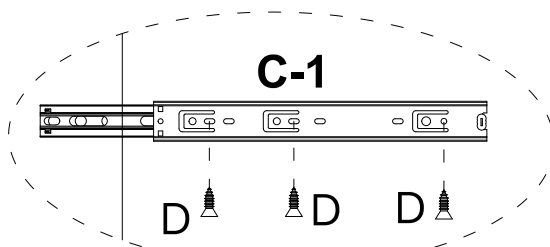


C-1	D
	 Ø3.5x14mm
6 pcs	18 pcs

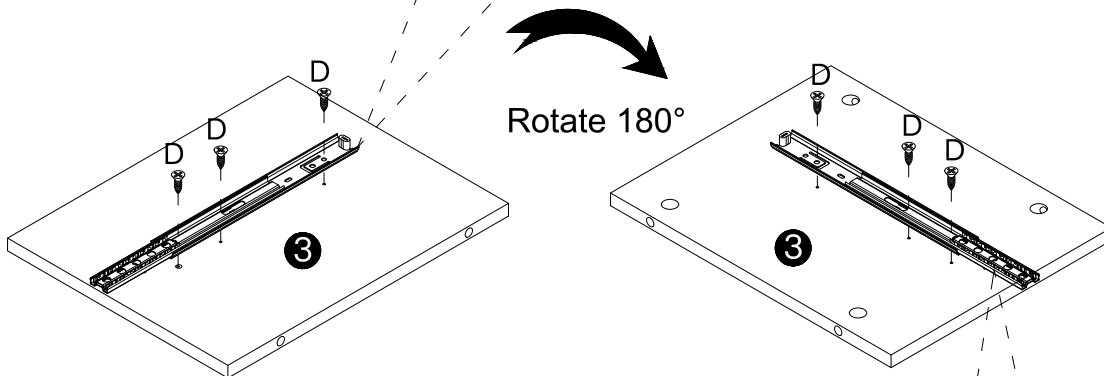


Rotate 180°

x3

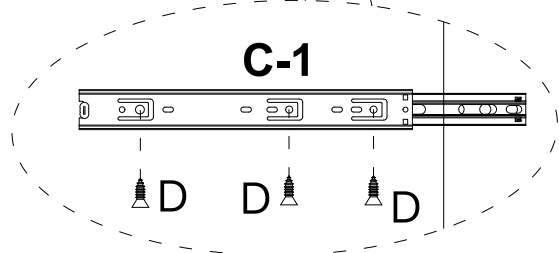


15

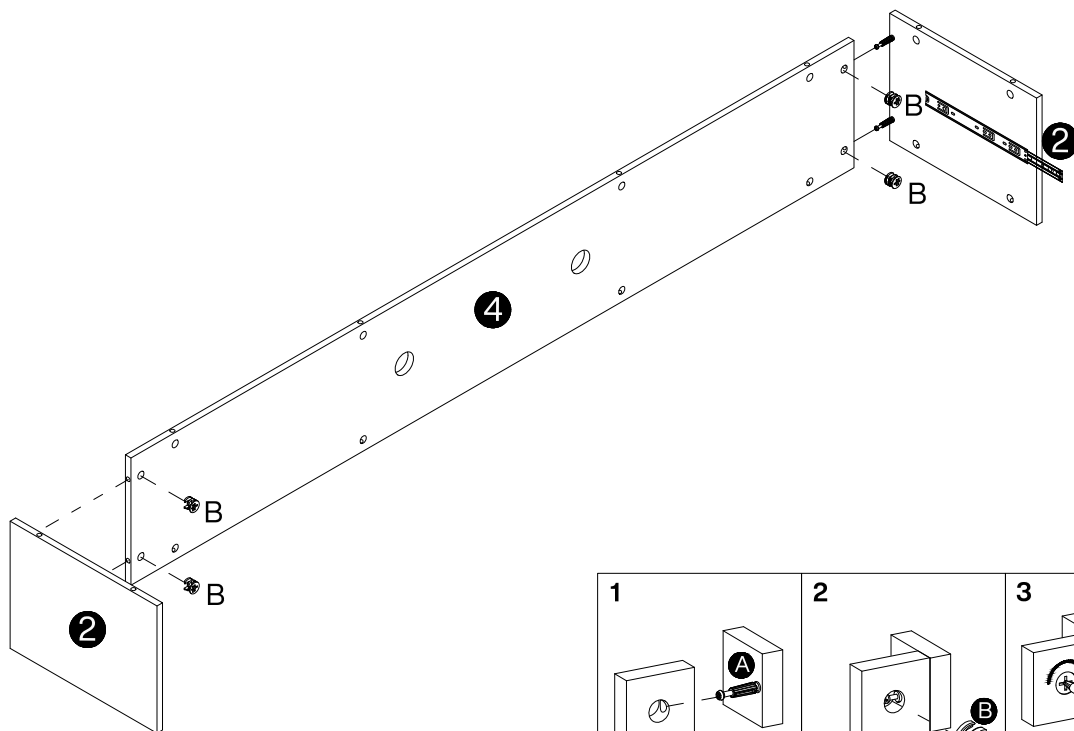


B

Ø15X10 mm
4 pcs

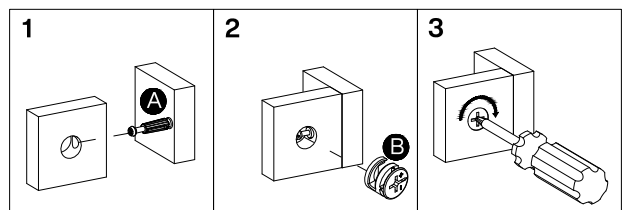


16

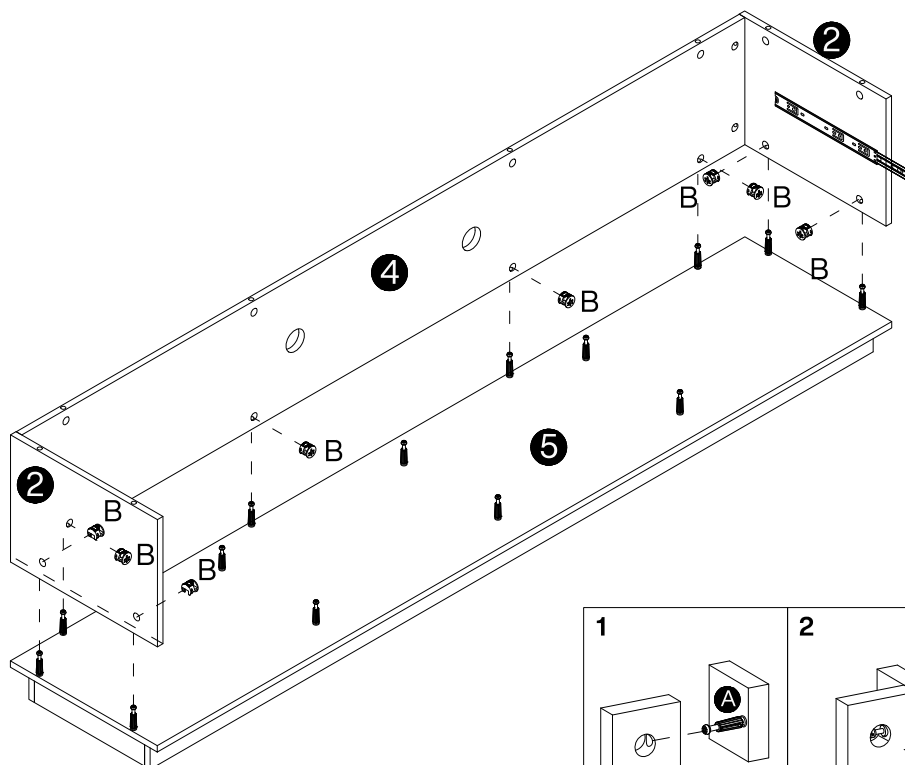

B


Ø15X10 mm
8 pcs

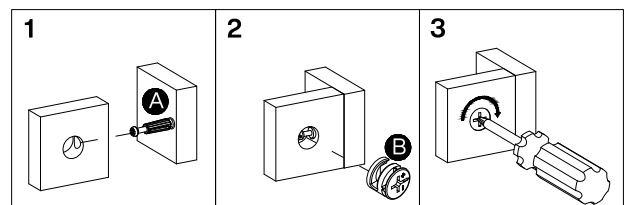

17

H



2 pcs

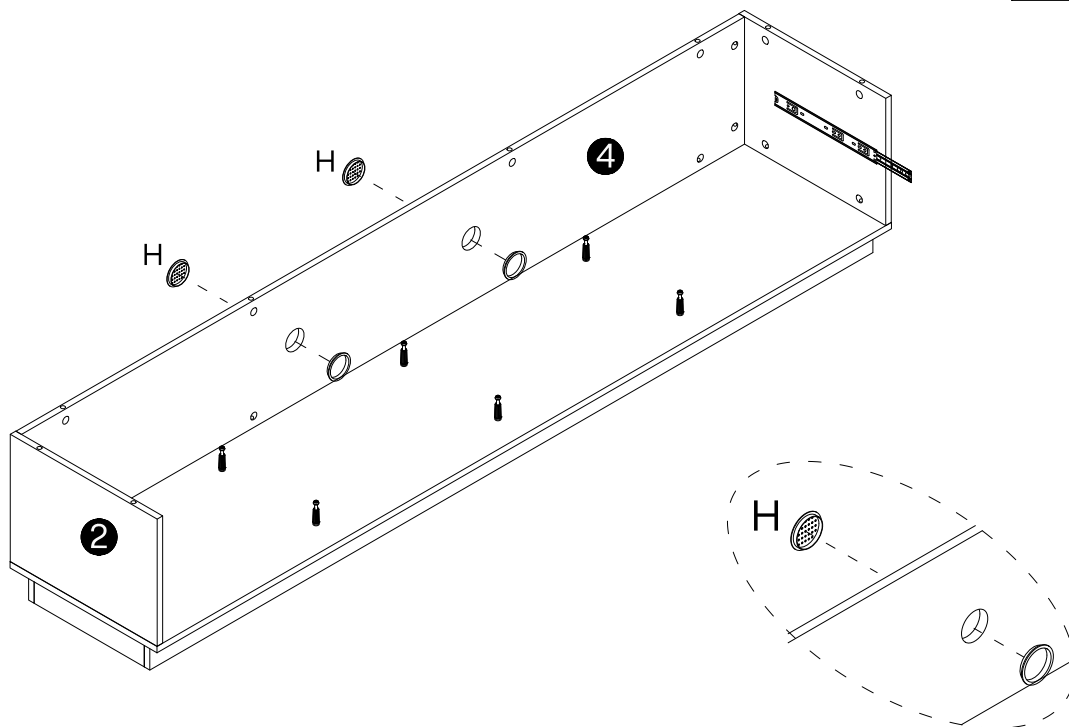

18

B


Ø15X10 mm
6 pcs

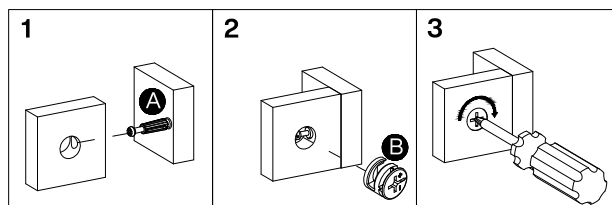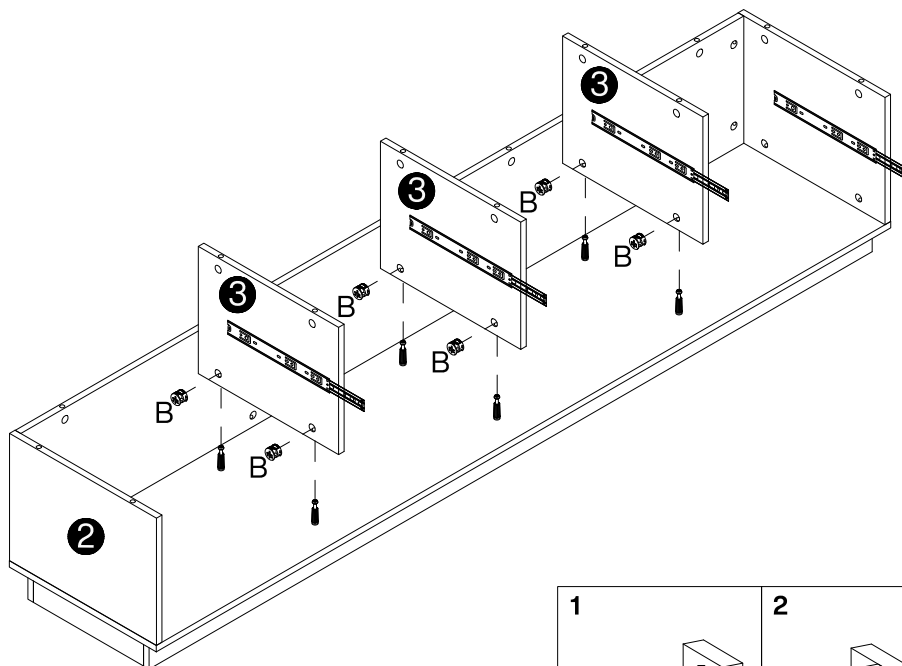

19

A



M6x40mm
14 pcs

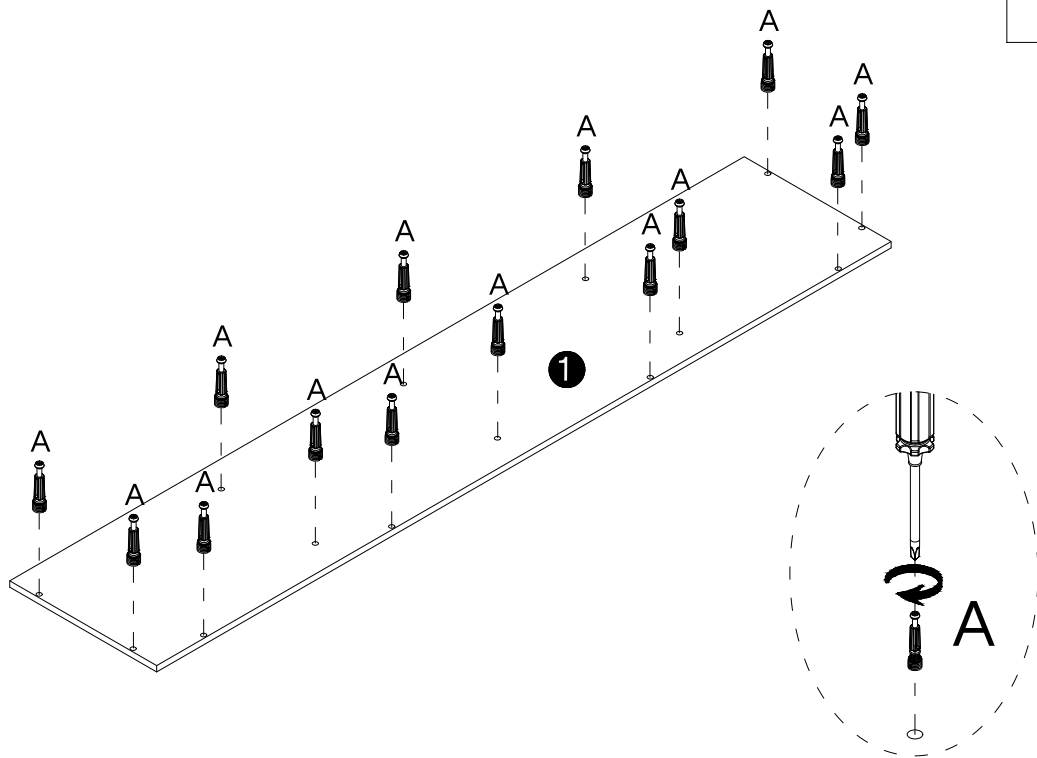



20

B

Ø15X10 mm
14 pcs

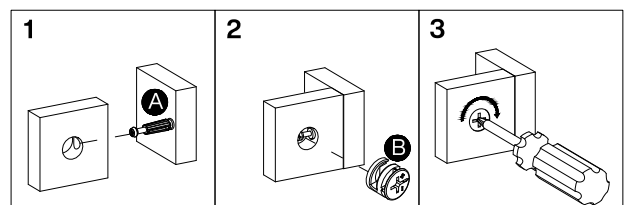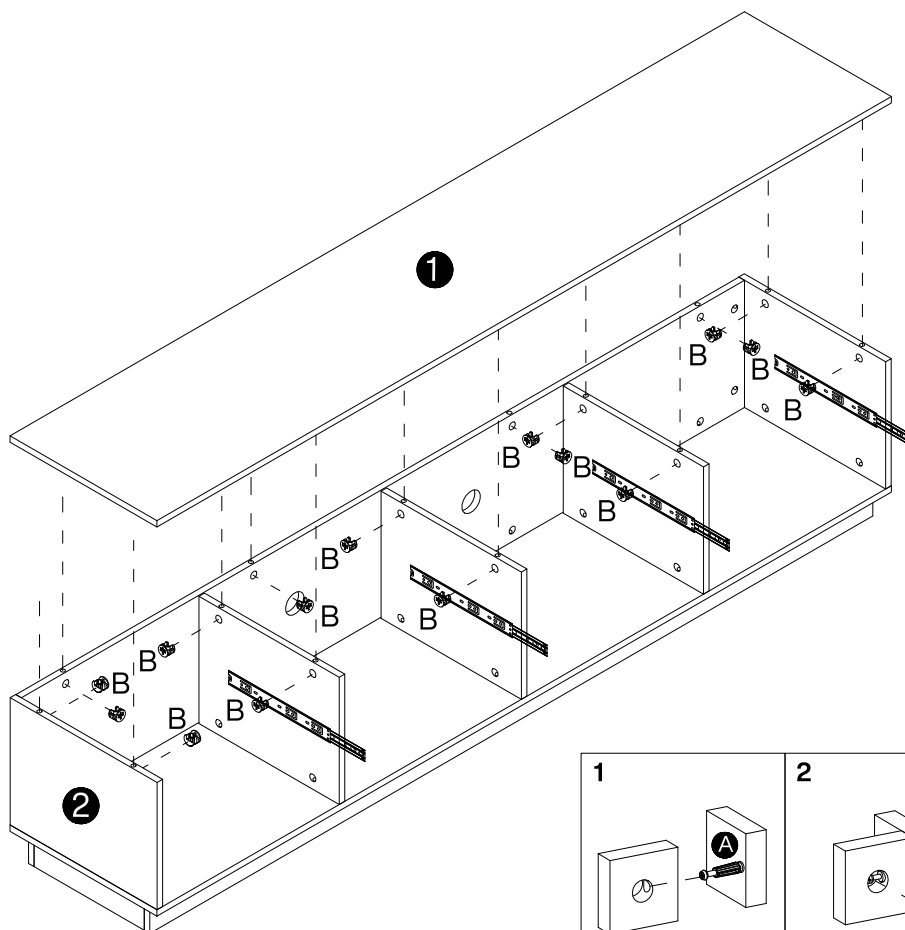

21

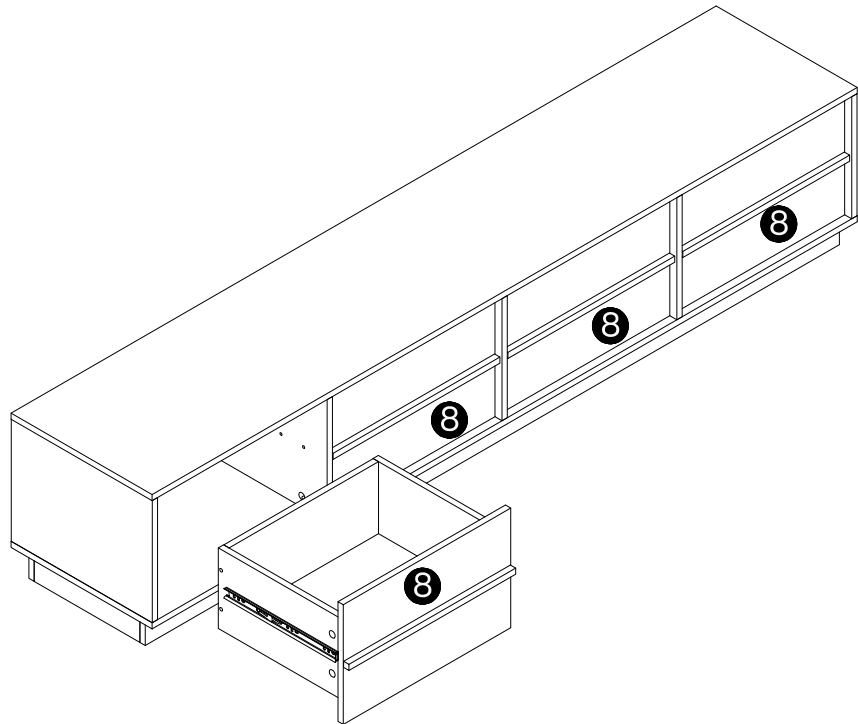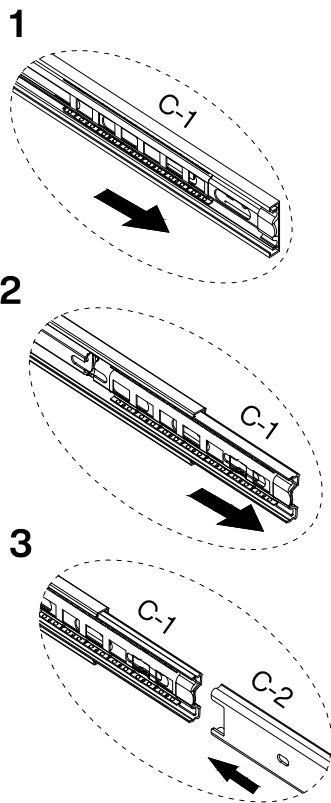

Align the "C-2" with the "C-1" guideway and gently push it in to complete the assembly

22

