




Adirondack Glider


Assembly Instructions

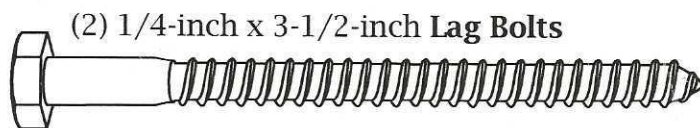

Parts List




(8) 1/4-inch Washers (6) 1/4-inch Nuts

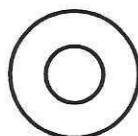

* Tools required: 7/16-inch wrench, hammer, #2 square driver bit

1. Armrest to Seat Assembly

Select proper armrest. (Curve side goes towards seat)
Insert two 3-1/4-inch carriage bolt through holes in front armrest support and seat assembly. Place a 1/4-inch washer and nut on end of bolts and tighten. Repeat on other side. **NOTE: Bolts should be inserted through seat assembly simultaneously to prevent alignment issues.**

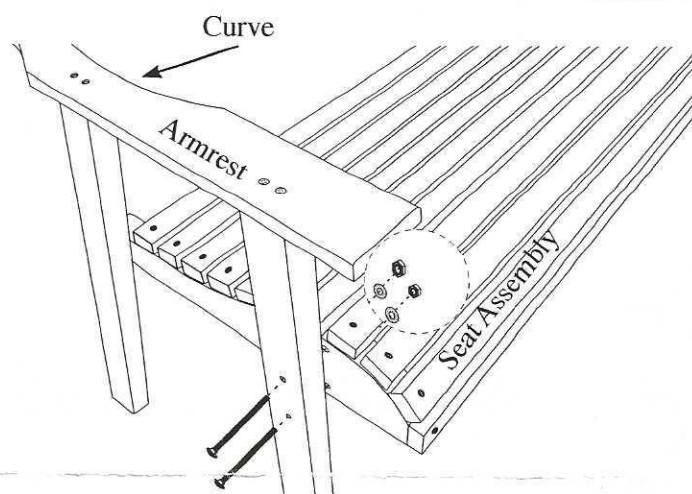

2. Armrest to Seat and Backrest

Insert 3-1/4-inch carriage bolt through middle hole in rear armrest support then through seat assembly. Place a 1/4-inch washer and nut on end of bolt and tighten. Repeat on other side.

