


ASSEMBLY INSTRUCTION

KING BED


W2582P185331 W2582P185333








W2582P185337 W2582P185339

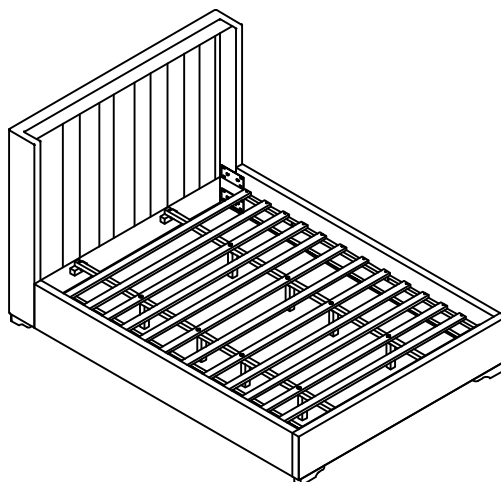W2582P185340 W2582P185341













Part list

| W2582P185331/ W2582P185337 W2582P185340 | | | |
|--|---|-------------|-----|
| No. | Parts | Description | QTY |
| A |  | Headboard | 1 |

| W2582P185333/ W2582P185339 W2582P185341 | | | |
|--|---|-------------------------------------|----|
| B |  | Footboard | 1 |
| C |  | Side Rail | 2 |
| D |  | Wood strip for Side rail | 2 |
| E |  | Slats | 13 |
| F |  | Center support rails | 2 |
| G |  | Wood Block on Headboard & Footboard | 4 |
| H |  | Center leg | 8 |

Hardware


| W2582P185333/ W2582P185339 W2582P185341 | | | |
|--|--|-------------------------|-----|
| No. | Parts | Description | QTY |
| 1 |  | Bolt 5/16" x 25mm | 30 |
| 2 |  | Flat Washer 5/16" | 30 |
| 3 |  | Lock washer 5/16" | 54 |
| 4 |  | Bolt 1/4" x 60mm | 24 |
| 5 |  | Flat Washer 1/4" | 24 |
| 6 |  | Screw #8 x 30mm | 30 |
| 7 |  | Large L metal connector | 2 |
| 8 |  | Metal bracket | 4 |
| 9 |  | Allen Wrench | 1 |

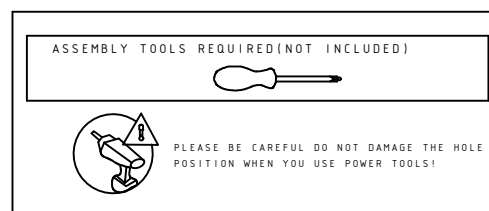

STEP 1:


Attach Large L metal connector (7) to Side rail (C), Footboard (B) with Bolt (1), Lock washer (3) and Flat washer (2) . Tighten with Allen Wrench (9).

Attach Metal Bracket (8) to side rail (C), Headboard(A) with Bolt (1), Lock washer (3) and Flat washer (2) . Tighten with Allen Wrench (9).

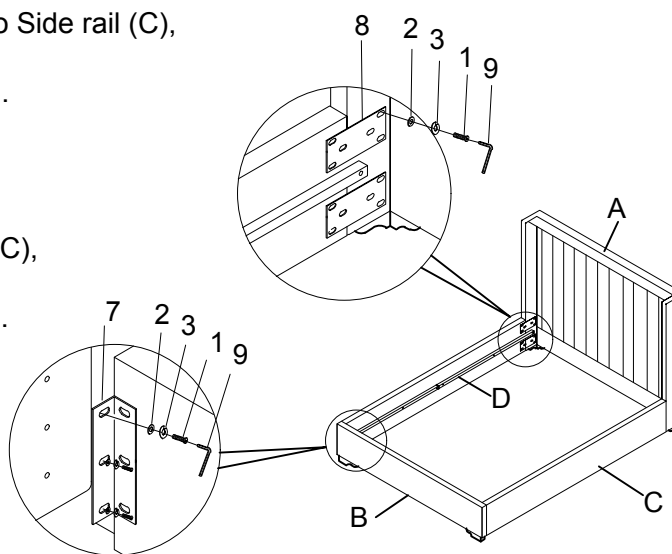


STEP 2:

Attach Wood strip for Side rail (D) to Side rail (C) with Bolt (4), Lock washer (3) and Flat washer (5) .Tighten with Allen Wrench (9).

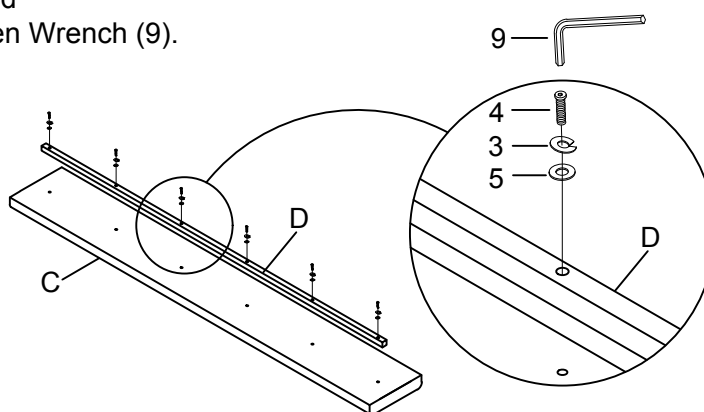


STEP 3:

Attach Wood Block on Headboard & Footboard (G) to Headboard (A) and Footboard (B) with Bolt (4), Lock washer (3) and Flat washer (5) Tighten with Allen Wrench (9).

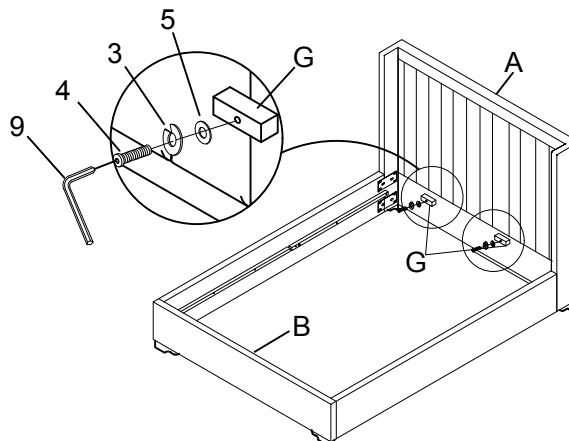


STEP 4:

Attach Center support rails (F) to Headboard (A) and Footboard (B) with Screw (6).

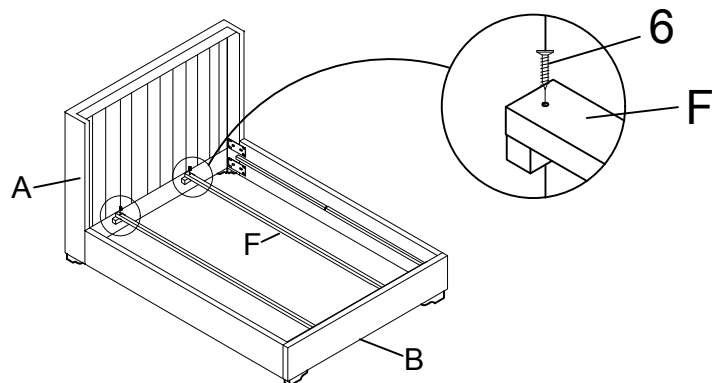

STEP 5:

Attach Center leg (H) to Center support rails (F) and Slats (E) with Bolt (4), Lock washer (3) and Flat washer (5). Tighten with Allen Wrench (9).

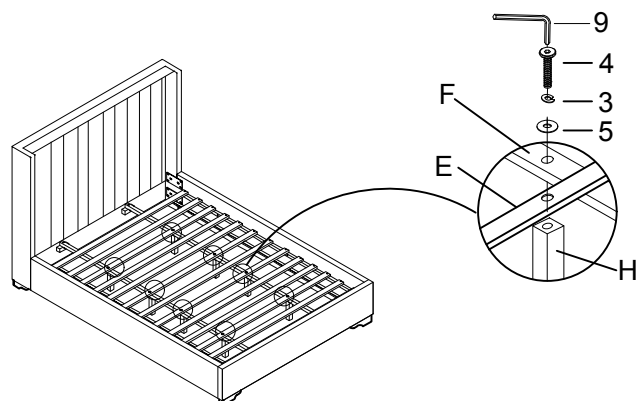

STEP 6:

Attach Slats (E) to Side rail (C) with Allen Screw (6).

