

J1S041

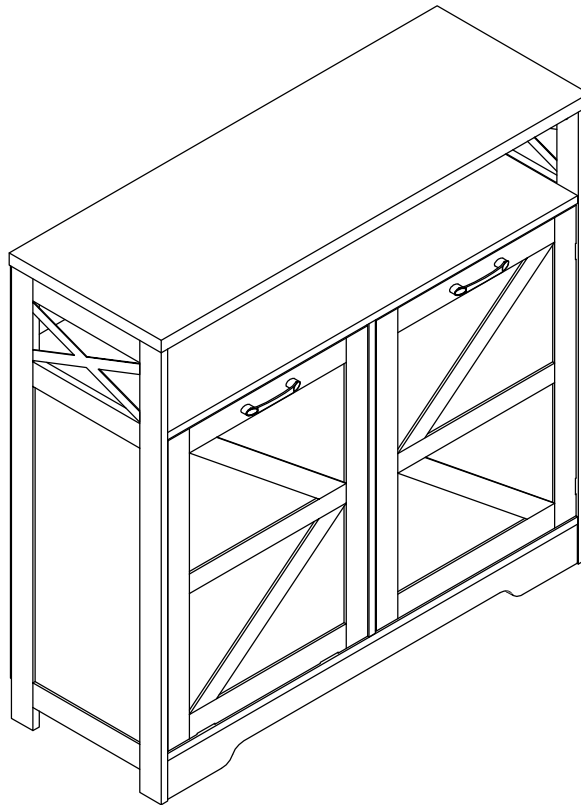


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

hosoteservice@gmail.com

Our professional after-sales team will serve you online all day.

Before You Start

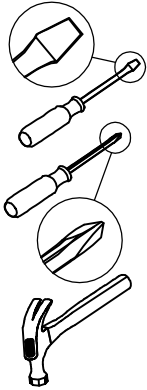

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an R (right) and L (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

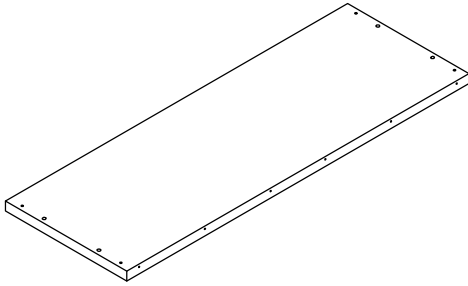


Ⓐ
TOP PANEL

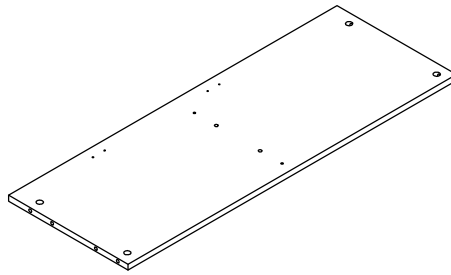


Ⓑ
FIXED SHELF

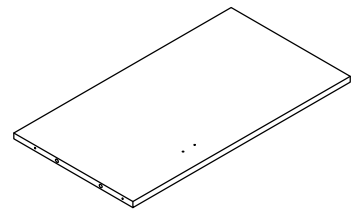


Ⓒ
PARTITION PANEL

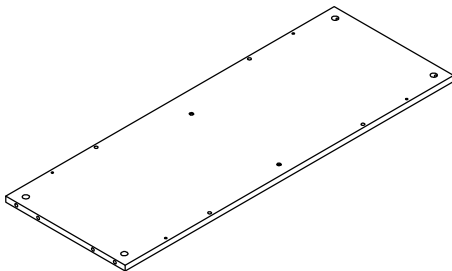


Ⓓ
BOTTOM PANEL

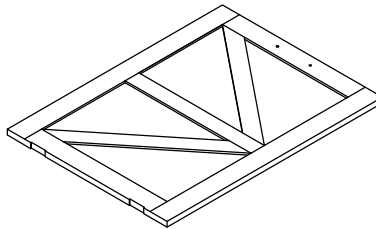


Ⓔ
LEFT DOOR

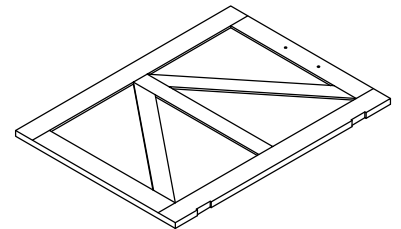


Ⓕ
RIGHT DOOR

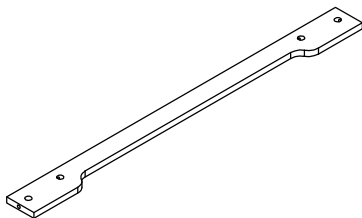

Ⓖ
BOTTOM FRONT RAIL

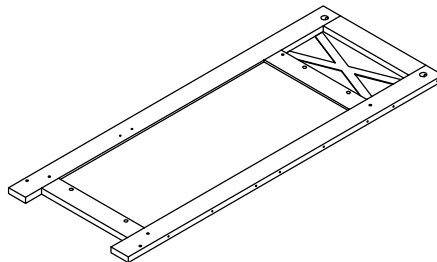


Ⓖ
LEFT SIDE PANEL

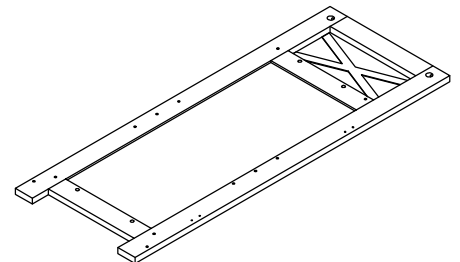

Ⓖ
RIGHT SIDE PANEL


Board Identification

Not actual size




ⓐ

INNER LEFT SIDE PANEL




ⓑ

INNER RIGHT SIDE PANEL

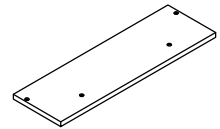


ⓒ

INNER BACK PANEL

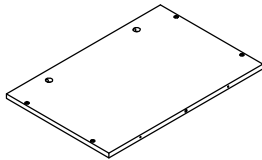


ⓓ

INNER BOTTOM

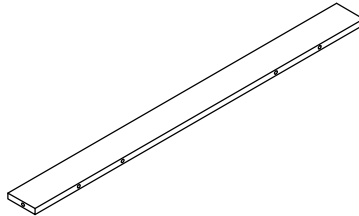


ⓔ

INNER BACK PANEL

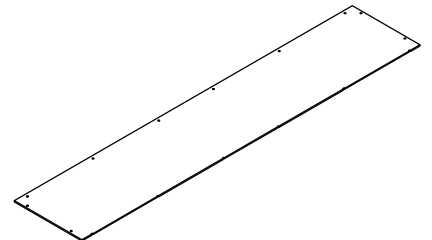


ⓕ

UPPER BACK PANEL

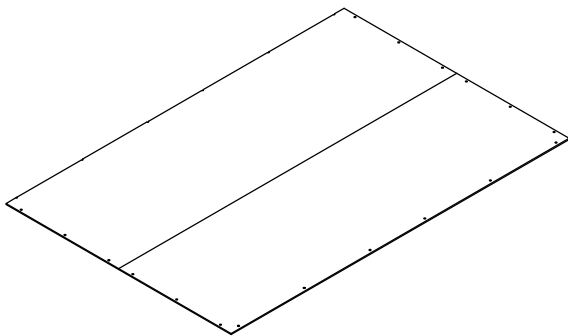

ⓖ

LOWER BACK PANEL

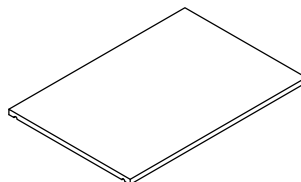


ⓗ











SHELF PANEL

Board Identification

Not actual size

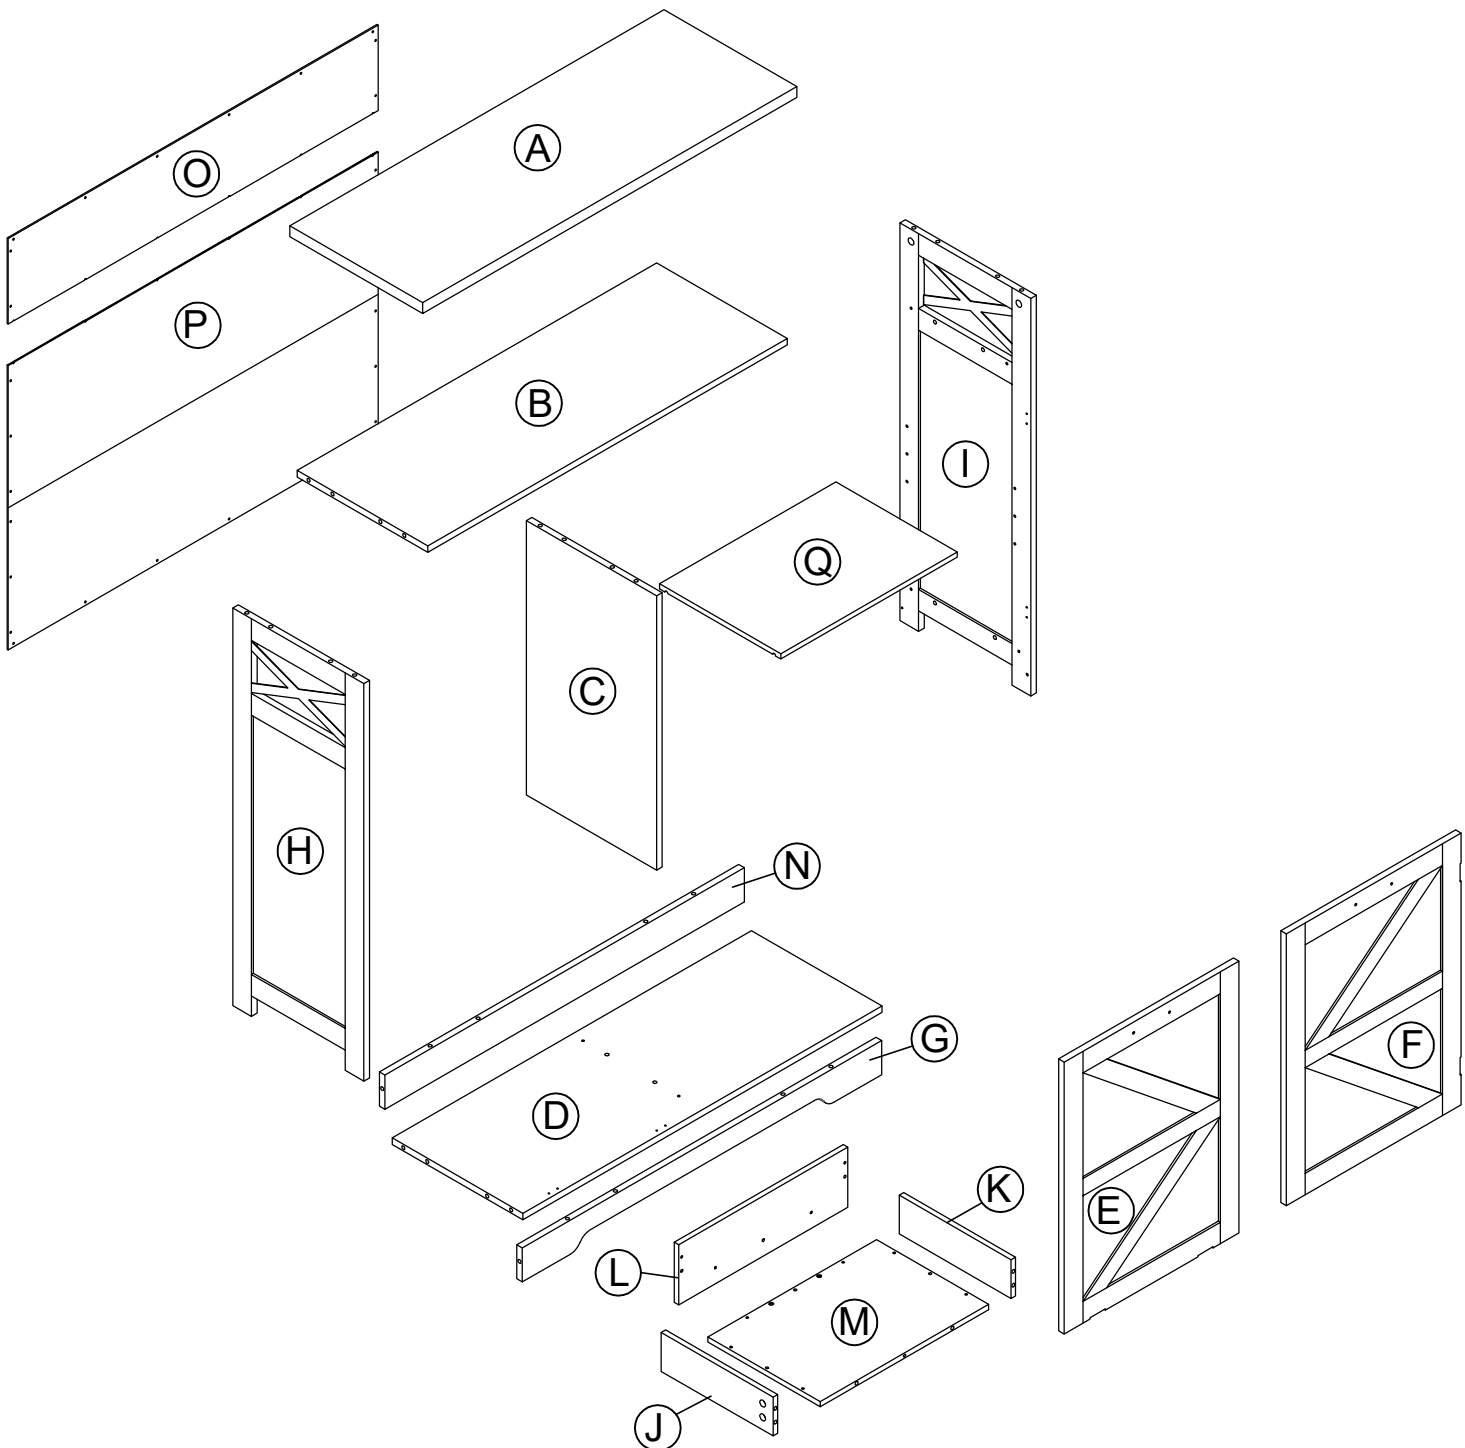


Part List

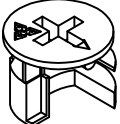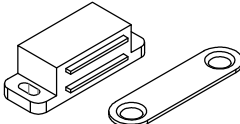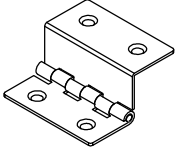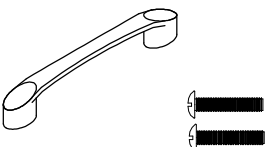
 Ø15X9mm ① X28 CAM LOCK spare: 2	 ø6.5X35mm ② X28 CAM BOLT spare: 2	 ø8X30mm ③ X20 WOOD DOWEL spare: 2	 ø6X30mm ④ X5 WOOD DOWEL spare: 1
 ø4X35mm ⑤ X10 SCREW spare: 1	 Ø3X16mm ⑥ X4 SCREW spare: 1	 ⑦ X2 MAGNETIC CATCH	 ⑧ X4 HARDWARE HINGE
 ⑨ X2 HANDLE	 ⑩ X1 LEFT HINGE	 ⑪ X4 SHEIF SUPPORT	 Ø3.5X14mm ⑫ X24 SCREW spare: 2
 Ø3 x 12mm ⑬ X32 SCREW spare: 3	 Ø20mm ⑭ X4 SCAM LOCK COVER spare: 1	 ⑮ X2 TIPPING RESTRAINT HARDWARE KIT	

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

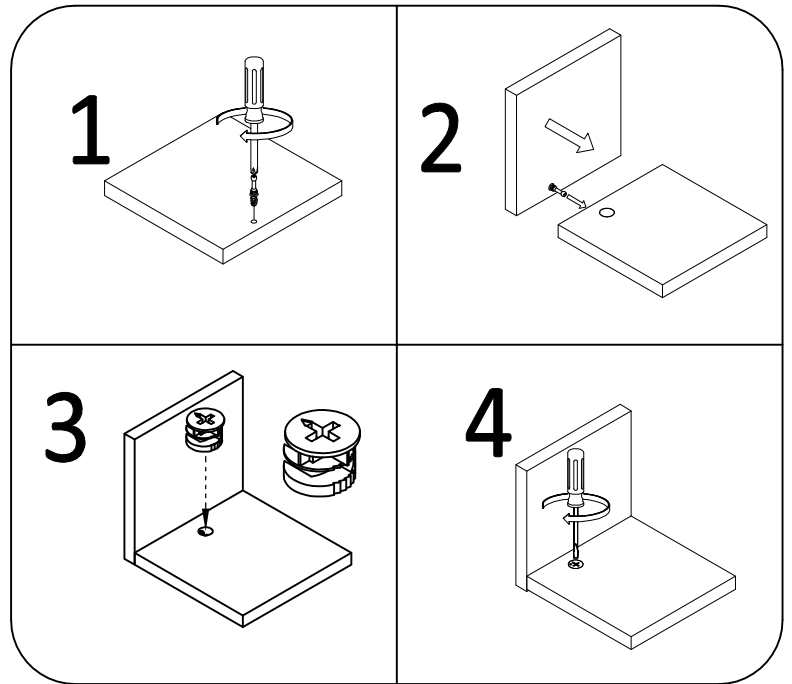

STEP1














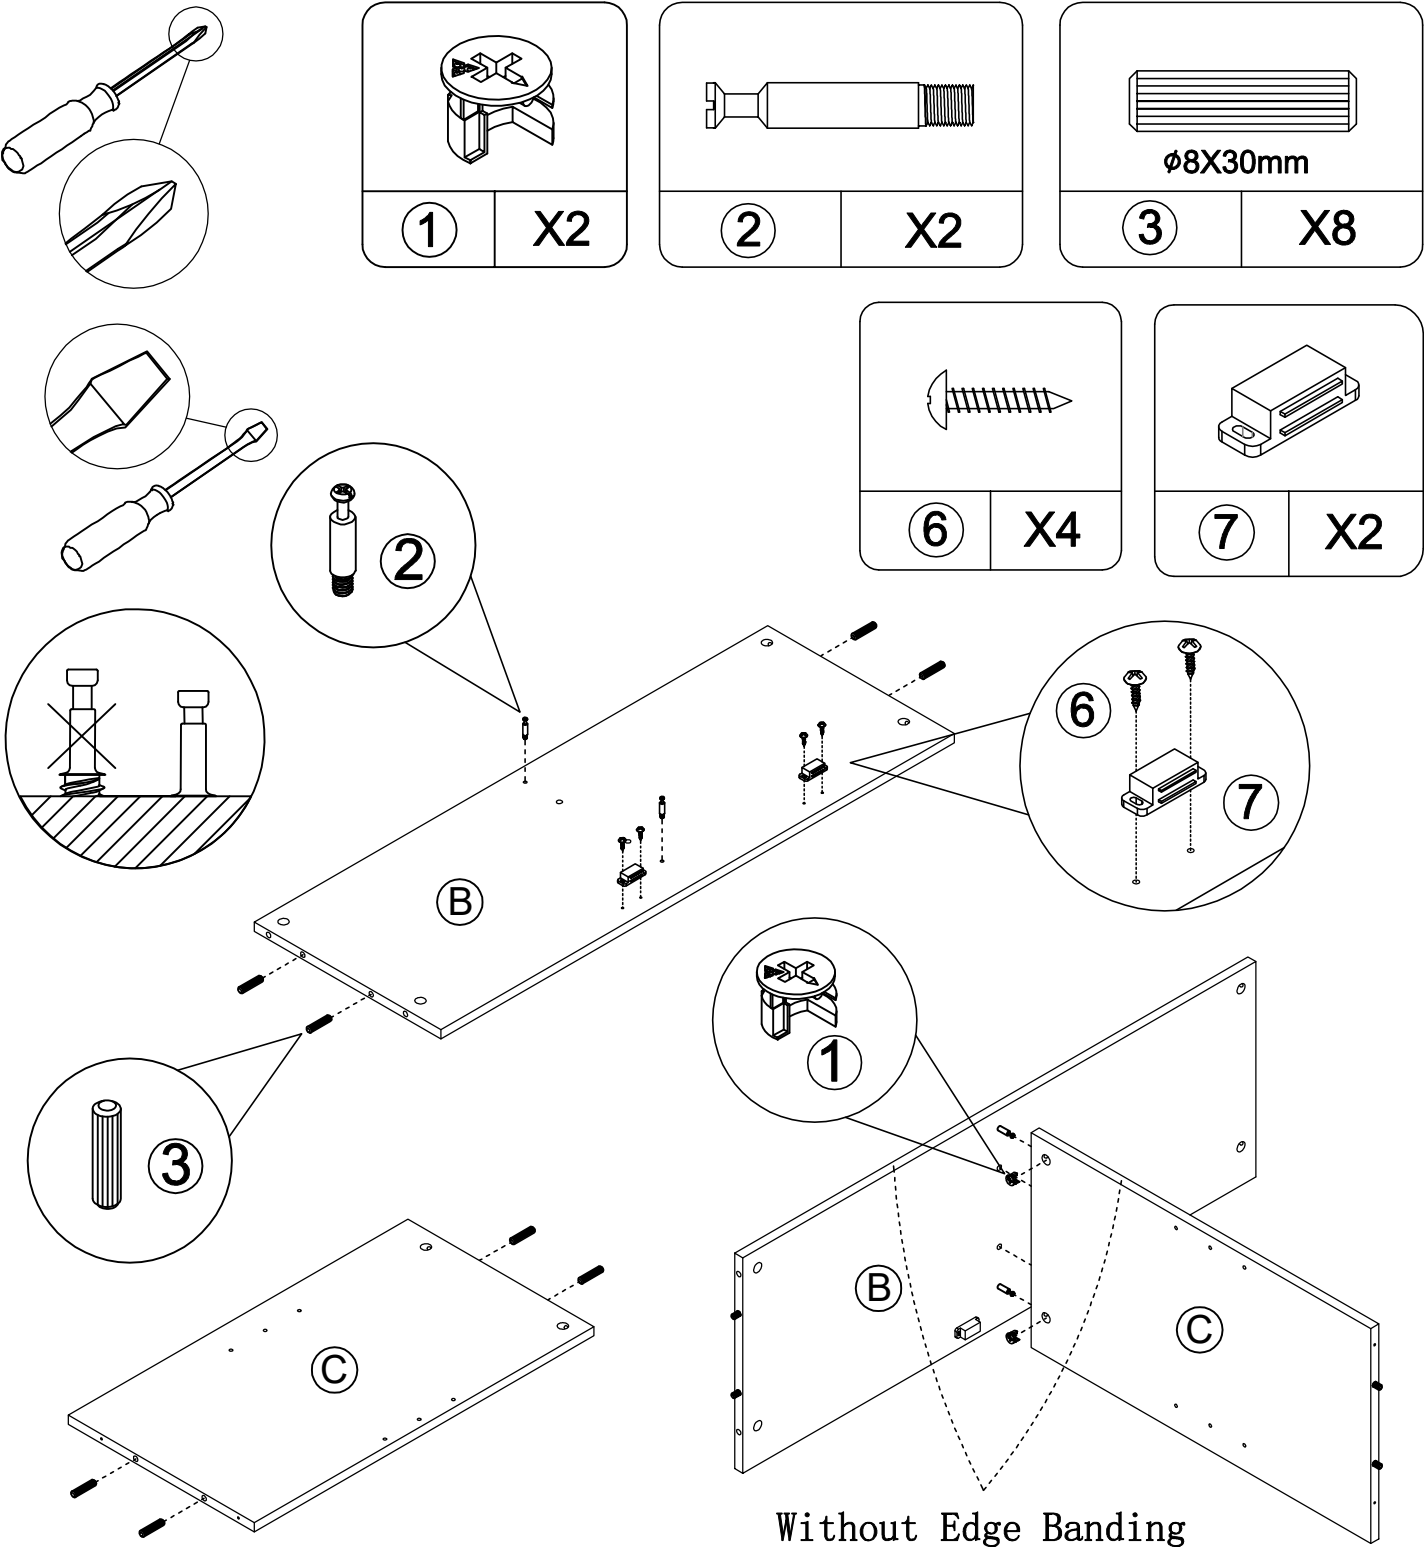


Without Edge Banding

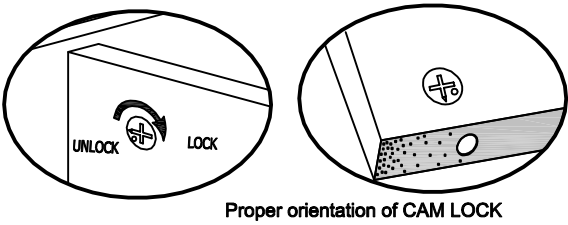




Proper orientation of CAM LOCK

STEP2

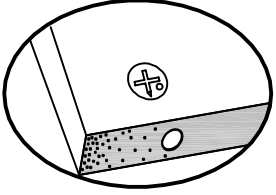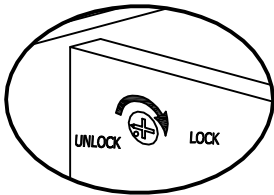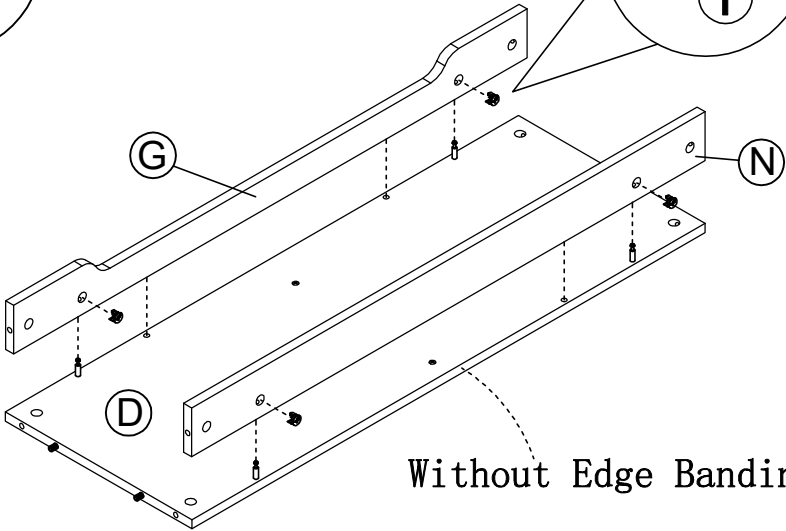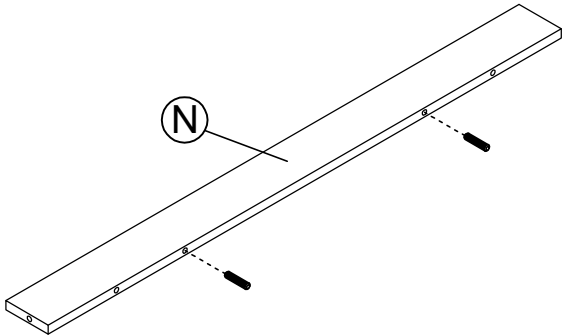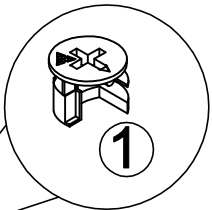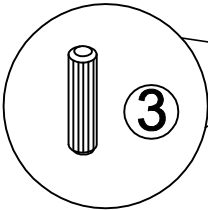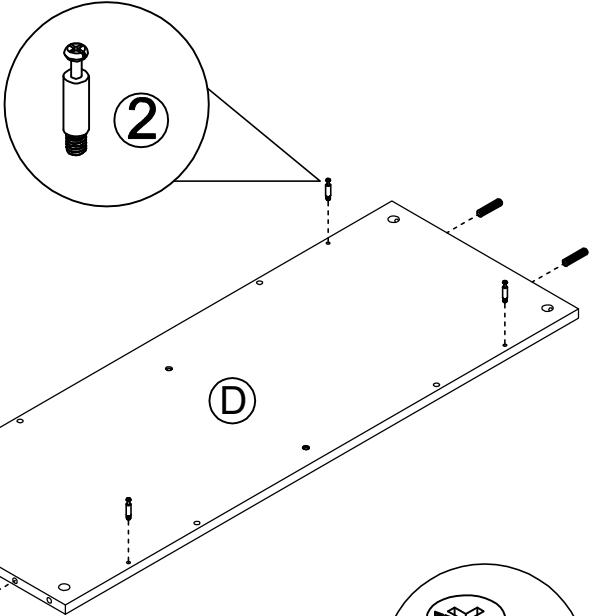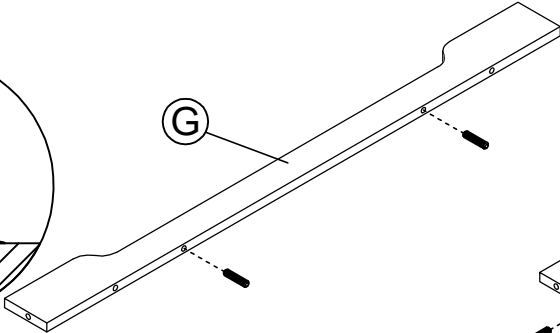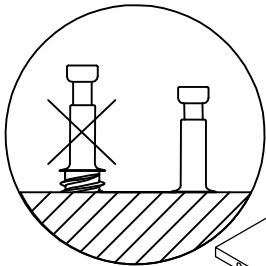
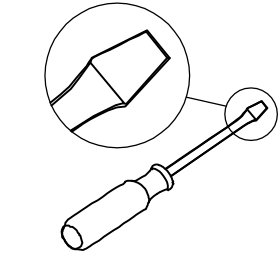
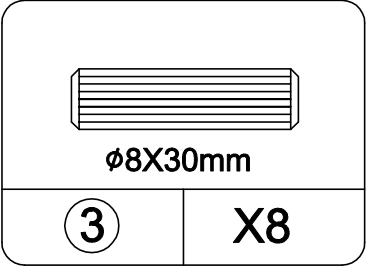
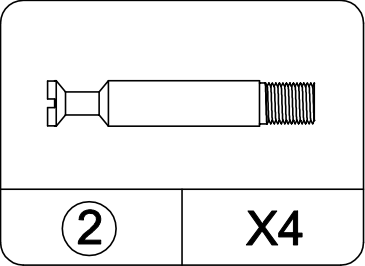
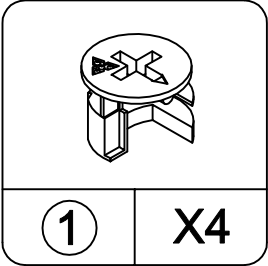
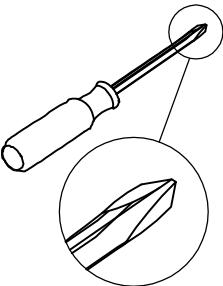


Proper orientation of CAM LOCK






STEP3

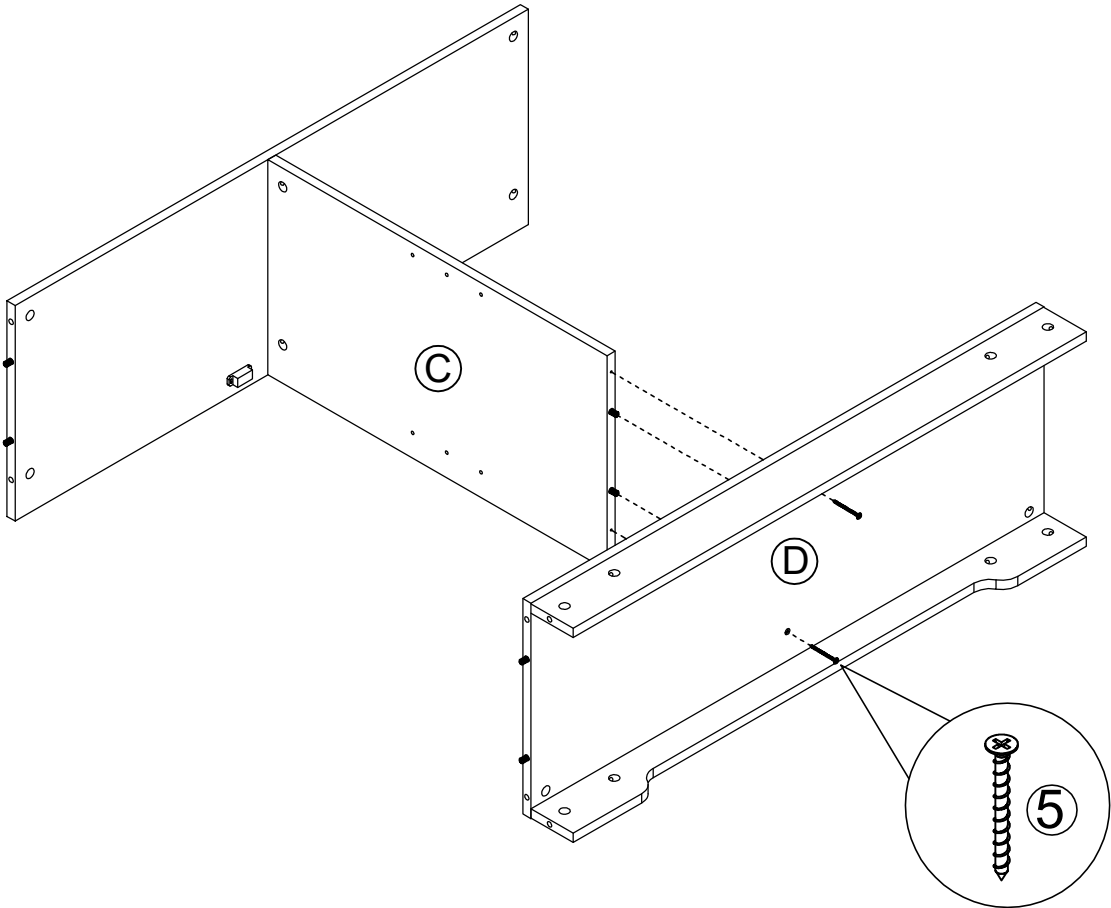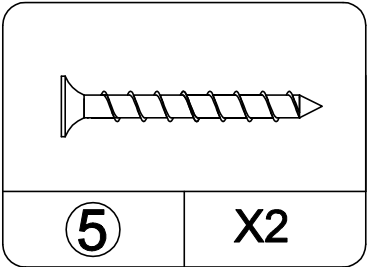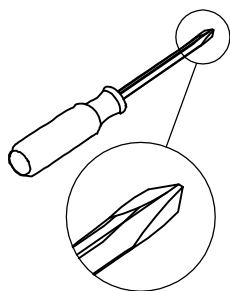

STEP4

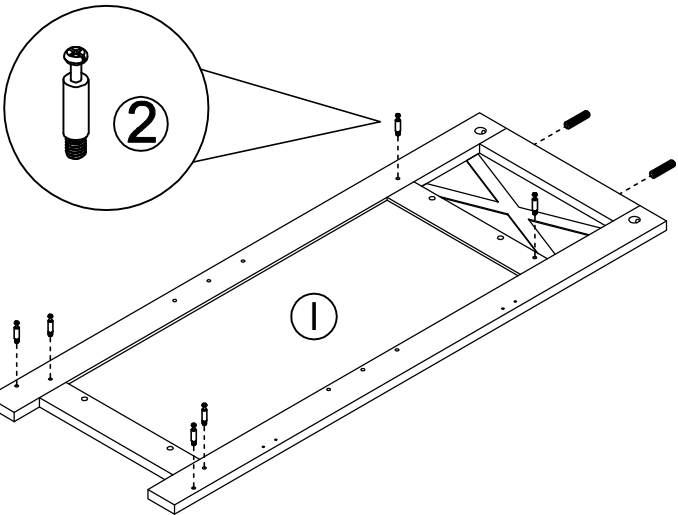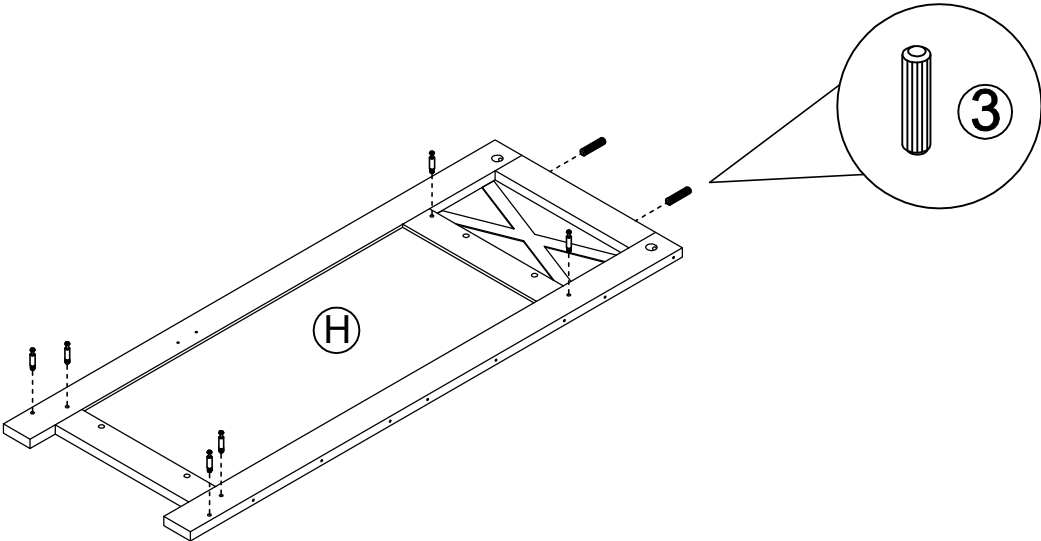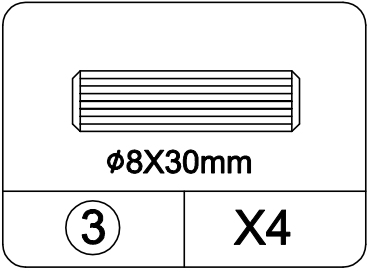
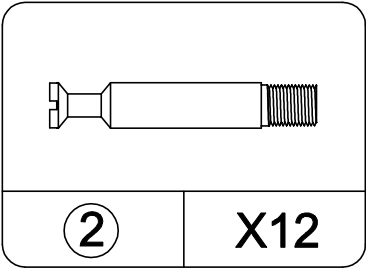
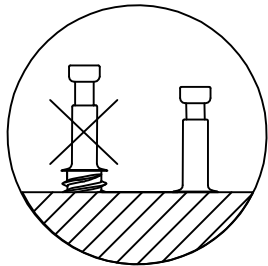
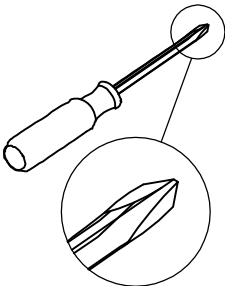


STEP5

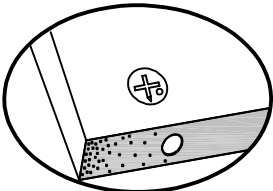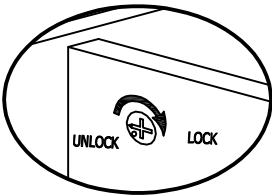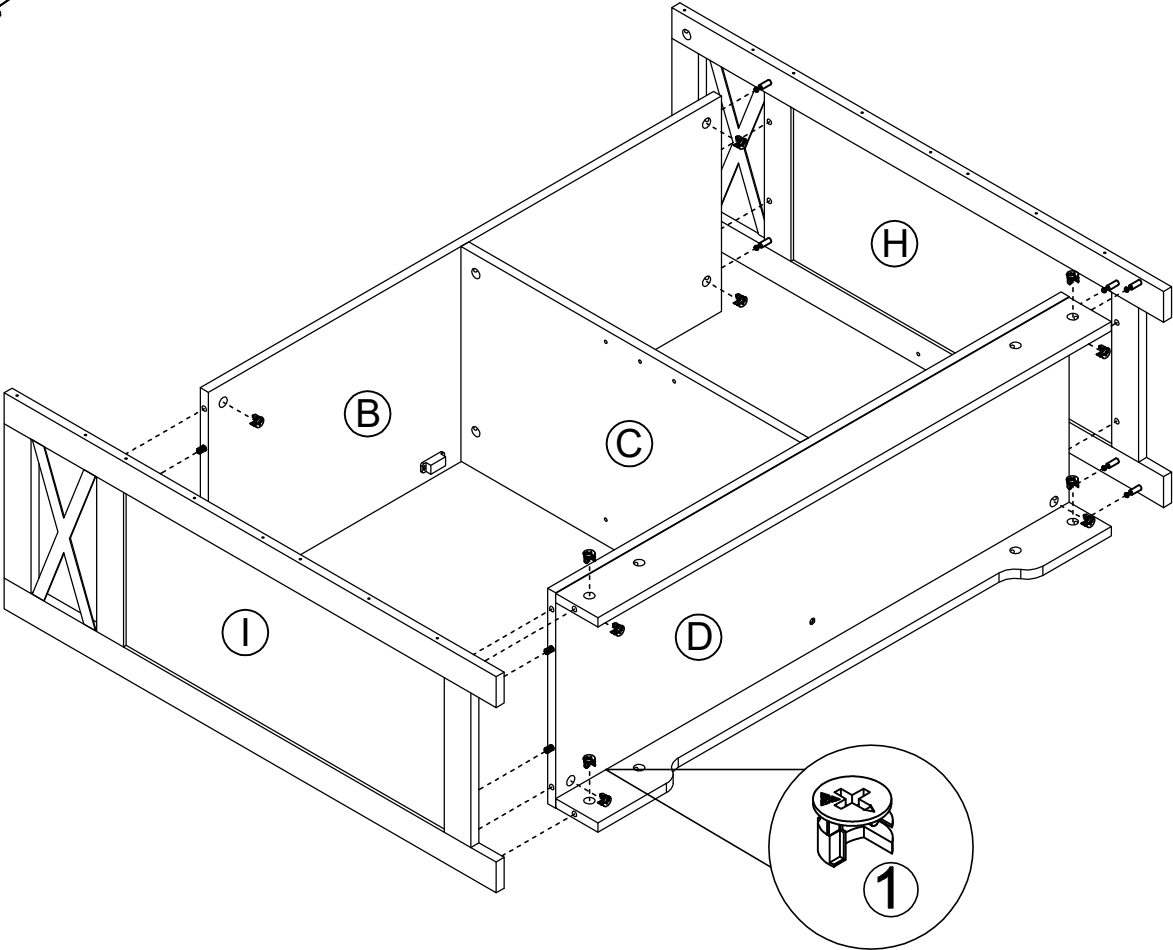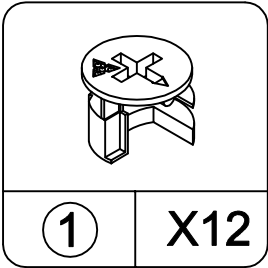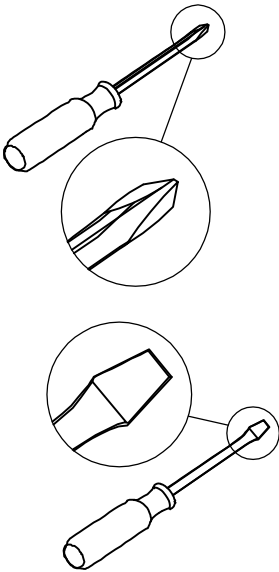


Proper orientation of CAM LOCK

STEP6

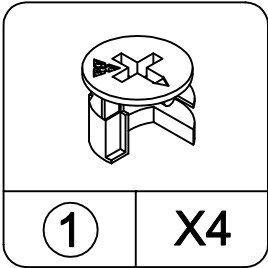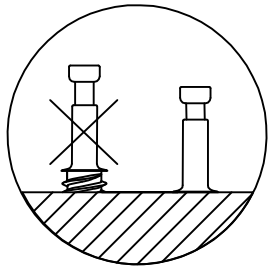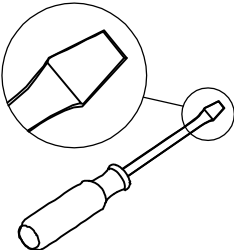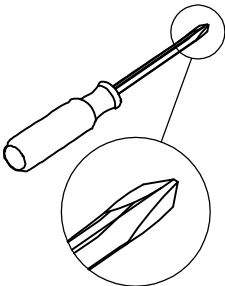


1

X4

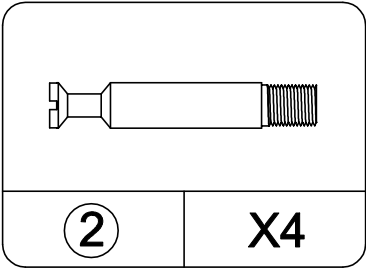



2

X4

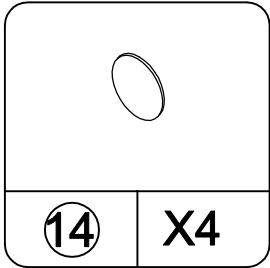


14


X4

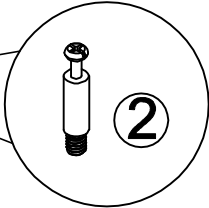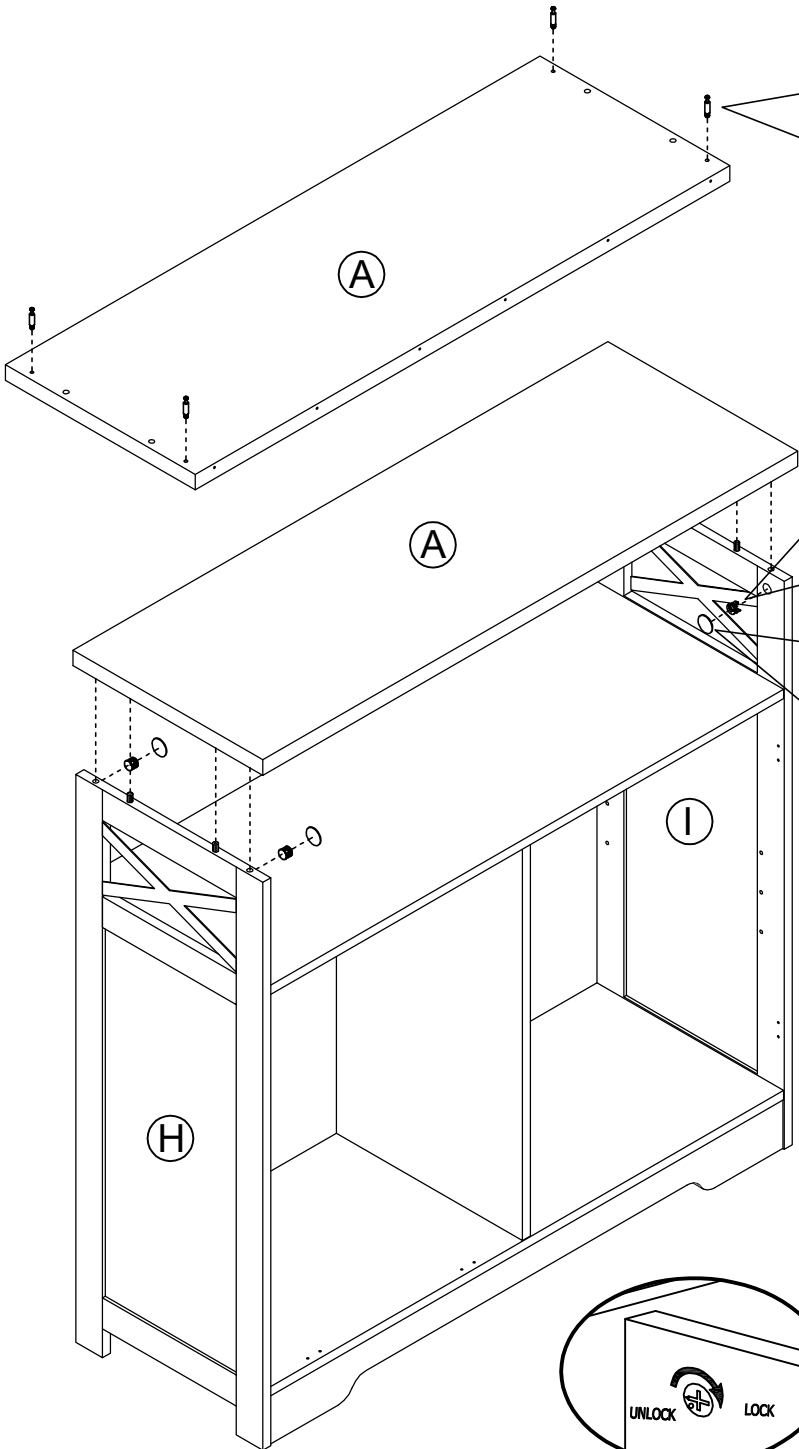



2

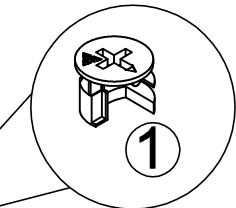

1

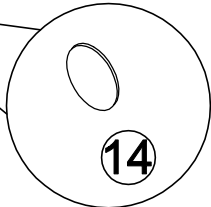


14


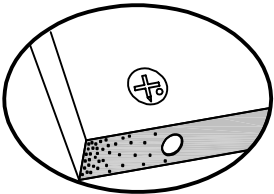
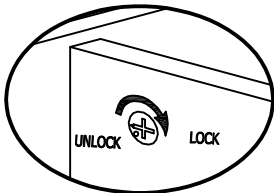


Proper orientation of CAM LOCK




STEP7

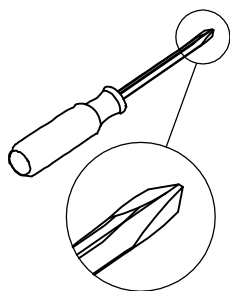












	
ø6X30mm	
4	X5

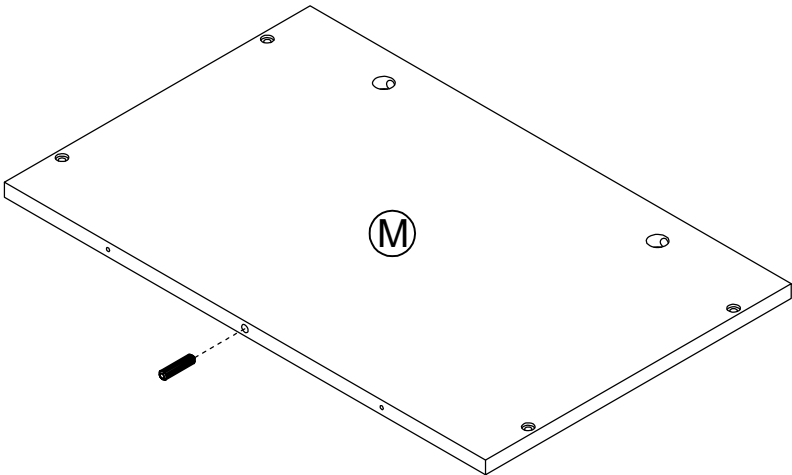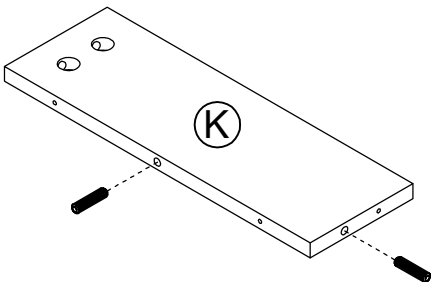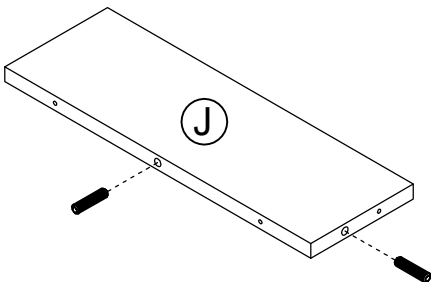





STEP8

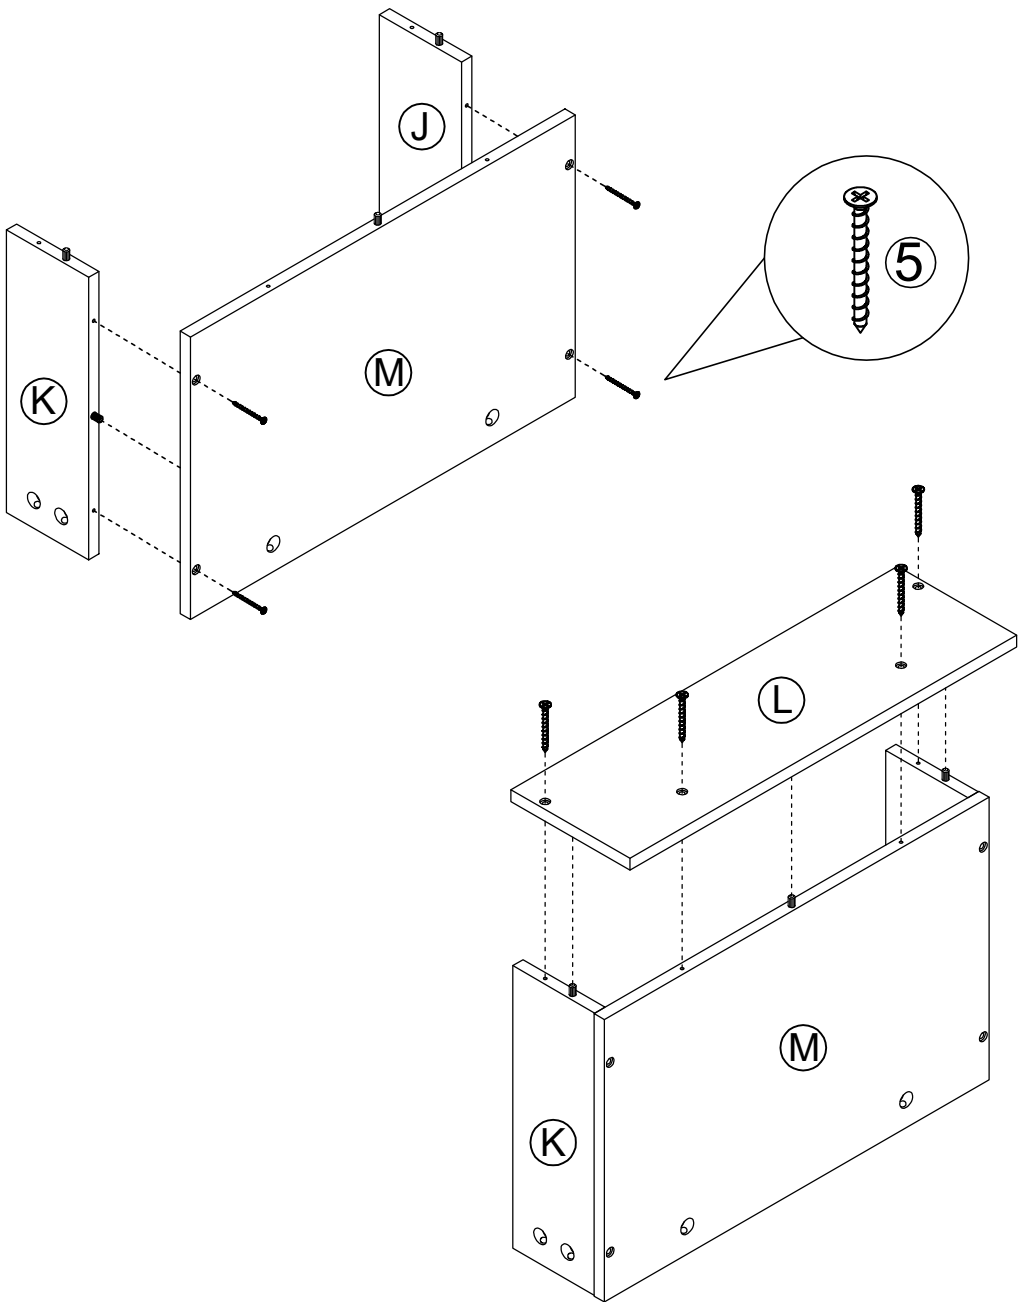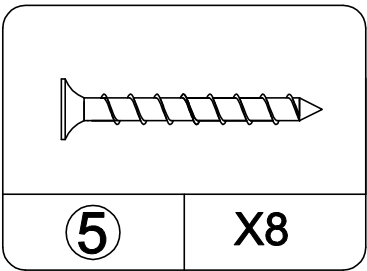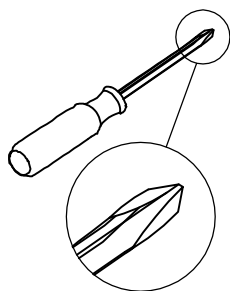

STEP9

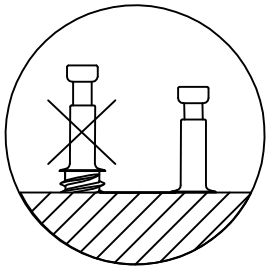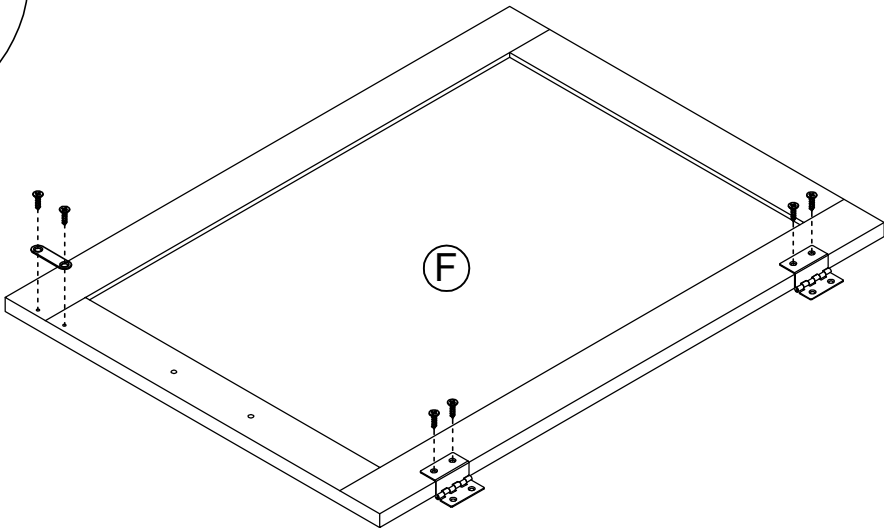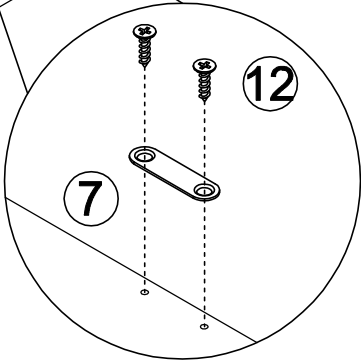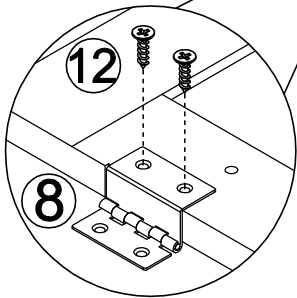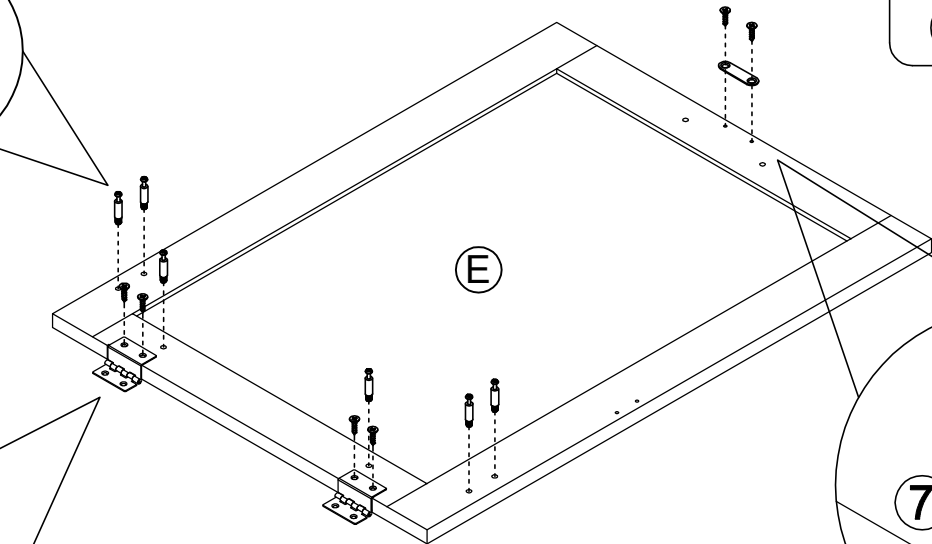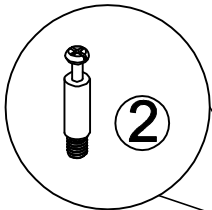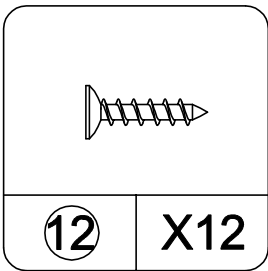
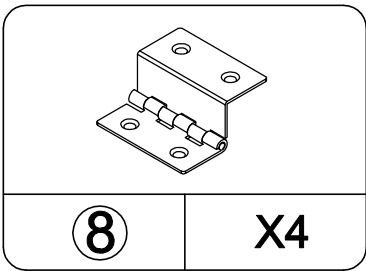
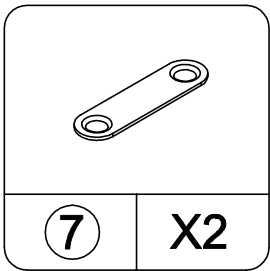
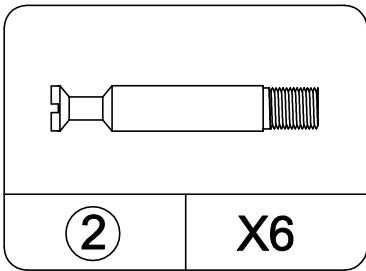
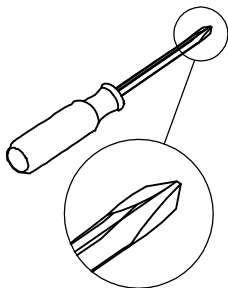


STEP10

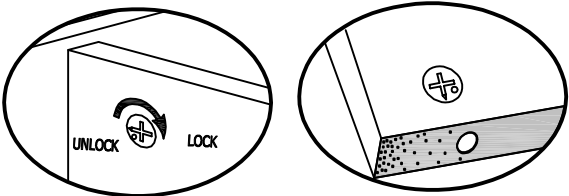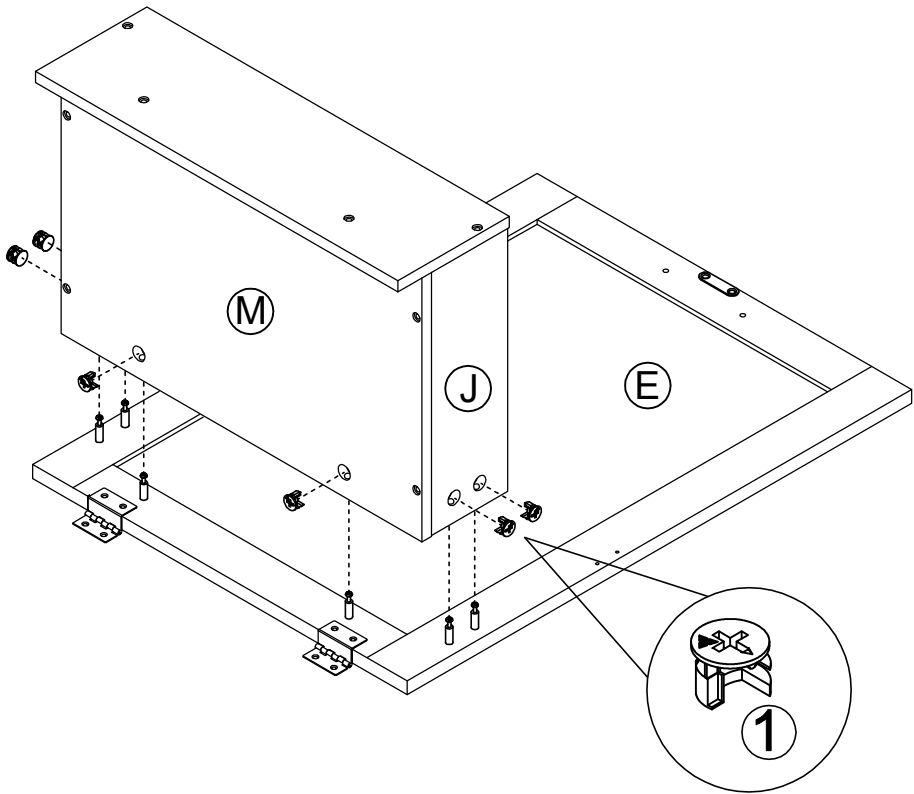
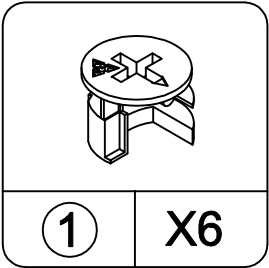
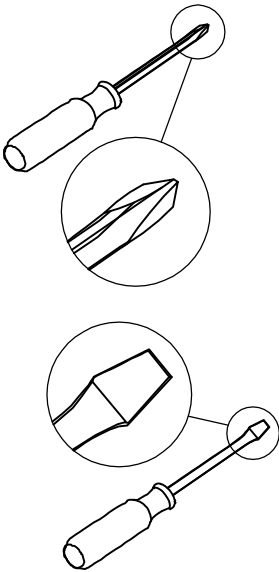


Proper orientation of CAM LOCK





STEP11

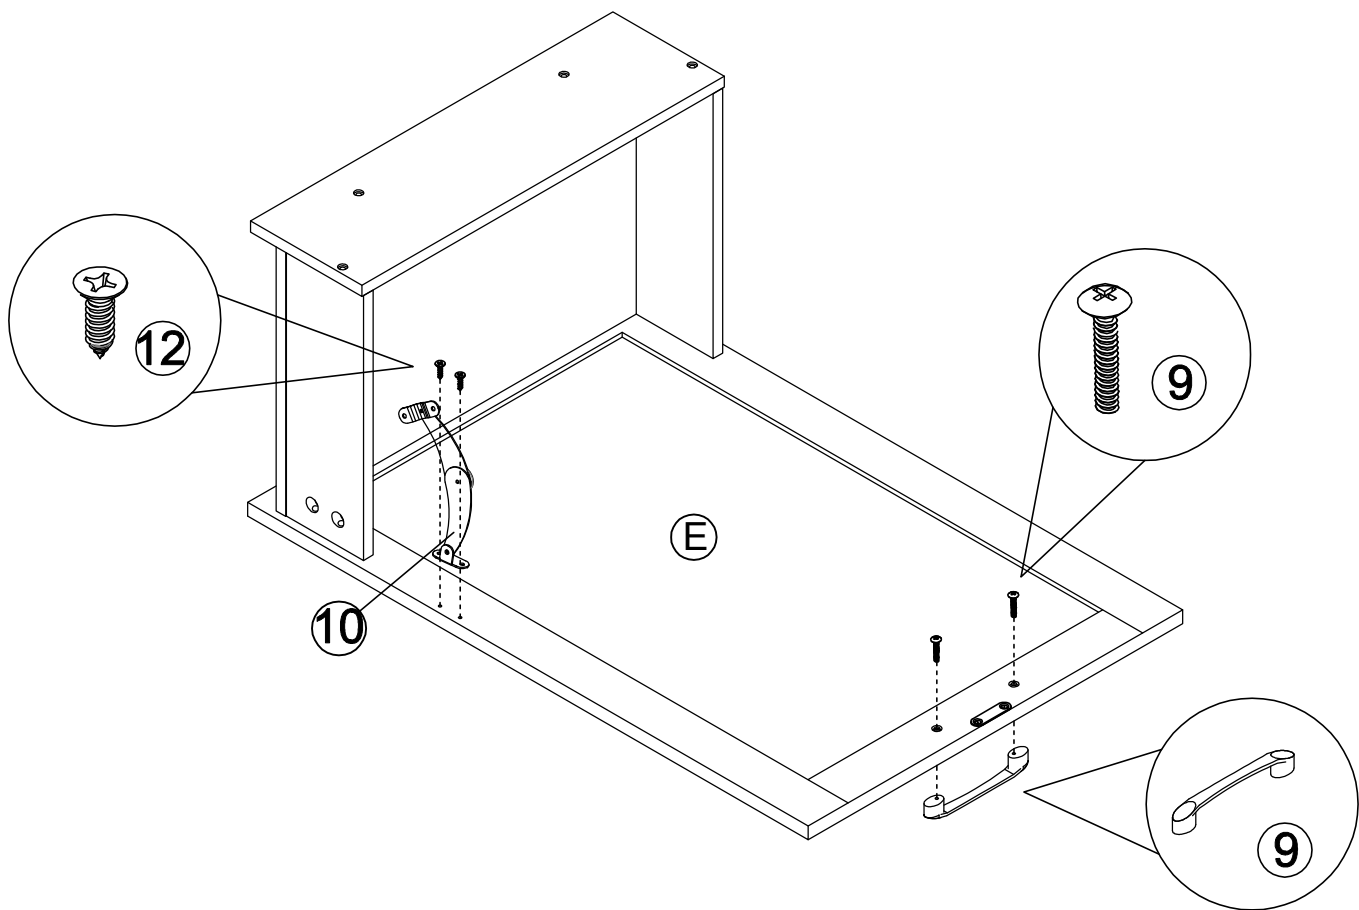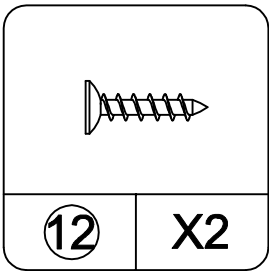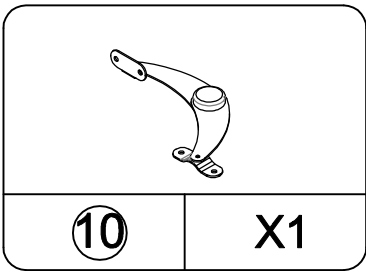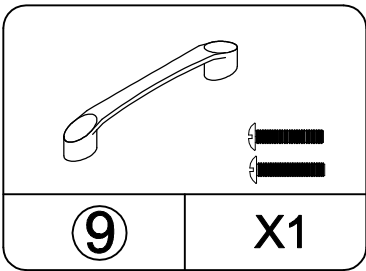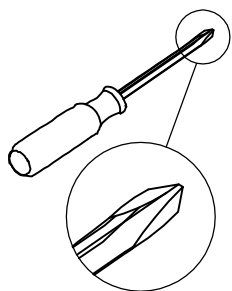




STEP12

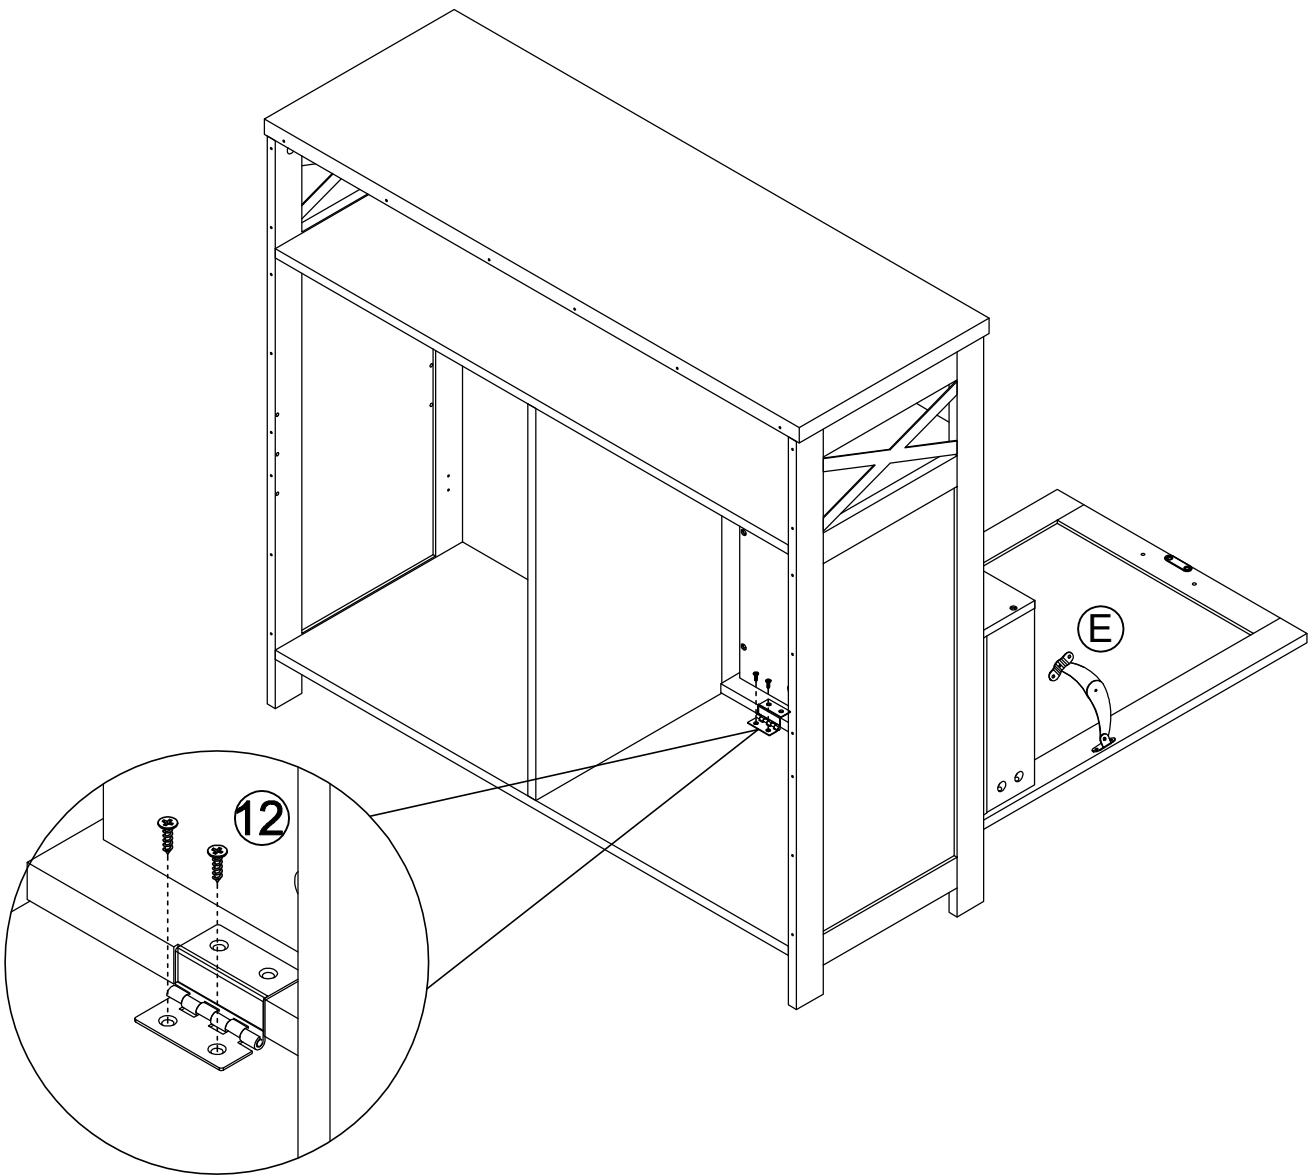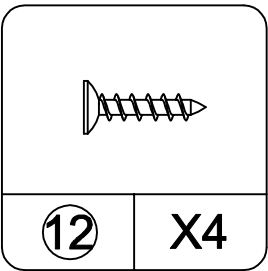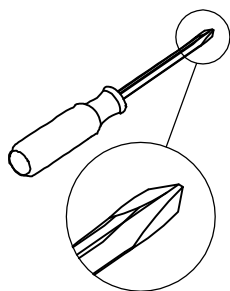


STEP13

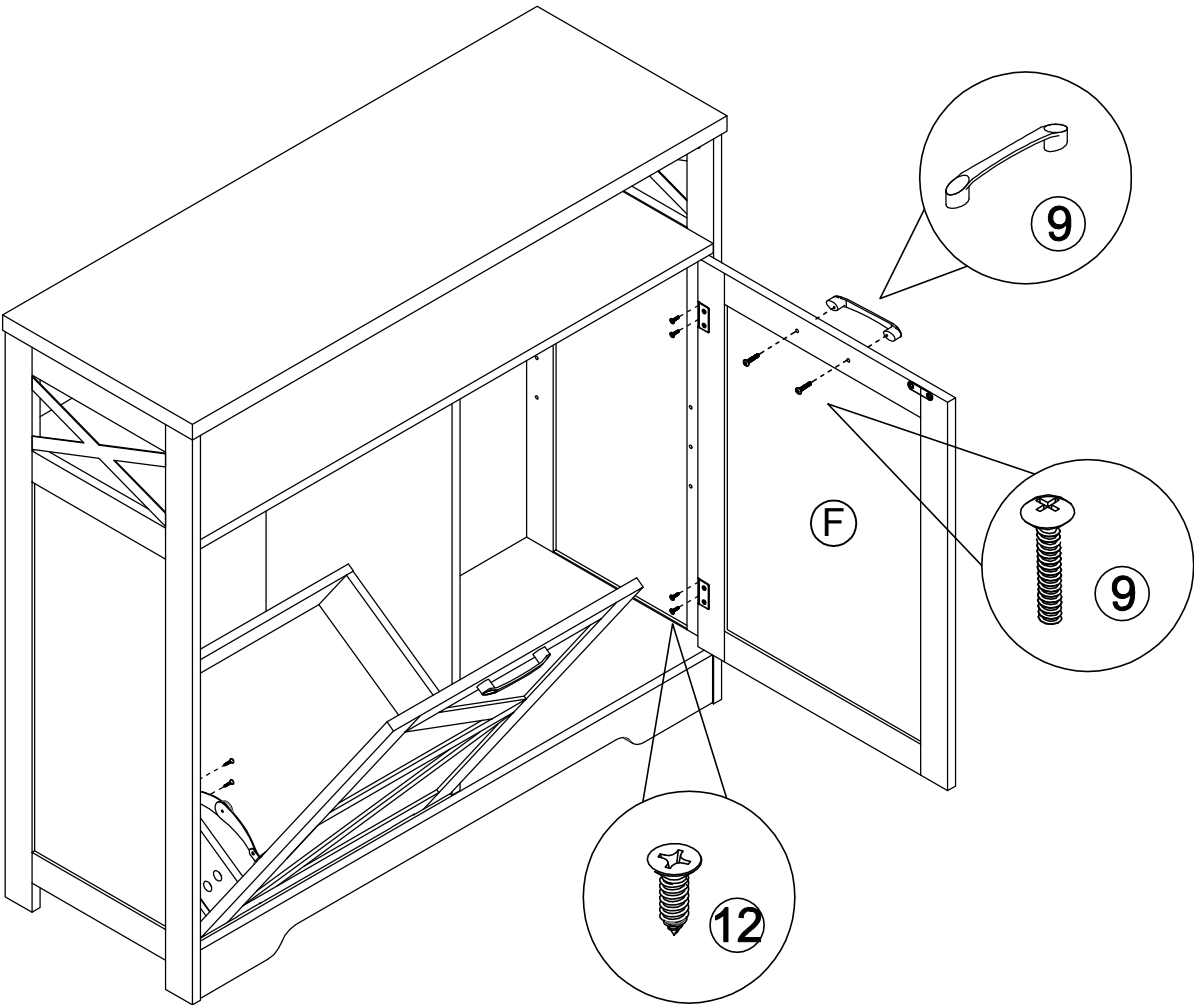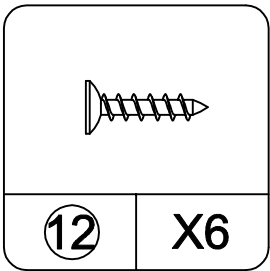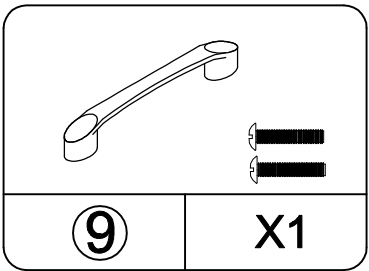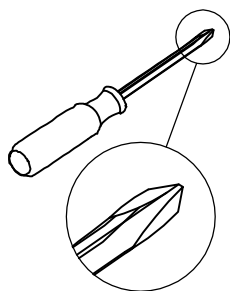


STEP14

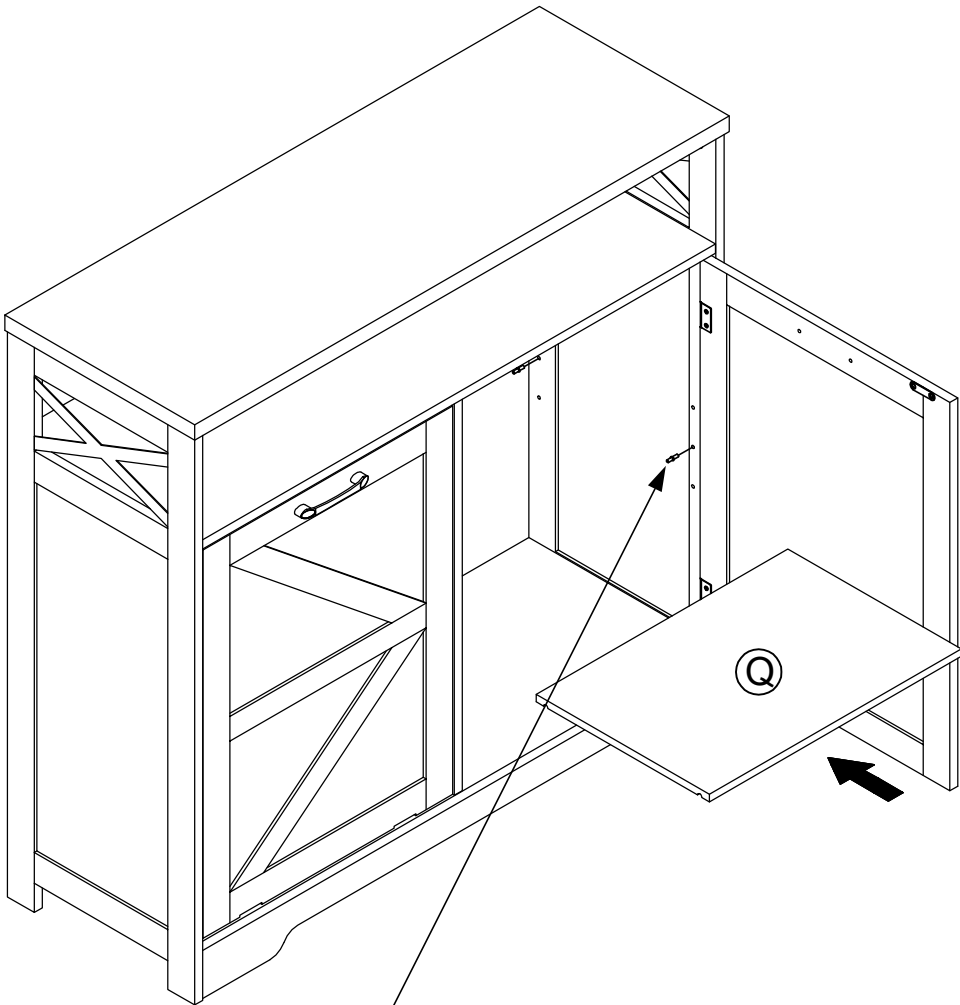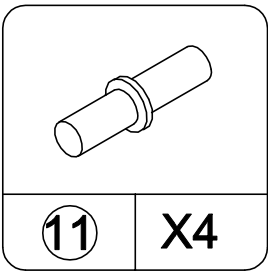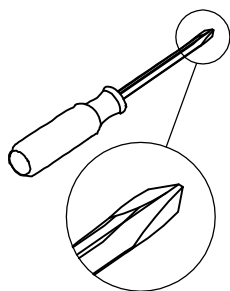



Step 1
Select the desired height
and put it in

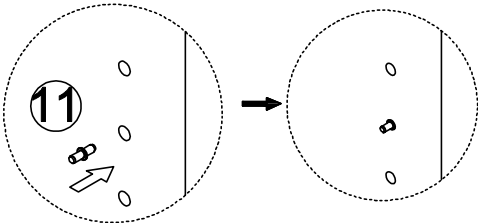


Step 2
Aim the board gaps down

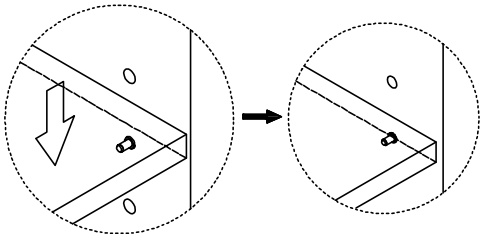

STEP15

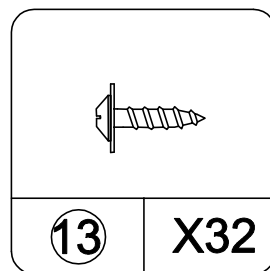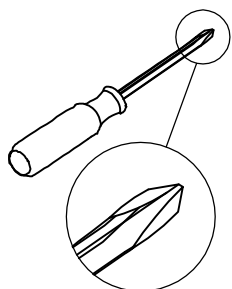


This hole for installation the part ⑮.

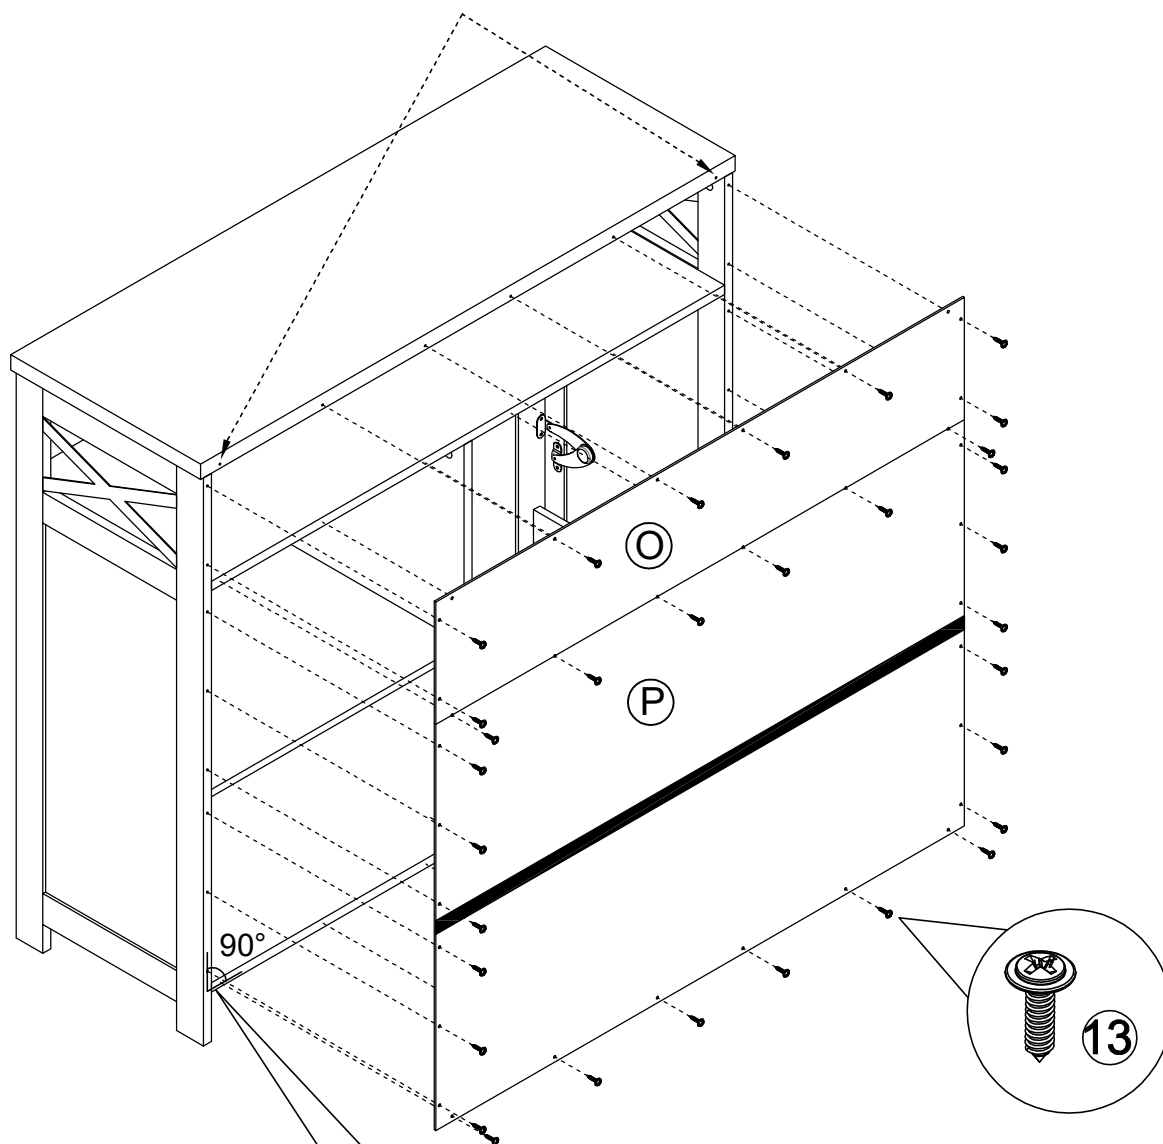


Before attaching the back panel, be sure that the unit is at 90°
Avant d'attacher le panneau arrière, assurez-vous que l'unité est à 90°
Antes de fijar el panel posterior, asegúrese de que la unidad esté a 90°

STEP16

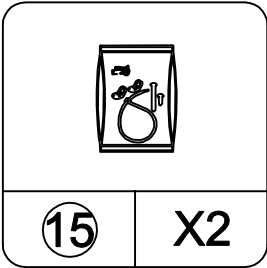

PART LIST	FIGURE	QUANTITY	DESCRIPTION
15.1		1PC	LONG SCREW (Dia. 4mm X 38mm L)
15.2		1PC	SHORT SCREW (Dia. 4mm X 19mm L)
15.3		2PC	METAL "L" BRACKET
15.4		1PC	PLASTIC ANCHOR
15.5		1PC	CABLE

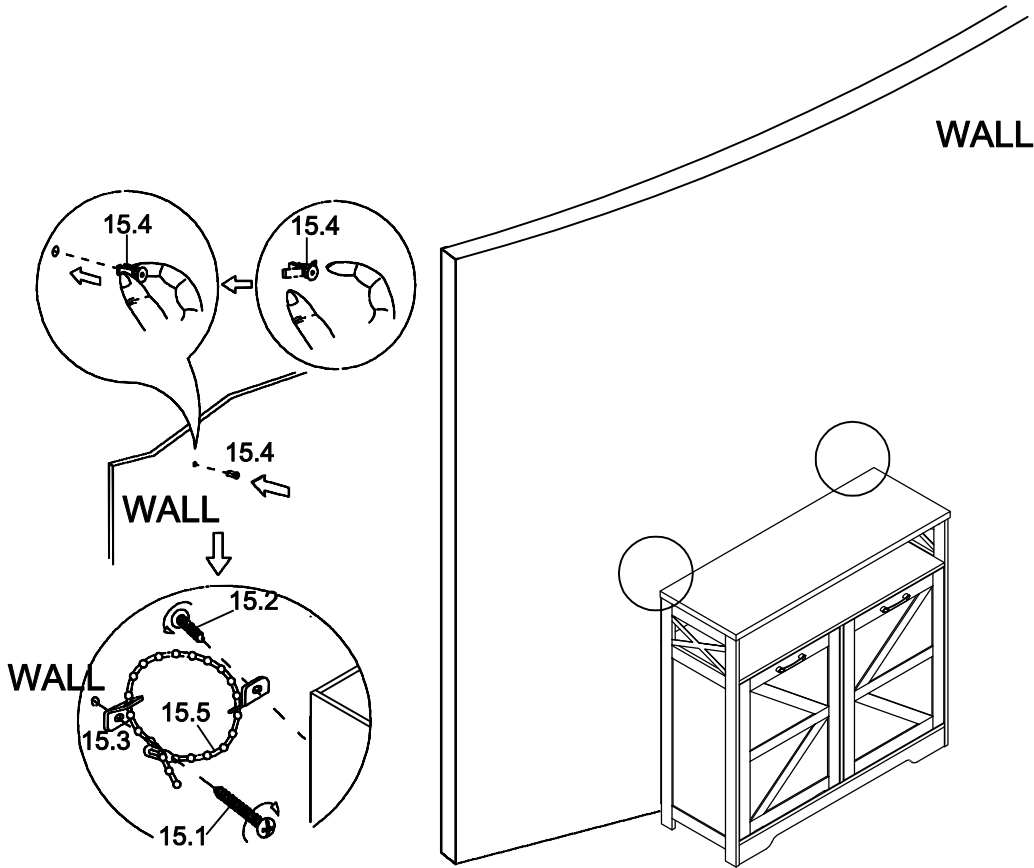

Follow the instructions printed on the plastic bag containing the tipping restraint hardware to attach the tip-over restraints to the unit and the wall.

NOTE: The tipping restraint hardware included is for drywall construction. It will be necessary to drill holes for the wall anchors. Depending upon your wall construction, different anchor hardware may be required. Please contact your local hardware store for assistance.