









# Assembly Instruction


















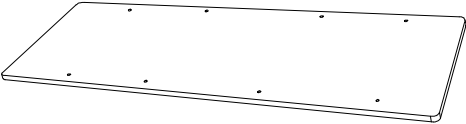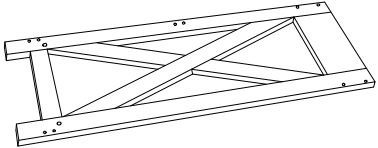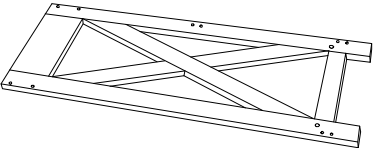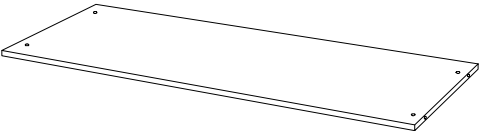



---

Thank you for your purchase.  
Please contact us if you have difficulty with assembly  
or need replacement parts.


## Components

No	Drawings	QTY	DESCRIPTION
①		1PC	TABLE TOP
②		1PC	BACK BOARD
③		1PC	FRONT BOARD
④		1PC	RIGHT SIDE PANEL
⑤		1PC	LEFT SIDE PANEL
⑥		1PC	BOTTOM BOARD
⑦		3PCS	CROSS BAR
⑧		2PCS	DRAWER RALL SUPPORT

# Components


⑨		1PC	DRAWER SIDE BOARD	
⑩		1PC	DRAWER SIDE BOARD	
⑪		1PC	DRAWER BACK BOARD	
⑫		1PC	DRAWER FRONT BOARD	
⑬		1PC	DRAWER BOTTOM BOARD	
①	②	③	④	⑤
				
× 1PC	× 1PC	4 × 14 × 1PC	5 × 50 × 18PCS	× 18PCS
⑥	⑦	⑧	⑨	⑩
				
× 10PCS	× 10PCS	× 16PCS	3 × 25 × 4PCS	× 1PC
⑪	⑫	⑬	⑭	
				
3.5 × 40 × 1PC	× 1PC	3 × 12 × 1PC	× 2PCS	

## STEP 1

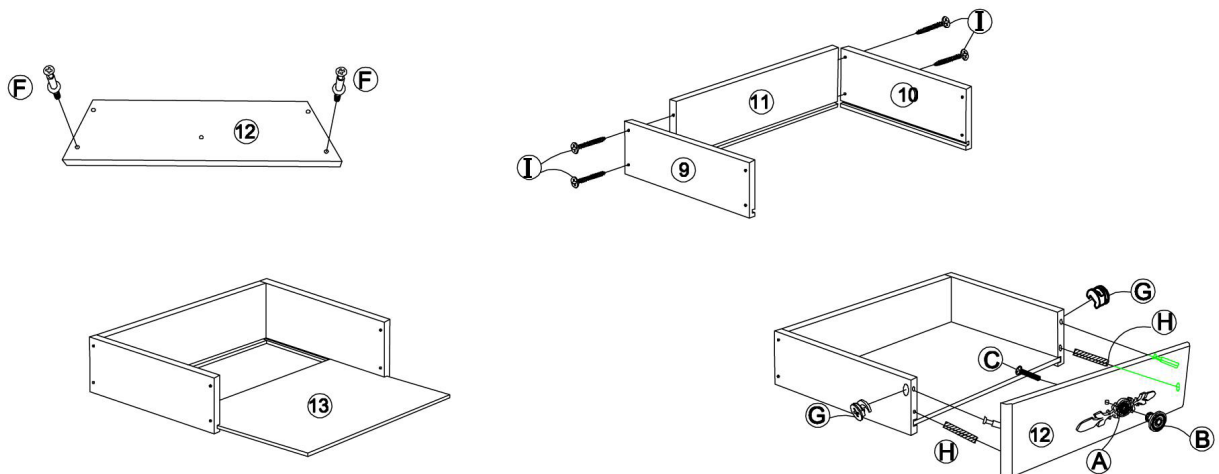


1. Attach two drawer side boards (9 ) &(10)with the drawer back board (11) using screws ( I ).
2. Insert the drawer bottom board (13) into the bottom slots of two drawer side boards (9) &(10) .
3. Attach the drawer front board (12) to drawer side board with screw (G).
4. Use the screw (C) inside the drawer front board (12) to attach the knob (B) and part (A).

## STEP 2

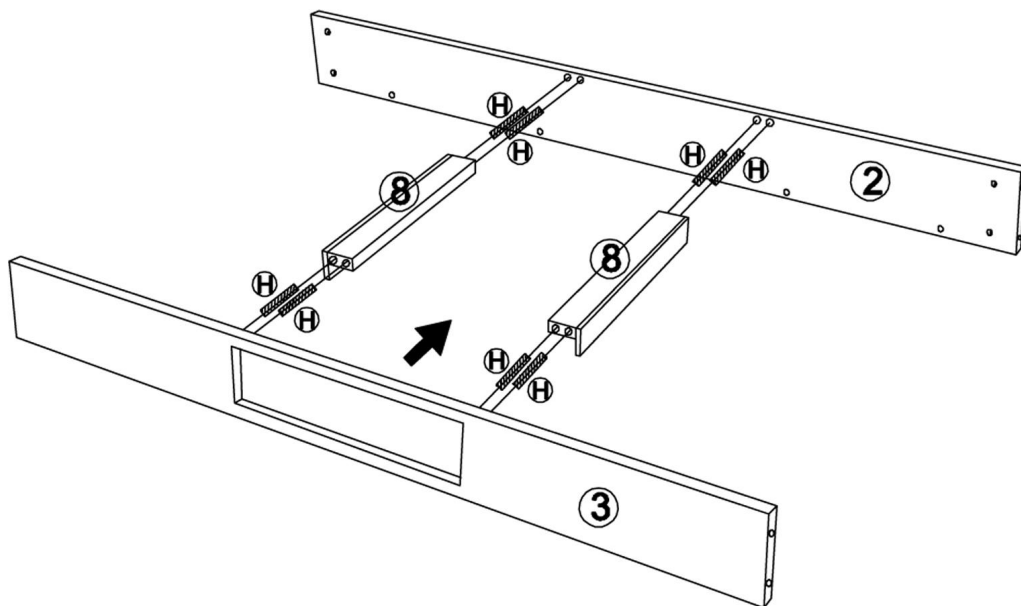


1. Insert wood dowel (H) to connect front board (3) and back board (2) with drawer rail support (8).

## STEP 3

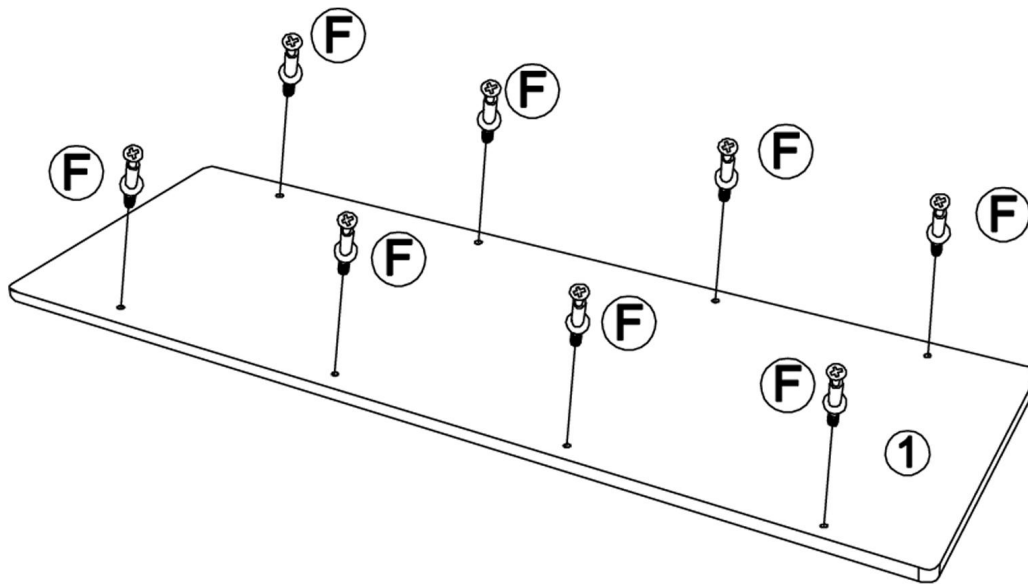


1. Insert cam bolt (F) on table top (1).

## STEP 4

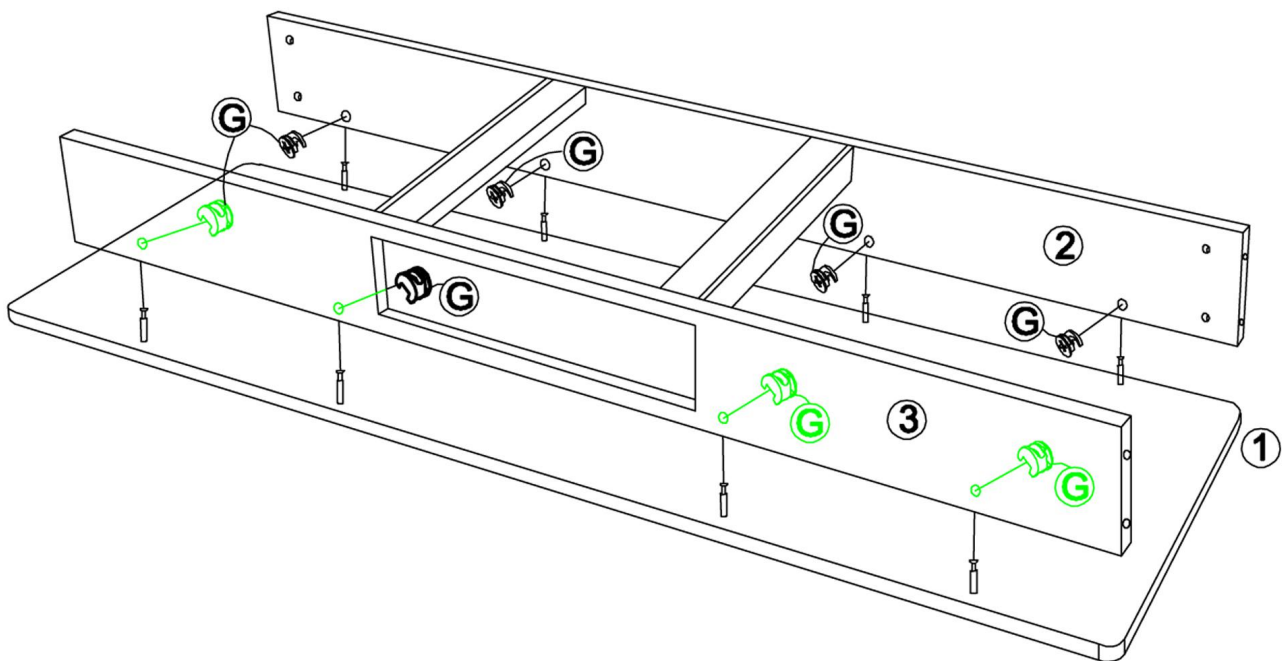


1. Connect table top with frame by using cam bolt (F) and cam lock (G).

## STEP 5

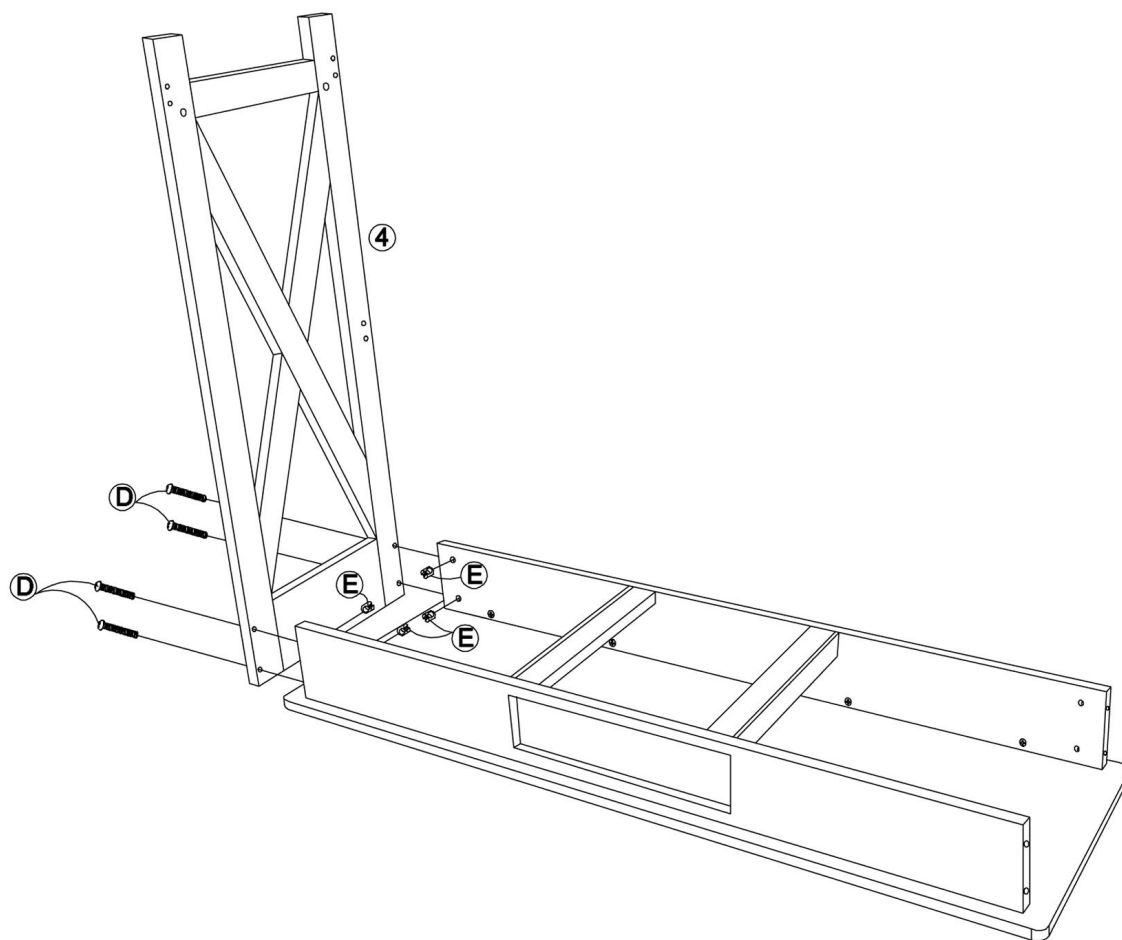


1. Connect the right side panel (4) with the frame by using screw (D) and nut (E).

## STEP 6

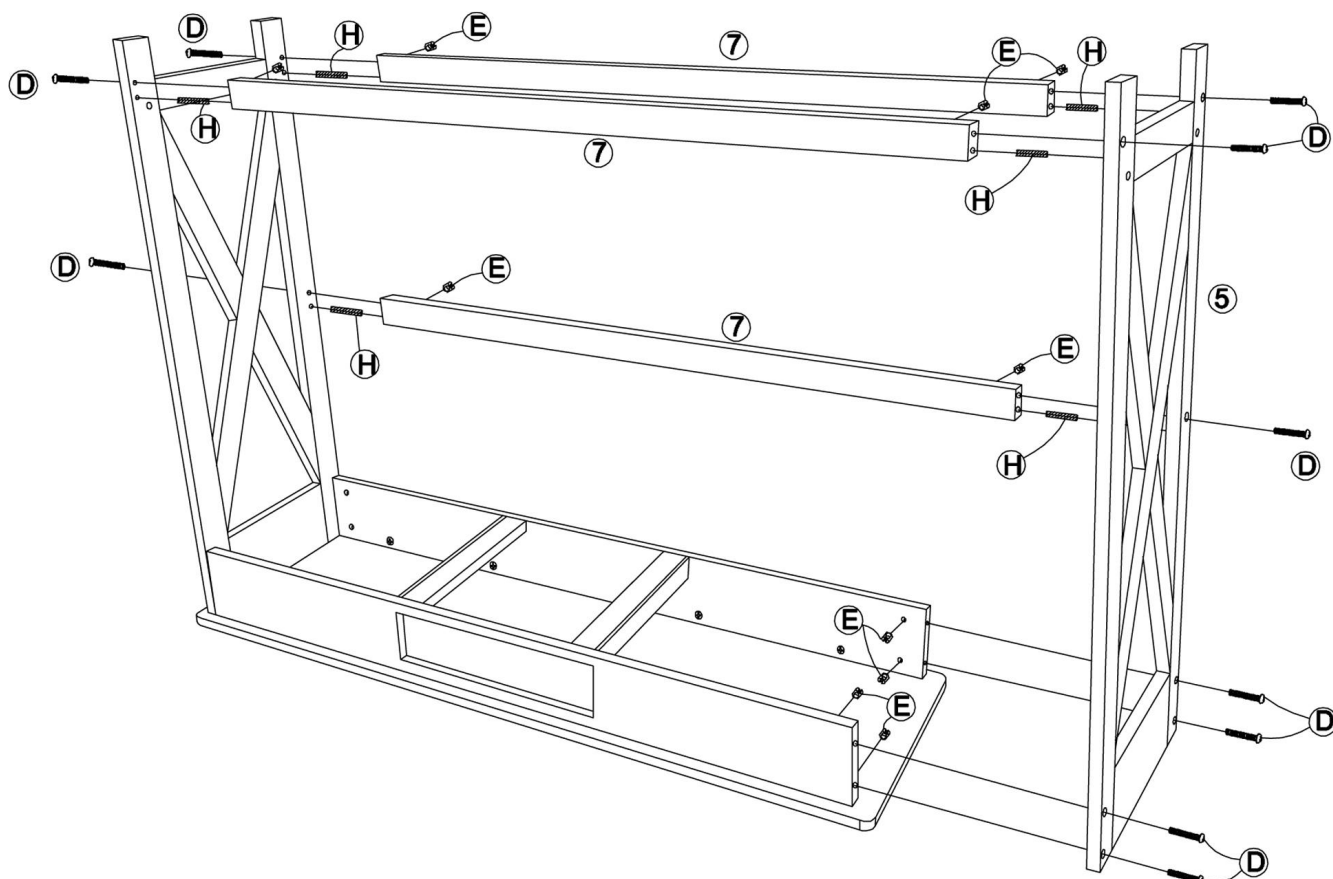


1. Attach the left side panel (5) with screw (D) and nut (E).
2. Connect cross bar (7) with two side panel with screw (D), nut (E) and wood dowel (H).

## STEP 7

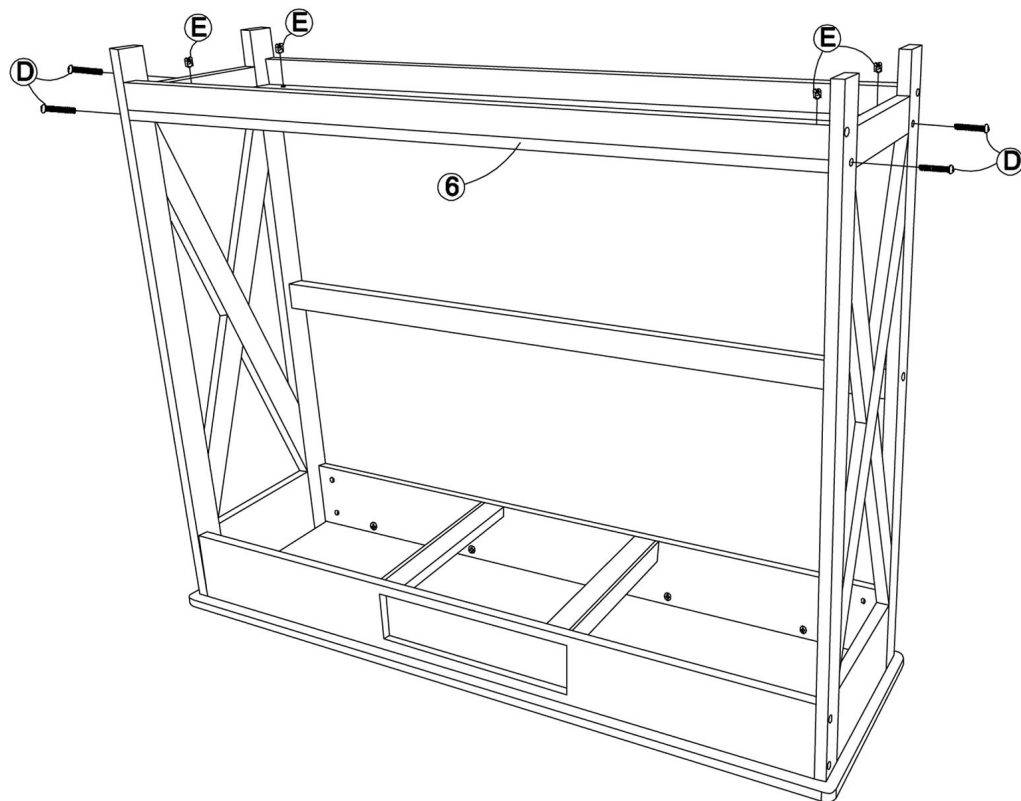

1. Attach the bottom board (6) to side panels with screw (D) and nut (E).

## STEP 8

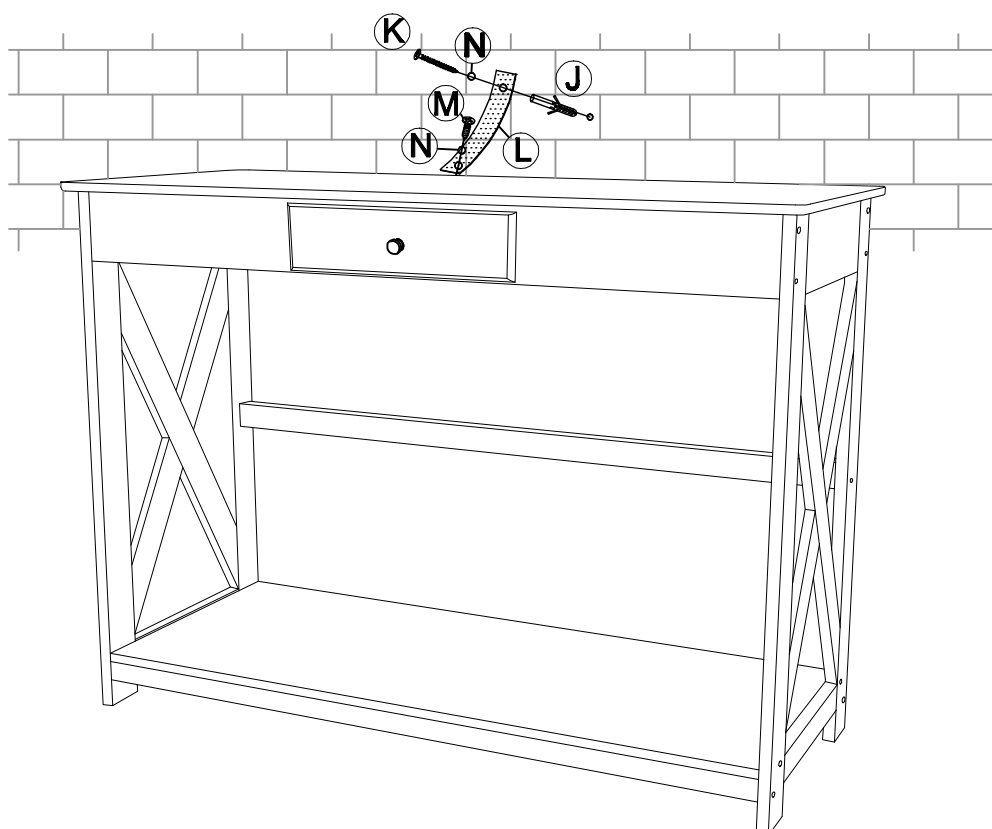

1. Slide the drawer into the frame, then you've finished assembling your console table!