



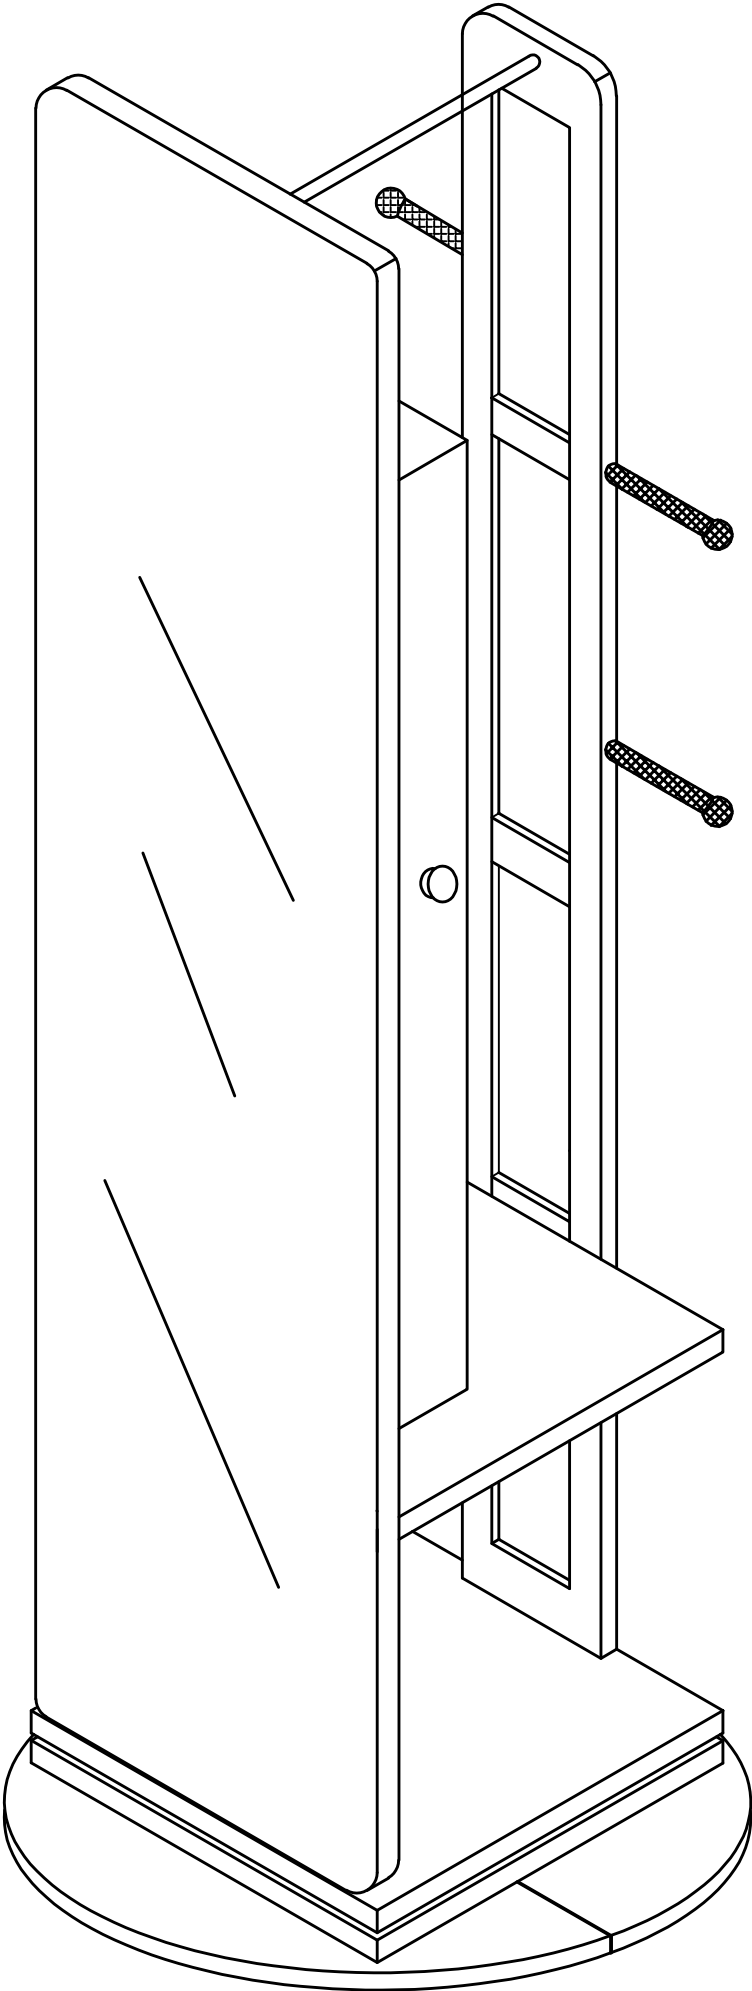







MIRROR JEWELLERY CABINET

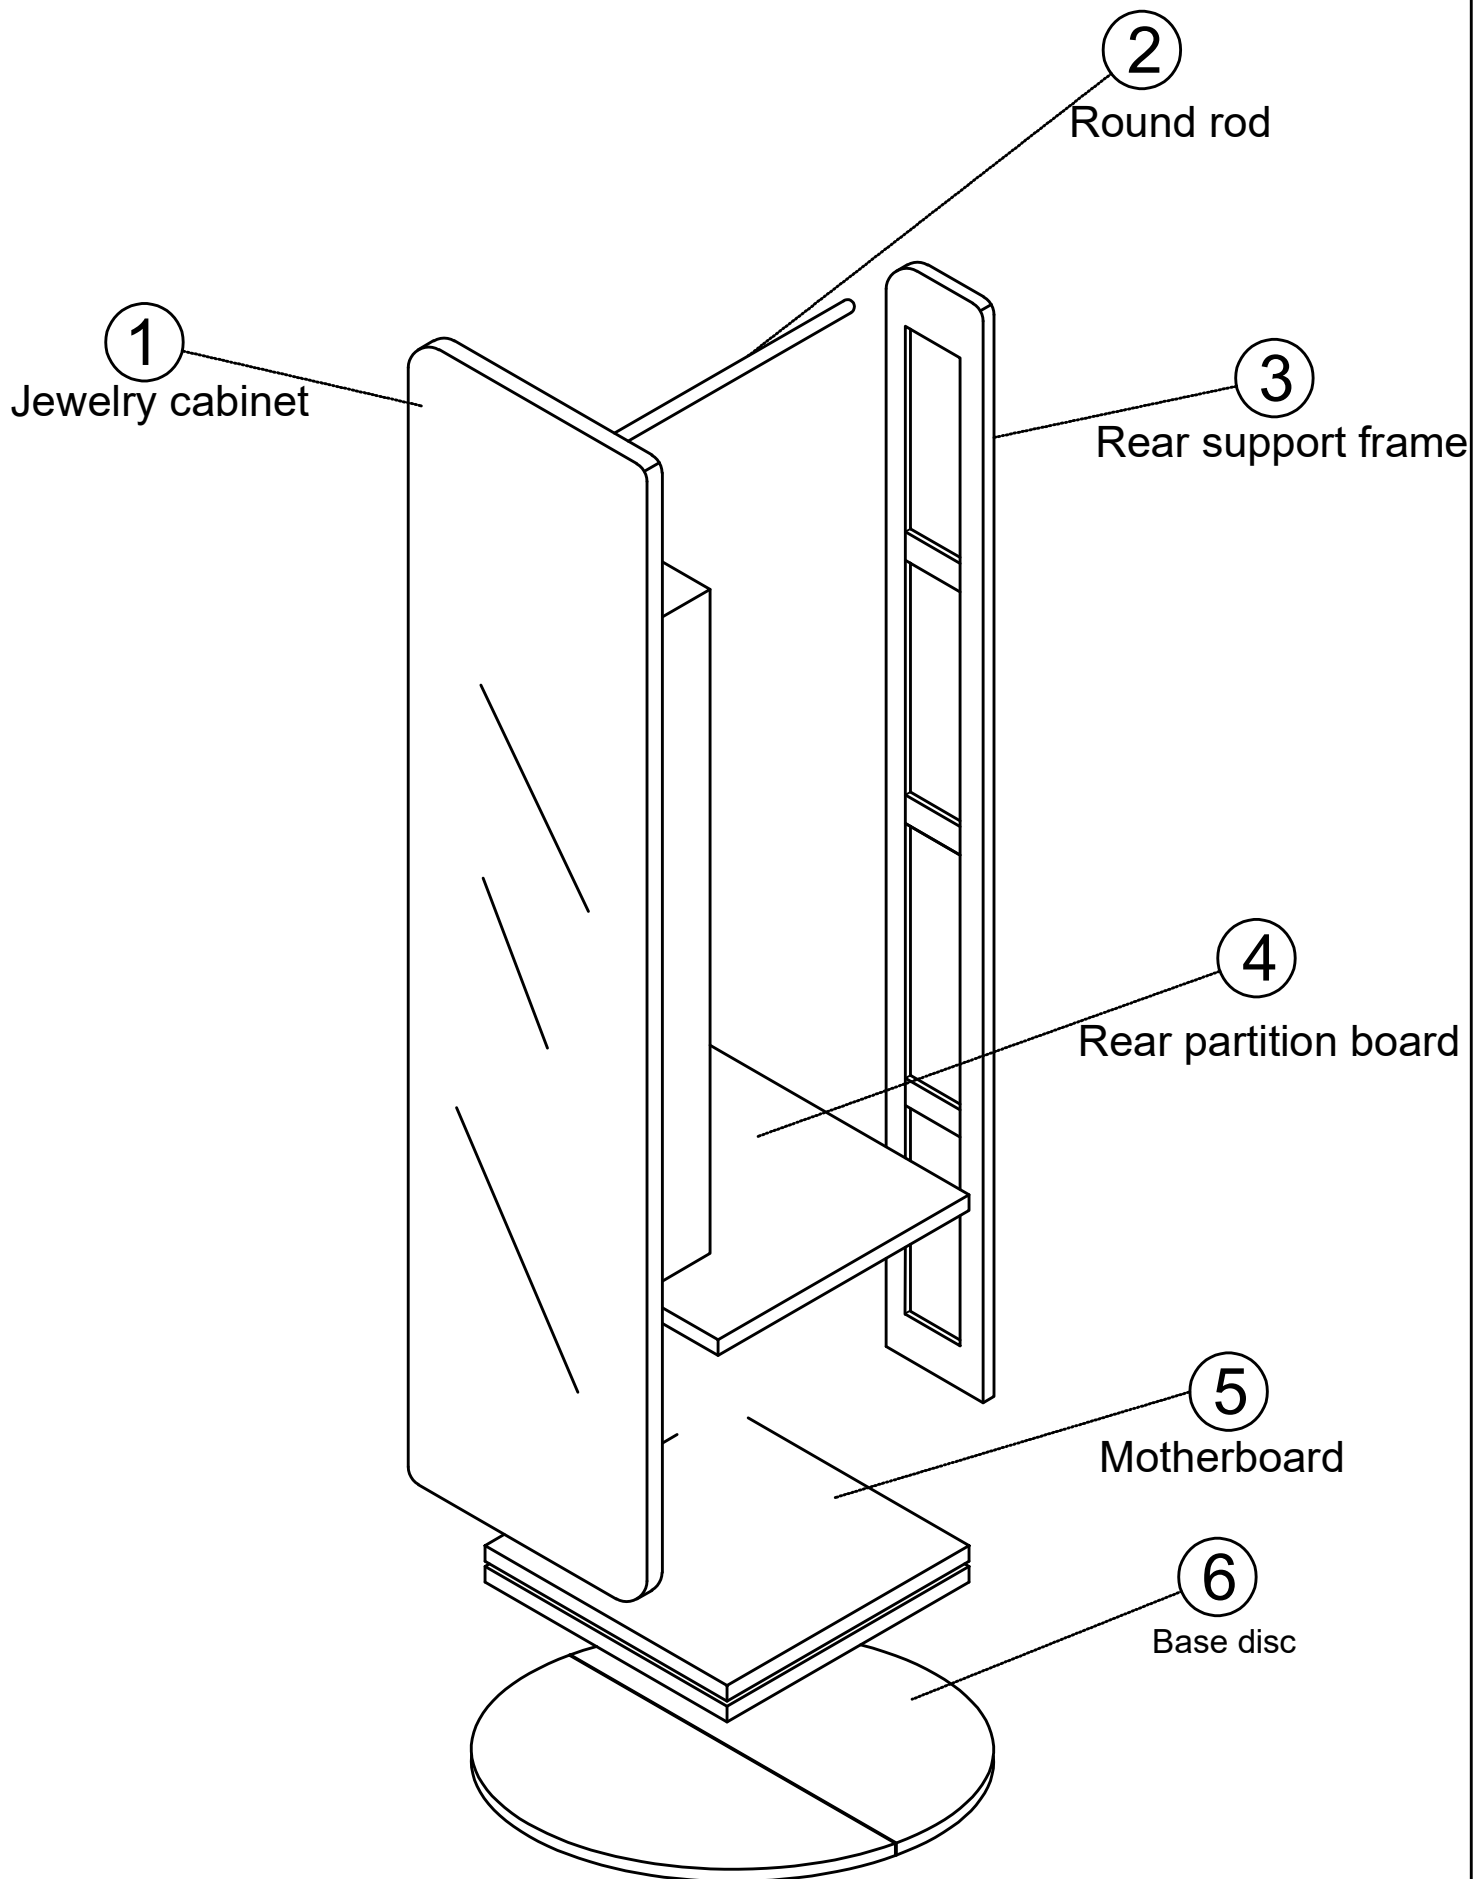

Hardware list








Accessories list

(A)		Two in one screw (10*38mm)	3 Pcs
(B)		Three in one nut (10x14mm)	3 Pcs
(C)		Cross nut (6x40mm)	8 Pcs
(D)		Cross machine wire (4x16mm)	1 Pcs
(E)		Cross nut (6x20mm)	4 Pcs
(F)		Screwdriver	1 Pcs
(G)		Hex Wrench (6mm)	1 Pcs
(H)		Acrylic round stick	4 Pcs

Press the screw rod by hand

Lock clockwise with screwdriver

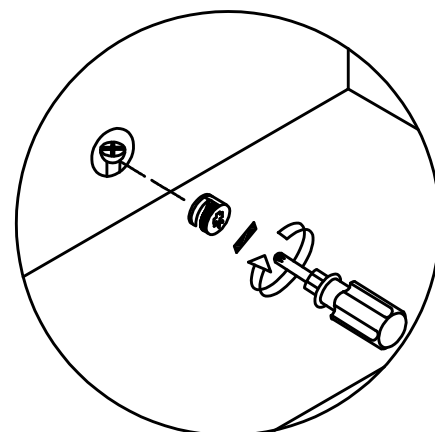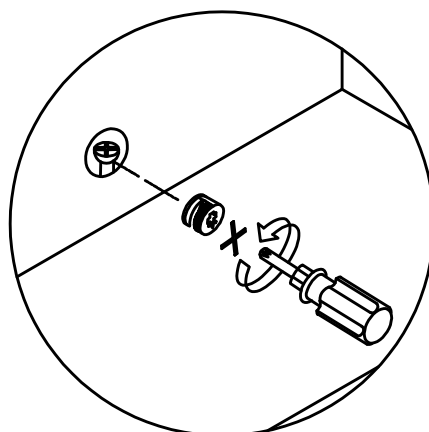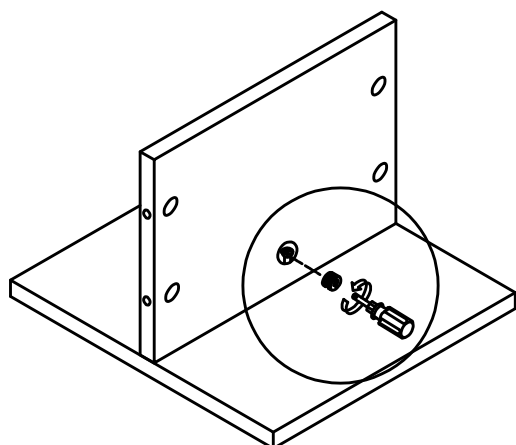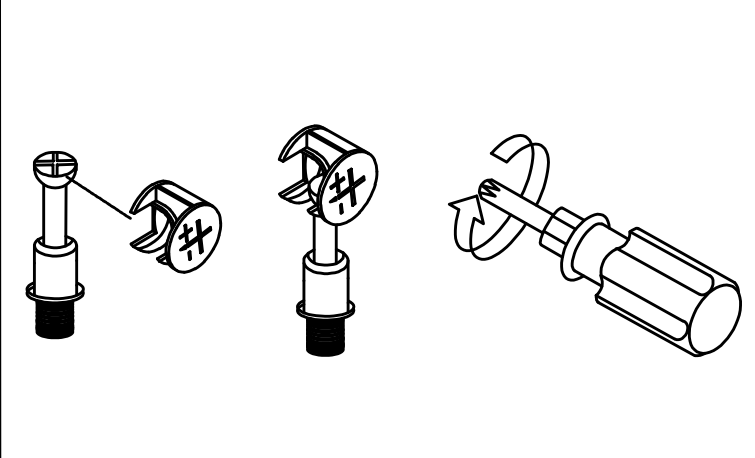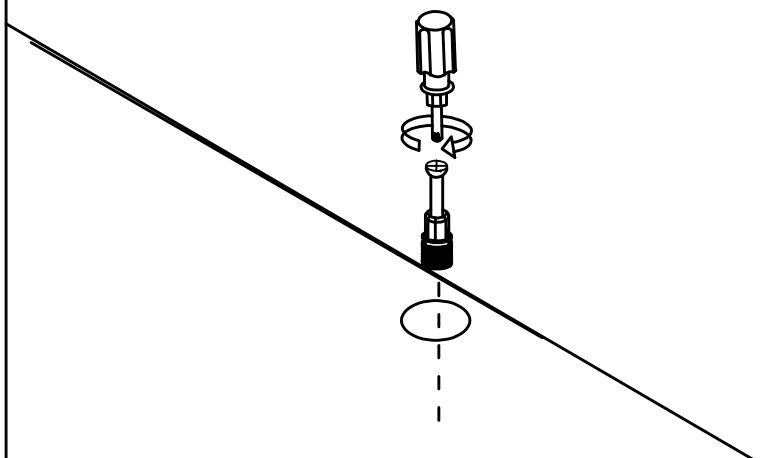


Use a screwdriver to lock in the direction of the "+" sign Disassemble along the direction of "-" sign

Step 1

A

(10*38mm) X 2

Extra one is spare

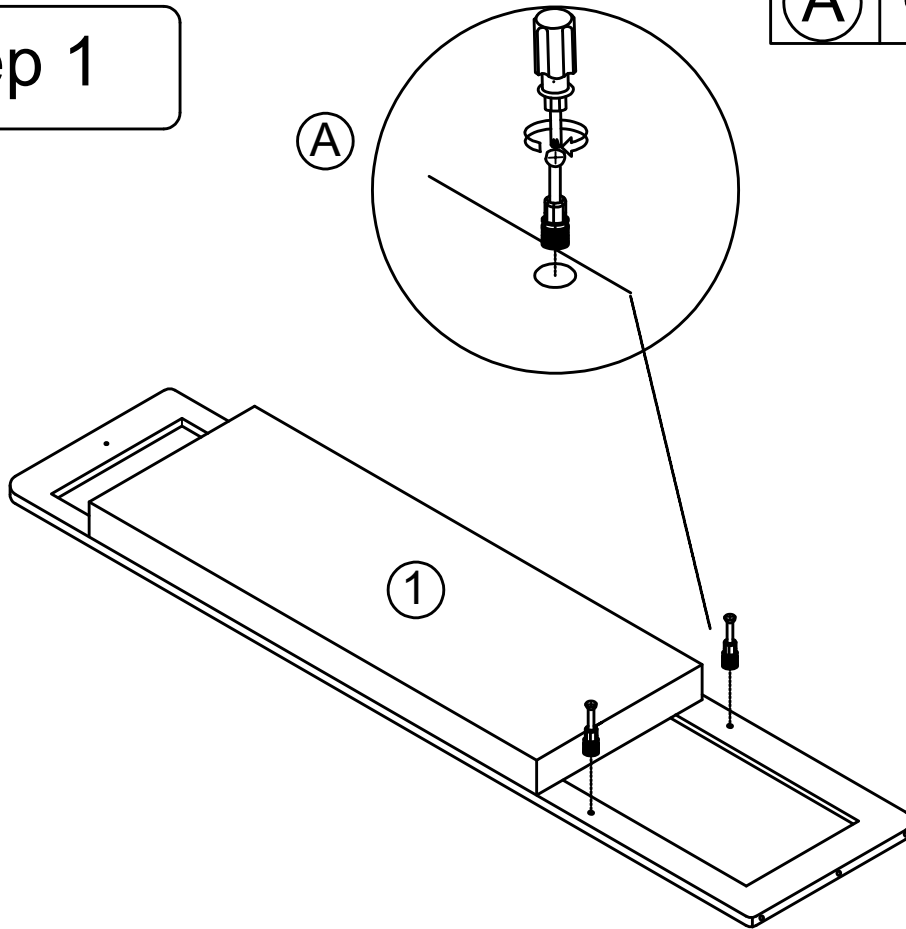


Step 2


B


(10*14mm) X 2

Extra one is spare

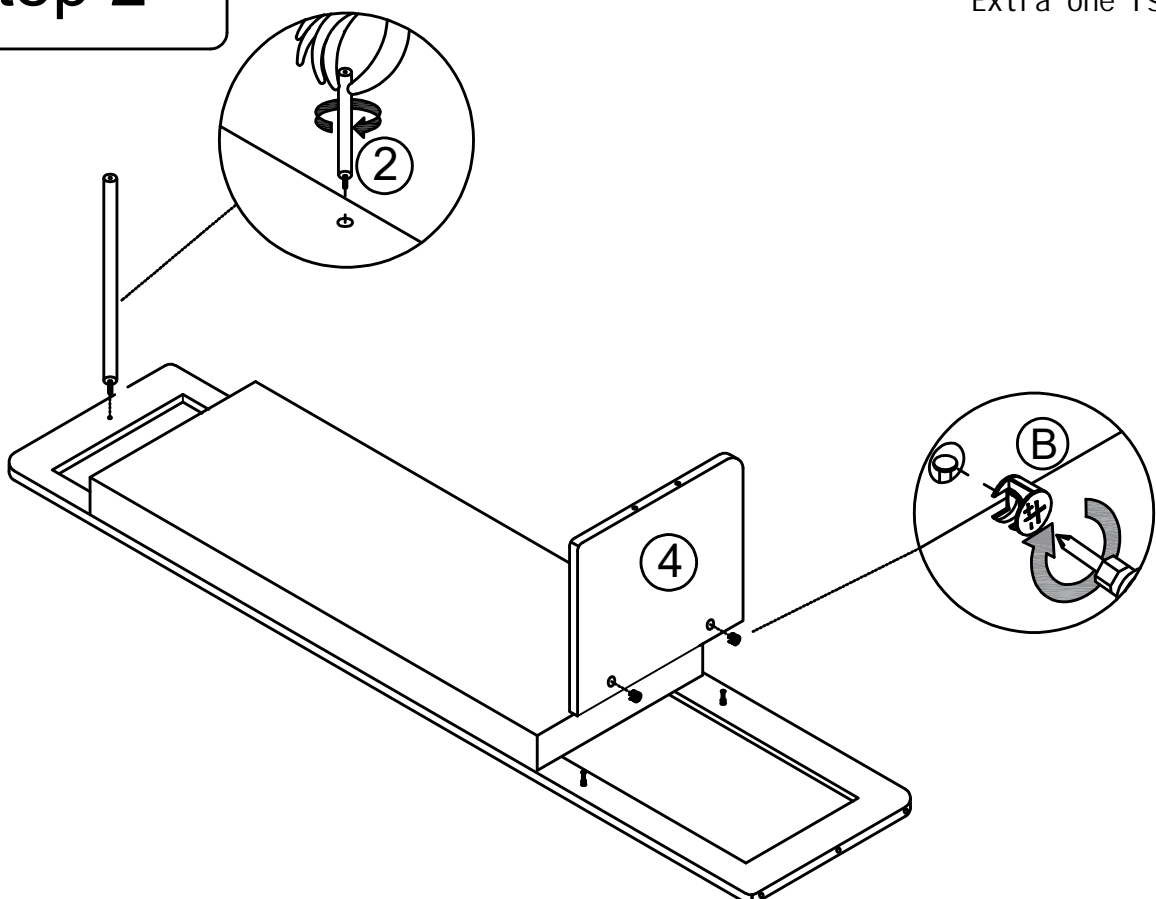


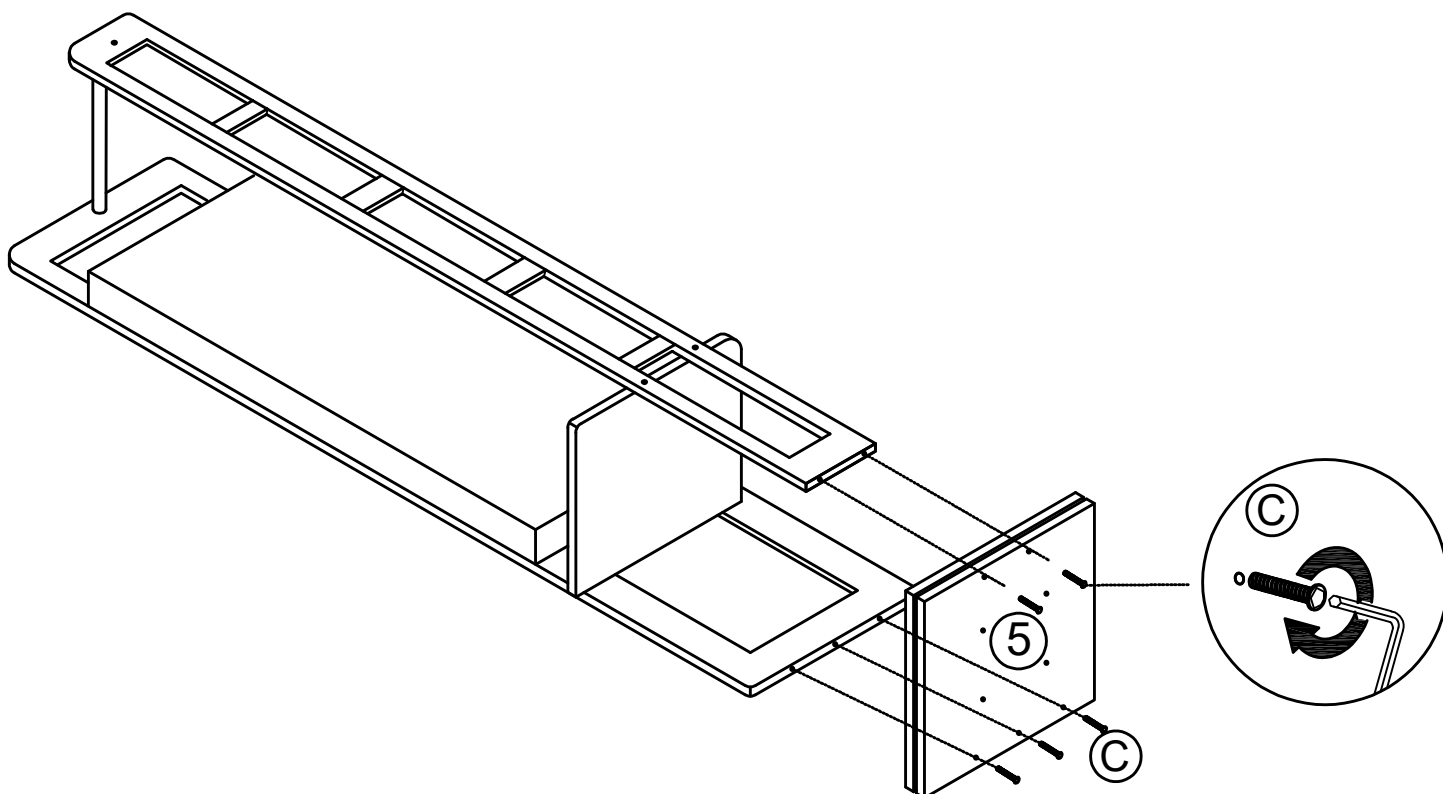
Step 3

(C)  (6*40mm) x 3

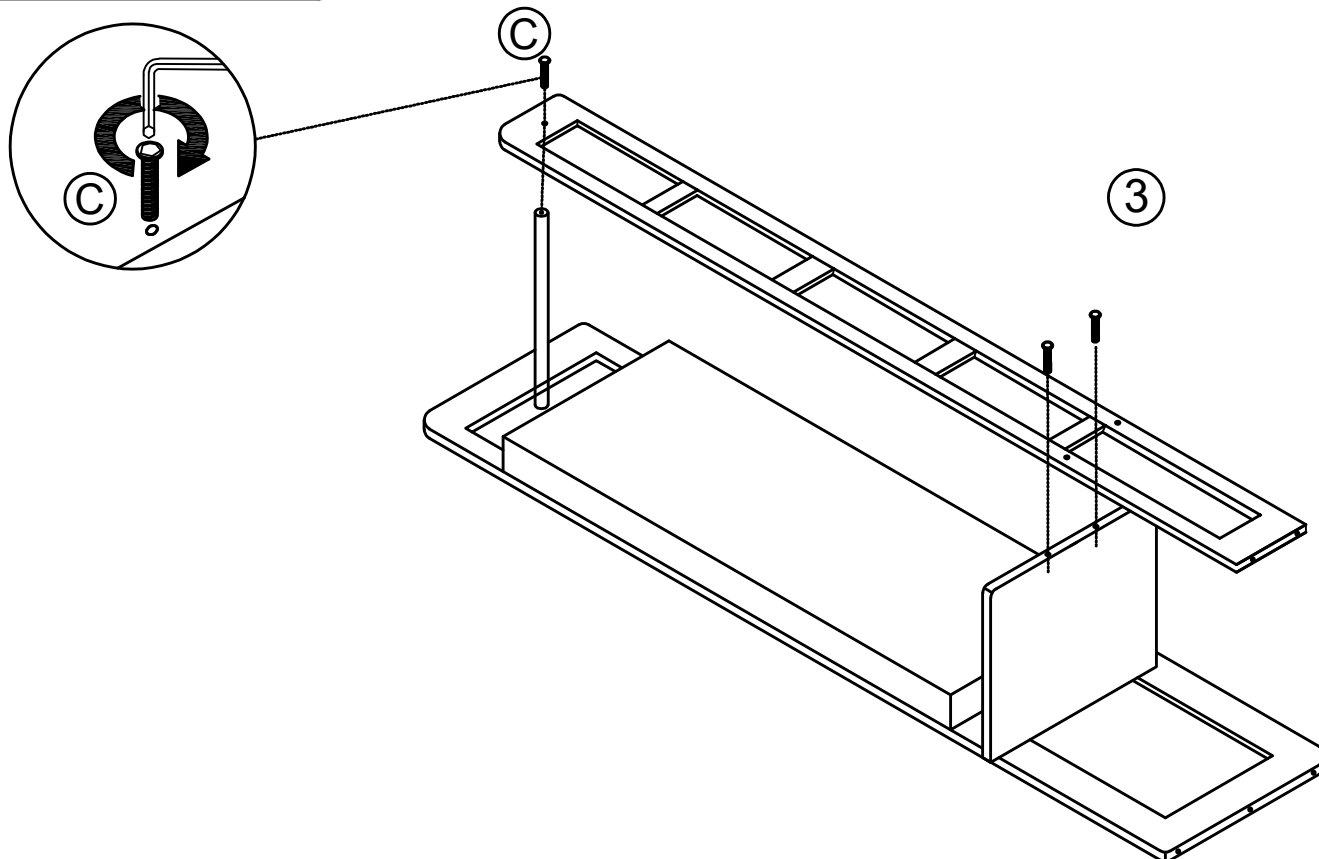

Step 4

(C)  (6*40mm) x 5




Step 5

(E)



(6*20mm) x 4

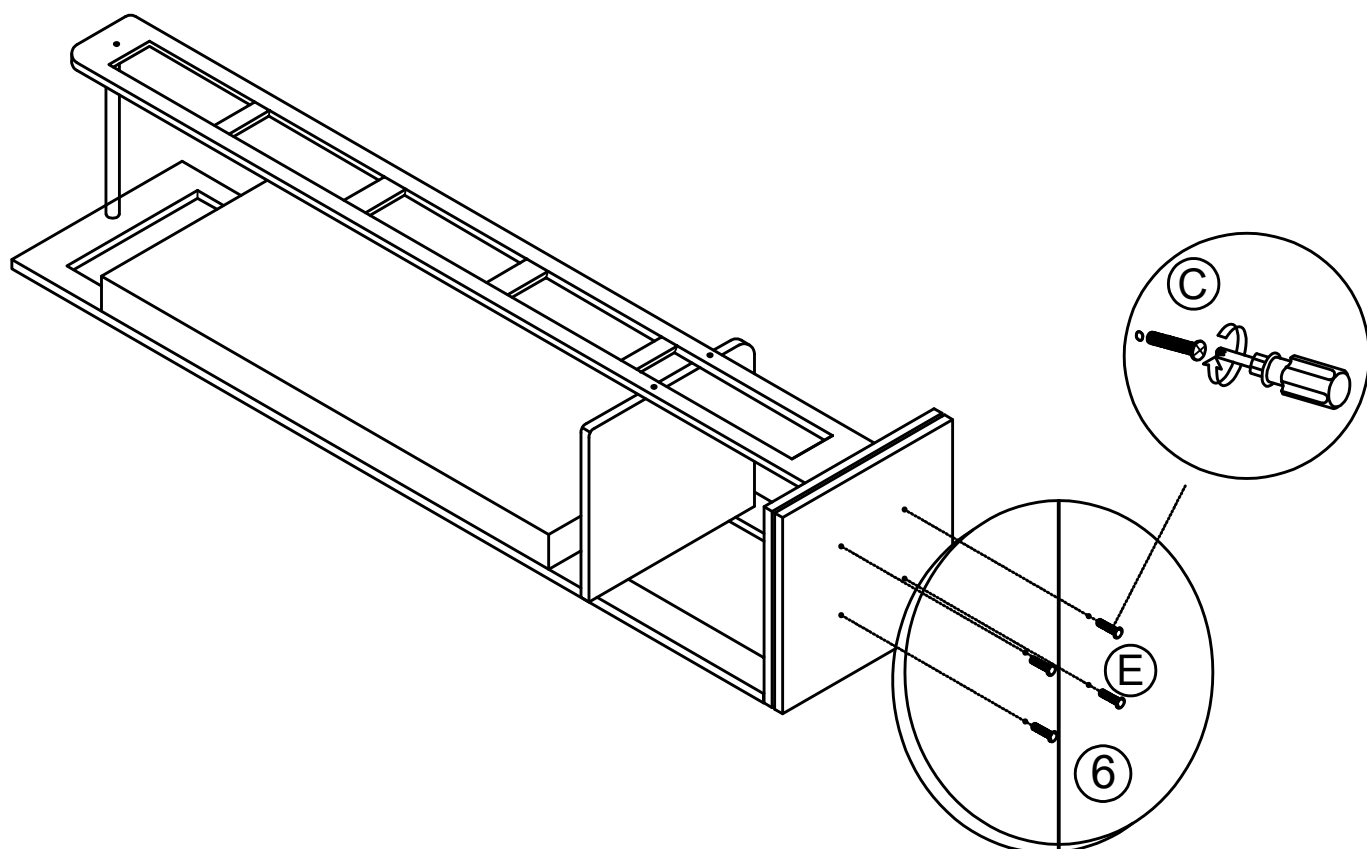


Step 6

(H)



x 4

(D)



x 1

