
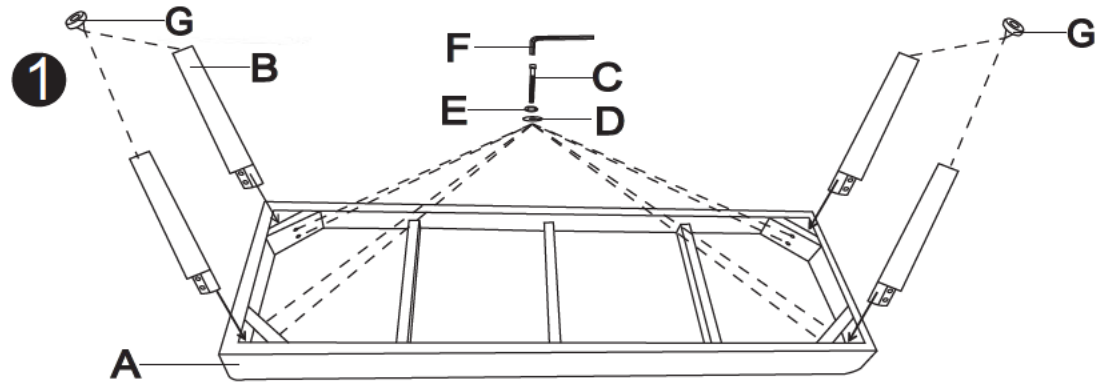



ASSEMBLY INSTRUCTIONS

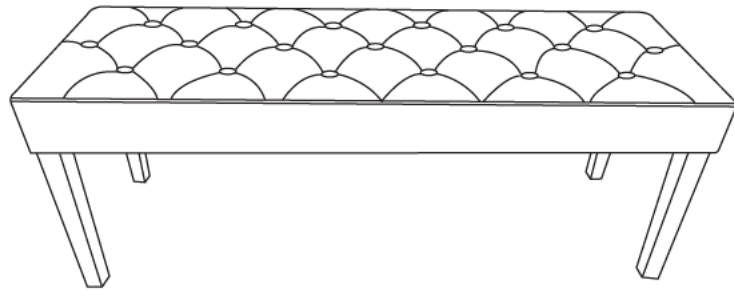

1

Attach item code A (Short Bolts), Making sure to use both washers on each bolt, add the small washer to the bolt firstly then the large washer. Tighten the bolts, initially finger tight.

2

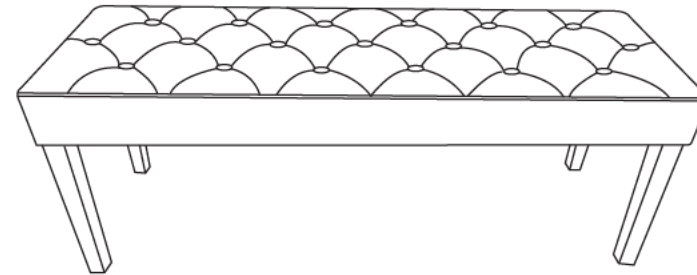

Adjust the balance of the chair and tighten each bolt firmly using the Allen key provided to 100%.

A 	Bx4 	Cx8  M 8x70	Dx8 
Ex8 	F 	Gx4 	



If any doubt please seek professional guidance and speak to your retailer.
 "Please think of our Planet when discarding all packaging materials "

IMPORTANT ASSEMBLY NOTE FOR METAL LEGS

Congratulations on the Purchase of your New handmade Luxury Chair. Please kindly Note all our chairs are individual and addressed by hand. So please Note when assembling the legs that these are handcrafted and as such sometimes require a little patience and understanding when screwing in the bolts.

We assure you they are fine as each chair is indpendantly quality checked. Should you encounter any difficulties please seek professional guidance,

We hope you enjoy your product

Thank you.