


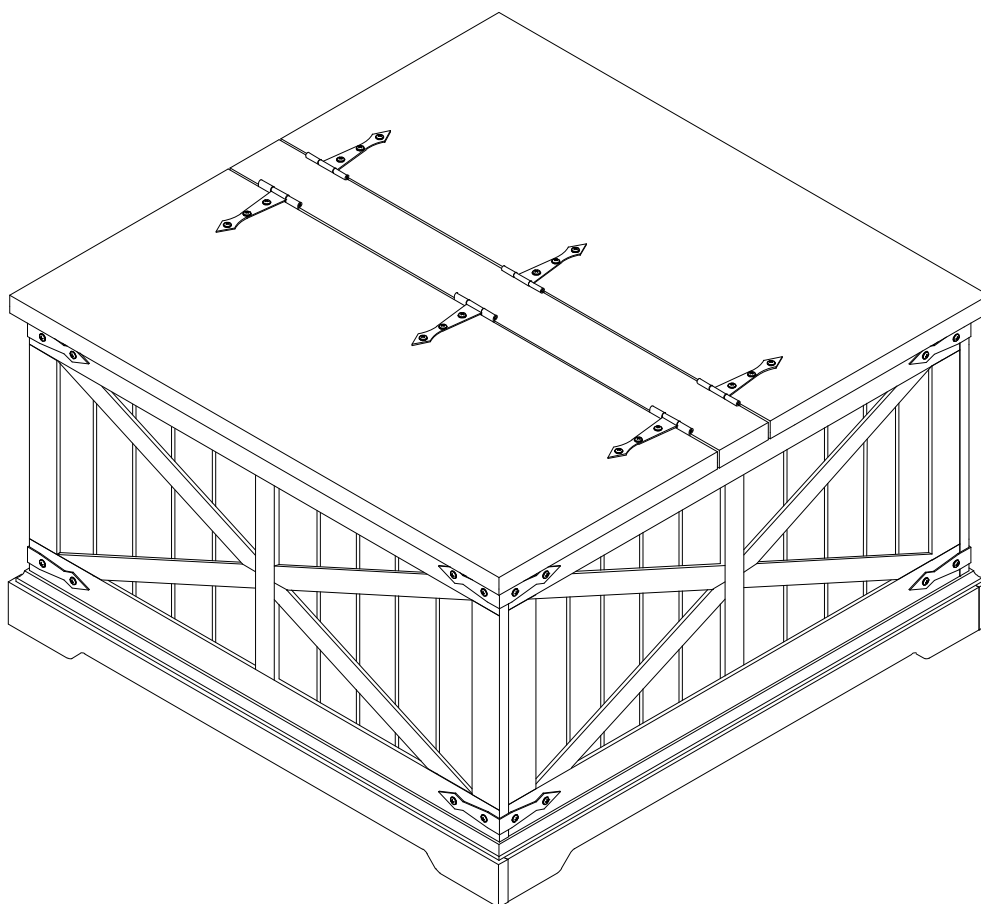

ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover.
ALWAYS install tipover restraint provided.



BEFORE STARTING



Before Using Product

- Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.

WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.
- Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.

QUICKFIT

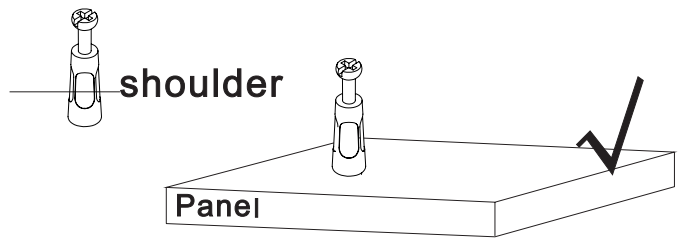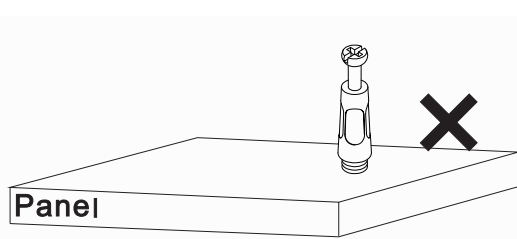


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

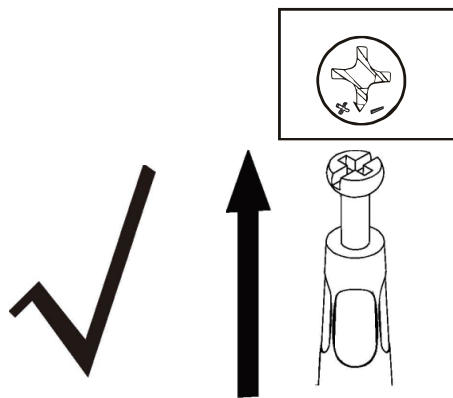


CORRECT

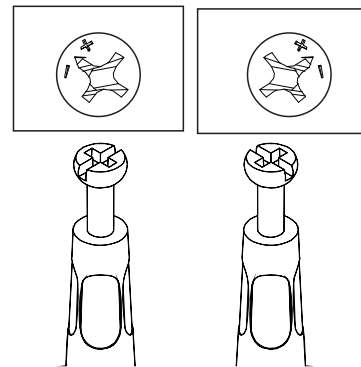


WRONG

When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.

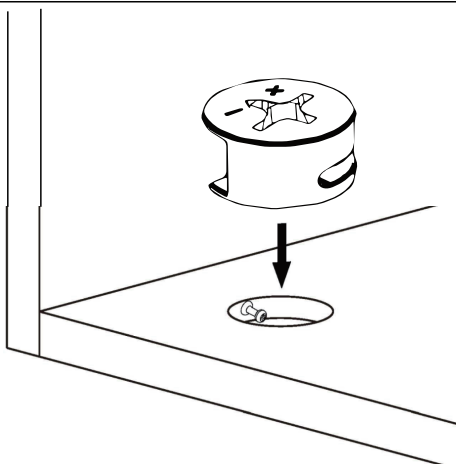


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.







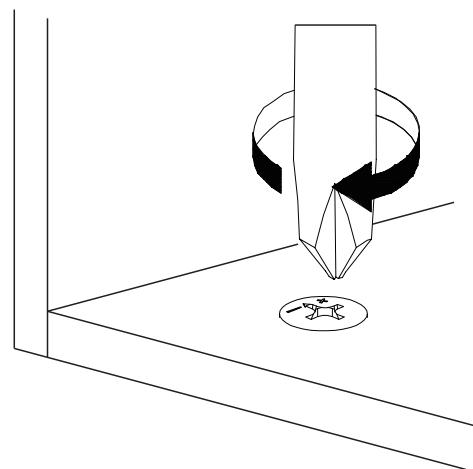


Turn cam lock clockwise to tighten.









PART LIST

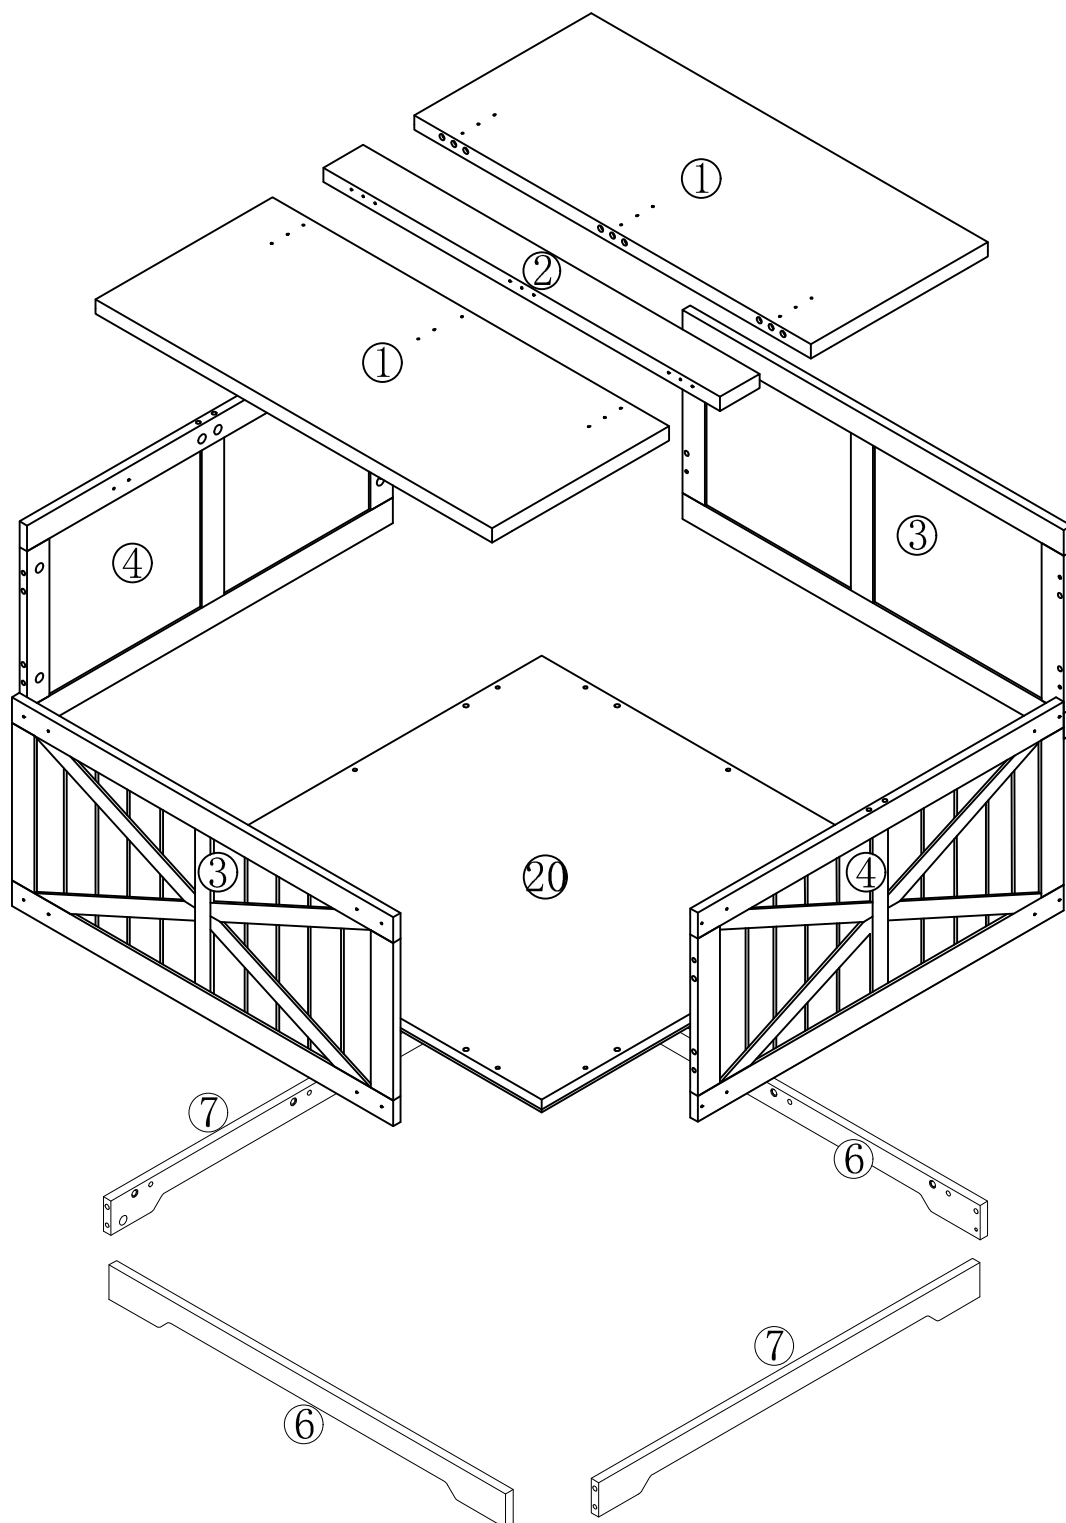


PART LIST

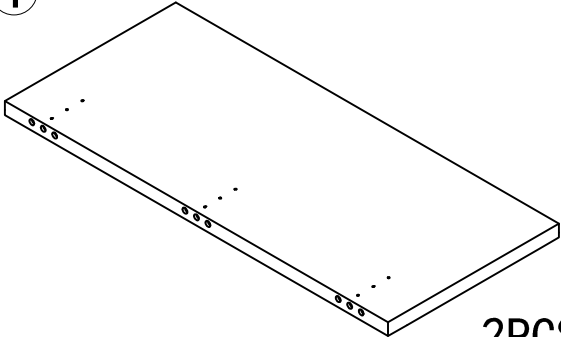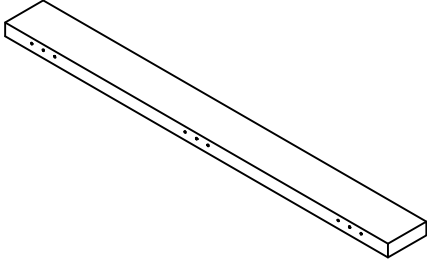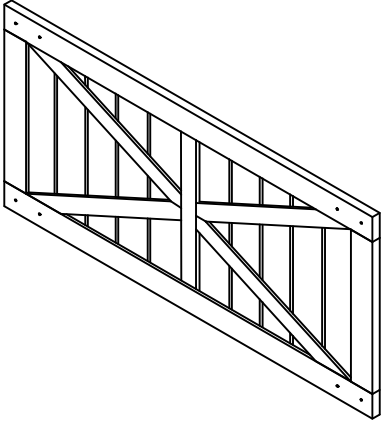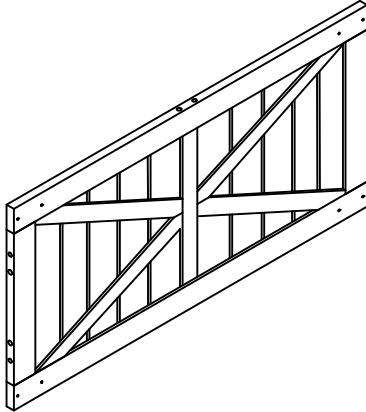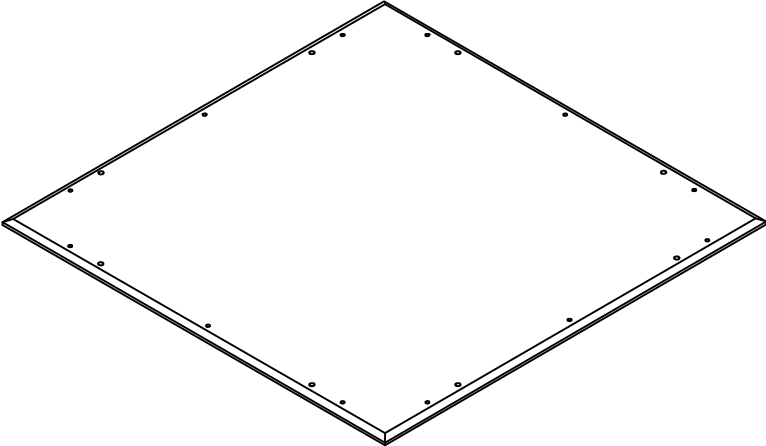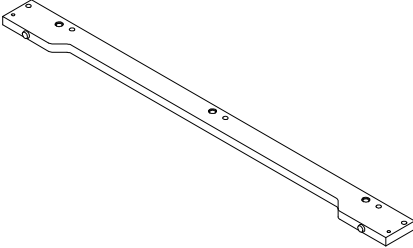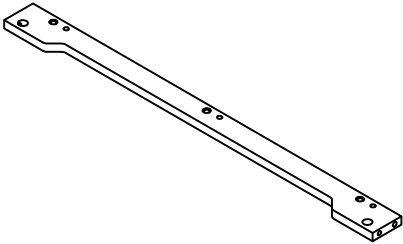①  2PCS	②  1PCS
③  2PCS	④  2PCS
②0  1PCS	
⑥  2PCS	⑦  2PCS

HARDWARE LIST

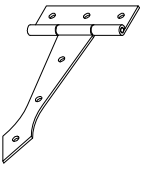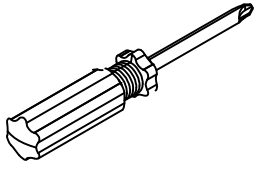
A  $\phi 6 \times 35$ (16+1)PCS	B  $\phi 15 \times 11.5$ (16+1)PCS	C  $\phi 8 \times 30$ (20+1)PCS
D  $\phi 5 \times 40$ (12+1)PCS	E  12PCS	F  $\phi 6 \times 12$ (24+2)PCS
G  6PCS	H  2PCS	I  2PCS
J  $\phi 3.5 \times 14$ (56+4)PCS	K  8PCS	L  $\phi 4 \times 12$ (32+2)PCS
M  2PCS	N  $\phi 25$ 12PCS	O  1PCS
P  1PCS		

STEP 1

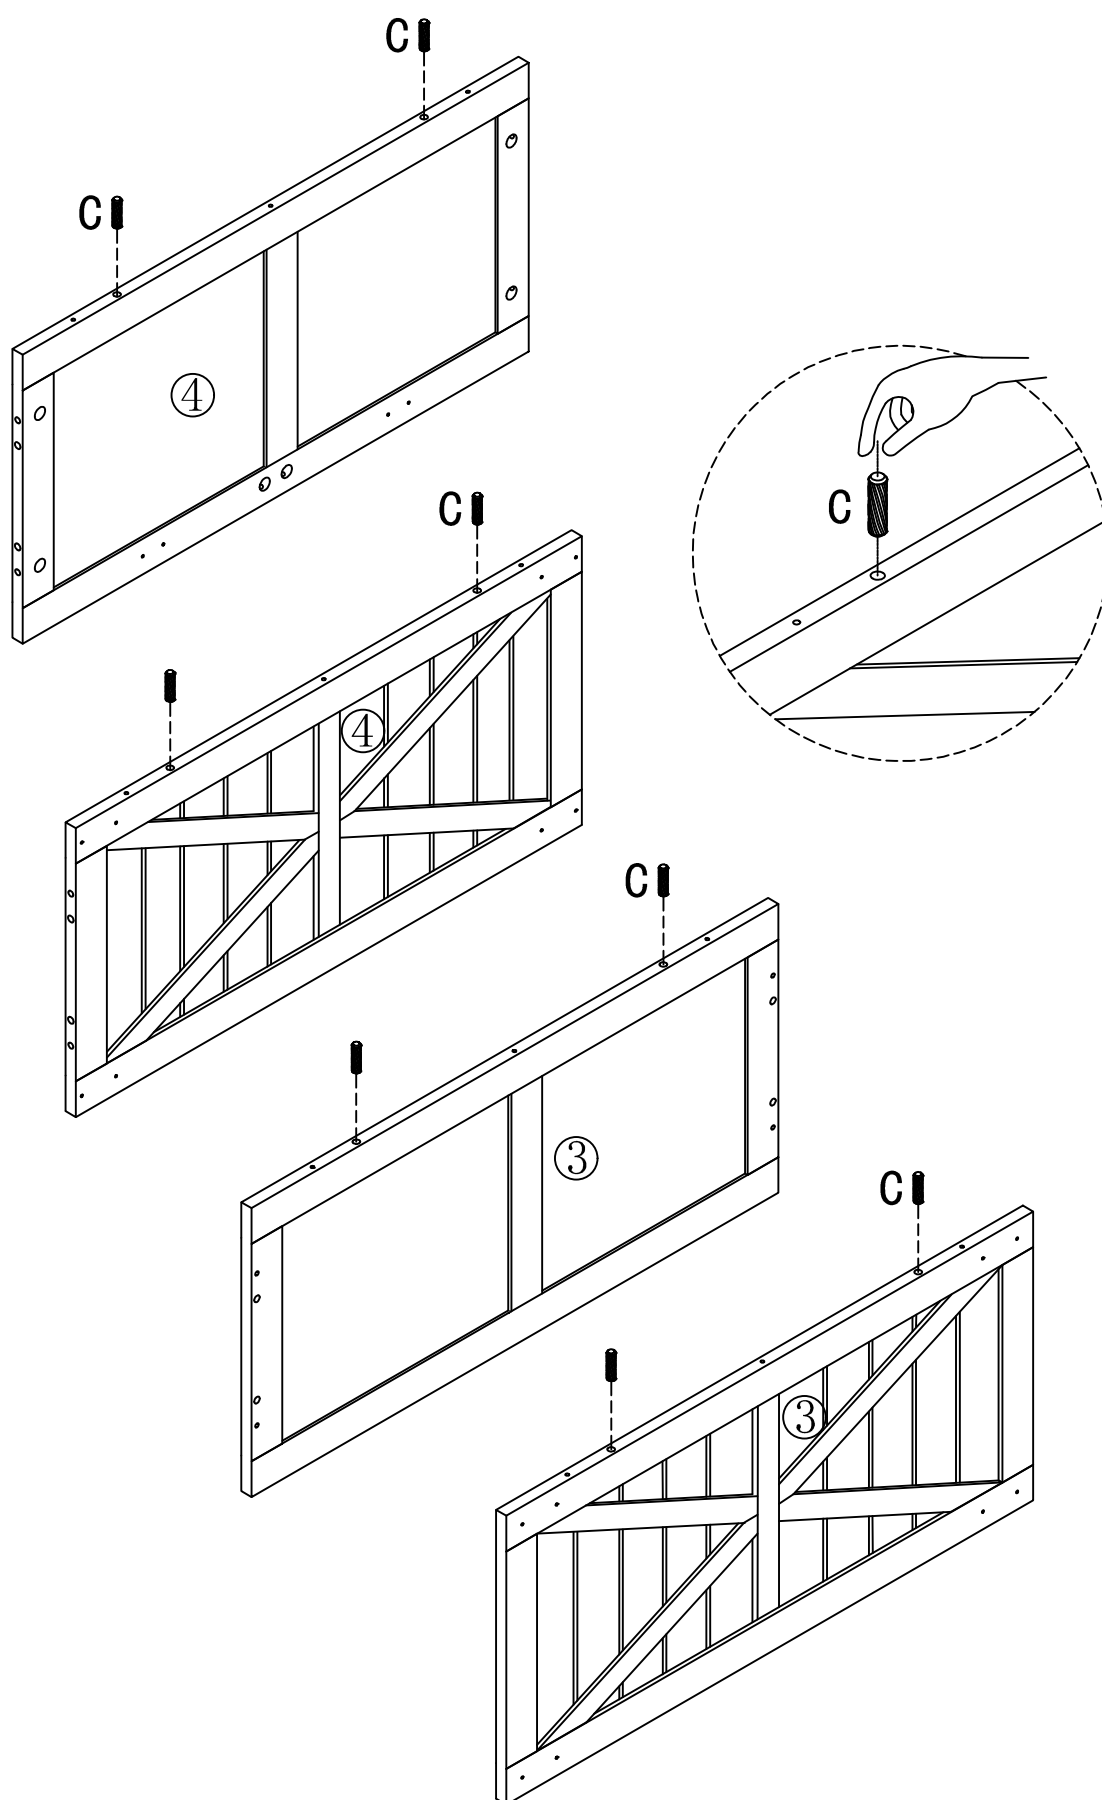


C X 8PCS

STEP 2

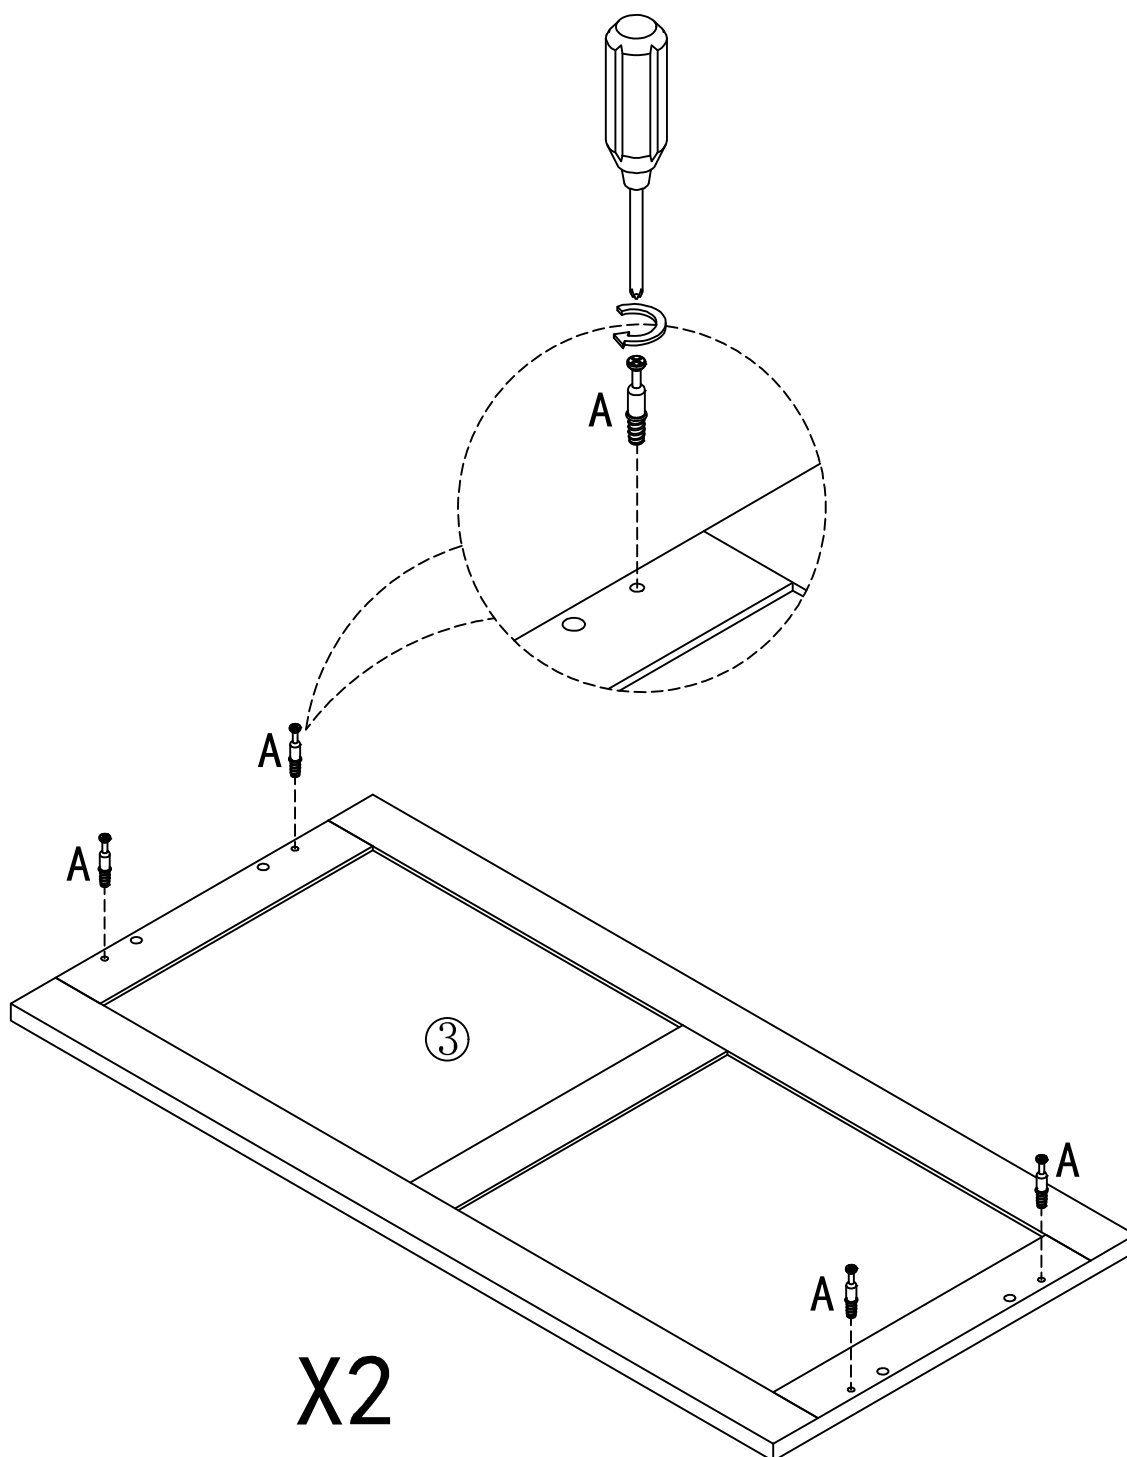



A X 8PCS

STEP 3

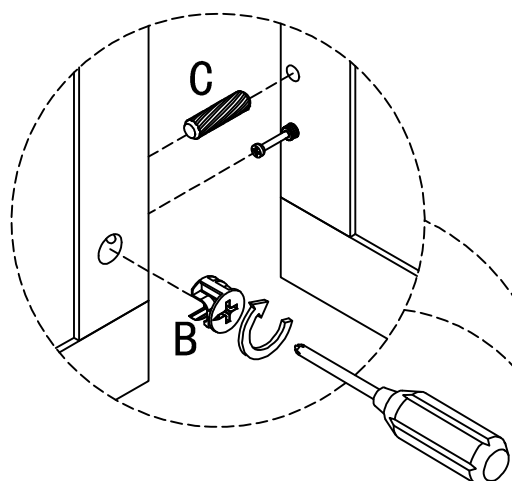


⚠ CAUTION

Firstly, please turn the side with the wooden dowels up.

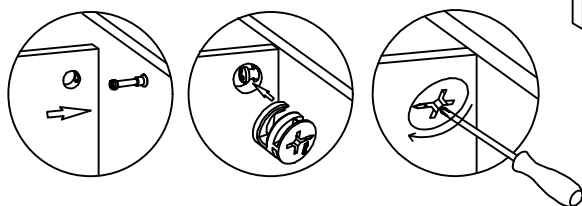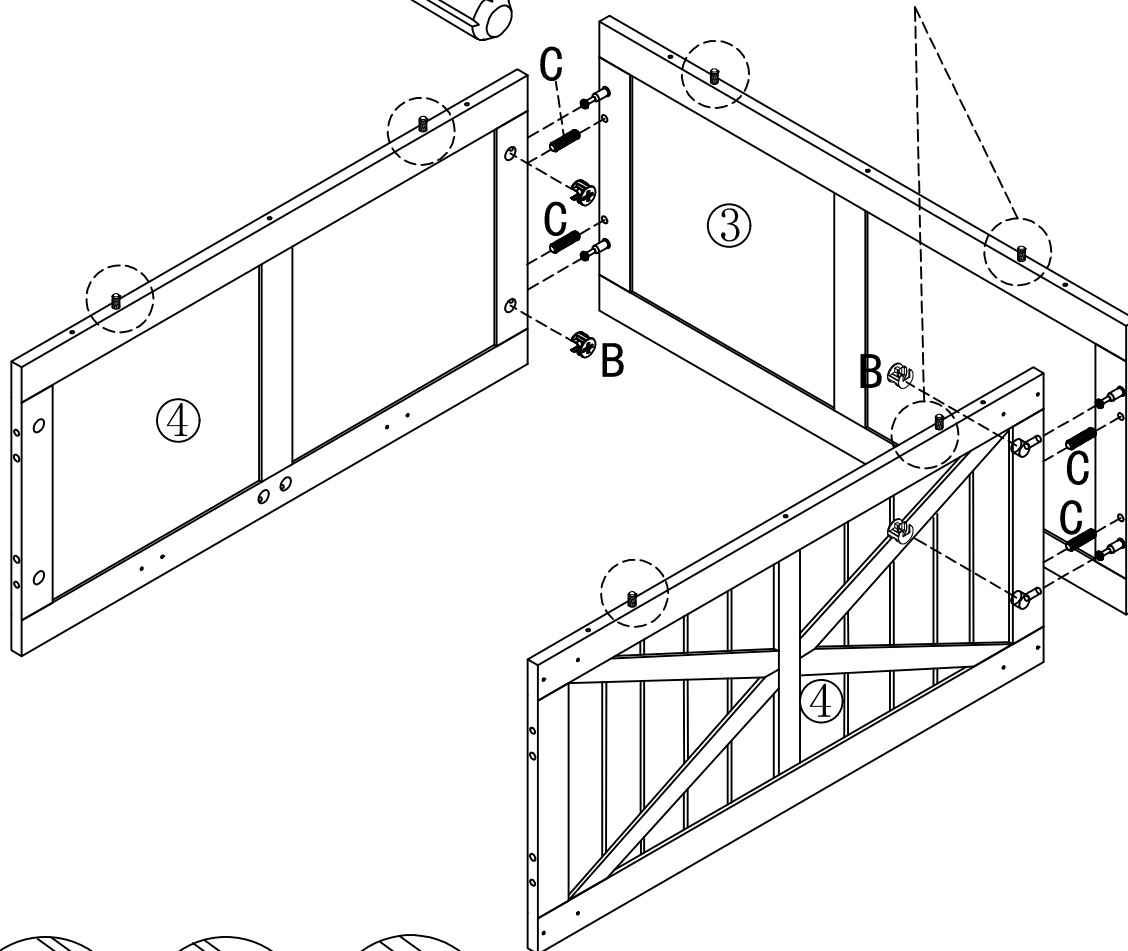

	B X 4PCS
	C X 4PCS

STEP 4

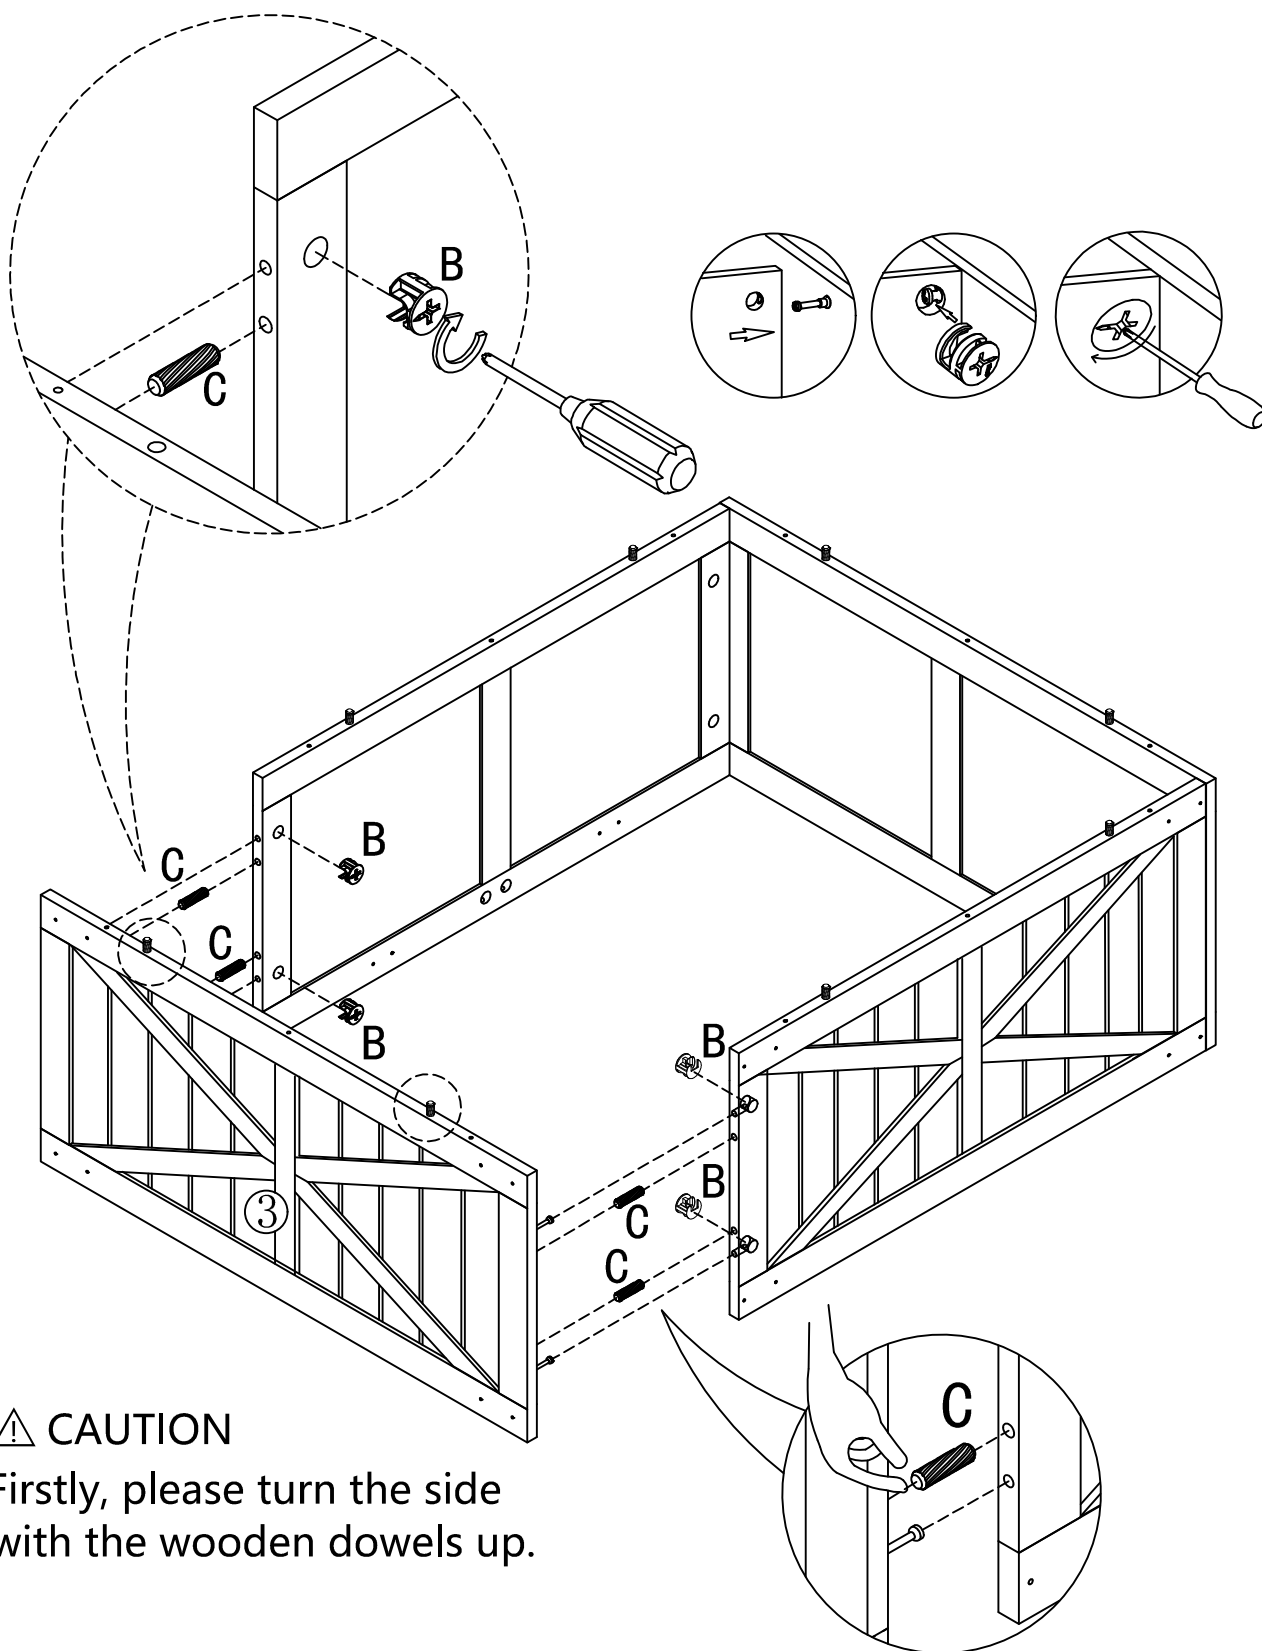


⚠ CAUTION

Firstly, please turn the side with the wooden dowels up.


	B X 4PCS
	C X 4PCS

STEP 5

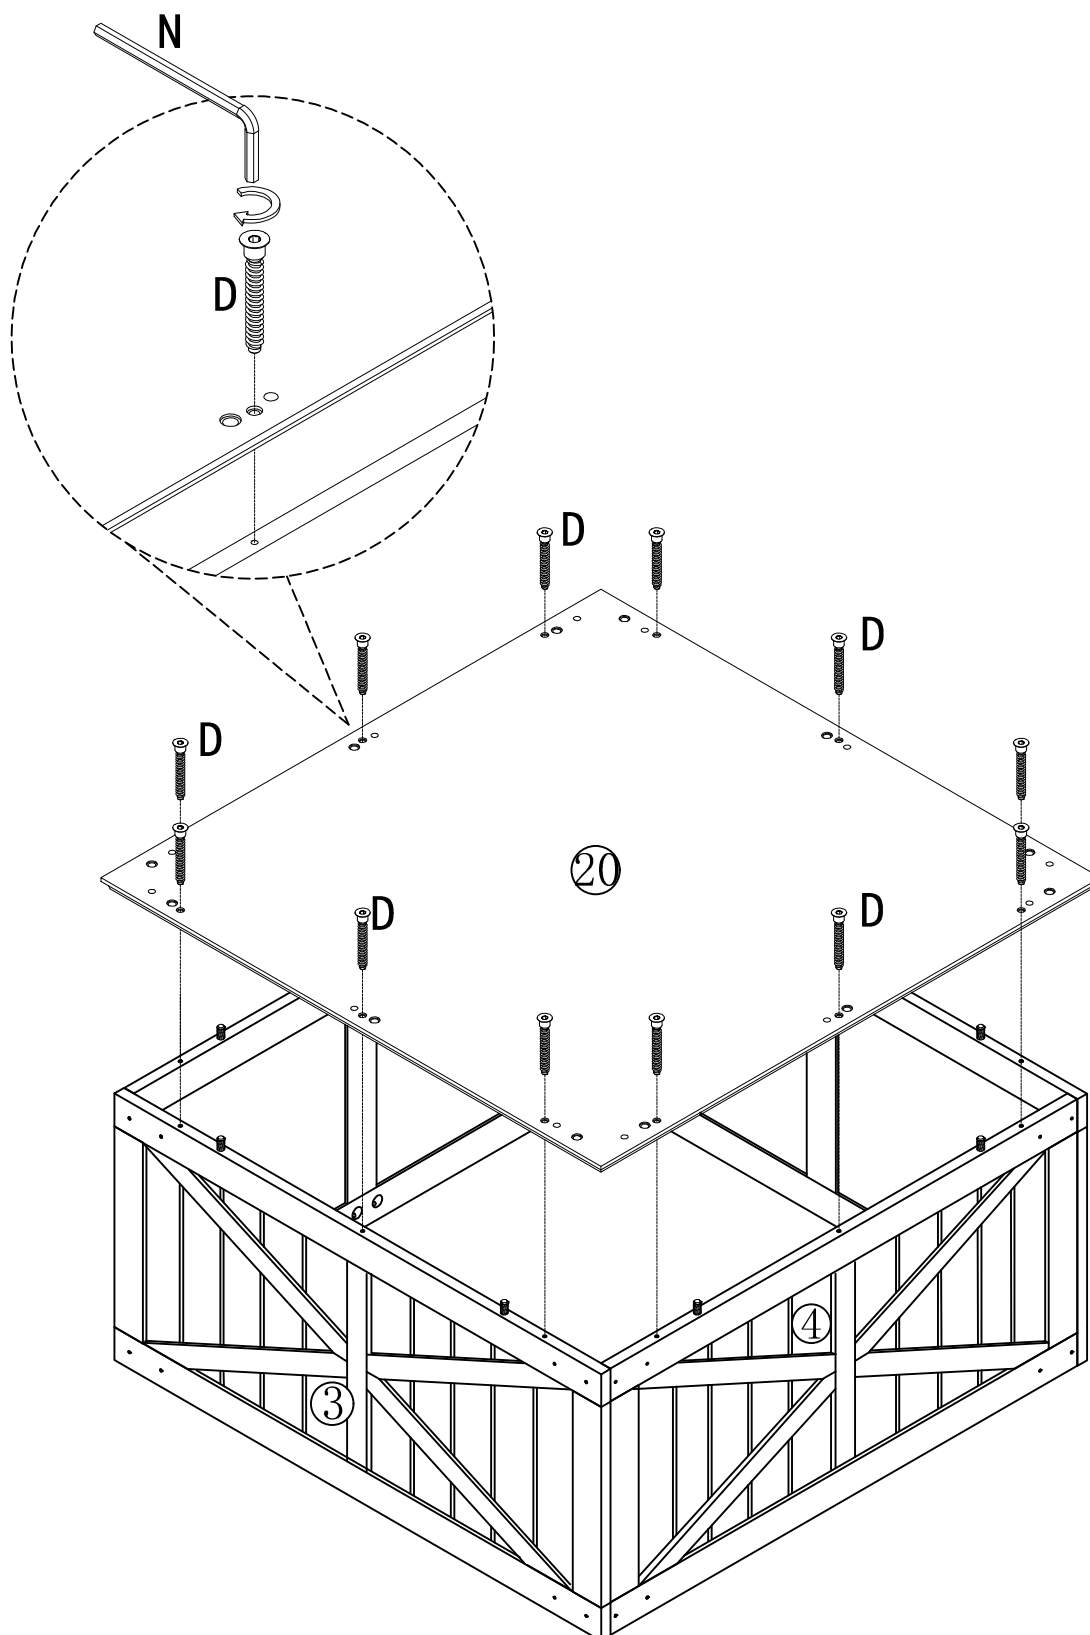



D X 12PCS

STEP 6

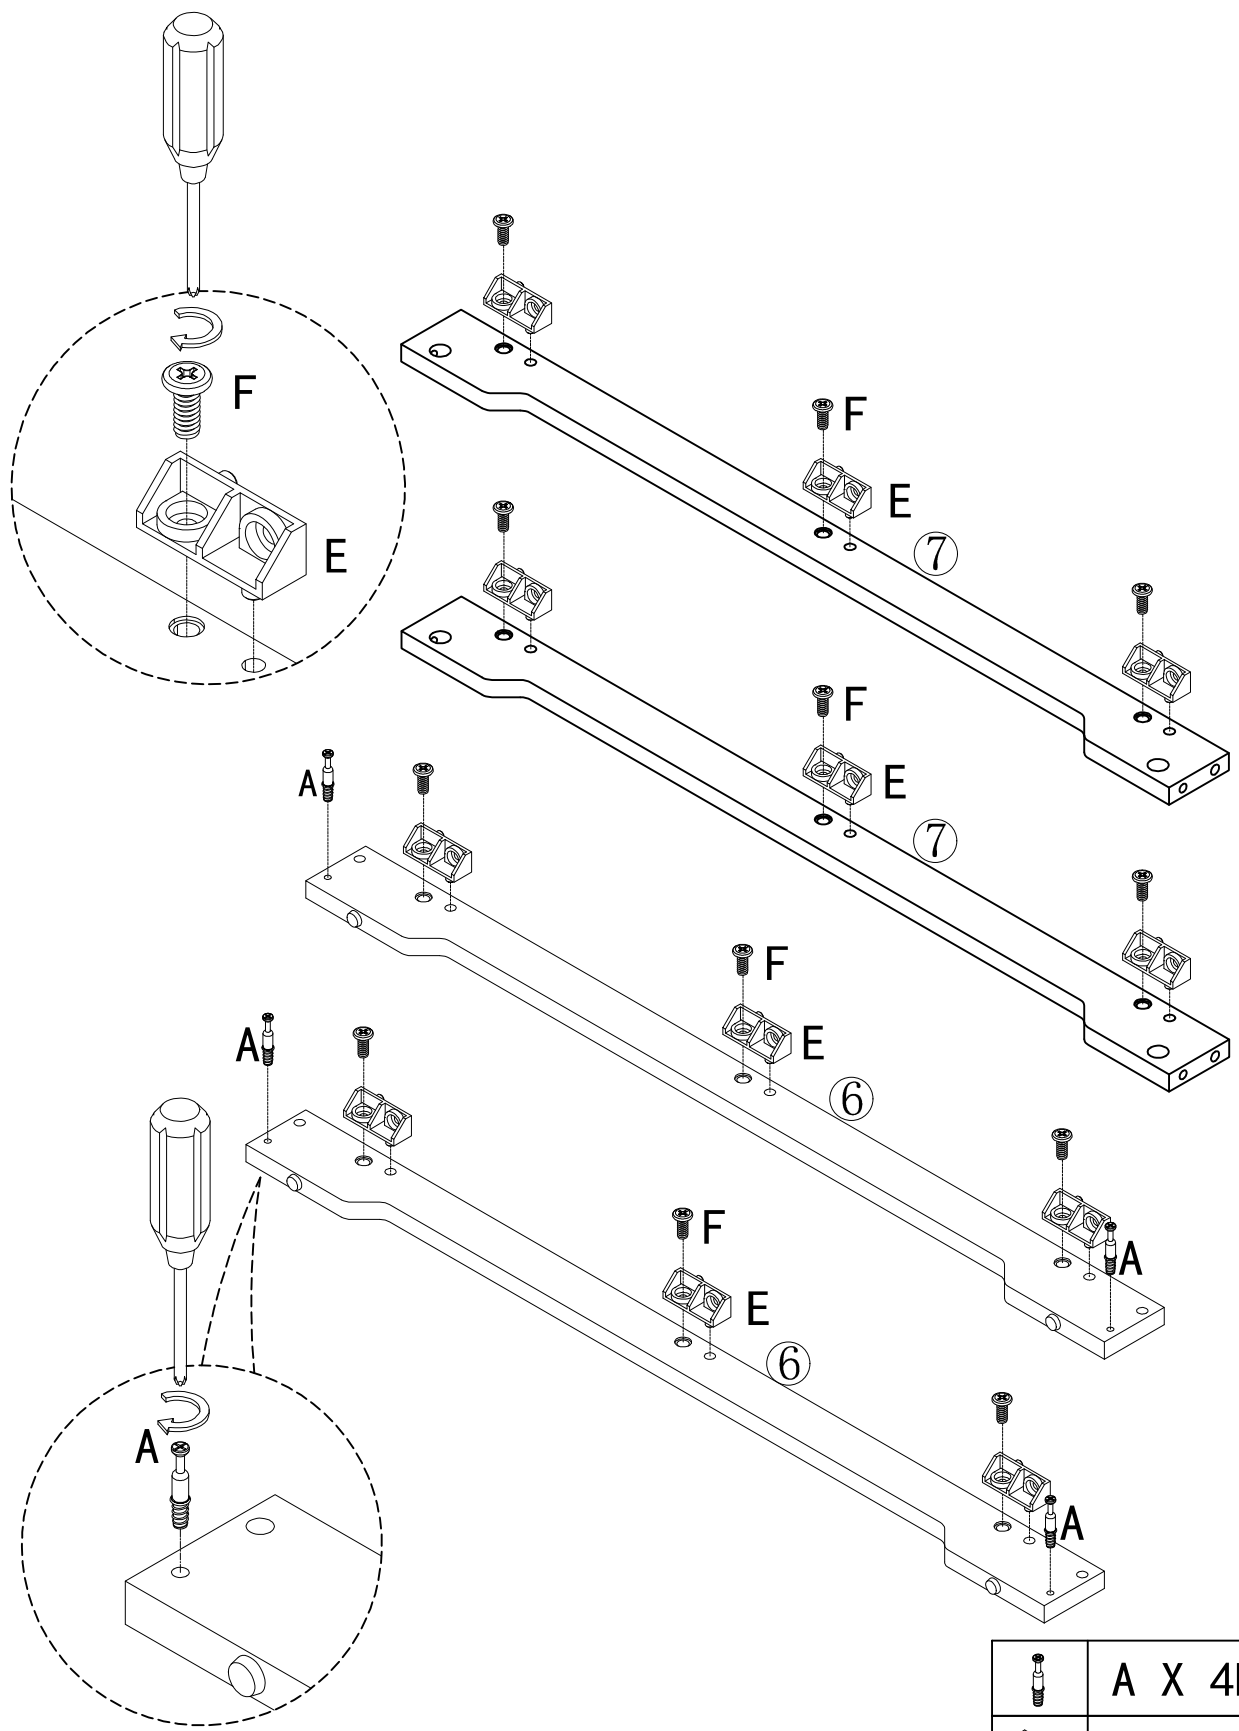



	A X 4PCS
	E X 12PCS
	F X 12PCS

STEP 7

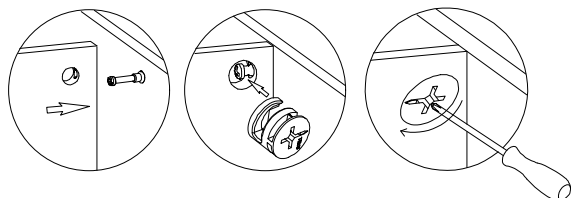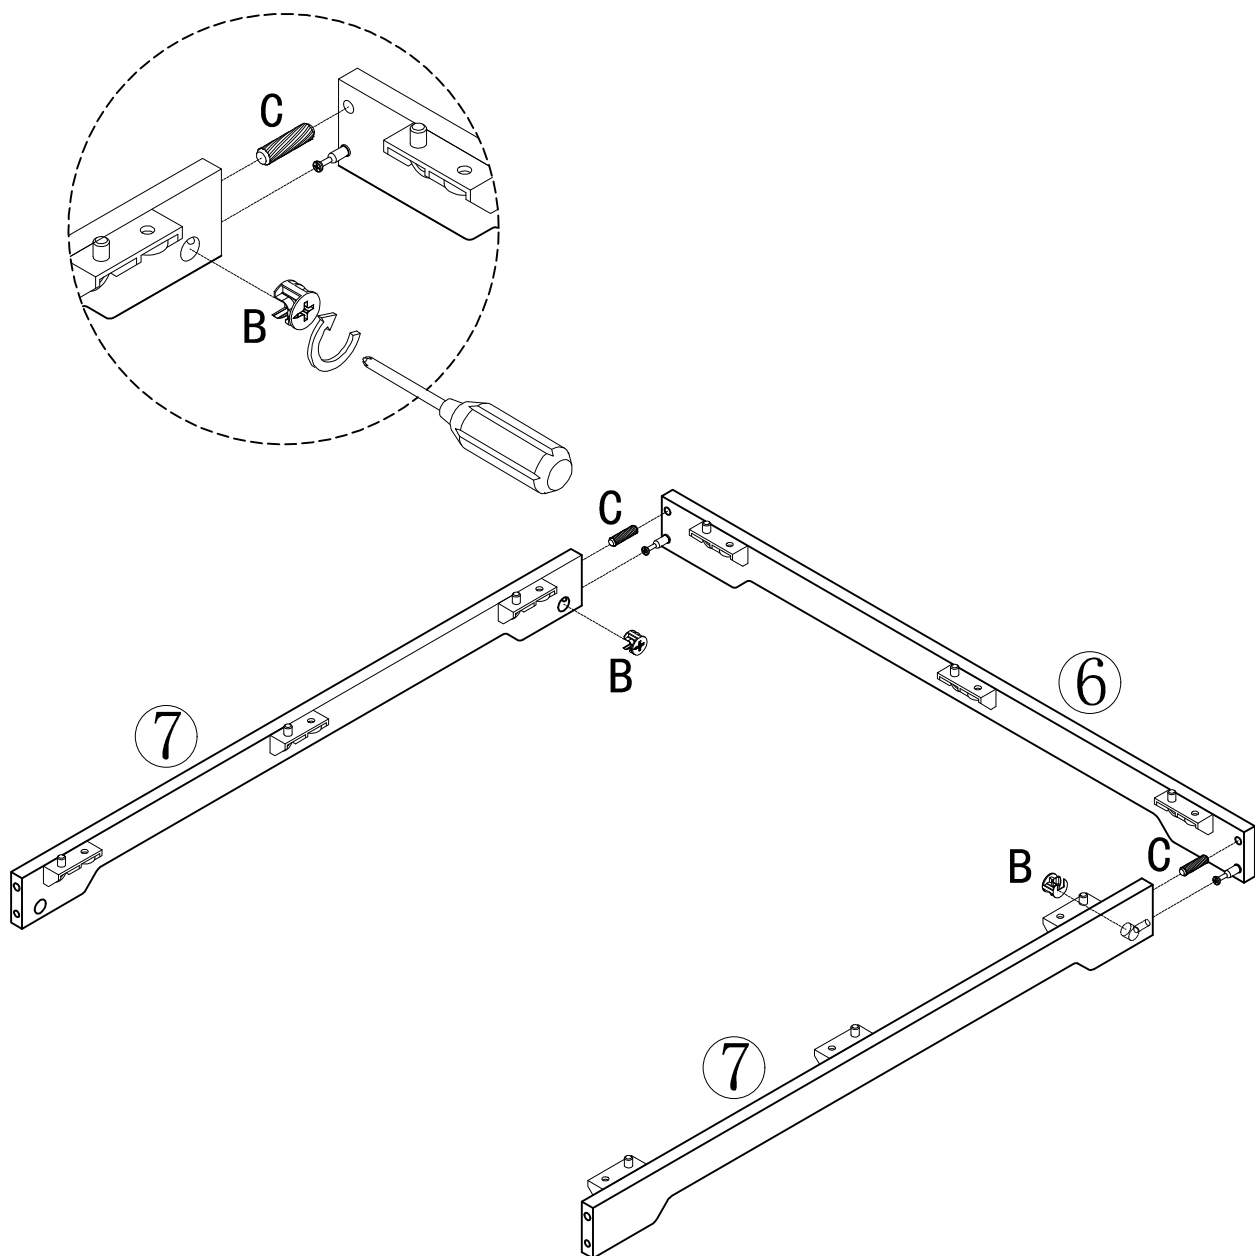


	B X 2PCS
	C X 2PCS

STEP 8

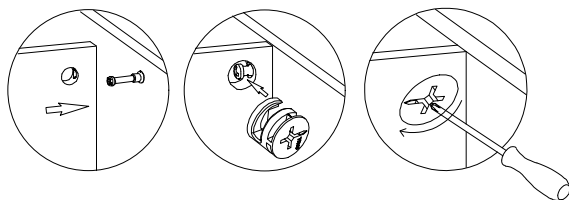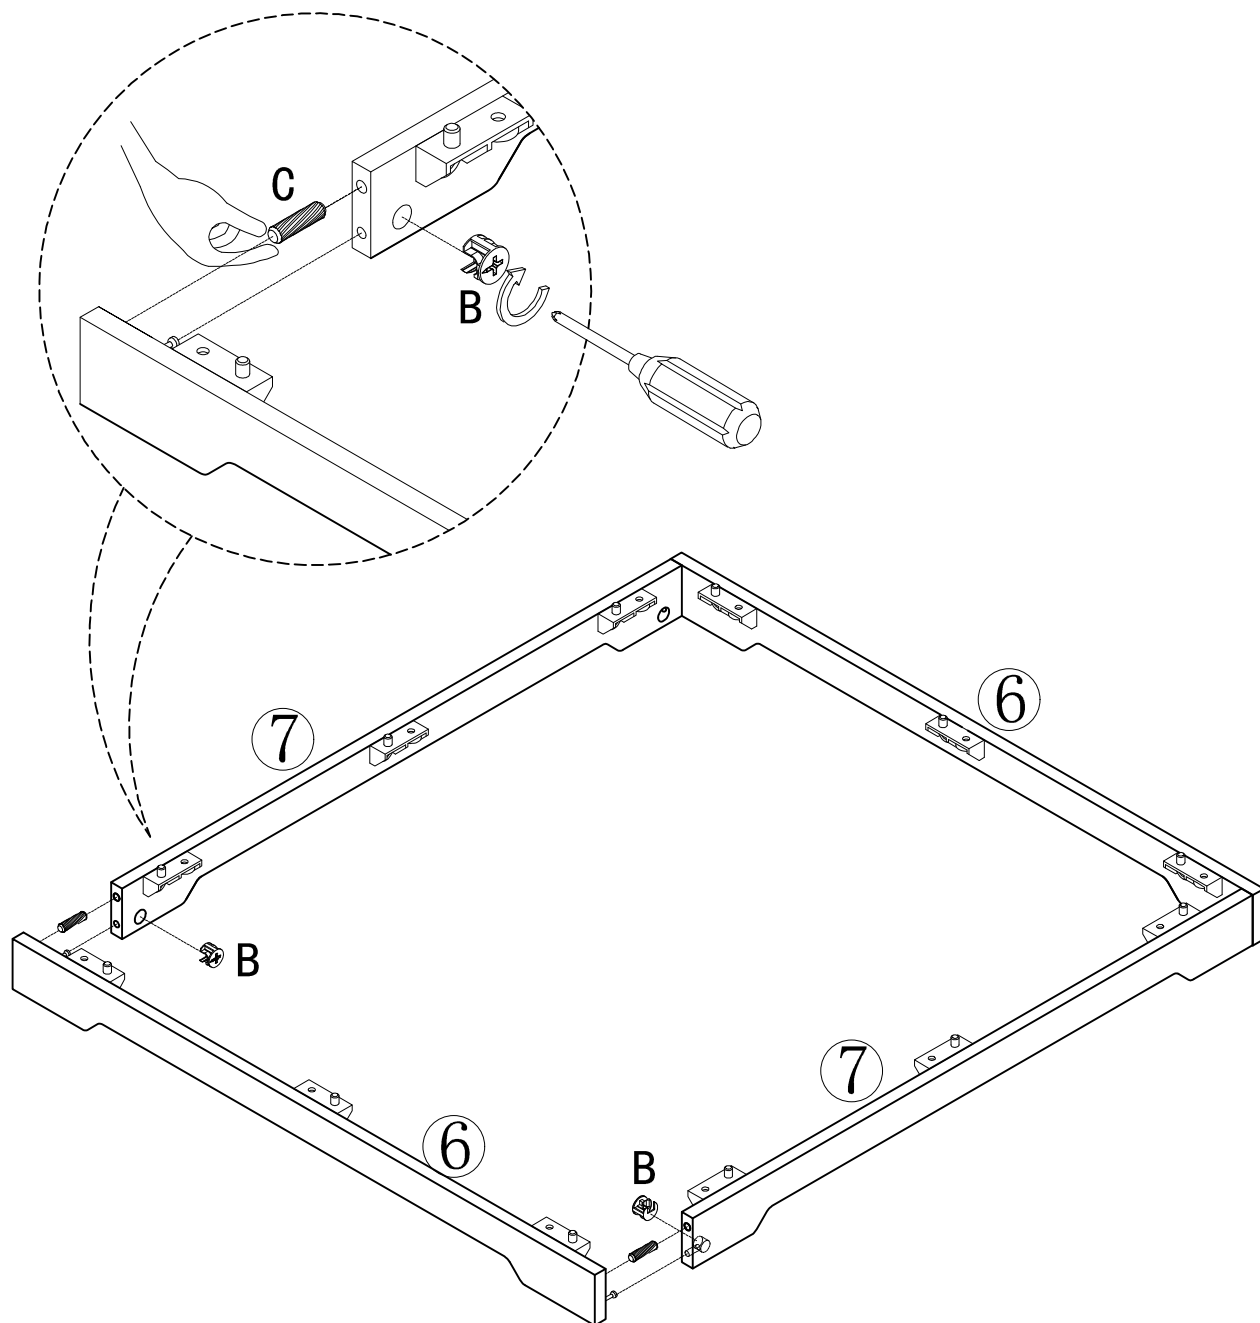


	B X 2PCS
	C X 2PCS

STEP 9

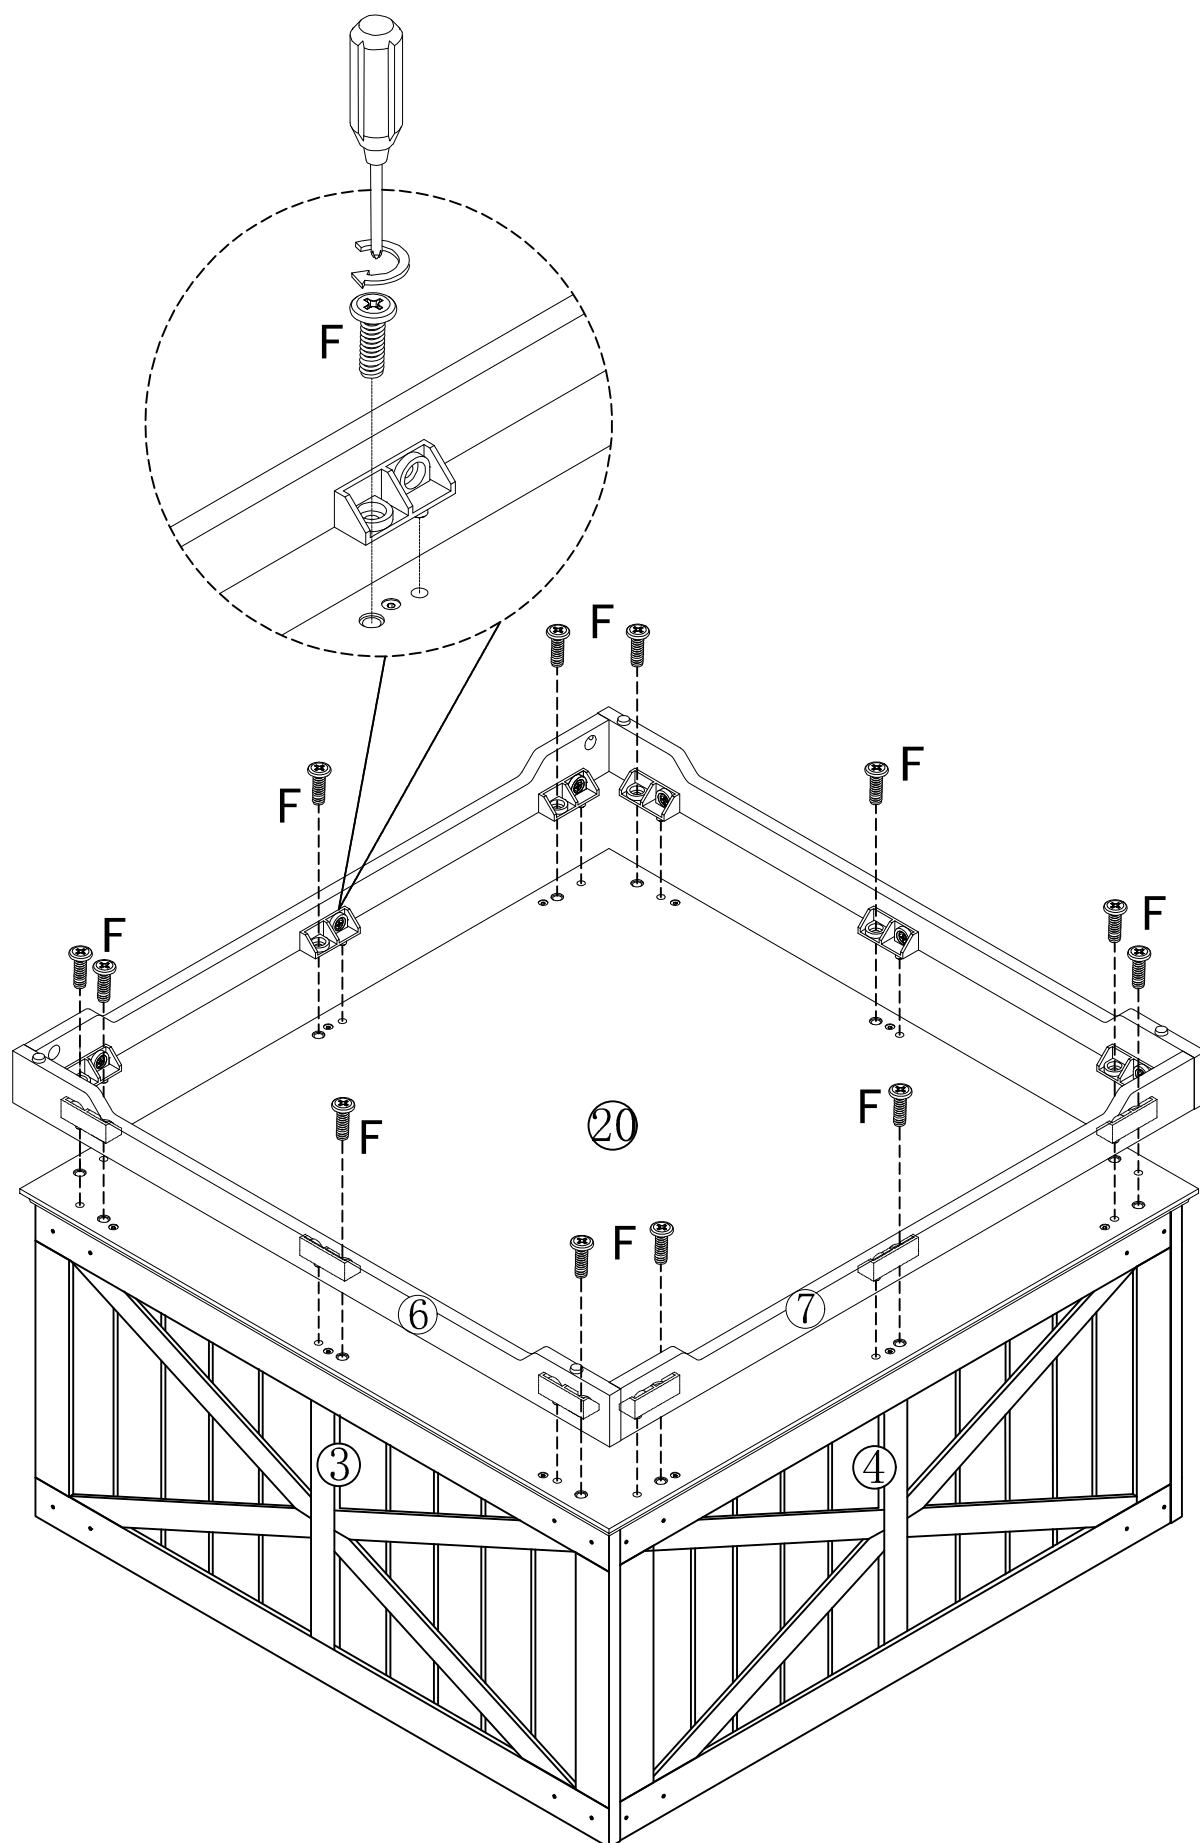





F X 12PCS

STEP 10

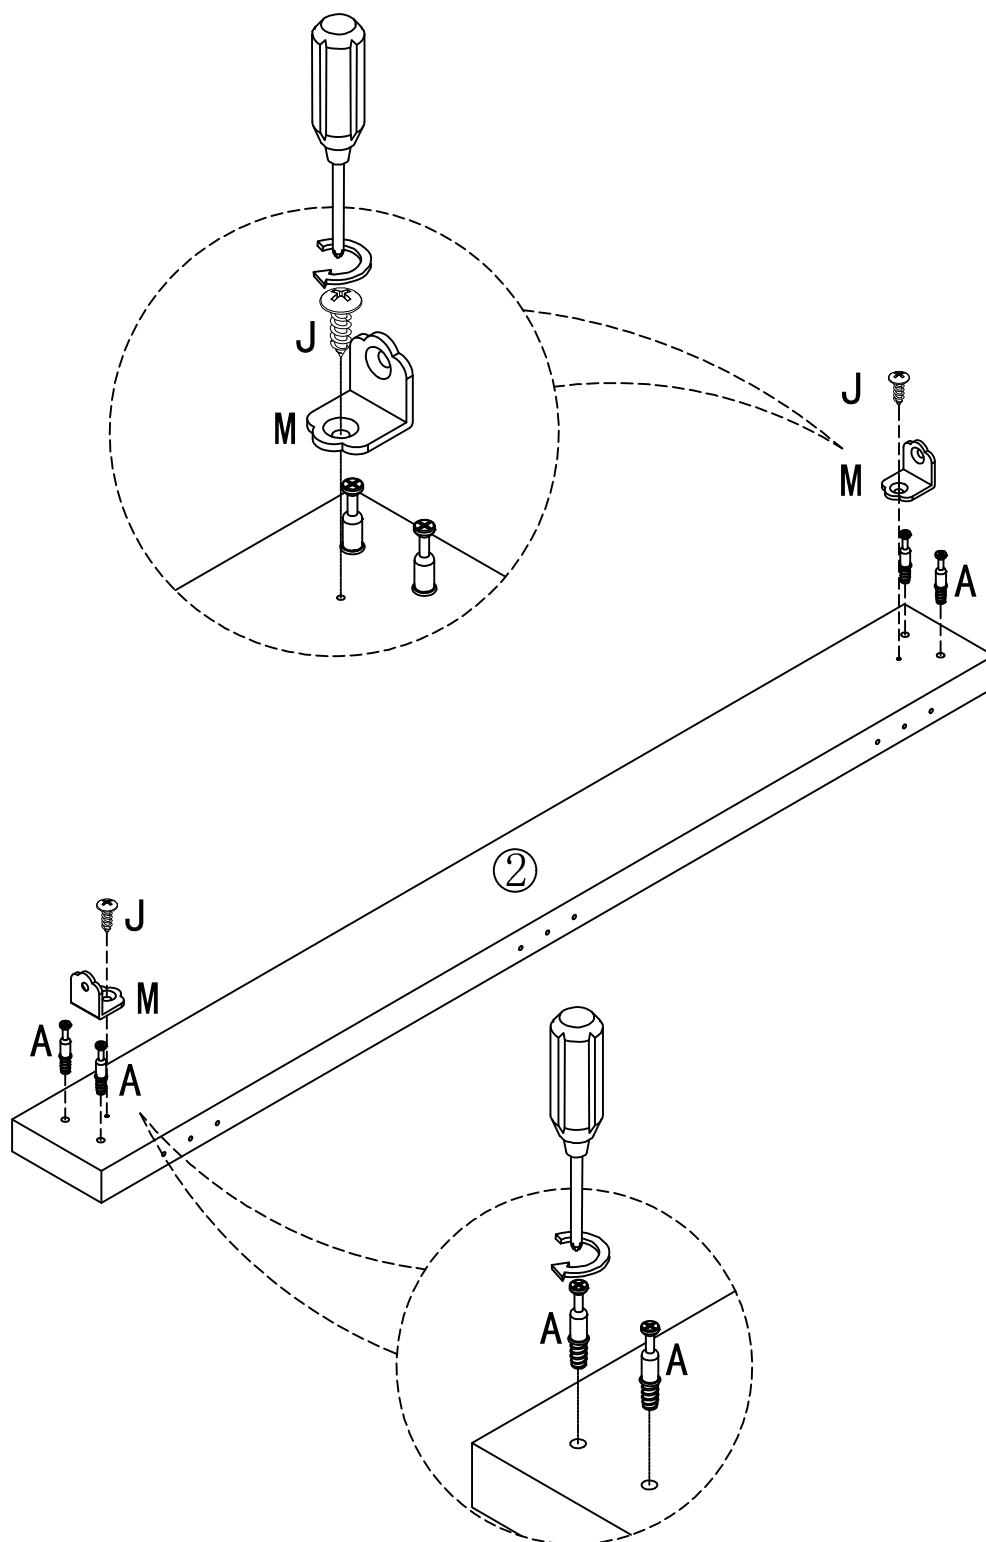


	A X 4PCS
	J X 2PCS
	M X 2PCS

STEP 11

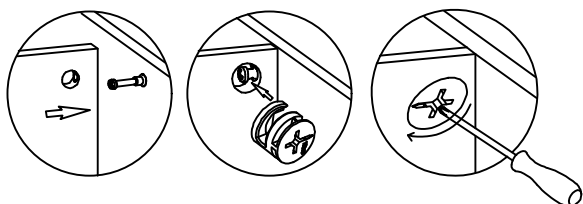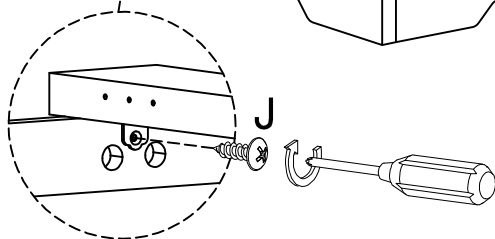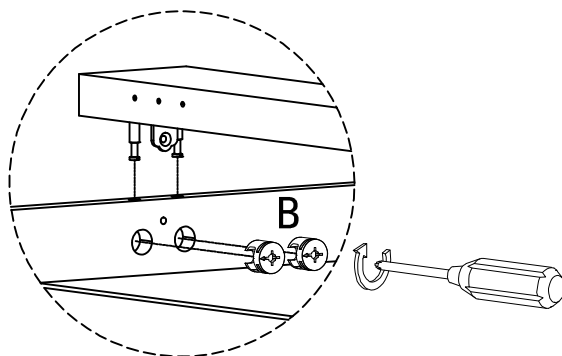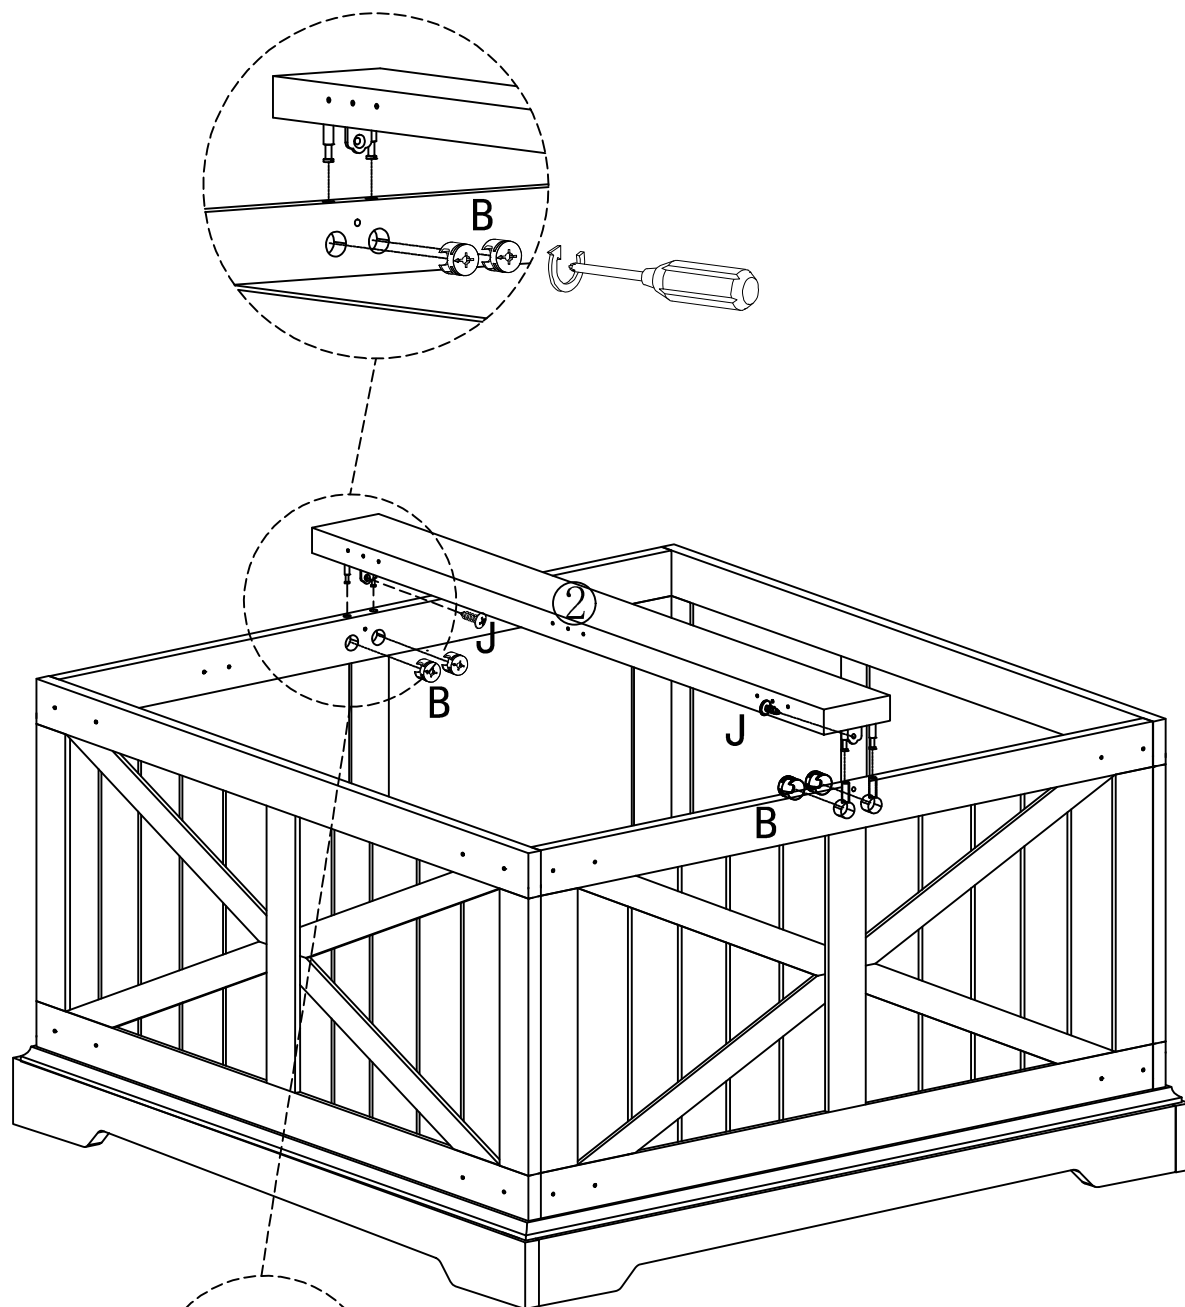

	J X 2PCS
	B X 4PCS

STEP 12

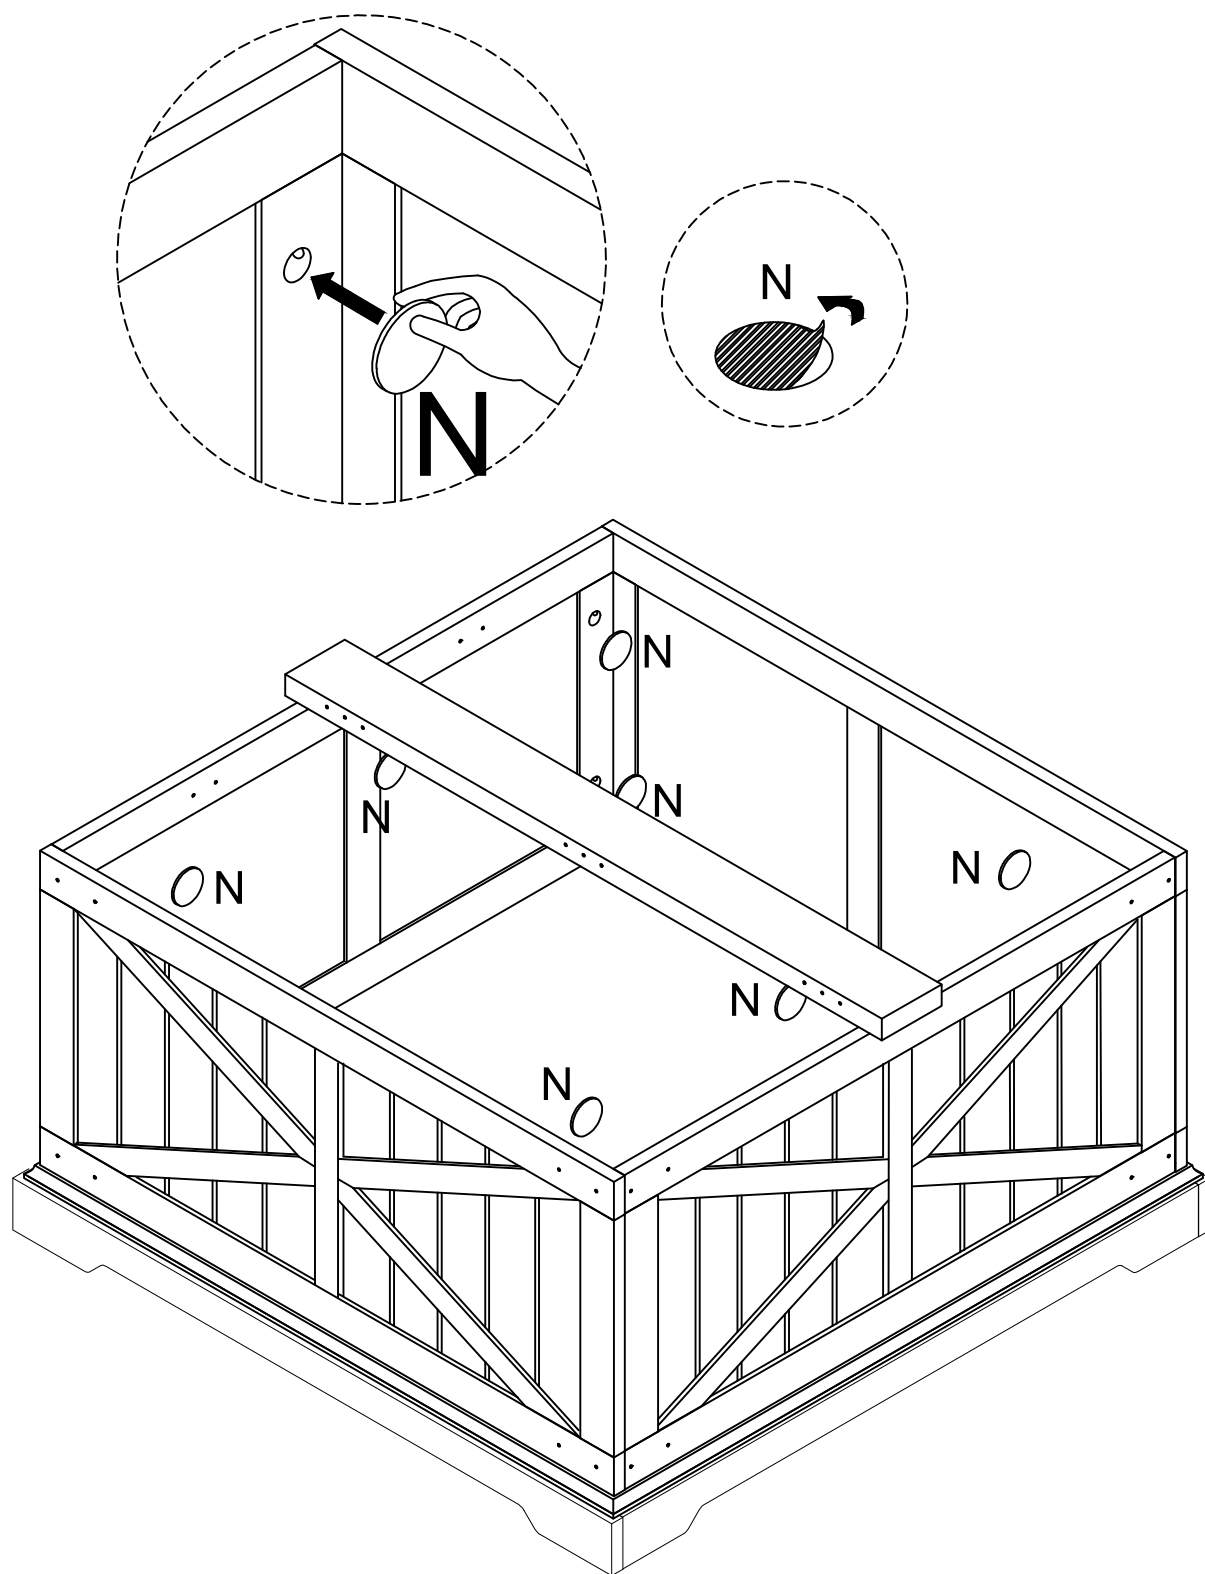


STEP 13

⚠ CAUTION


Pay attention to the direction of the hinge

Make sure the flat side of the hinges face outside the wood bar.

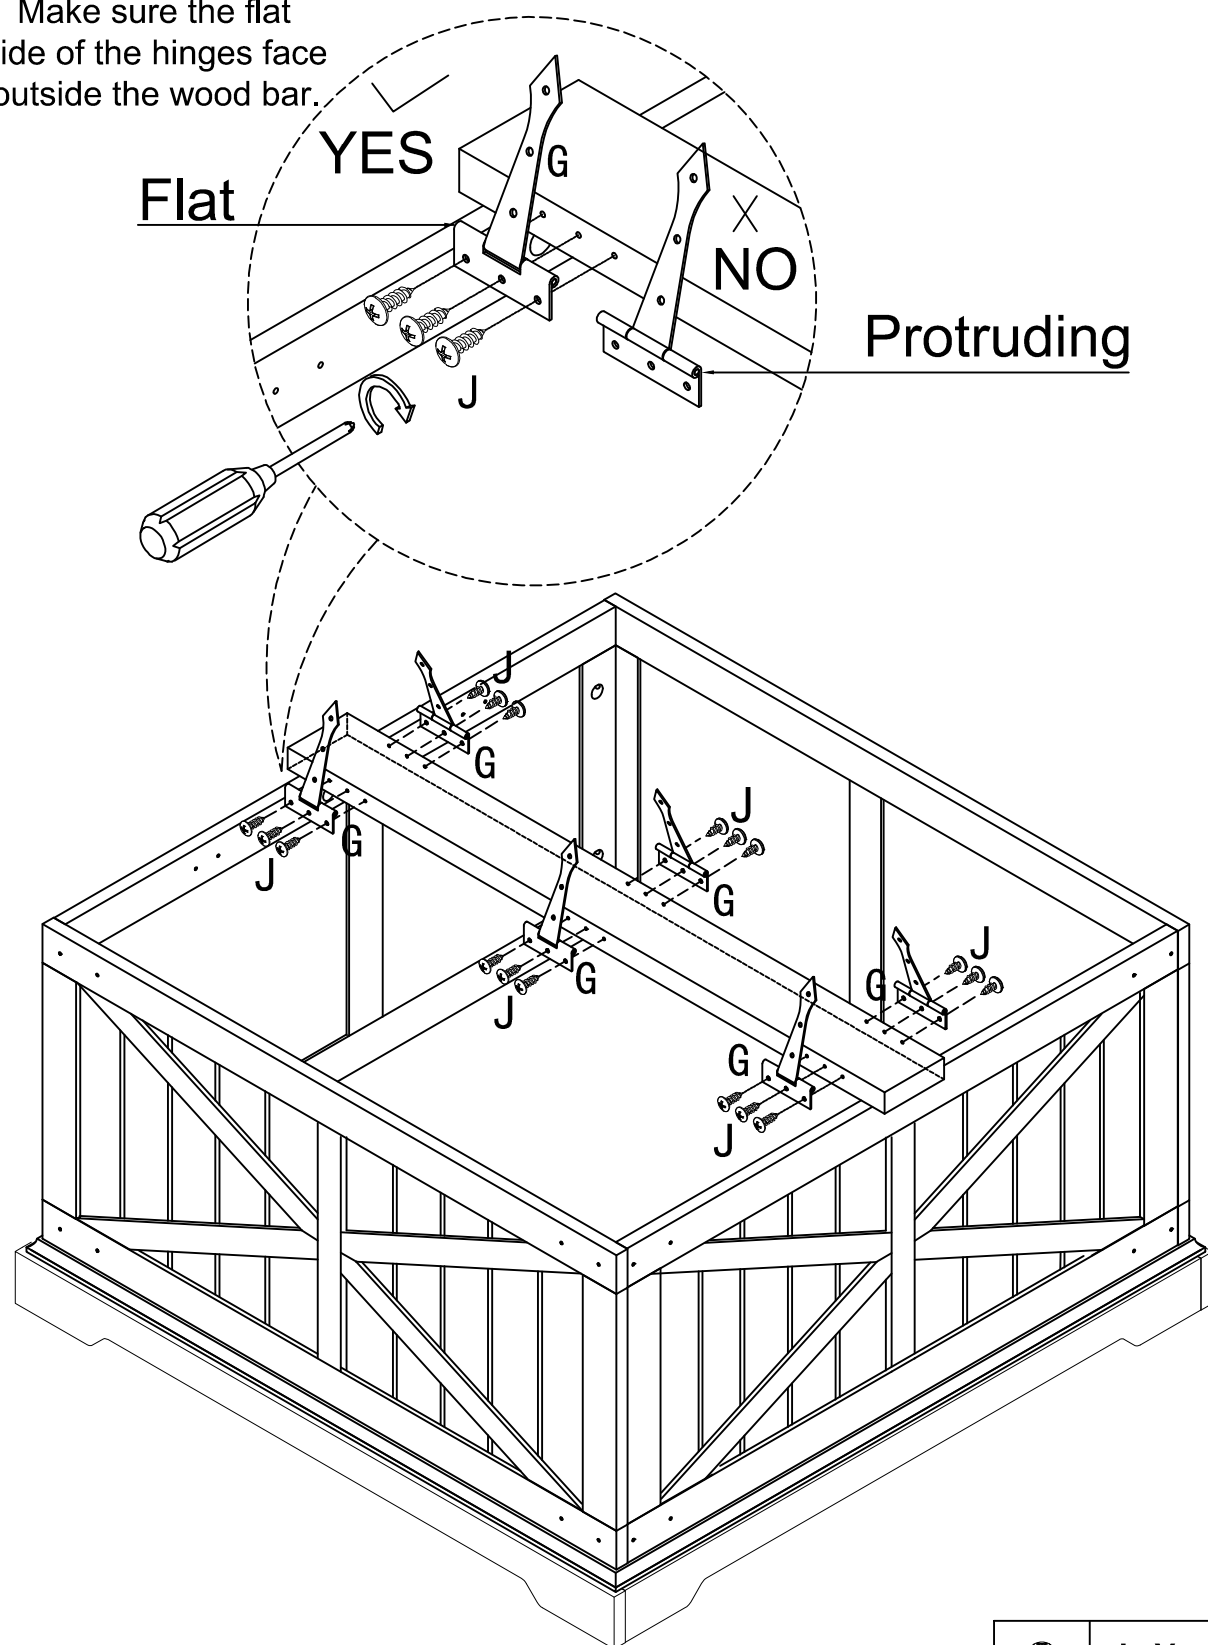


	J X 18PCS
	G X 6PCS

STEP 14

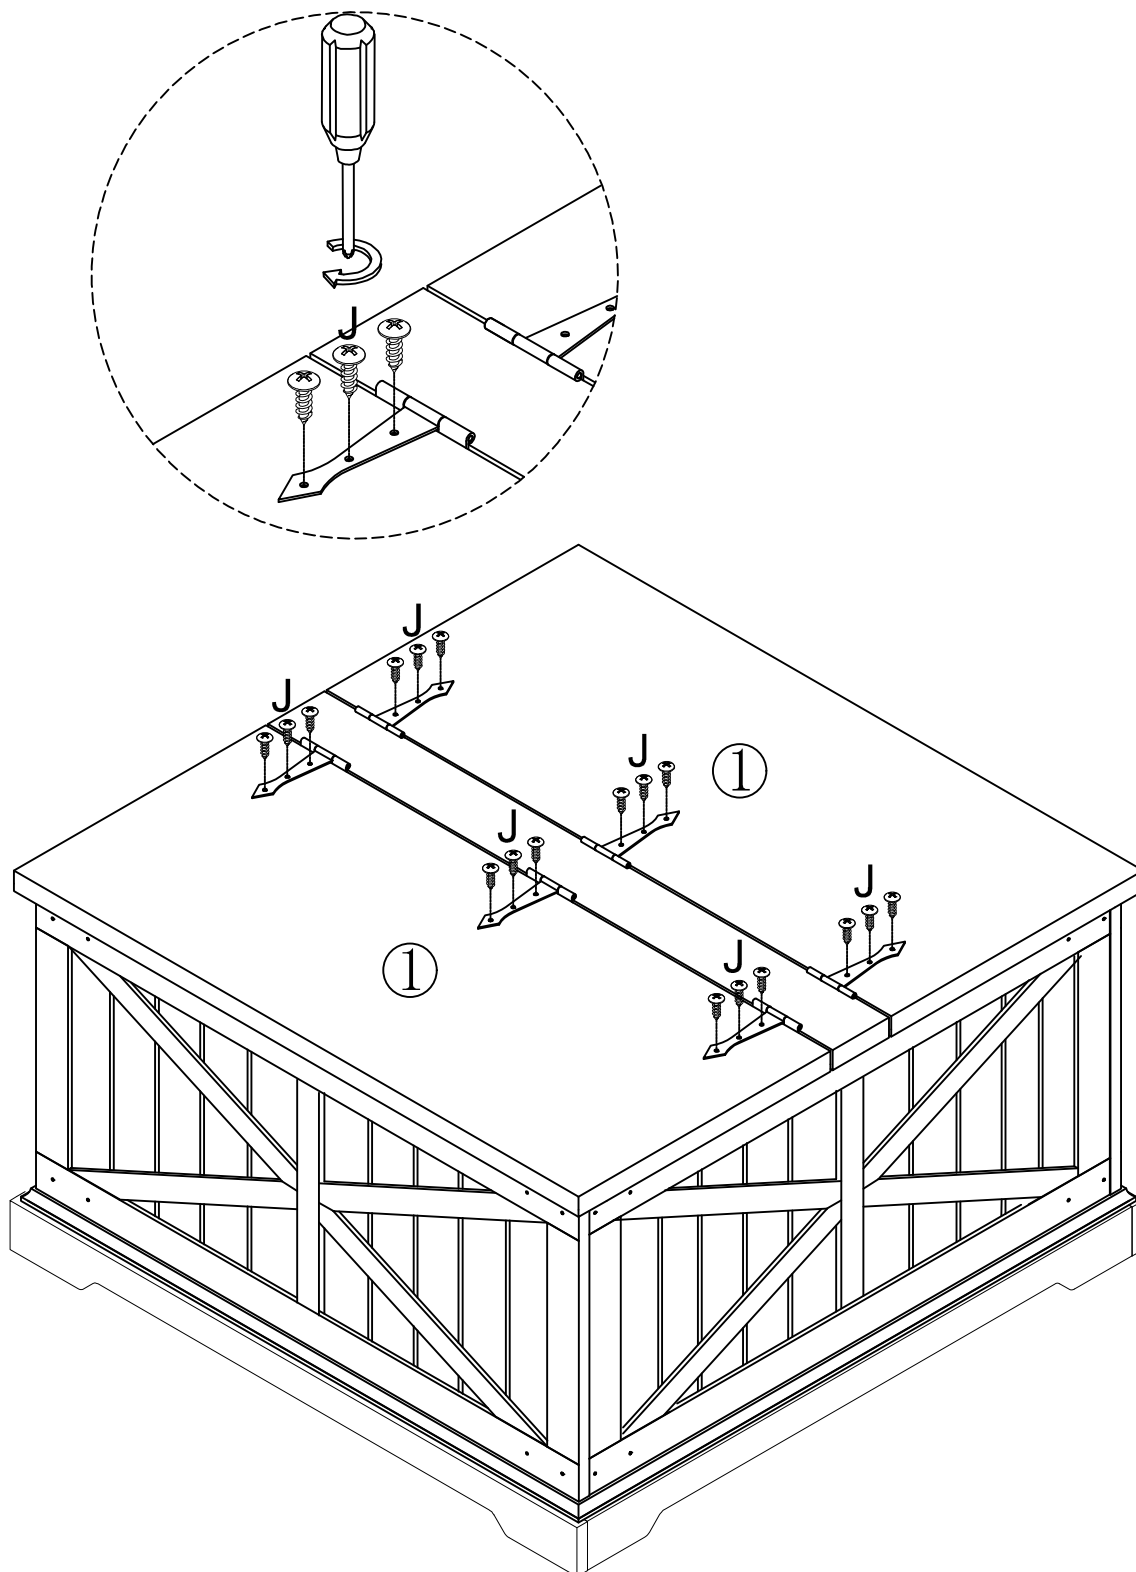


J X 18PCS

STEP 15

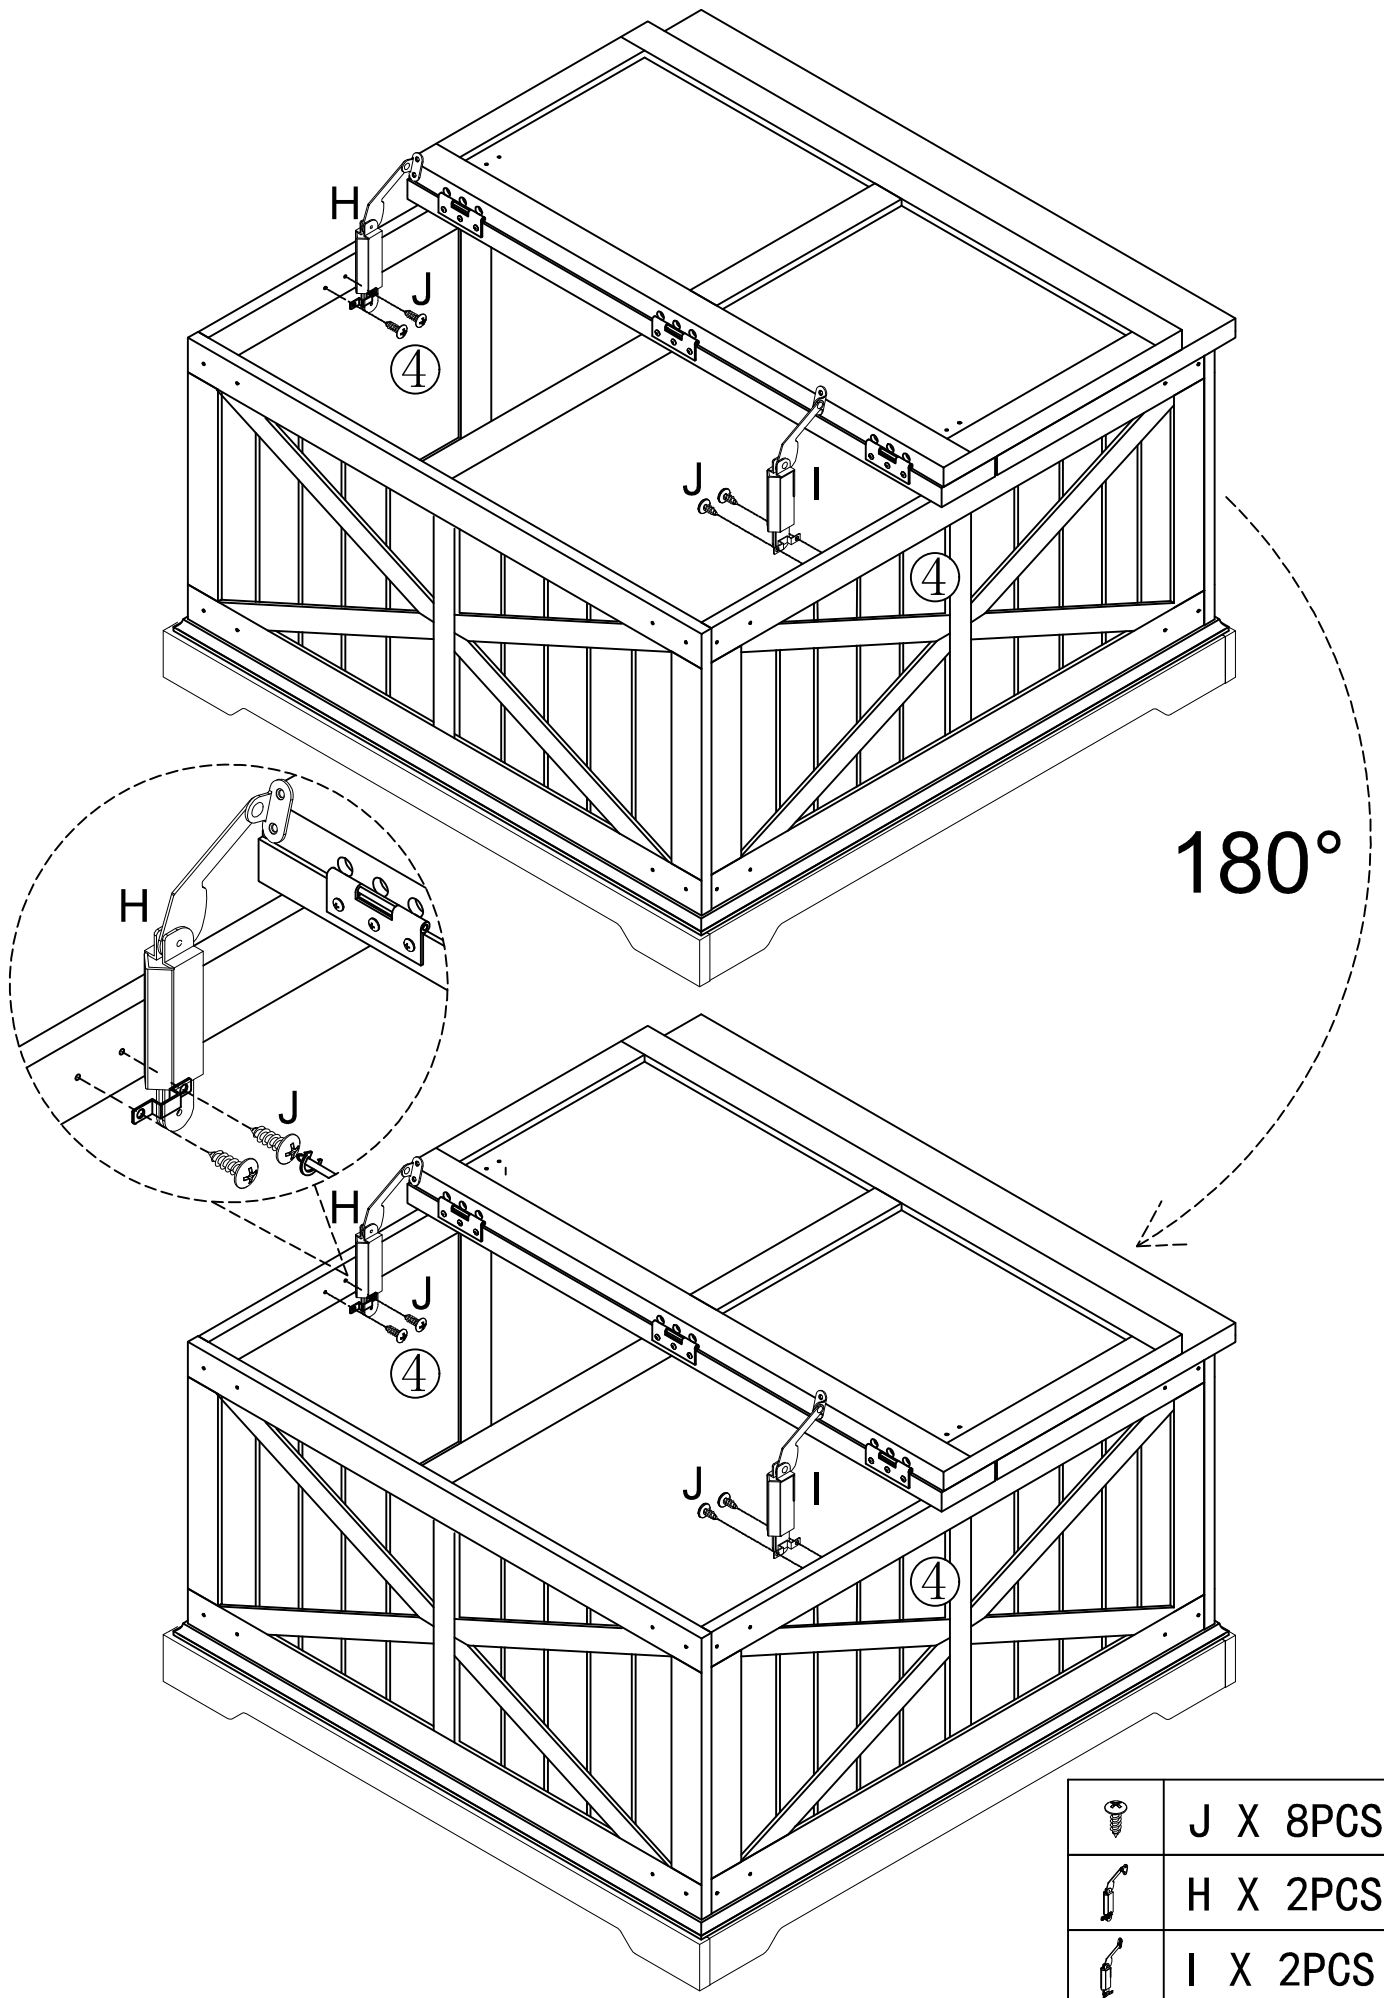


STEP 16

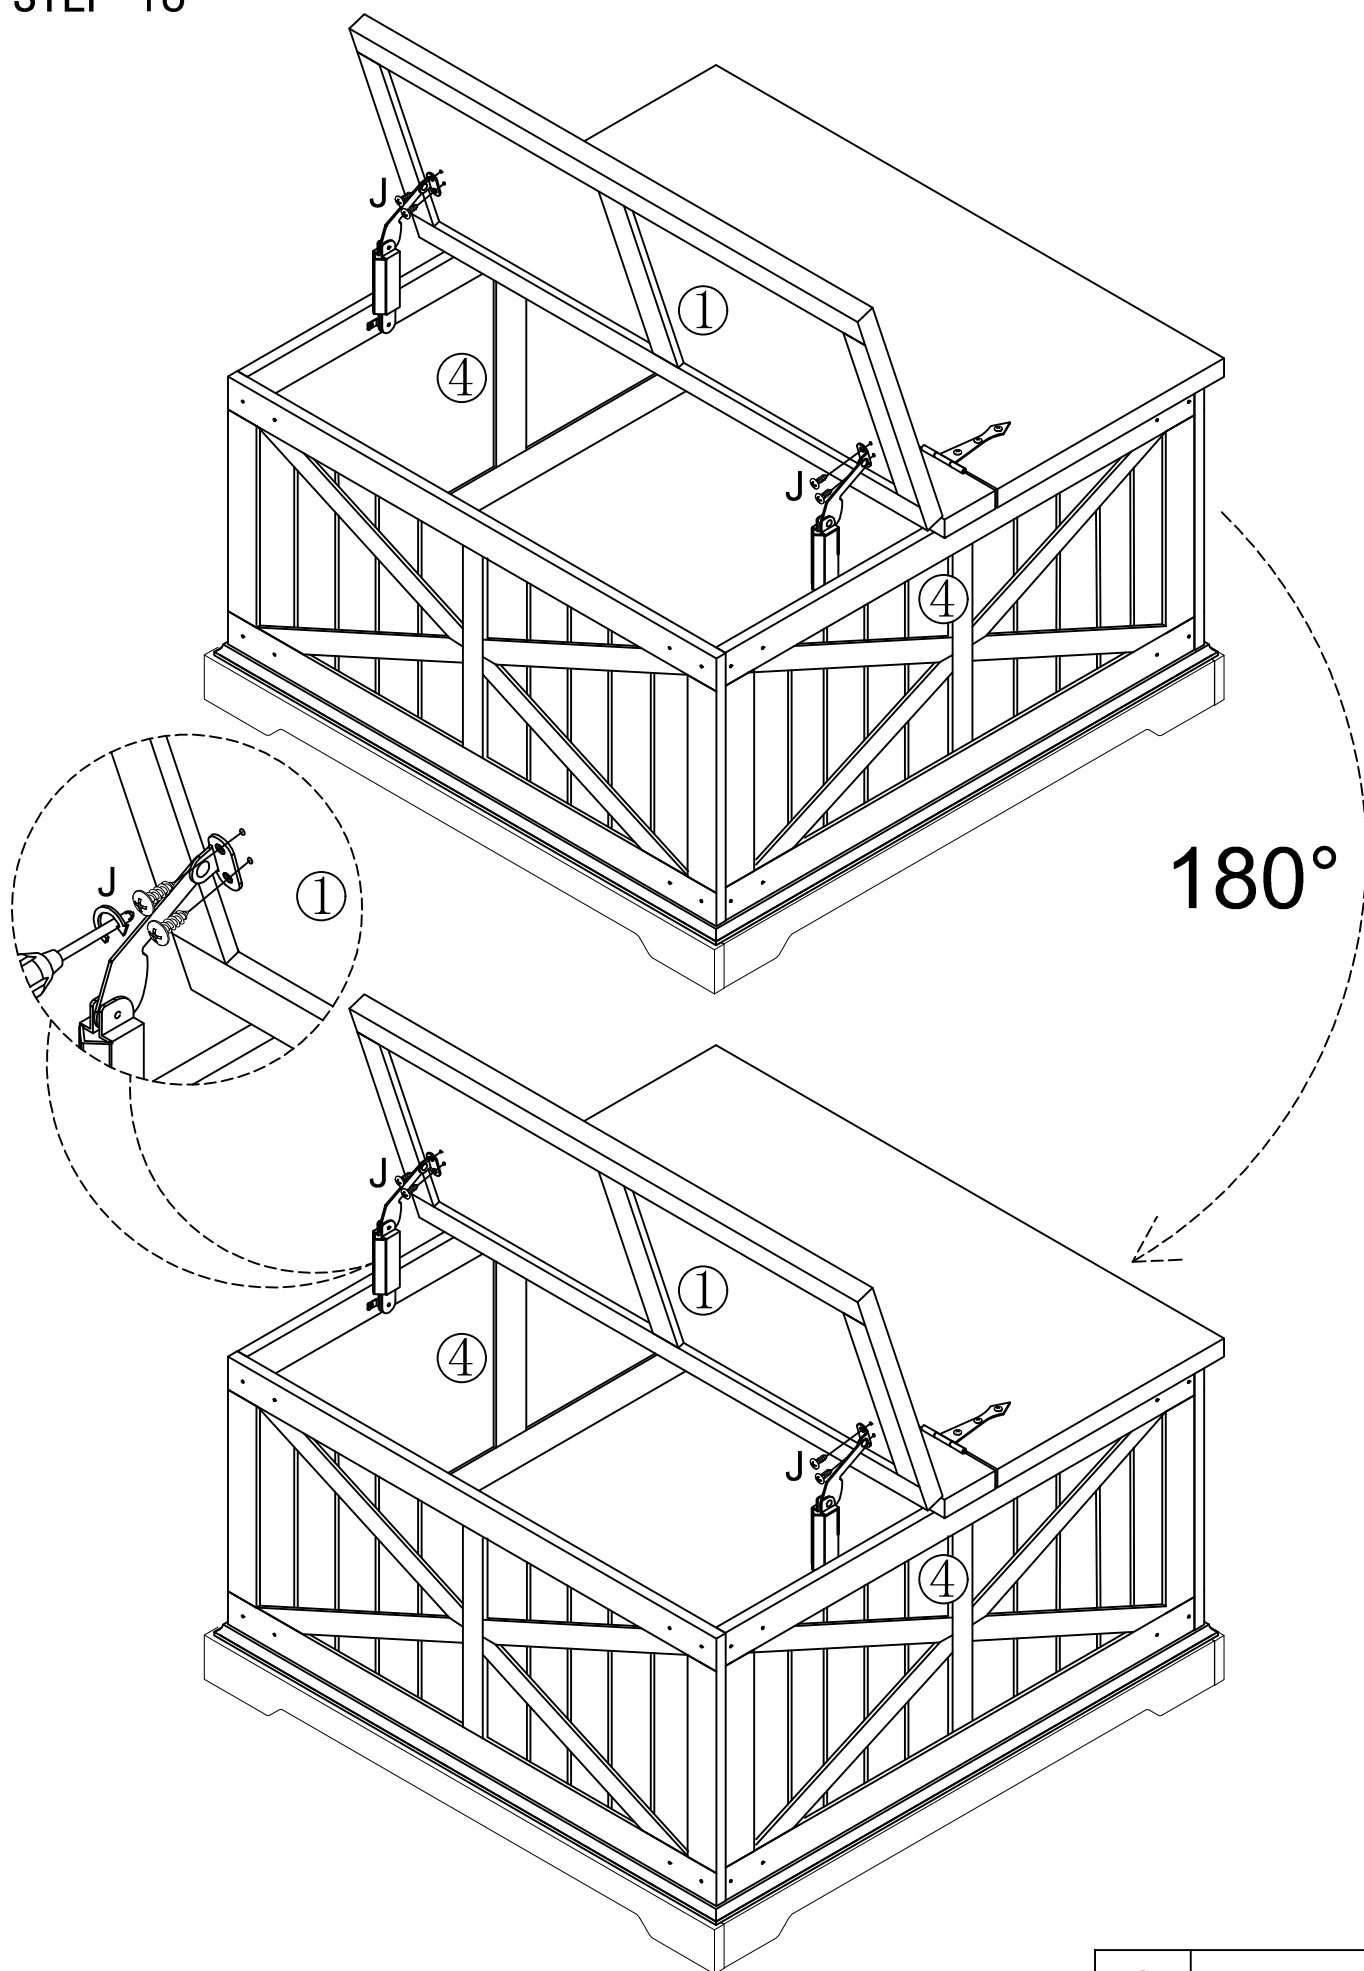

J X 8PCS

STEP 17

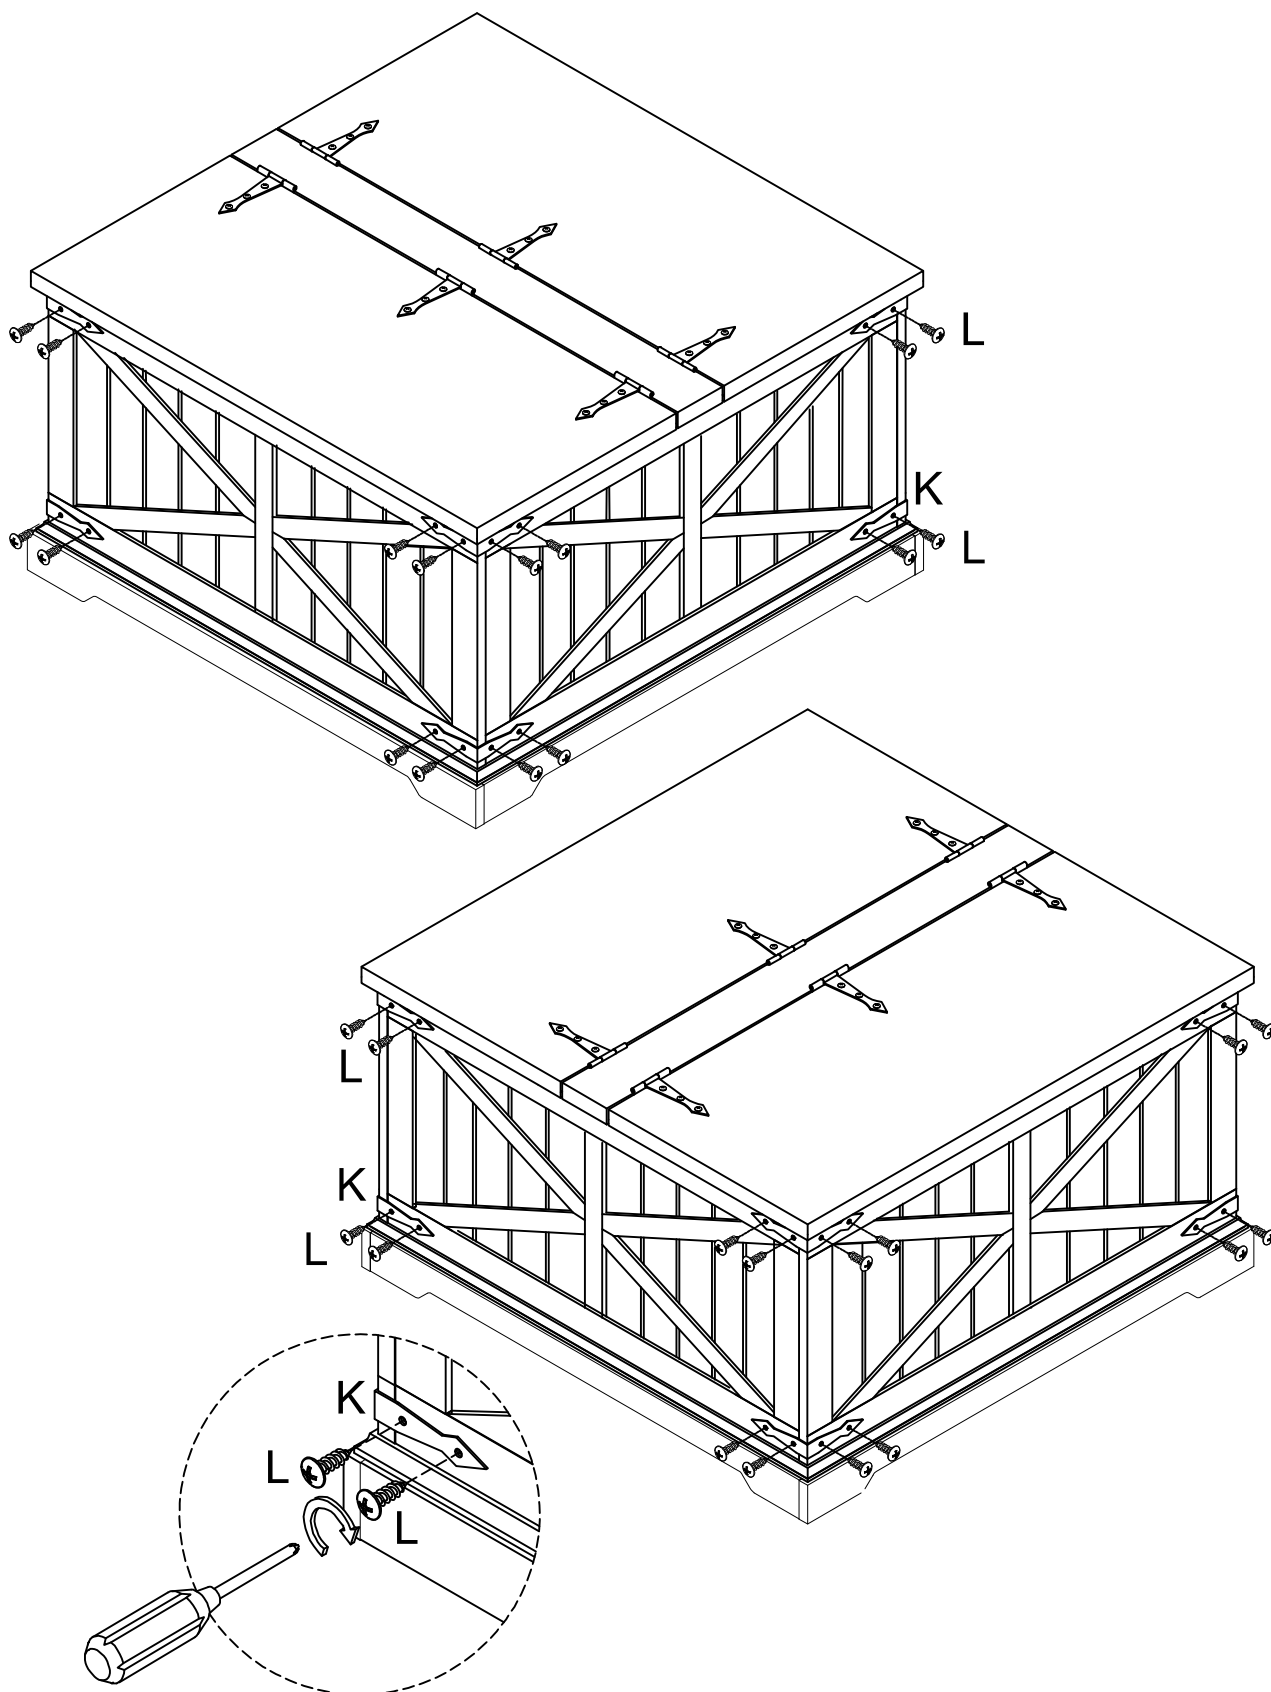

	K X 8PCS
	L X 32PCS

STEP 18

