




10 x 12 FT

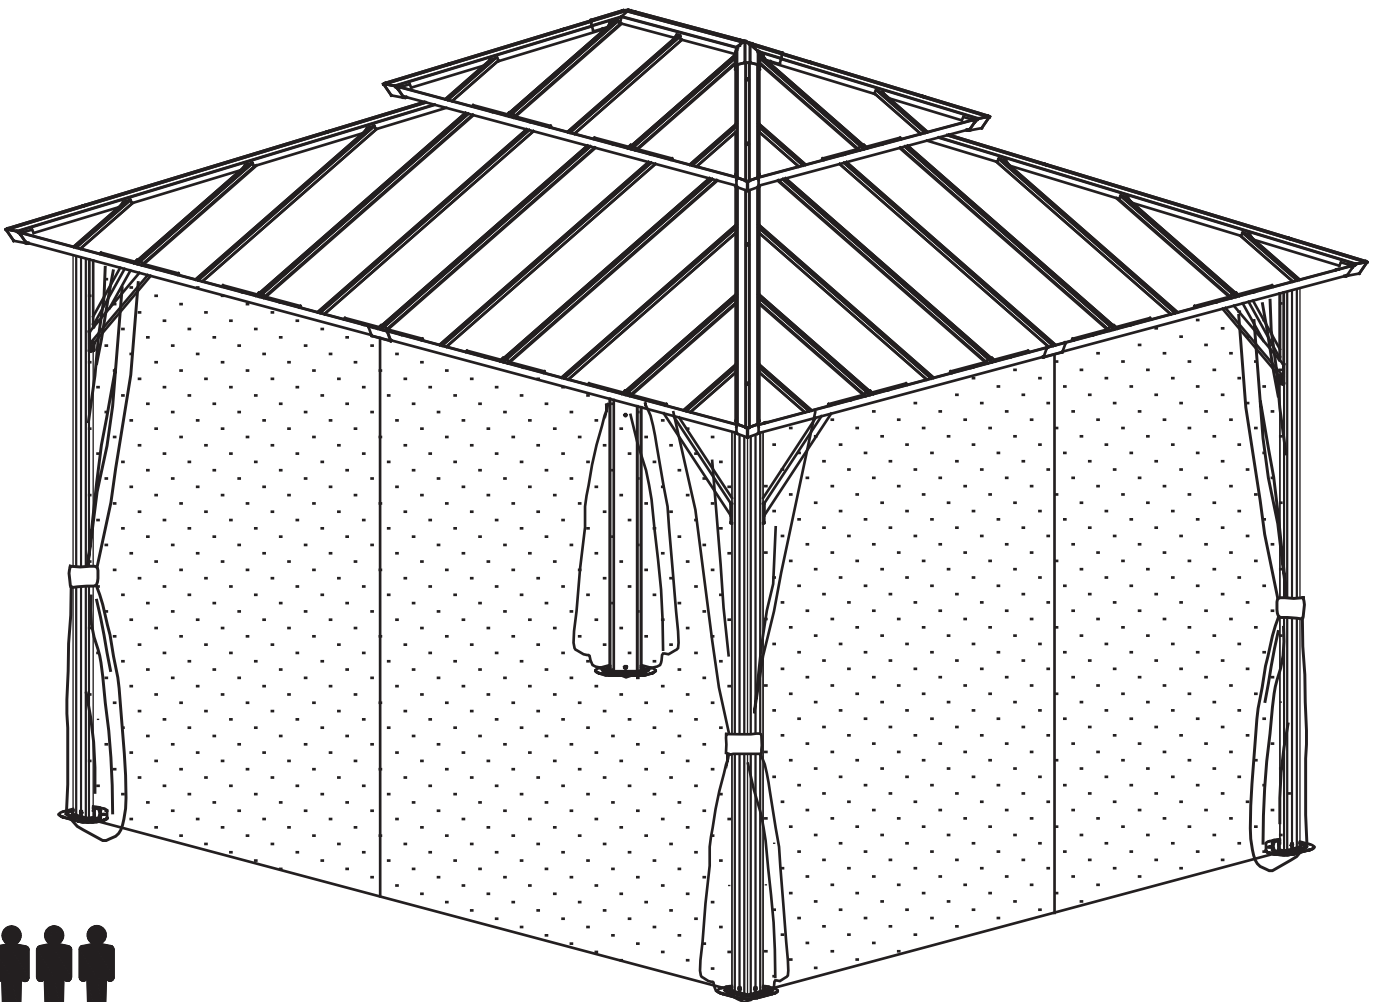

WQG-028-5




Need at least three people to work together

REQUIRED TOOLS







(A2) 4x

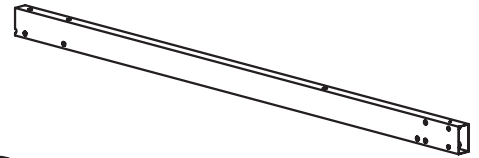


(B3) 2x

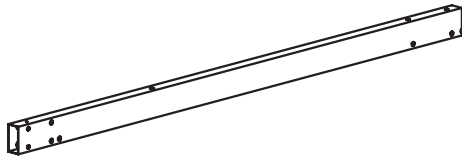


(B4) 2x

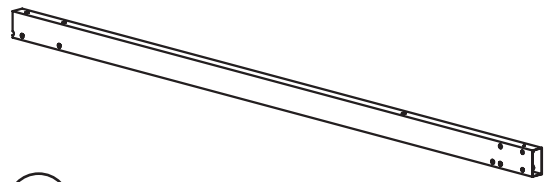


(B5) 2x

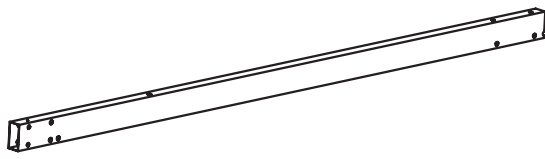


(B6) 2x

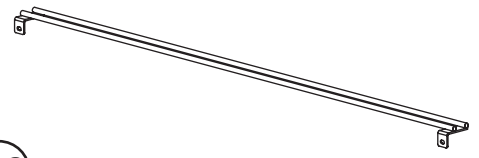


(C2) 4x

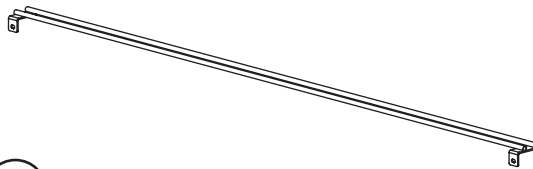


(C3) 4x




(D1) 2x

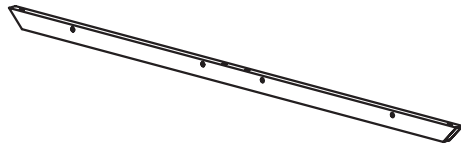


(D2) 2x

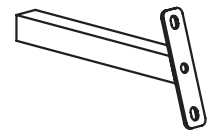


(D7) 4x

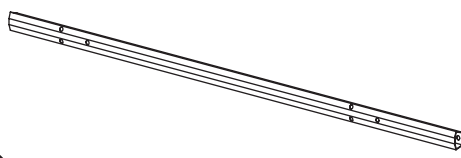


(E1) 4x

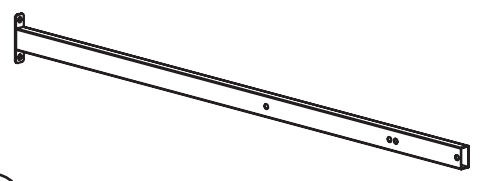

(E2) 2x

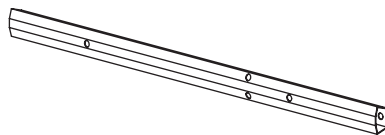

(E3) 4x

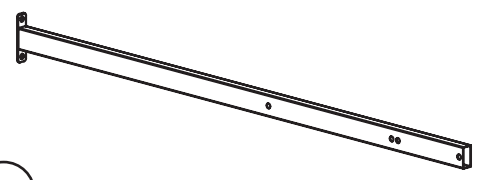





















(E14) 2x











(F1) 2x






(F2) 2x

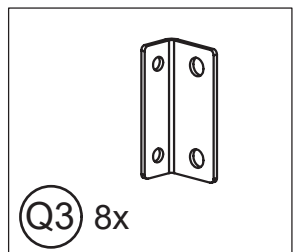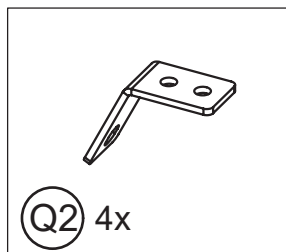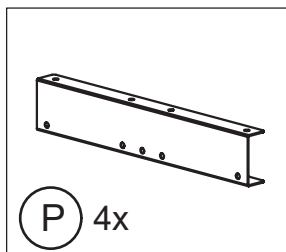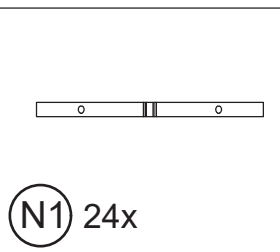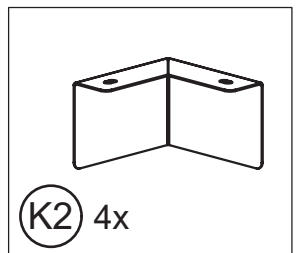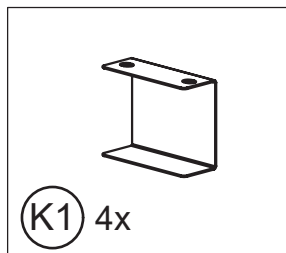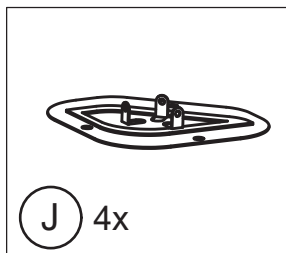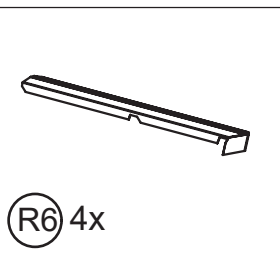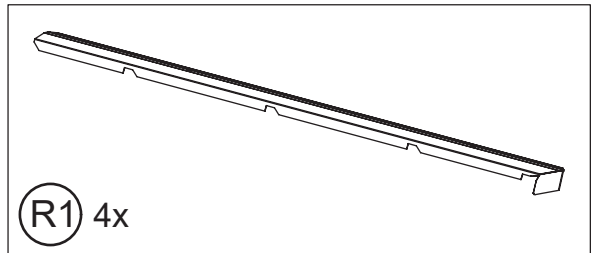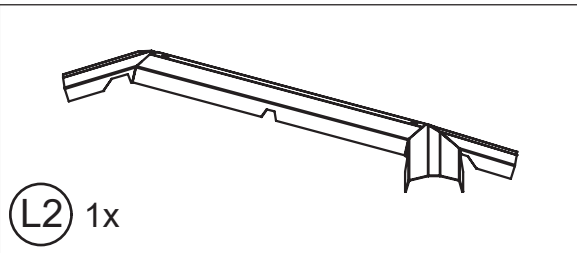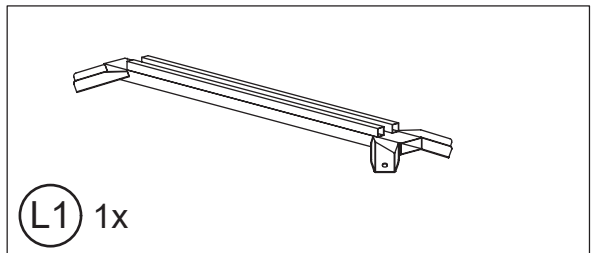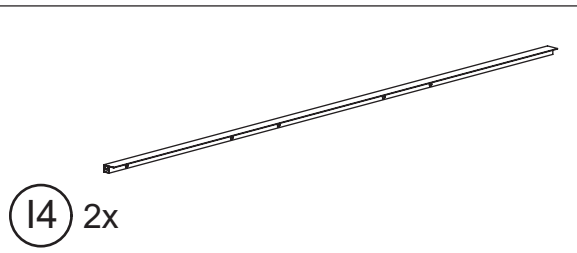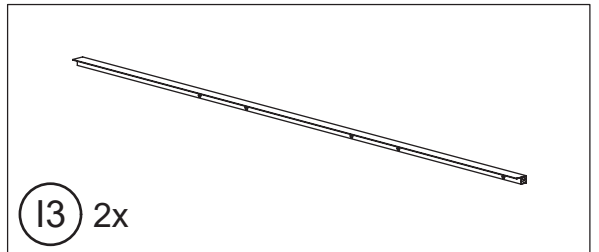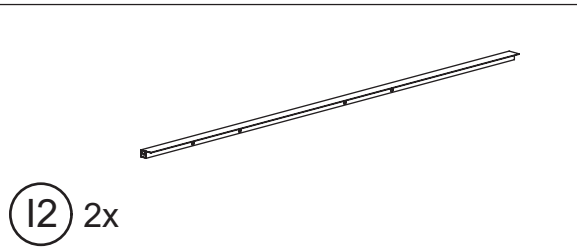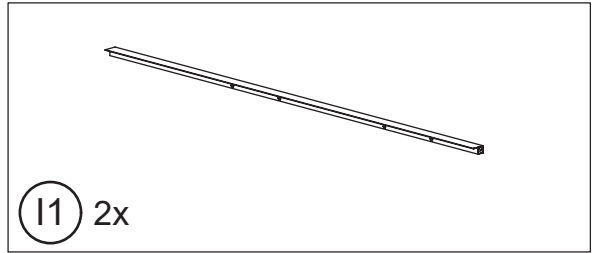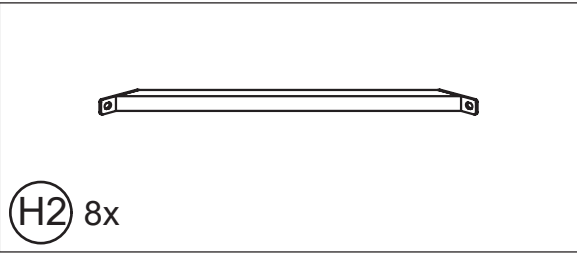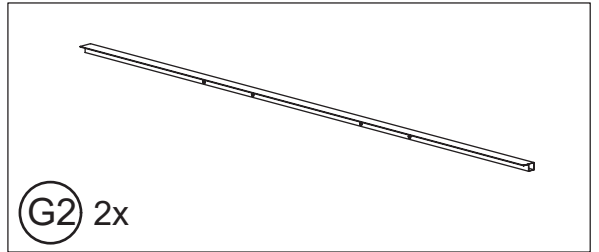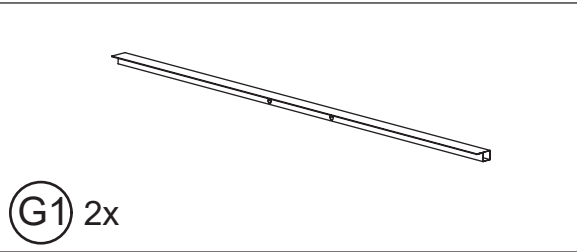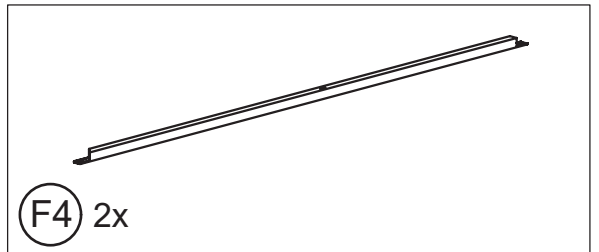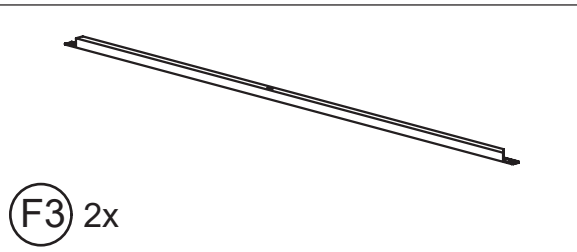

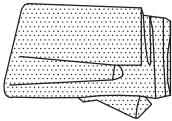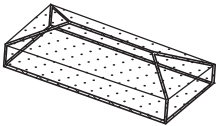			
W2 4x	W3 4x	W4 4x	W5 8x
			
Y 10x	Y1 88x	Y2 76x	M1 4x
			
M2 4x	M3 1x	O1 4x	O2 4x
			
O3 4x	O4 4x	O5 6x	S1 4x
			
S2 4x	S3 2x	M6x15 1 298x	M5x15 2 16x
			
M6x12 3 2x	ST4.8x12 4 8x	M6x25 6 2x	7 1x
			
8 16x	M6x40 9 24x	10 12x	M6x60 11 2x
			
12 8x	4mm 13 1x	4mm 15 1x	16 1x

<1>

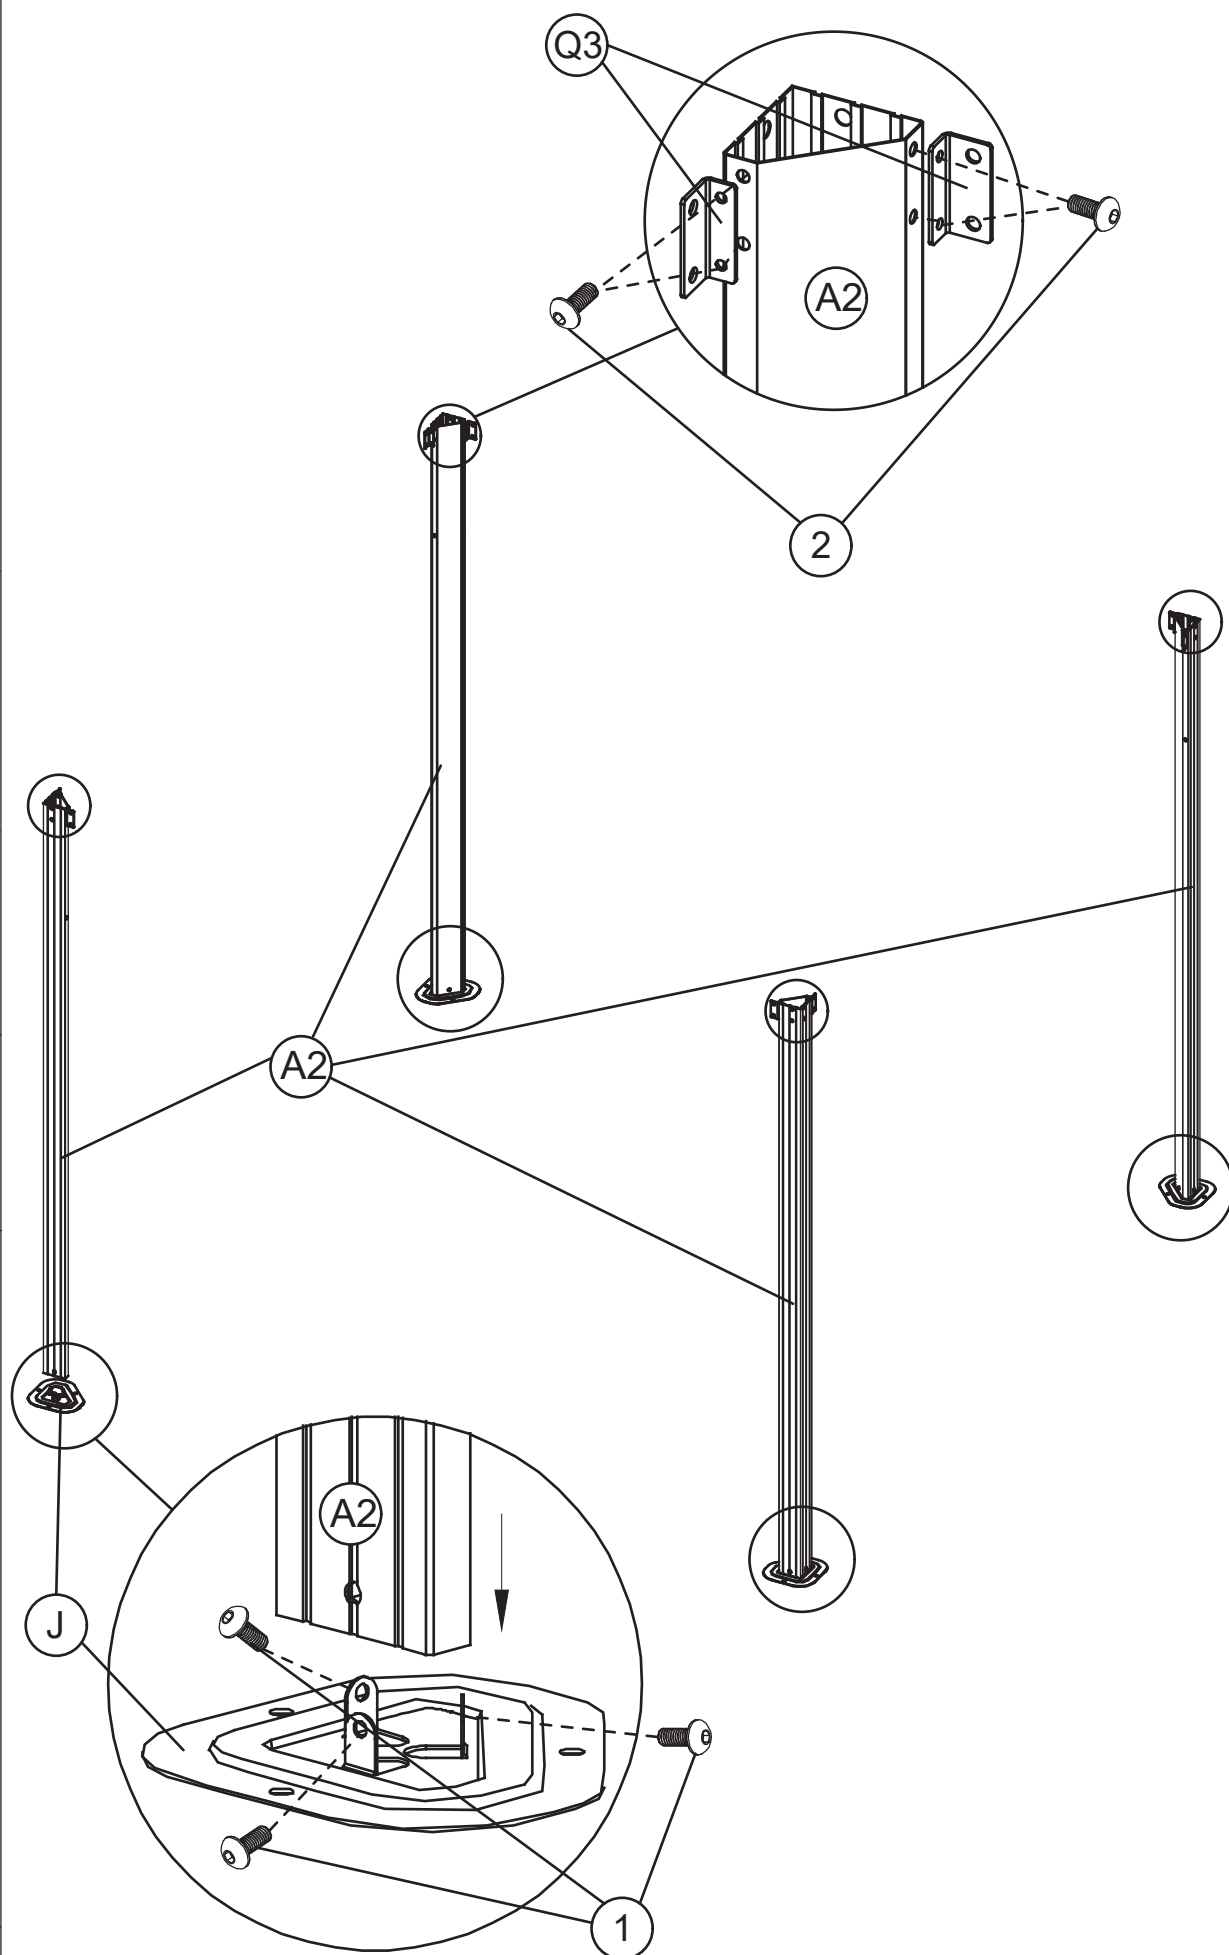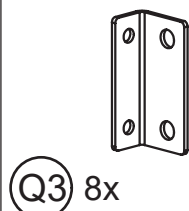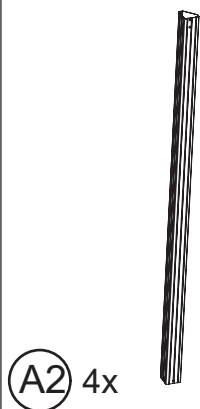



(B3) 2x



(B4) 2x



(B5) 2x



(B6) 2x




(P) 4x



M6x15

(1) 16x

<2>

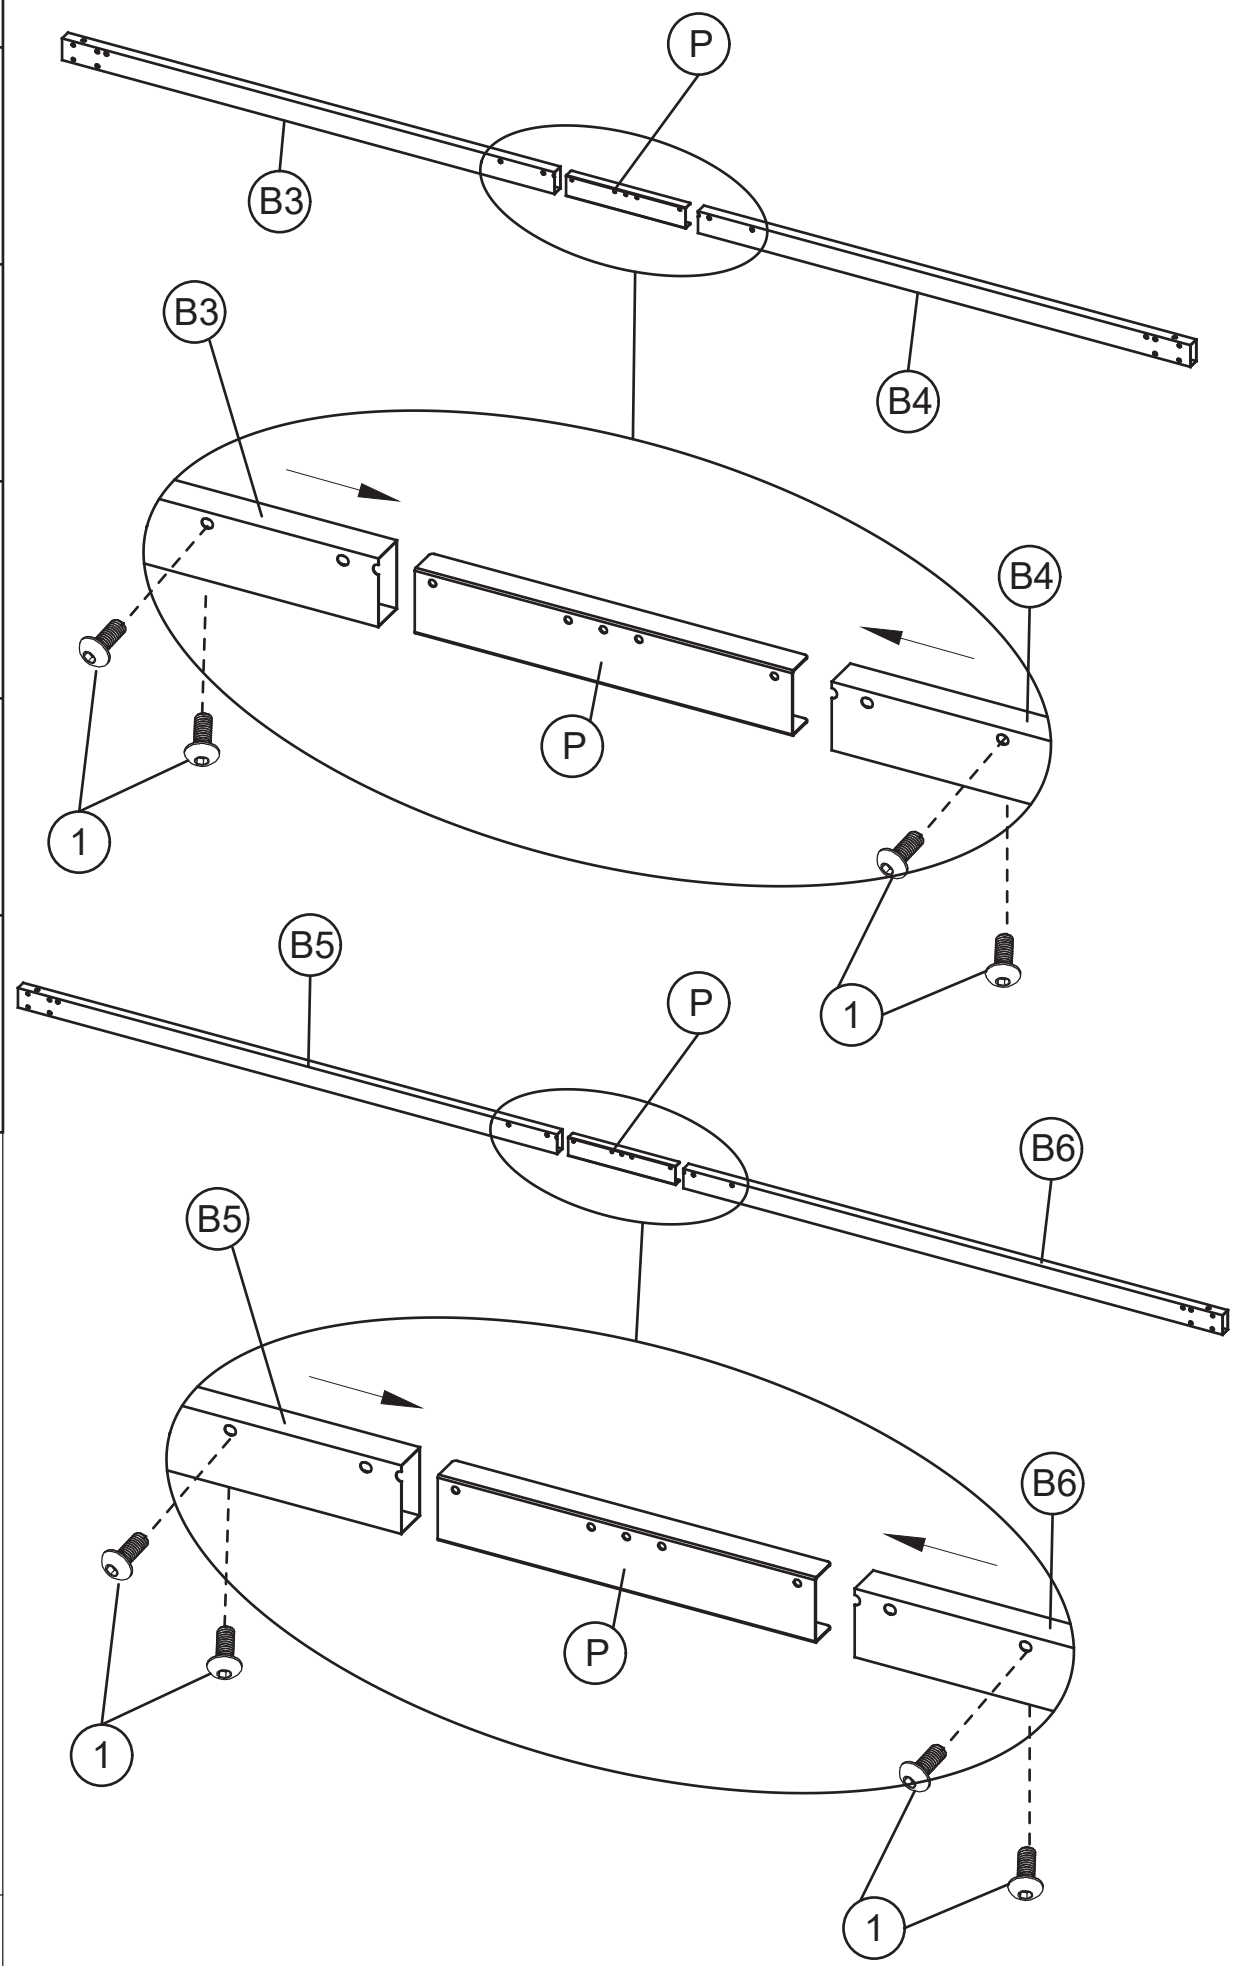




M6x15

1 16x



8 16x

<3>

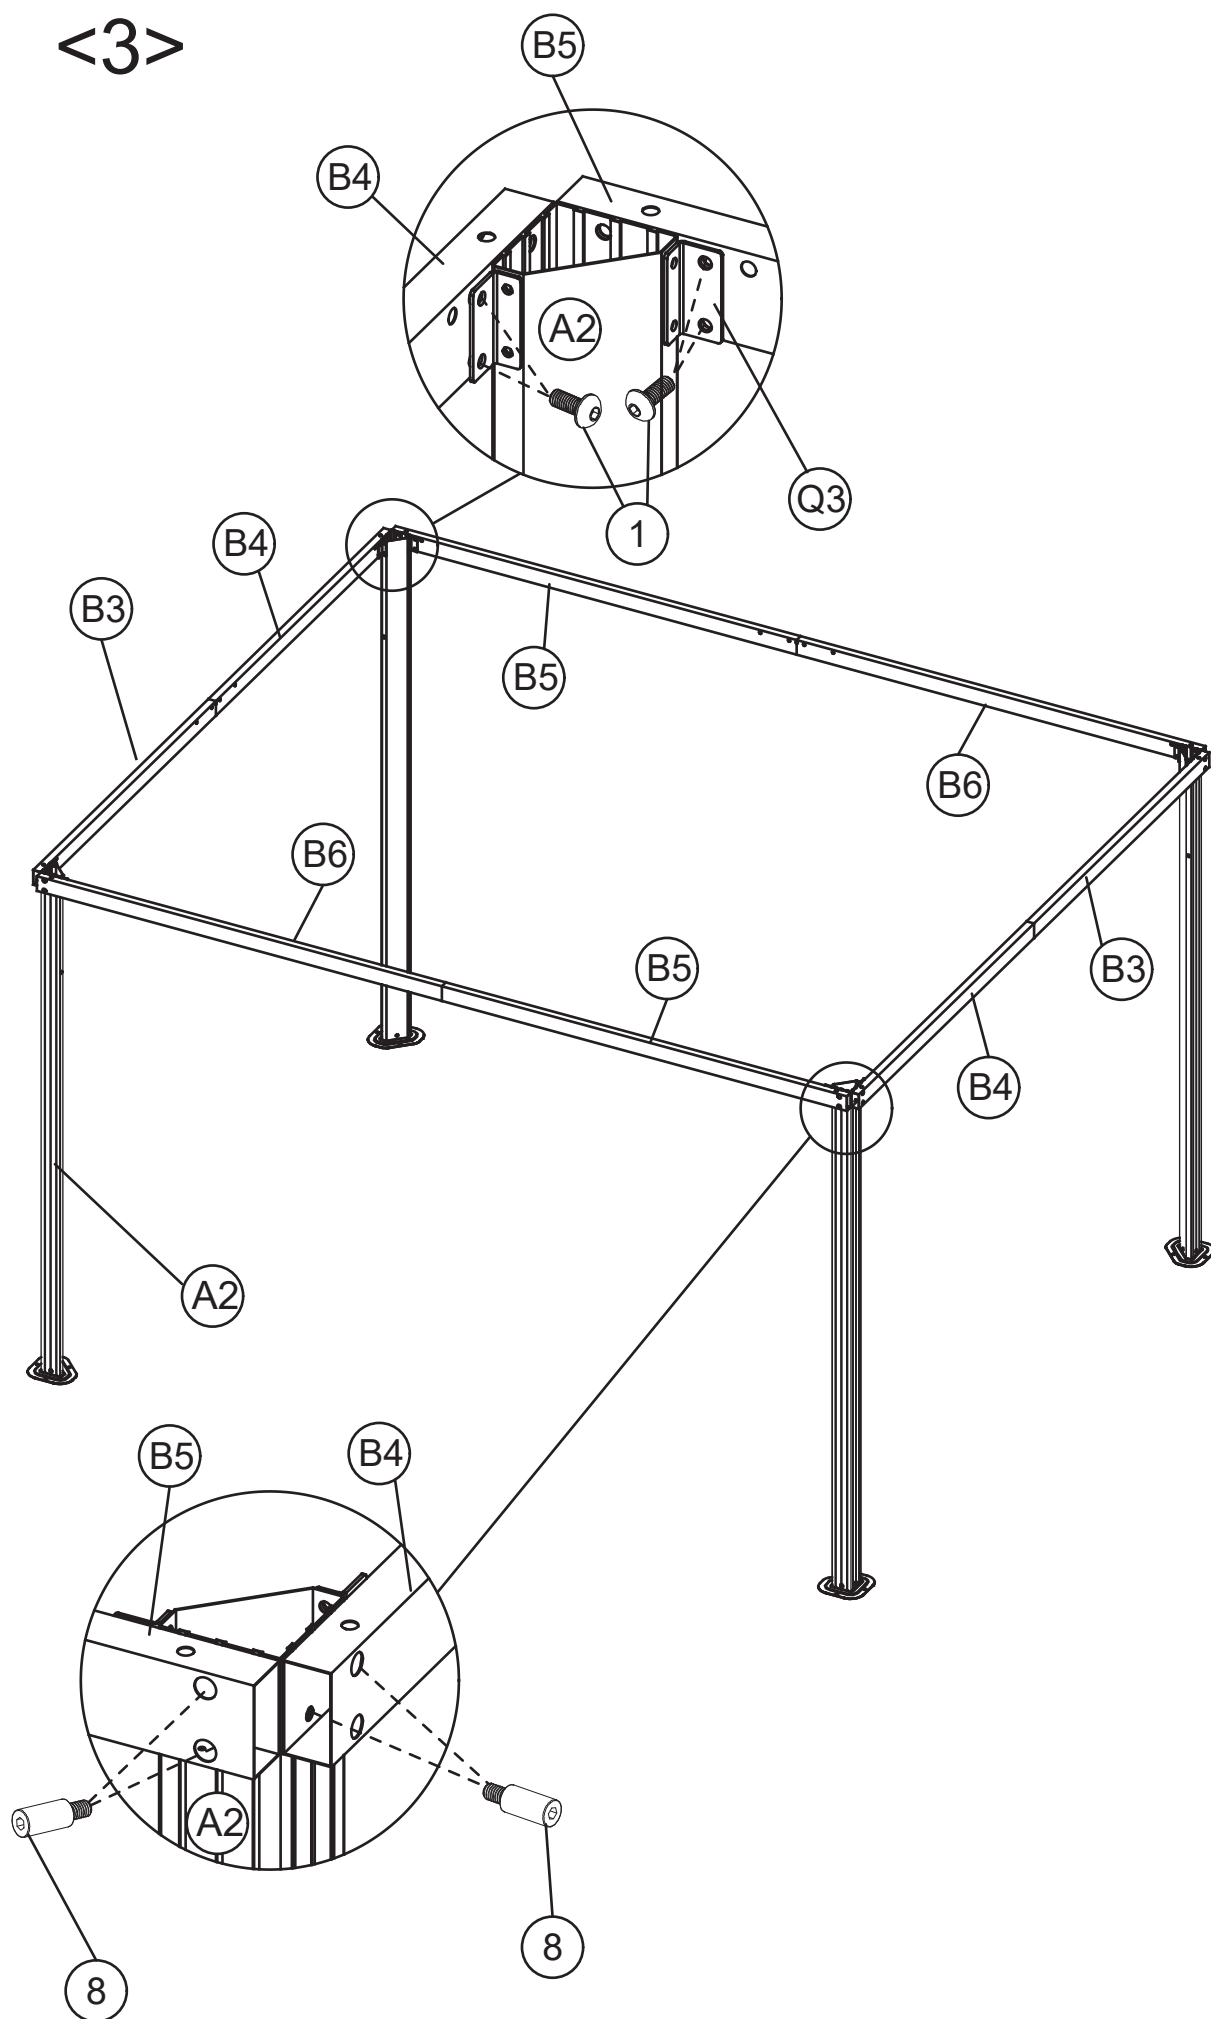



(H2) 8x



M6x15

(1) 16x




(10) 12x


<4>

124 in.

101 in.

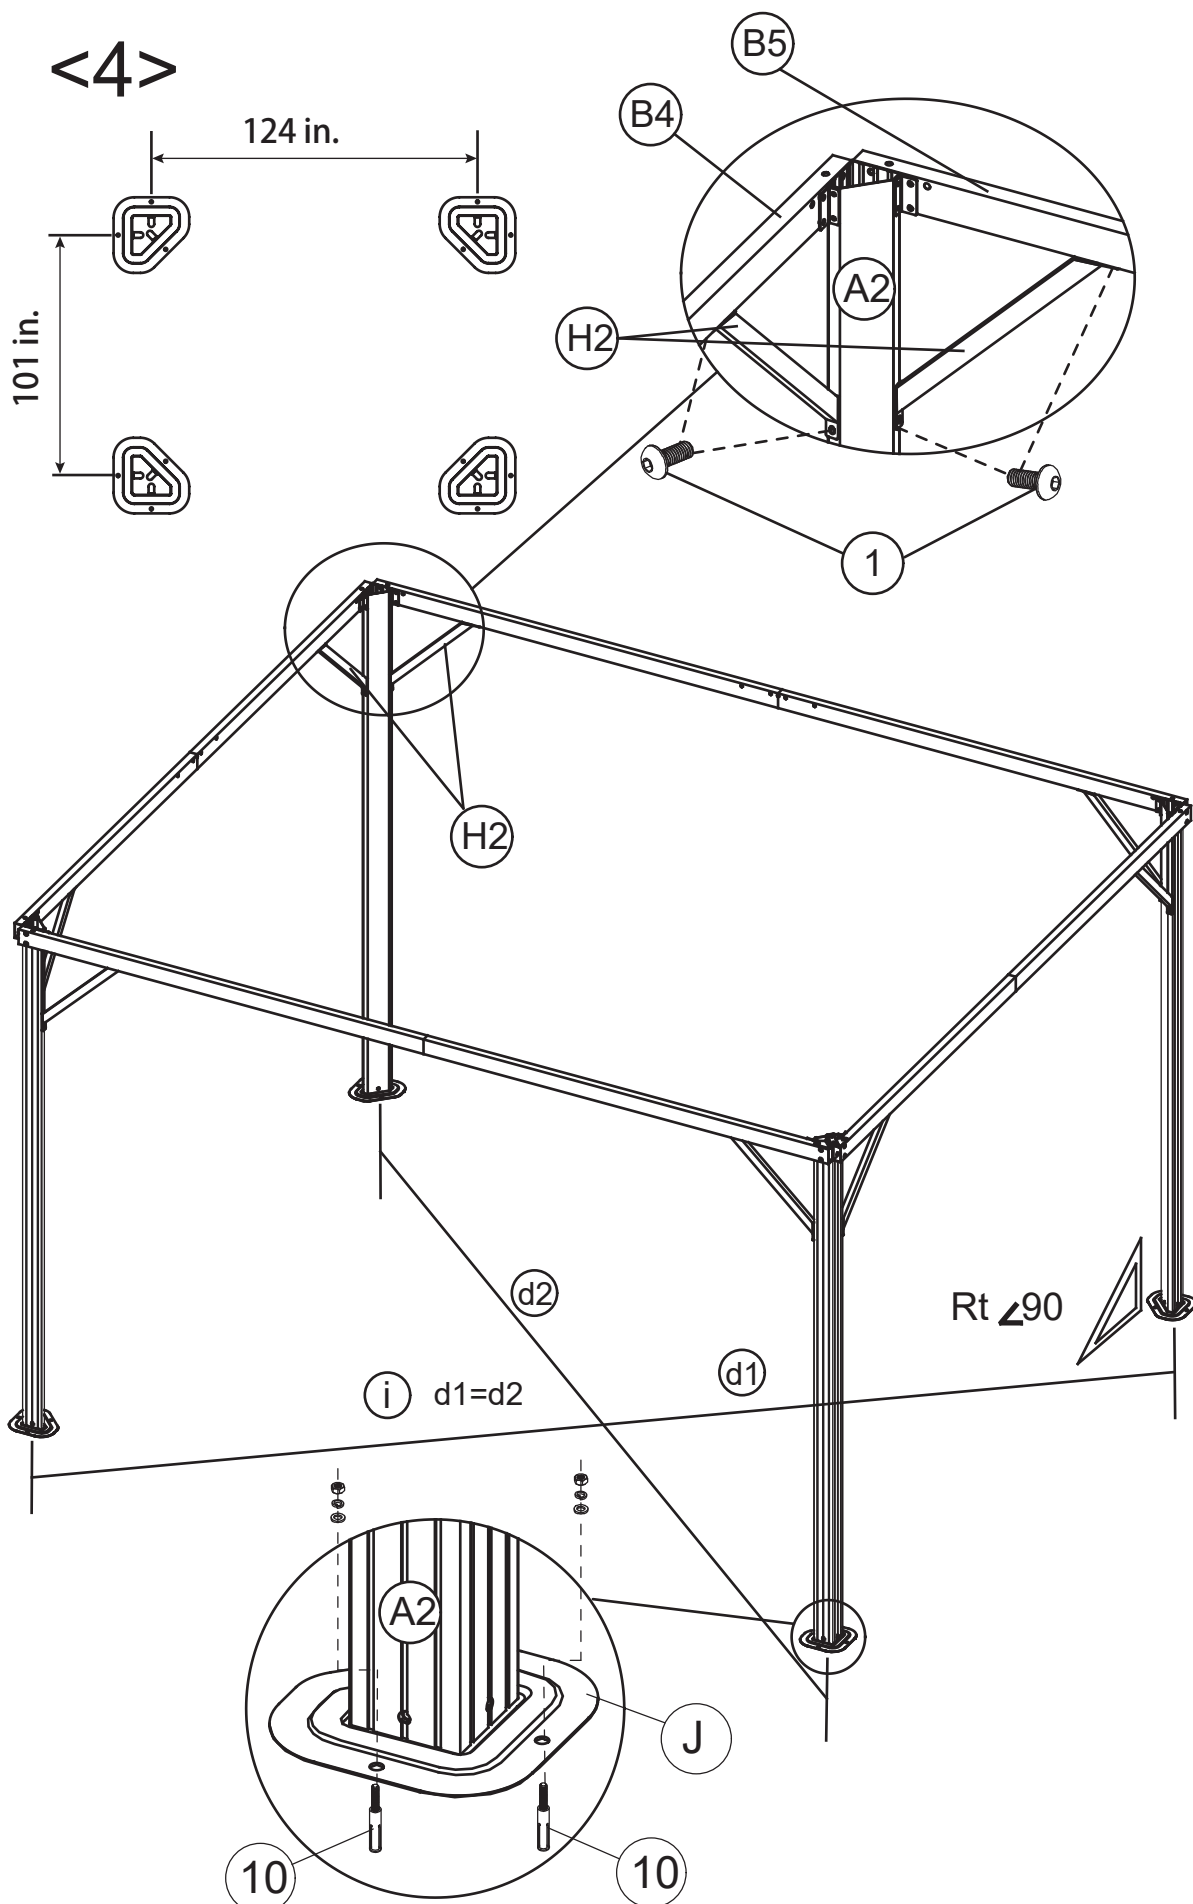

Tip: Before proceeding to the next step, measure to ensure that d1 is equal to d2 to achieve a square frame and the best results. If they are not equal, loosen the H2 screws and adjust accordingly. Keep the beam perpendicular to the post, the post perpendicular to the ground, and ensure the beam remains level.



(D1) 2x



(D2) 2x





(W2) 4x



M6x15

(1) 16x

<5>

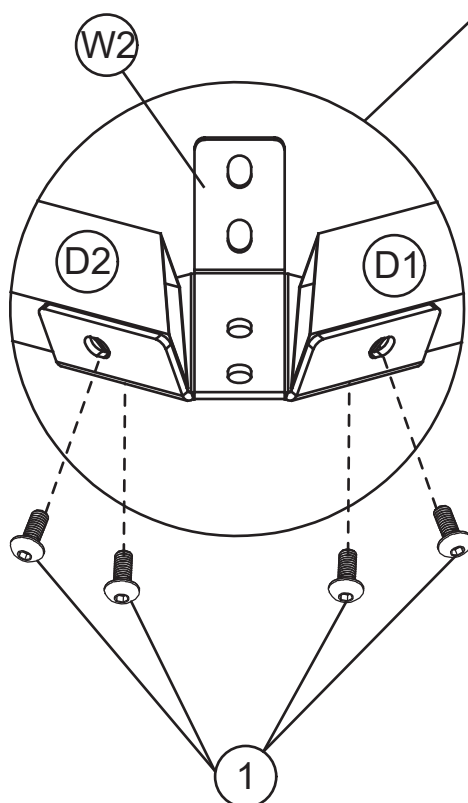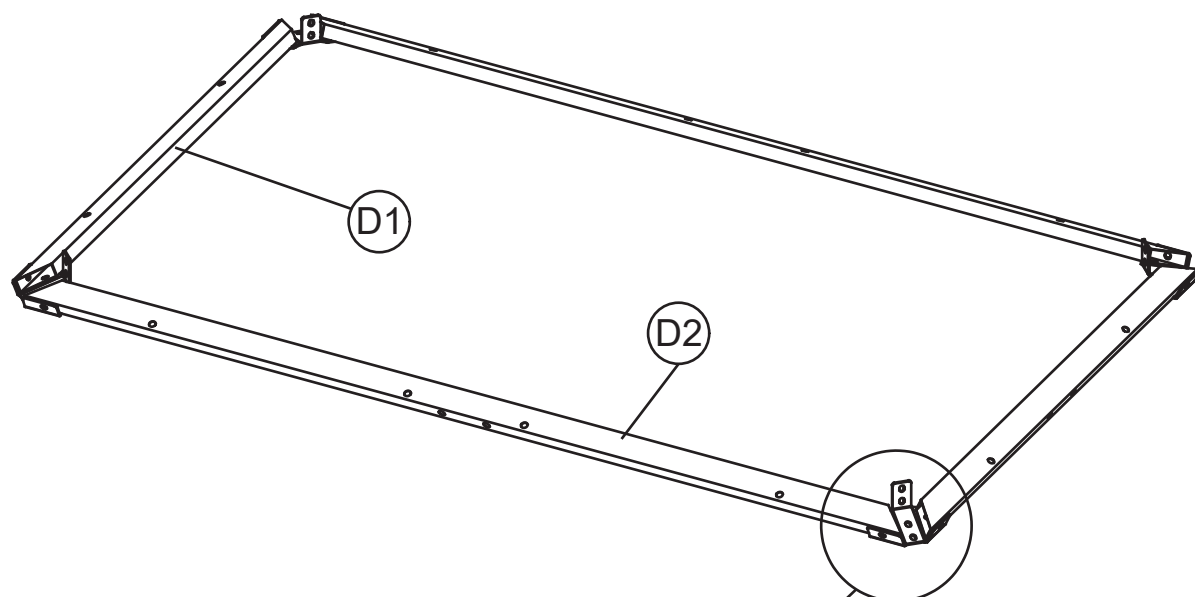




E2 2x



E14 2x



Q2 4x




W4 4x



M6x15

1 20x

<6>

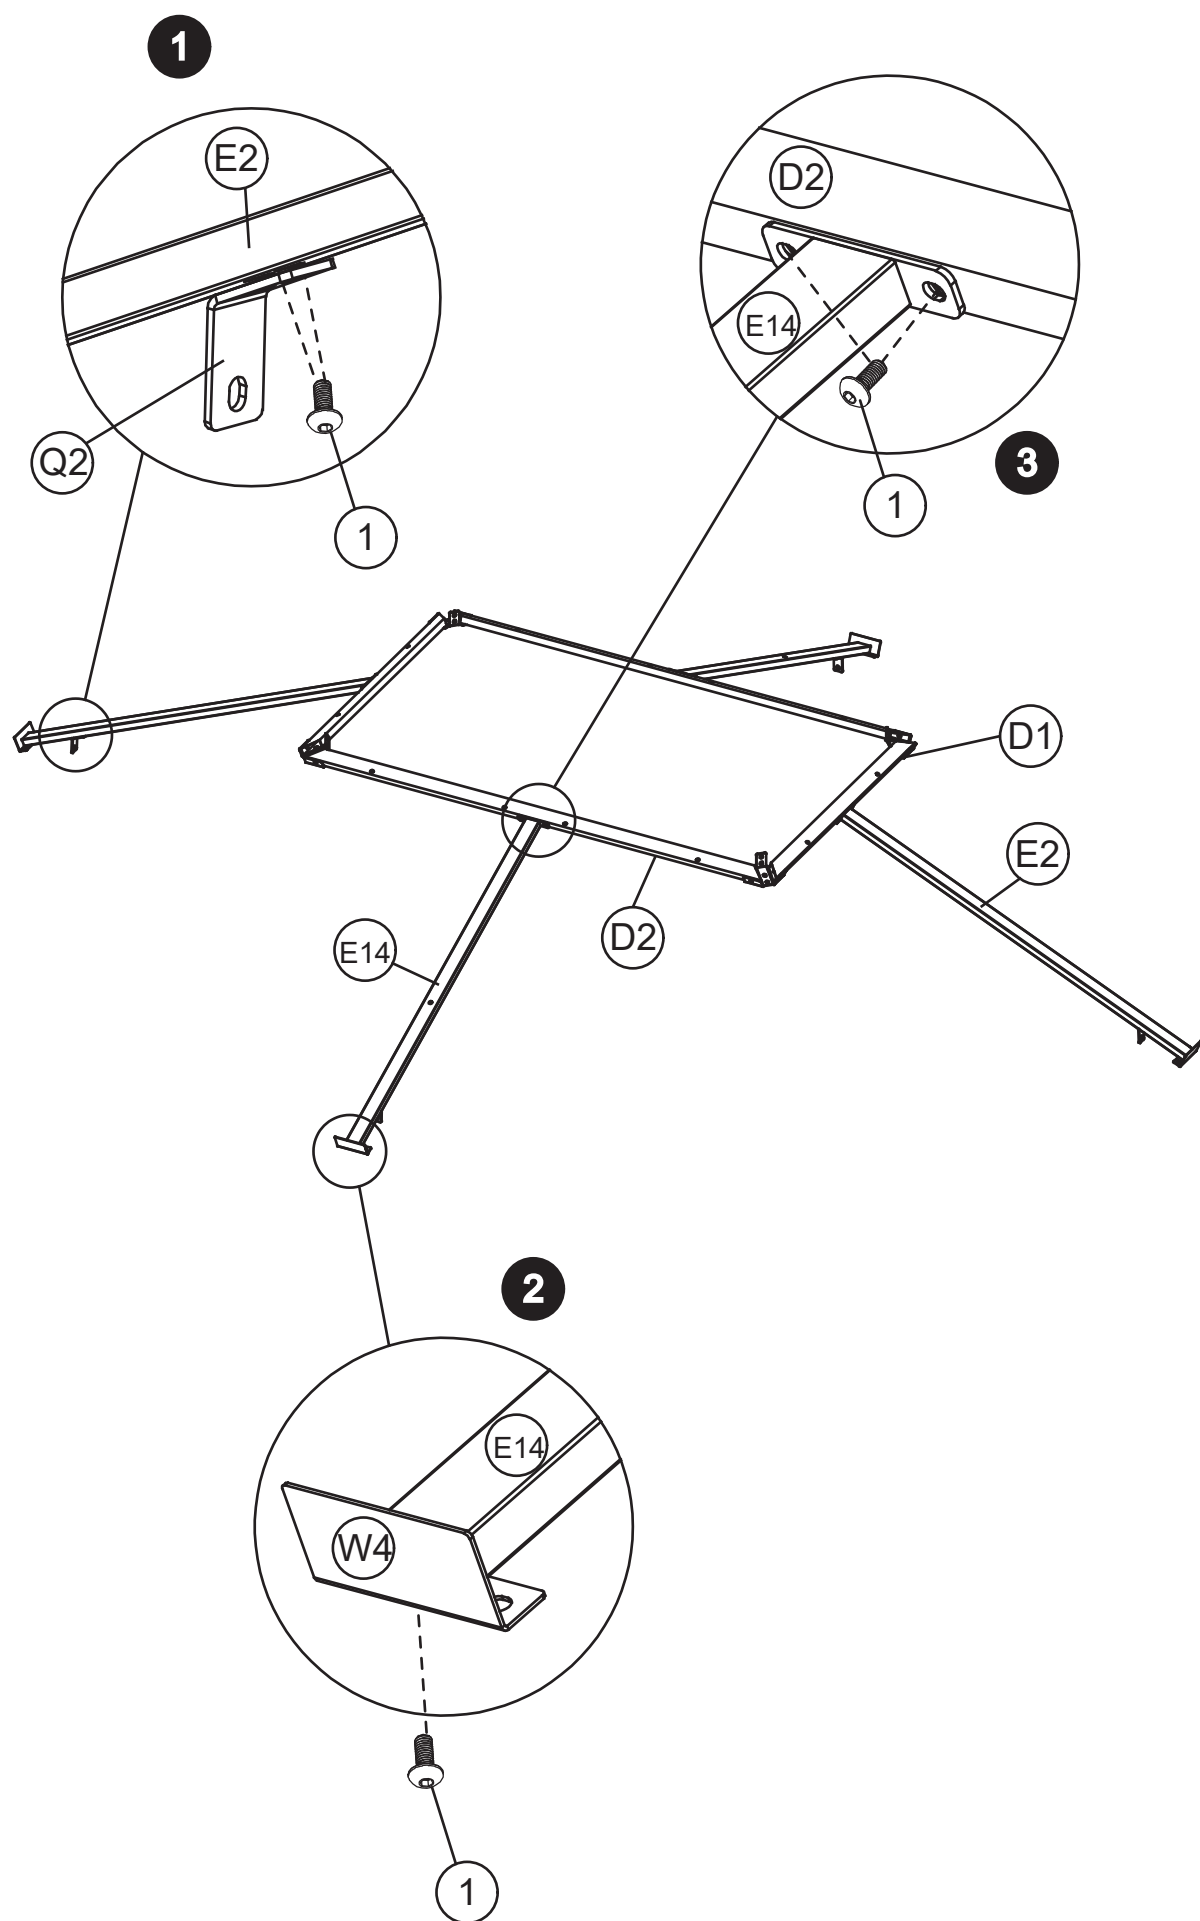




M6x15

1 4x

<7>

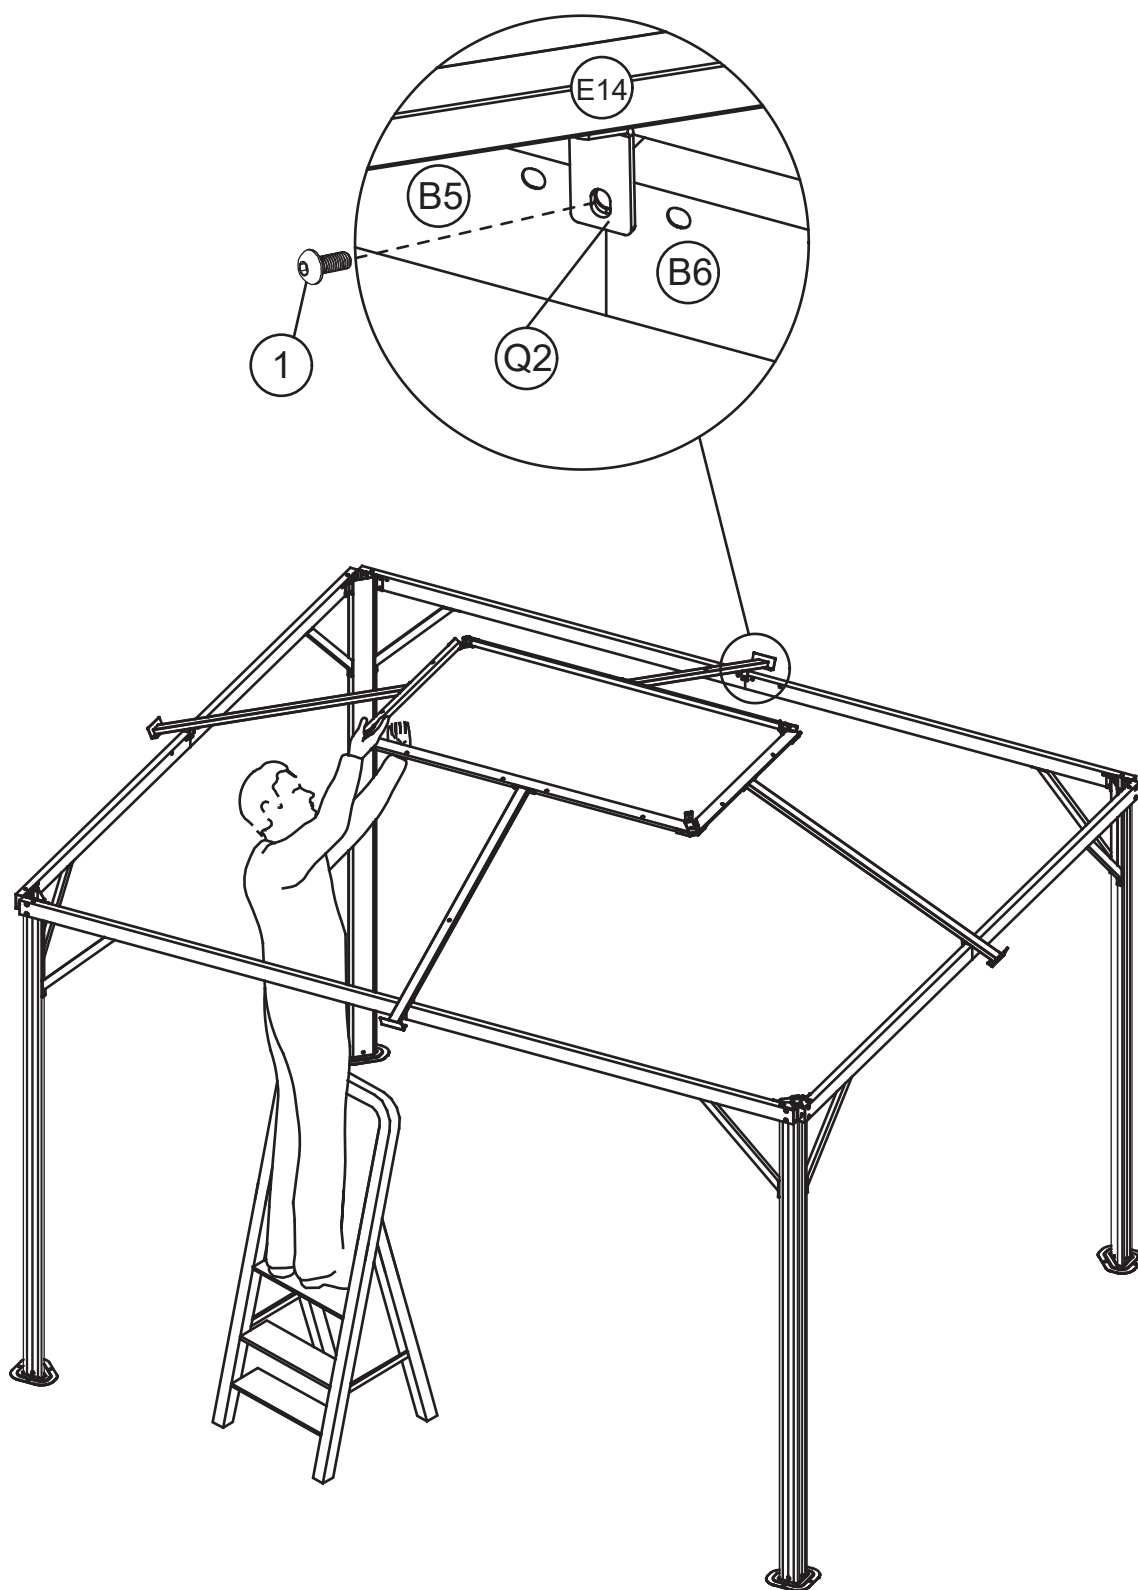

1. Have one person stand on the ladder to lift and hold D1 and D2 in place, while the other secure it by fastening the E2 and E14 screws.
2. Do not release D1 and D2 until all E2 and E14 screws are fully tightened.



C2 4x




C3 4x



M6x15


1 16x

<8>

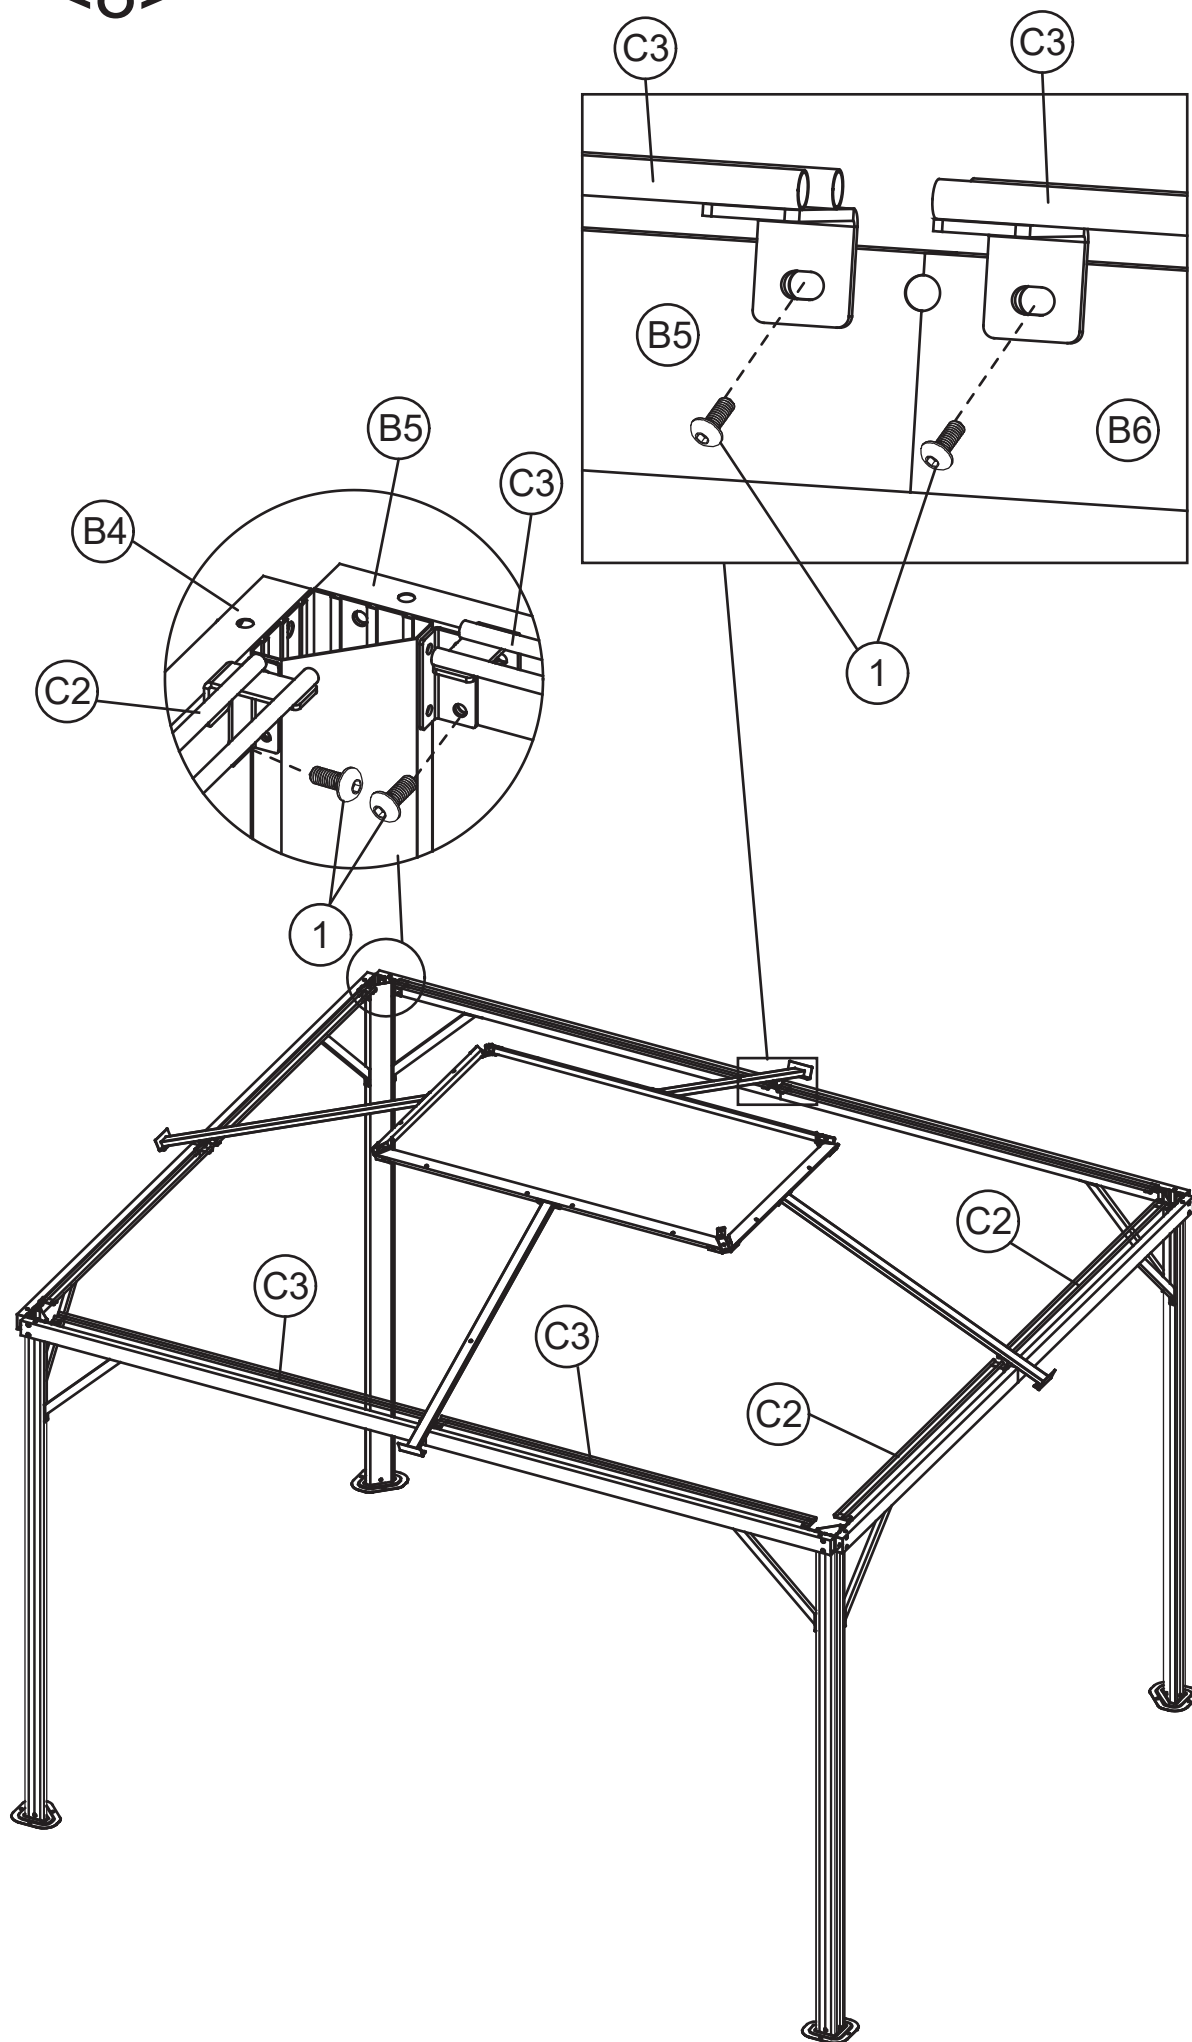



(K1) 4x



(K2) 4x



M6x15



(1) 8x




ST4.8x12

(4) 8x

<9>

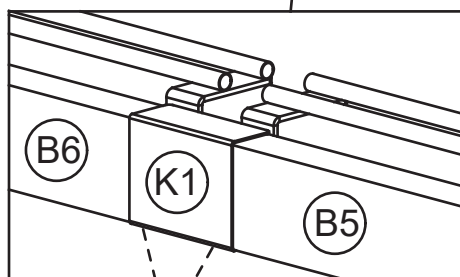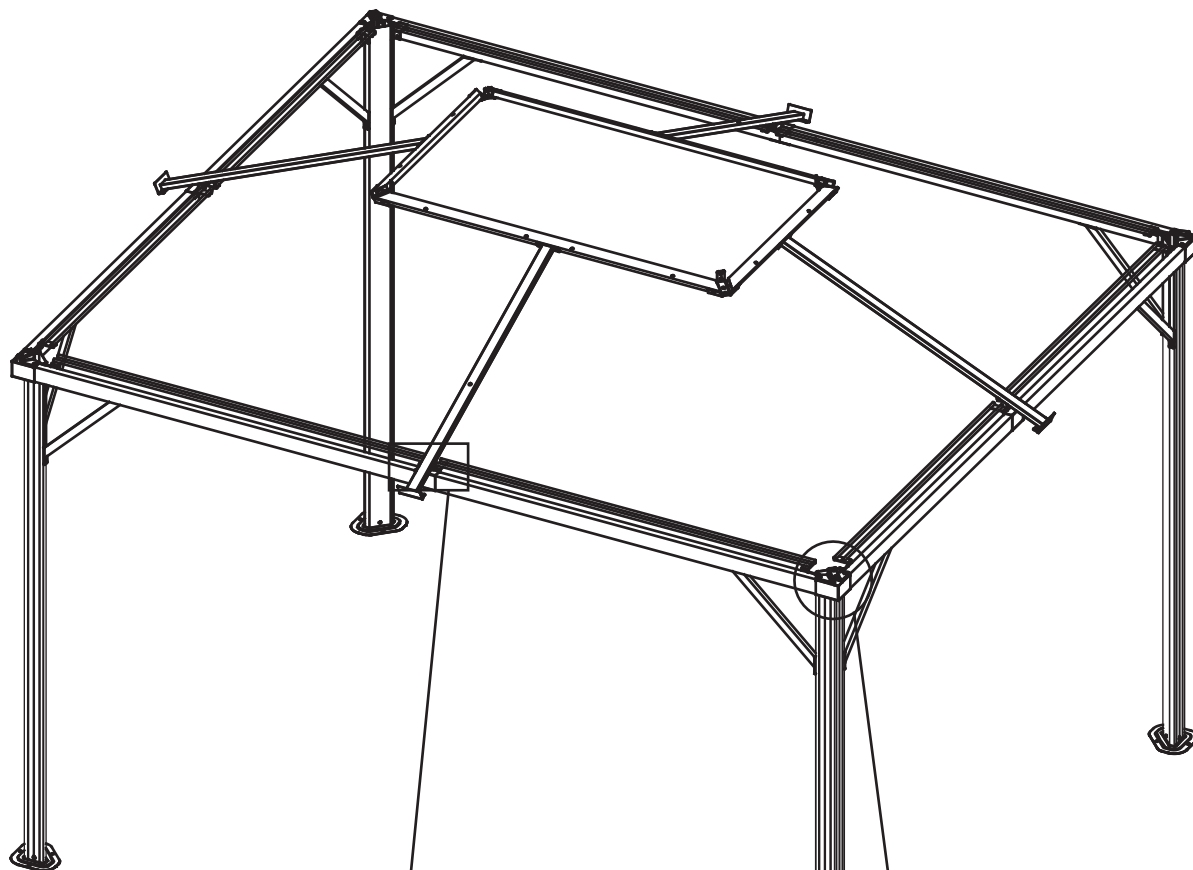

(1)

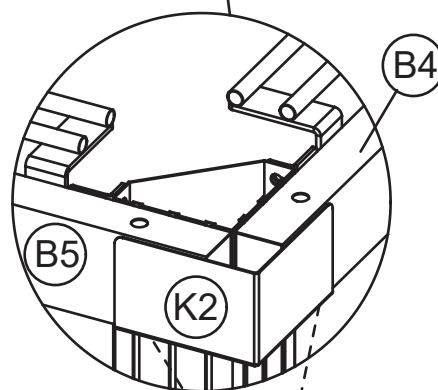

(4)



(E1) 4x



(W3) 4x




(W5) 4x



M6x15

(1) 32x

<10>

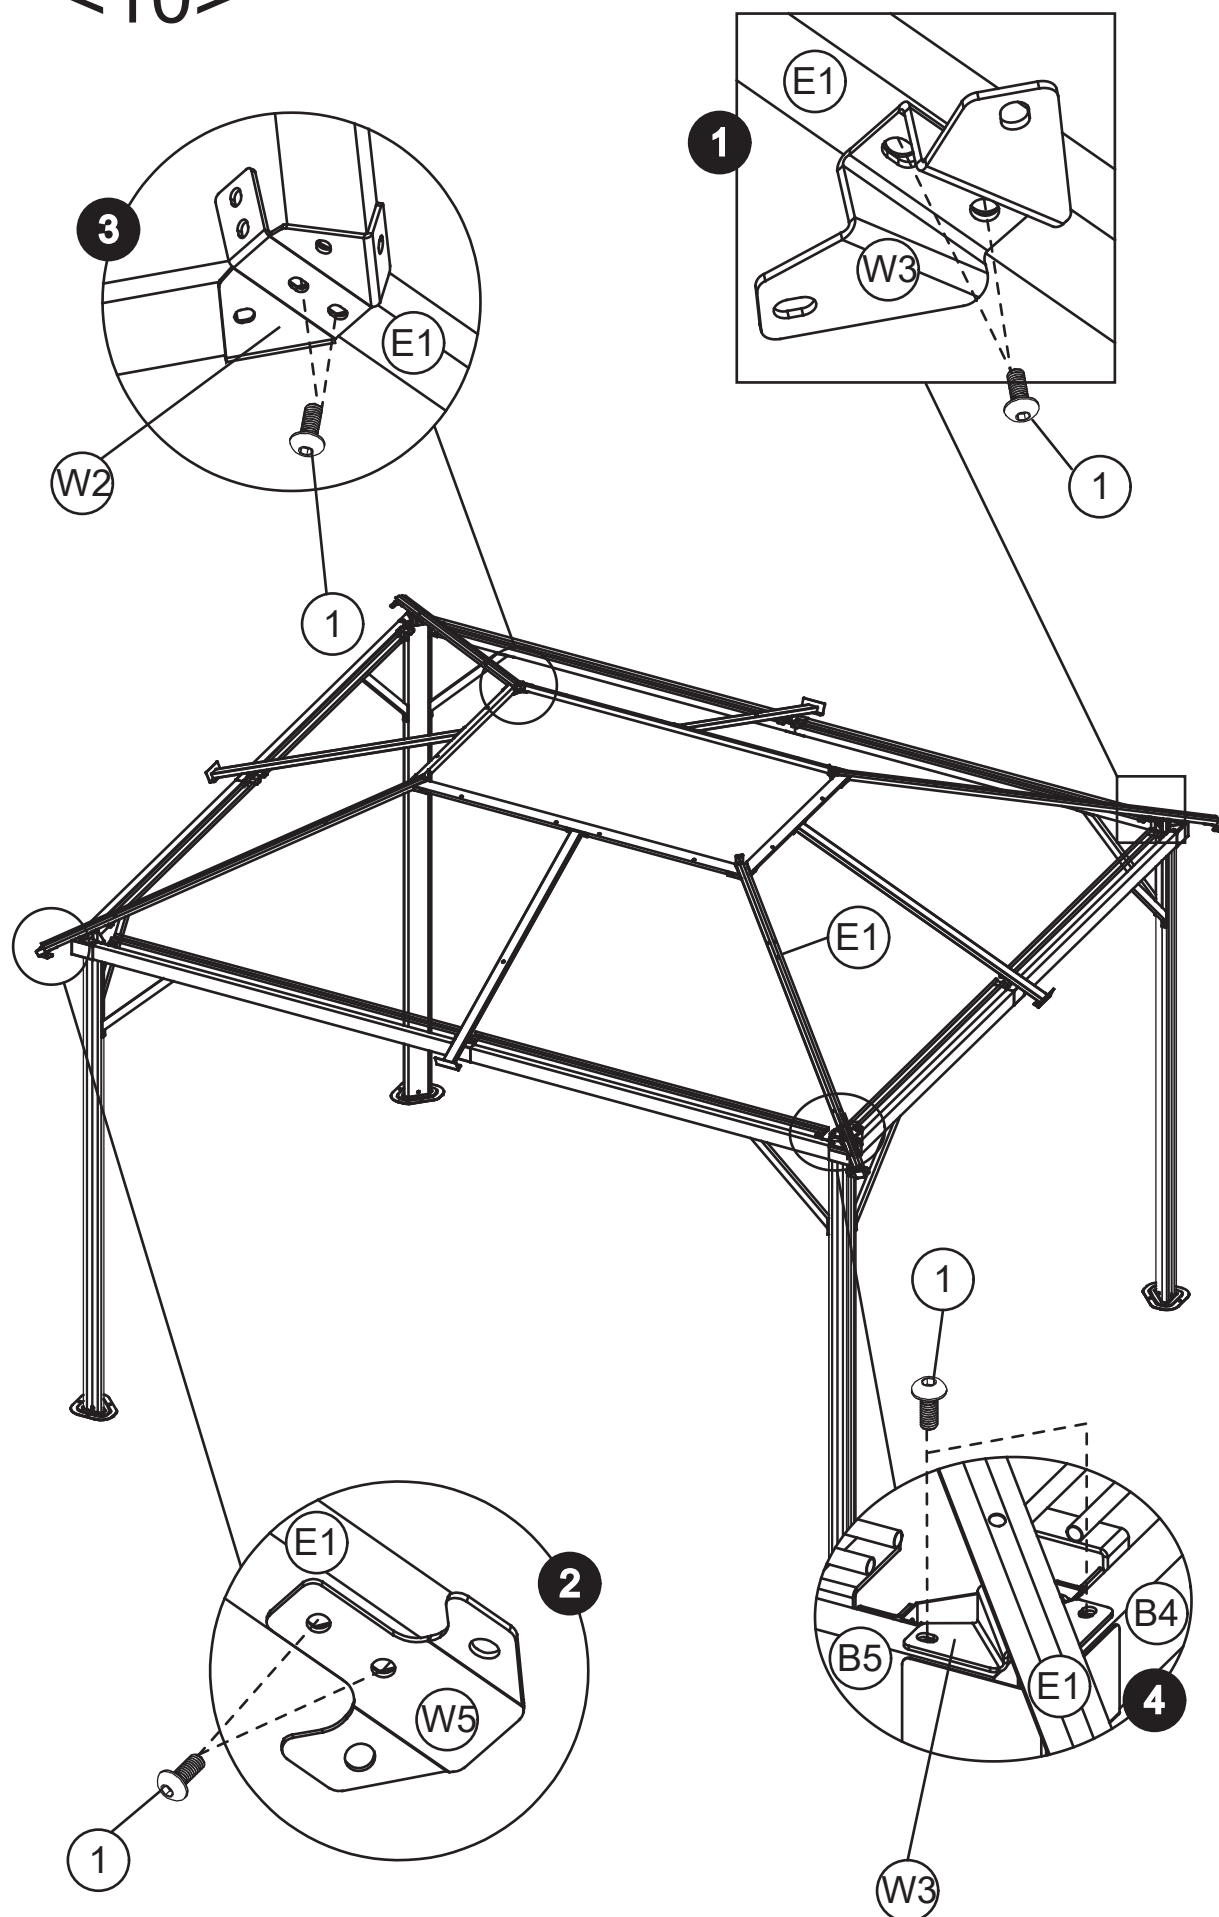

<11>



(F1) 2x



(F2) 2x



(F3) 2x



(F4) 2x




M6x15

(1) 6x



M6x12

(3) 2x

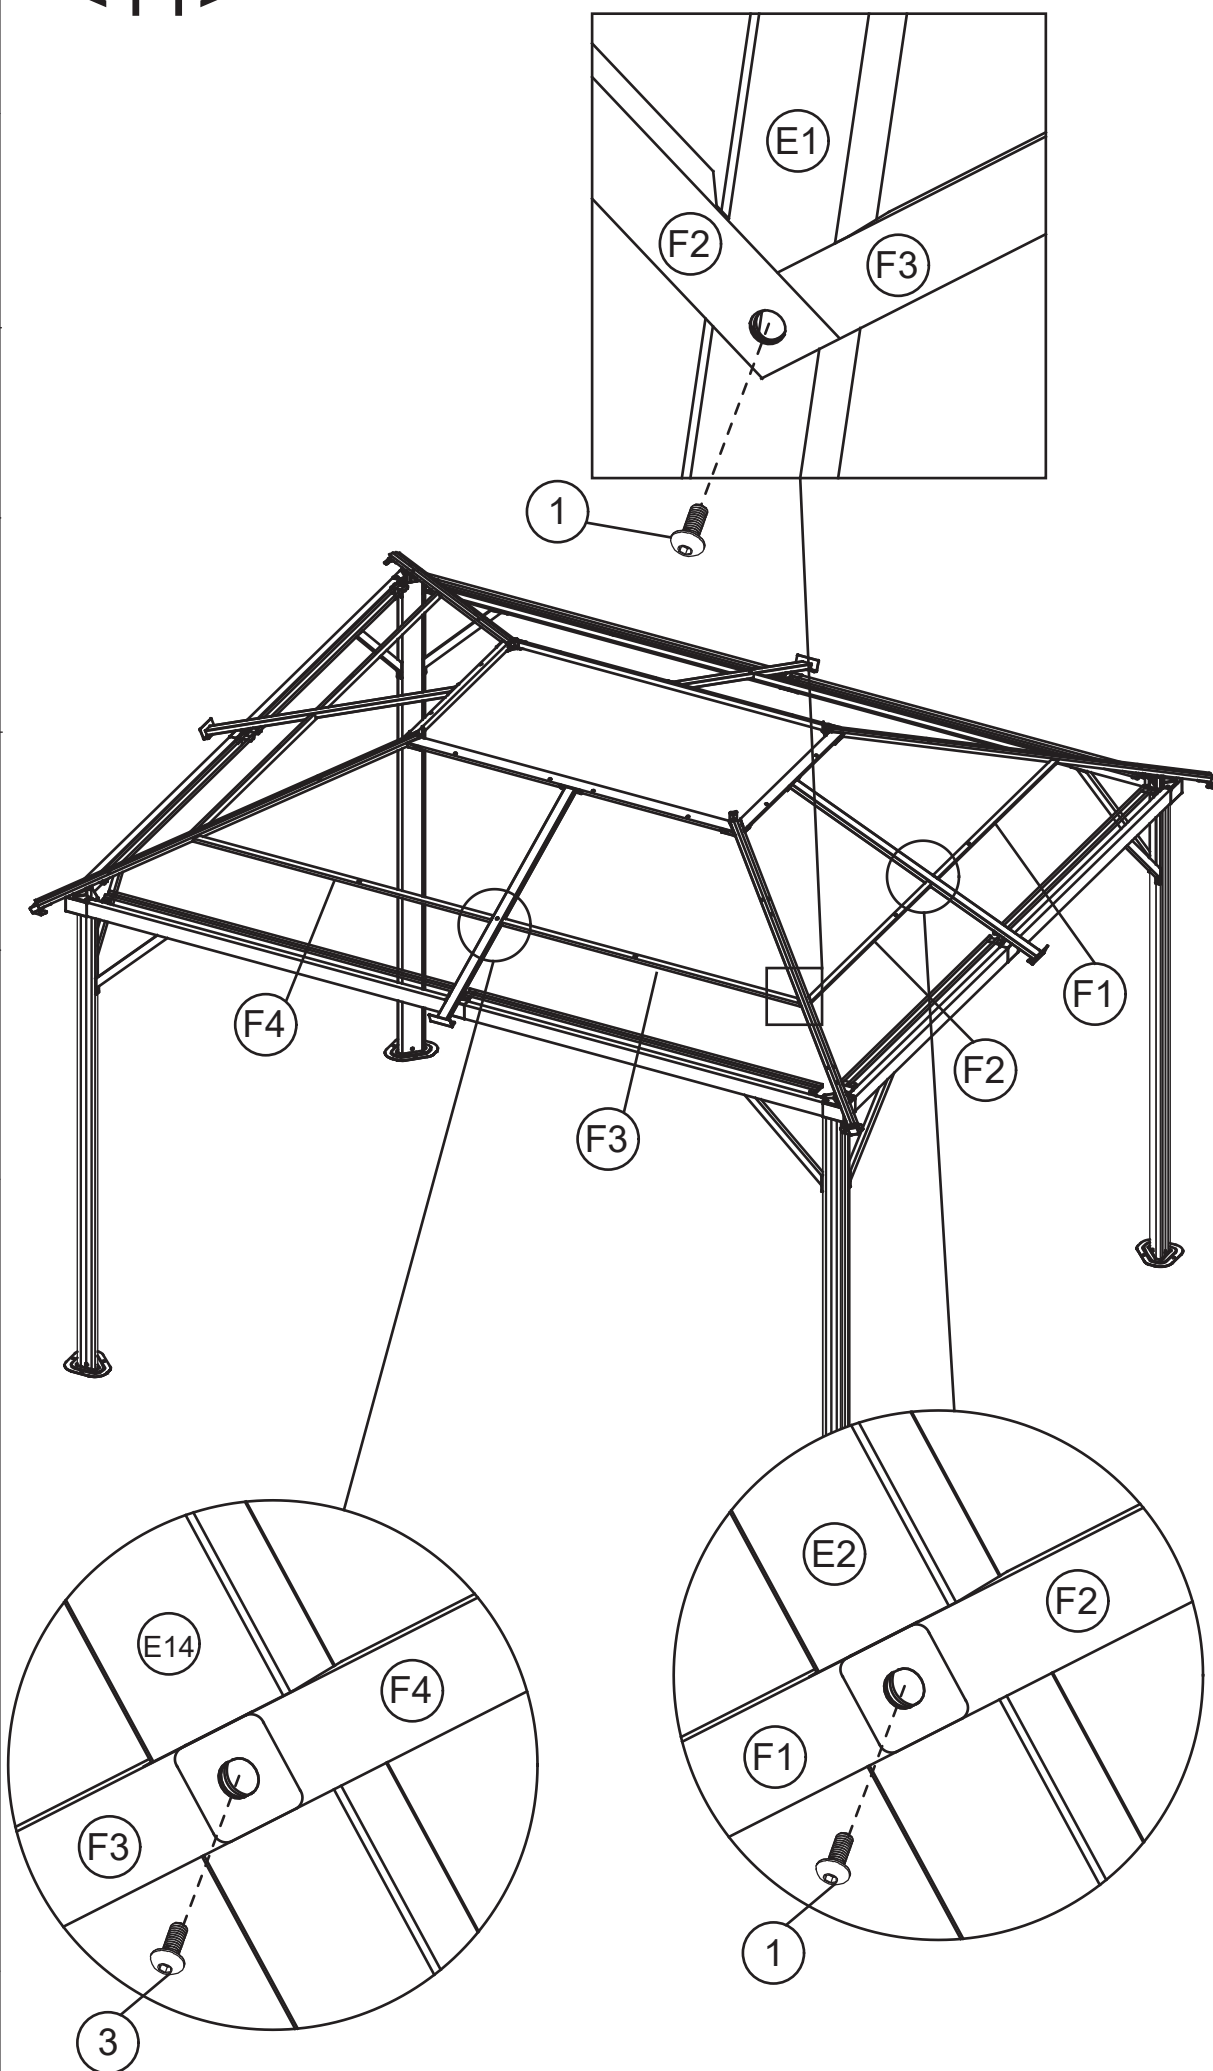

<12>



I1 2x



I2 2x



I3 2x






I4 2x



M6x15

1 16x

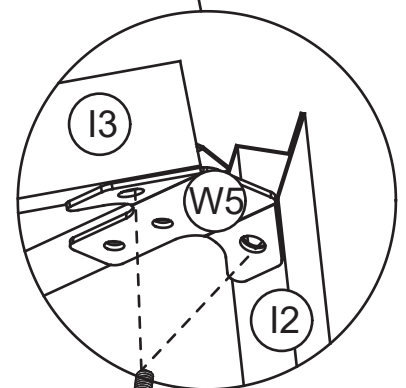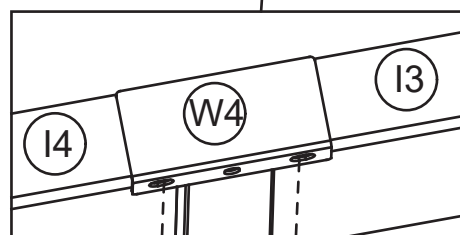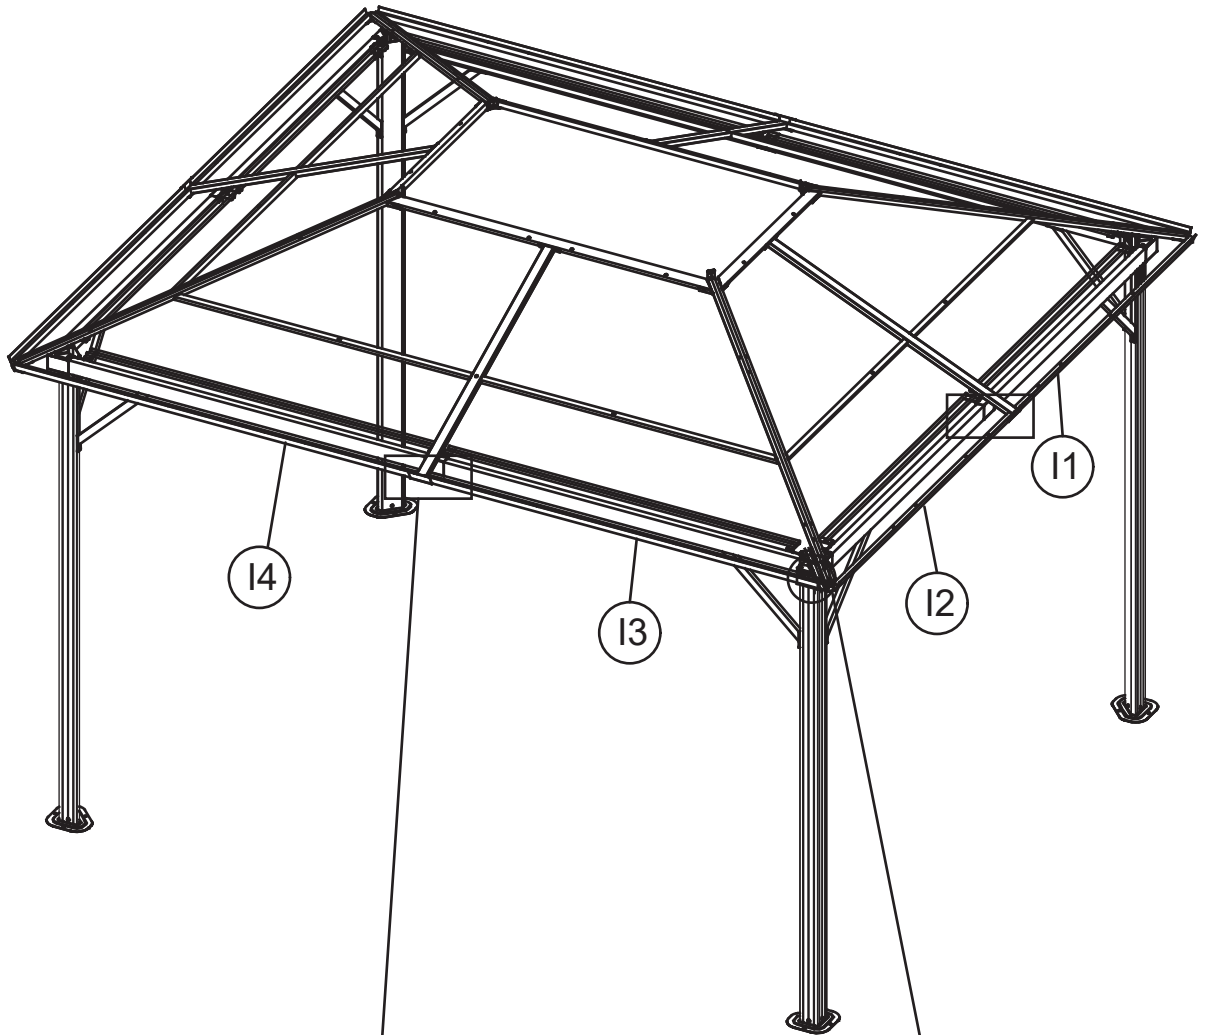

<13>



E3 4x




L1 1x



M6x15

1 4x

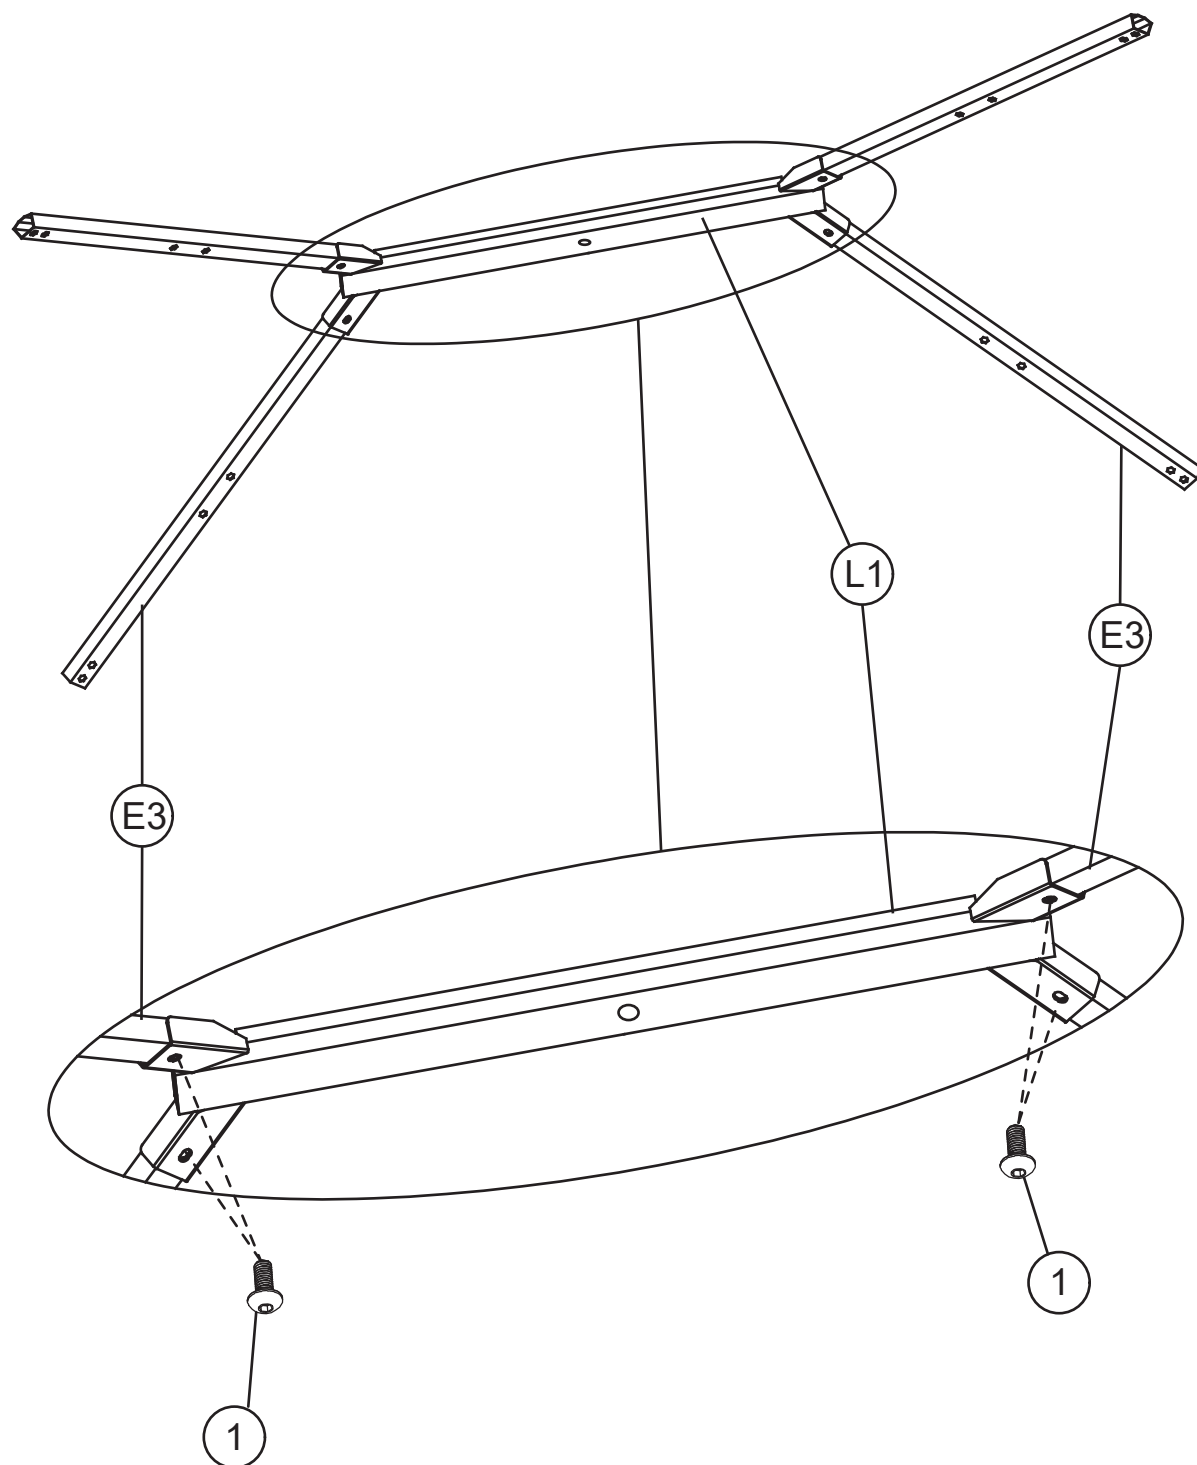




D7 4x



M6x15

1 8x

<14>

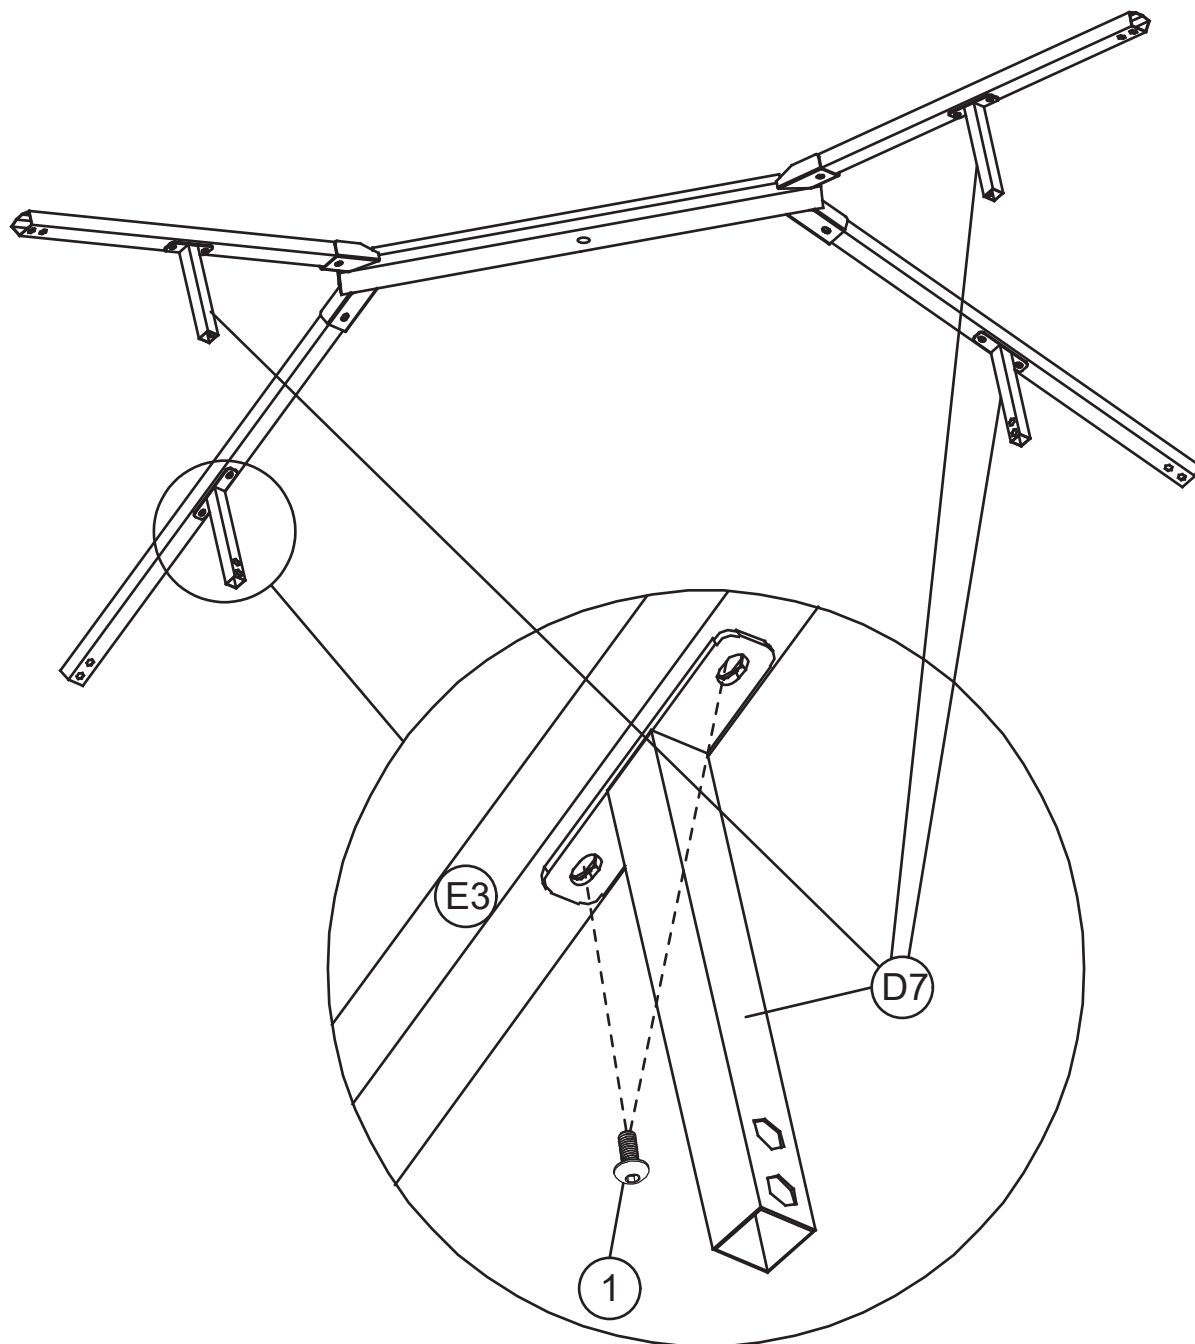

<15>



(G1) 2x



(G2) 2x





(W5) 4x



M6x15

(1) 16x

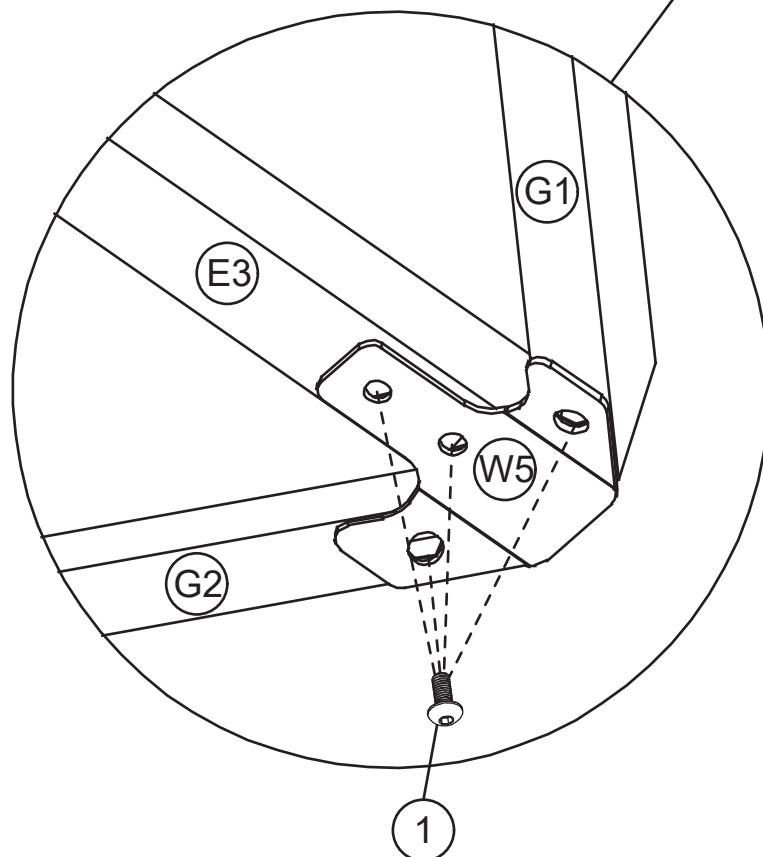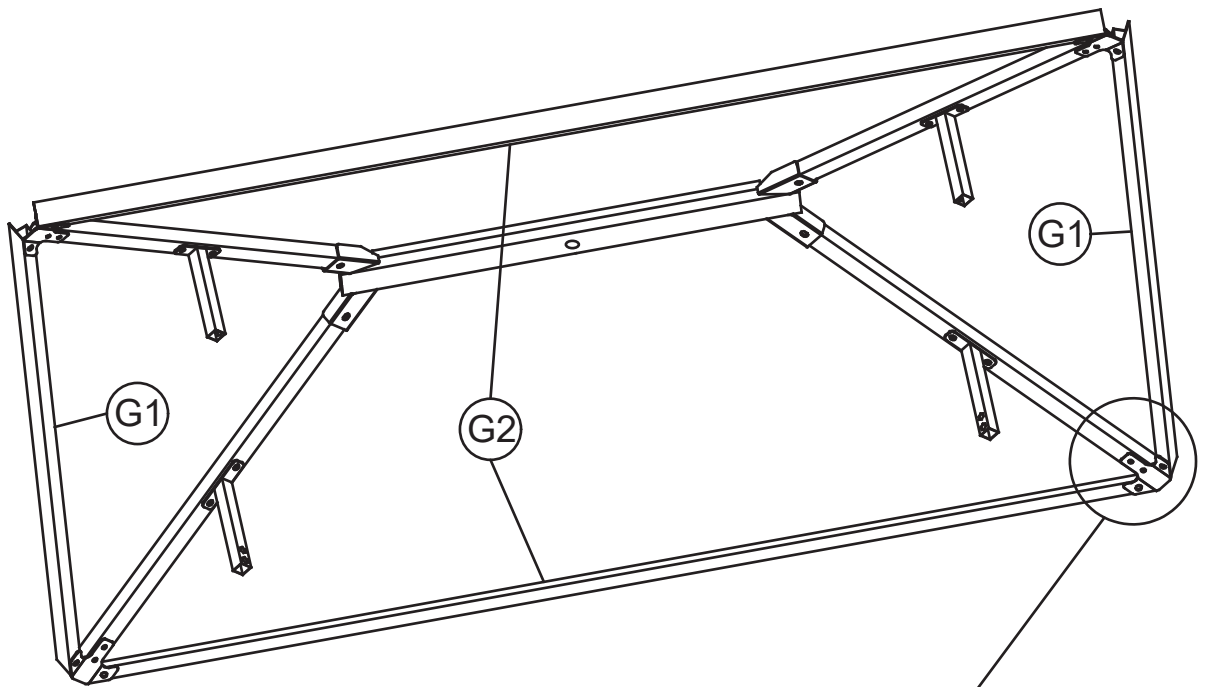




M6x15

1 8x

<16>

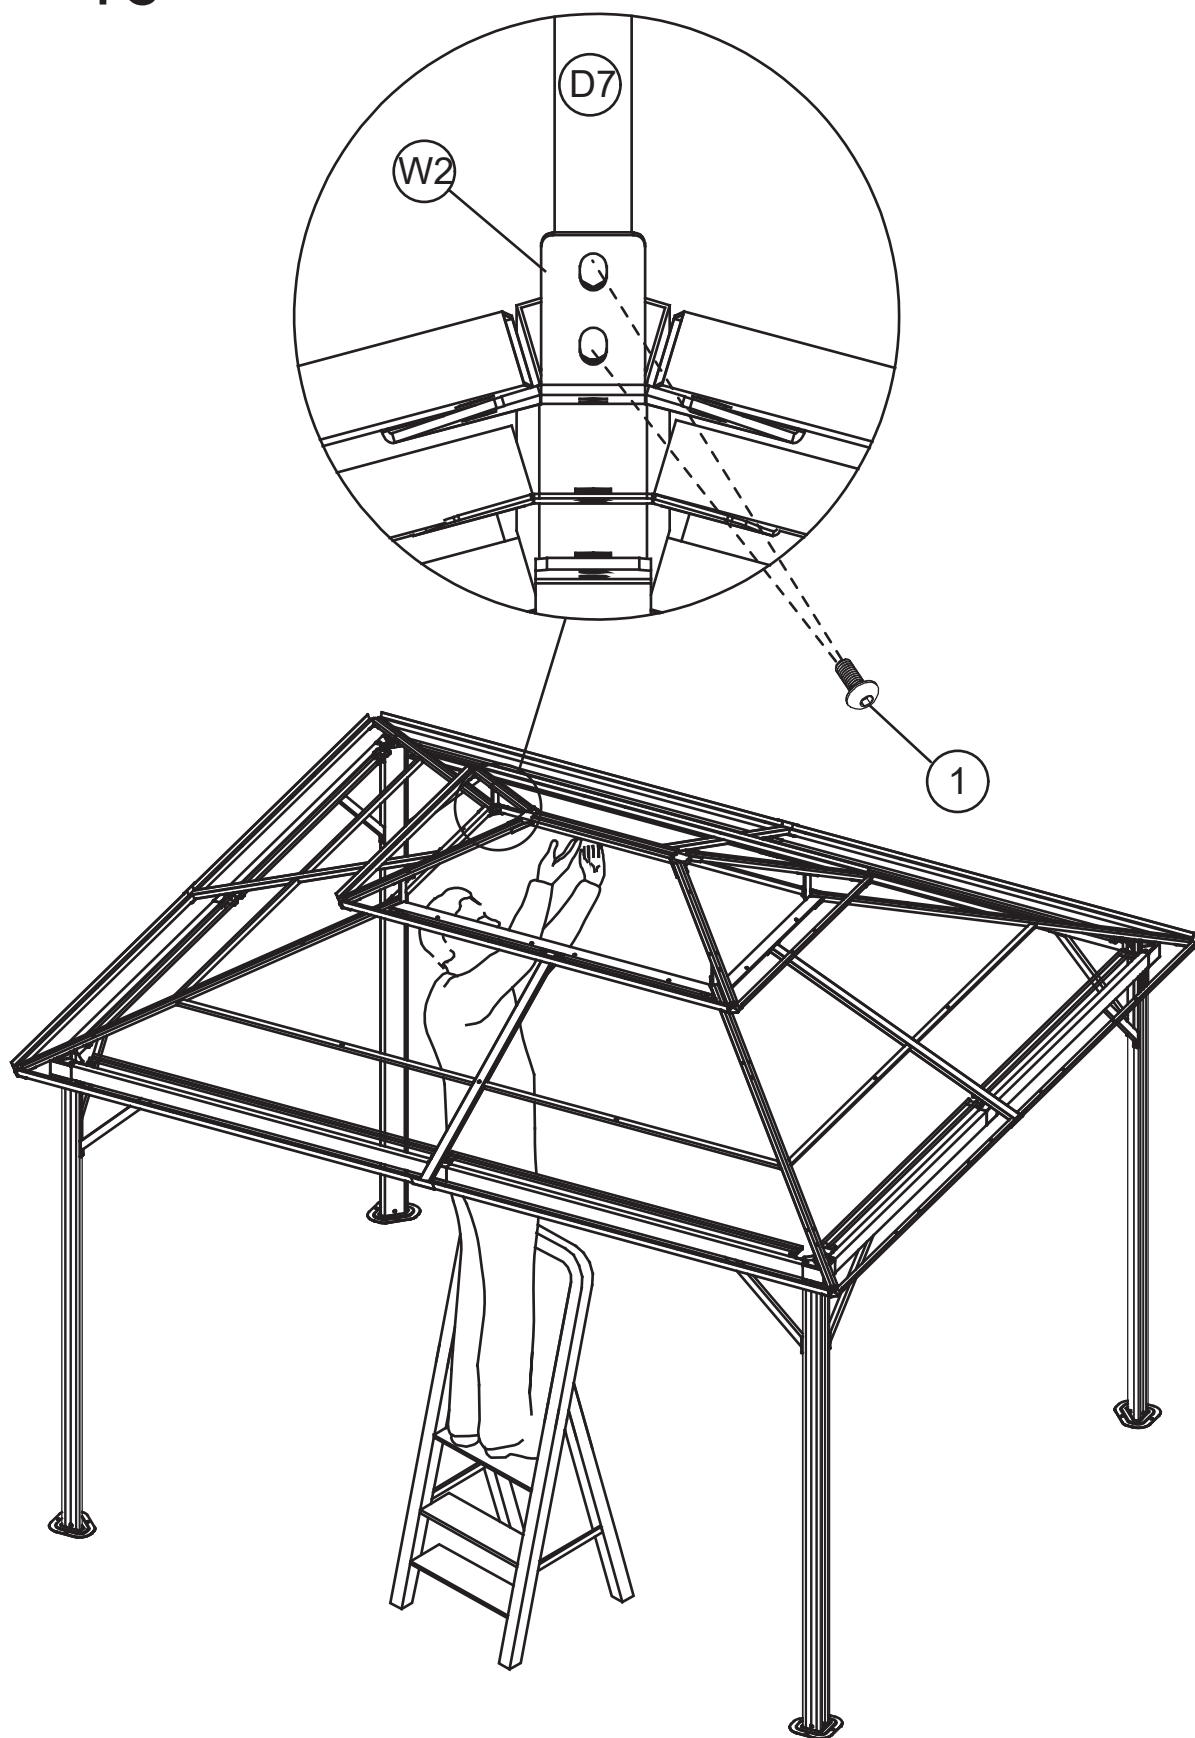

1. Have one person stand on the ladder to lift and hold L1 in place, while the other secure it by fastening the D7 screws.
2. Do not release L1 until all D7 screws are fully tightened.

<17>



(S1) 4x



(S2) 4x



(S3) 2x



(N1) 6x






(Y2) 12x



M6x15

(1) 20x

Tips: When install the roof panel ,remove the protective film first.

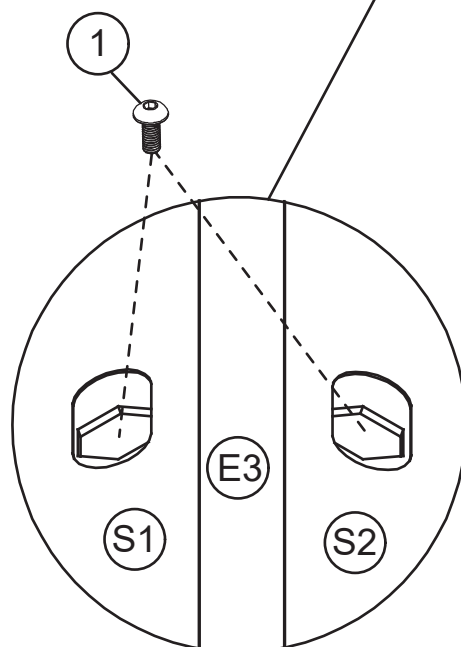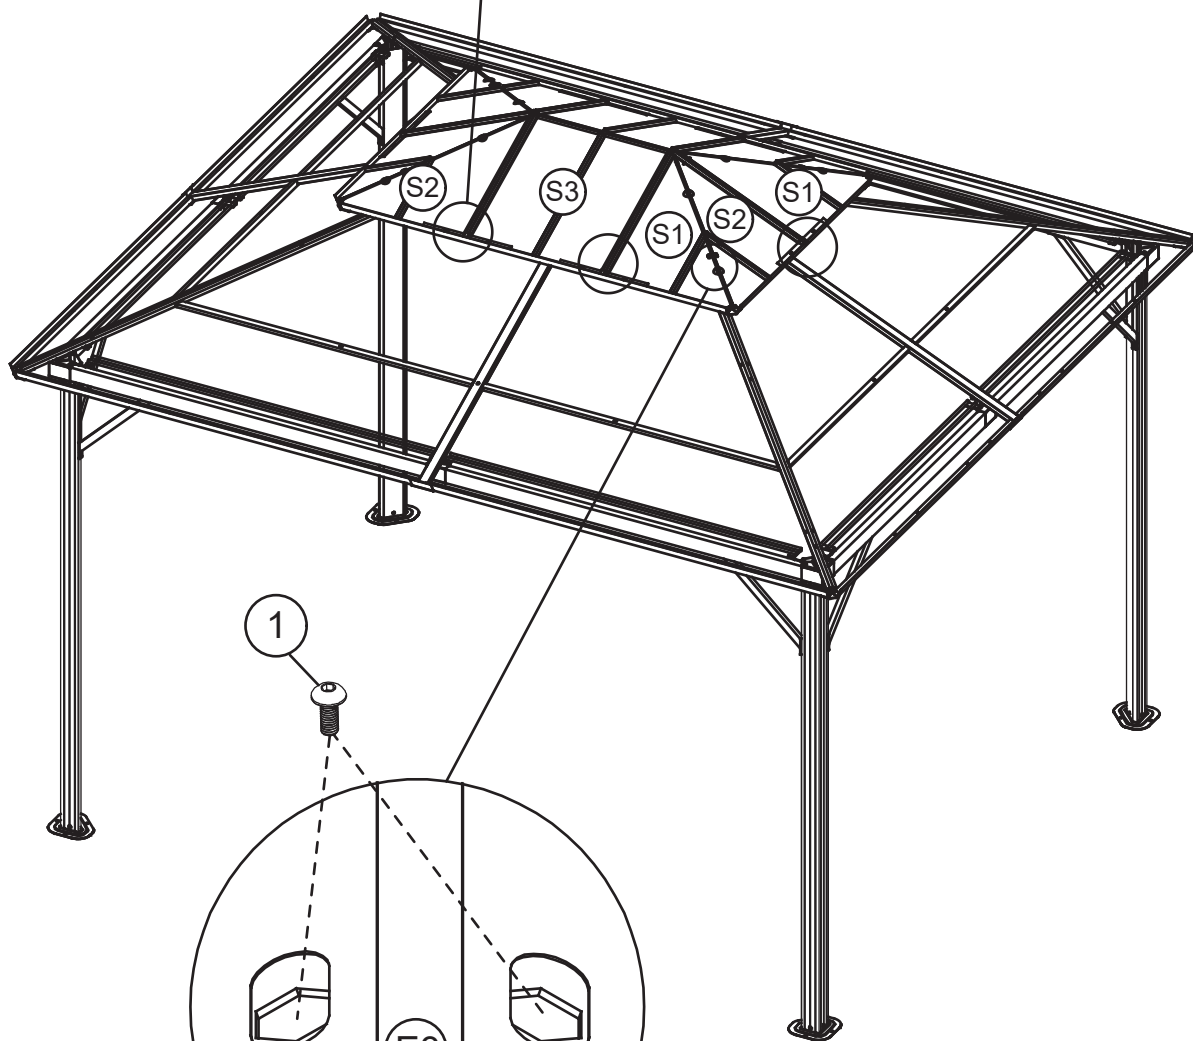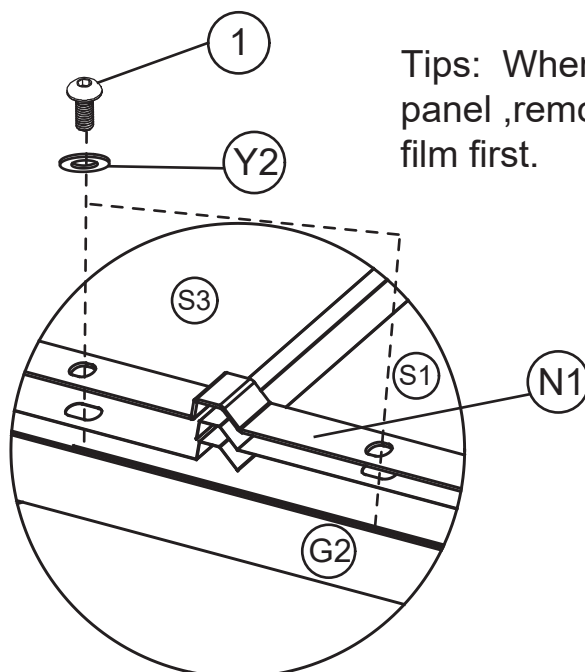

<18>



(R6) 4x




(Y2) 8x



M6x40

(9) 8x

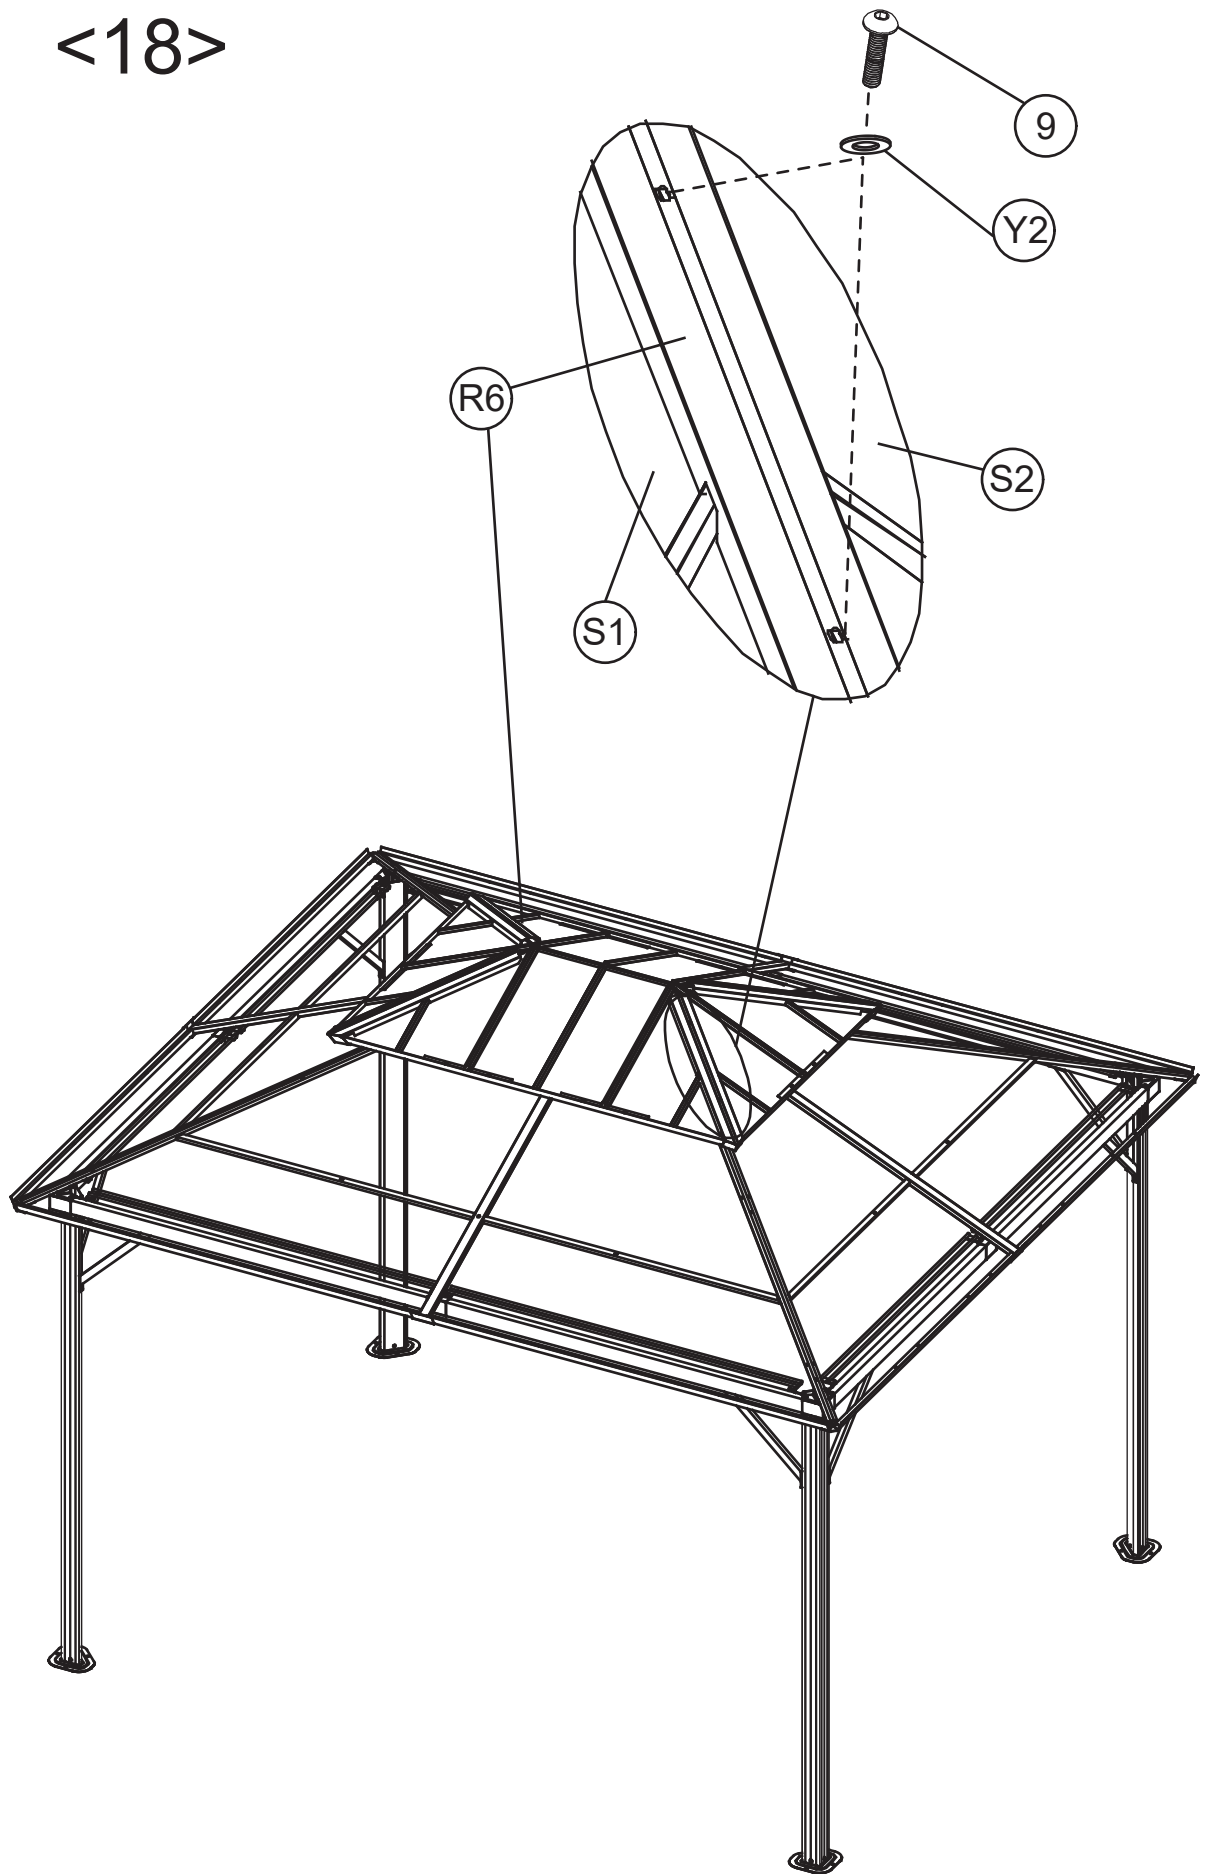



(L2) 1x





(Y2) 2x



M6x60

(11) 2x

<19>

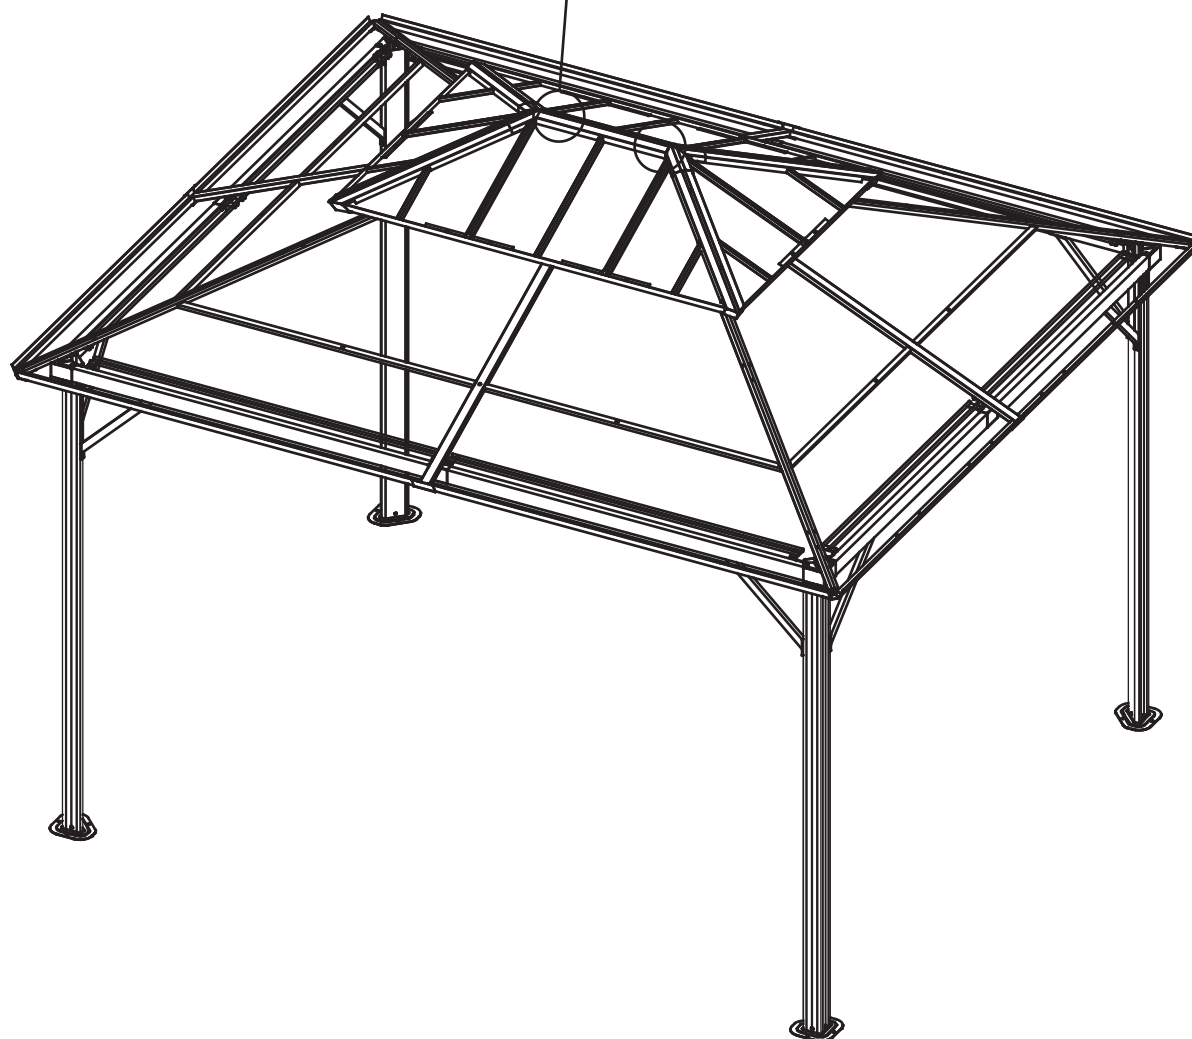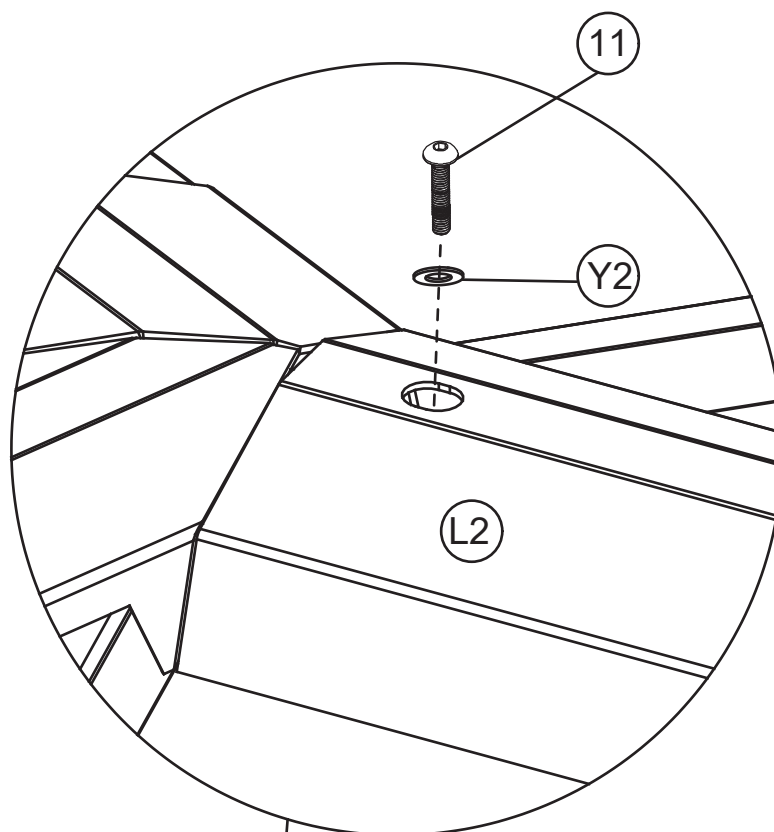



(N1) 18x

(O1) 4x



(O2) 4x



(O3) 4x



(O4) 4x



(O5) 6x



(Y) 10x



(Y2) 46x



(1) 64x
M6x15



(6) 2x
M6x25



(9) 8x
M6x40




(12) 8x



24

<20>

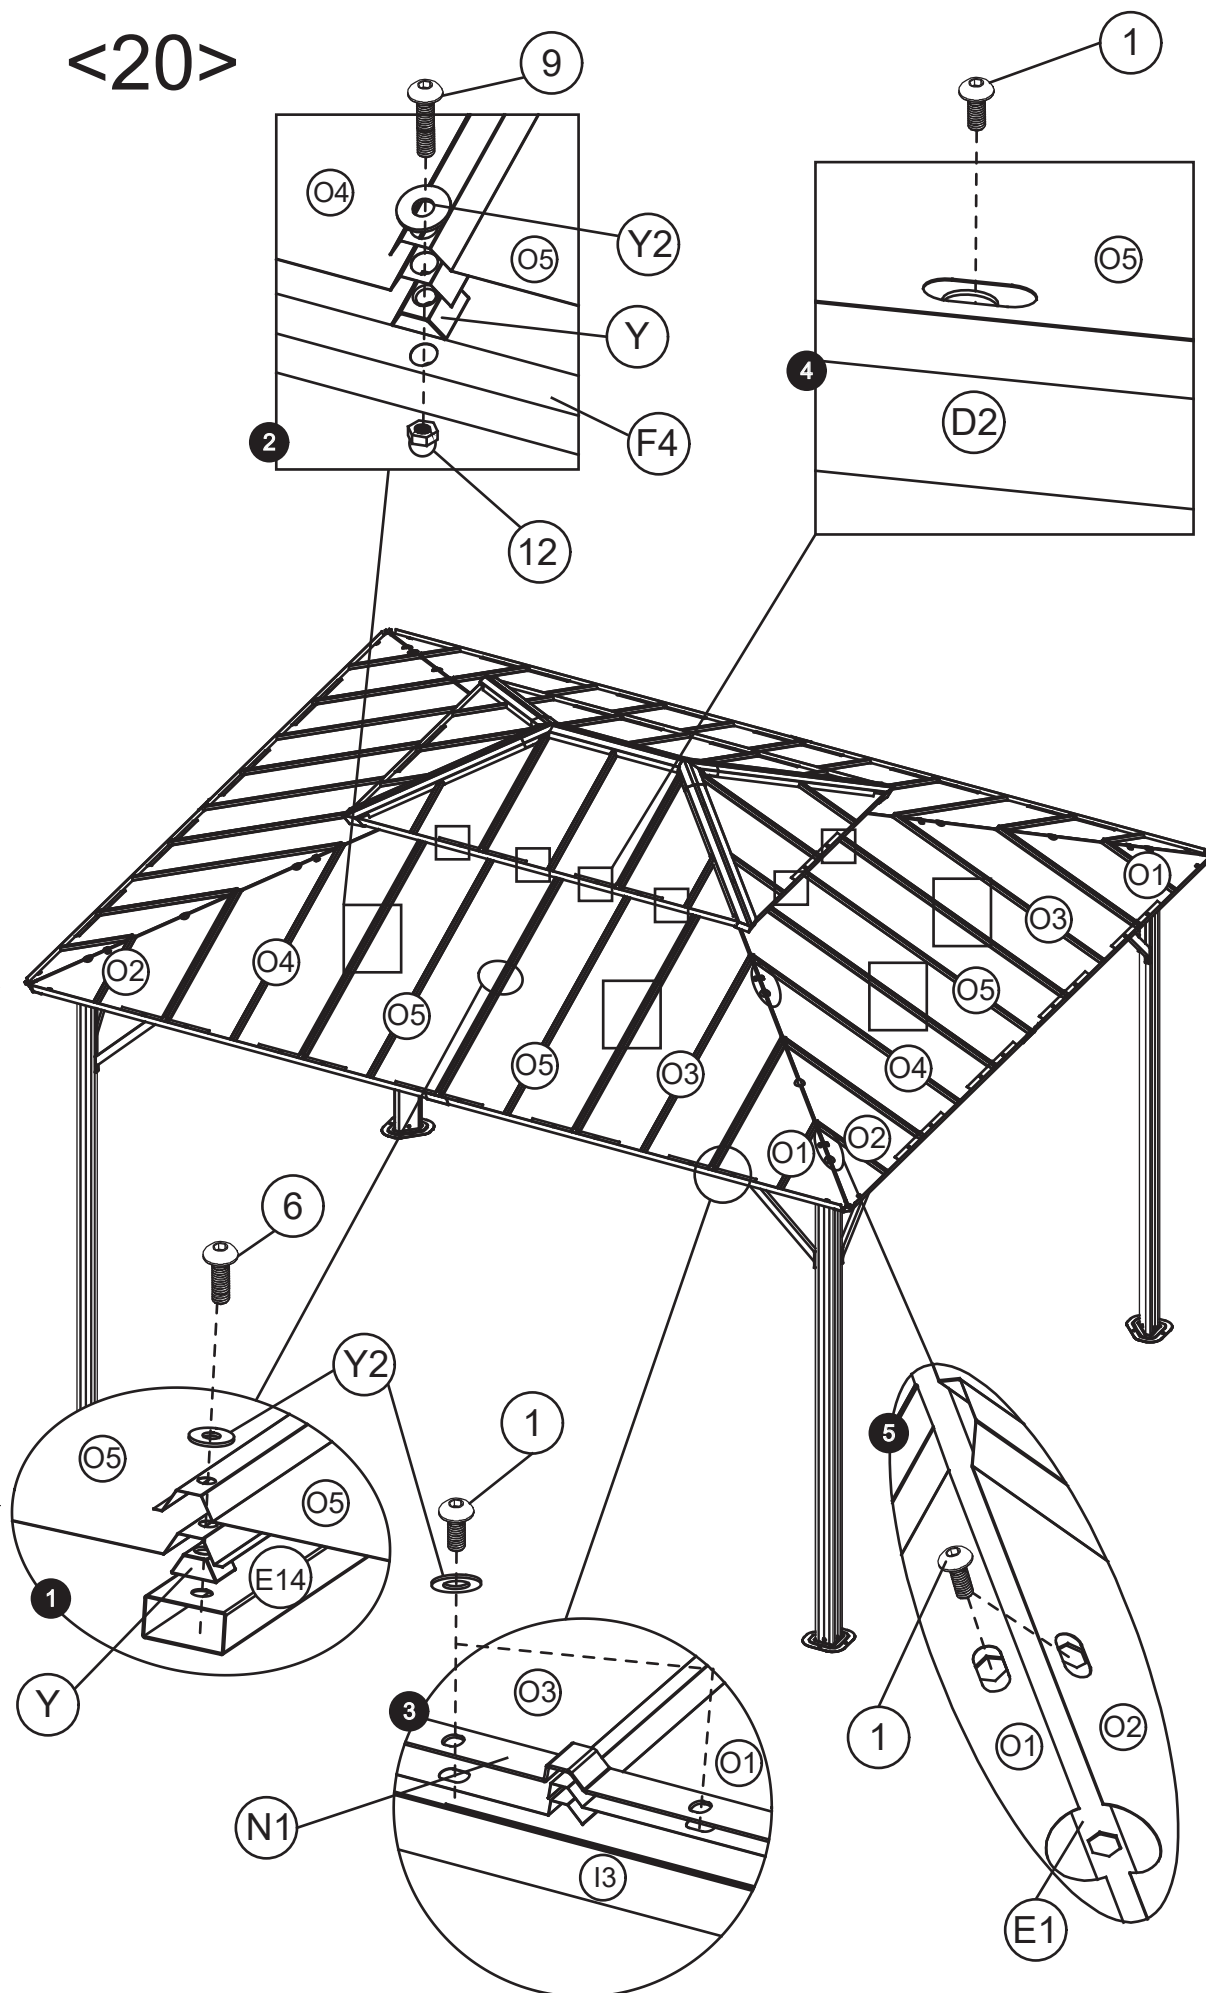

Tips:

1. When install the roof panel ,remove the protective film first.
2. After aligning all tiles(O1.O2.O3.O4.O5),tighten the bolts



(R1) 4x





(Y2) 8x




M6x40

(9) 8x

<21>

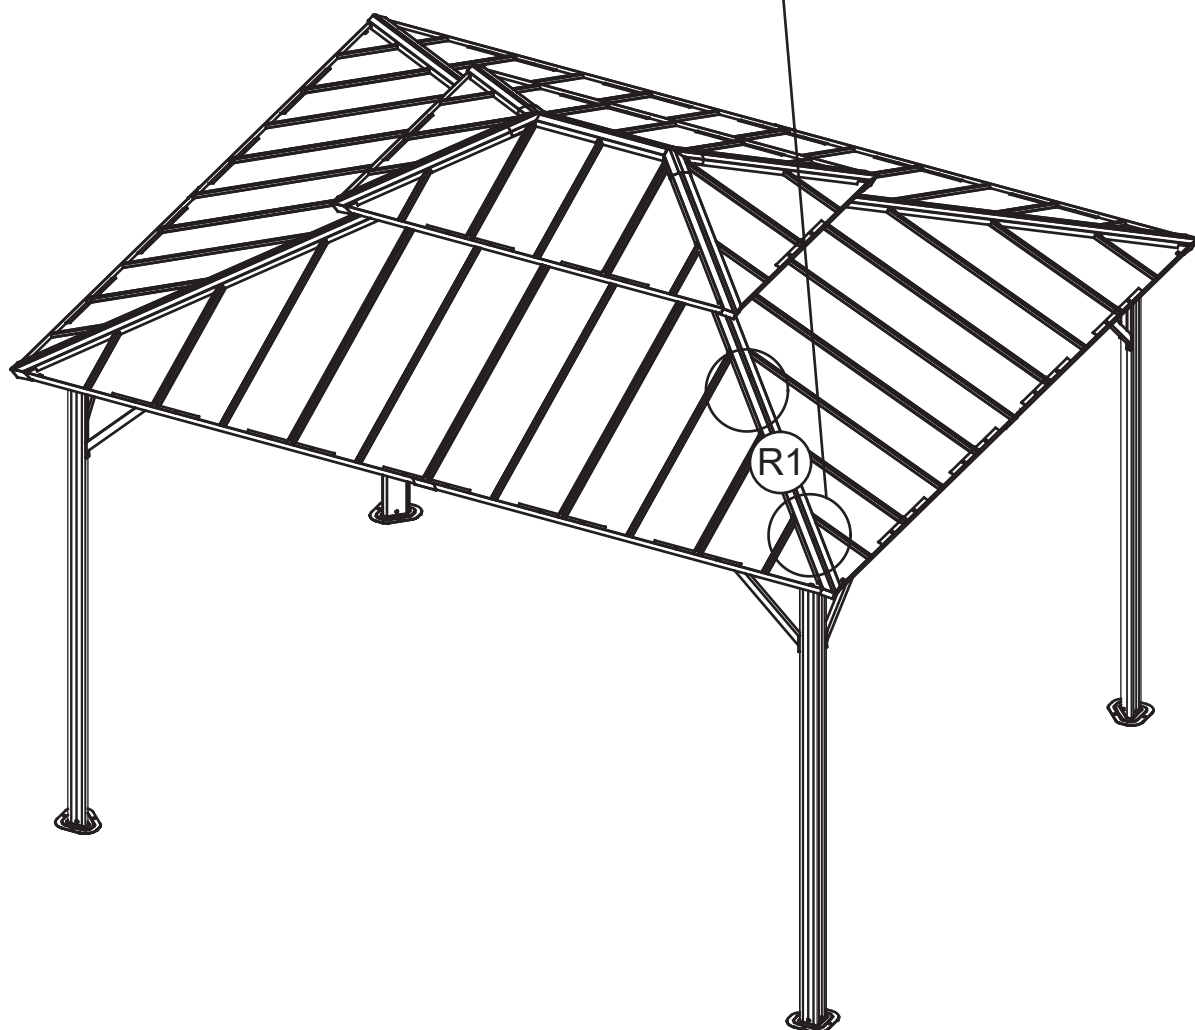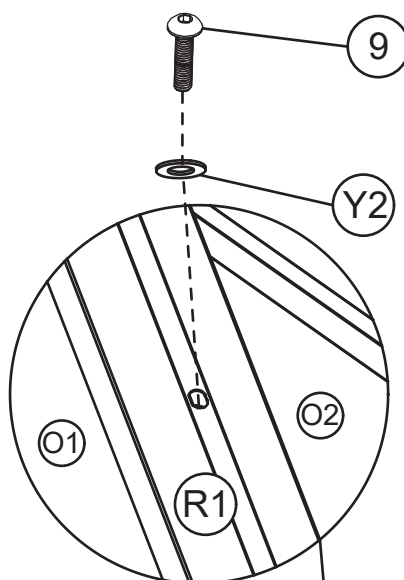

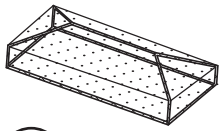

(M3) 1x




(7) 1x

<22>



Attach the top net cover with velcro.

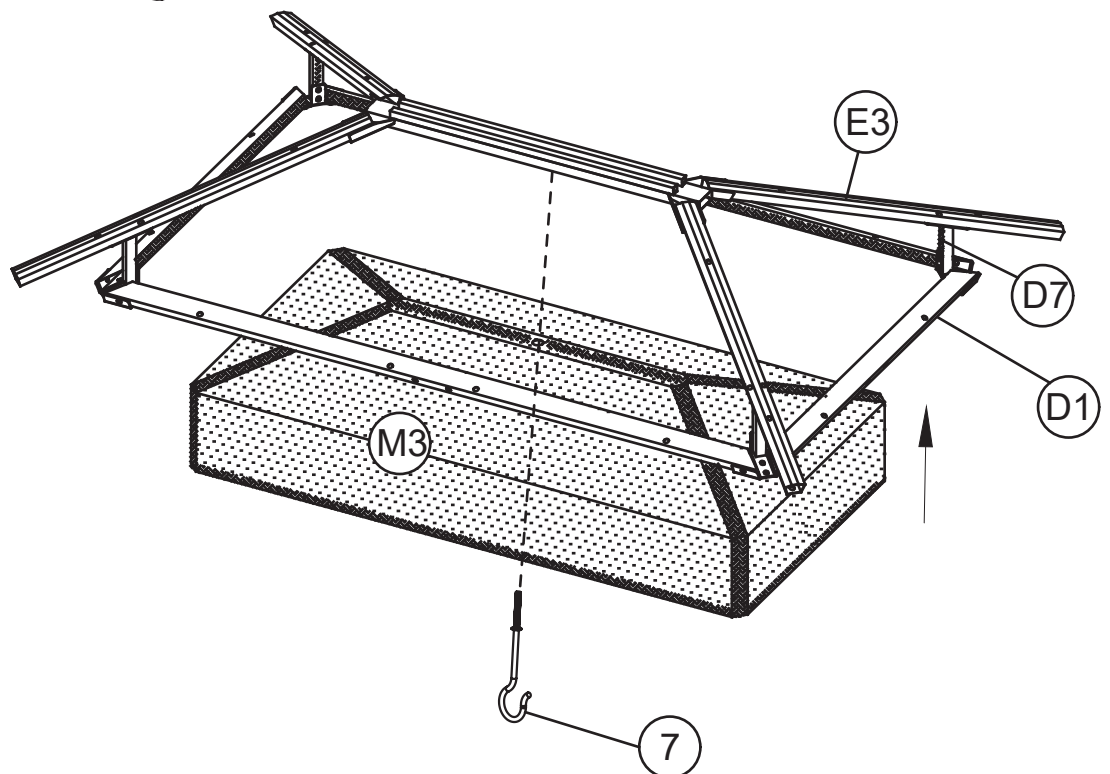




(M1) 4x





(Y1) 44x

<23>

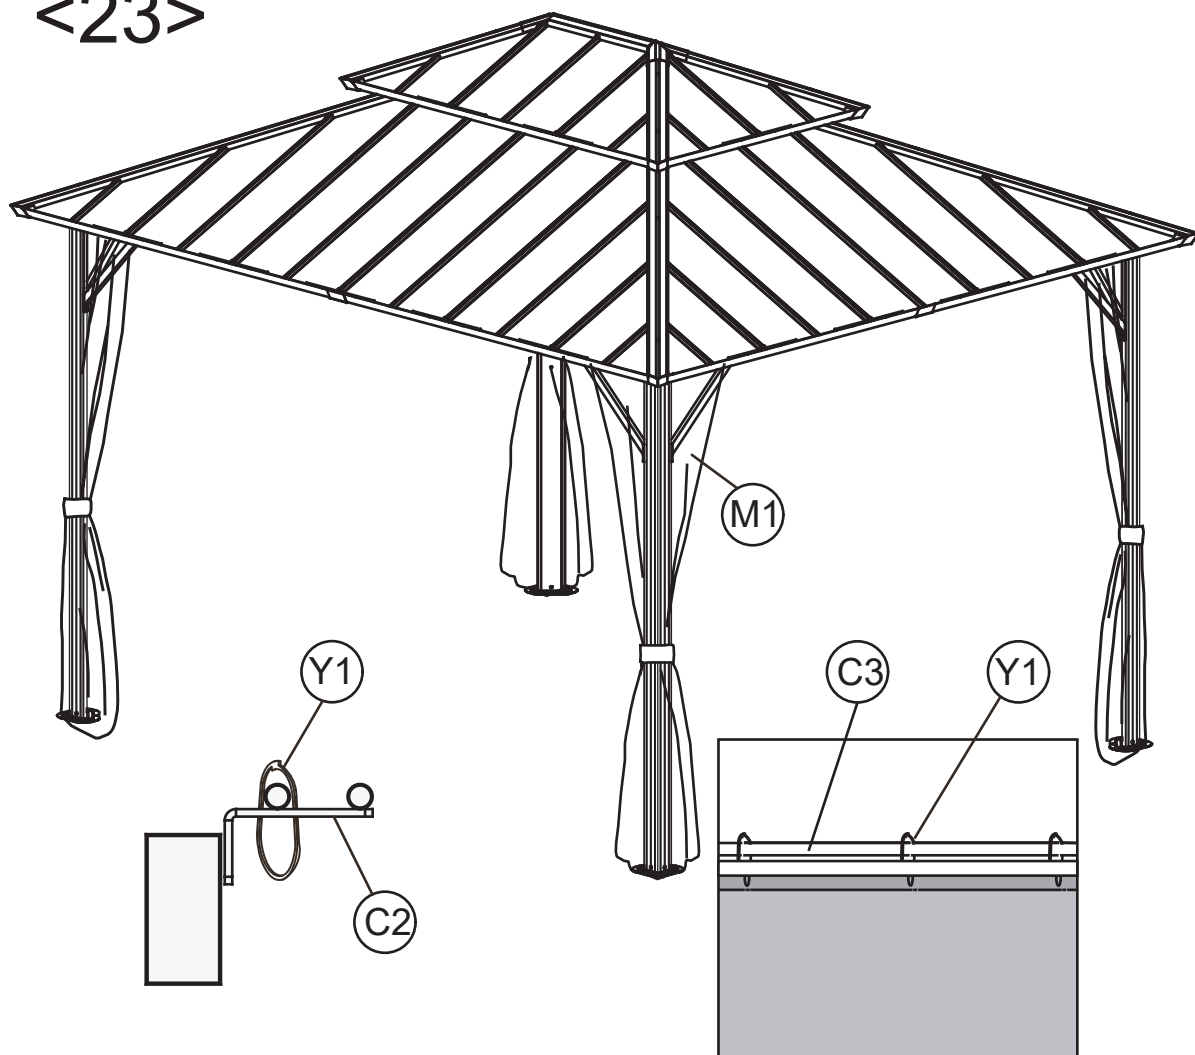

Curtain

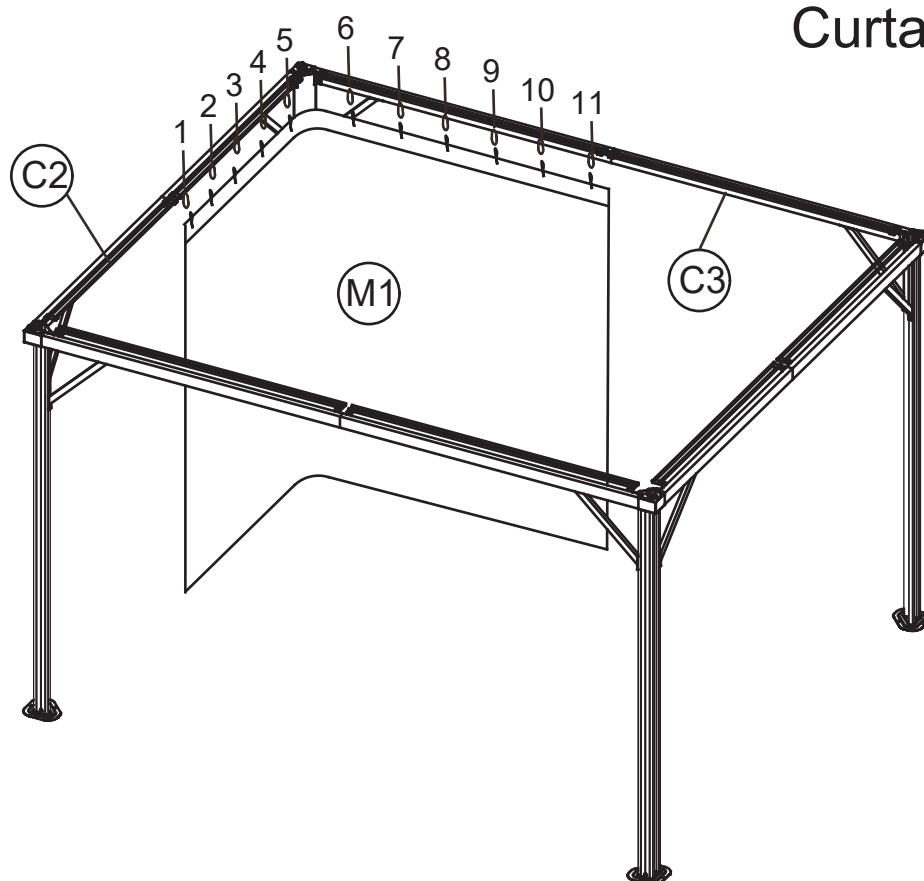





(M2) 4x





(Y1) 44x

<24>

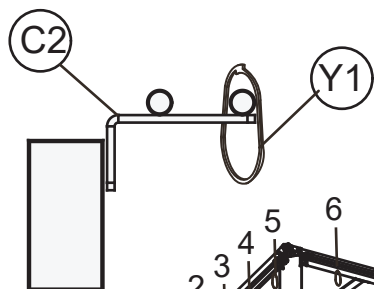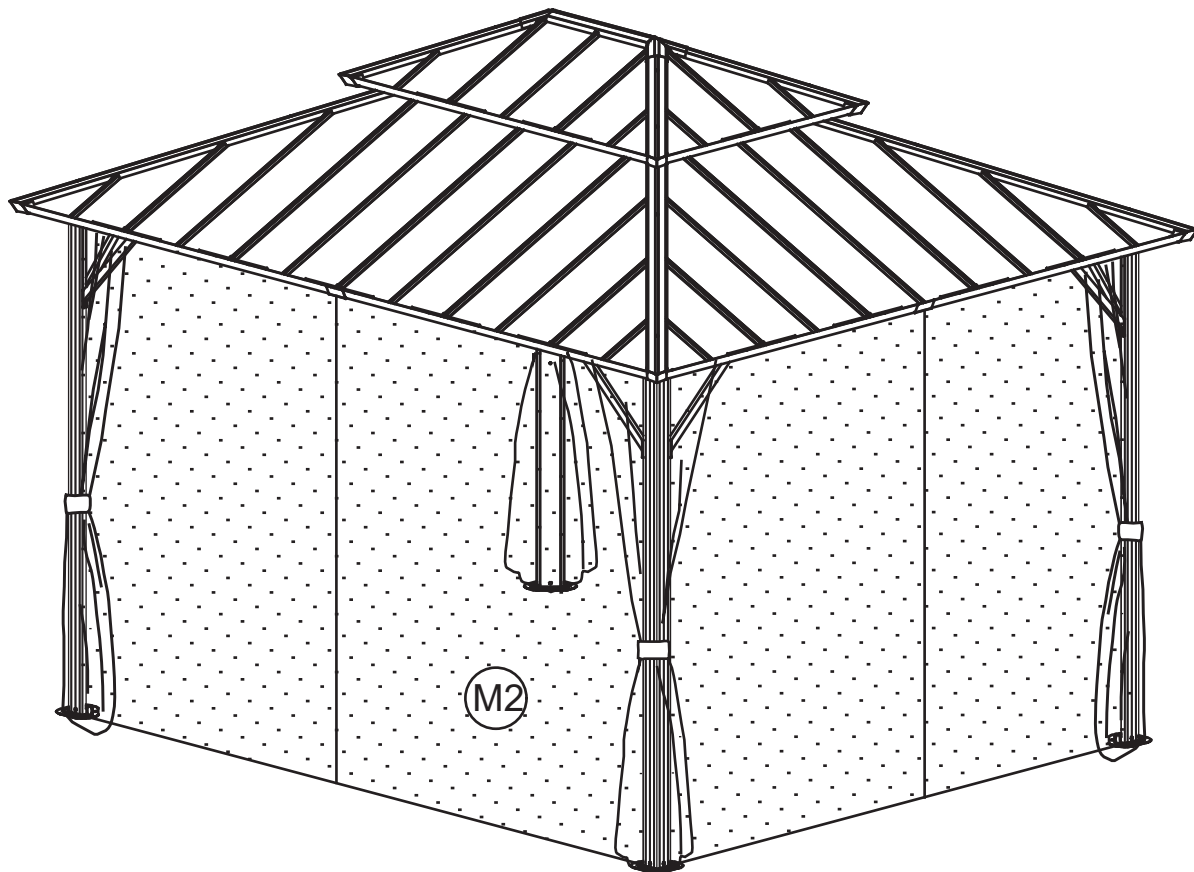

Net

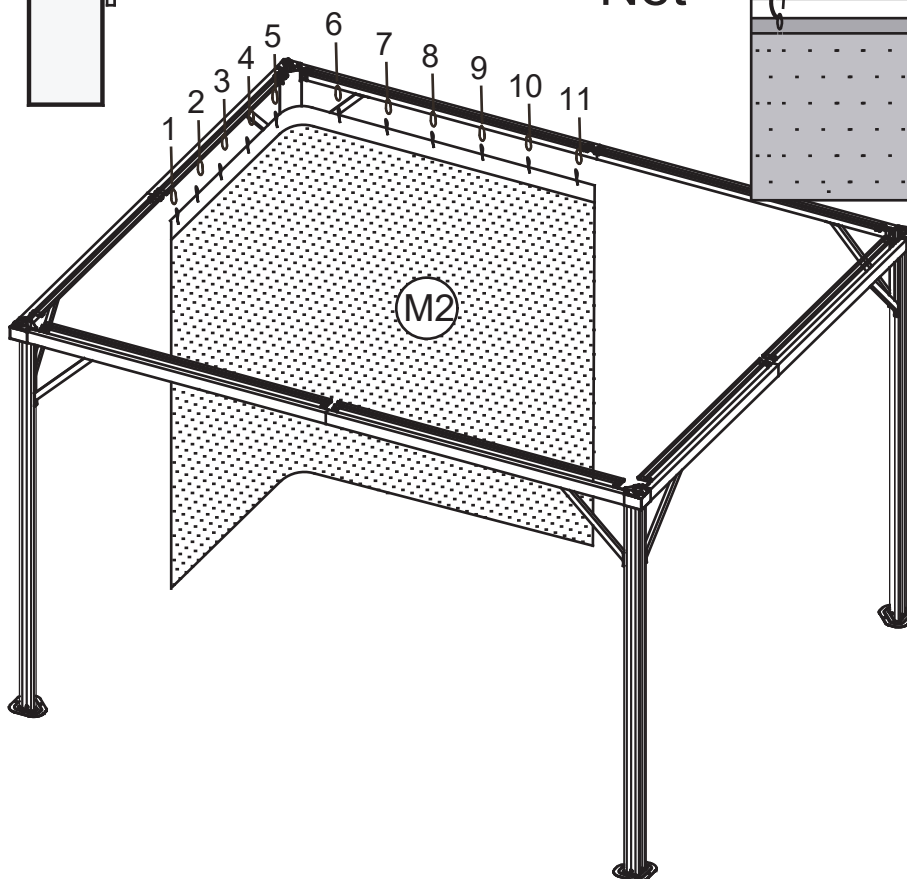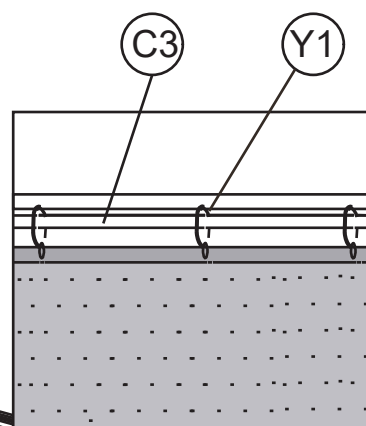

Carton-1/2		Carton-1/2		Carton-2/2	
Part	Qty	Part	Qty	Part	Qty
A2	4	W5	8	D1	2
B3	2	Y	10	E2	2
B4	2	Y1	88	E14	2
B5	2	Y2	76	F1	2
B6	2			F2	2
C2	4			G1	2
C3	4			L1	1
D2	2			L2	1
D7	4			M1	4
E1	4			M2	4
E3	4			N1	24
F3	2			O1	4
F4	2			O2	4
G2	2			O3	4
H2	8			O4	4
I1	2			O5	6
I2	2			S1	4
I3	2			S2	4
I4	2			S3	2
J	4			1.2.3.4.6.7.8.9.10. 11.12.13.15.16.	1
K1	4				
K2	4				
M3	1				
P	4				
Q2	4				
Q3	8				
R1	4				
R6	4				
W2	4				
W3	4				
W4	4				