



NOTE: Place all parts on a clean and smooth surface (rug, carpet) to avoid the parts from being scratched.

NOTE: Follow assembly instructions step by step.


NOTE: Do not completely tighten screws until the headboard is fully set up.

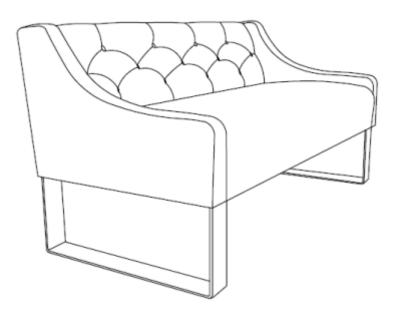

PART LIST:

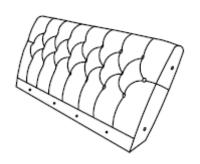




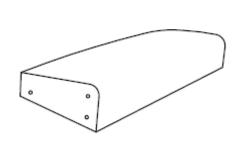

② Seat 1pc



② Arms 2pcs

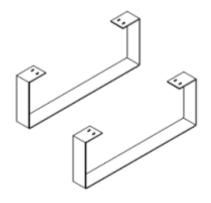


4 Legs 2pcs


HARDWARE LIST:

LABEL	PICTURE	DESCRIPTION	QTY	LABEL	PICTURE	DESCRIPTION	QTY
А	0	2" BOLT	14	Е	0	SML FLAT WASHER	8
В		ALLEN WRENCH	1	F	0	LRG FLAT WASHER	14
С	0	3/4" BOLT	8	G			

STEP 1: Attach the seat to the back using 4- 2" bolts and large washers
(See below diagram)

STEP 2: Once the seat is attached to the seat back, remove the velcro corner on both sides of the top back of the seat back, exposing the attachment holes. From there attach the left and the right arm using 4- 2" bolts and large washers (See diagram)

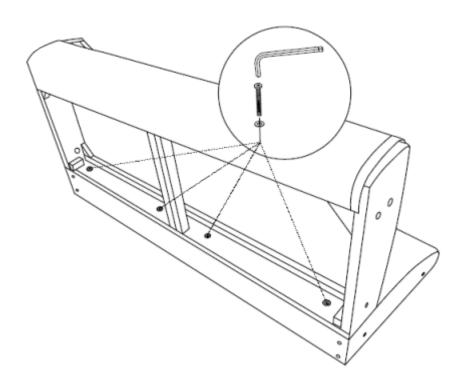

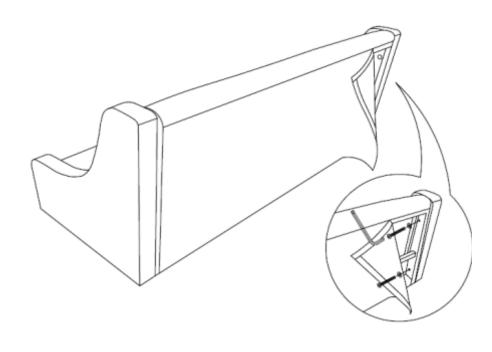

STEP 3: After the arms are attached to the bench back, flip the bench on to it's back. From there attach the metal legs using the 8- 3/4" bolts and small washers. (see diagram)

STEP 4: Once assembled bring the bench to it's upright position, have a seat.

