



Assembly Instruction

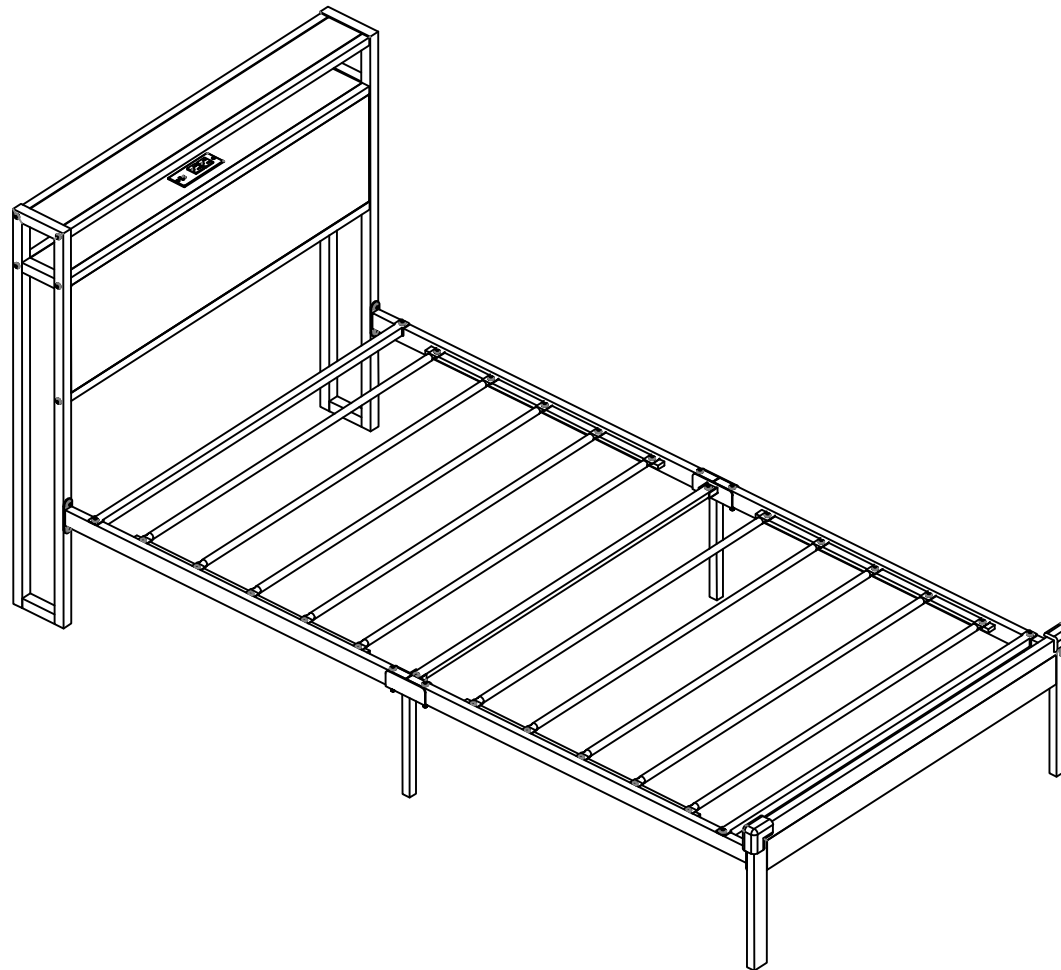

Attention: Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other. If the screws are tightened initially, subsequent hole positions may be misaligned.

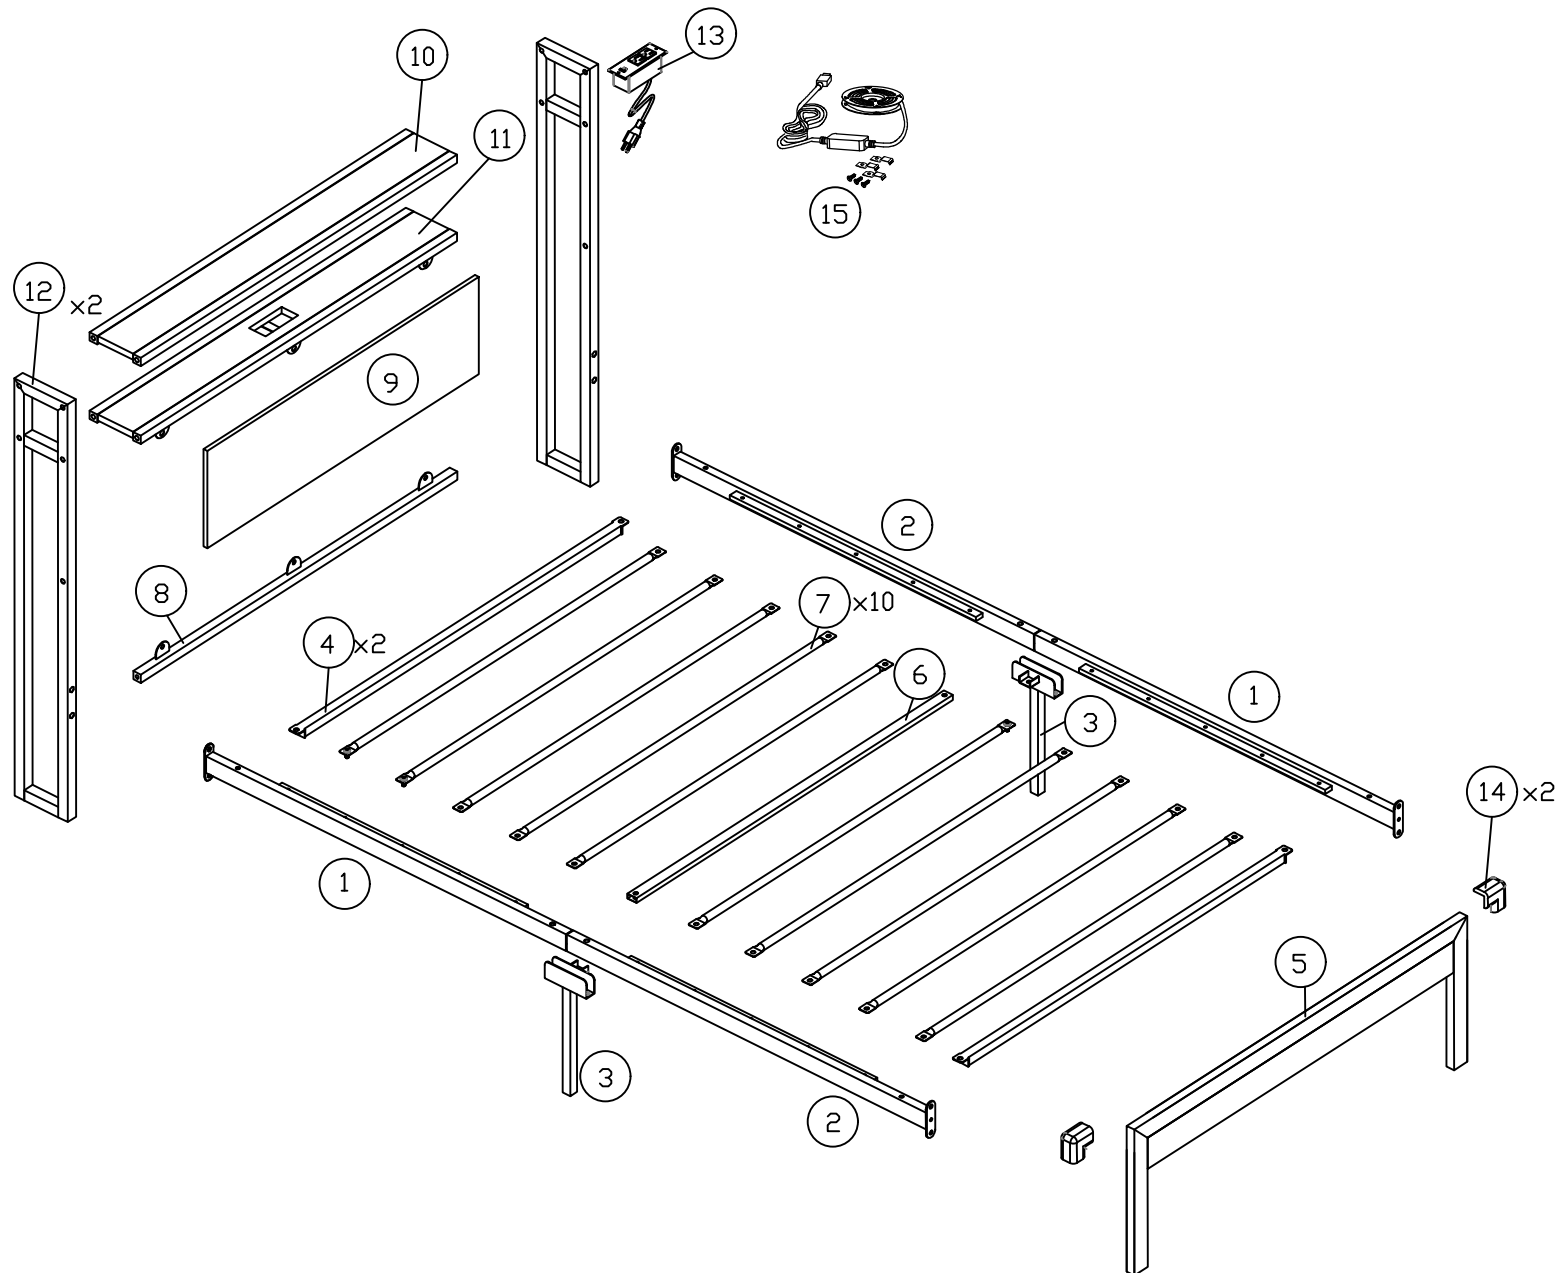

Hardware arts



M6*15

A 20PCS



M6*45

B 10PCS



M6*10

C 6 PCS



M8*20

D 14PCS




M8*55

E 4 PCS




M4*14

F 2 PCS



4#


G 1 PC




5#

H 1 PC

Part list

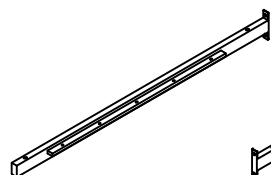


1 2 PCS

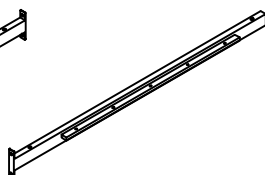


2 2 PCS




3 2 PCS

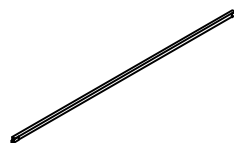


4 2 PCS

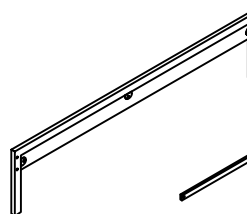


5 1 PC

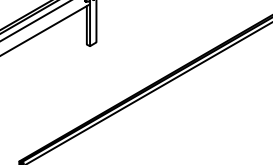


6 1 PC

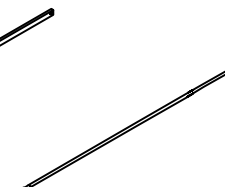


7 10PCS

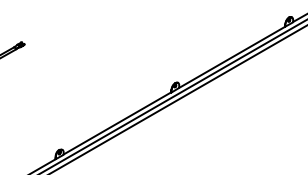


8 1 PC

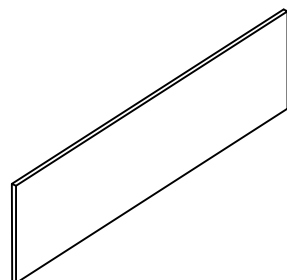

9 1 PC

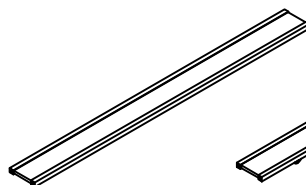


10 1 PC

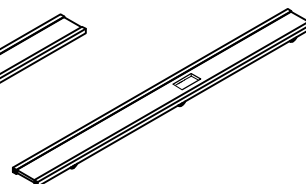

11 1 PC



12 1 PC



13 1 PC



Crash pads

14 1 PC




15 1 PC

Step:1


	B X 6PCS		G X 1PC
	F X 2PCS		H X 1PC

**No pre-drilled holes in board!!
Please directly screw F
(self-drilling screws) into the board**

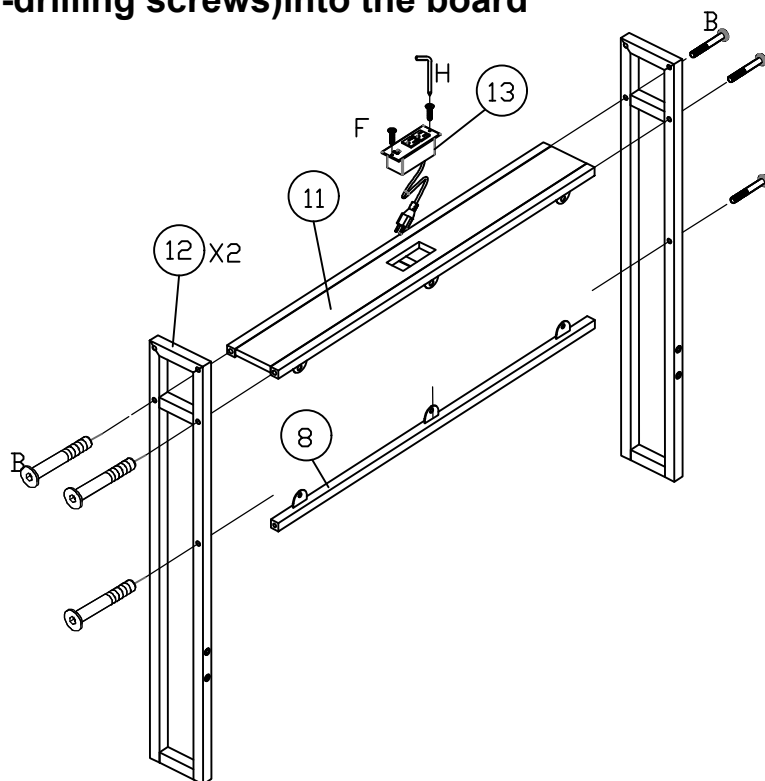

Step:2

	B X 4PCS		G X 1PC
---	----------	---	---------

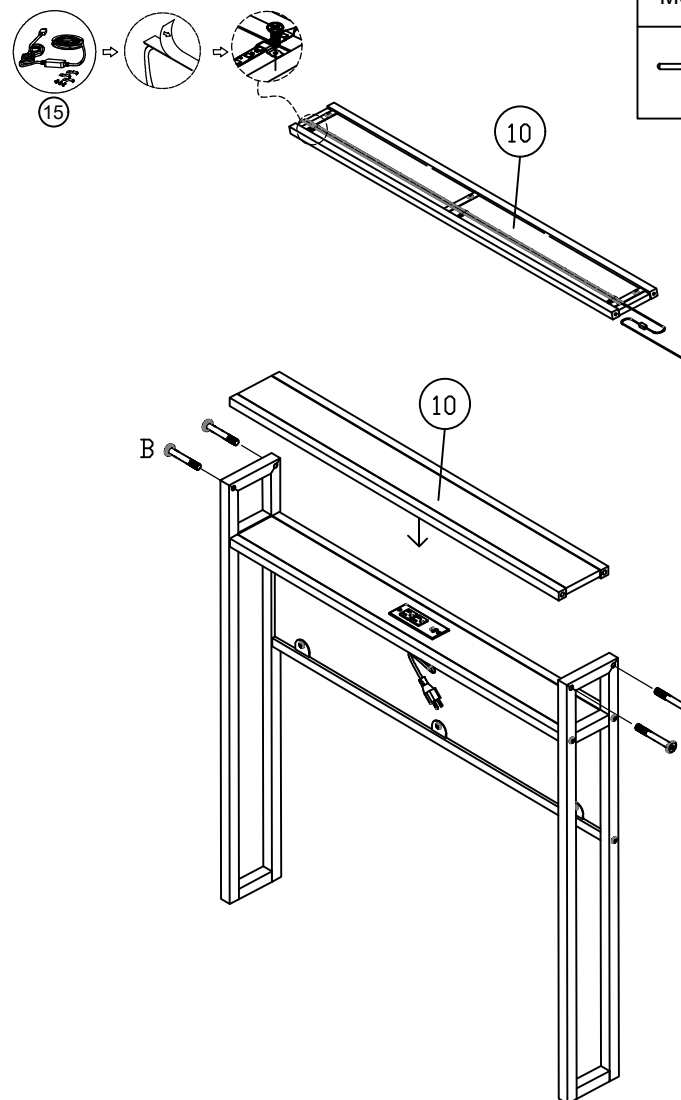


Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

Step:3

 C X 6PCS
M6*10

 G X 1PC
4#

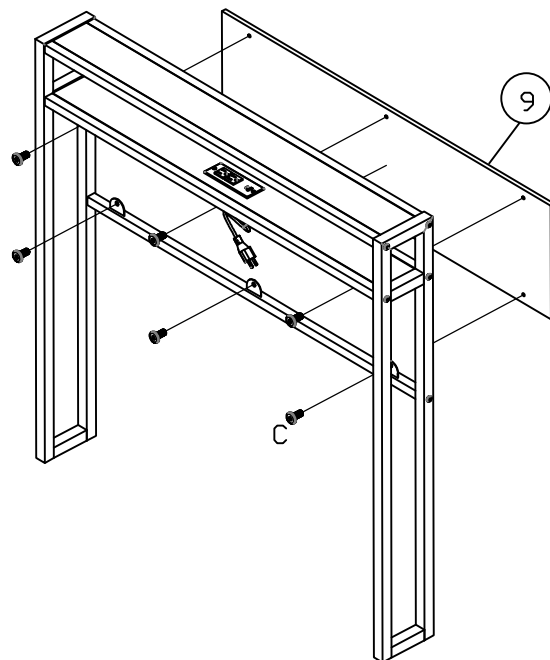


Step:4

 E X 4PCS
M8*55

 H X 1PC
5#



Please pay attention to the direction arrow in the illustration to avoid reverse installation

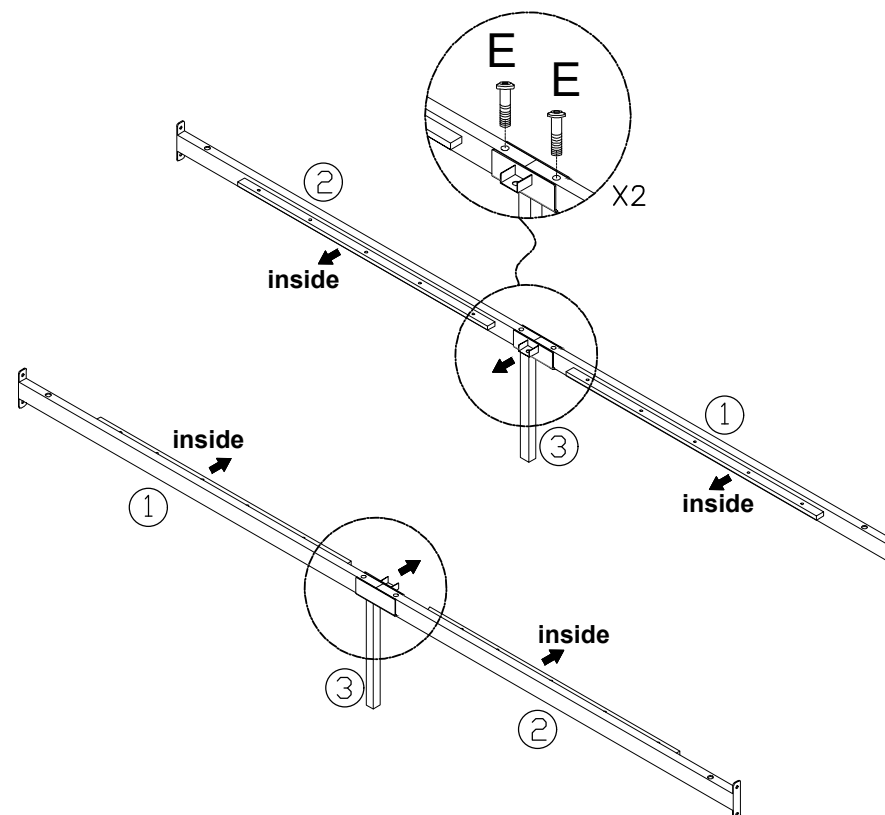


Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

Step:5

M8*20 D X 8PCS


5# H X 1PC

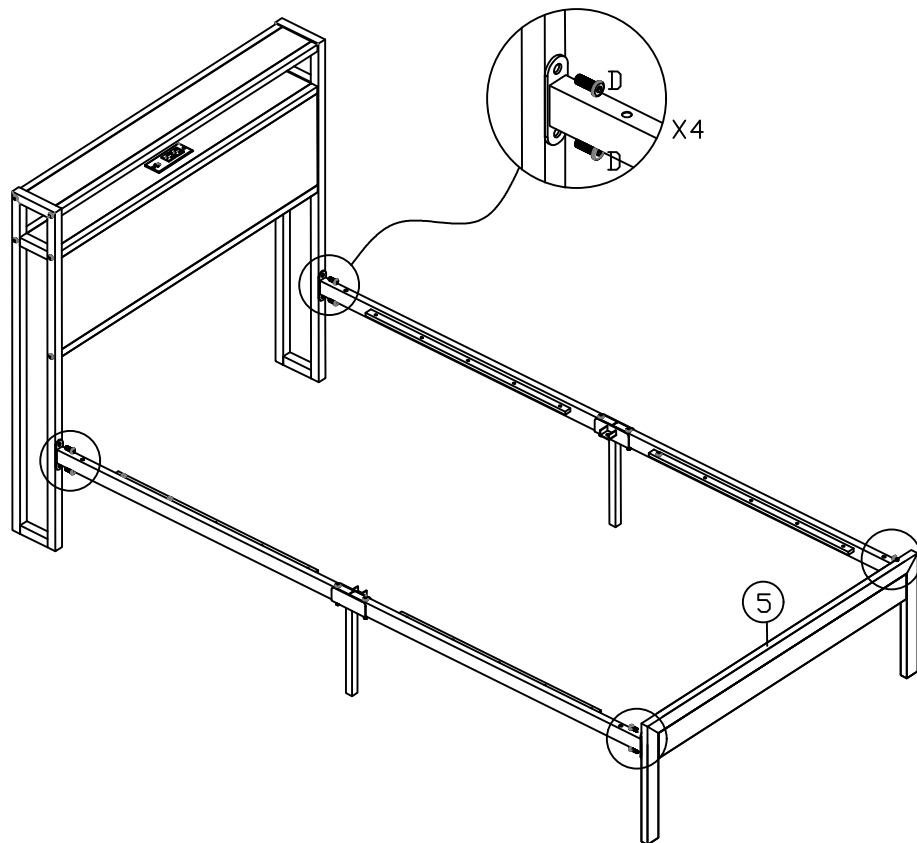

Step:6

M8*20 D X 6PCS

5# H X 1PC

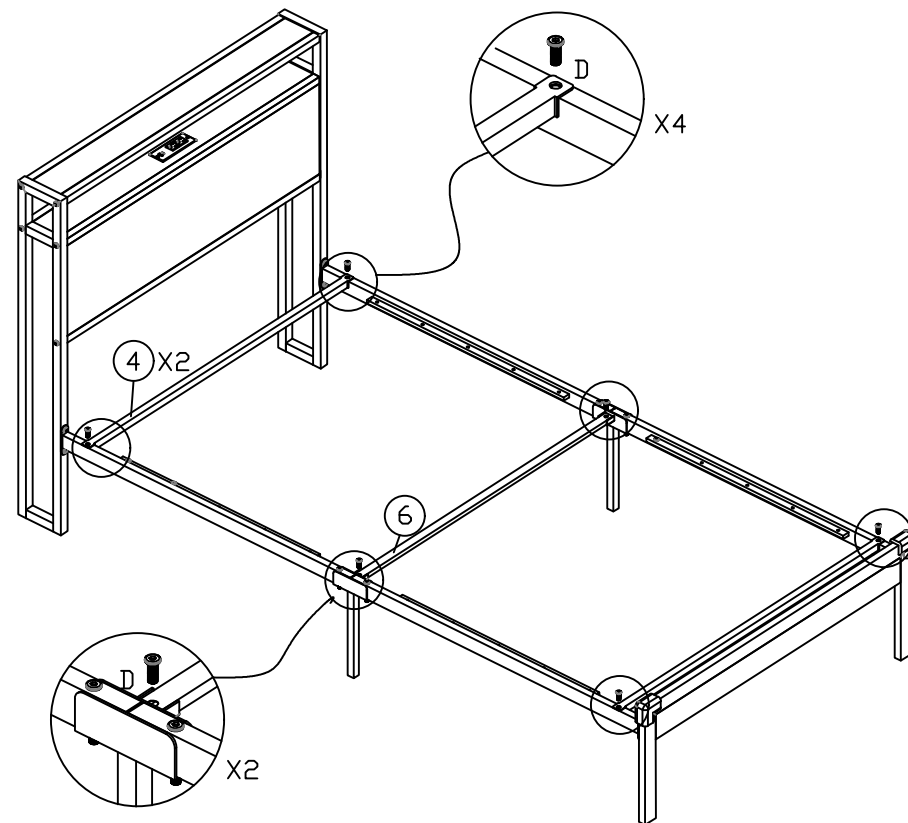


Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

Step:7

 A X 20PCS
M6*15


 G X 1PC
4#

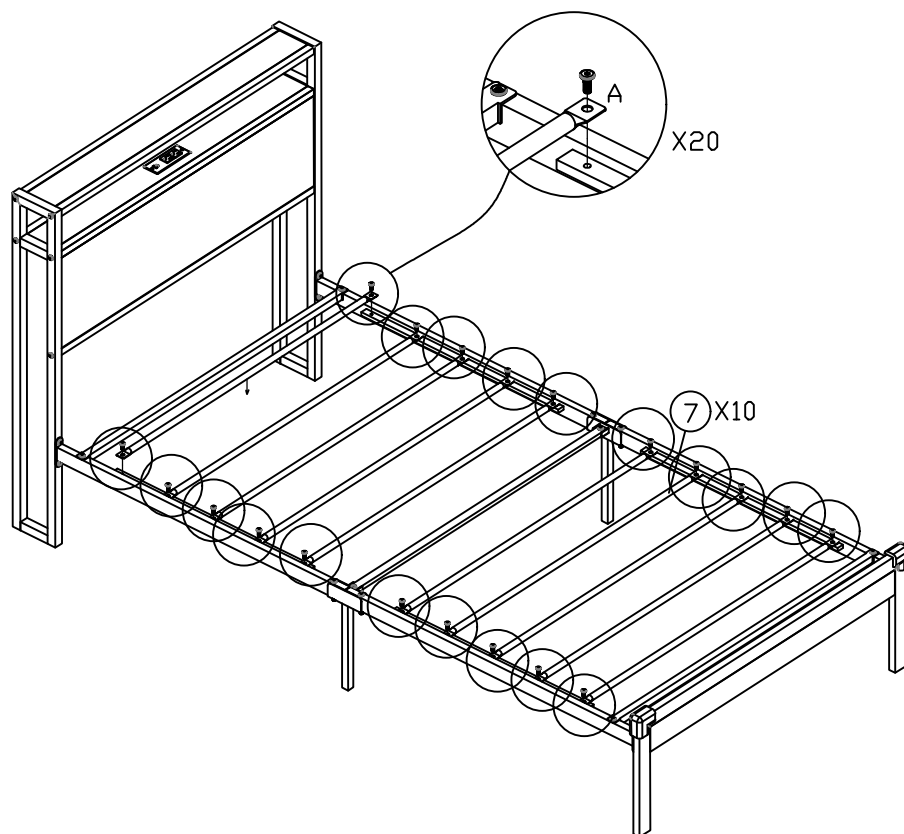



Step:8

There is a small sealing pocket in the package.
There are two crash pads in the sealing pocket.
As shown in the figure below.

Crash pads



⑭ 2PCS

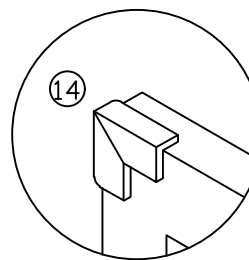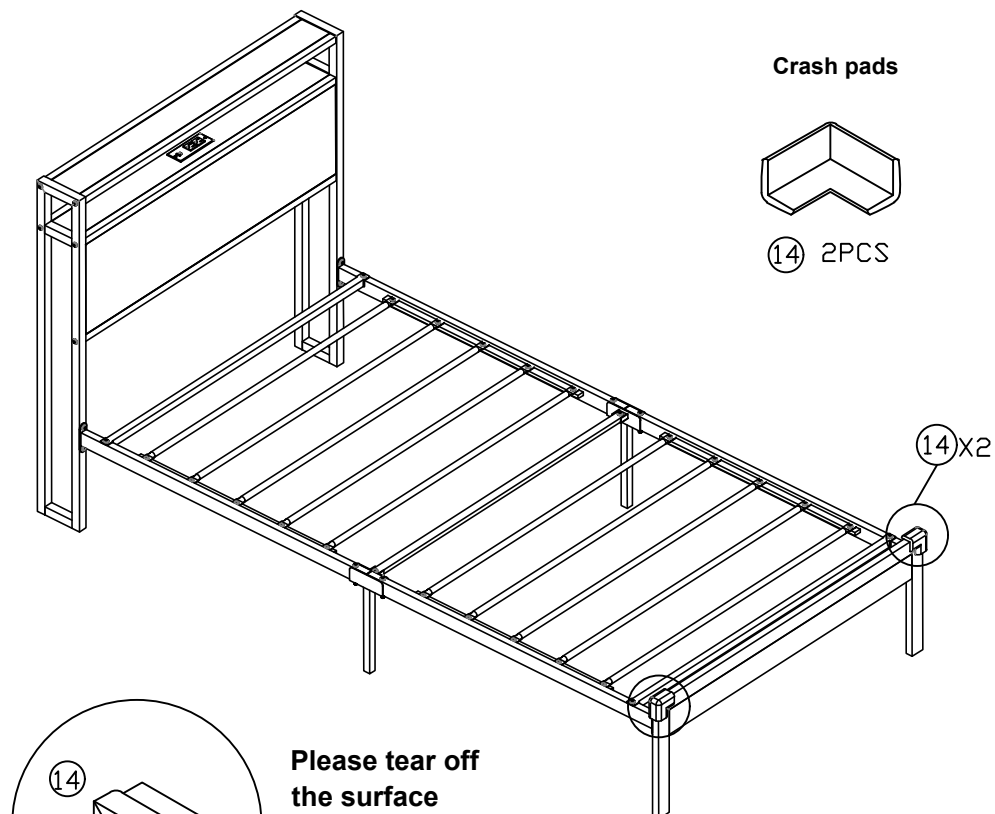

Please tear off
the surface
anti sticking
sheet and stick
the
anti-collision
cushion on it