


ASSEMBLY INSTRUCTIONS

BATH VANITY-CABINET



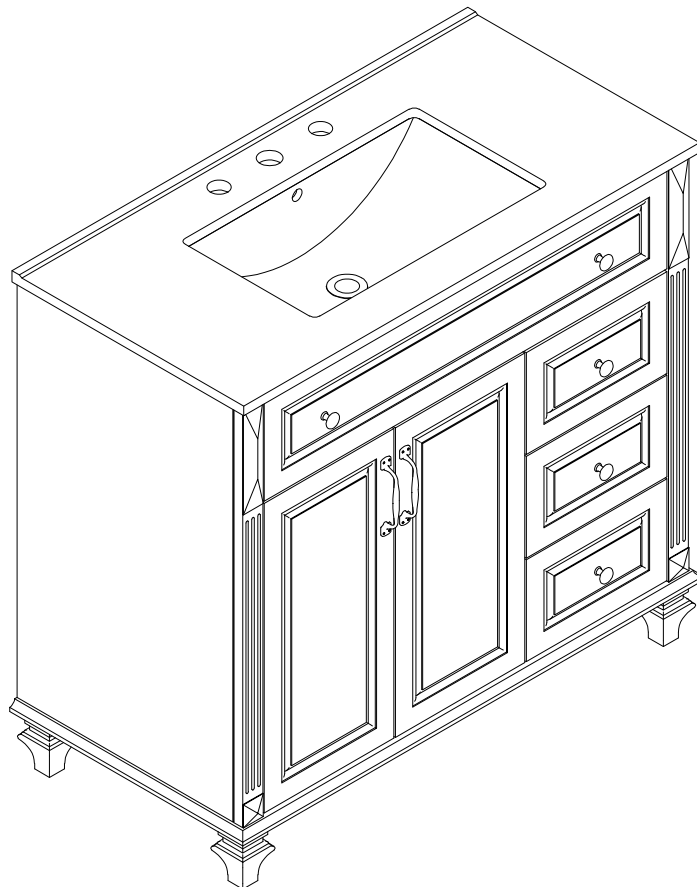


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED


***Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!**
*** Please assemble on a clean soft surface to avoid damage.**

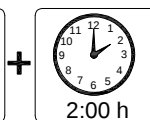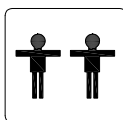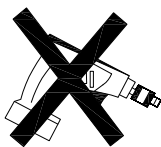

Tools Required



(Not included)




(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

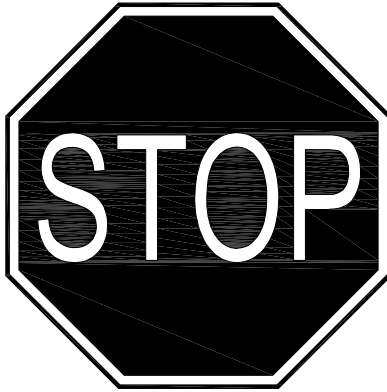

**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

**If you find that you have any trouble with assembly or
missing or damaged parts please contact the seller.**




Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


















Cam Lock Assembly Instructions

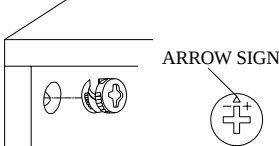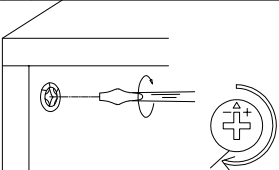	Diagram A	Insert Cam Ball into hole as shown in diagram A.
	Diagram B	Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the cam Lock to be misaligned and unable to interlock properly.
	Diagram C	Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
 Connect the panels together.		
 ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.		
 To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>		


Detail View

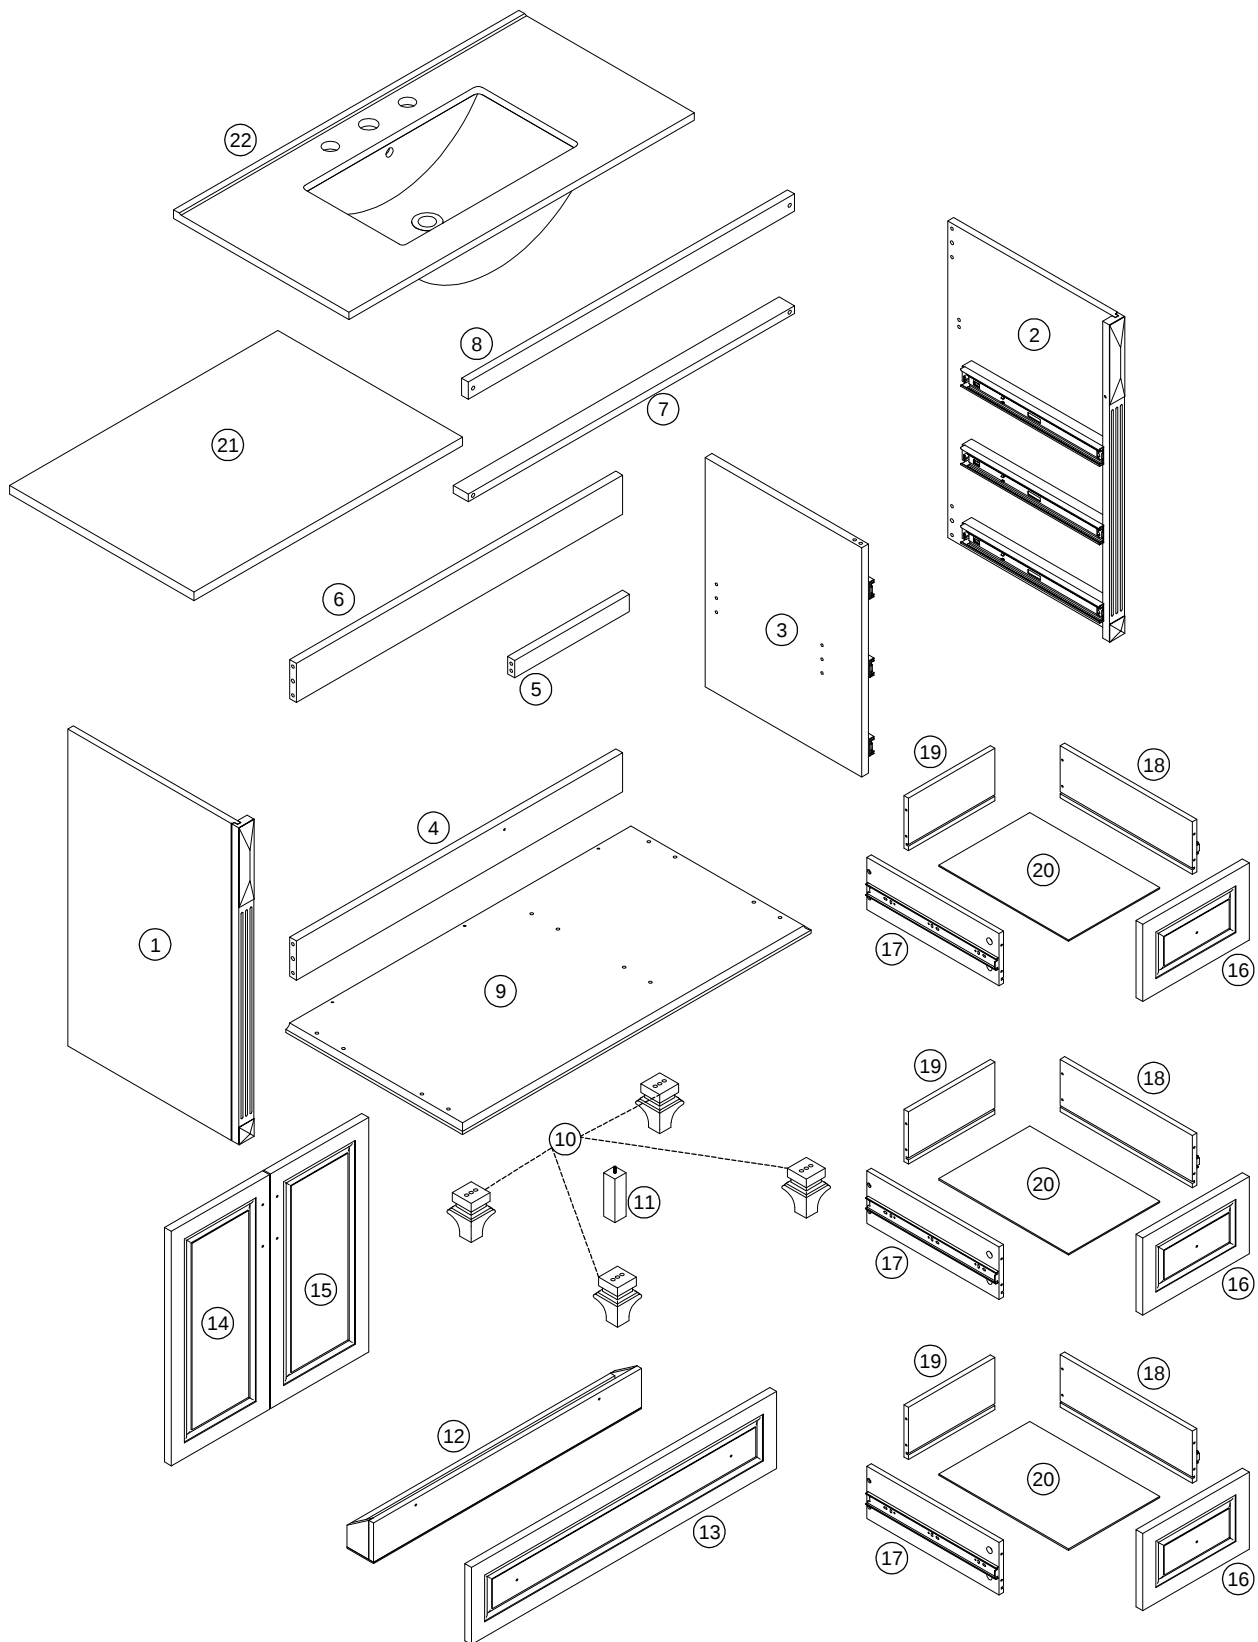

Identifying the Hardware-Identify the hardware using the illustrations below.

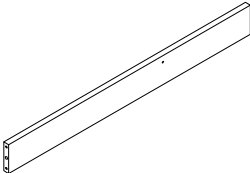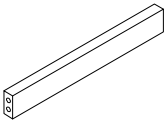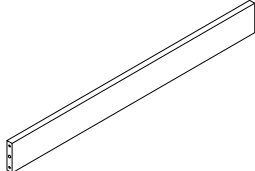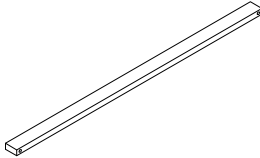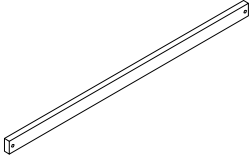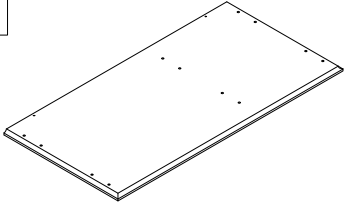
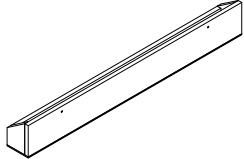
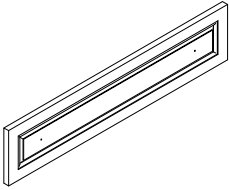
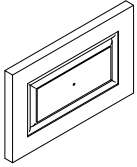
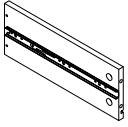
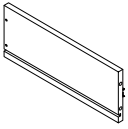

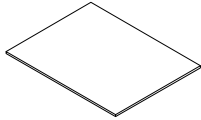
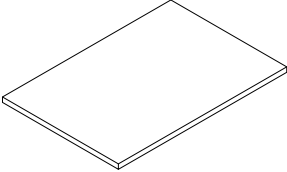
1  Side Frame (L) - 1pc	2  Side Frame (R) - 1pc	3  Vertical Panel - 1pc
4  Bottom Rear Crossbar - 1pc	5  Side Rear Crossbar - 1pc	6  Top Rear Crossbar - 1pc
7  Middle Crossbar - 1pc	8  Top Front Crossbar - 1pcs	9  Bottom Panel - 1pc
10  Legs - 4pcs	11  Middle Legs - 1pc	12  Tilt storage - 1pc
13  Flip Drawer Face - 1pc	14  Door Cabinet (L) - 1pc	15  Door Cabinet (R) - 1pc
16  Drawer Face - 3pcs	17  Drawer Side Panel (R) - 3pcs	18  Drawer Side Panel (L) - 3pcs
19  Drawer Back Panel - 3pcs	20  Drawer Bottom Panel - 3pcs	21  Adjustable Shelf - 1pc

22





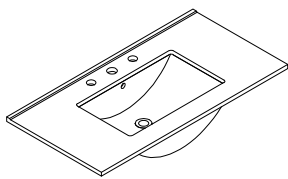




Sink - 1pc


Hardware Lists

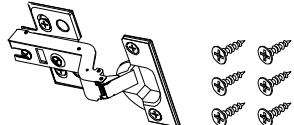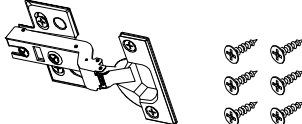A  M6x30mm	B  Ø1/4 "x13x1mm	C  Ø6*32mm
Hex-Head bolt (8pcs)+1pc	Washer (8pcs)+1pc	Three in on bolts (21pcs)+1pc
D  Ø14.5*9.5mm	E  45*12*1mm 45*17*14mm	F  Ø3.5x12mm
Three in one locks (21pcs)+1pc	Plastic Door Magnet (3 sets)	Flat head screw (18pcs)+1pc
G  Ø8x30mm	H  Pin shelf (4pcs)+1pc	I  K4mm
Wood dowel (25pcs)+1pc	Pin shelf (4pcs)+1pc	Allen key (2pcs)
J  Ø3.5x25mm	K  Knob (5pcs)	L  Handle (2pcs)
Flat head screw (4pcs)+1pc	Knob (5pcs)	Handle (2pcs)
M  Ø3.5x15mm	N  Left elbow hinge (1pc)	O  Rotary Hinge(1set)
Round head screw (6pcs)+1pc	Left elbow hinge (1pc)	Rotary Hinge(1set)
P  Ø10x10mm	Q  M4x35mm	R  M4x20mm
Plastic Canopy (12pcs)+1pc	Round head screw (12psc)+1pc	Handle screw (7pcs)+1pc
S  Ø13xM6*60mm	T  Ø4x20mm	U  Insert hinge (2 sets)
Hex-Head bolts (4pcs)+1pc	Round head screw (3pcs)+1pc	Insert hinge (2 sets)
V  Half overlay hinge (2 sets)	W  Anti fall Hardware (2 sets)	X  M4x30mm
Half overlay hinge (2 sets)	Anti fall Hardware (2 sets)	Handle screw (2pcs)+1pc


STEP:1

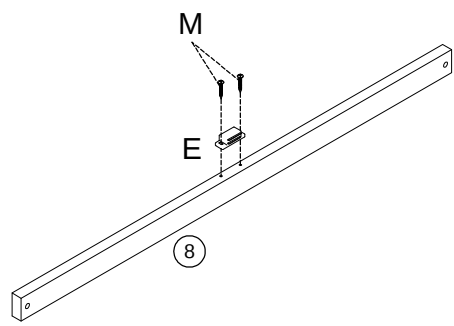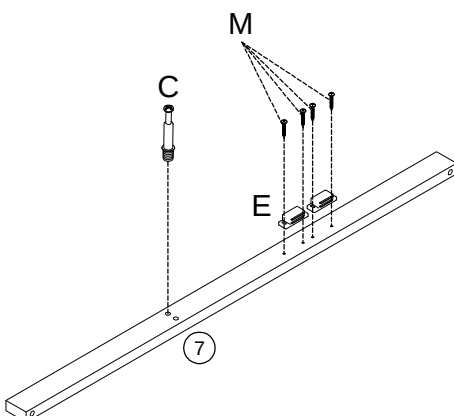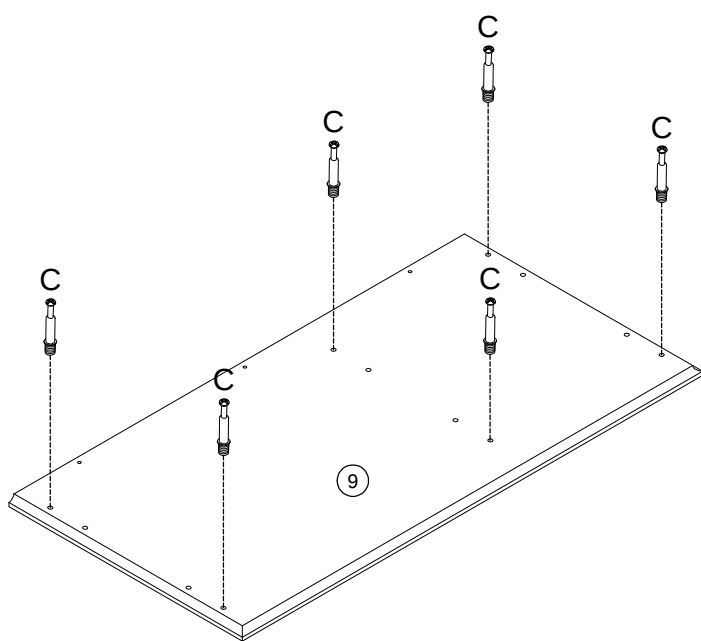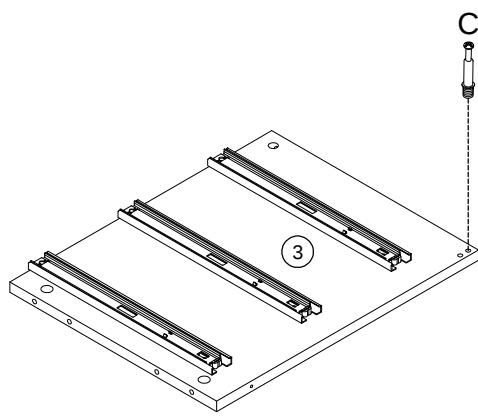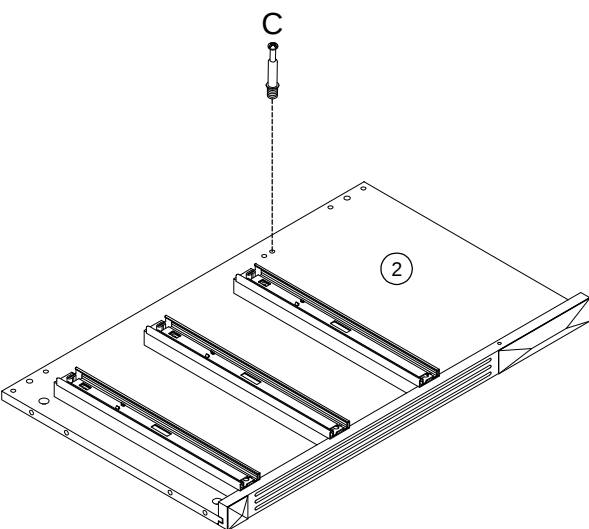

C	
9pcs	
E	
3pcs	
M	
6pcs	

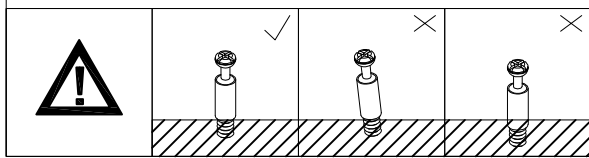

STEP:2

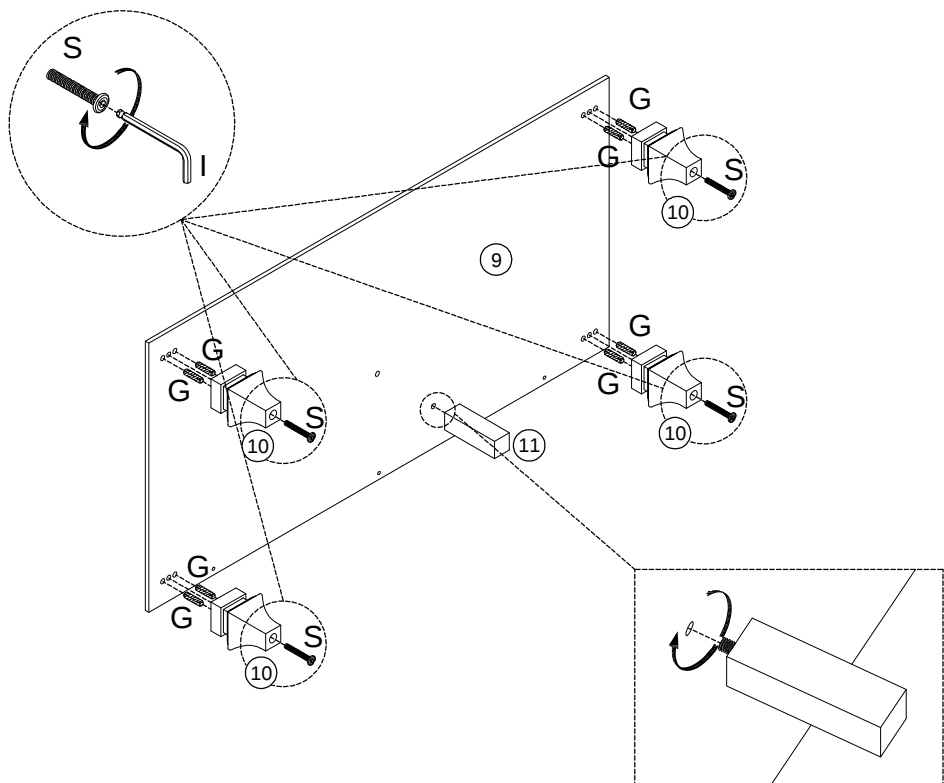

G




8pcs

S



4pcs

STEP:3

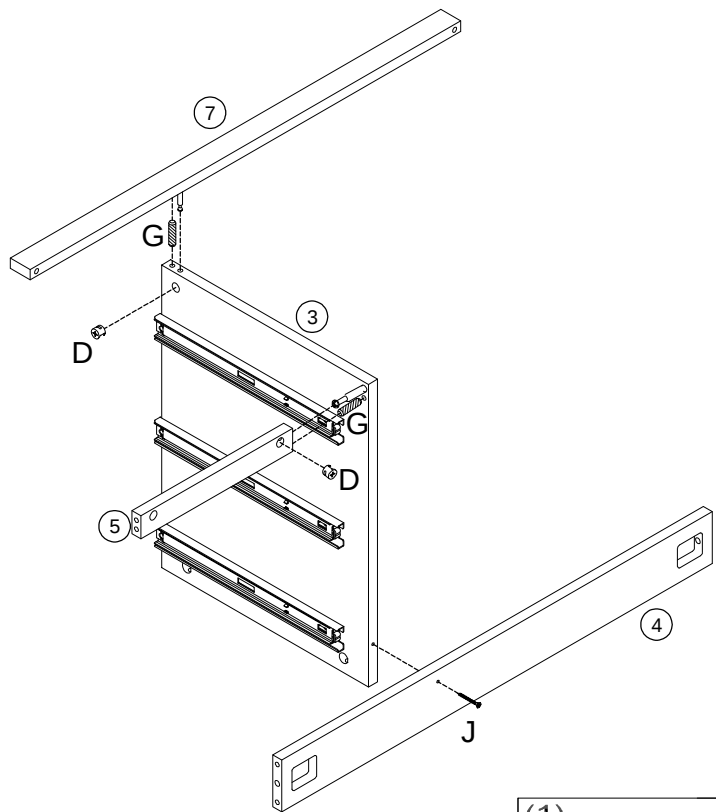

D



2pcs

G




2pcs



J






1pc


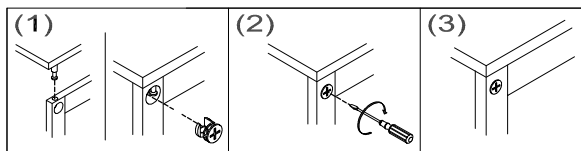





STEP:4

E	F	K
		
1pc	6pcs	2pcs
X	O	T
		
2pcs	1set	3pcs

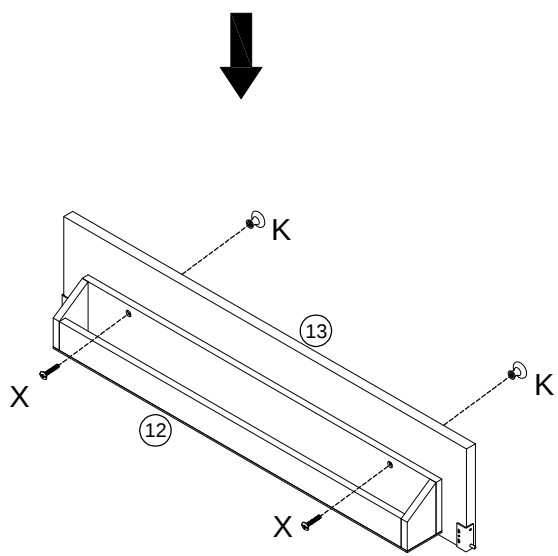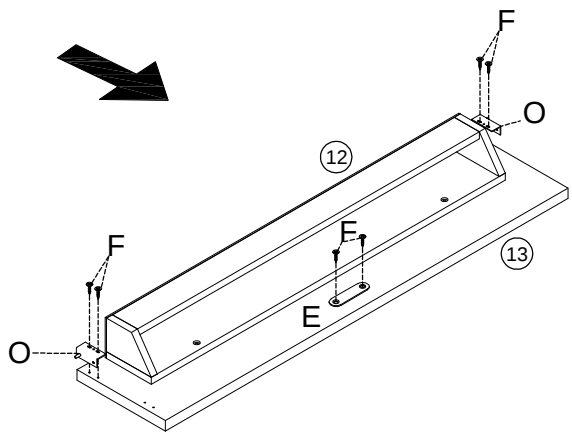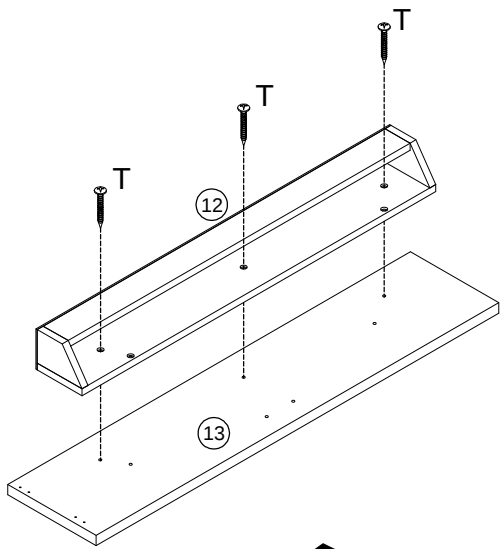







STEP:5

A	B
	
4pcs	4pcs
D	G
	
1pc	5pcs

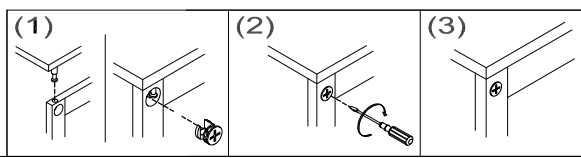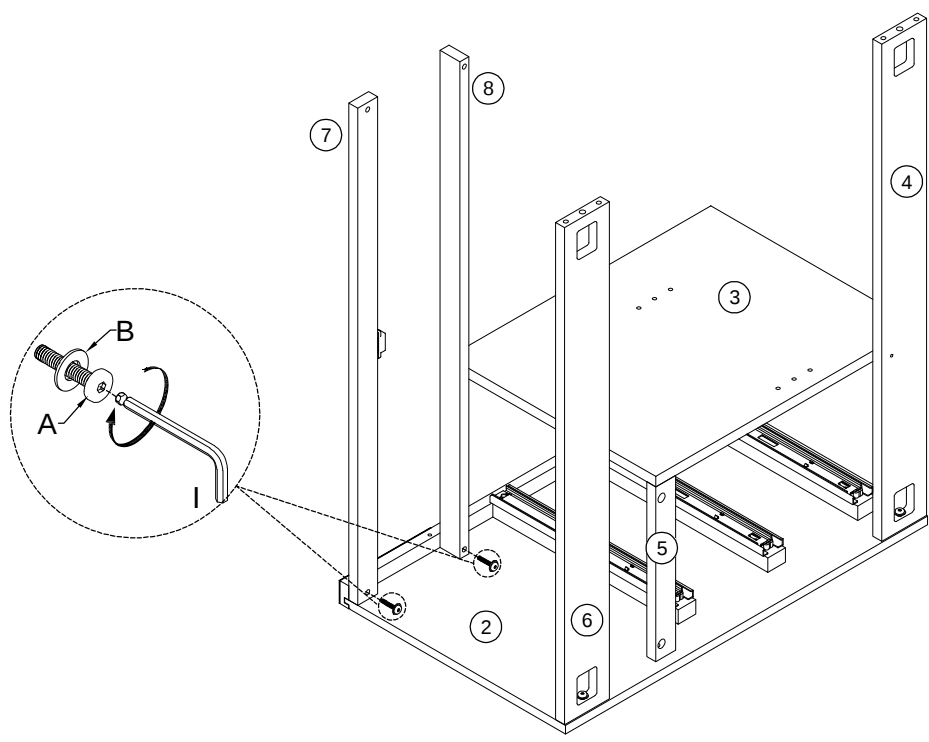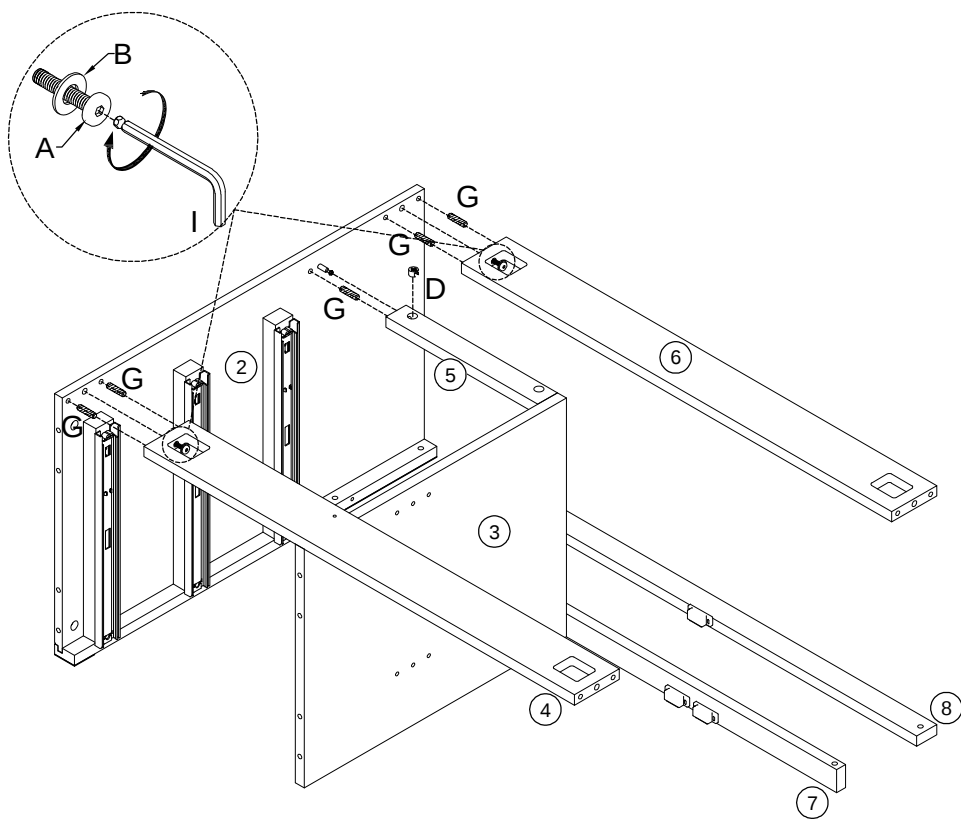


STEP:6

A	B
	
4pcs	4pcs
G	
	
4pcs	

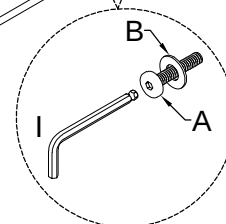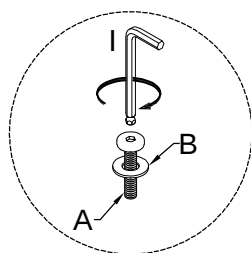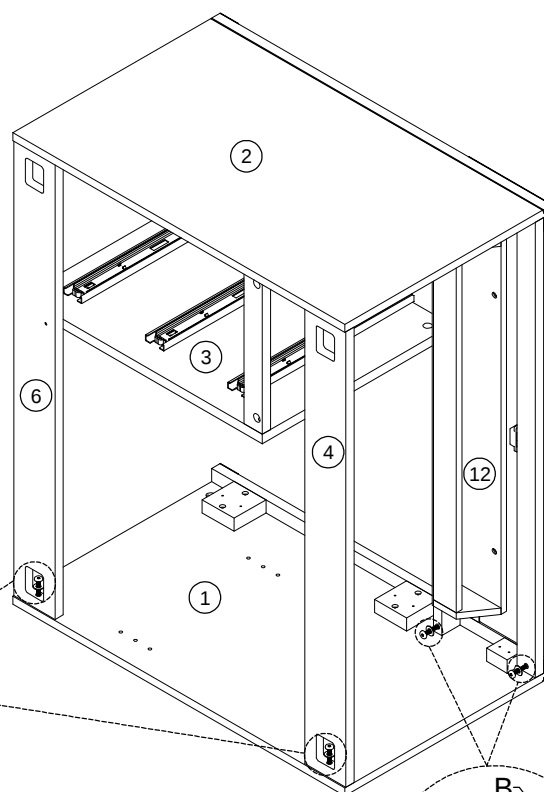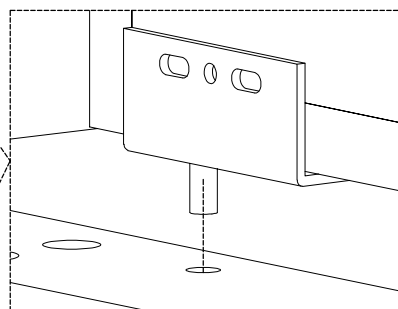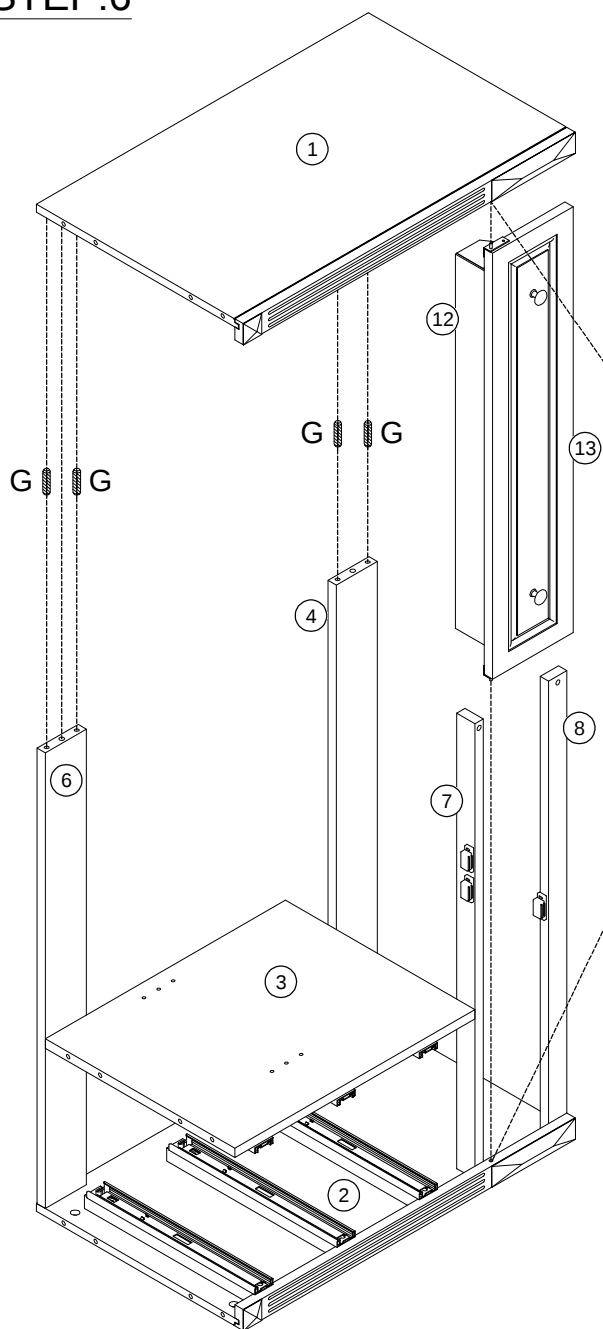

STEP:7

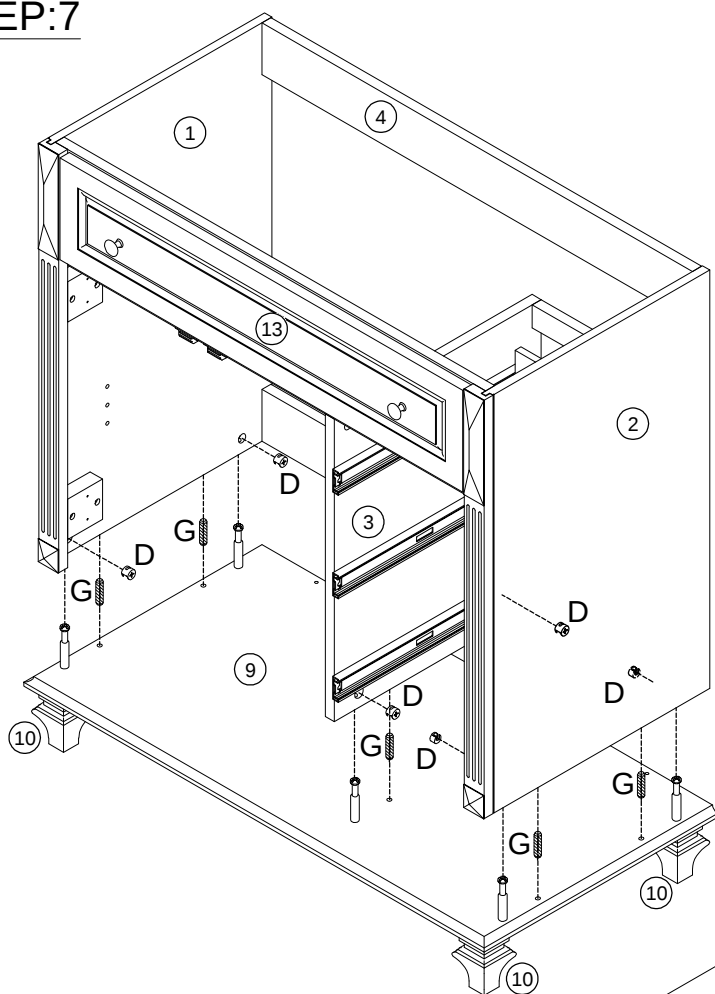

D




6pcs

G





6pcs

J






3pcs

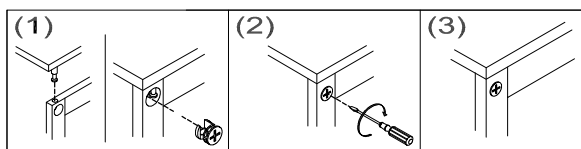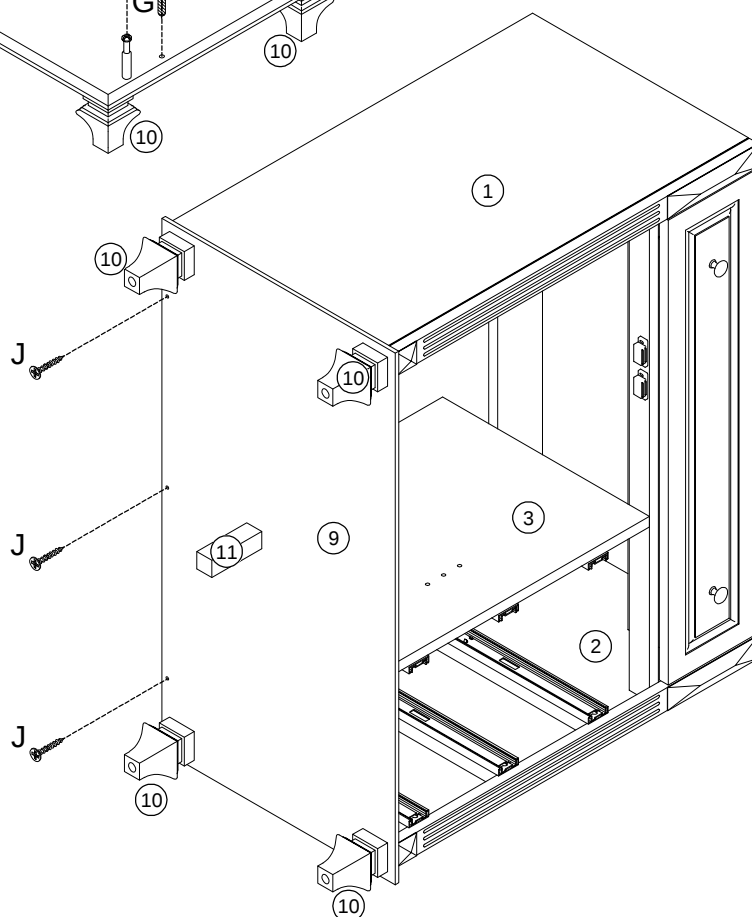



STEP:8

F	N
	
4pcs	1pc

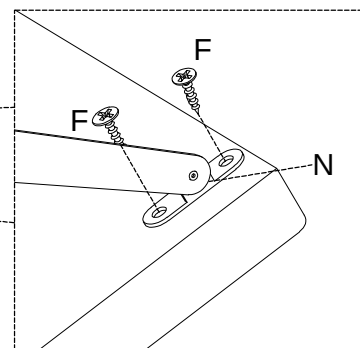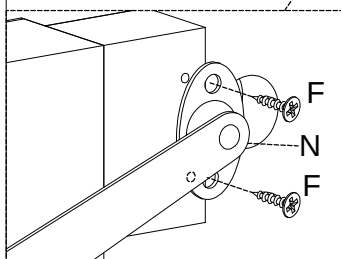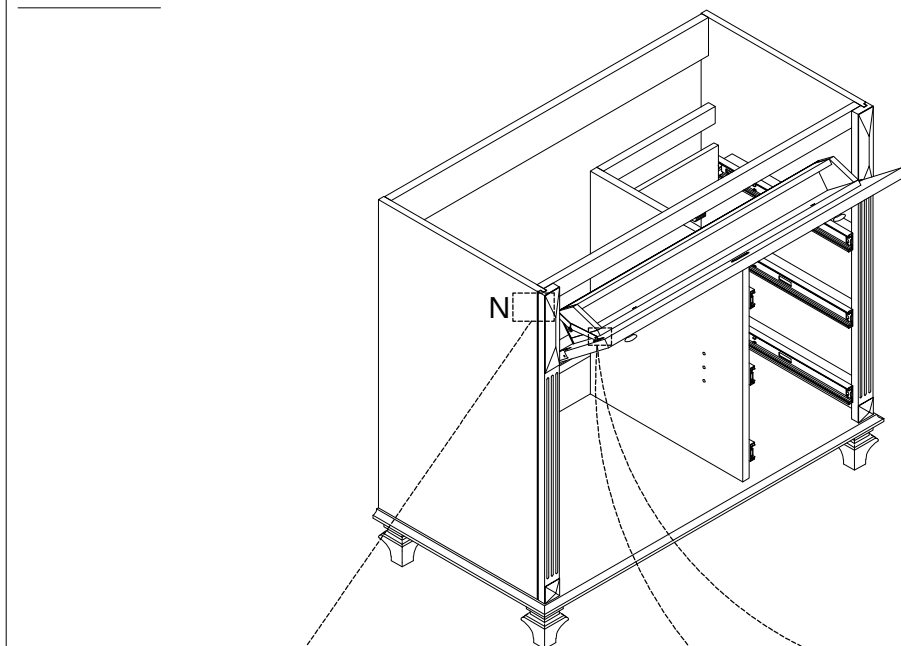


STEP:9

E	F
	
2pcs	4pcs
U	U
	
2pcs	4pcs
V	V
	
2pcs	4pcs

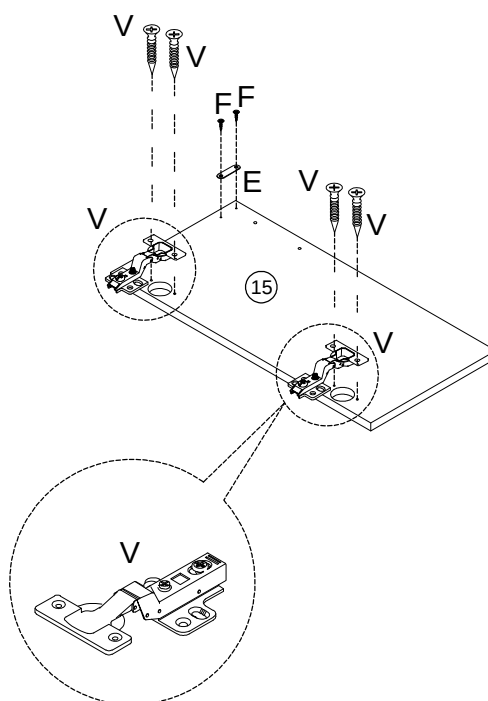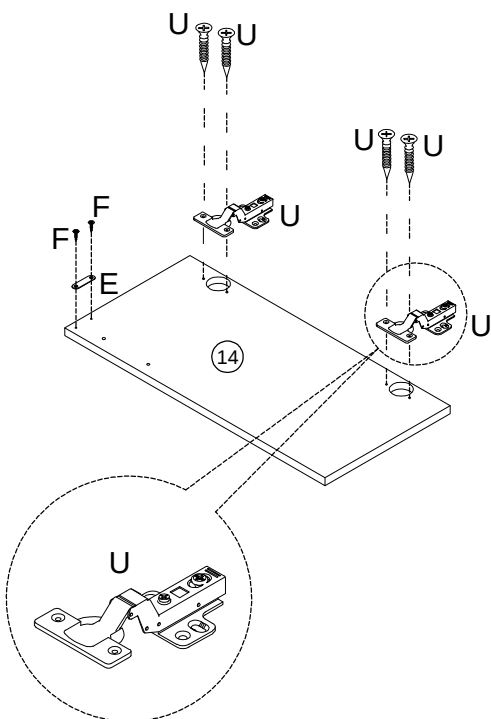


*** Please note that hinges U and V are different, please do not install them backwards.**


STEP:10

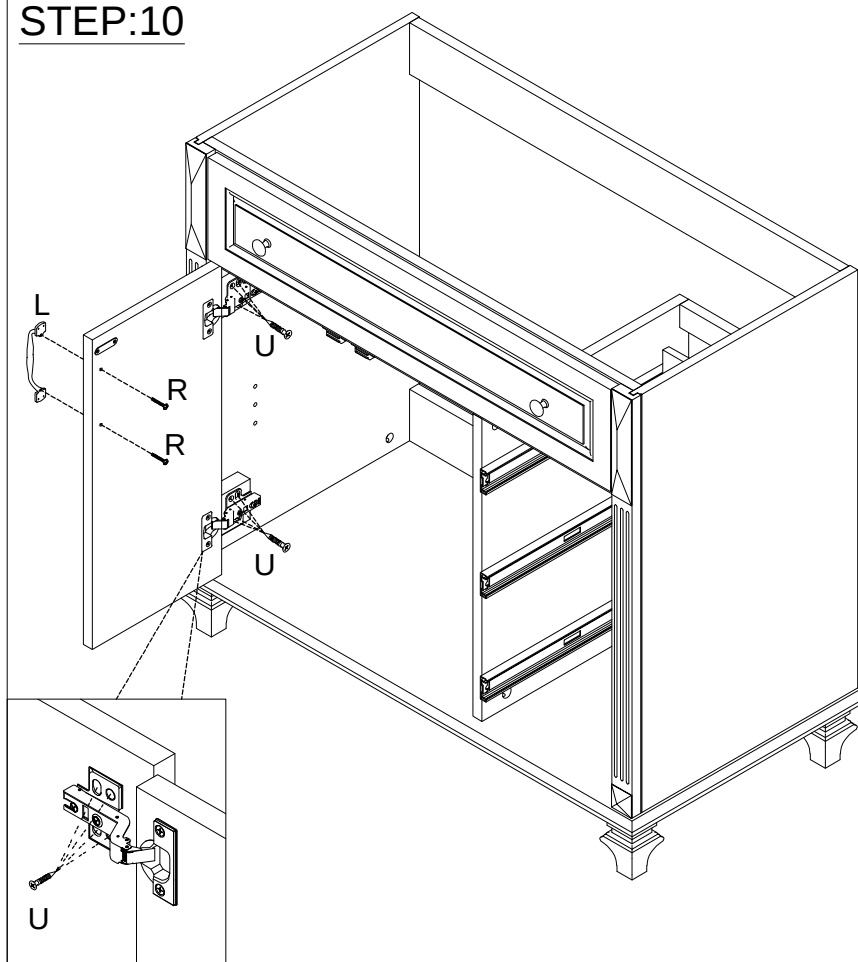


L	R	U
1pc	2pcs	8pcs

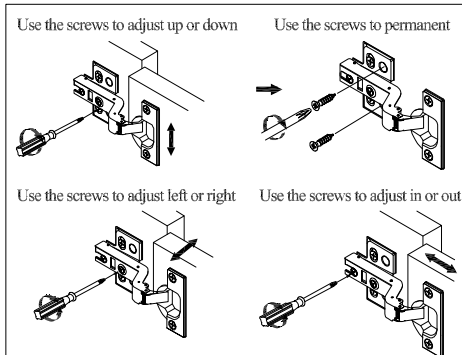


STEP:11

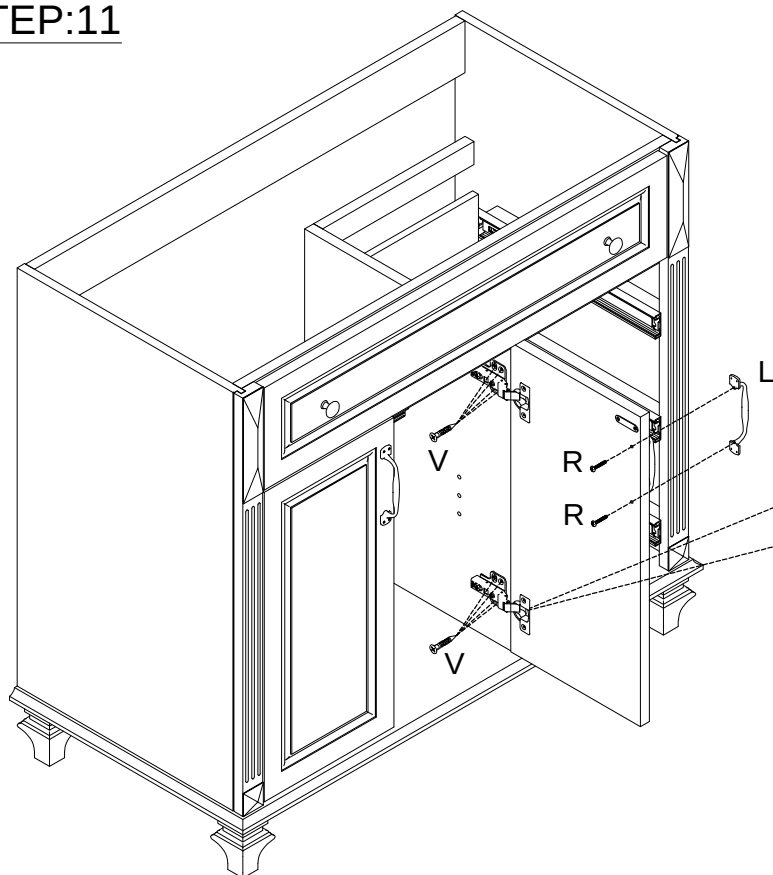

L	R	V
1pc	2pcs	8pcs

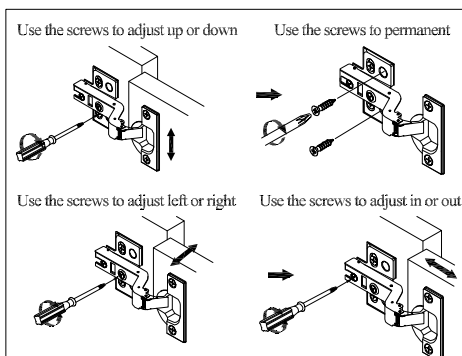


STEP:12

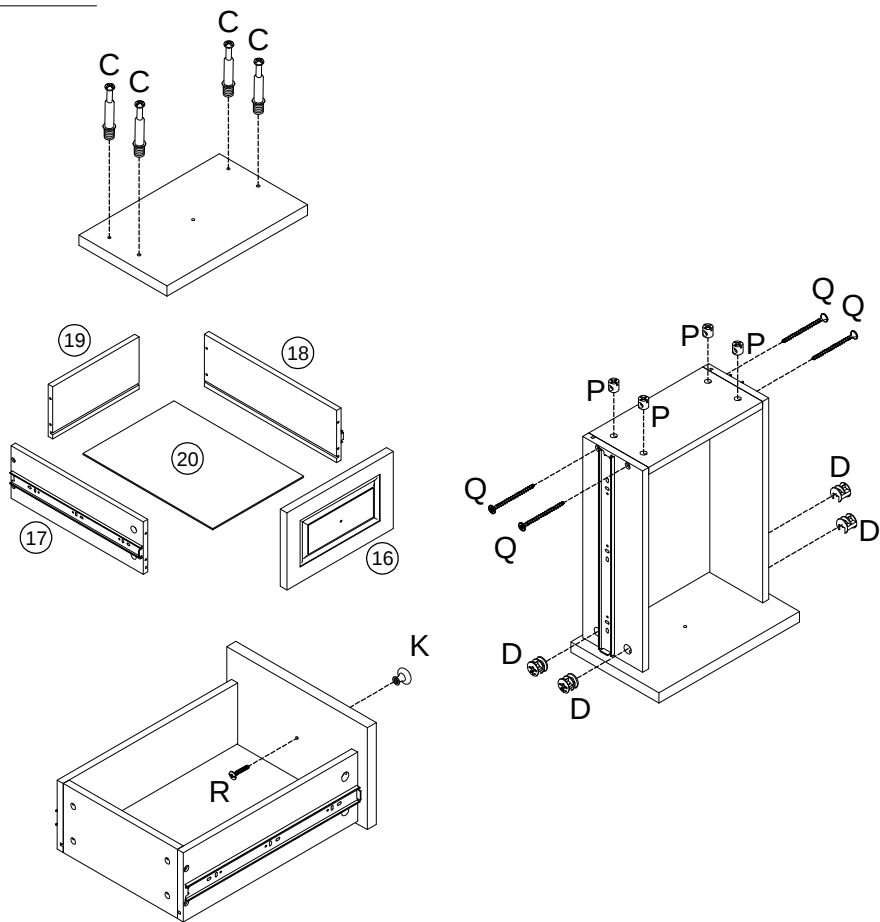



C	D	K
		
12pcs	12pcs	3pcs
R	P	Q
		
3pcs	12pcs	12pcs



X3

STEP:13

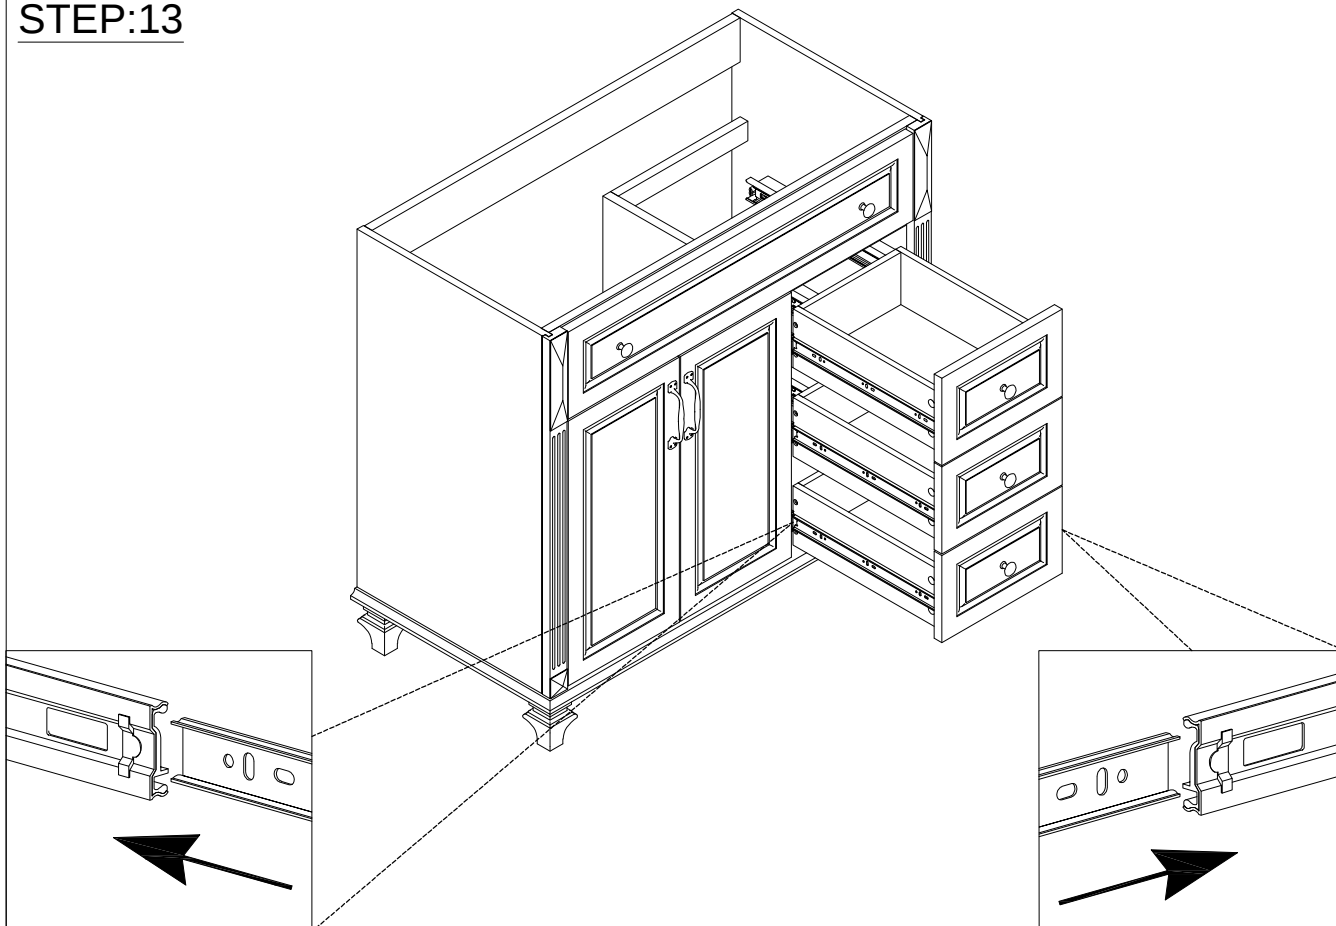

STEP:14


F	H
	
4pcs	4pcs

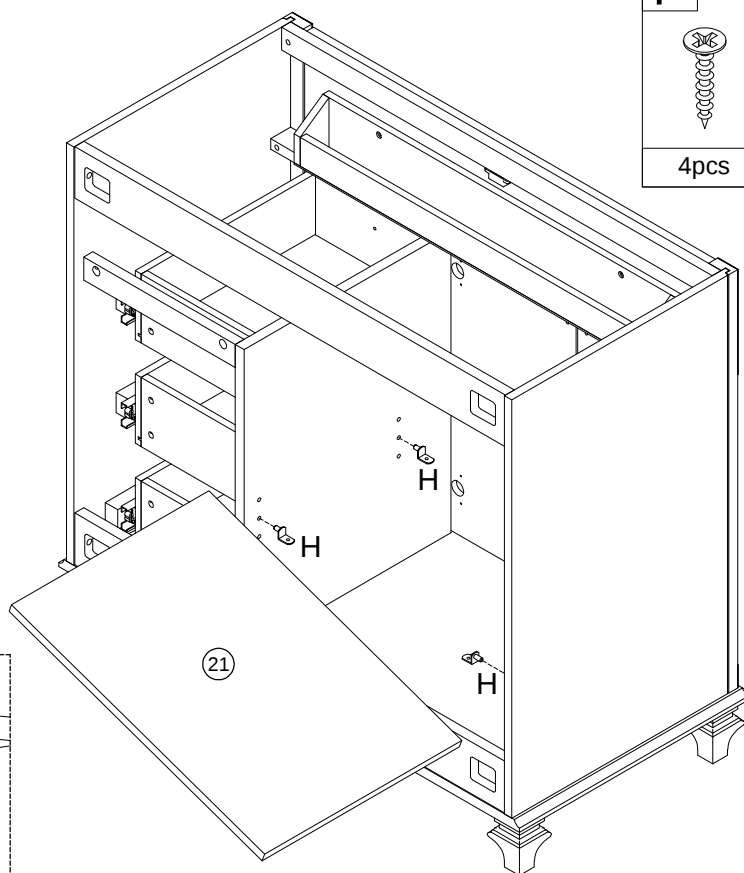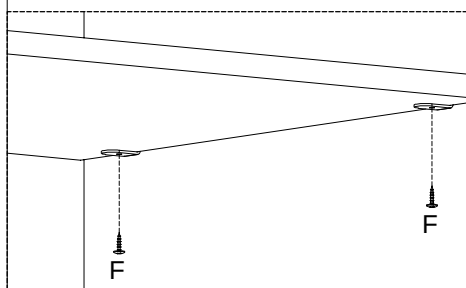

STEP:15


W

2pcs

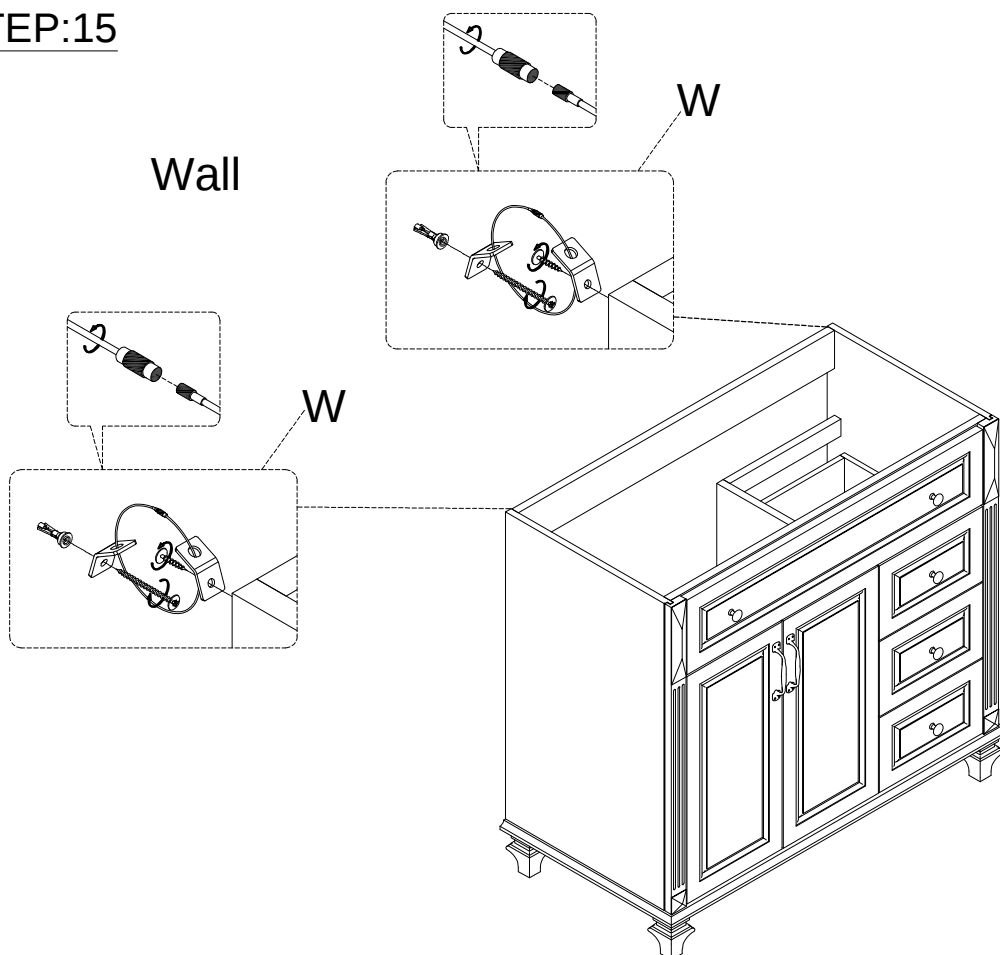


STEP:16


Install the sink on the cabinet with glue.
Let stand for 24 hours

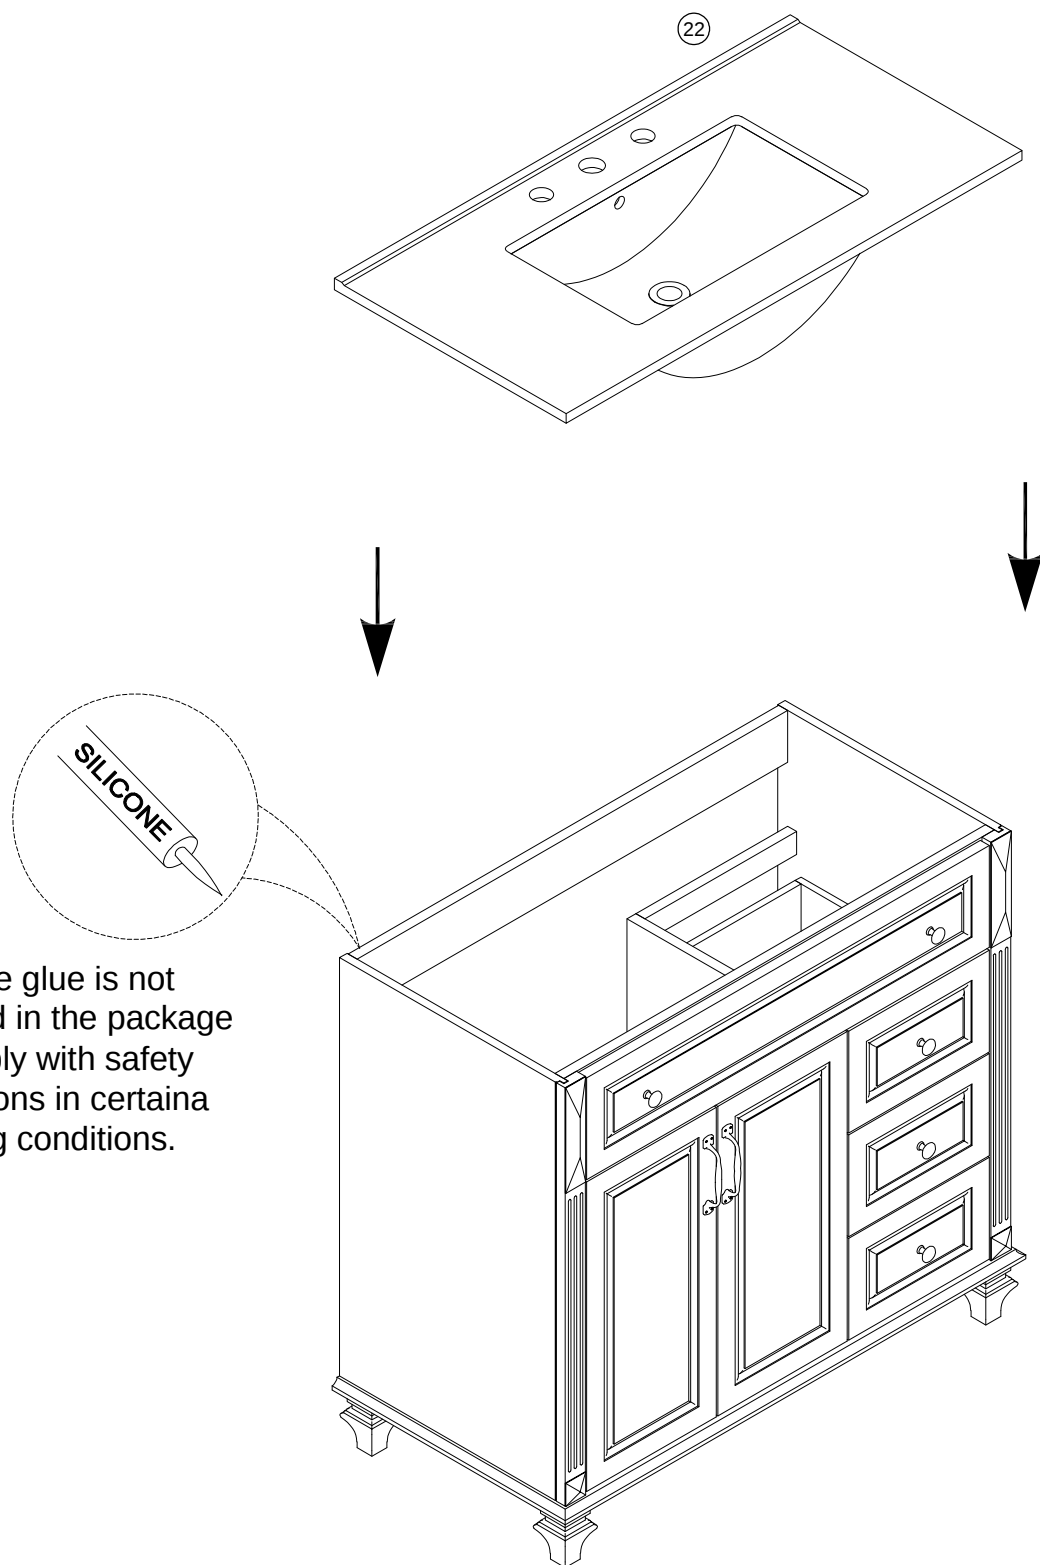

*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

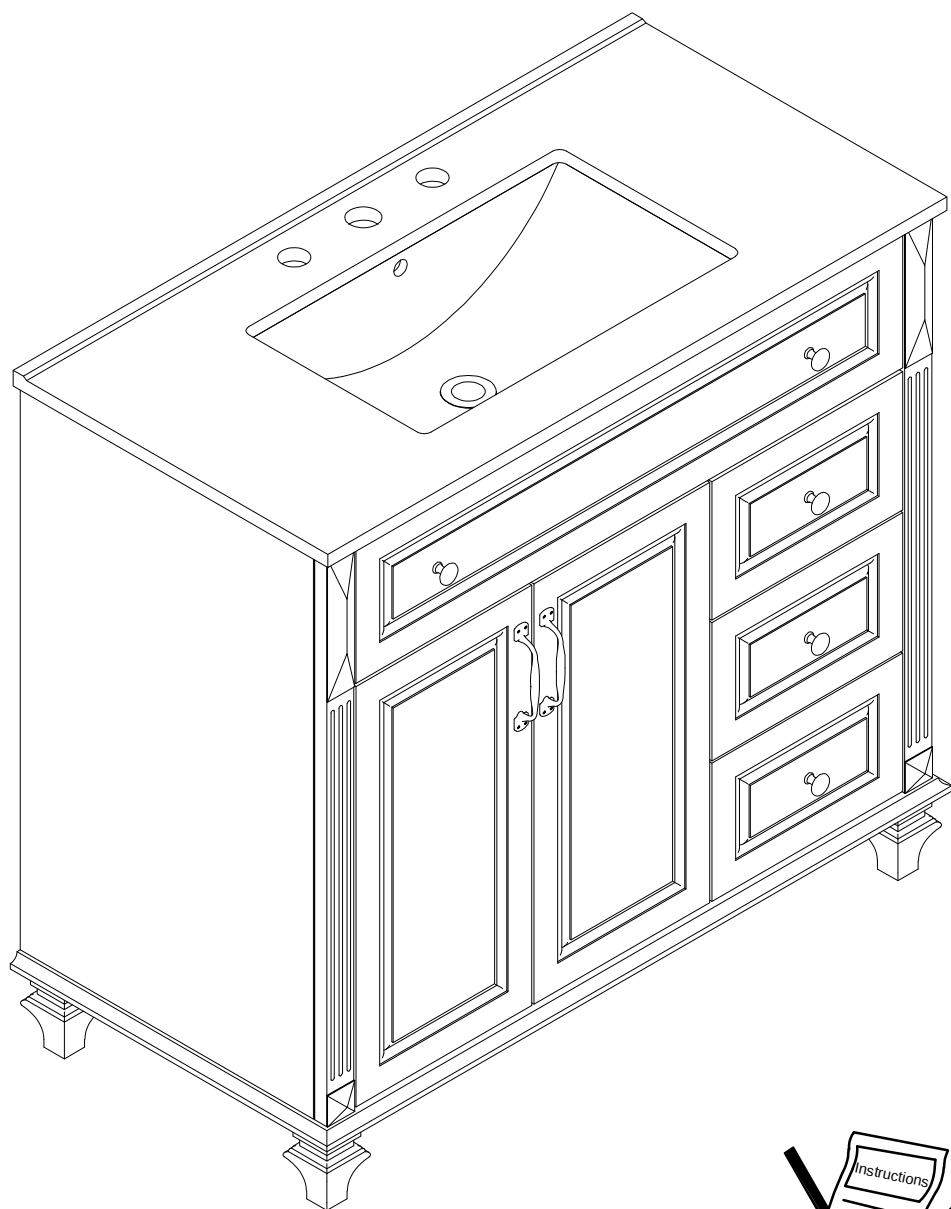

HINGE ADJUSTMENTS

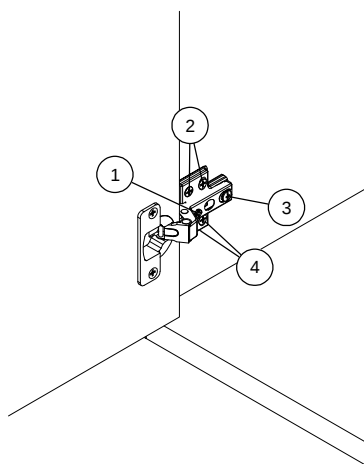


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

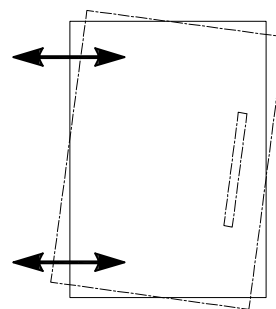


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

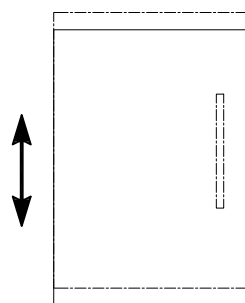

③ Forward and back adjustment

