


Hall Tree

Assembly Instructions - Please keep for future reference

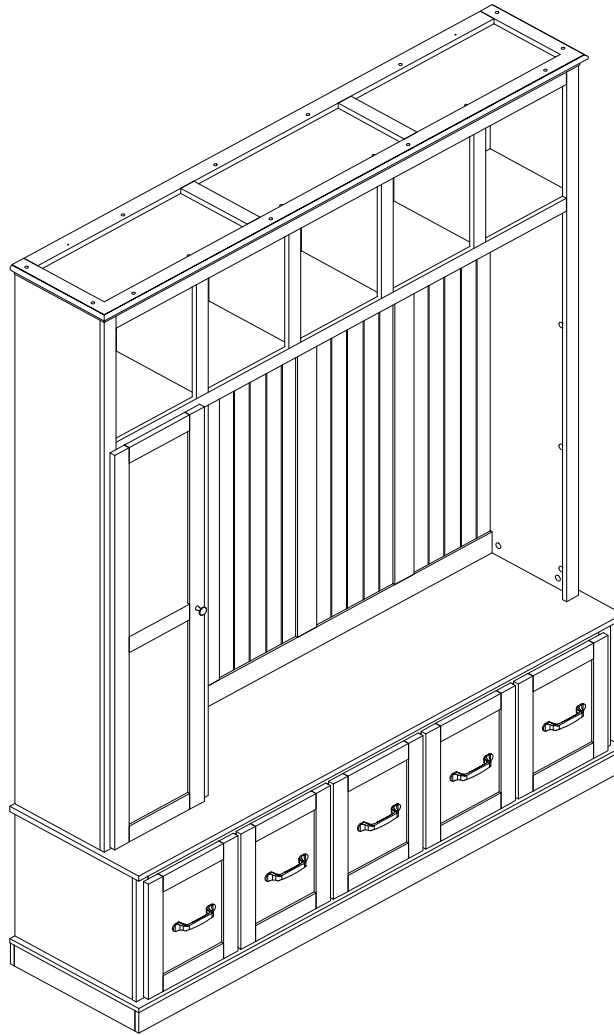

Dimensions

Width- 59.05inch

Depth-15.75inch

Height-78.74inch



WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning –
please follow these instructions




















To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below



Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

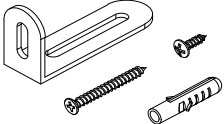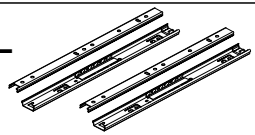A  Cam Bolt ×123+2	B  Cam Bolt ×129+2	C  6*30mm Dowel ×94+2	D  4*40mm Screw ×24+2
E  3*12mm Screw ×50+2	F  4*8mm Bar Handle ×5set	G  Coat Hook ×5	H  Door Hinge ×2
I  Felt Pad ×8+1	J  Anti-tip Device ×2set	K  4*18mm Round Handle ×1	L  Slide Rail ×5set
M  3.5*14mm Screw ×20+2	N  4*30mm Screw ×36+2	O  Allen key ×2	P  Screw Rod ×8
Q  Nut ×8	R  Back Panel Clip ×8+1	S  Nut ×6	T  Cam Bolt ×6
U  Hole Cover ×50+2	V  4*50mm Screw ×12+1	W  8*30mm Dowel ×8+1	

Tools required Not Included



Phillips screwdriver
(medium & large)

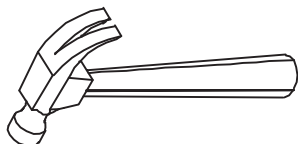


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

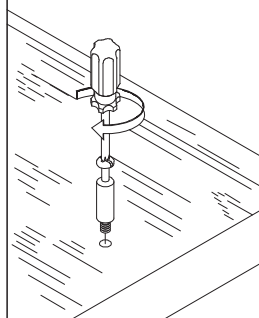

Step 2

Push the male camlock into the entry hole.

2

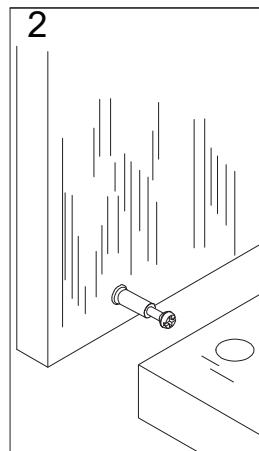


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

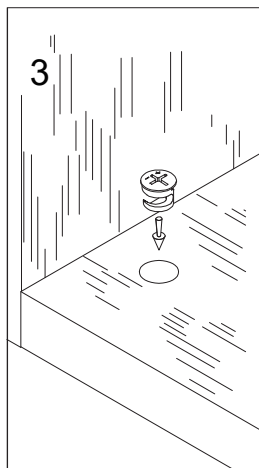


Step 4

Turn the female camlock clockwise with a screwdriver.



You should feel a click when the camlock is locked in place.

The joint is now secure.

4












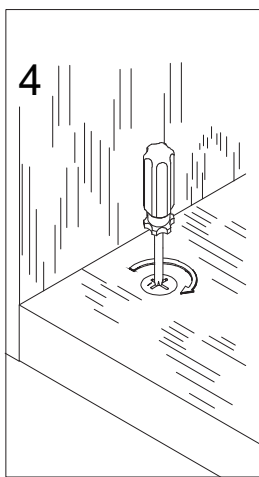


Assembly Instructions

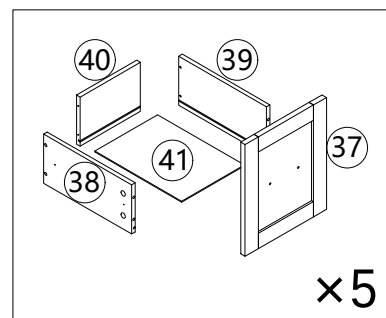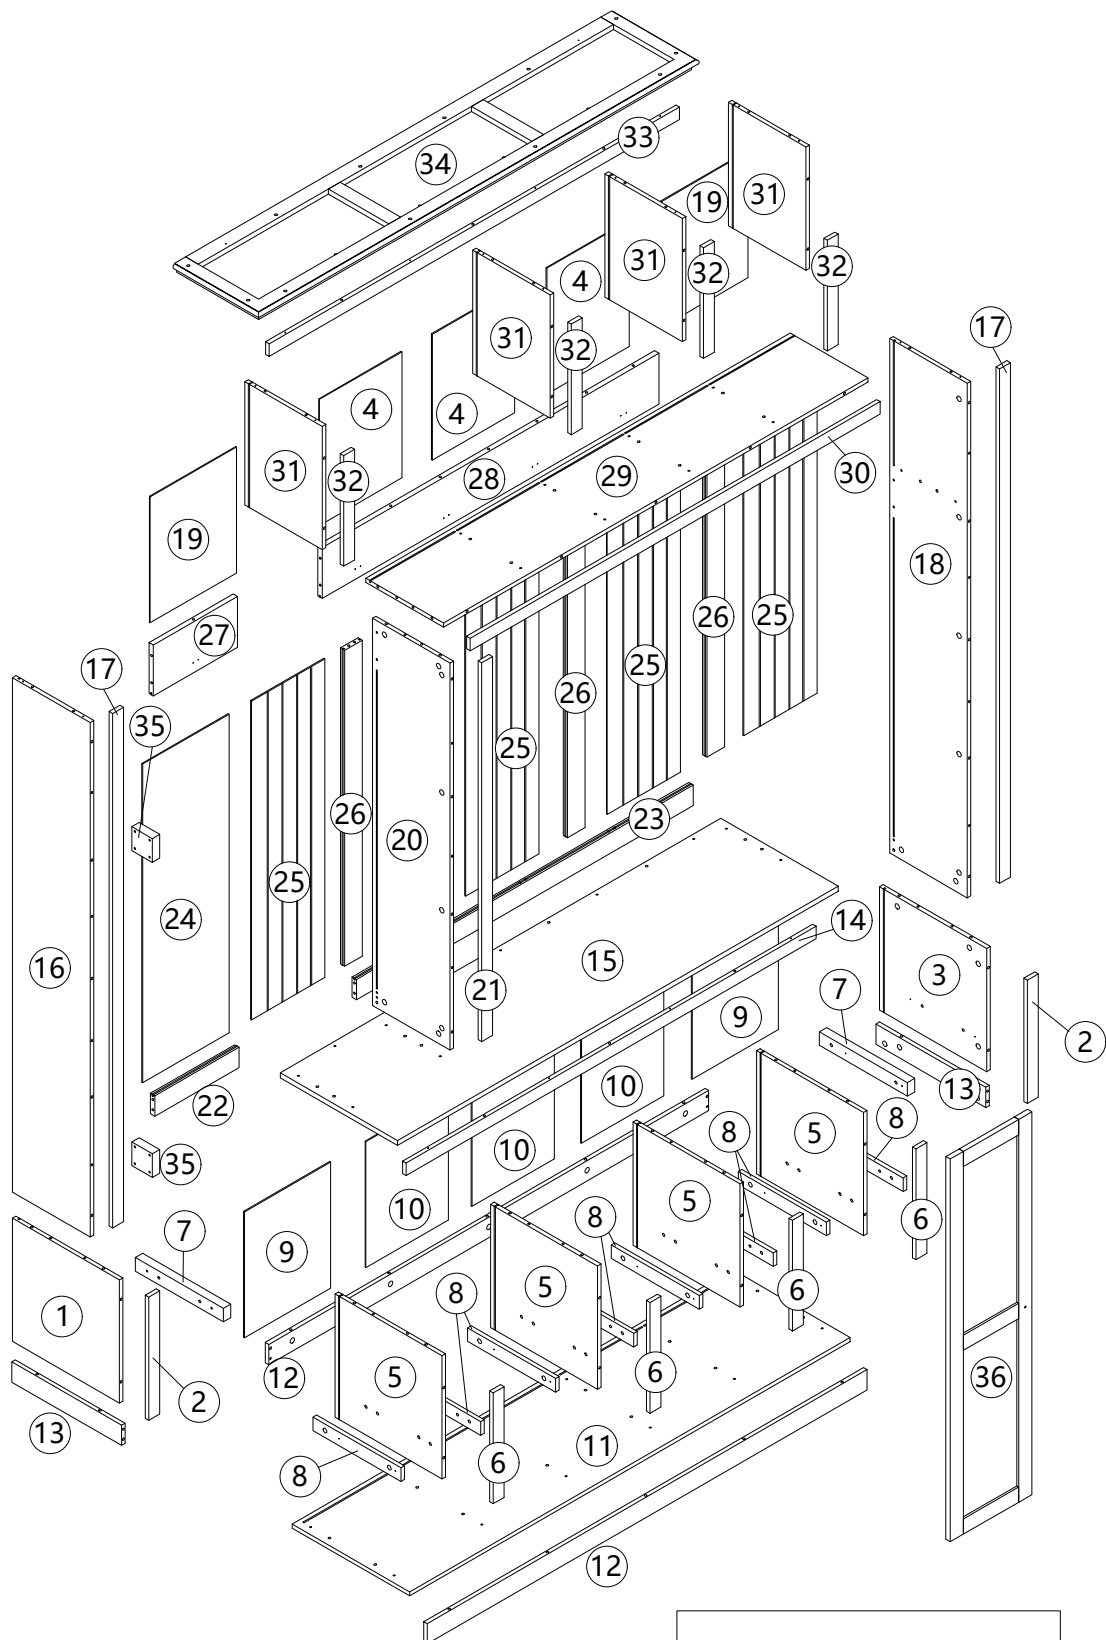








PART LIST

This product comes in 2 box.

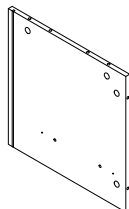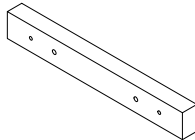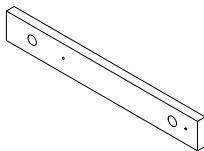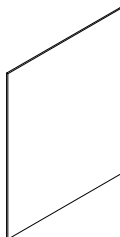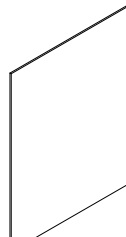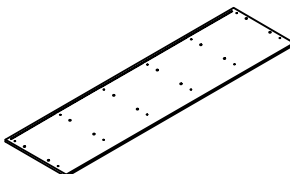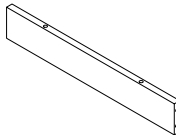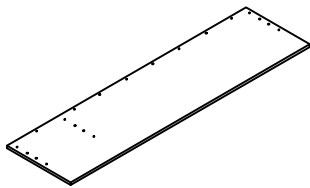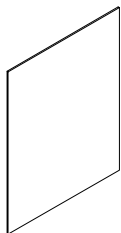			
① x1 364×364×12	② x2 364×37×12	③ x1 364×364×12	④ x3 372×281×3
			
⑤ x4 364×364×12	⑥ x4 326.5×37×12	⑦ x2 300×40×25	⑧ x8 300×40×12
			
⑨ x2 372×294×3	⑩ x3 372×281×3	⑪ x1 1502×400×12	⑬ x2 374×60×12
			
⑮ x1 1502×400×15	⑲ x2 372×294×3	⑳ x1 1143×264×12	㉑ x1 1118.5×37×12














PART LIST

This product comes in 2 box.

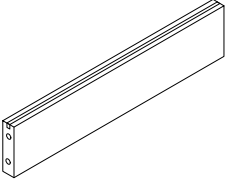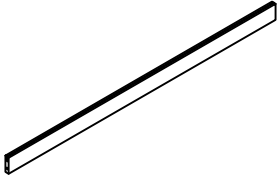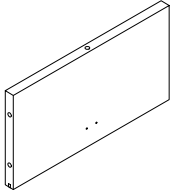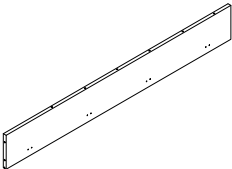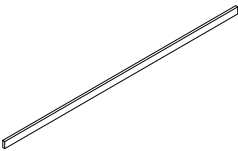 ②② x1 287×60×15	 ②③ x1 1148×60×15	 ②④ x1 941×294×3	 ②⑥ x3 933×60×15
 ②⑦ x1 287×150×15	 ②⑧ x1 1148×150×15	 ③⑩ x1 1398×37×12	 ③① x4 364×264×12
 ③② x4 326.5×37×12	 ③⑤ x2 70×70×25		



PART LIST

This product comes in 2 box.

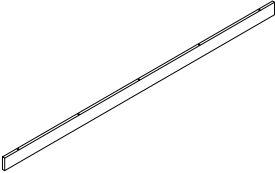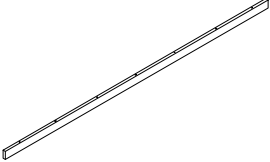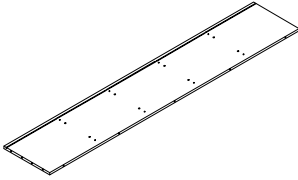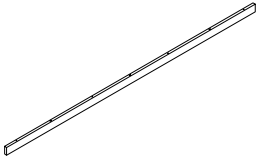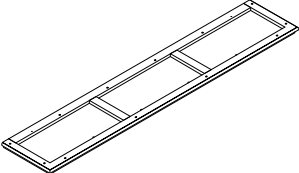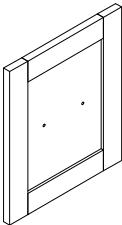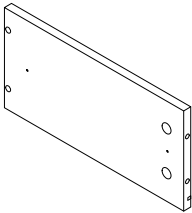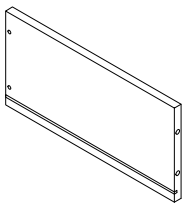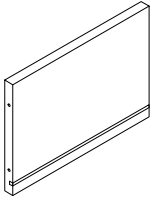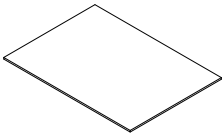			
⑫ x2 1500×60×12	⑭ x1 1398×37×12	⑯ x1 1519×265×12	⑰ x2 1519×37×12
			
⑱ x1 1519×265×12	⑳ x4 941×250×3	㉑ x1 1447×264.5×12	㉓ x1 1398×37×12
			
㉔ x1 1502×292×30	㉖ x1 1130×278×15	㉗ x5 330×278×15	㉘ x5 300×145×12
			
㉙ x5 300×145×12	㉚ x5 206×145×12	㉛ x5 214×296×3	Hardware kit x1



Assembly Instructions

Step 1

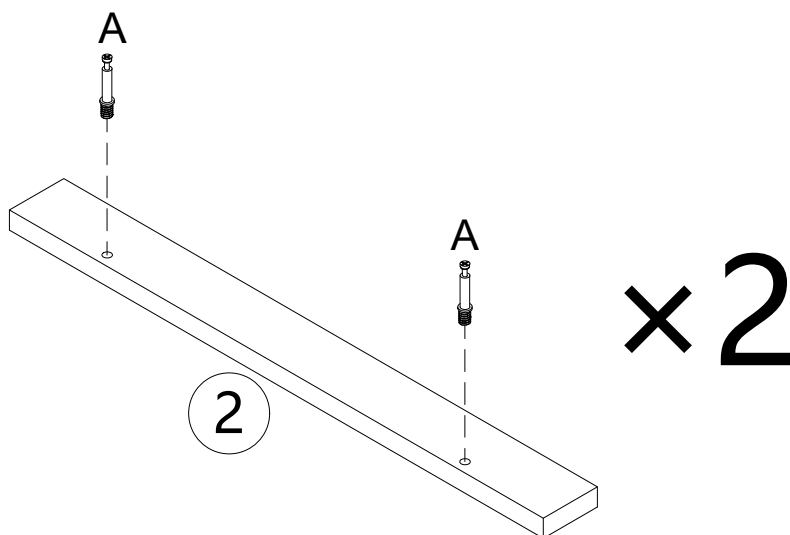

Cam Bolt $\times 4$



Step 2

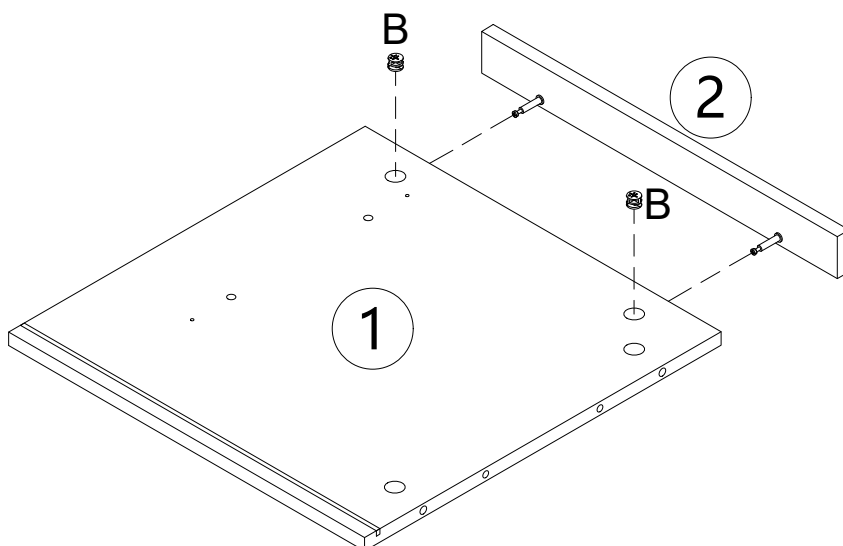


Cam Bolt $\times 2$

Assembly Instructions

Step 3

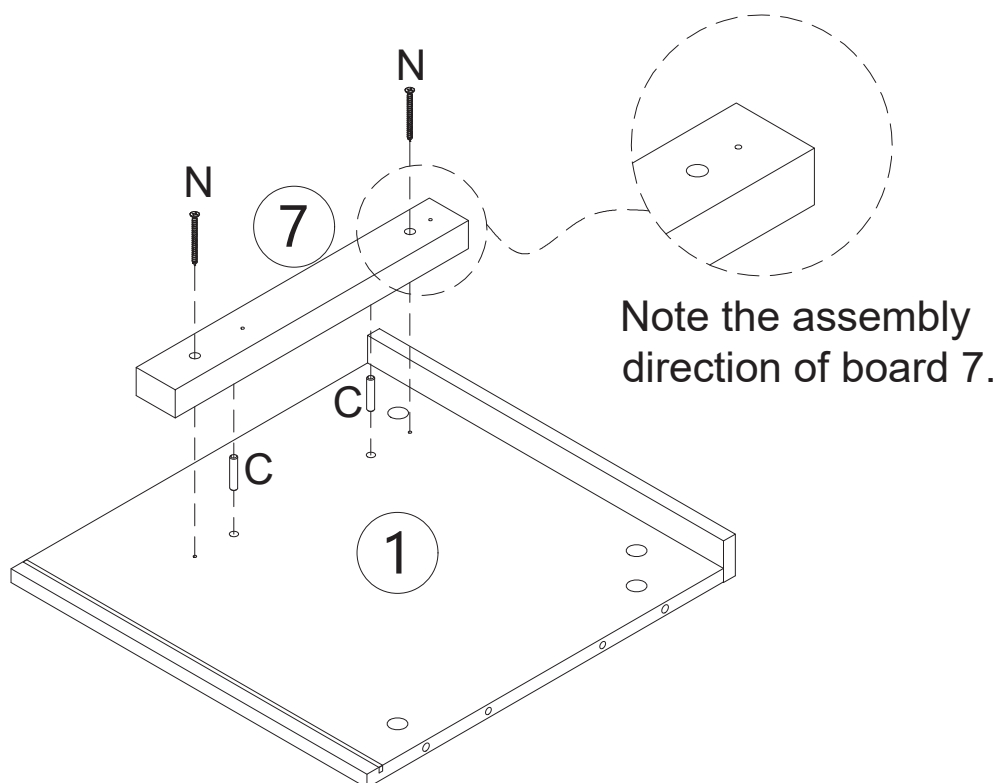





6*30mm Dowel ×2



4*30mm Screw ×2


Assembly Instructions

Step 4

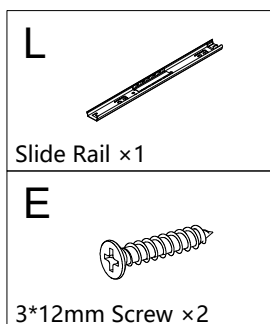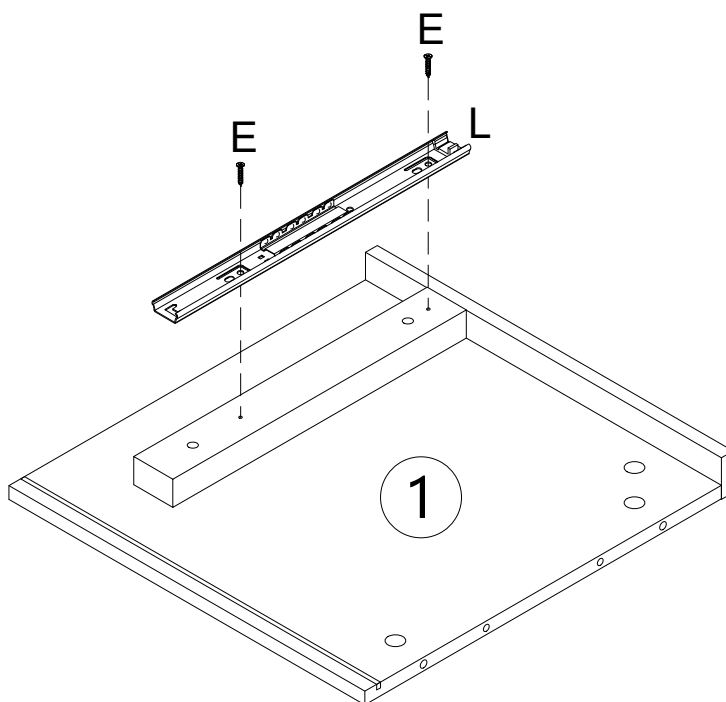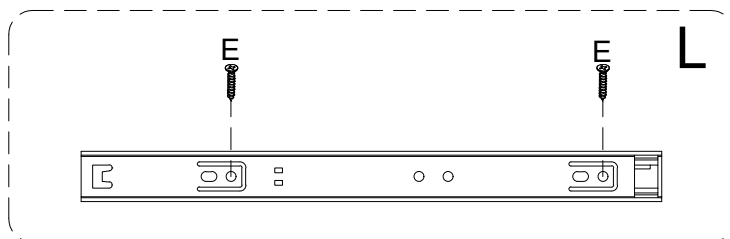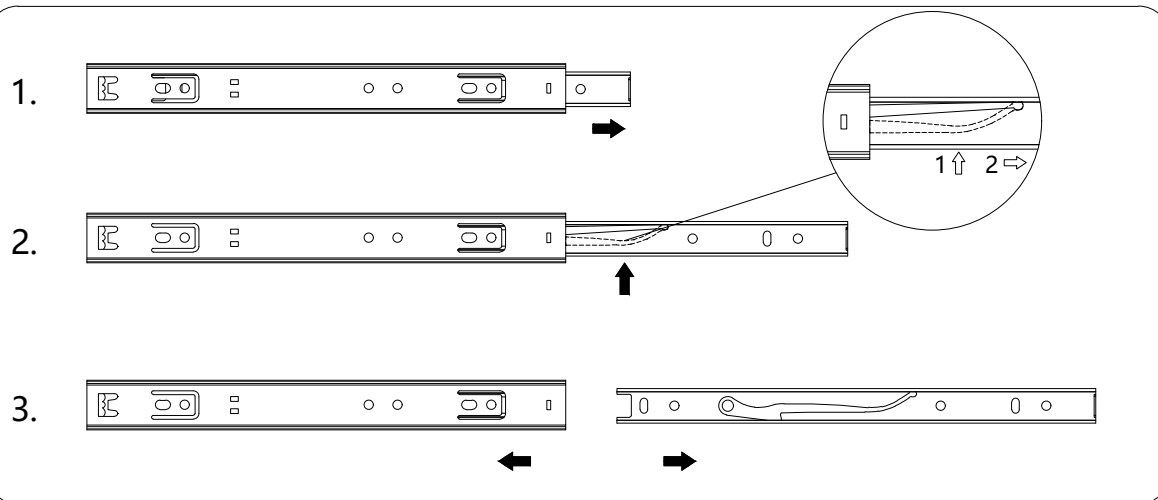


Assembly Instructions

Step 5

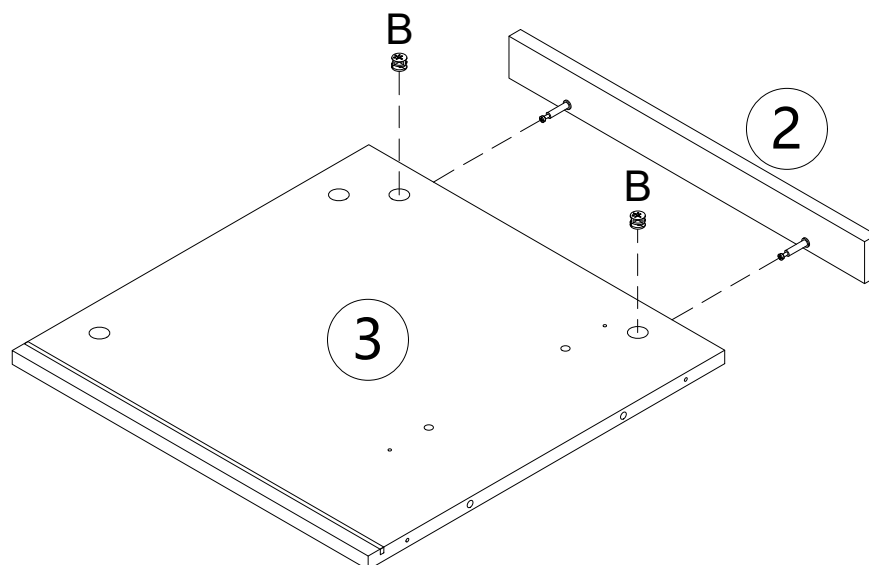


B




Cam Bolt ×2

Step 6

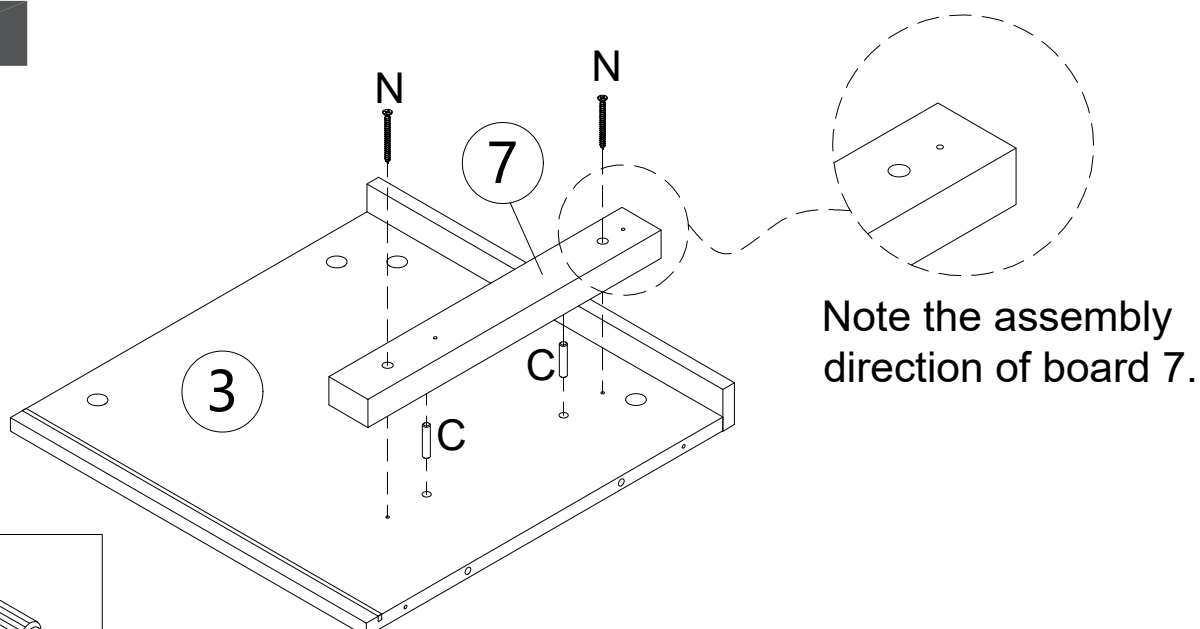

Note the assembly
direction of board 7.

C



6*30mm Dowel ×2





N



4*30mm Screw ×2



Assembly Instructions

Step 7

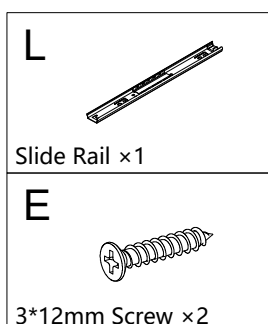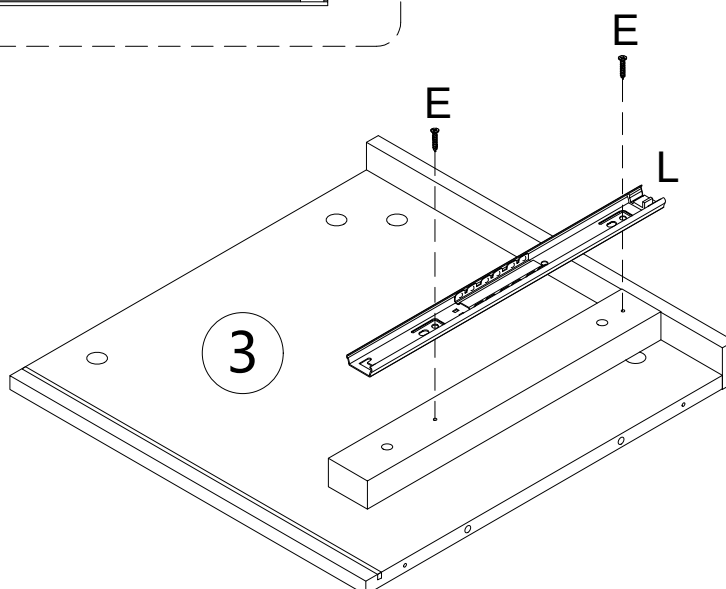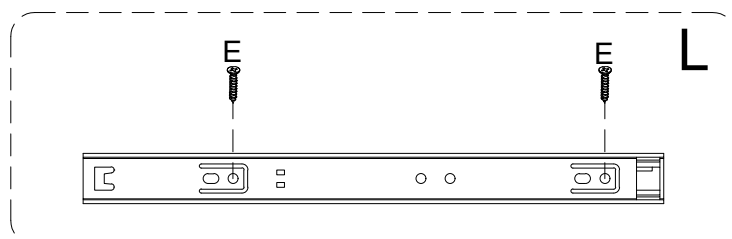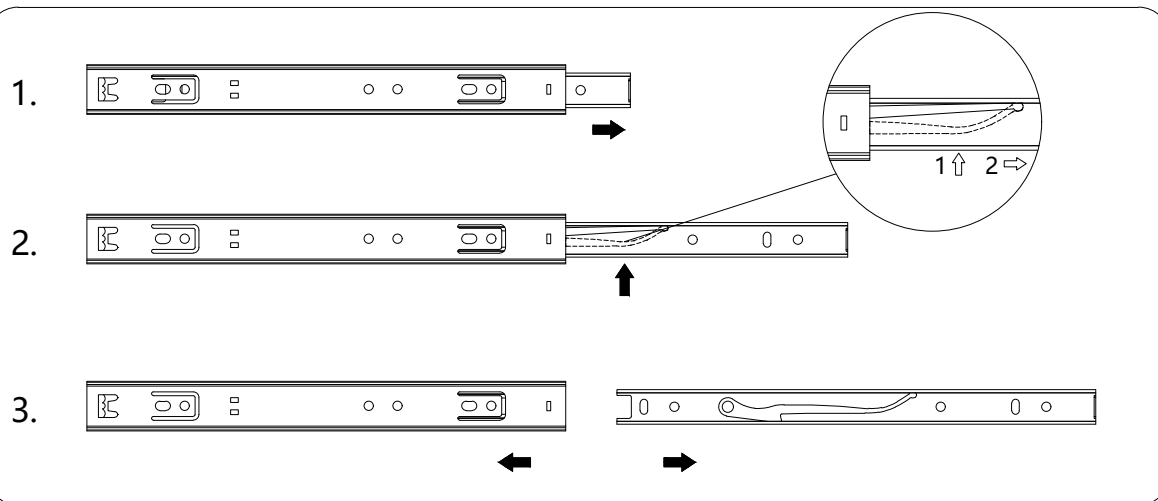



Assembly Instructions

Step 8

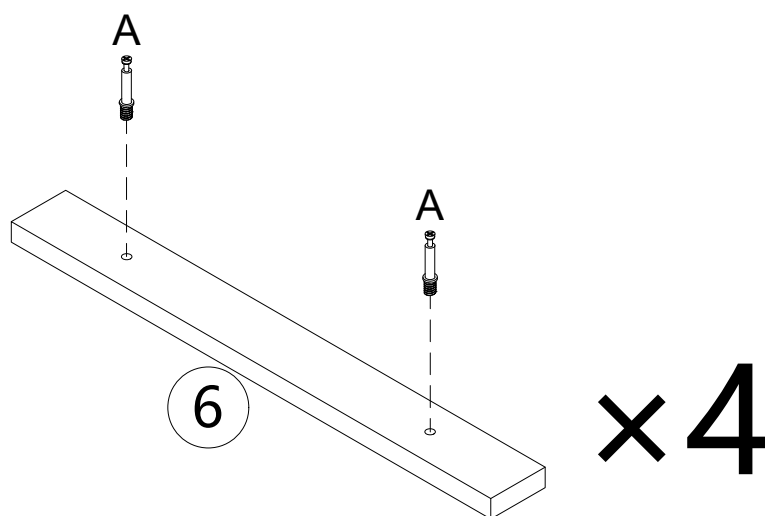

Cam Bolt x8


Step 9

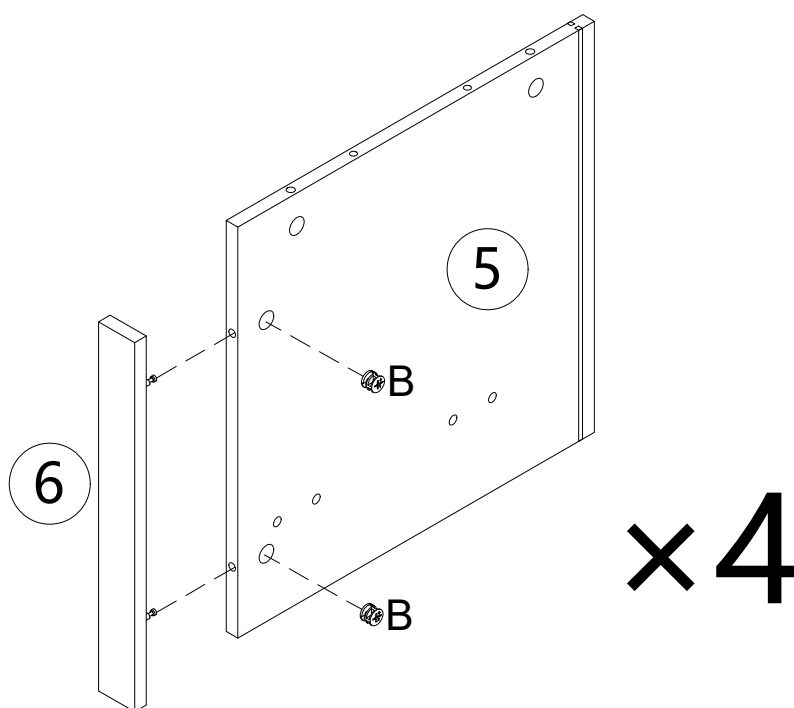


Cam Bolt x8

Assembly Instructions

Step 10

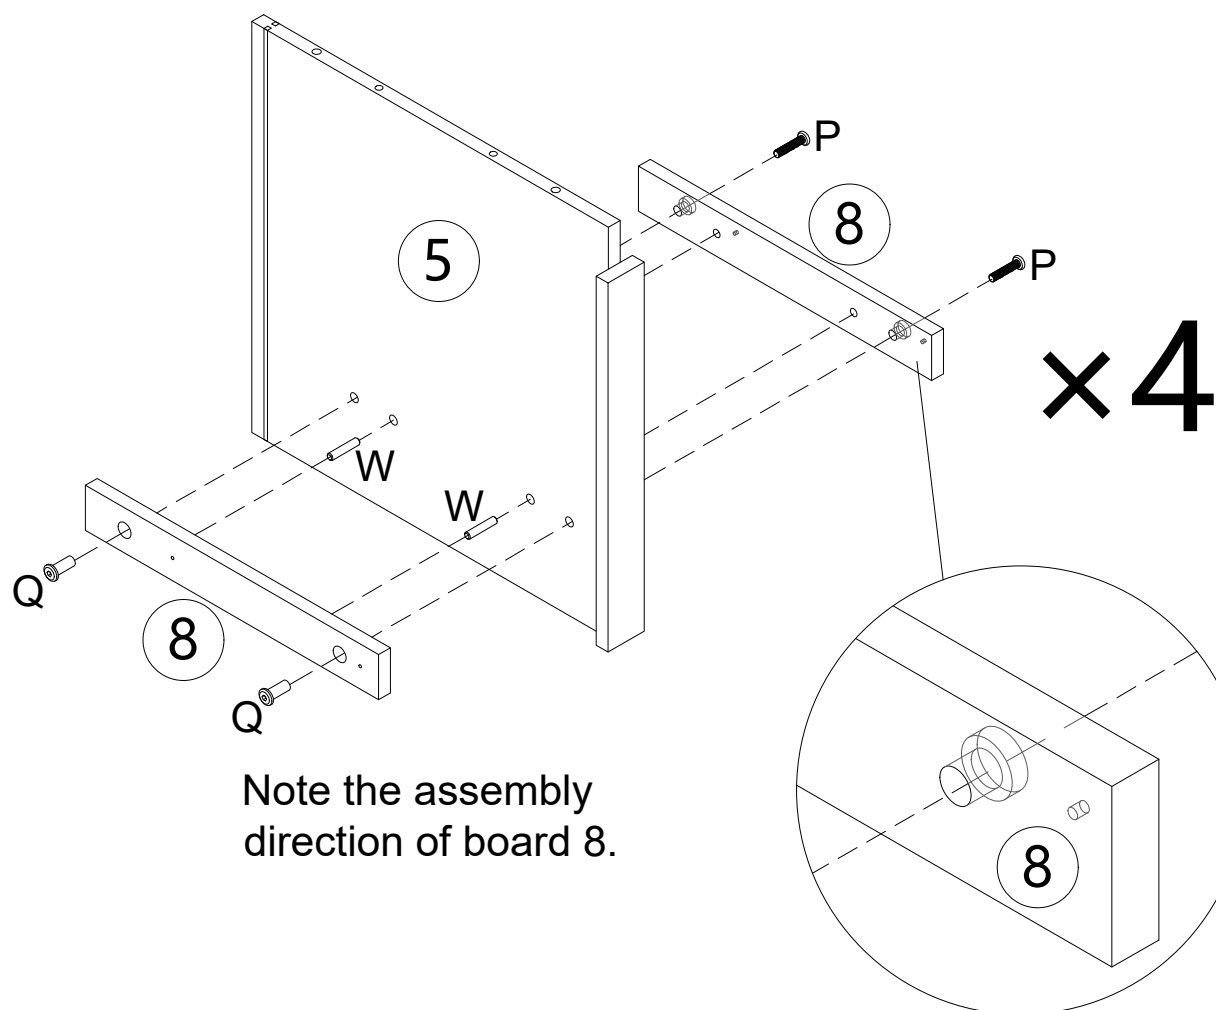


W



8*30mm Dowel x8

P



Screw Rod x8





Q



Nut x8


Assembly Instructions

Step 1 1

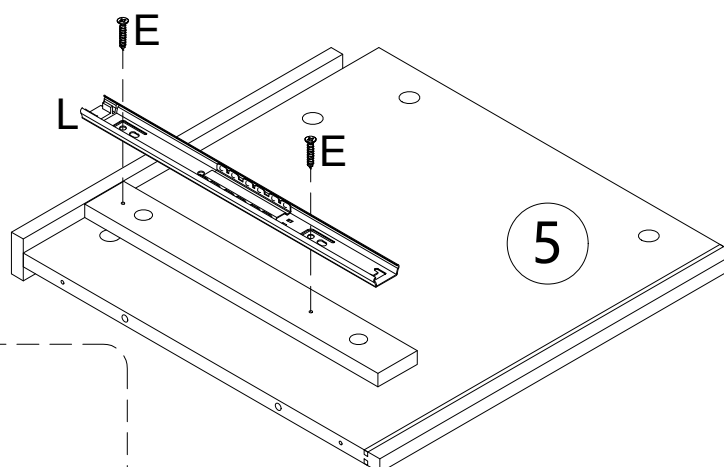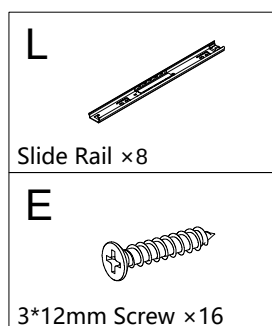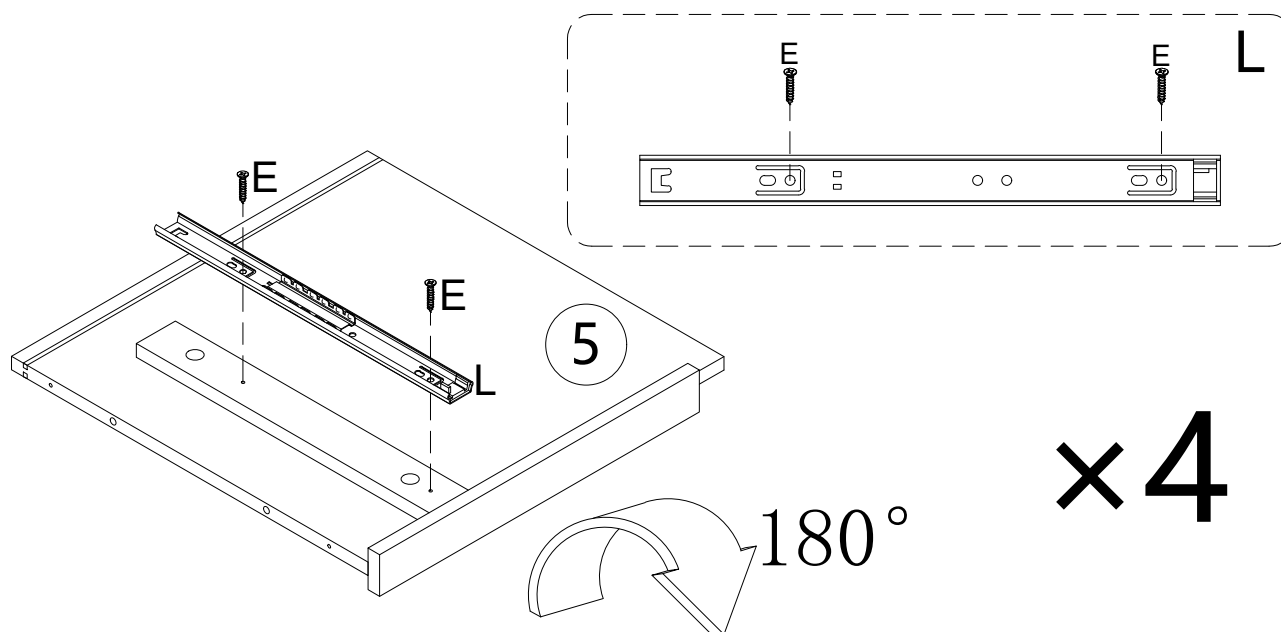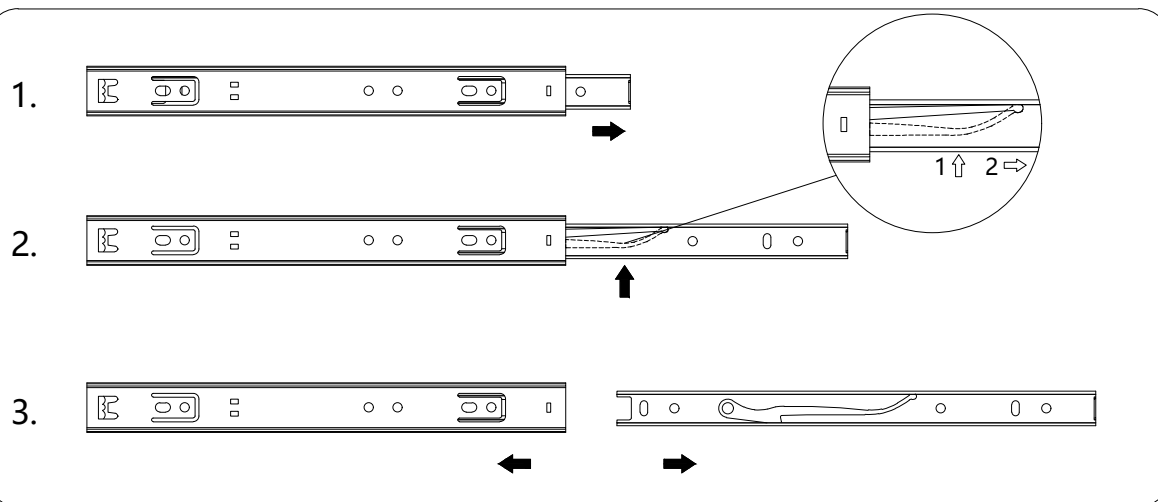


Assembly Instructions

Step 1 2

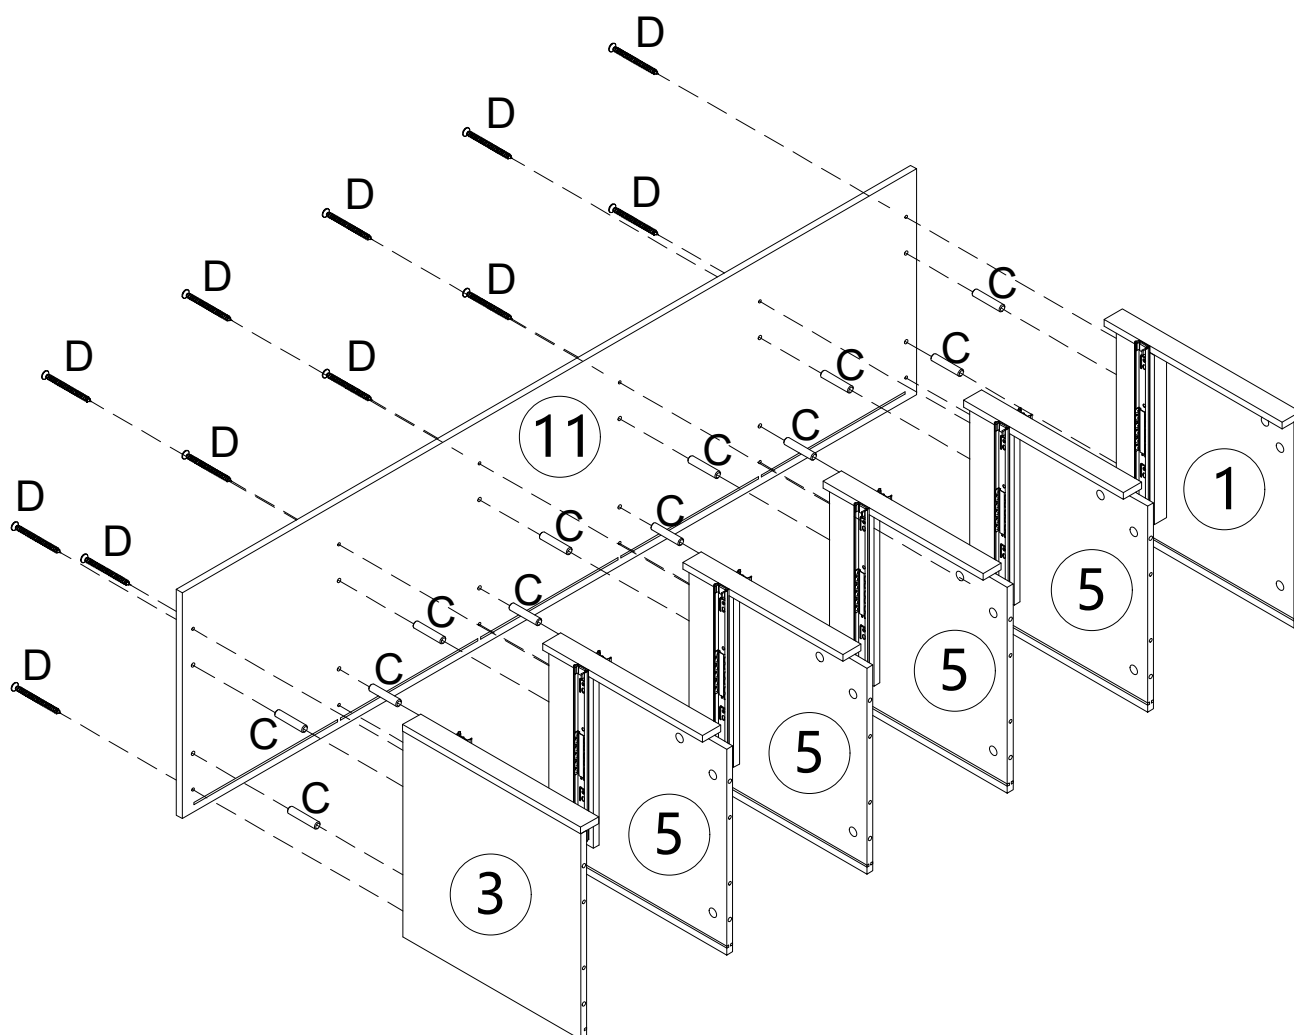


C



6*30mm Dowel x12



D



4*40mm Screw x12

Assembly Instructions



Step 13

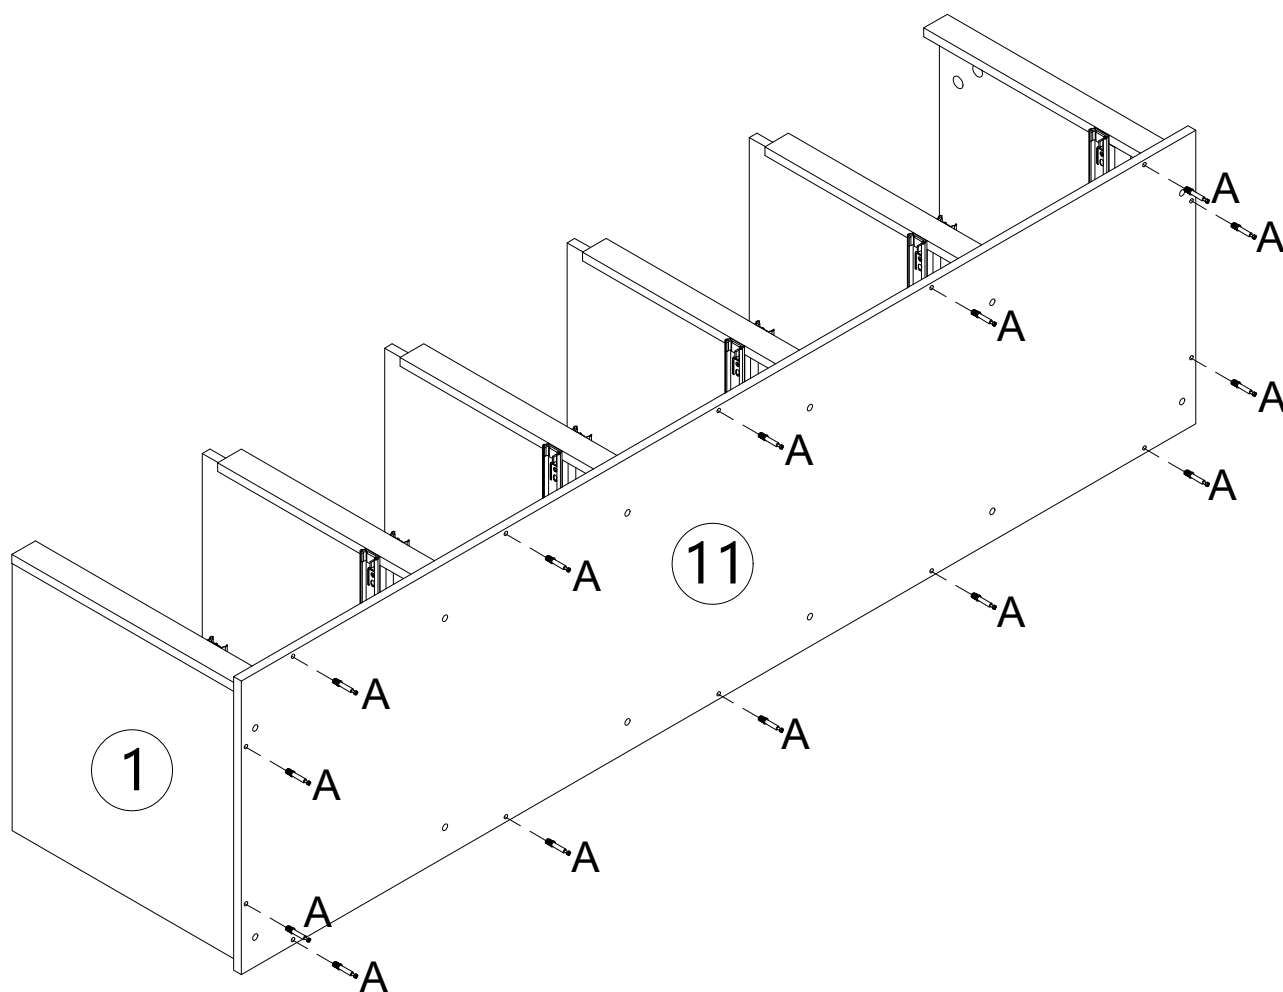

Cam Bolt ×14



Assembly Instructions

Step 14

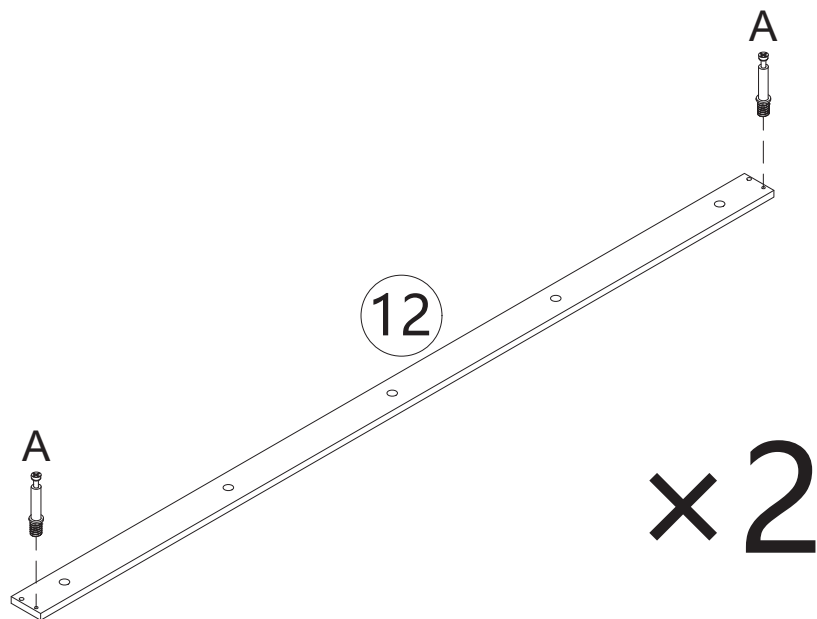


Cam Bolt ×4

Step 15

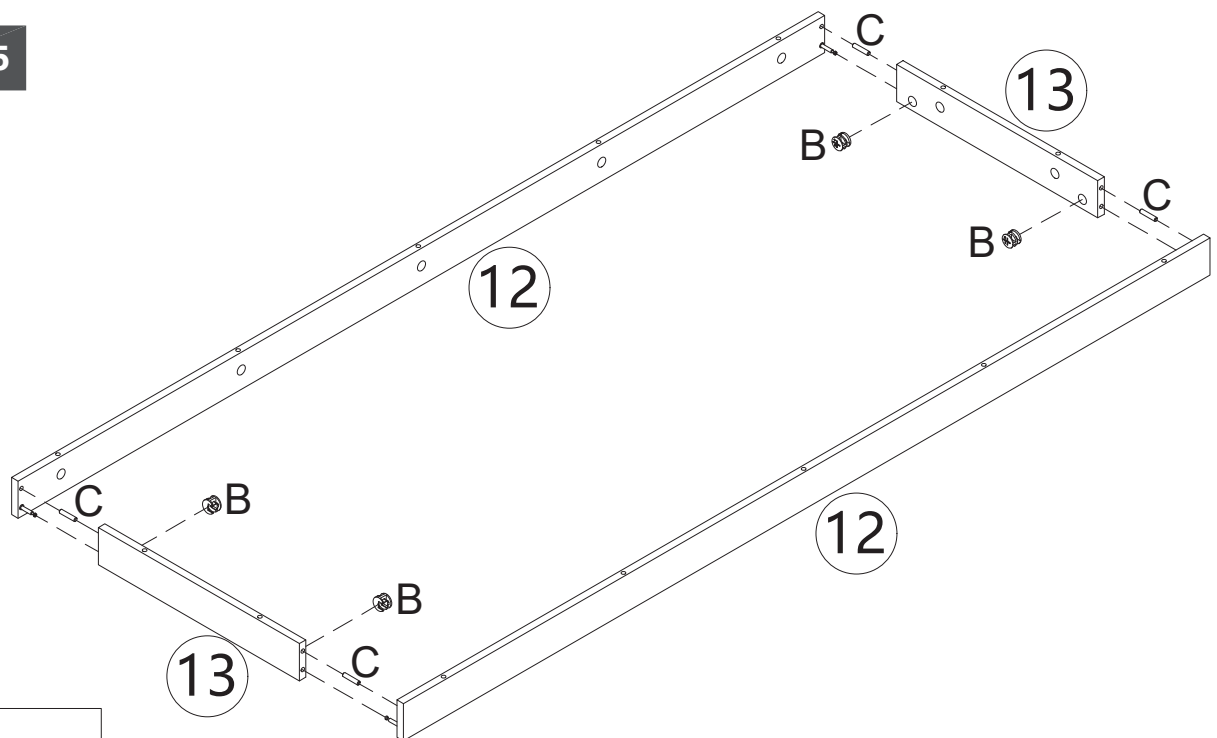



6*30mm Dowel ×4




Cam Bolt ×4

Assembly Instructions

Step 16

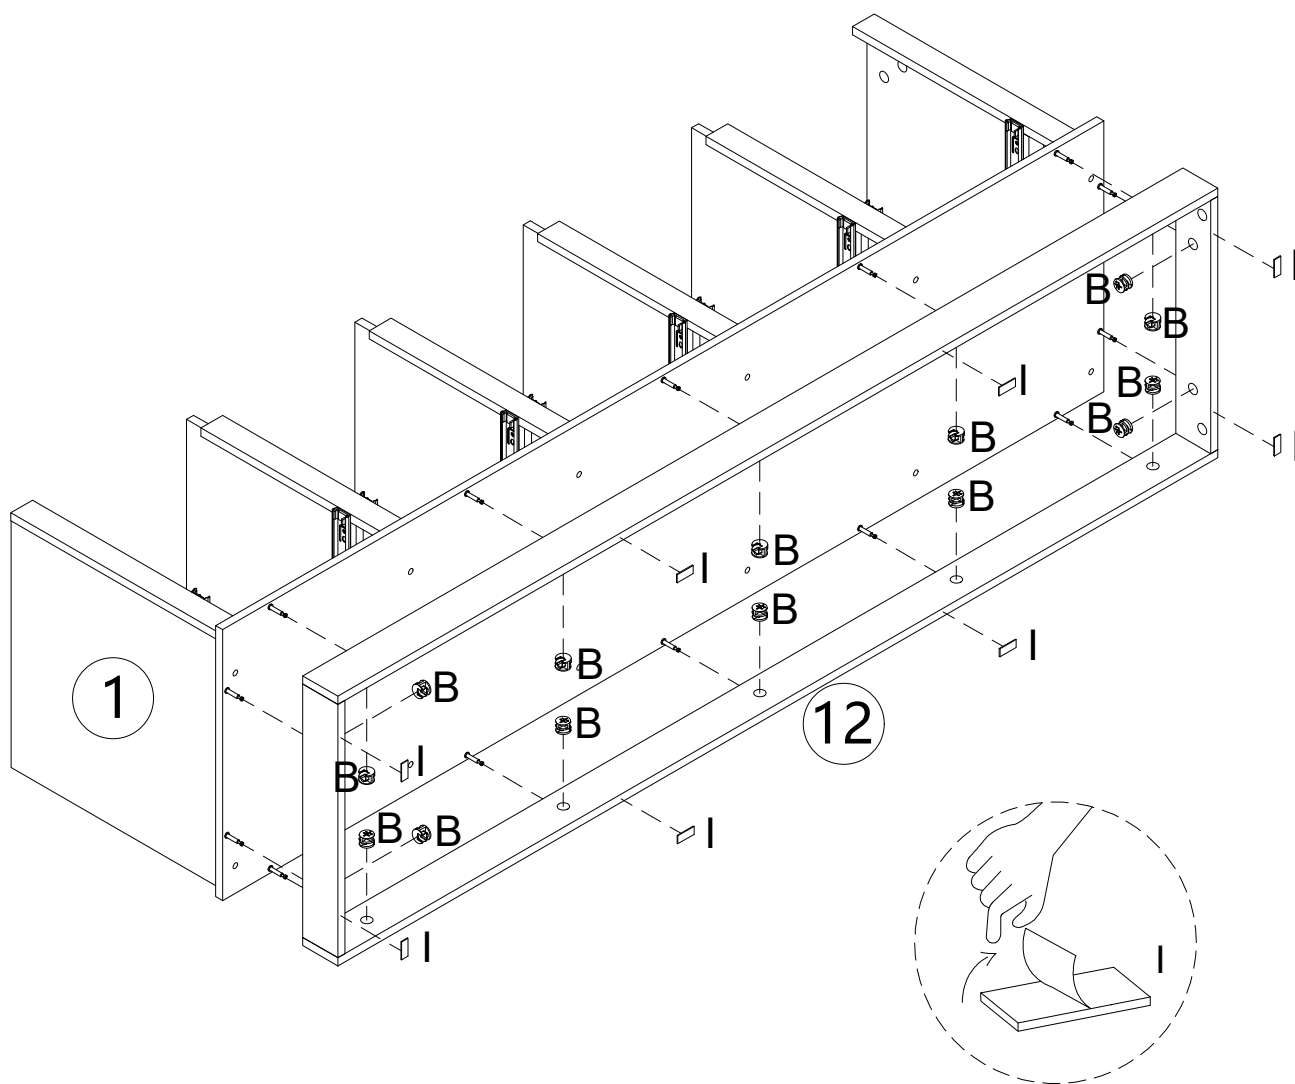


Felt Pad ×8



Cam Bolt ×14


Assembly Instructions

Step 17

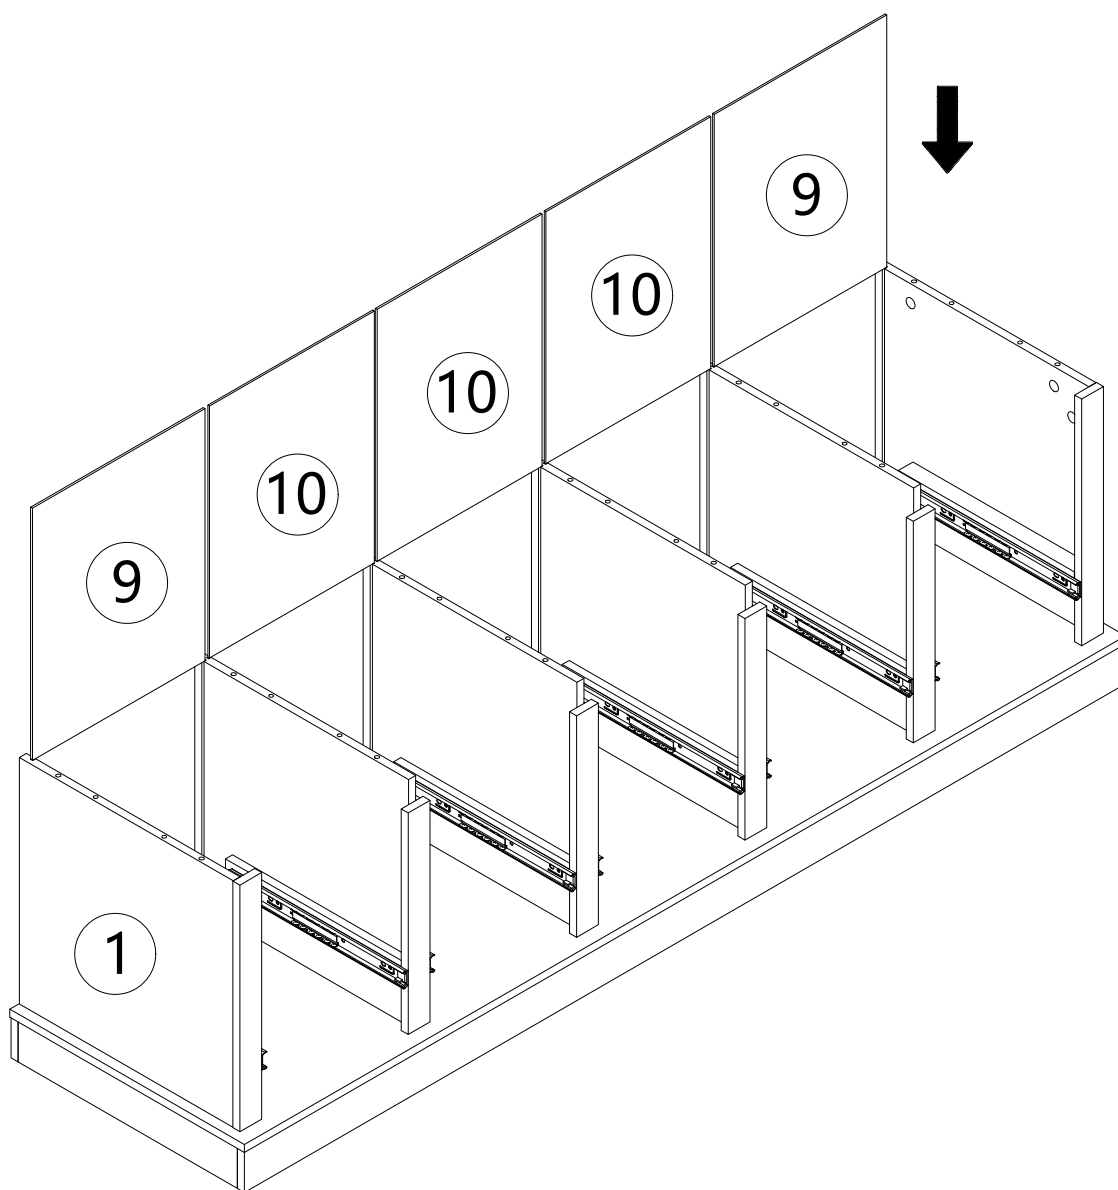


Assembly Instructions

Step 18

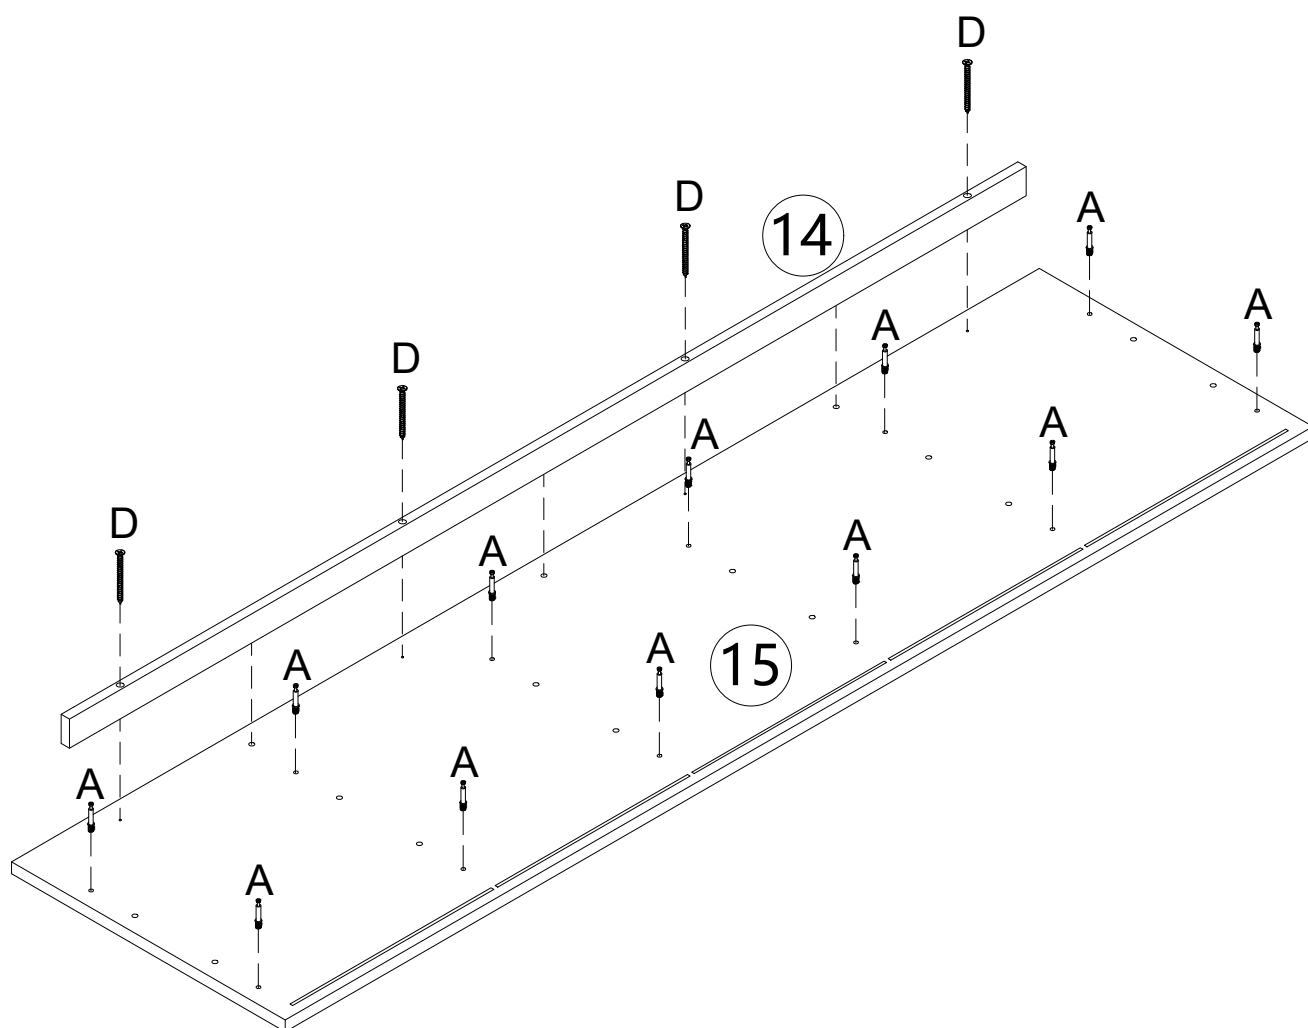


D



4*40mm Screw ×4



A




Cam Bolt ×12

Assembly Instructions

Step 19

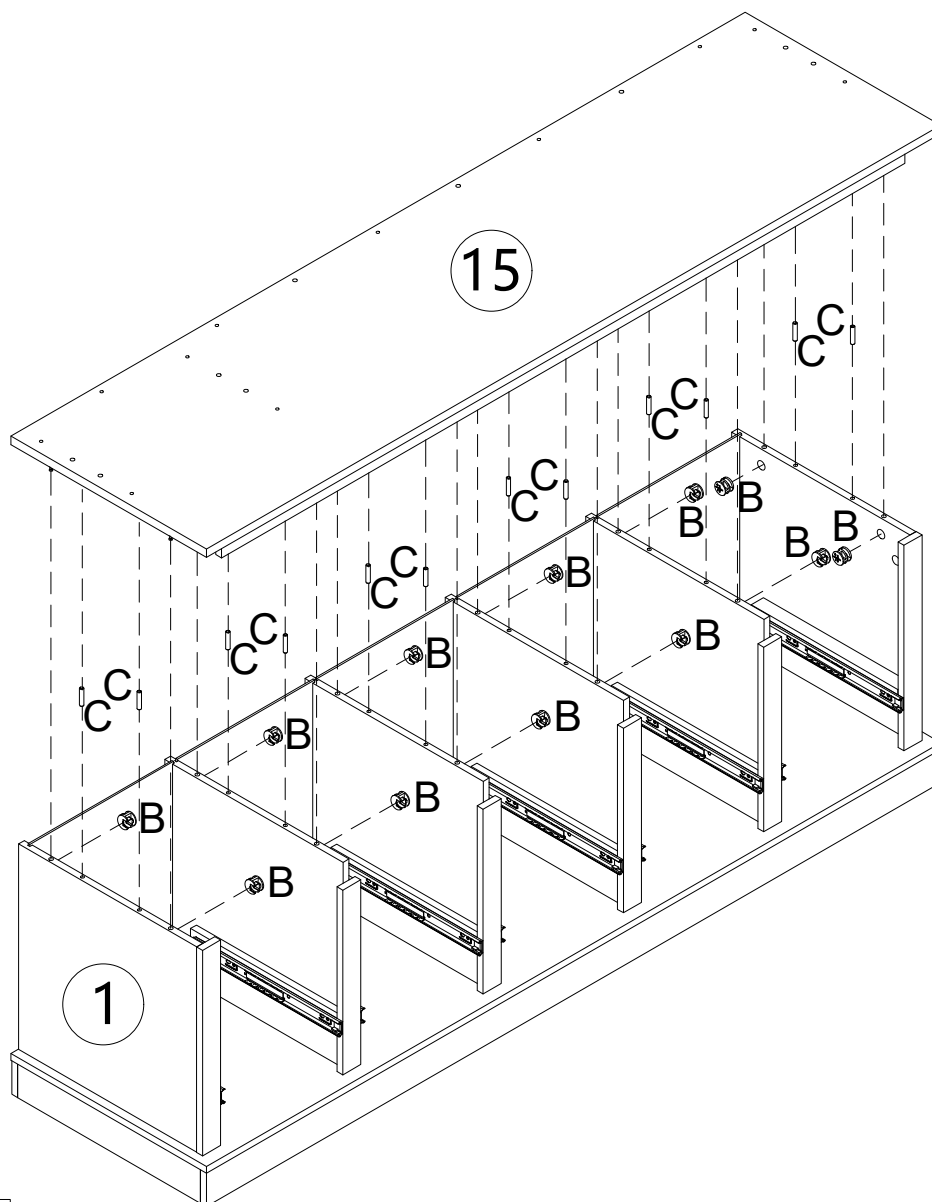



6*30mm Dowel ×12



Cam Bolt ×12

Assembly Instructions



Step 20

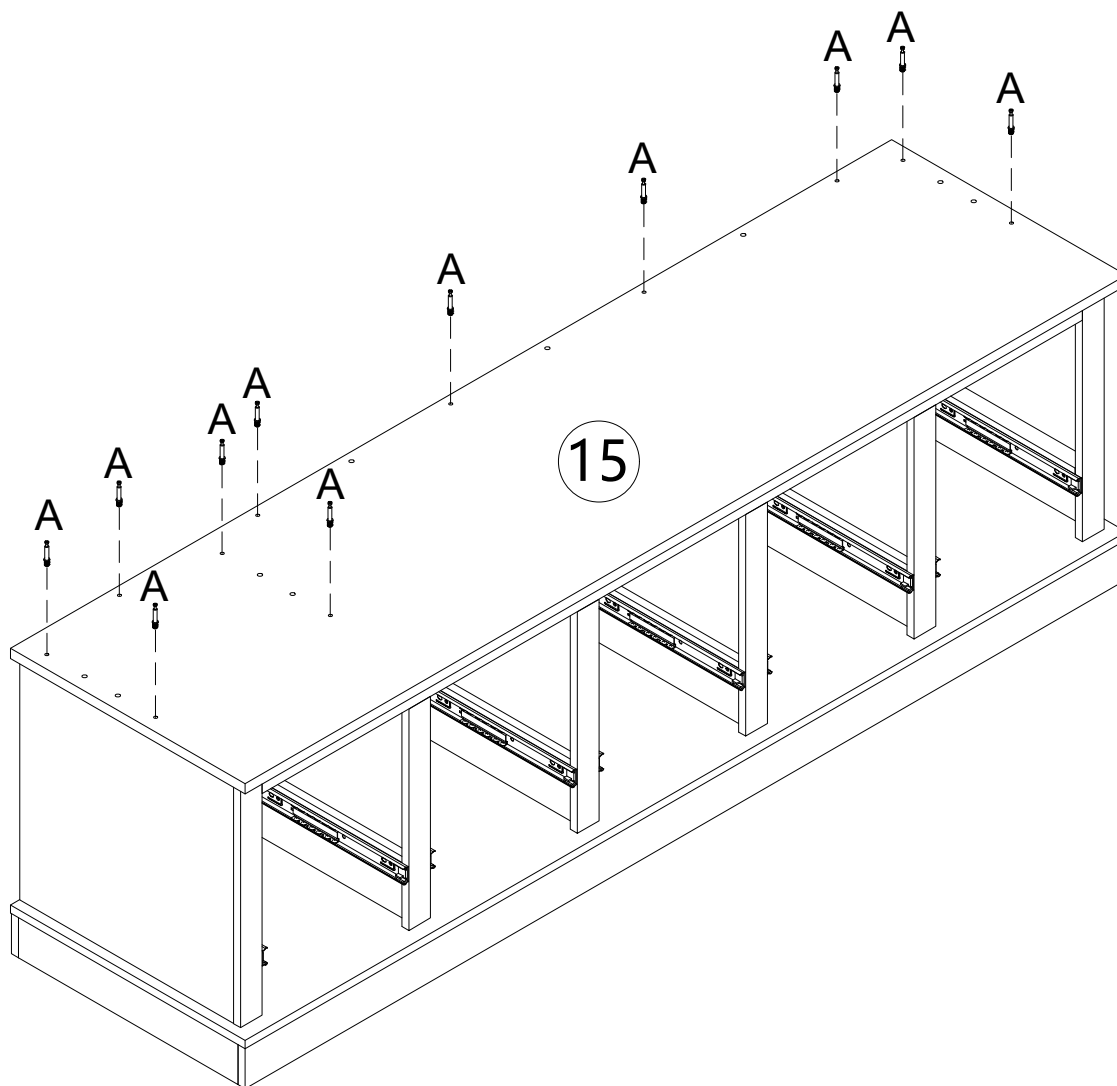



Cam Bolt ×11

Assembly Instructions

Step 2 1

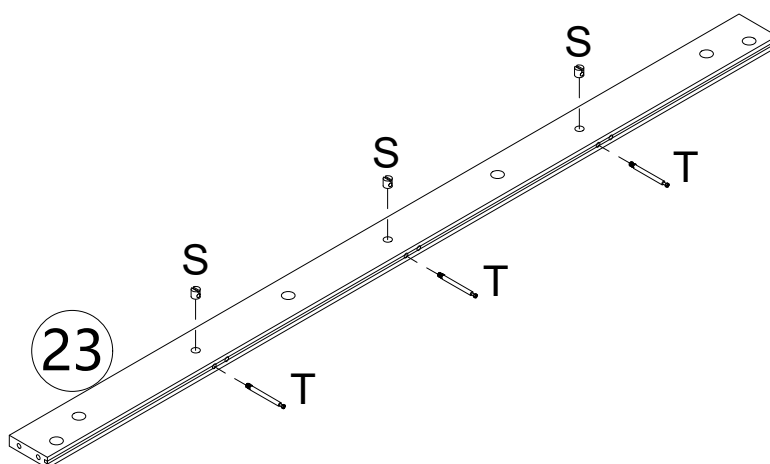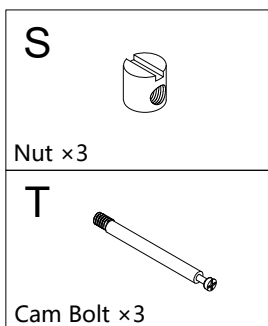


Step 2 2

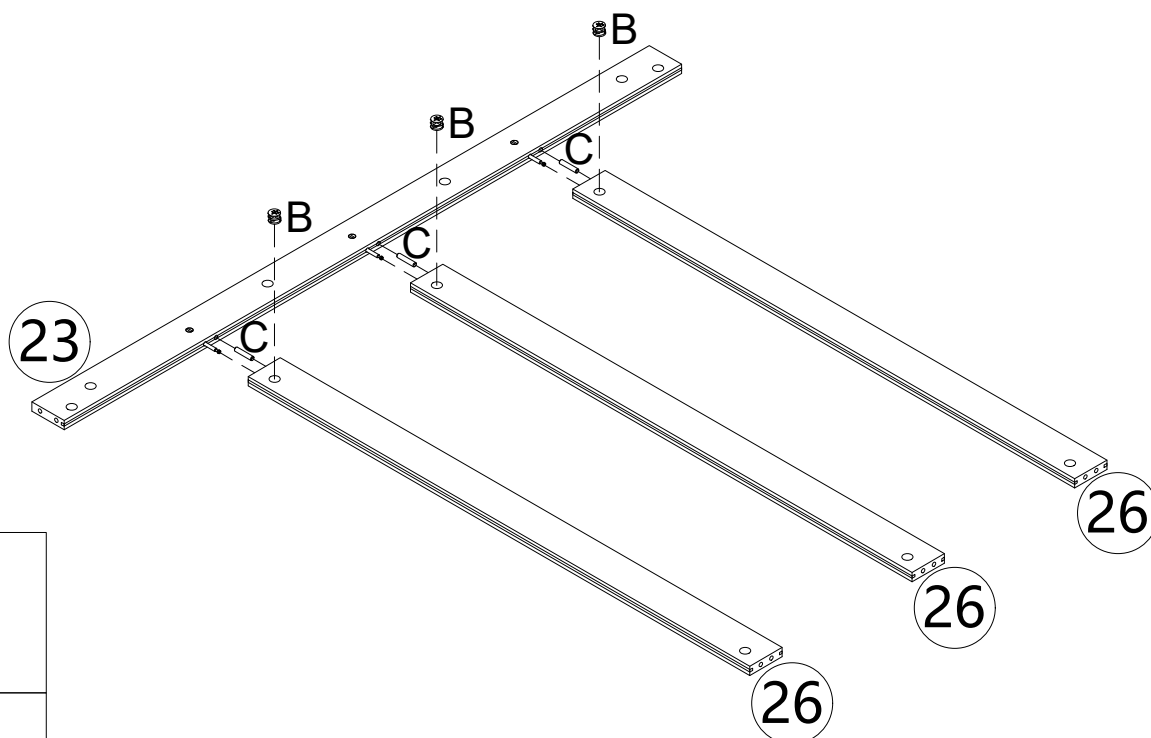
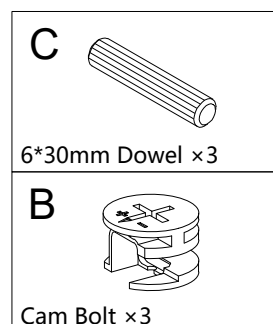


Assembly Instructions

Step 2 3


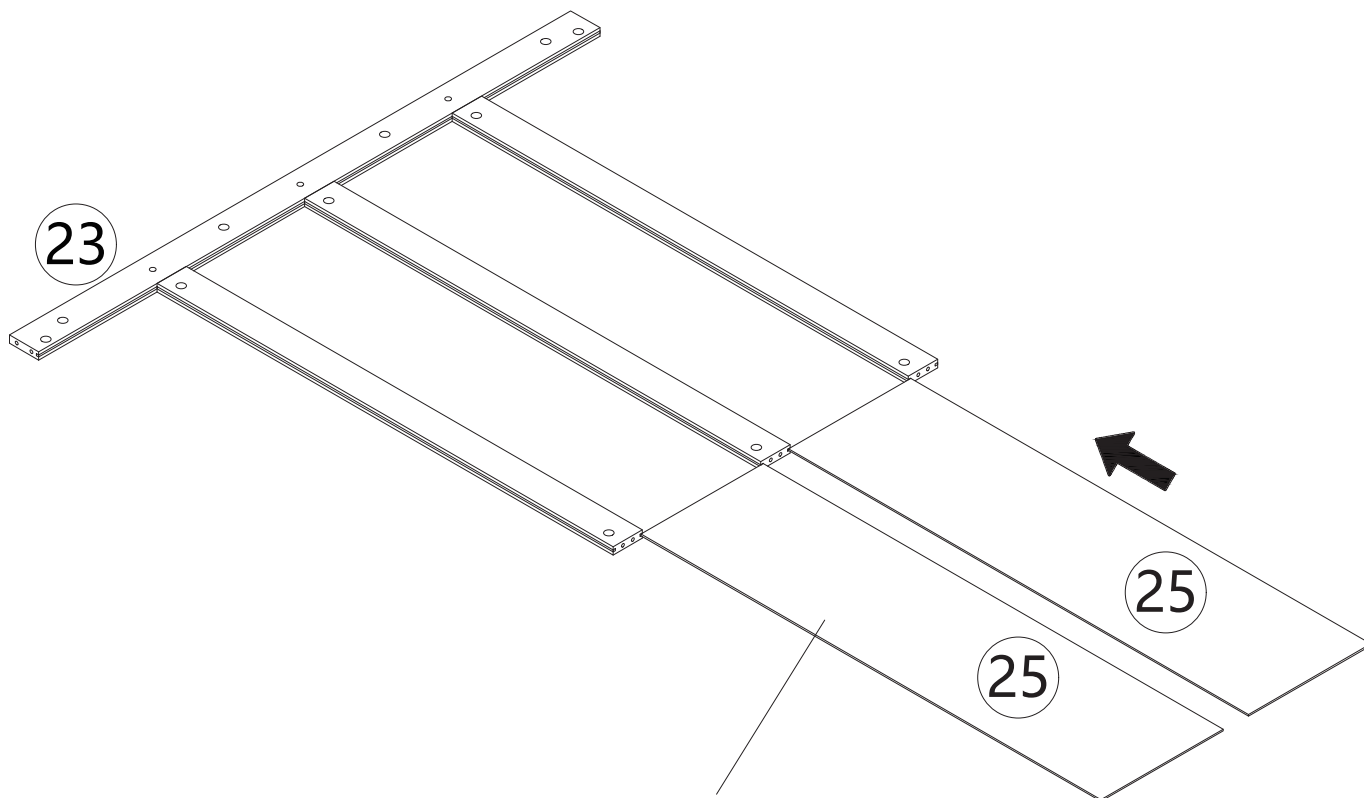


Step 2 4

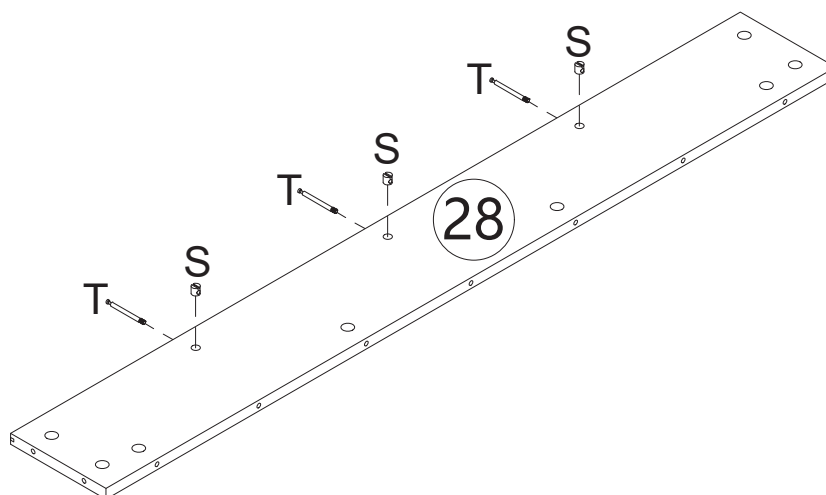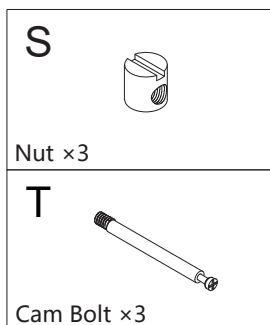


Assembly Instructions

Step 2 5


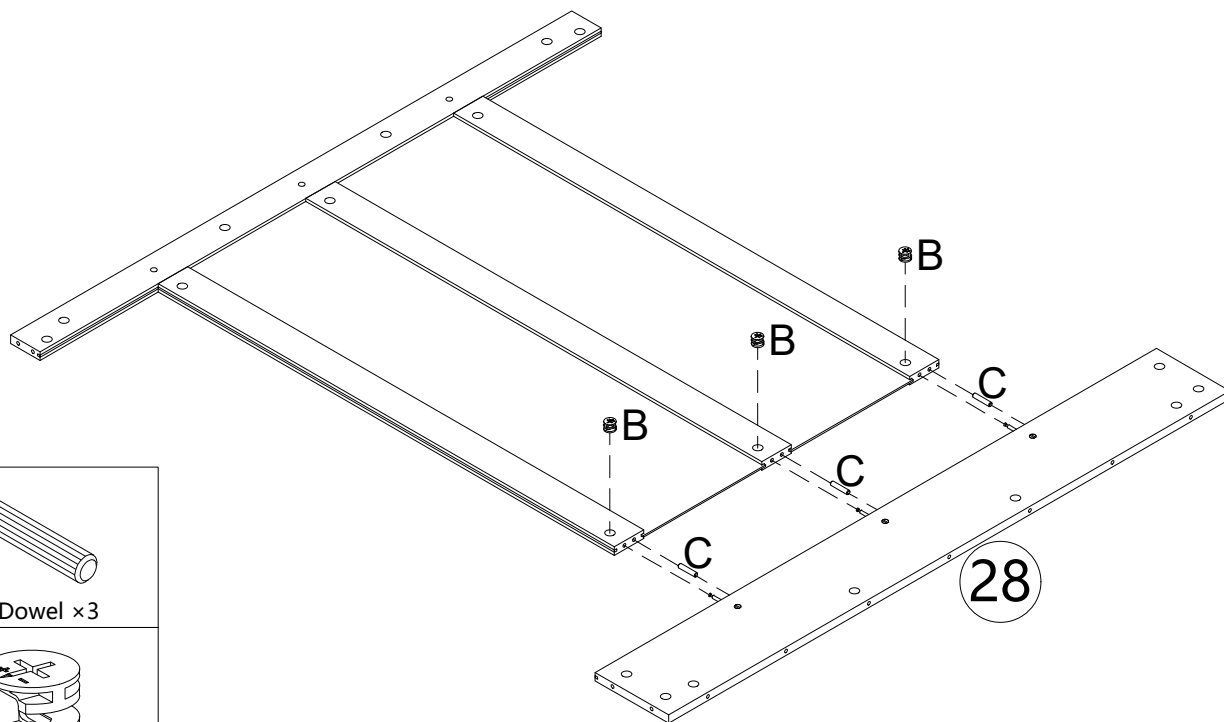


6*30mm Dowel ×3



Cam Bolt ×3


Step 2 6

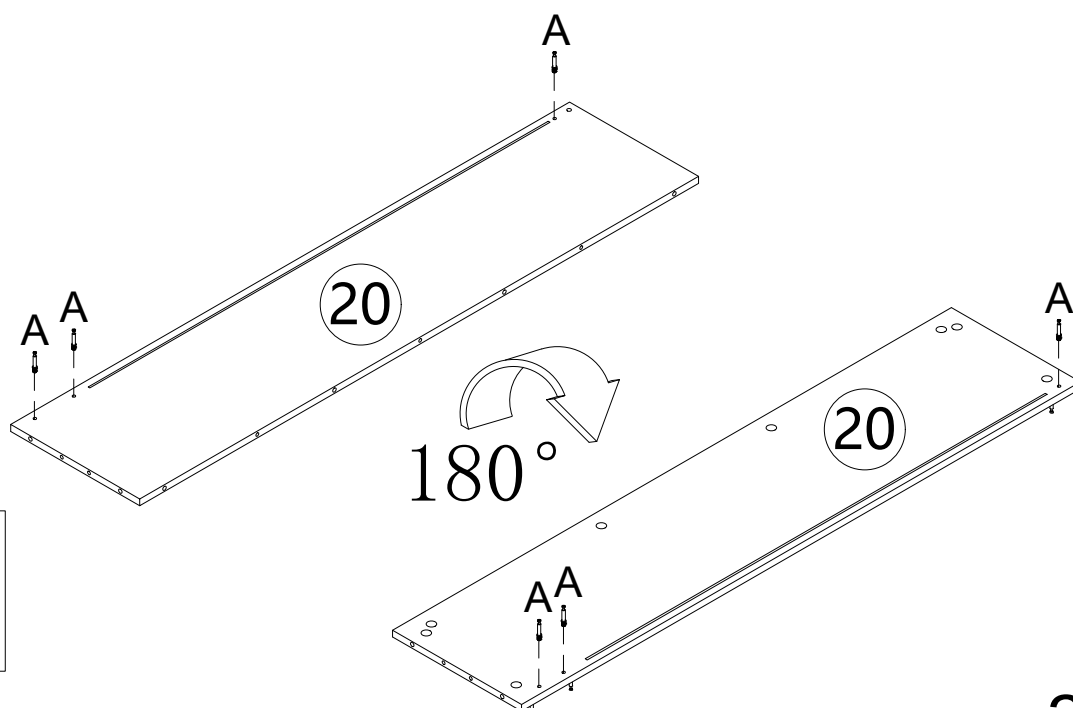

Cam Bolt ×6



Assembly Instructions

Step 27

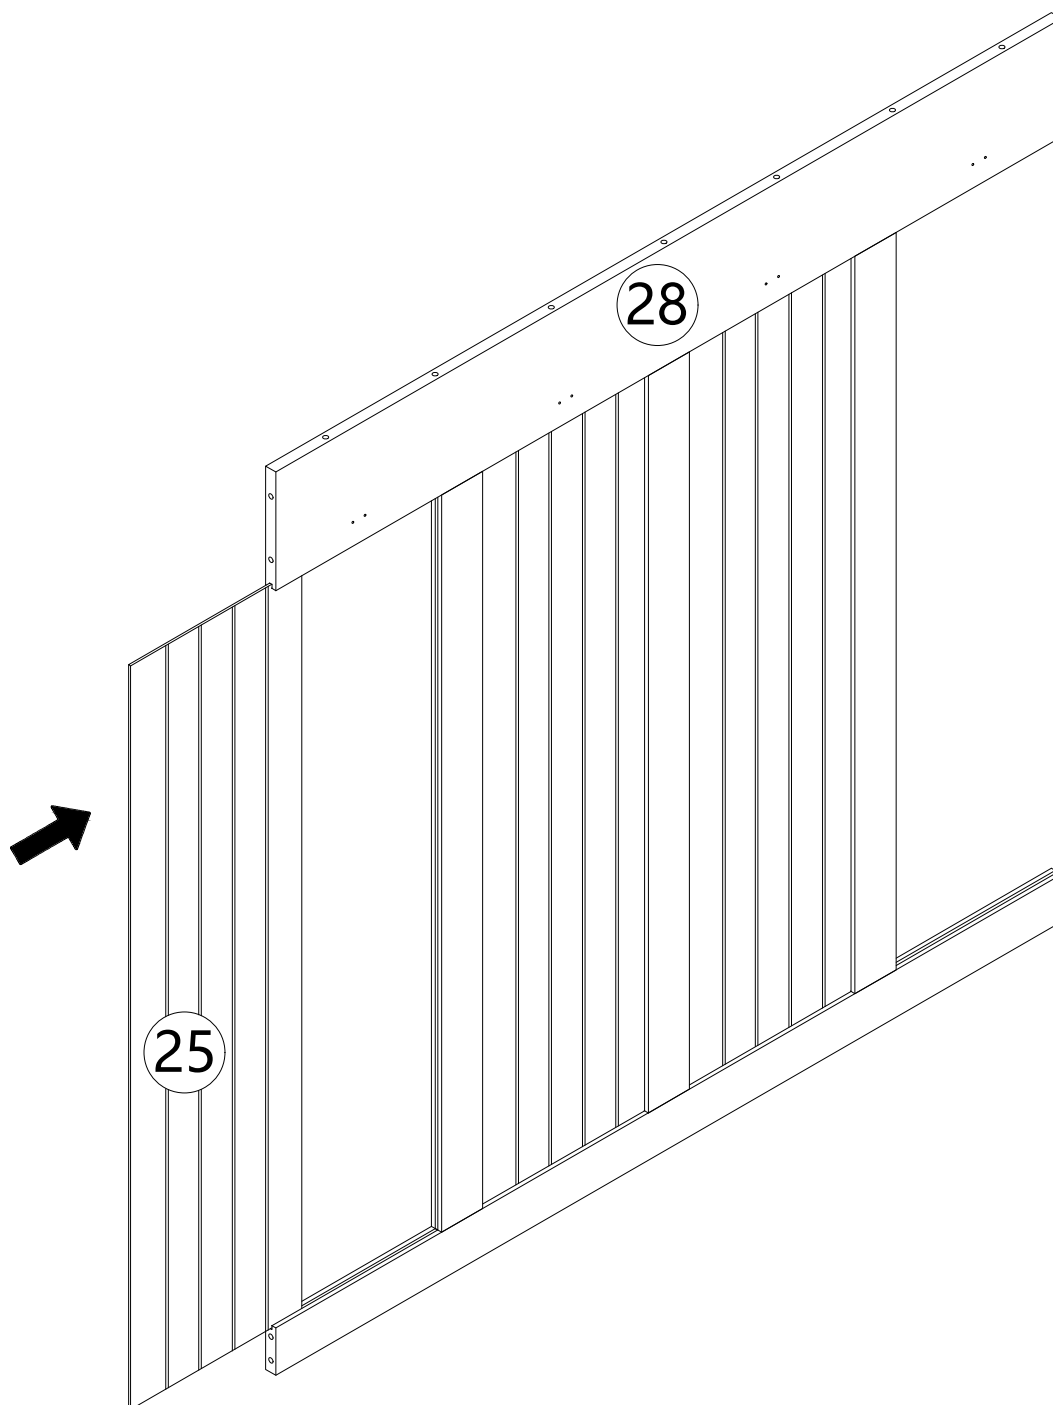


Assembly Instructions

Step 28

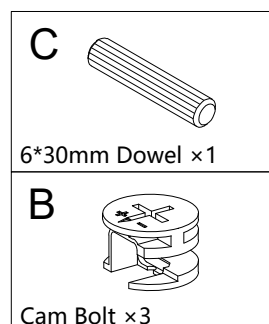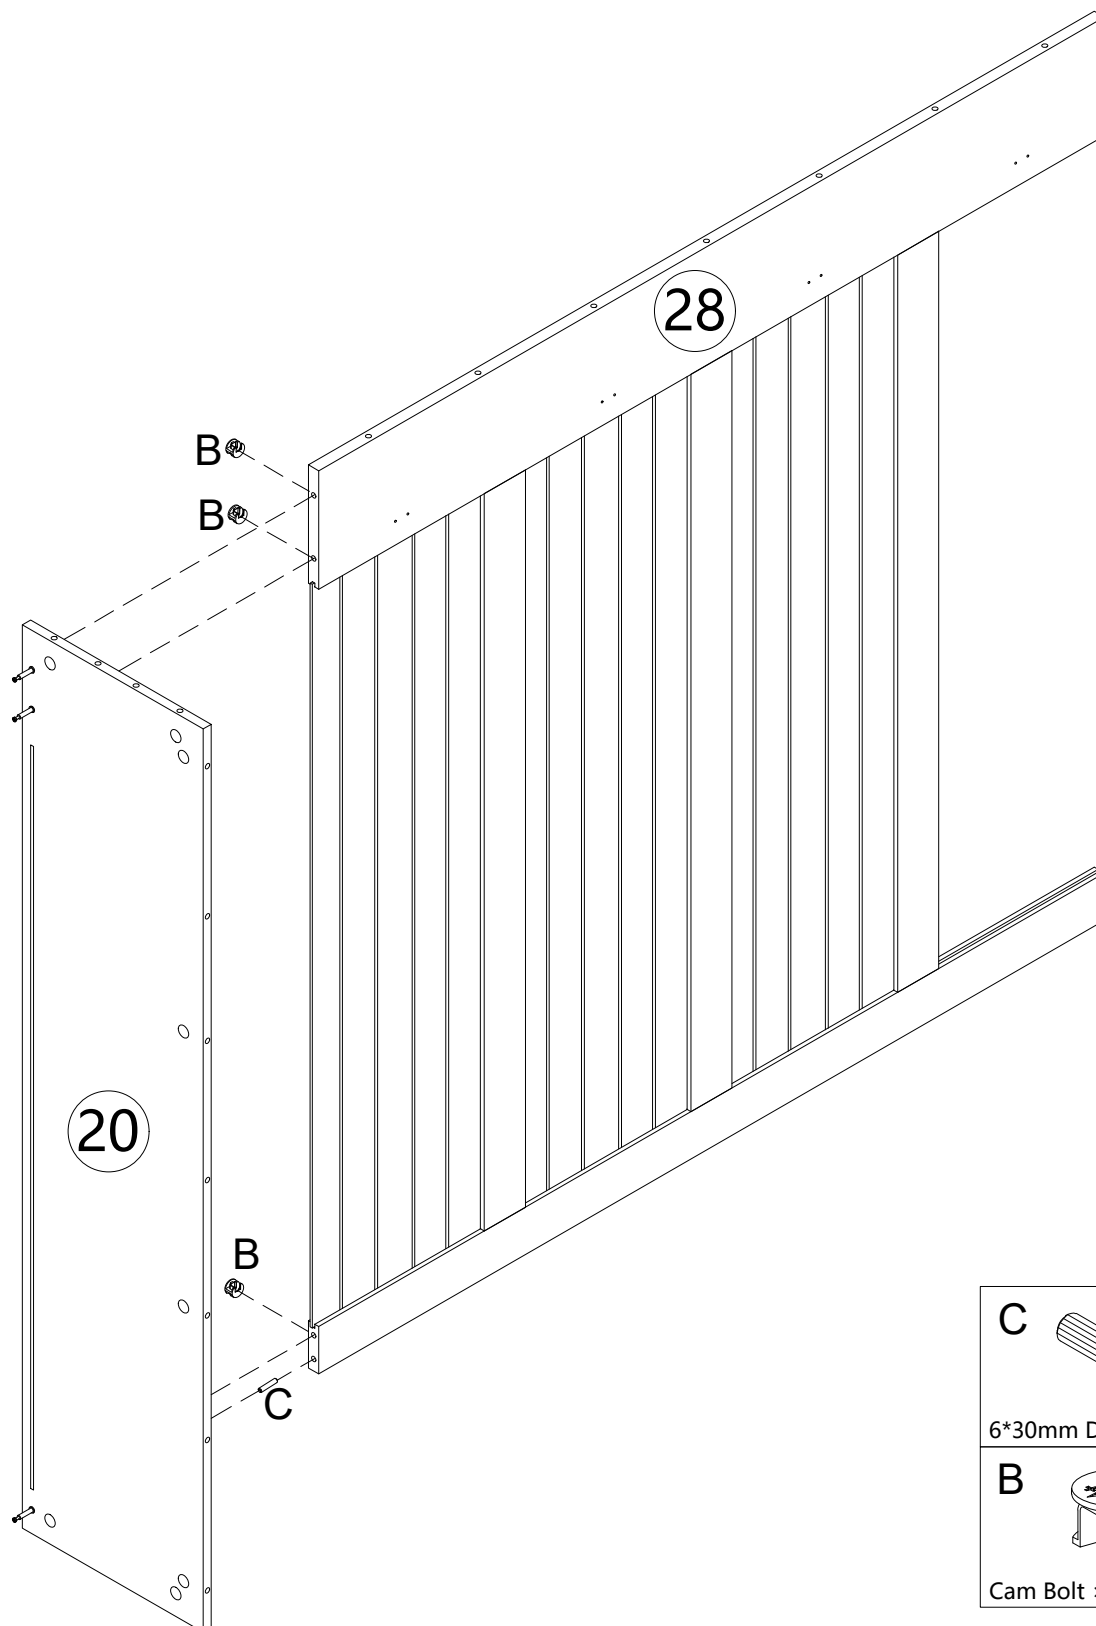


Assembly Instructions

Step 29

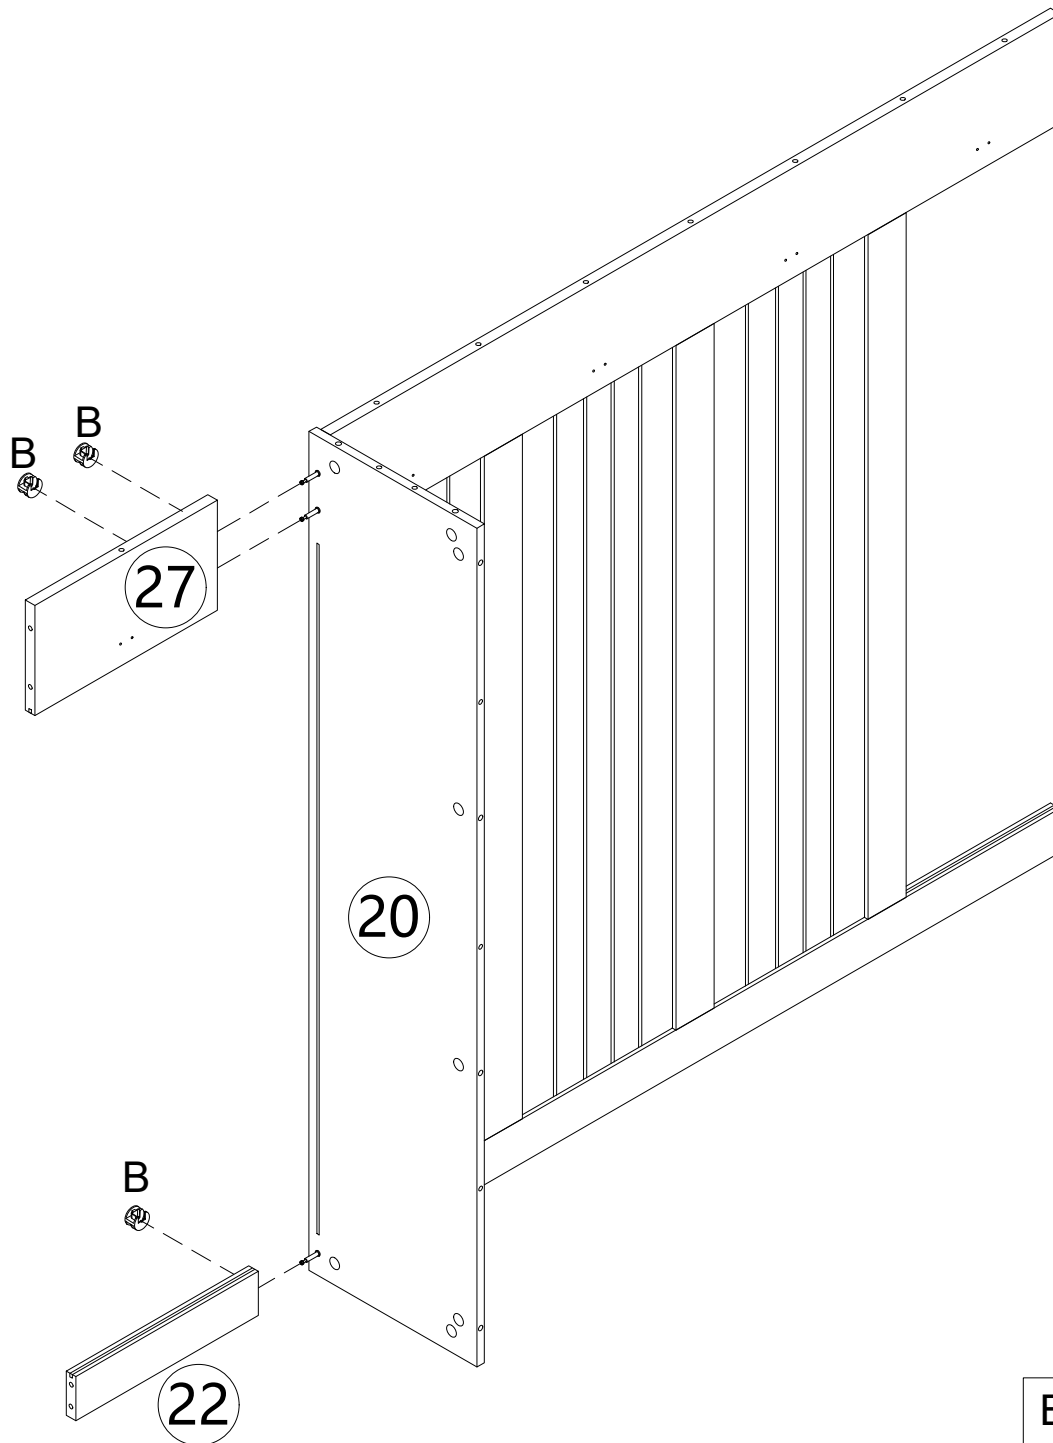


B




Cam Bolt ×3

Assembly Instructions

Step 3 0

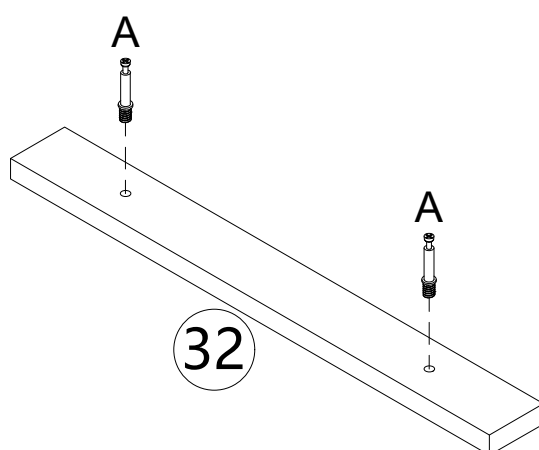


×4




Cam Bolt ×8

Step 3 1

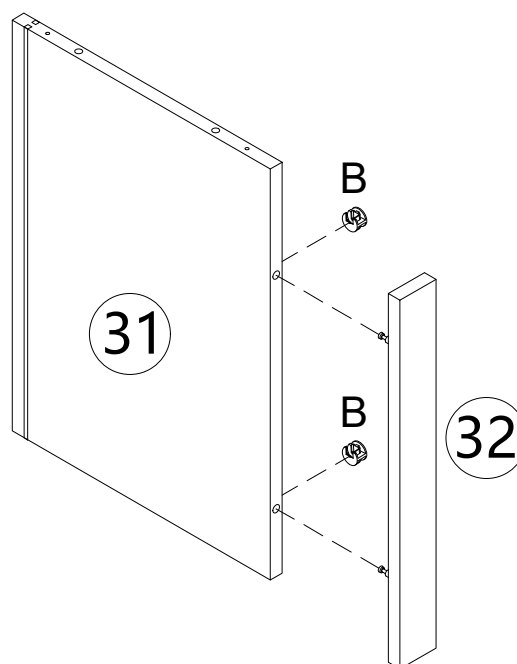


×4




Cam Bolt ×8

Assembly Instructions

Step 3 2

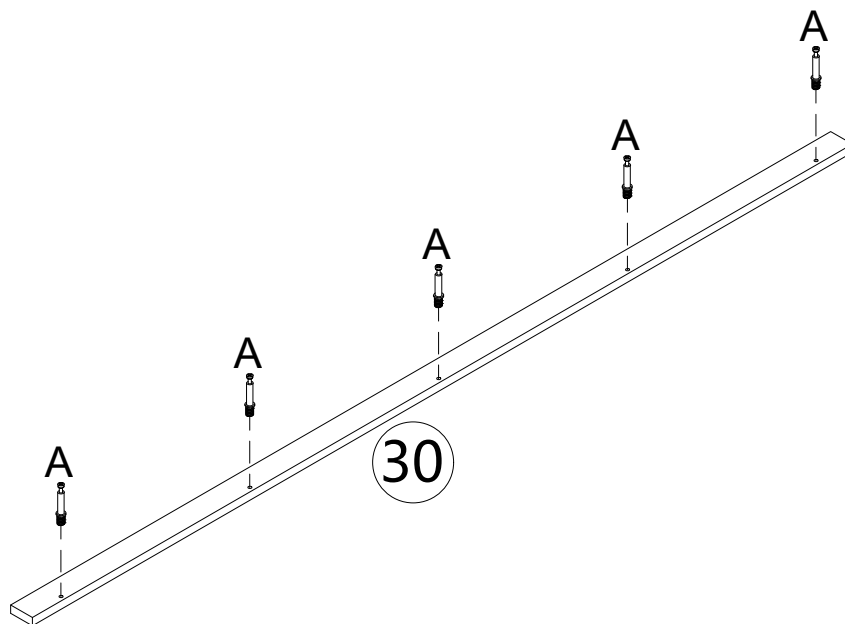


A




Cam Bolt ×5

Step 3 3

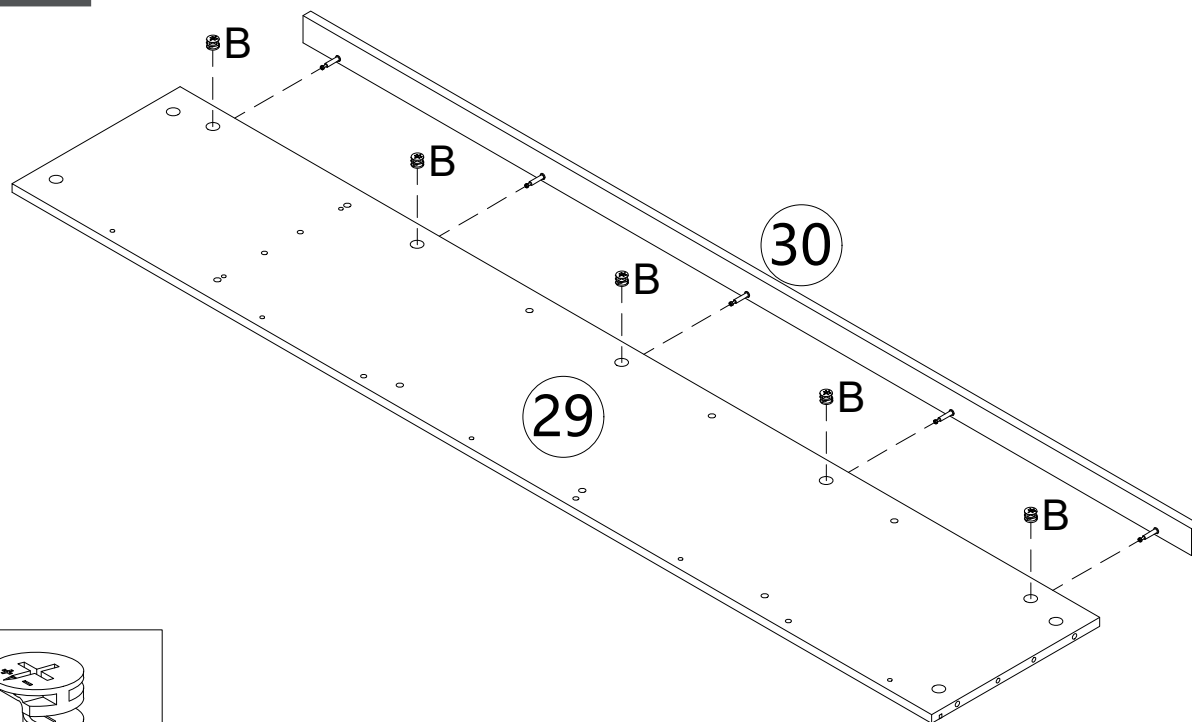



B




Cam Bolt ×5

Assembly Instructions

Step 3 4

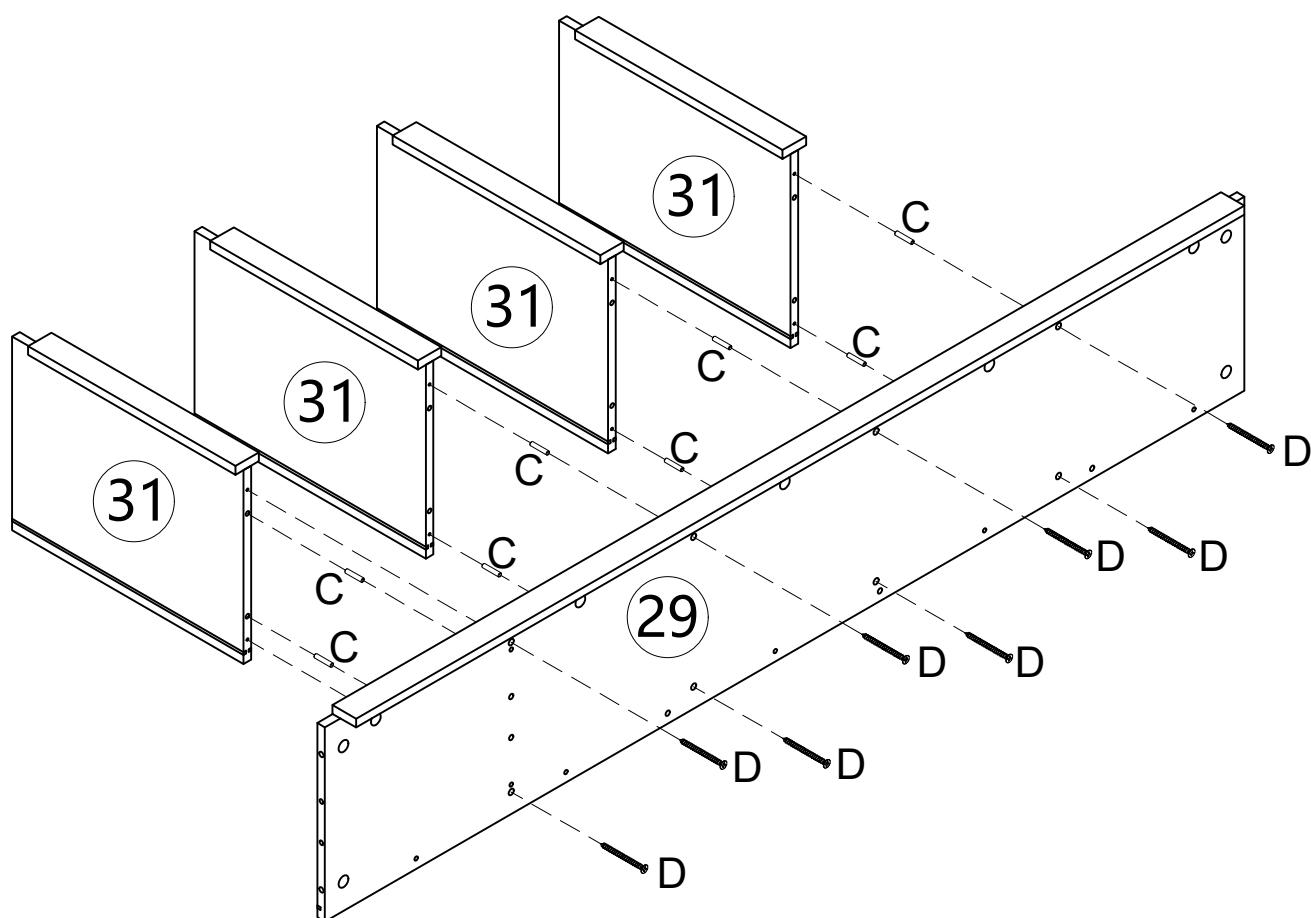


6*30mm Dowel ×8




4*40mm Screw ×8

Assembly Instructions

Step 3 5

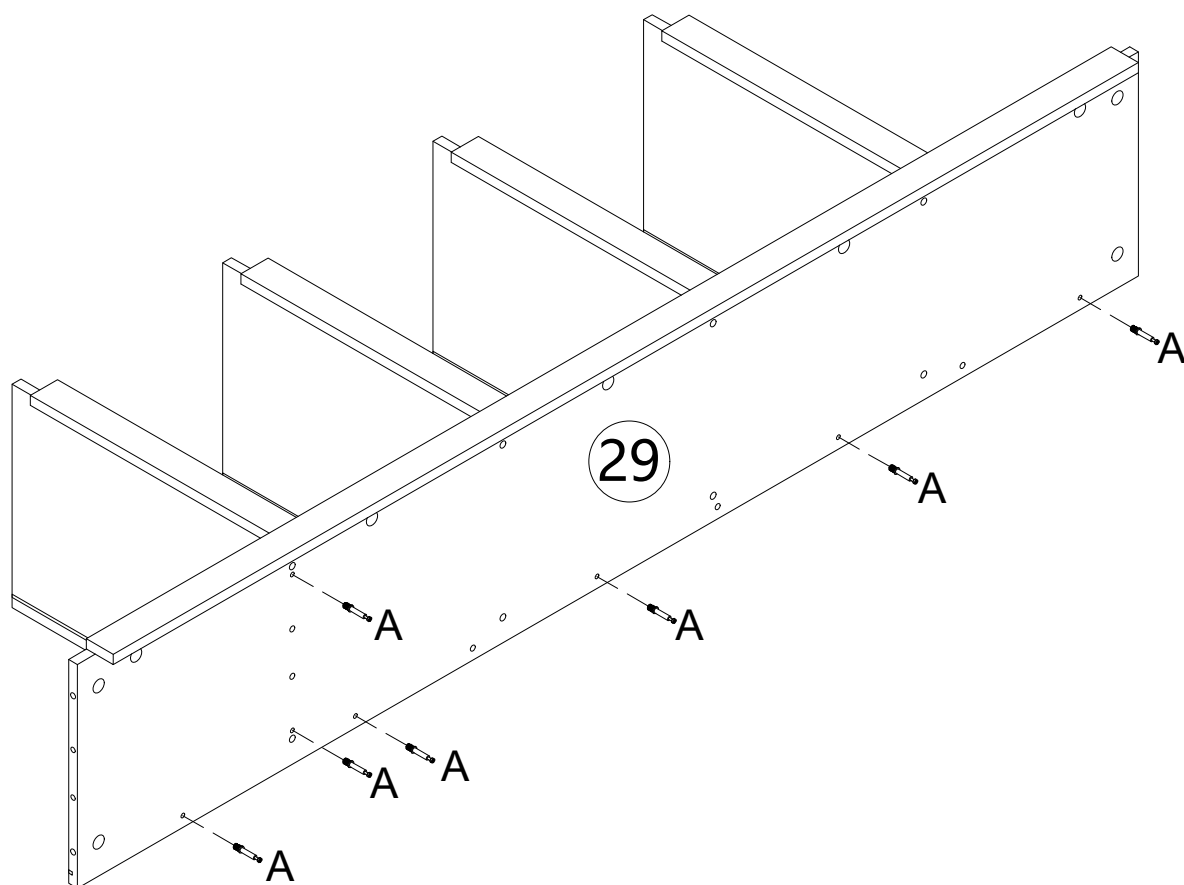


A




Cam Bolt ×7

Assembly Instructions

Step 3 6

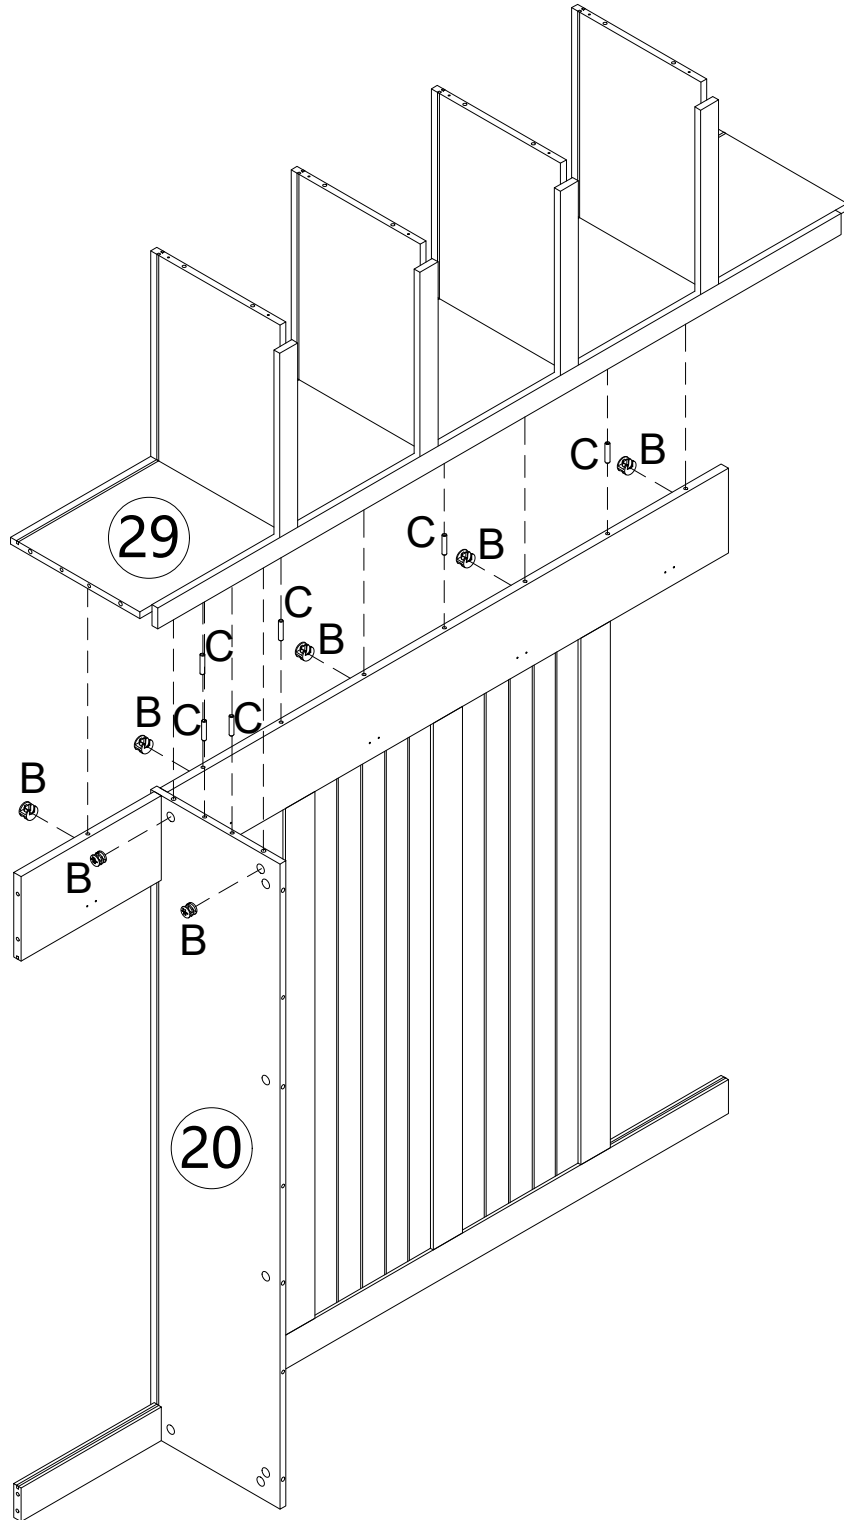


C



6*30mm Dowel x6


B



Cam Bolt x7


Assembly Instructions

Step 37

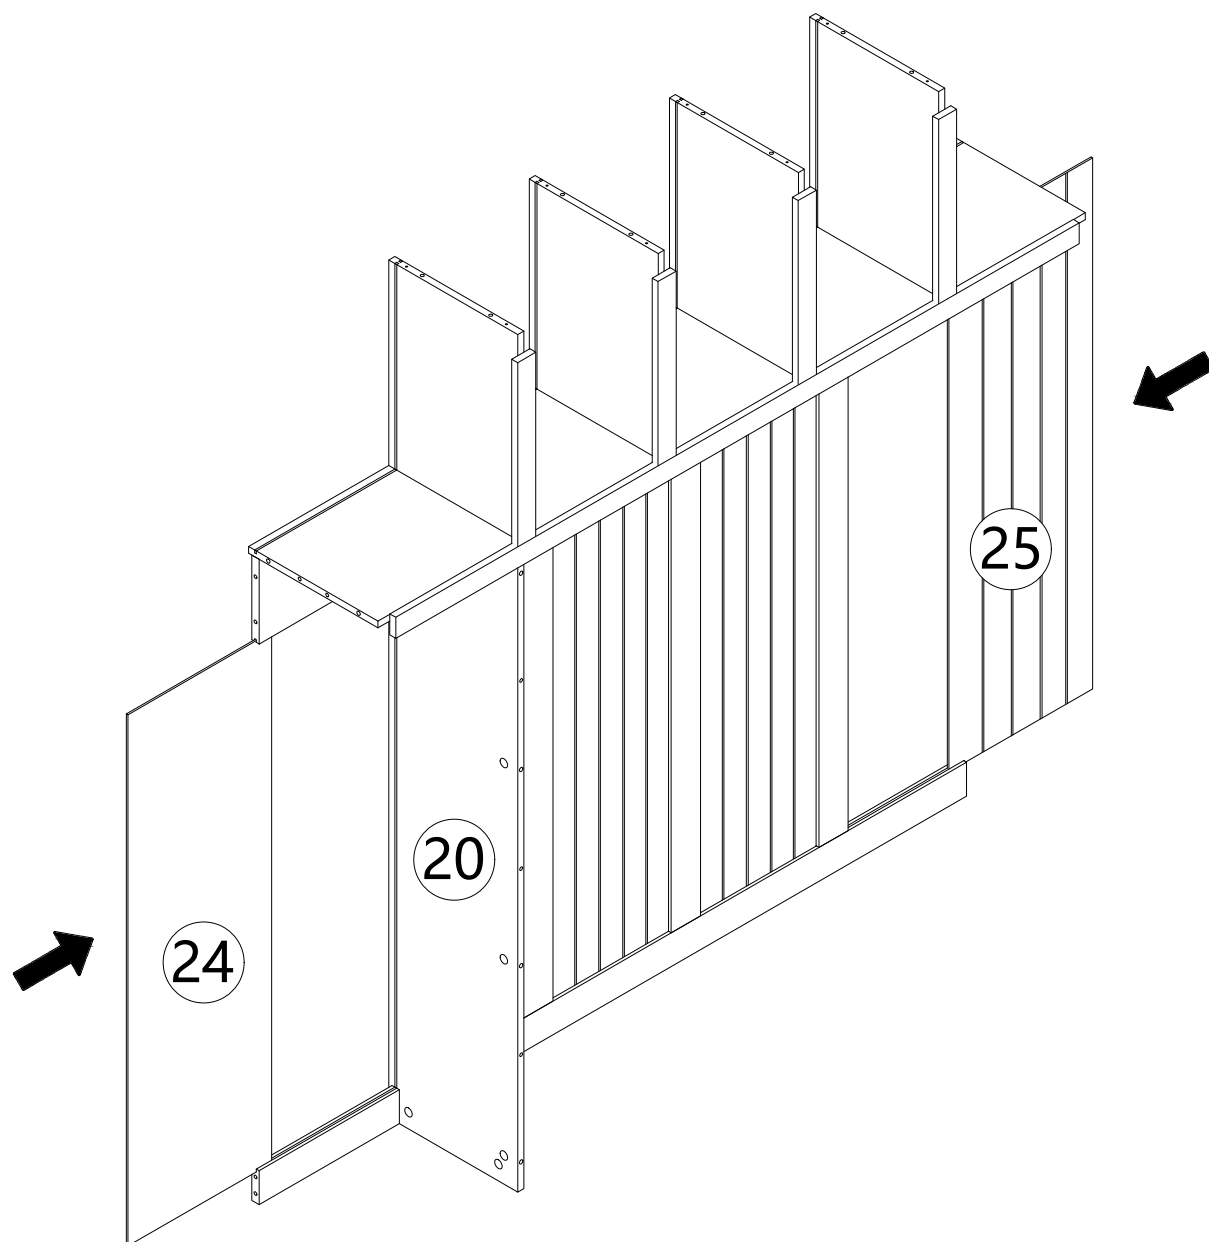


Assembly Instructions


Step 3 8

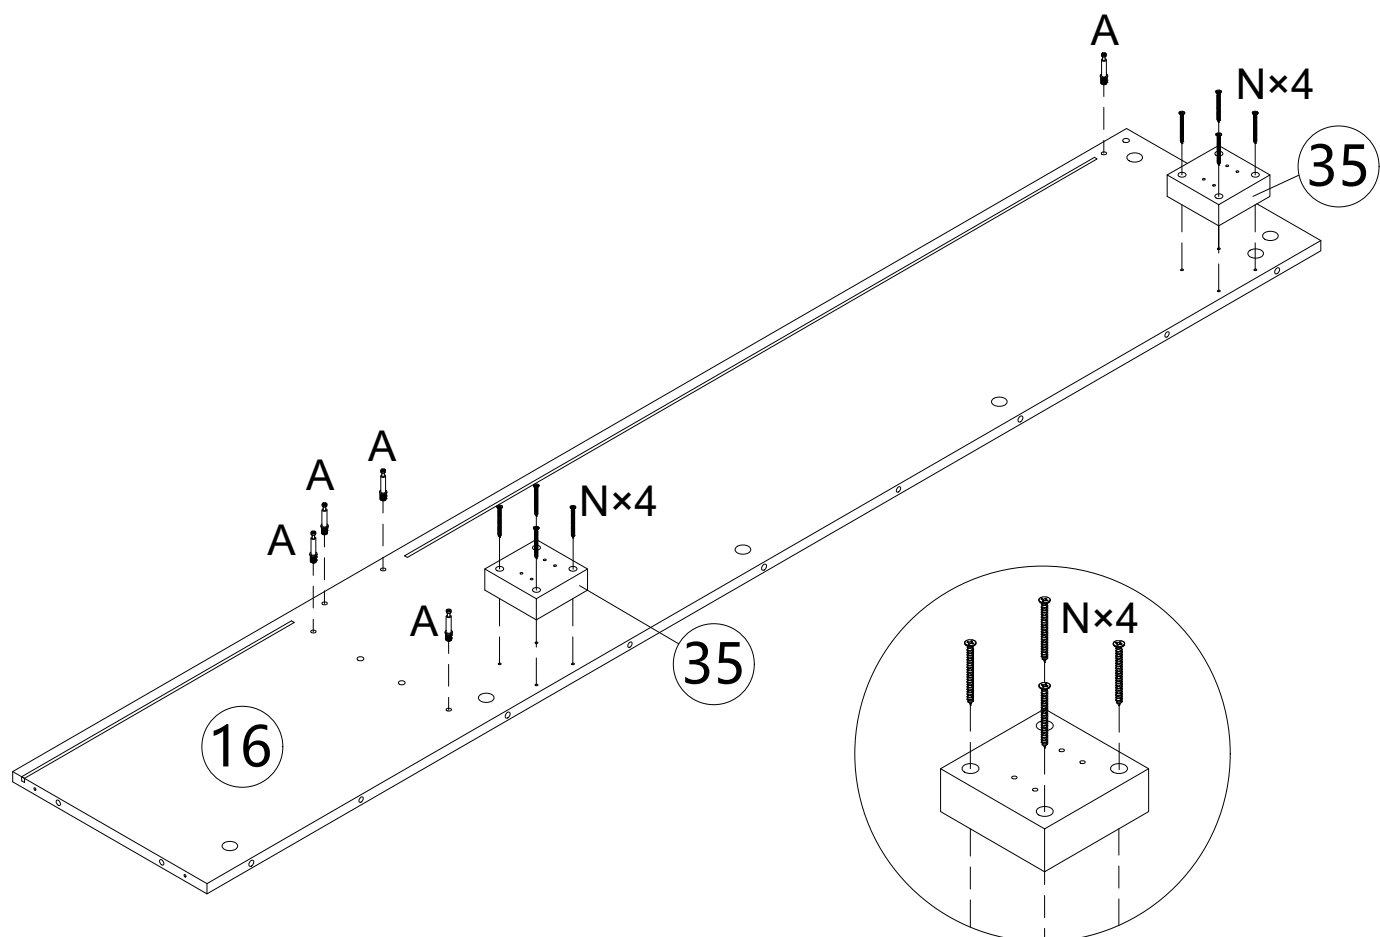

**Note the assembly
direction of board 35.**





Cam Bolt ×5



4*30mm Screw ×8

Assembly Instructions




Step 39

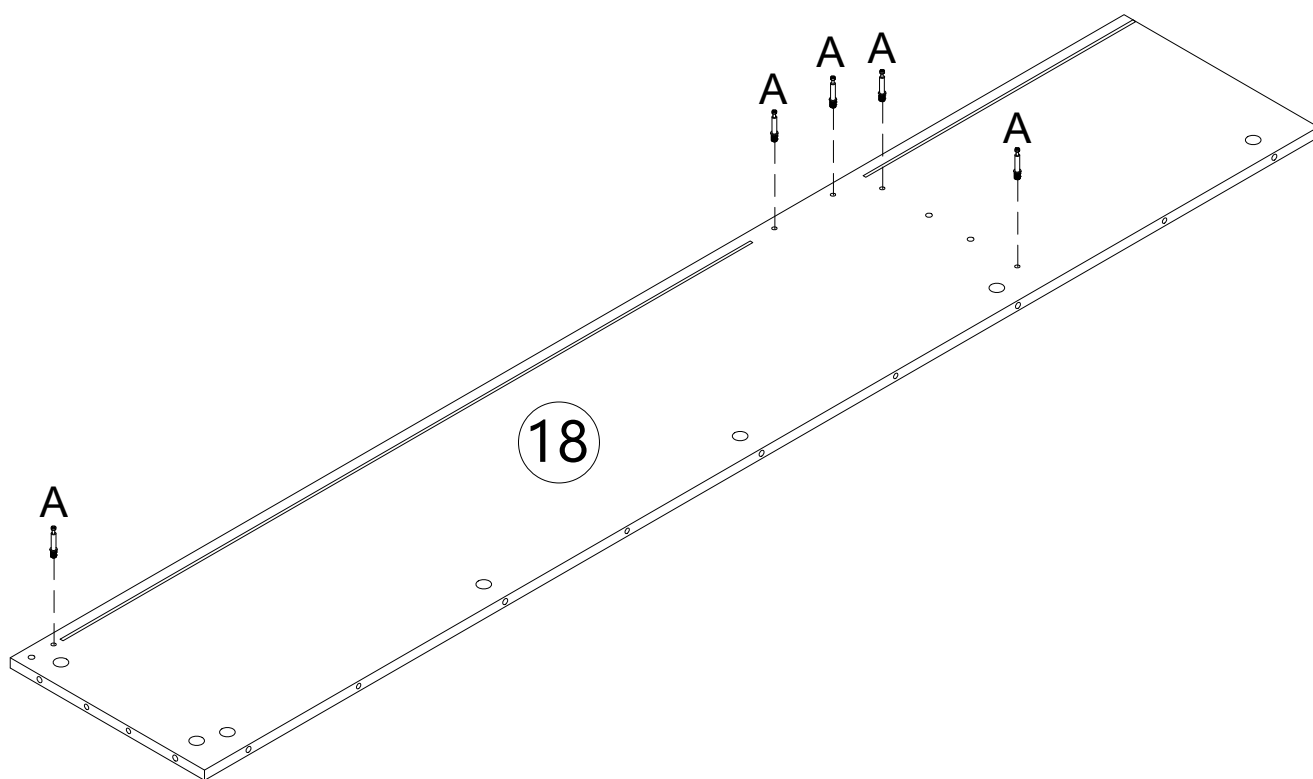

Cam Bolt ×5



Assembly Instructions

Step 40

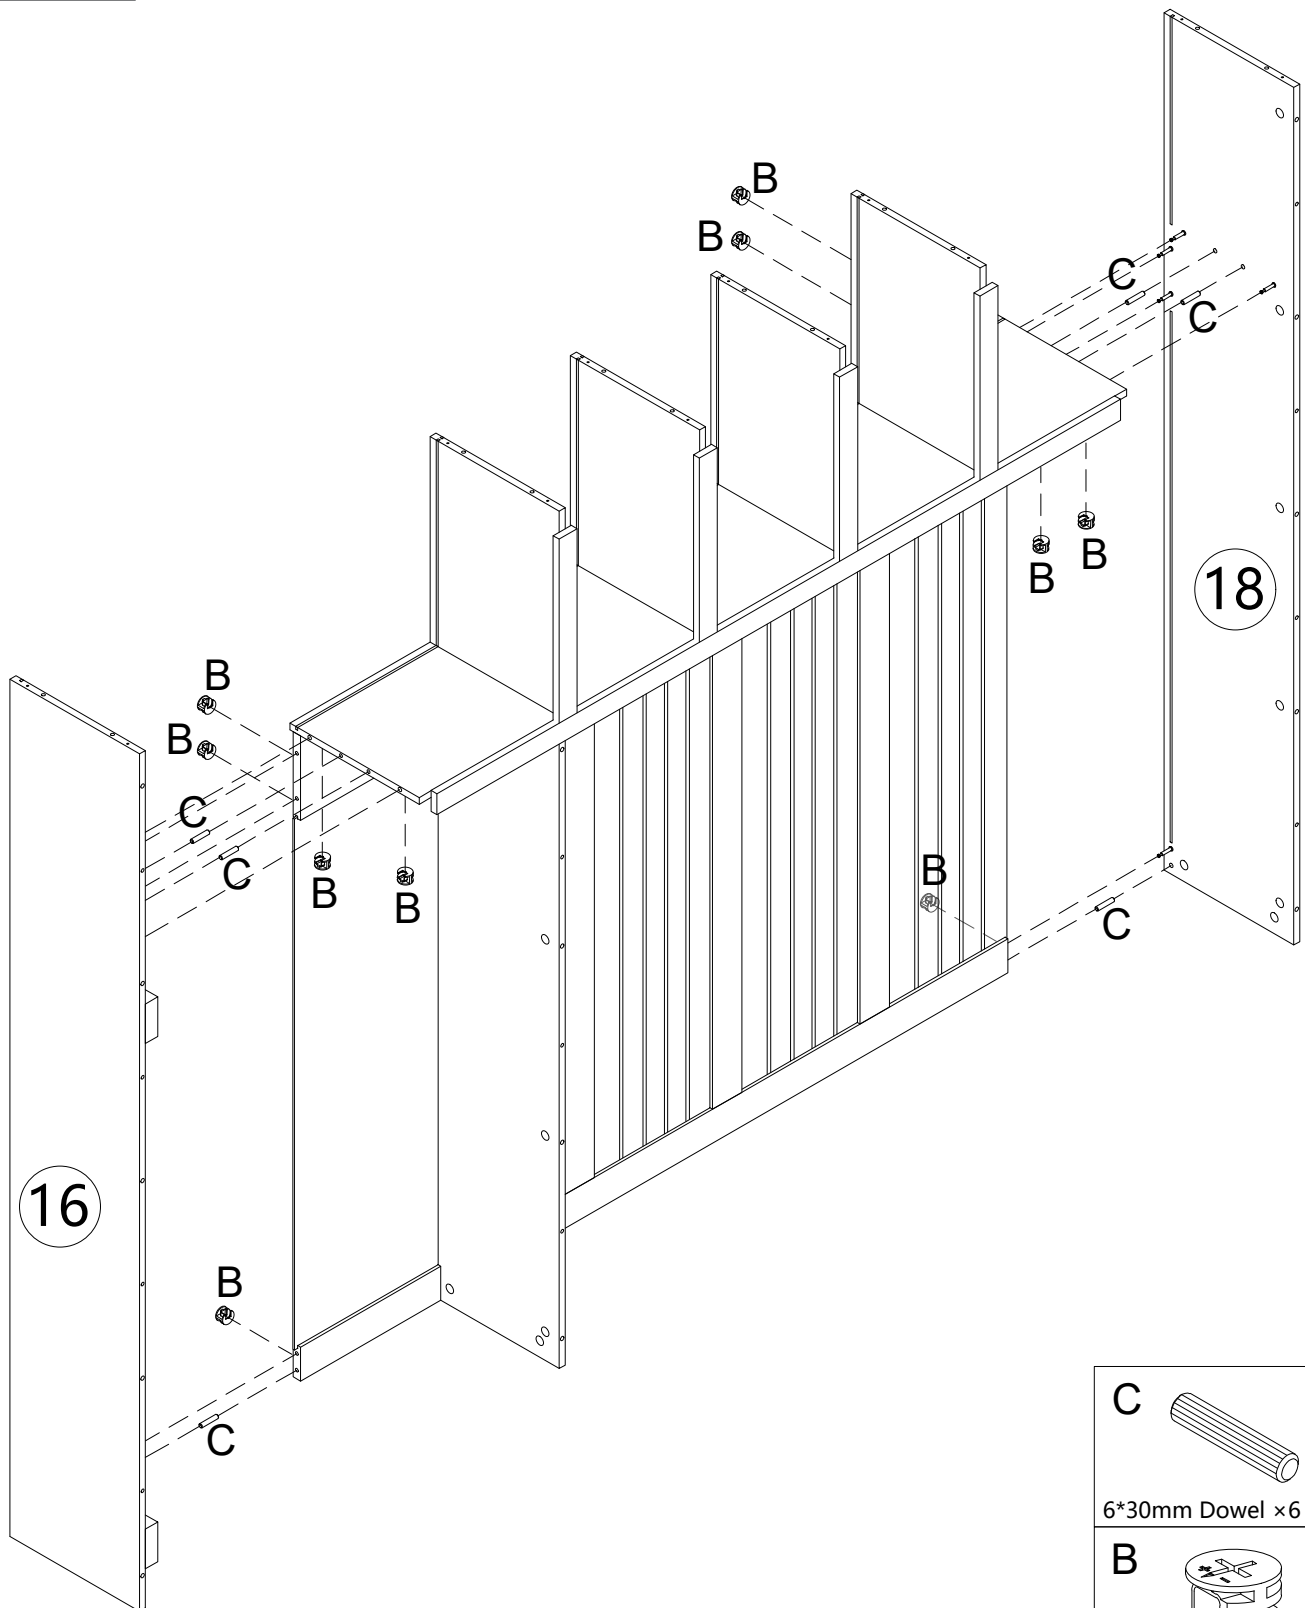


Assembly Instructions

Step 4 1

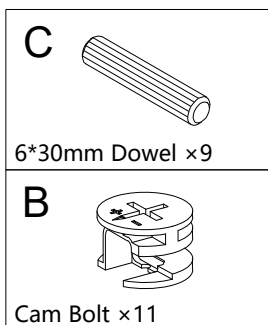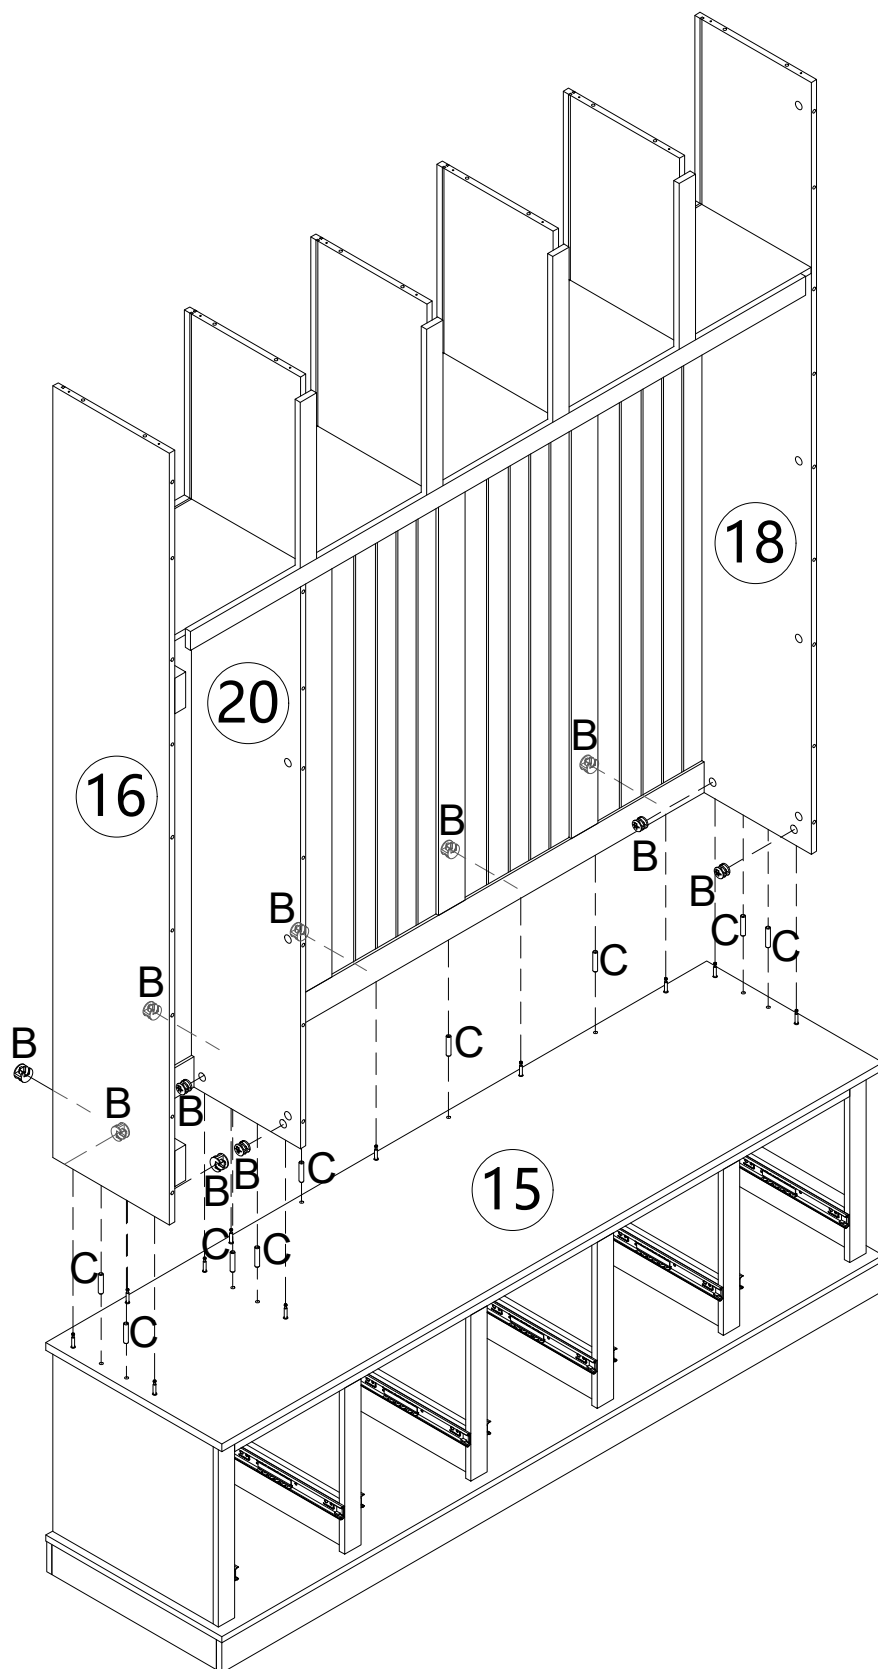


Assembly Instructions

Step 4 2

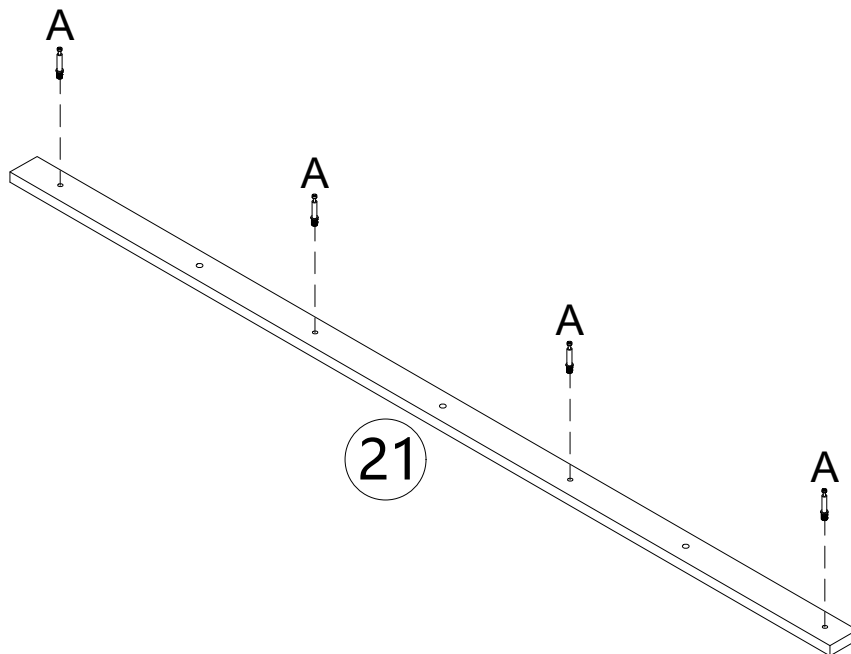


A




Cam Bolt ×4

Step 4 3

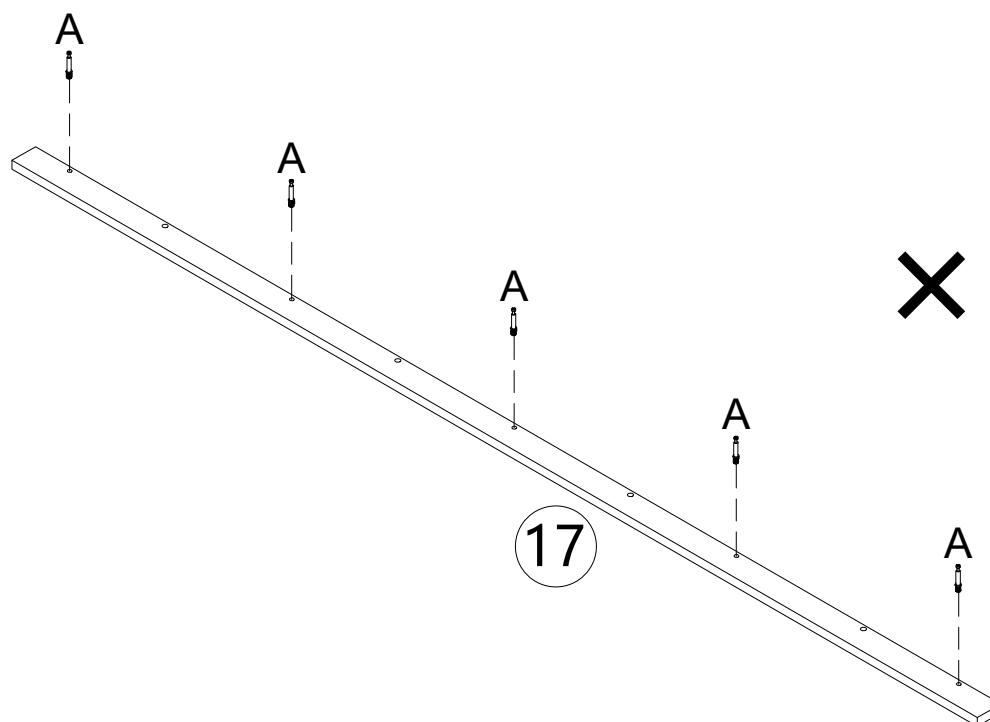



A



Cam Bolt ×10

Assembly Instructions


Step 4 4

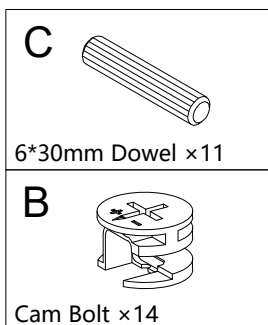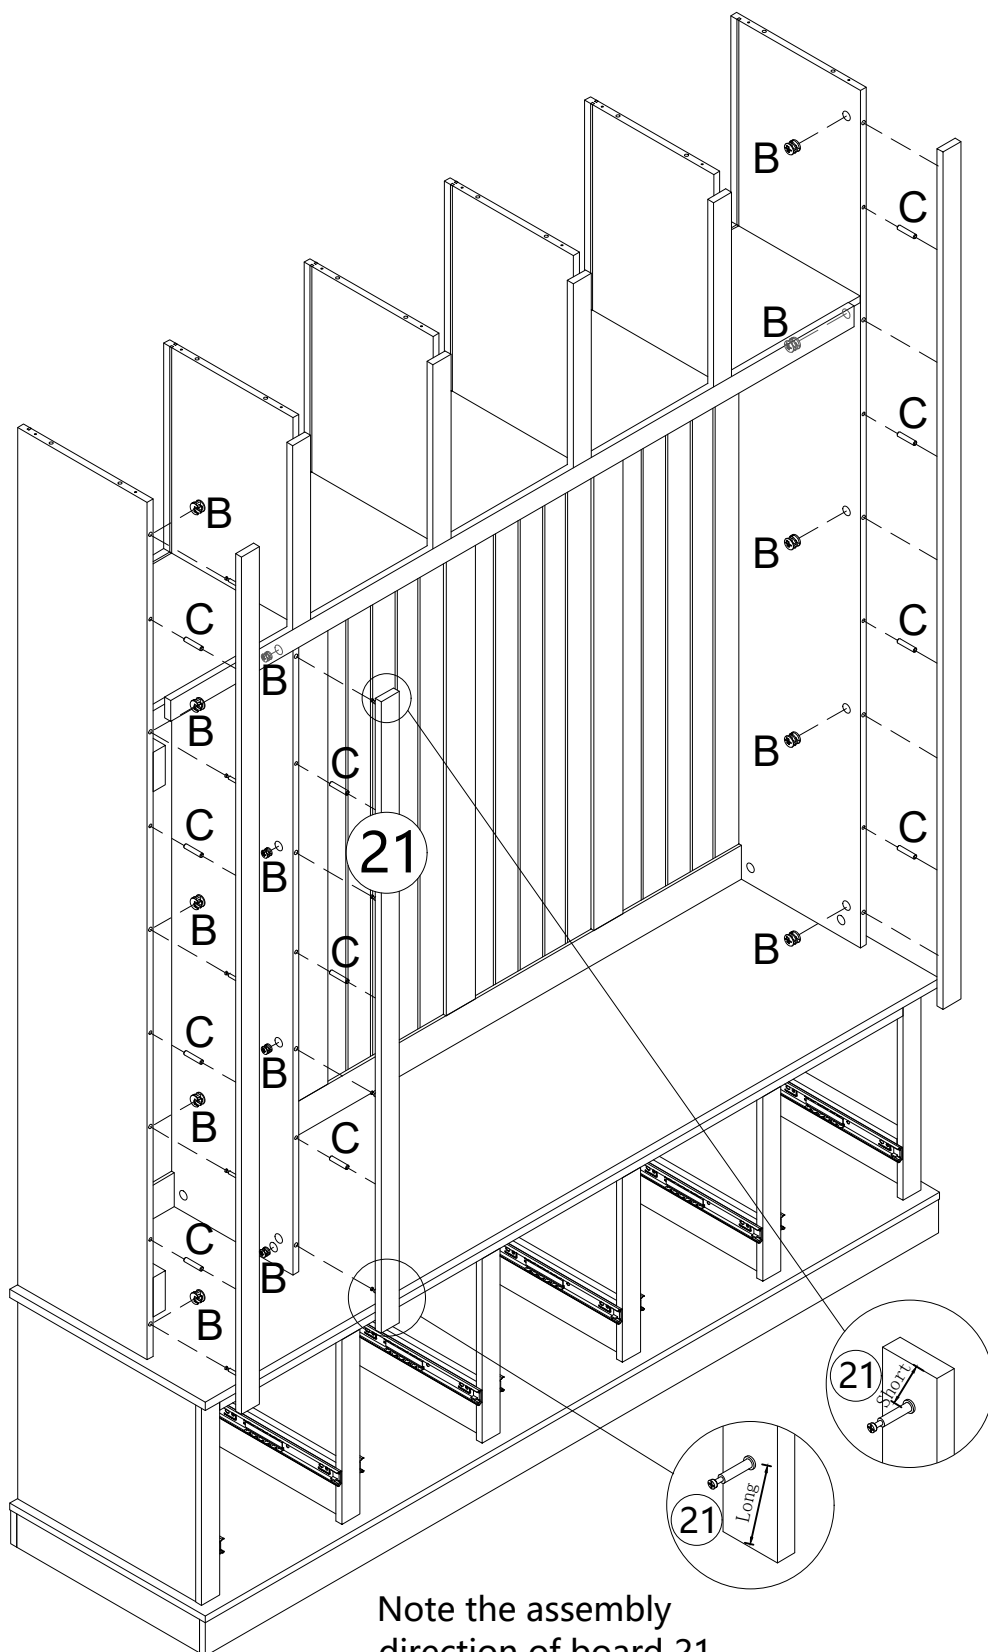

Note the assembly
direction of board 21.



Assembly Instructions

Step 4 5

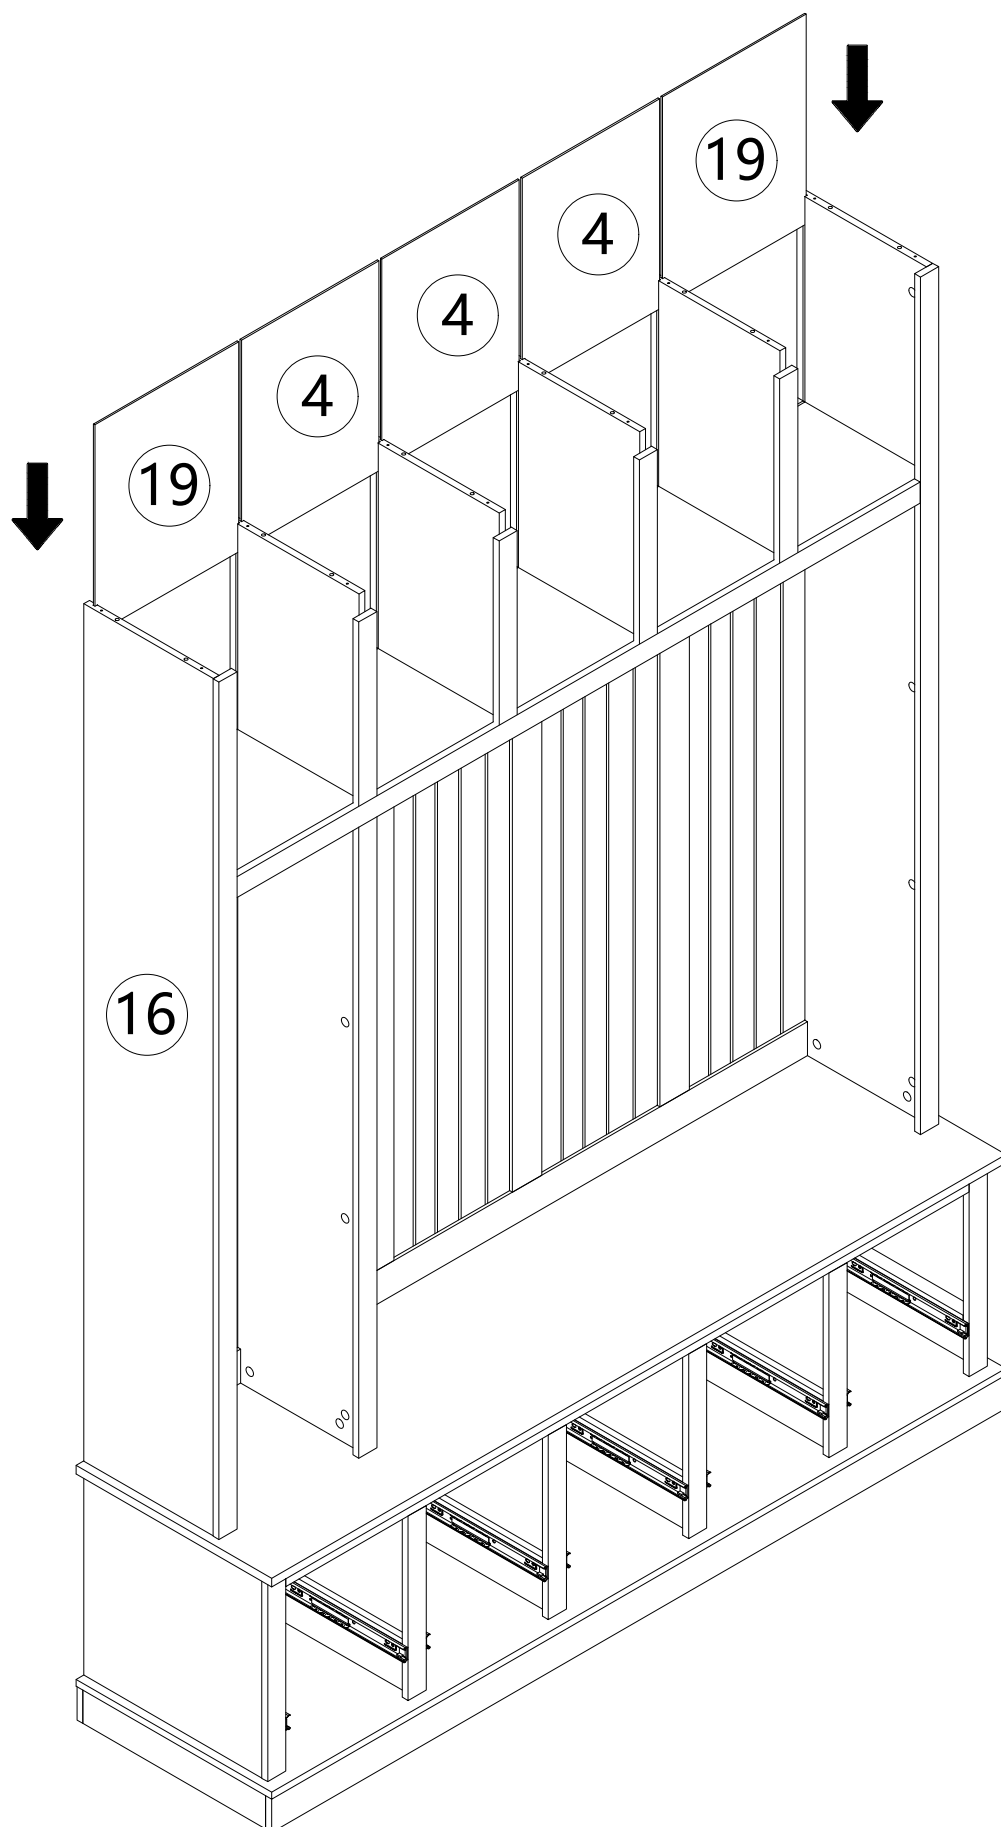


Assembly Instructions

Step 4 6

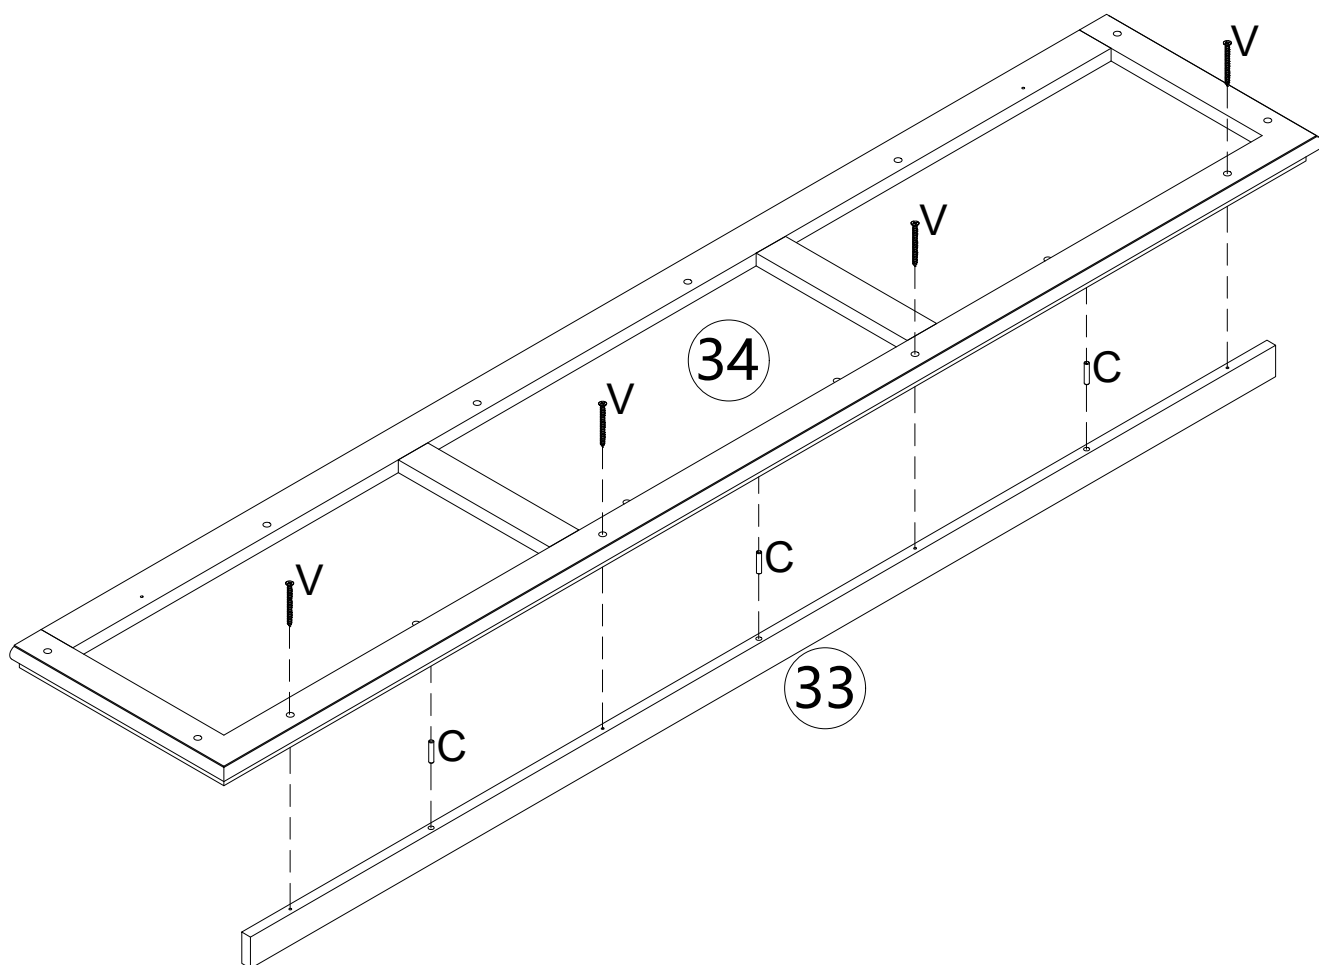



6*30mm Dowel ×3




4*50mm Screw ×4

Assembly Instructions


Step 4 7

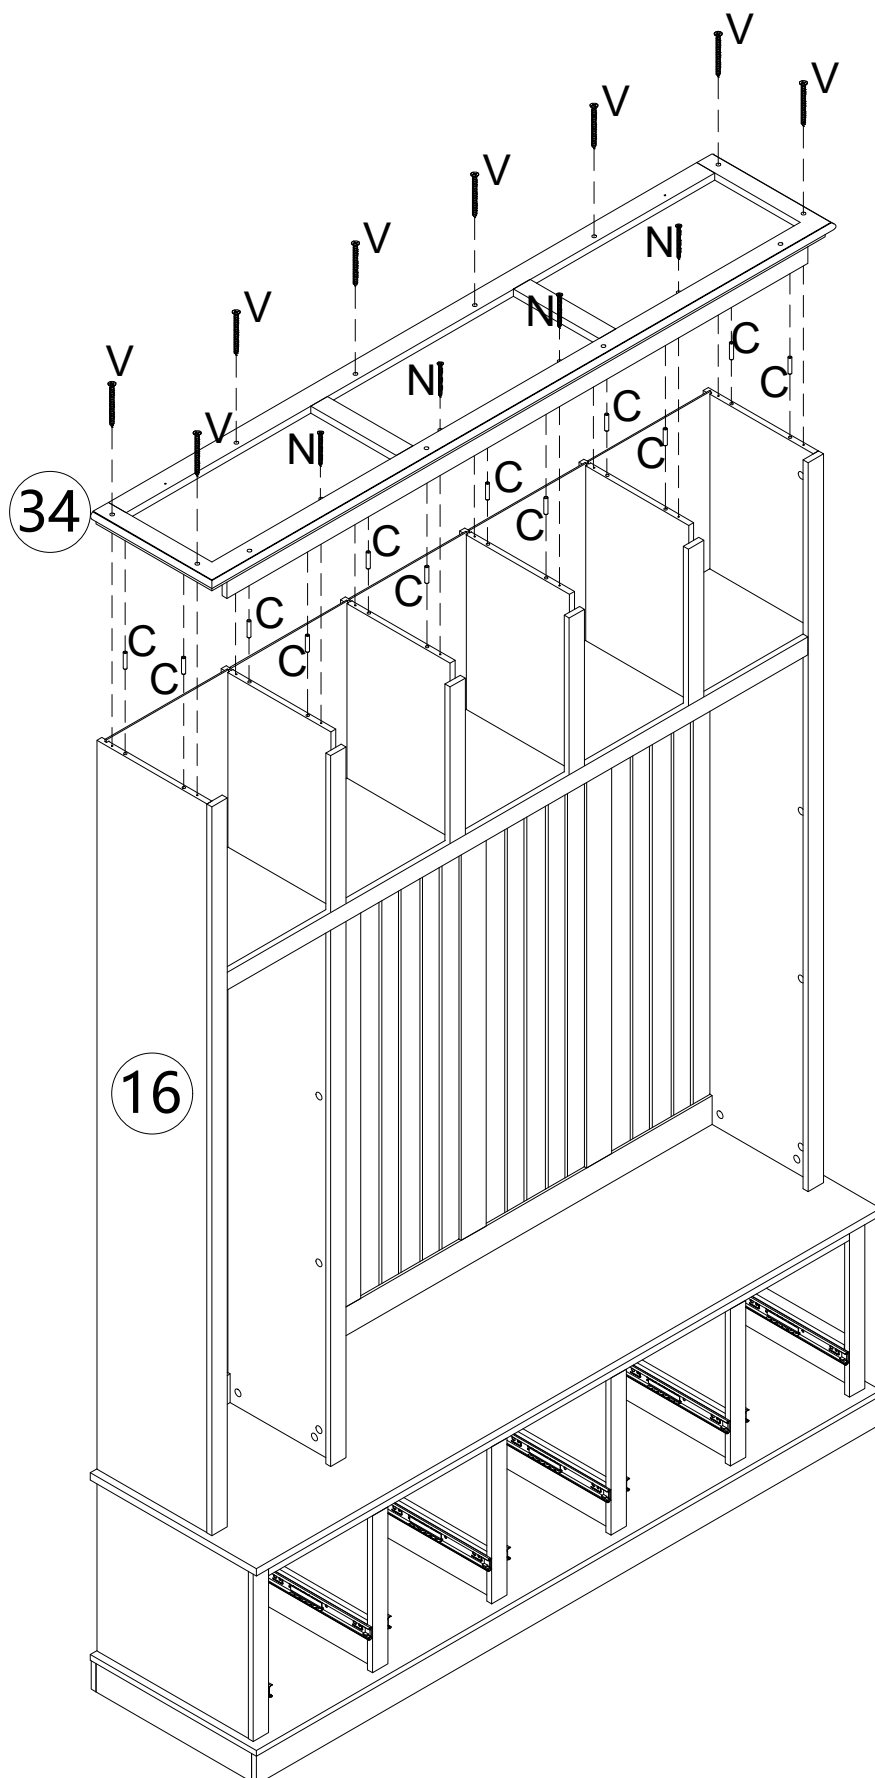

6*30mm Dowel ×12




4*50mm Screw ×8



4*30mm Screw ×4

Assembly Instructions

Step 4 8

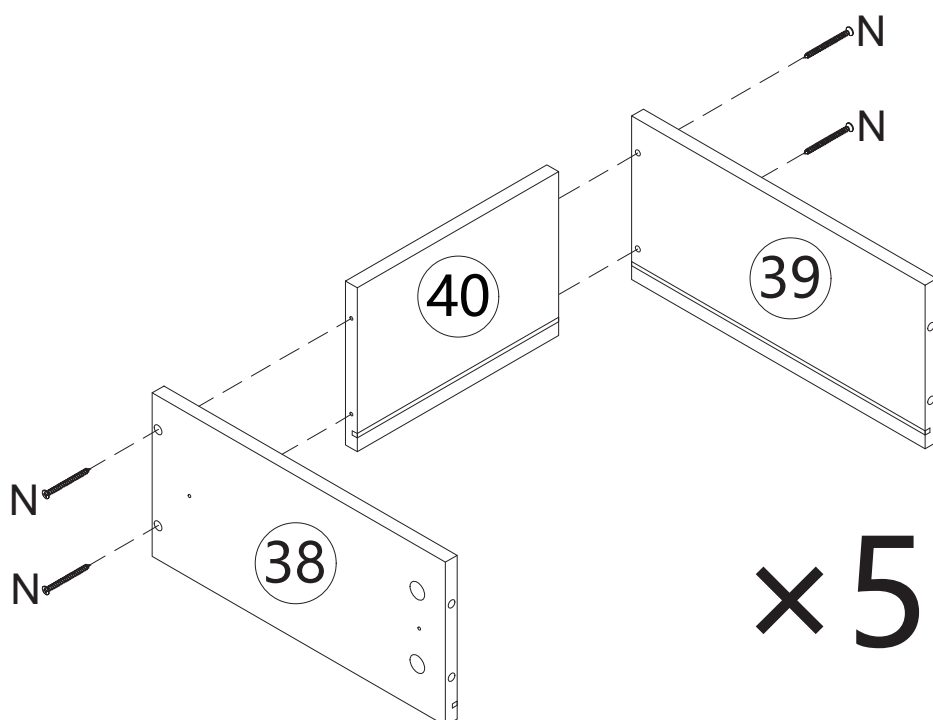


×5

N



4*30mm Screw ×20


Step 4 9

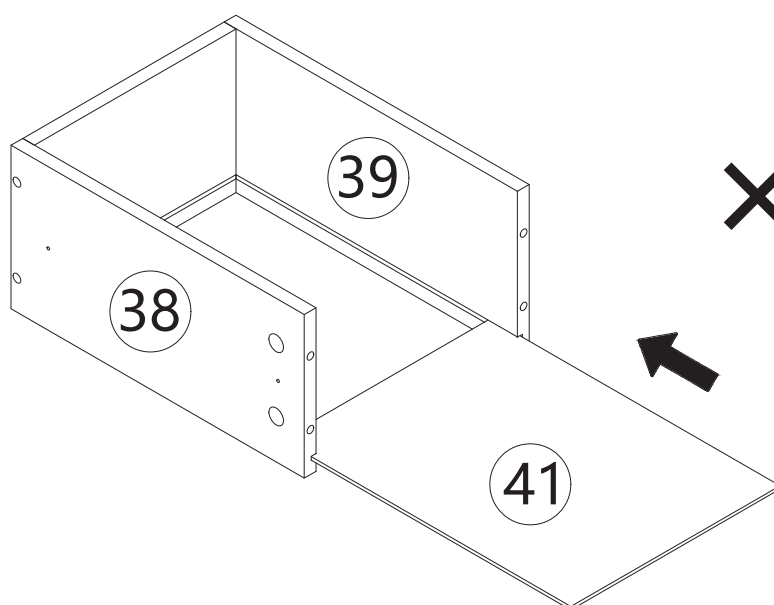

×5


Assembly Instructions

Step 5 0

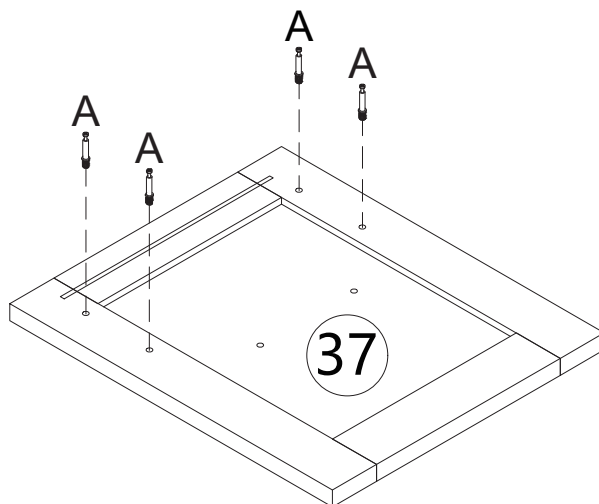


× 5

A




Cam Bolt × 20

Step 5 1

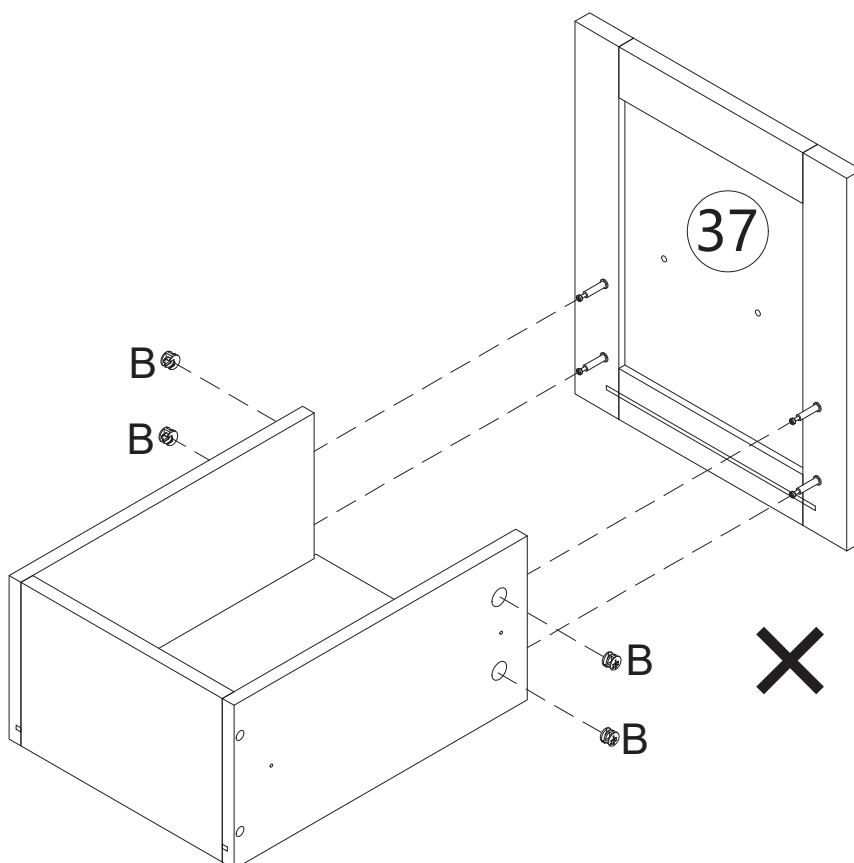

× 5




B





Cam Bolt × 20

Assembly Instructions


Step 5 2

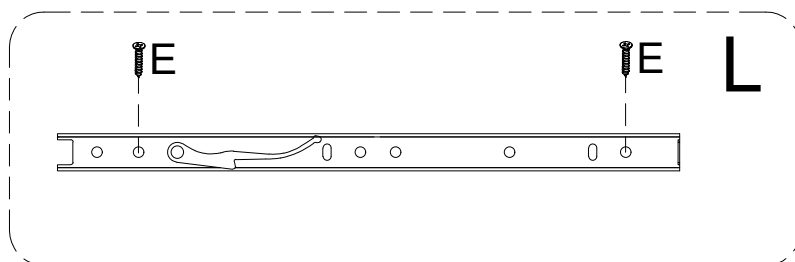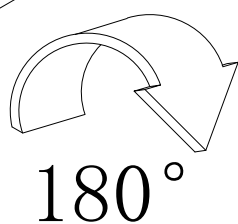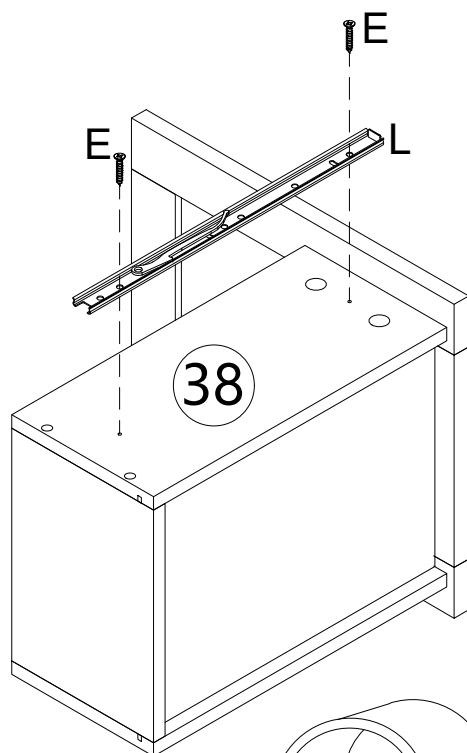

×5

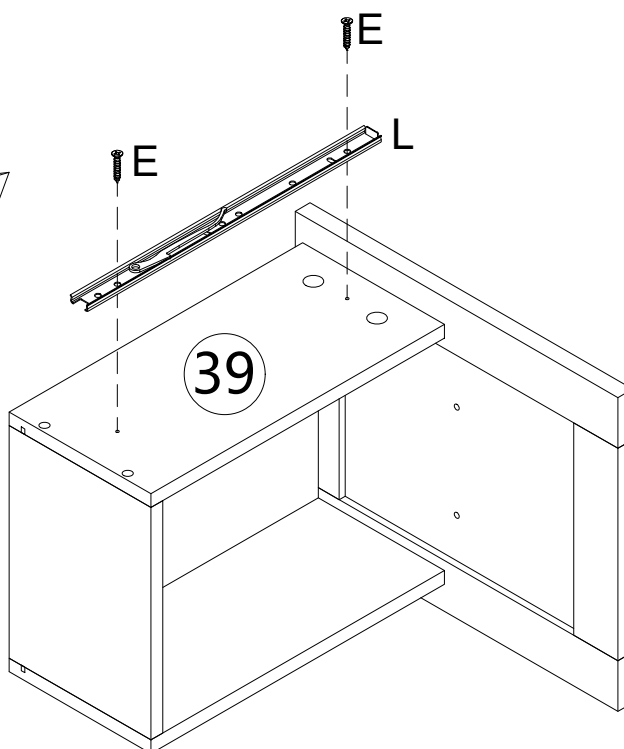


Slide Rail ×10



3*12mm Screw ×20

Assembly Instructions

Step 5 3


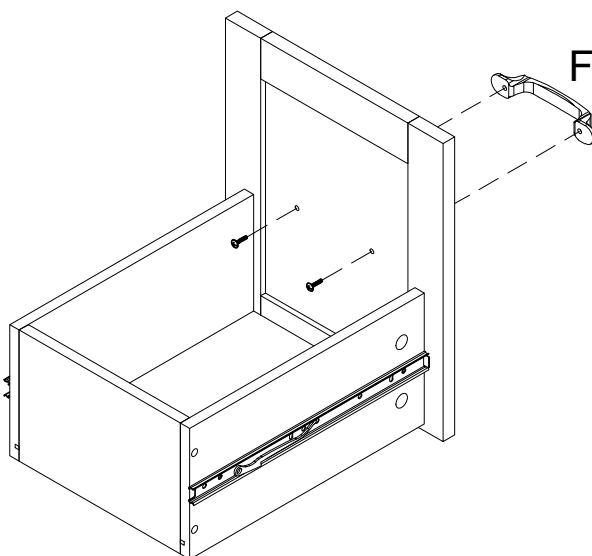


× 5



4*8mm Bar Handle × 5


Step 5 4

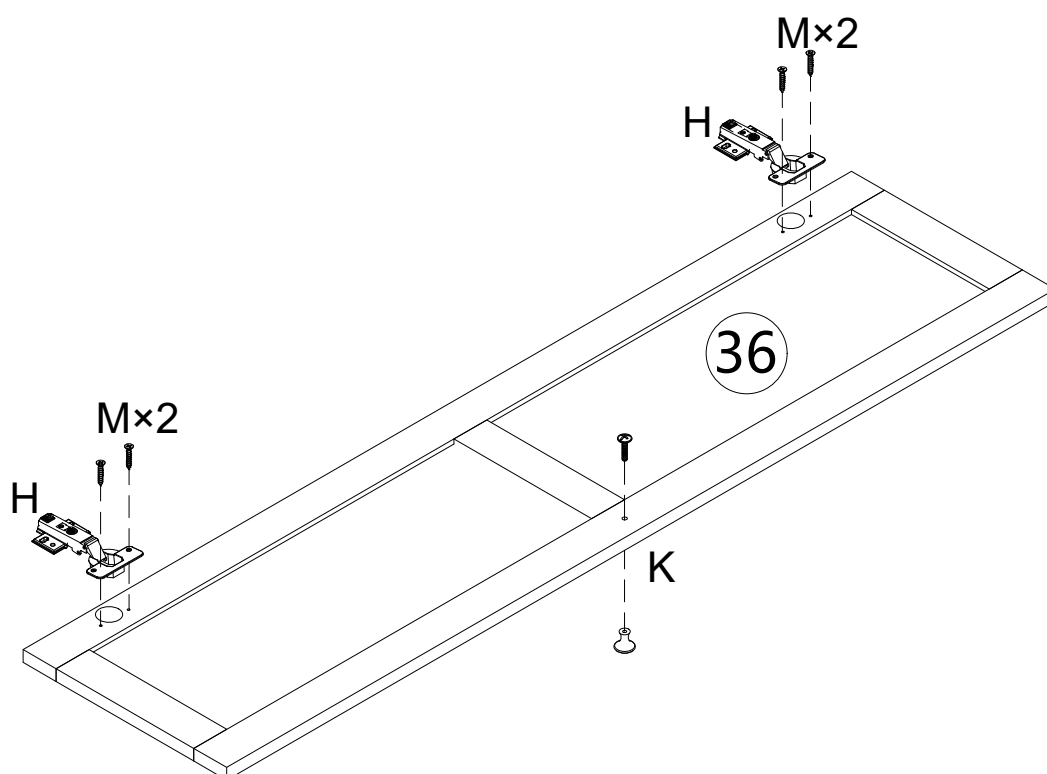

3.5*14mm Screw × 4




Door Hinge × 2set



4*18mm Round Handle × 1



Assembly Instructions

Step 5 5

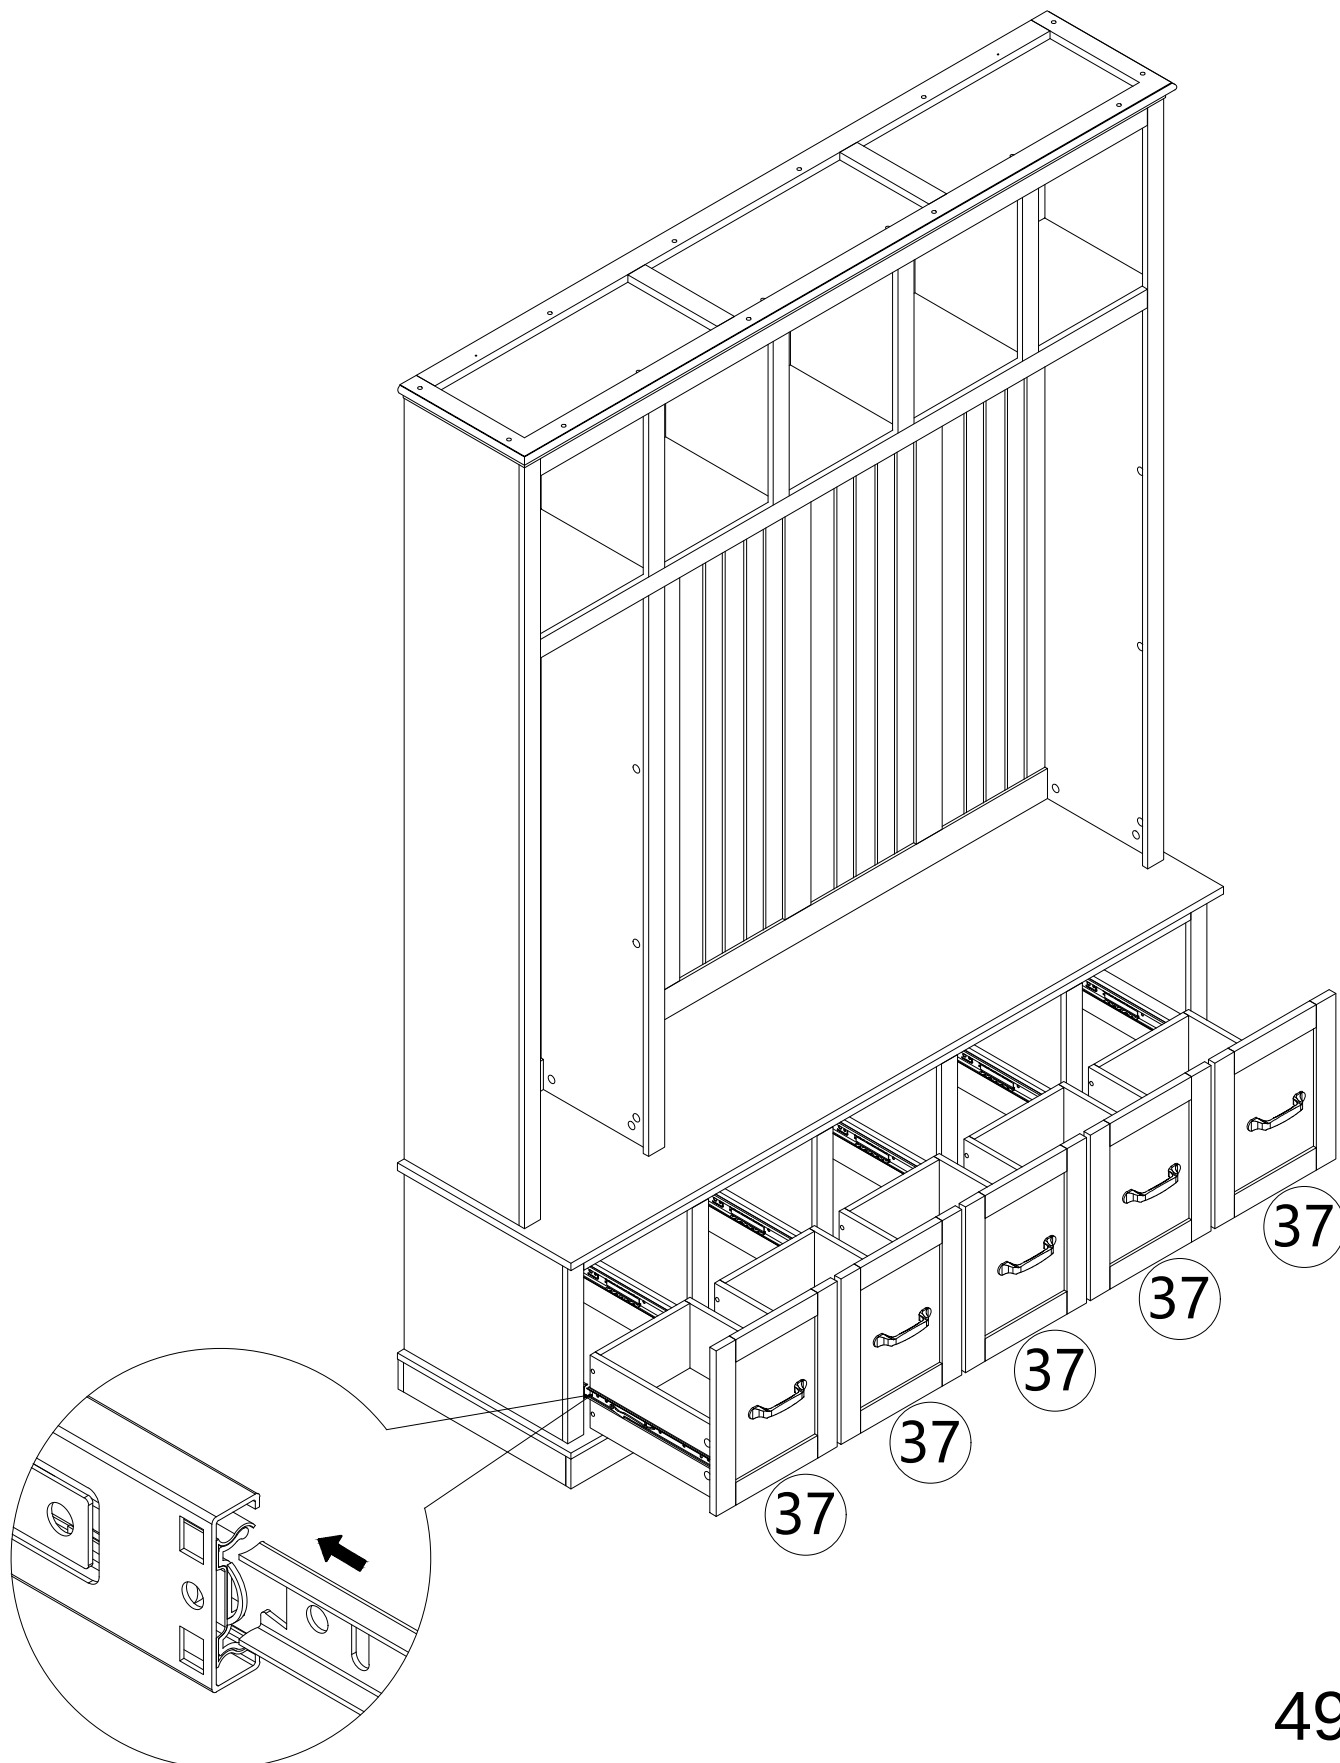


Assembly Instructions

Step 5 6

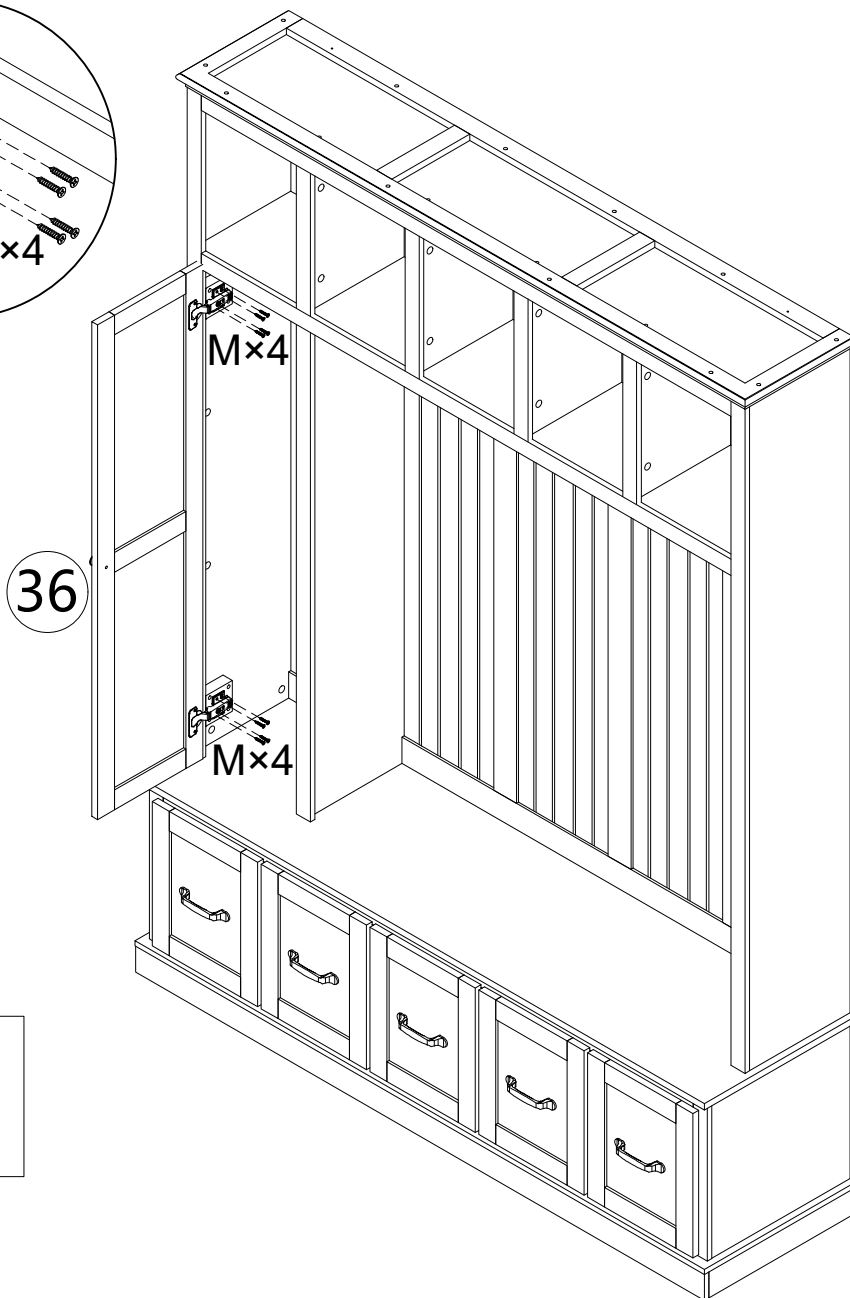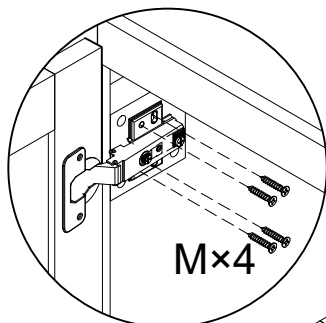


M




3.5*14mm Screw ×8


If the door can't close, please adjust the hinges as below.

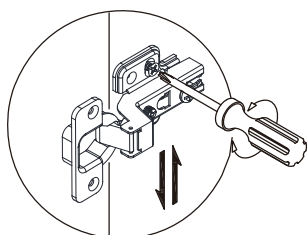

This is used to adjust the door panel in the up and down direction.

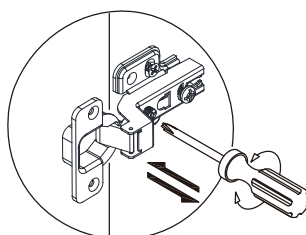



This is used to adjust the door panel in the left and right direction.

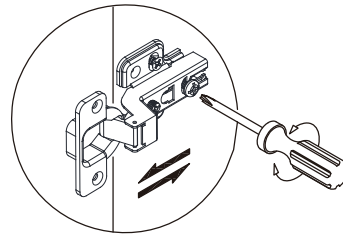


This is used to adjust the door panel in the front and rear.

Assembly Instructions

Step 5 7

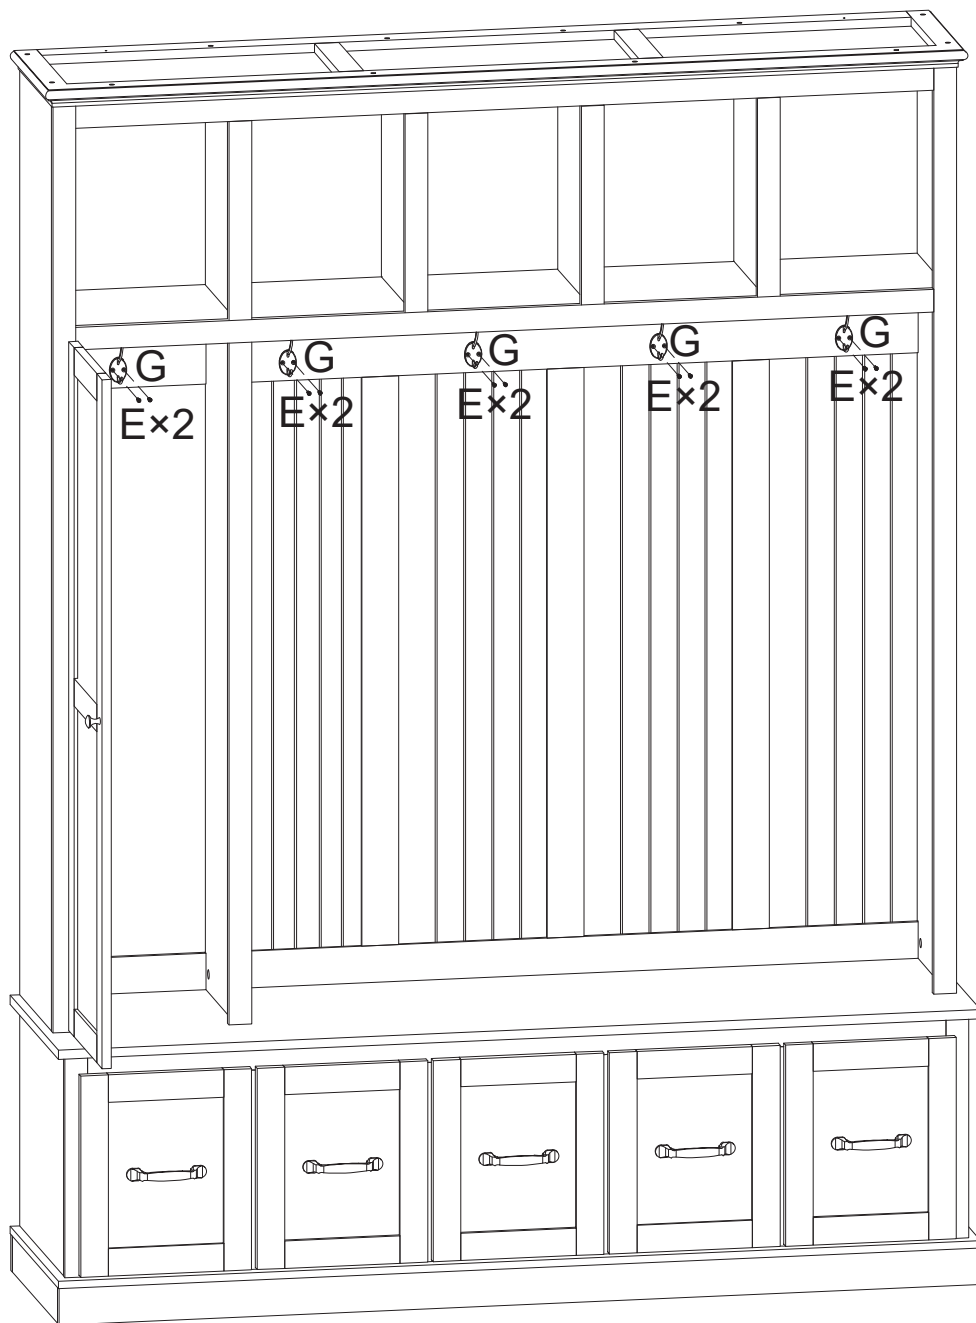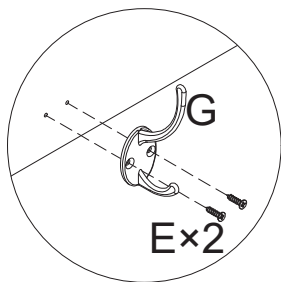

E



3*12mm Screw ×10

G




Coat Hook ×5

U




Hole Cover ×50

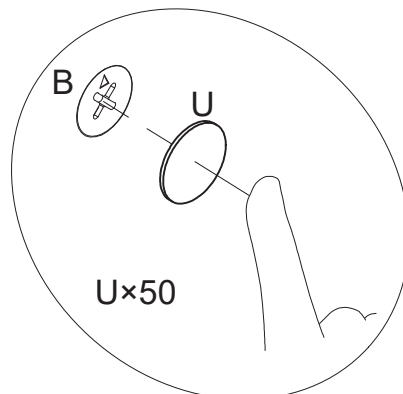


To cover the prominent Part B.

Assembly Instructions

Step 5 8

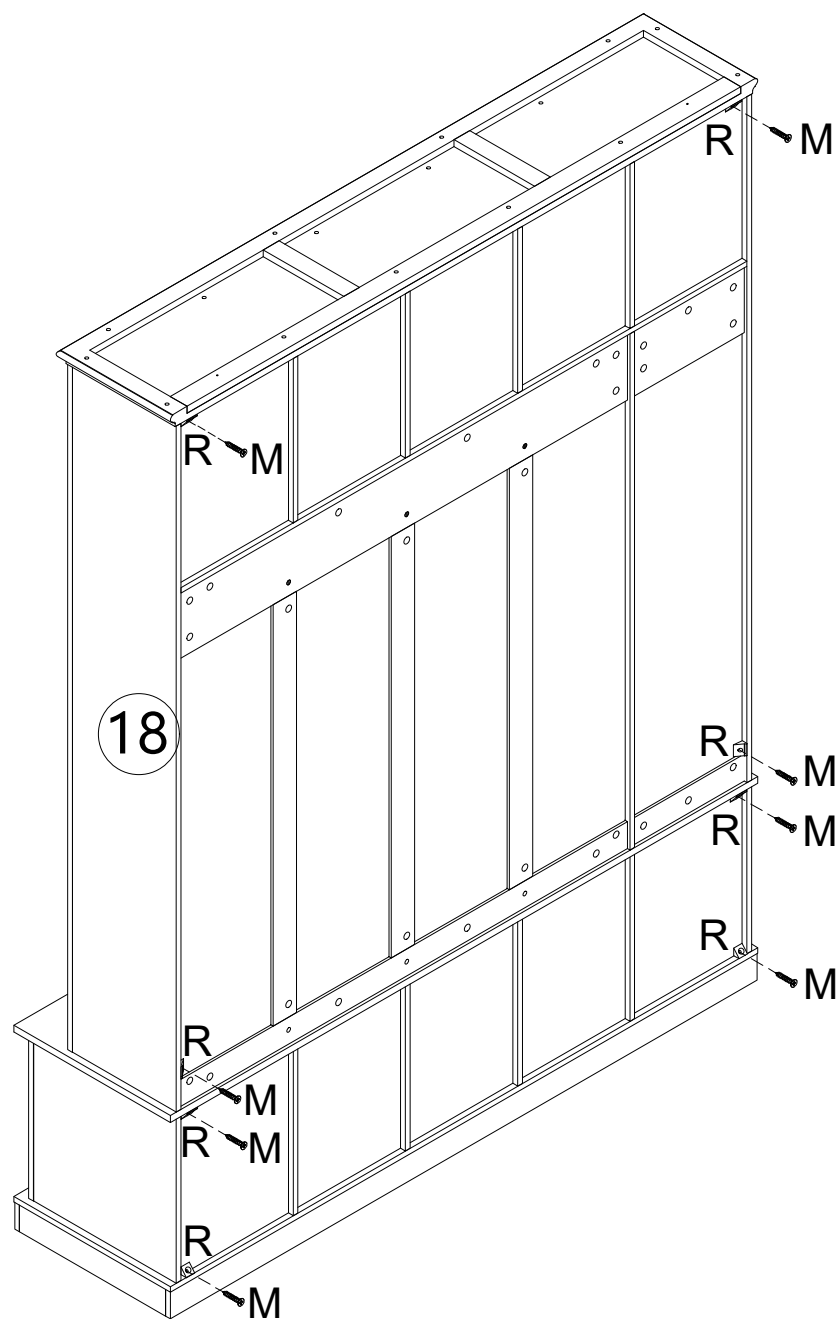

M




3.5*14mm Screw ×8


R



Back Panel Clip ×8

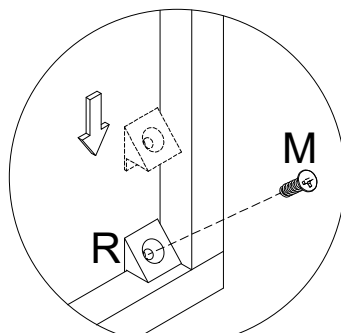

1

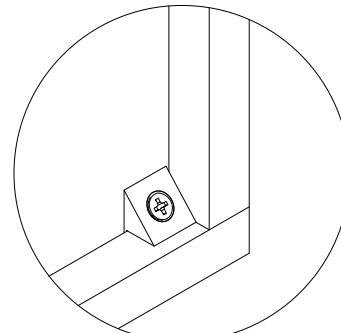

2

Assembly Instructions

Finish

