
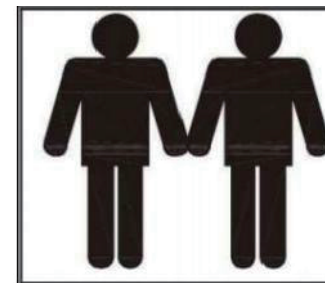


Assembly Instruction

Note:


- 1. Should be assembled on flat ground to keep balance.**
- 2. Before completing the installation, do not tighten the screws.**

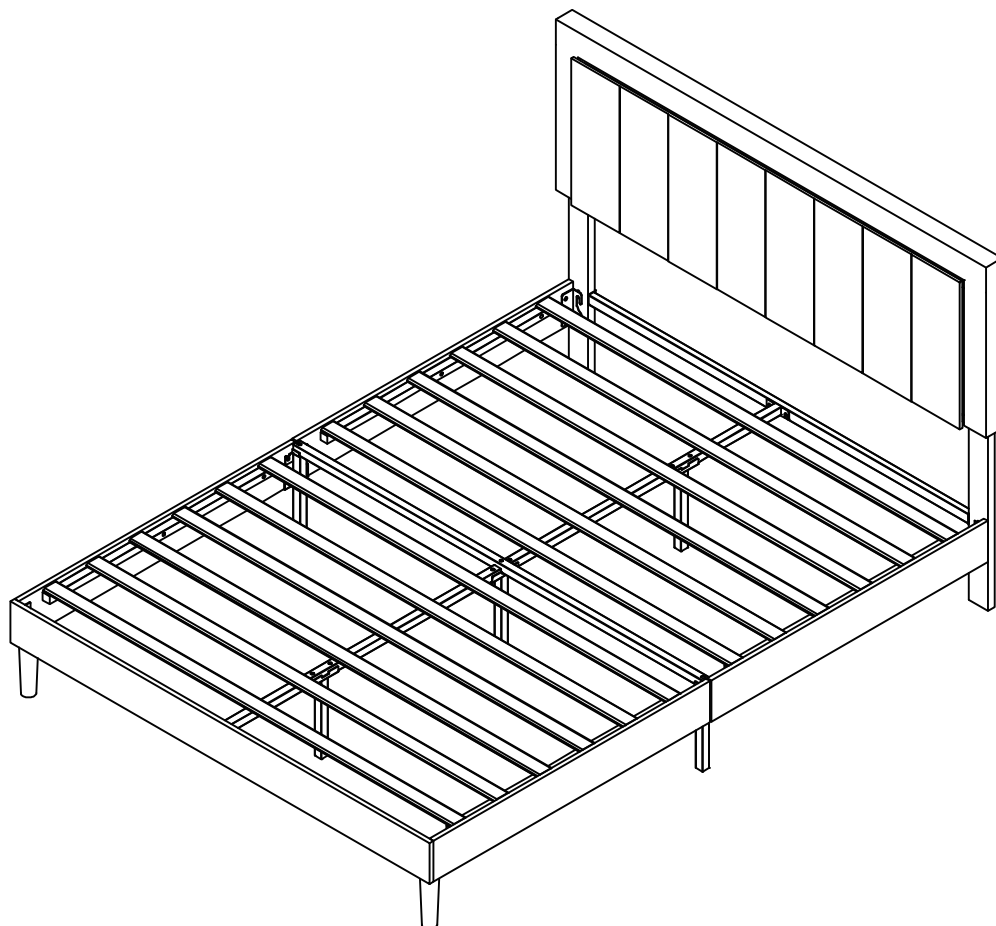

It needs at least two people to install.



Before starting the assembly, you must read the whole manual and follow the instructions.











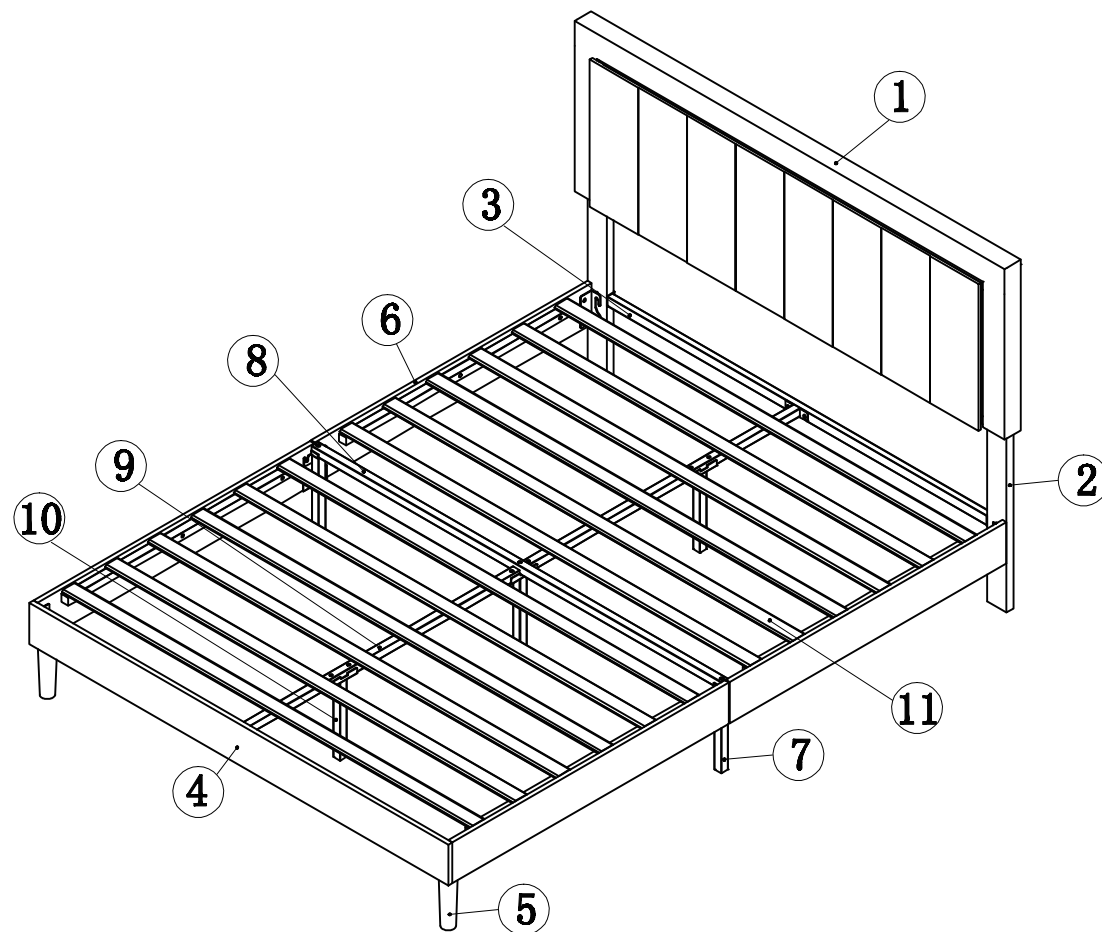


Assembly Instruction

Hardware arts


								
Ⓐ M8x15 30pcs	Ⓑ M8x35 8 pcs	Ⓒ M8x45 5 pcs	Ⓓ 5 # 1 PC					

Part list

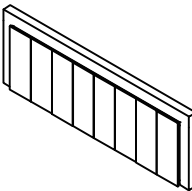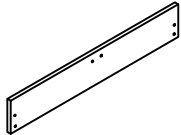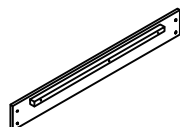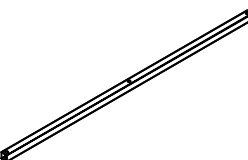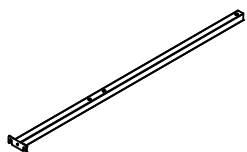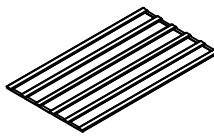						
① 1 PC	② 2 PCS	③ 1 PC	④ 1 PC	⑤ 2 PCS	⑥ 4 PCS	⑦ 2 PCS
						
⑧ 1 PC	⑨ 2 PCS	⑩ 3 PCS	⑪ 2 PCS	⑫ 1 PC	⑬ 1 PC	⑭ 1 PC
						
⑮ 1 PC						


Assembly Instruction

C	 M8x45	4pcs
D	 5#	1pc

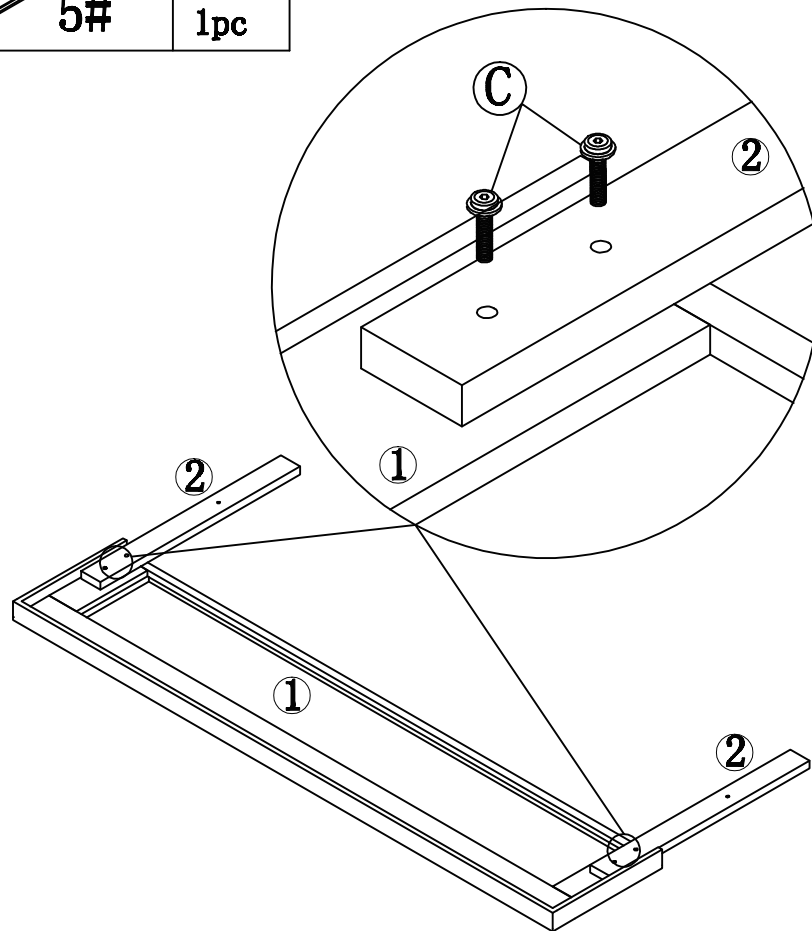

Attach Part (2) to Part (1) with Bolt (C) using Hex Key (D).


A	 M8x15	2pcs
D	 5#	1pc

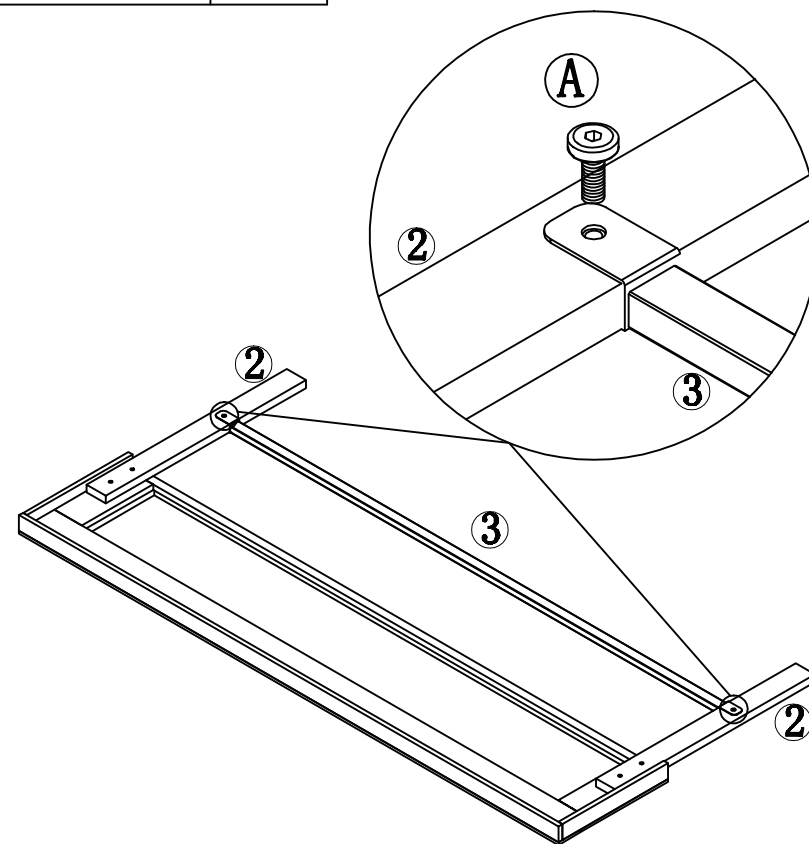

Attach Part (3) to Part (2) with Bolt (A) using Hex Key (D).


Assembly Instruction

A	 M8x15	4pcs
D	 5#	1pc

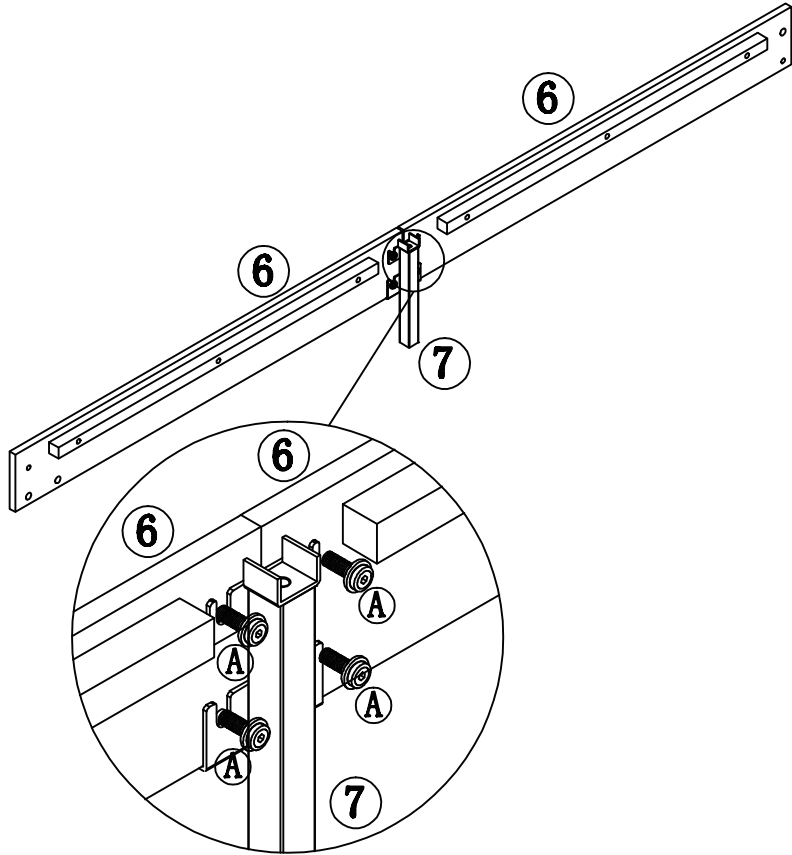

Attach Part (7) to Part (6) with Bolt (A) using Hex Key (D).


A	 M8x15	4pcs
D	 5#	1pc

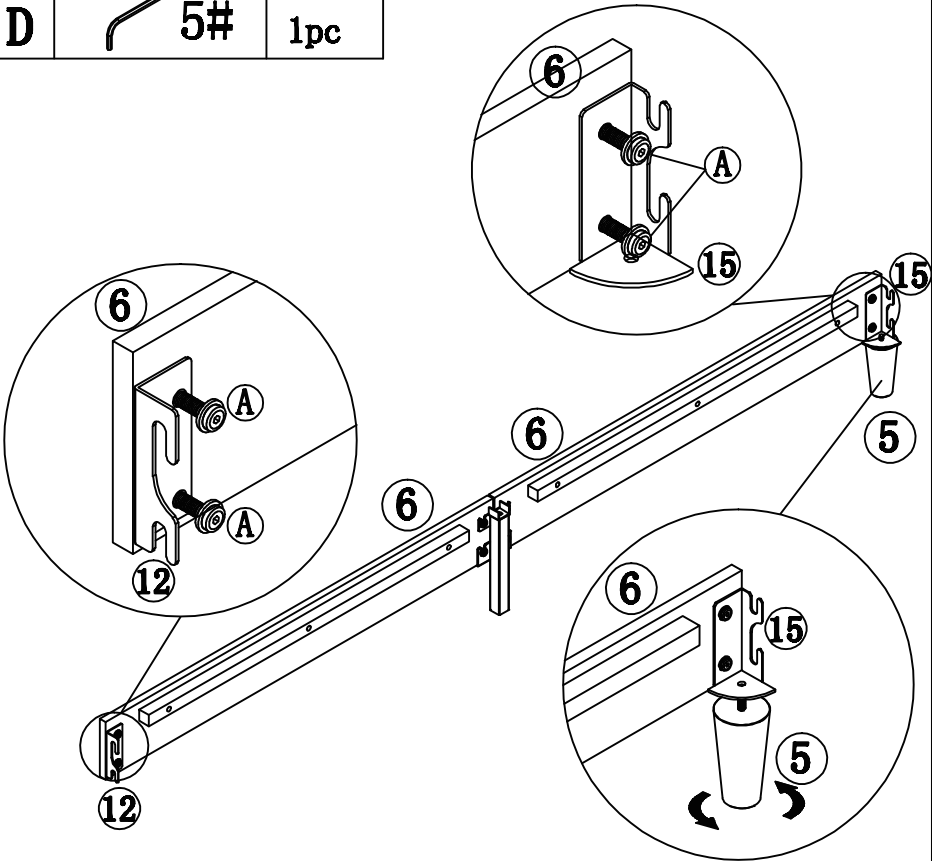

Attach Part (12,15) to Part (6) with Bolt (A) using Hex Key (D).
Attach Part (5) to Part (15) .


Assembly Instruction

A		M8x15	4pcs
D		5#	1pc

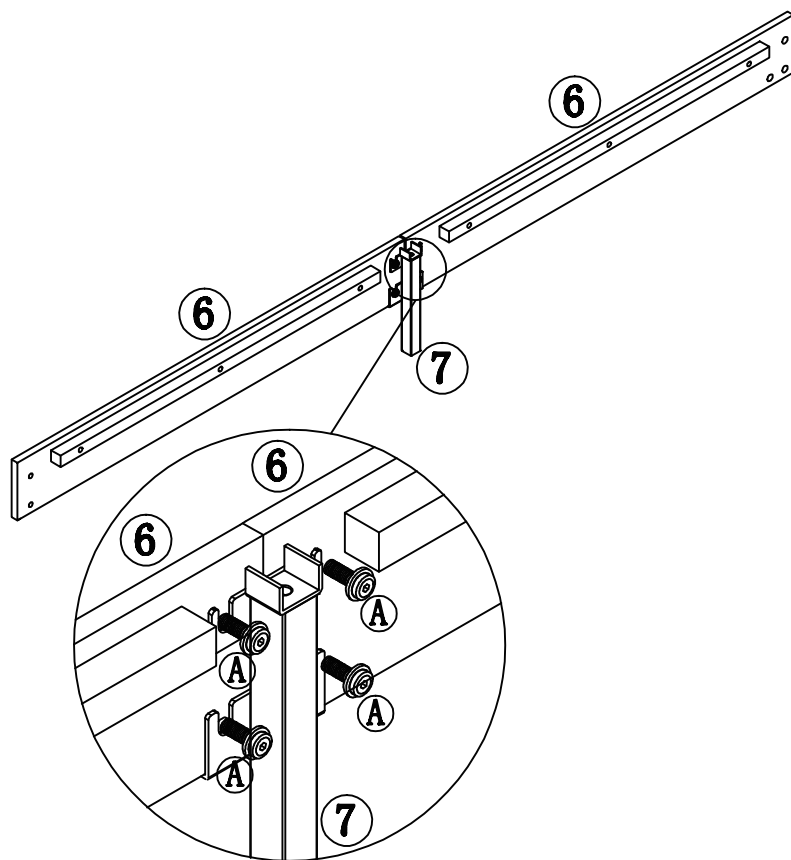

Attach Part (7) to Part (6) with Bolt (A) using Hex Key (D).

A		M8x15	4pcs
D		5#	1pc

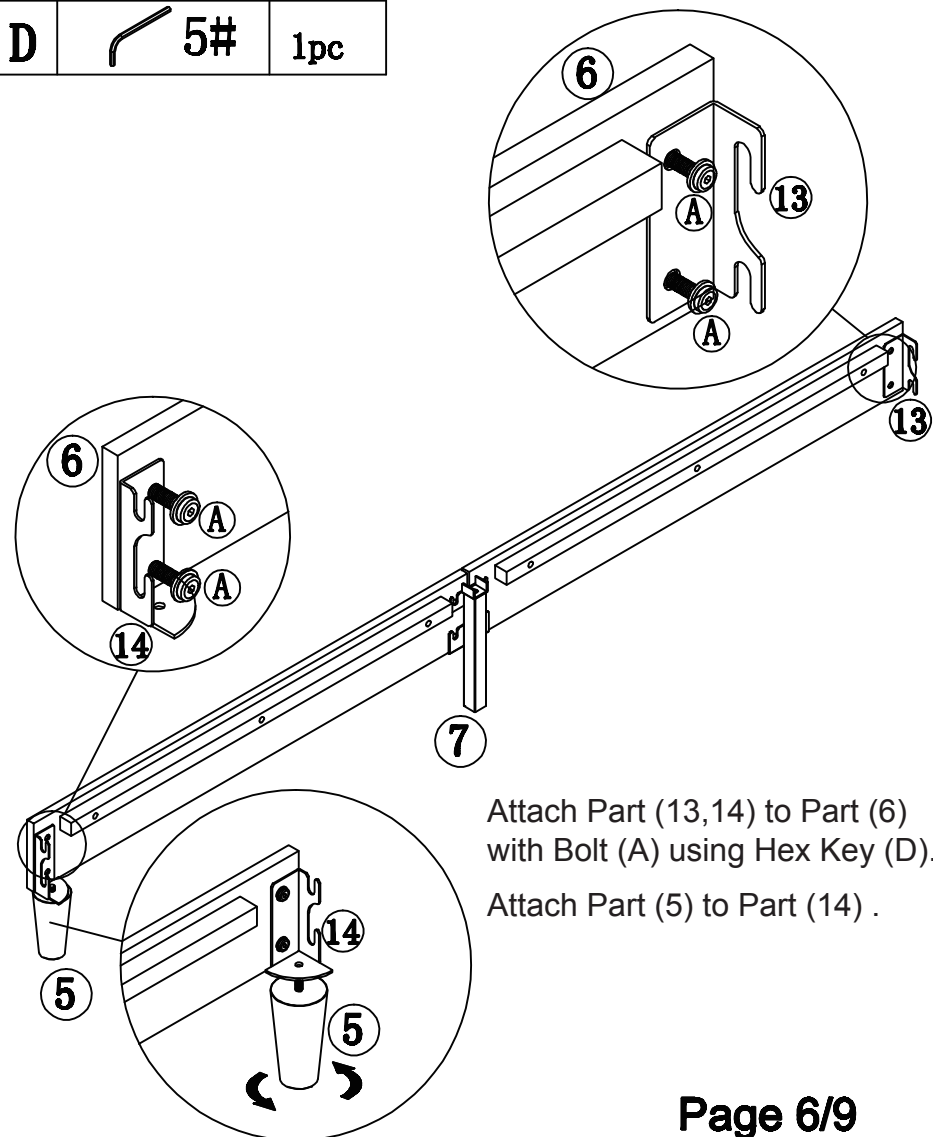


Attach Part (13,14) to Part (6)
with Bolt (A) using Hex Key (D).
Attach Part (5) to Part (14) .

Assembly Instruction

A		M8x15	8pcs
D		5#	1pc


Attach Part (12,13) to Part (2) with Bolt (A) using Hex Key (D).

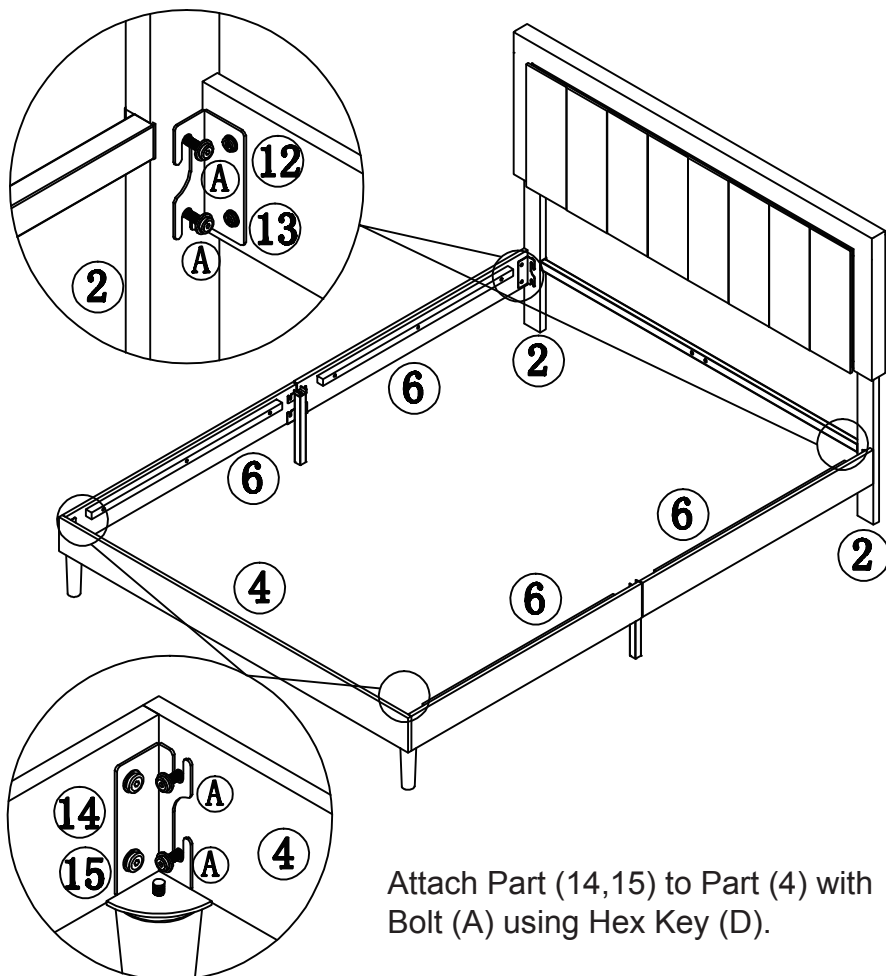

Attach Part (14,15) to Part (4) with Bolt (A) using Hex Key (D).

B		M8x35	2pcs
D		5#	1pc


Attach Part (8) to Part (7) with Bolt (B) using Hex Key (D).

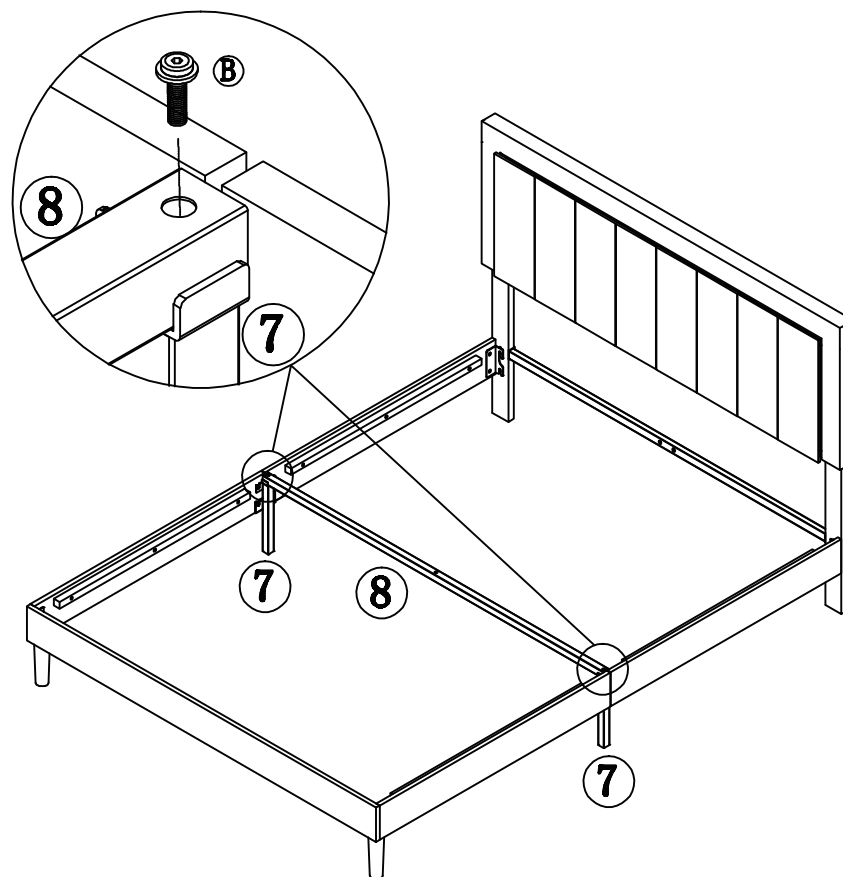

Assembly Instruction

C	 M8x45	1pcs
D	 5#	1pc


Attach Part (10) to Part (8) with Bolt (C) using Hex Key (D).

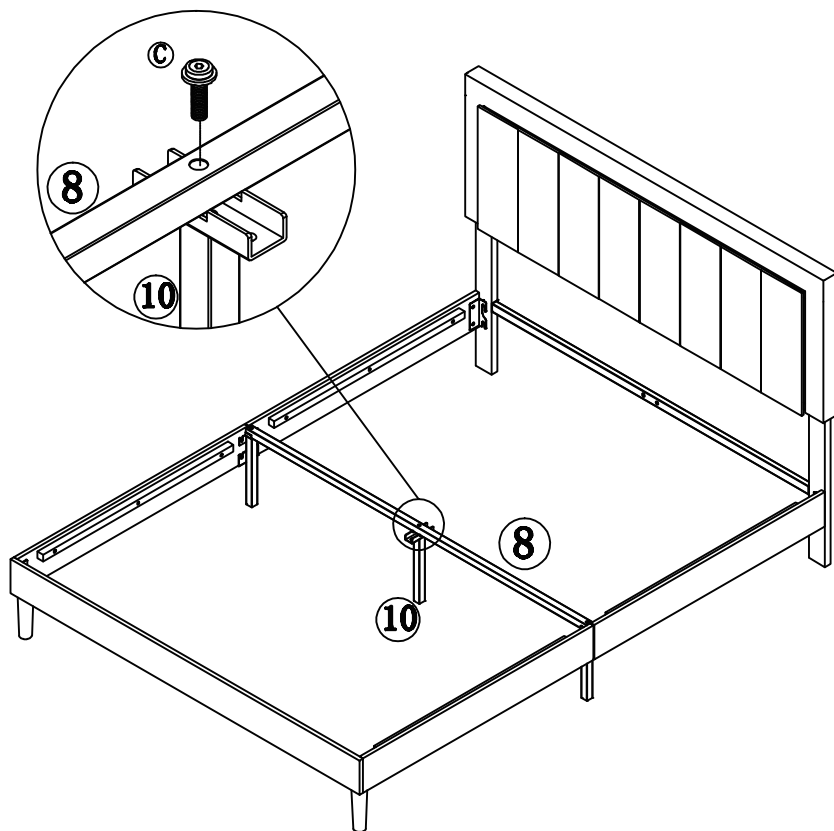

A	 M8x15	4pcs
B	 M8x35	2pcs
D	 5#	1pc


Attach Part (9) to Part (3,4) with Bolt (A) using Hex Key (D).

Attach Part (9) to Part (10) with Bolt (B) using Hex Key (D).

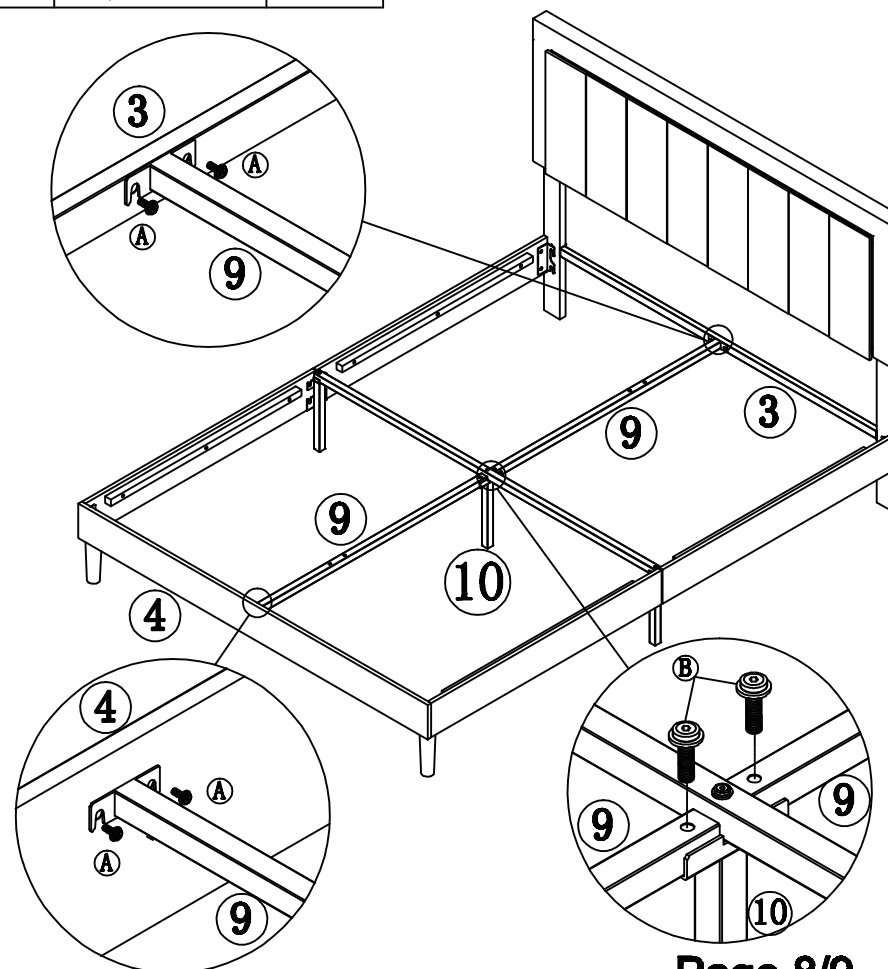

Assembly Instruction

B	 M8x35	4pcs
D	 5#	1pc

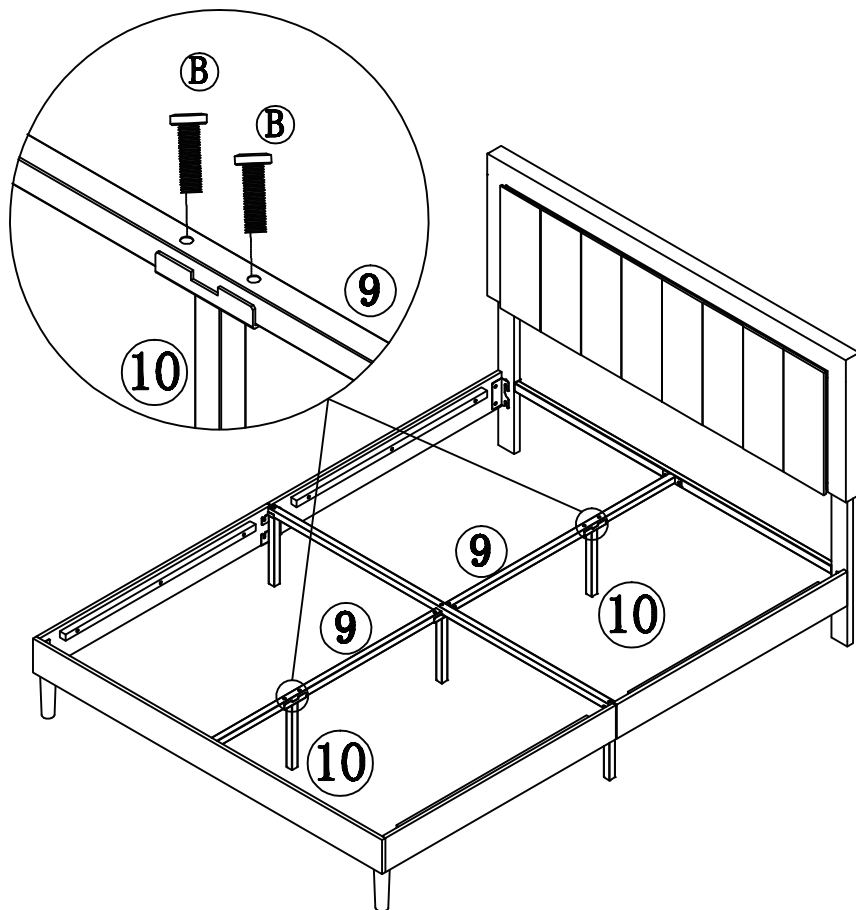

Attach Part (10) to Part (9) with Bolt (B) using Hex Key (D).

Put Part (11) to the bed frame as per diagram.

