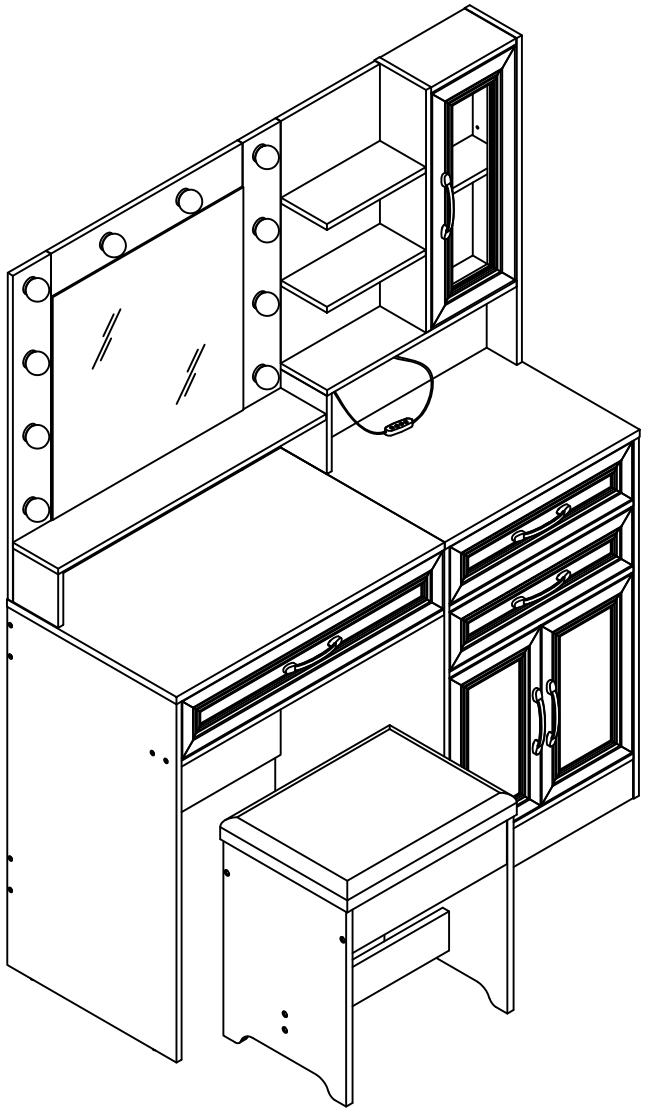



AMG005156-US

READ AND SAVE THIS INSTRUCTIONS FOR USE

ASSEMBLY&INSTRUCTION MANUAL

MADE IN CHINA

Before You Start

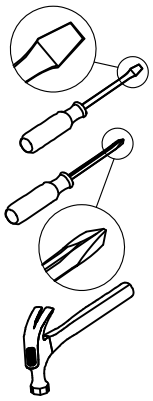

- Read through each step carefully and follow the proper order
- Separate and count all your parts and hardware
- Give yourself enough room for the assembly process
- Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- Caution: If using a power drill or power screwdriver for screwing, please pay attention to slow down and stop when screw is tight. Failure to do so may result in stripping the screw. （Assembly speed can be increased by using electric screwdriver）

Helpful Hints

PEOPLE NEEDED FOR ASSEMBLY:1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.



- Identify, sort and count the parts before attempting assembly.



- Compression dowels are lightly tapped in with a hammer.



- Slides are labeled with an R (right) and L (left) for proper placement.

- Make sure to always face the point on the top of the Cam Lock towards the outer edge.



- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.

-Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.




- Do NOT use harsh chemicals or abrasive cleaners on this item.




- Never push, pull, or drag your furniture.

Board Identification


Not actual size

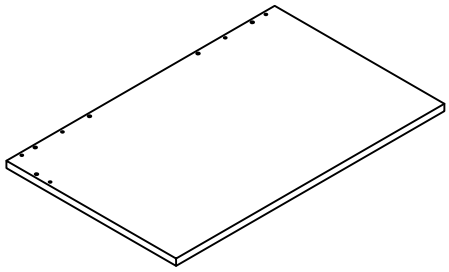


Ⓐ
TOP
Qty:1

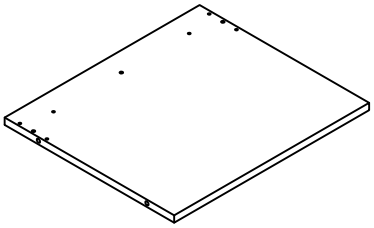


Ⓑ
TOP
Qty:1

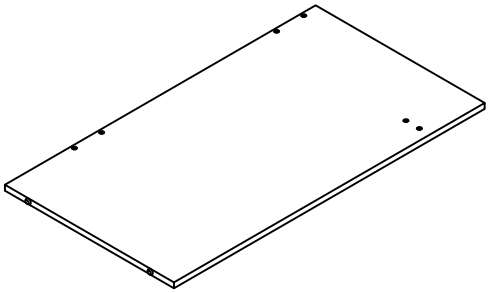


Ⓒ
LEFT SIDE PANEL
Qty:1

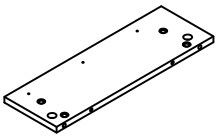


Ⓓ
LEFT FIXED SHELF
Qty:1

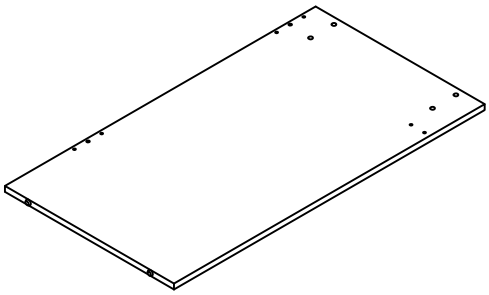


Ⓔ
MIDDLE SIDE PANEL
Qty:1

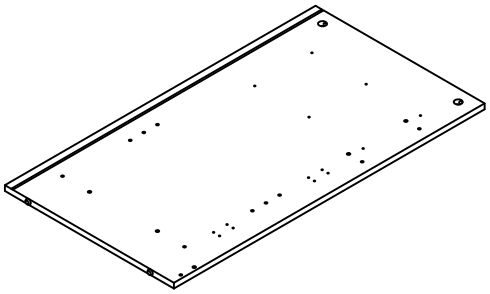


Ⓕ
RIGHT SIDE PANEL
Qty:1

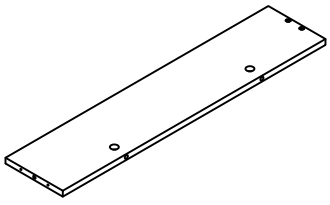

Ⓖ
BACK SLAT
Qty:1

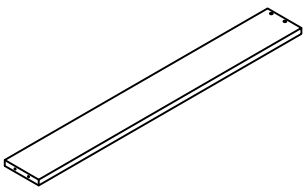


Ⓗ
LEFT FRONT SLAT
Qty:1

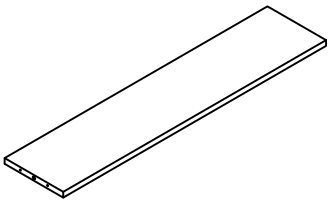

Ⓘ
LEFT LOWER SLAT
Qty:1


Board Identification

Not actual size

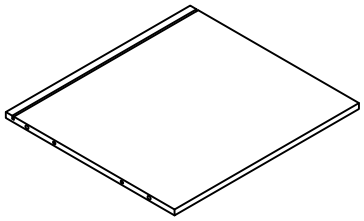


Ⓙ

RIGHT BOTTOM FIXED SHELF
Qty:1

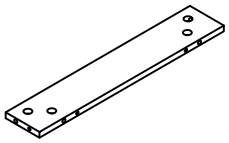


Ⓚ

LOWER FIXED SHELF
Qty:1

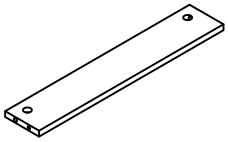


Ⓛ

RIGHT FRONT SLAT
Qty:1

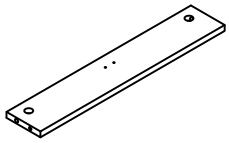


Ⓜ

RIGHT FRONT SLAT
Qty:1

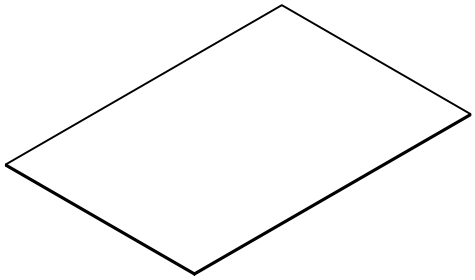


Ⓝ

DESK BACK PANEL
Qty:1

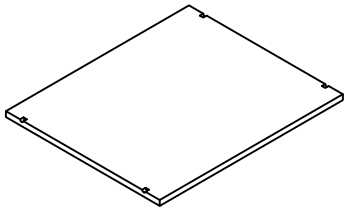


Ⓞ

ACTIVE LAMINATE
Qty:1

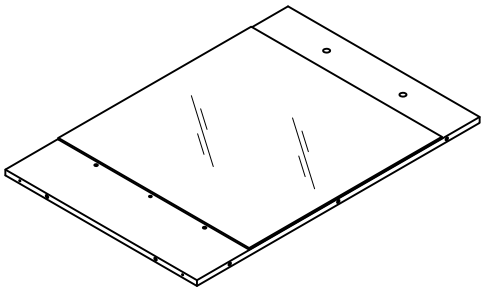


Ⓟ

MIRROR
Qty:1

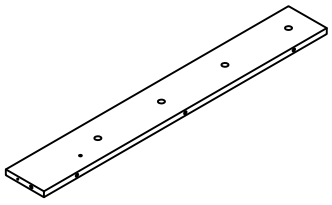

Ⓠ

LEFT FIXED SHELF
Qty:1

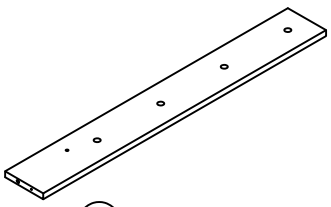


Ⓡ

RIGHT FIXED SHELF
Qty:1

Board Identification

Not actual size

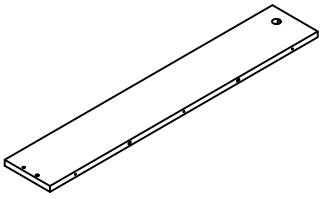


Ⓢ

FIXED SHELF
Qty:1




Ⓣ

FIXED SHELF
Qty:1

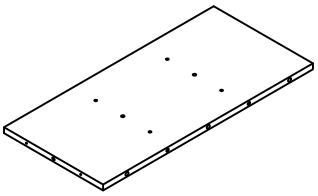


Ⓤ

BACK FIXED SHELF
Qty:1

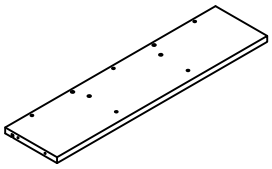


Ⓥ

UPPER MIDDLE SIDE PANEL
Qty:1




Ⓦ

FIXED SHELF
Qty:2




Ⓧ

FIXED SHELF
Qty:1

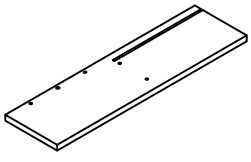


Ⓨ

FIXED SHELF
Qty:1

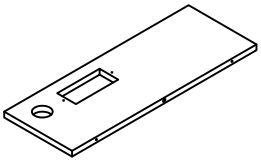

Ⓩ

FIXED SHELF
Qty:1




Ⓐⓐ

FIXED SHELF
Qty:1


Board Identification

Not actual size

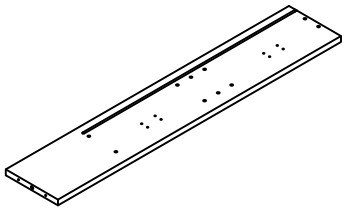


(BB)

UPPER RIGHT SIDE PANEL
Qty:1




(CC)

ACTIVE LAMINATE
Qty:1

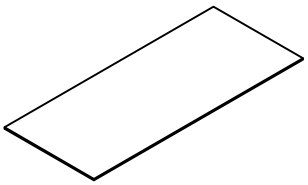


(DD)

DESK BACK PANEL
Qty:1

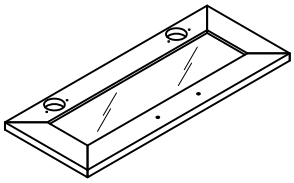


(EE)

DOOR
Qty:1

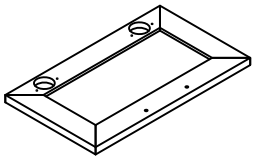


(FF)

DOOR
Qty:2

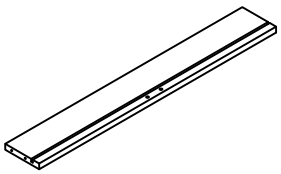


(GG)

DRAWER BACK PANEL
Qty:1

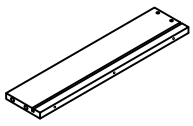


(HH)

DRAWER LEFT SIDE
Qty:3

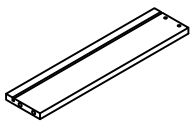

(II)

DRAWER RIGHT SIDE
Qty:3

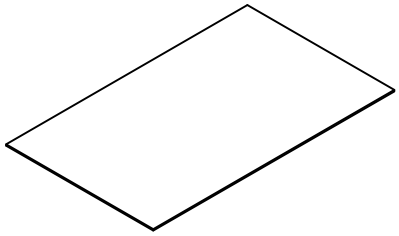


(JJ)

DRAWER BOTTOM
Qty:1


Board Identification

Not actual size




(KK)

DRAWER SLAT
Qty:1

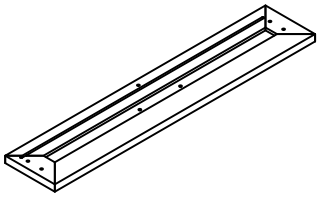


(LL)

LEFT DRAWER FRONT
Qty:1

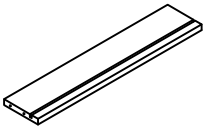


(MM)

DRAWER BACK PANEL
Qty:2

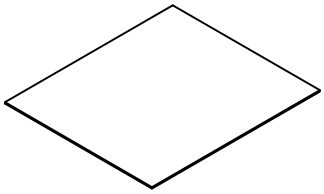


(NN)

DRAWER BOTTOM
Qty:2

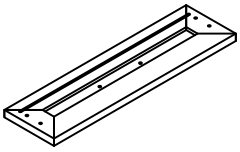


(OO)

RIGHT DRAWER FRONT
Qty:2

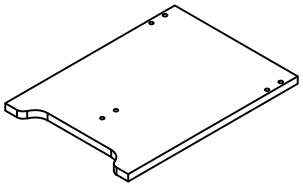


(PP)

STOOL SIDE PANEL
Qty:2

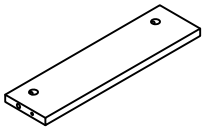


(QQ)

STOOL APRON
Qty:2

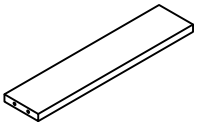

(RR)


STOOL LOWER SLAT
Qty:1

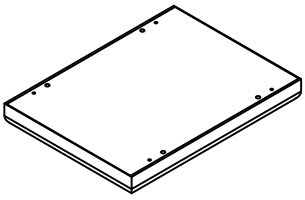


(SS)

SPONGE CUSHION
Qty:1


Part List

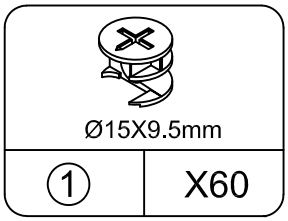


CAM LOCK
spare:3

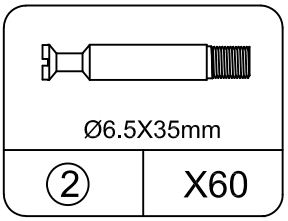


CAM BOLT
spare:3

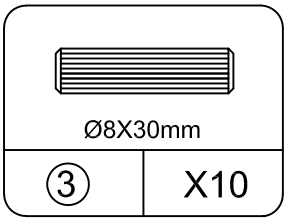


WOOD DOWEL
spare:1

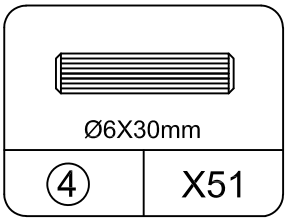


WOOD DOWEL
spare:3

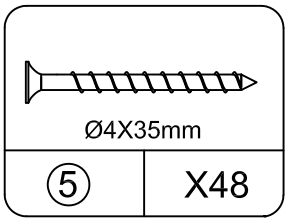


SCREW
spare:3

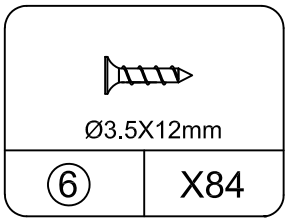


SCREW
spare:3

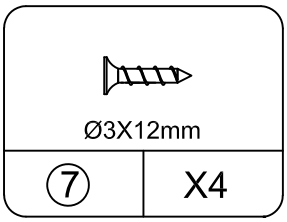


SCREW
spare:1

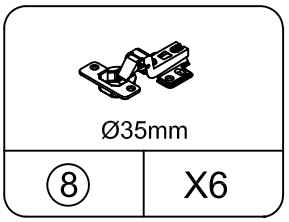


HINGE

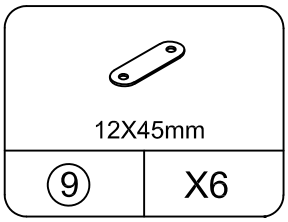


IRON SHEETS

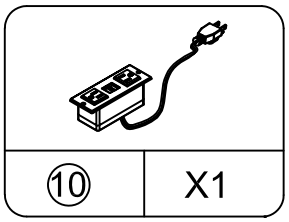


POWER STRIP

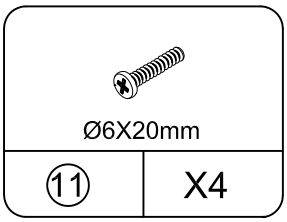


SCREW
spare:1

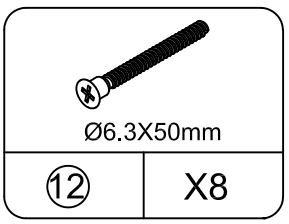


SCREW
spare:1

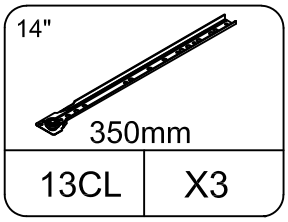


LEFT CABINET MEMBER

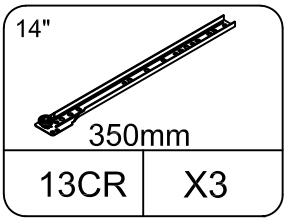


RIGHT CABINET MEMBER

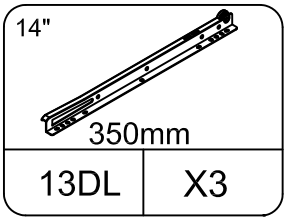


LEFT DRAWER RUNNER

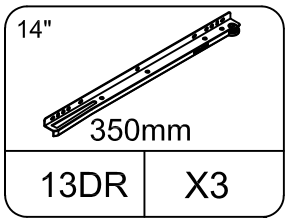


RIGHT DRAWER RUNNER

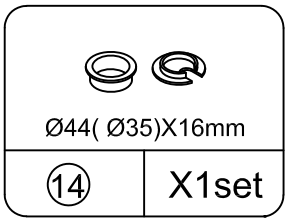


GROMMET

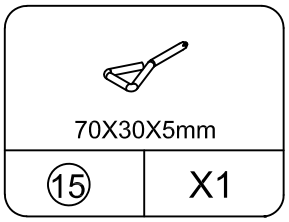

HEX KEY

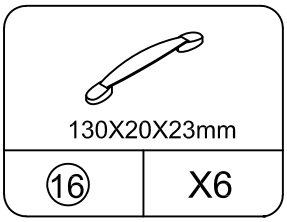


HANDLE

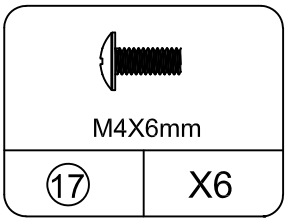


SCREW
spare:1


Part List

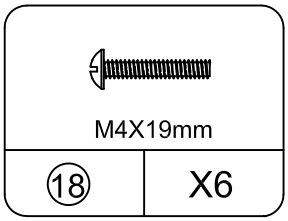


SCREW
spare:1

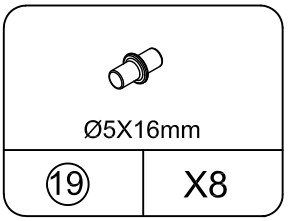


SHELF SUPPORT
spare:1

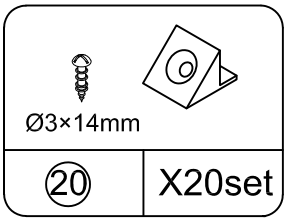


BACK PANEL BUCKLE
spare:2

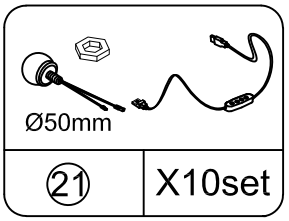


LIGHT BULB

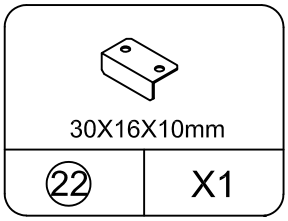

BAFFLE

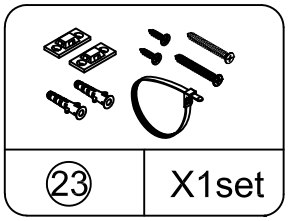


HIPPING RESTRAINT
HARDWARE KIT

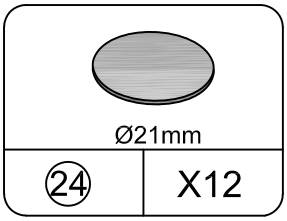

STICKERS FOR
SCREW HOLES
spare:1


Cam Lock Fastening System

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

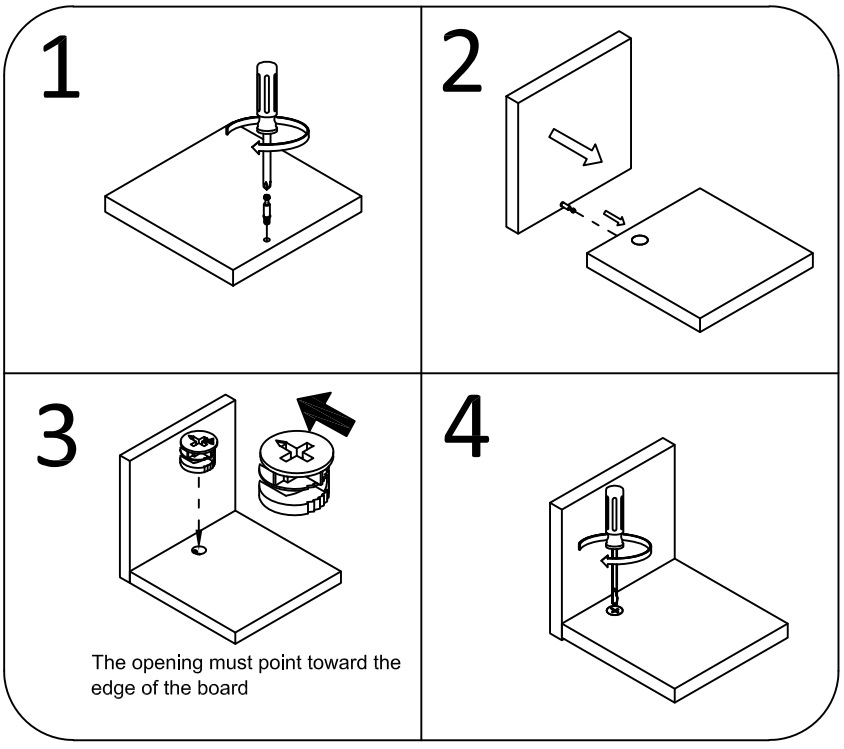



Board Identification


Not actual size

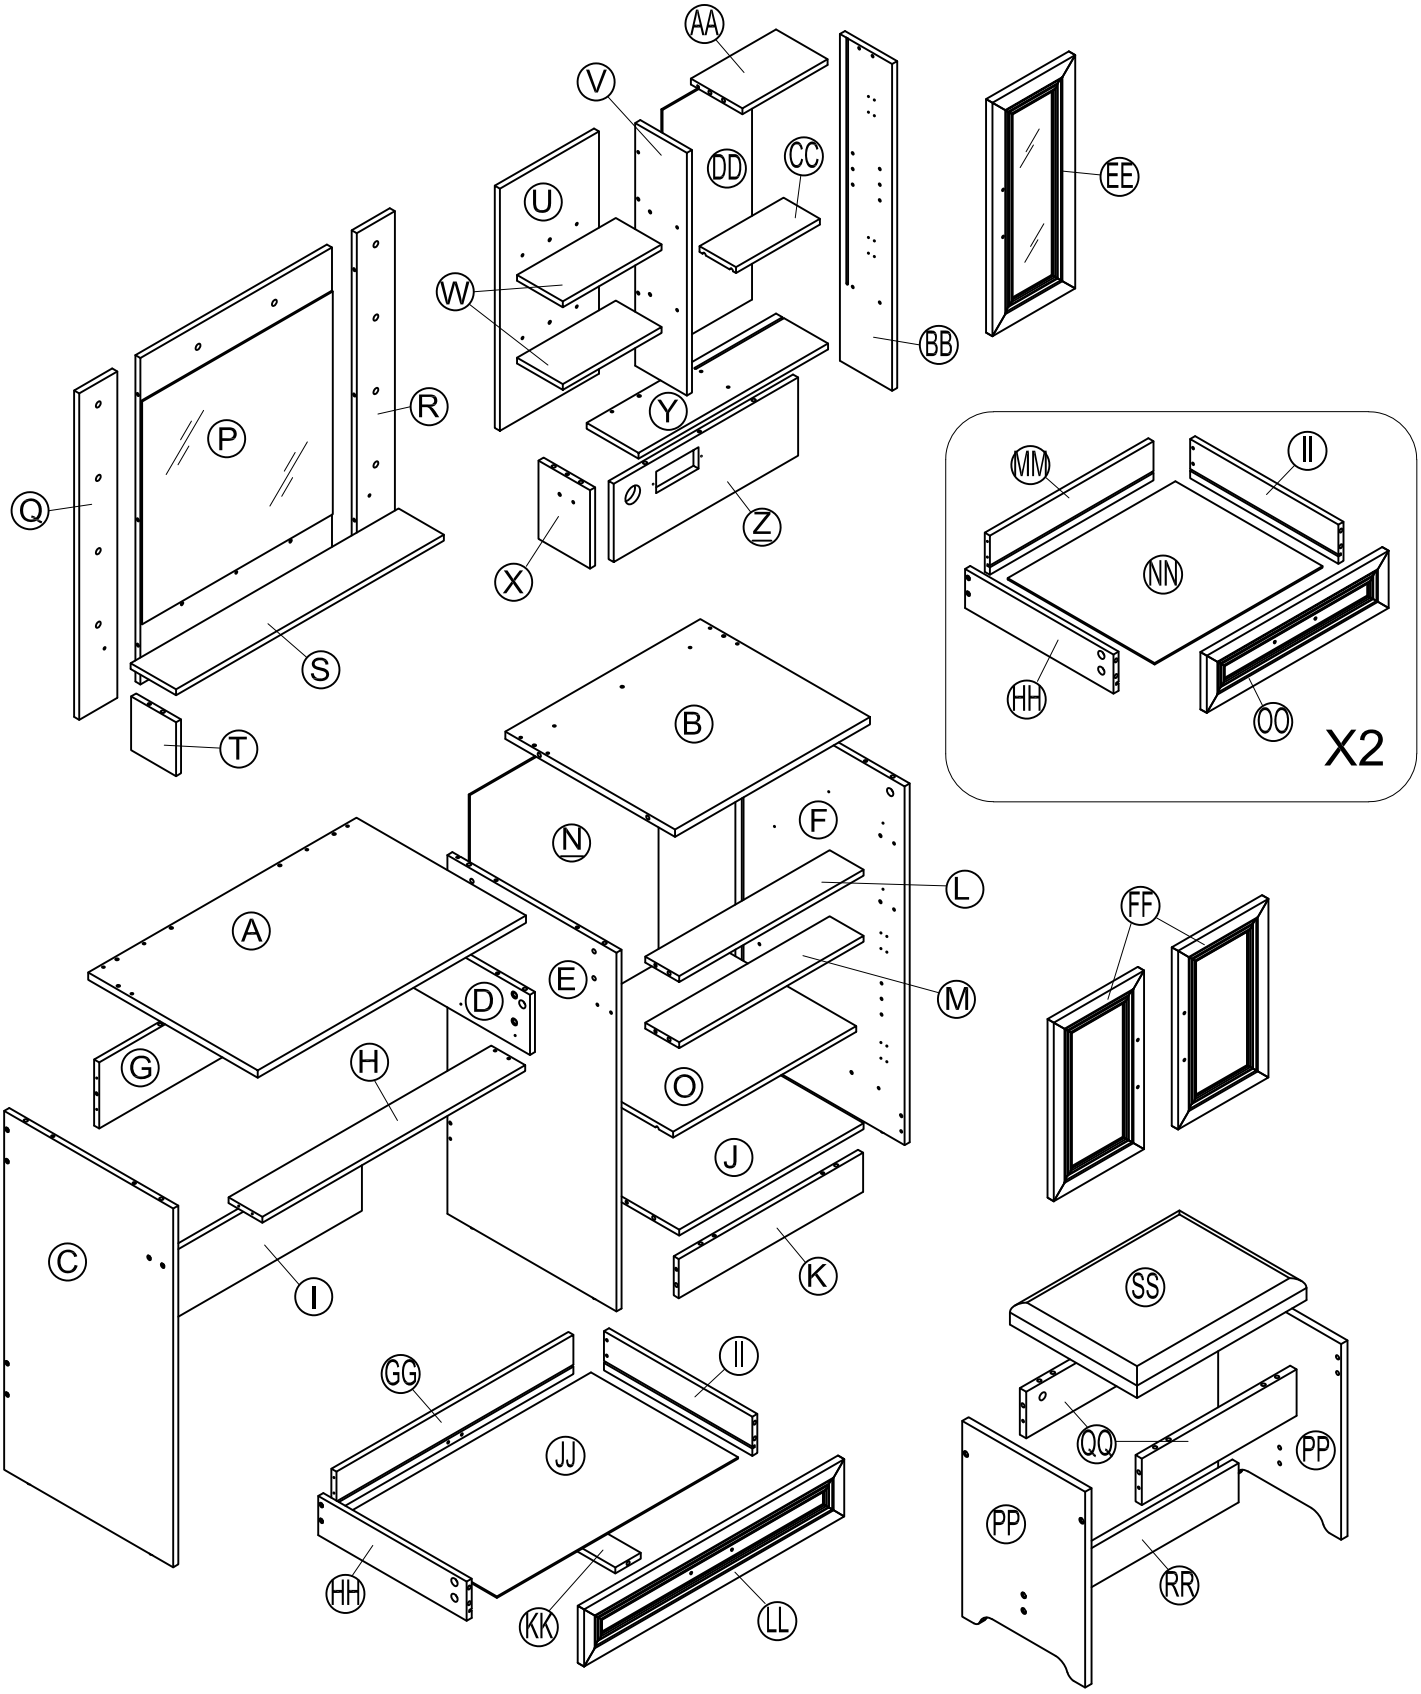



STEP1

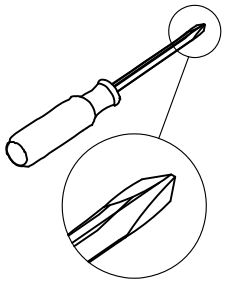


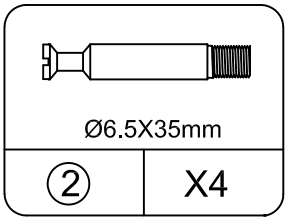

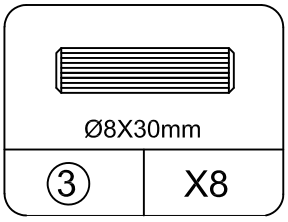

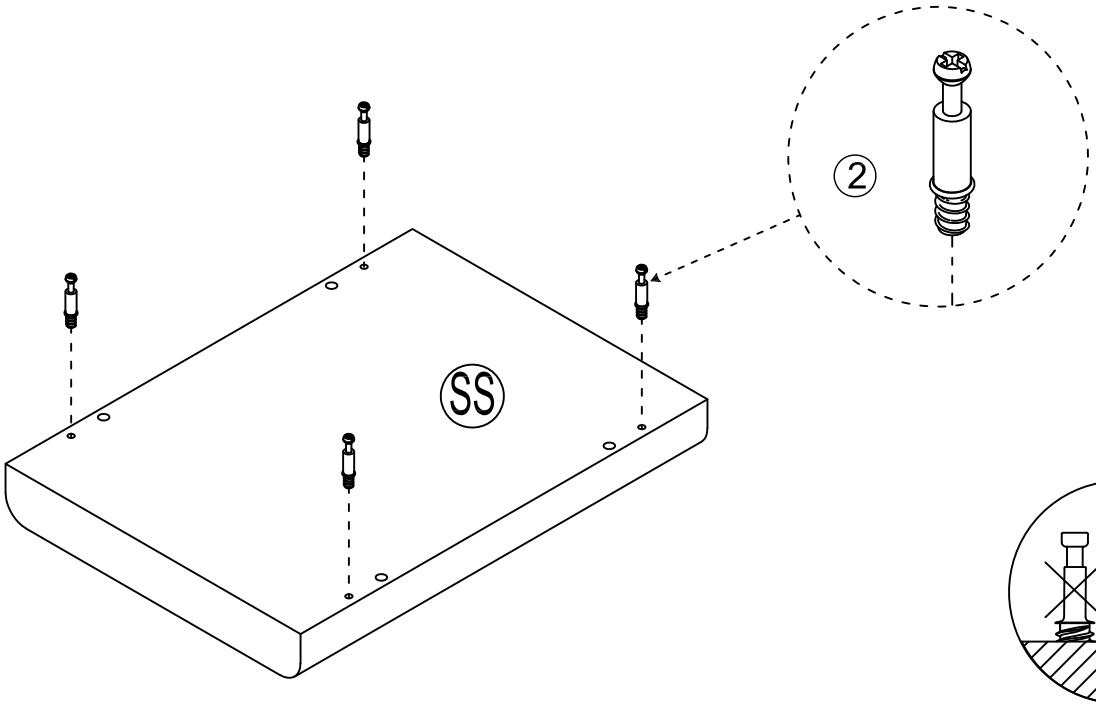


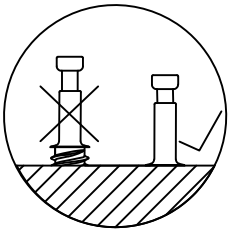


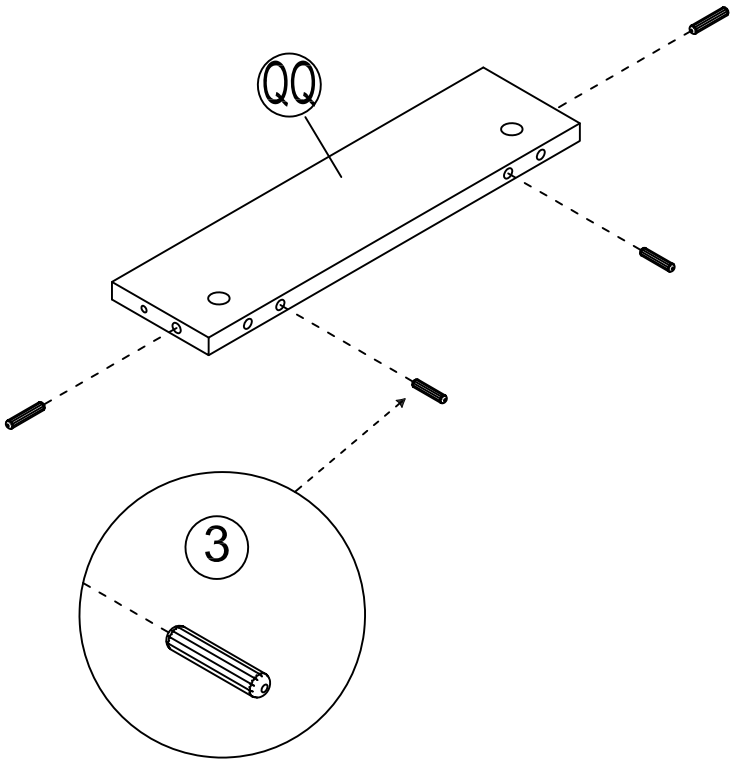


X2


STEP2

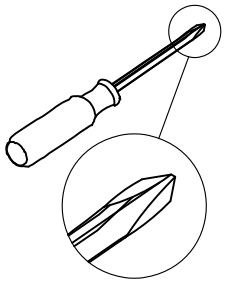


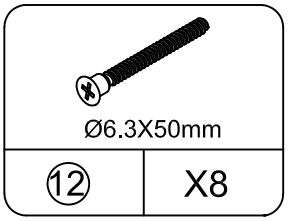


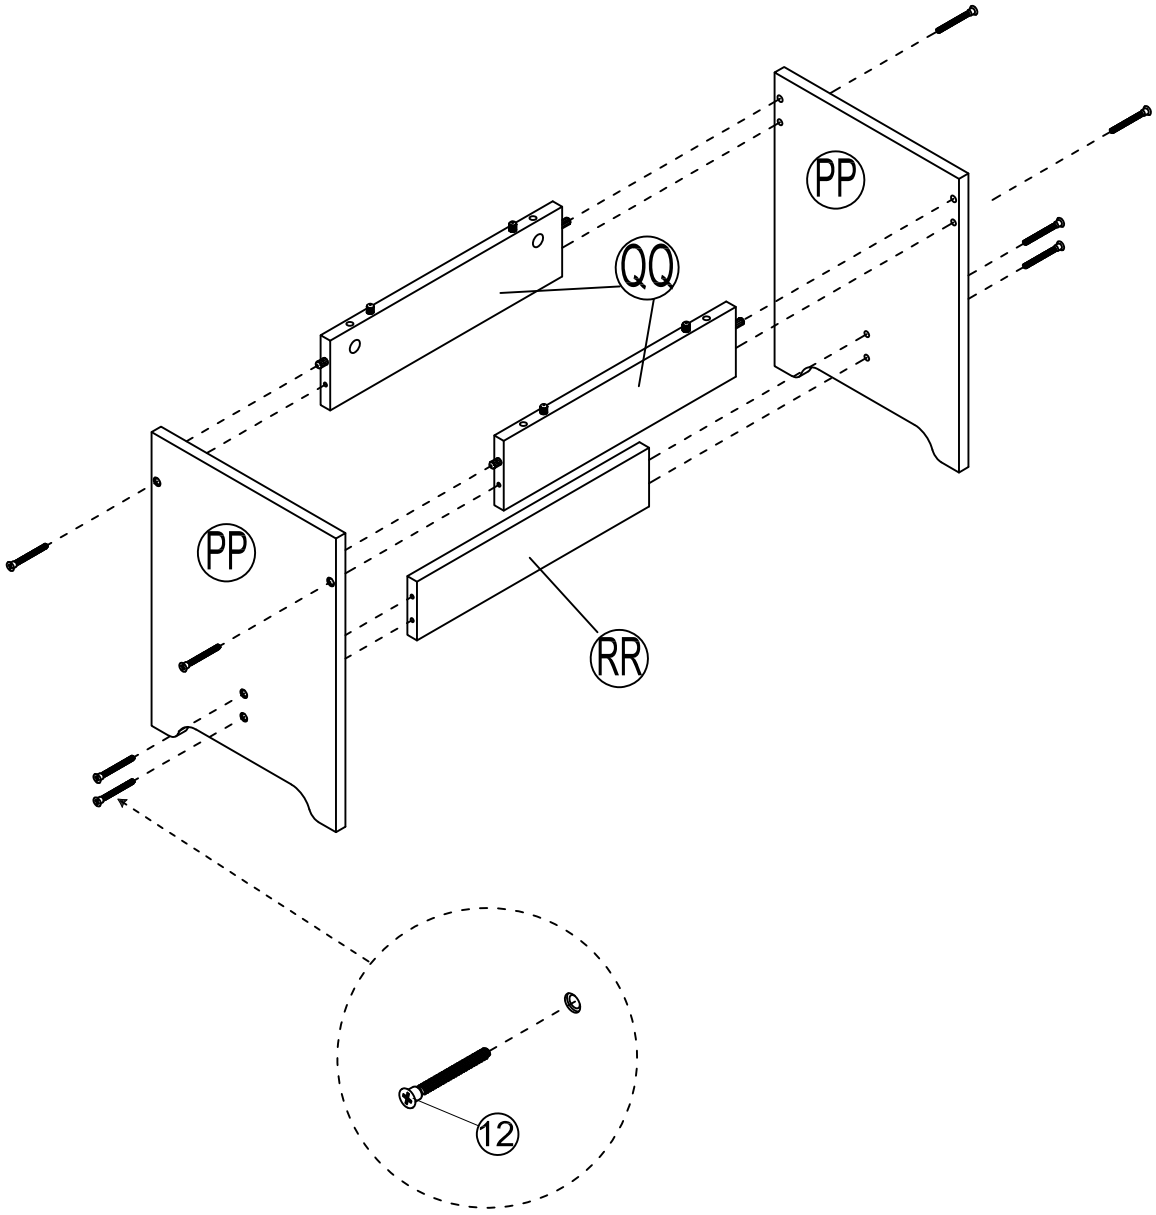


STEP3

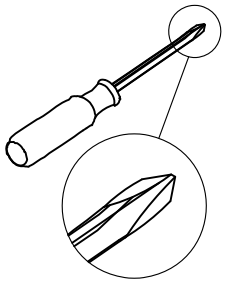

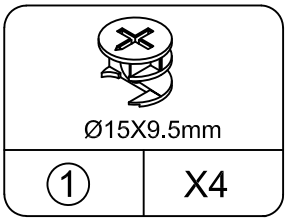


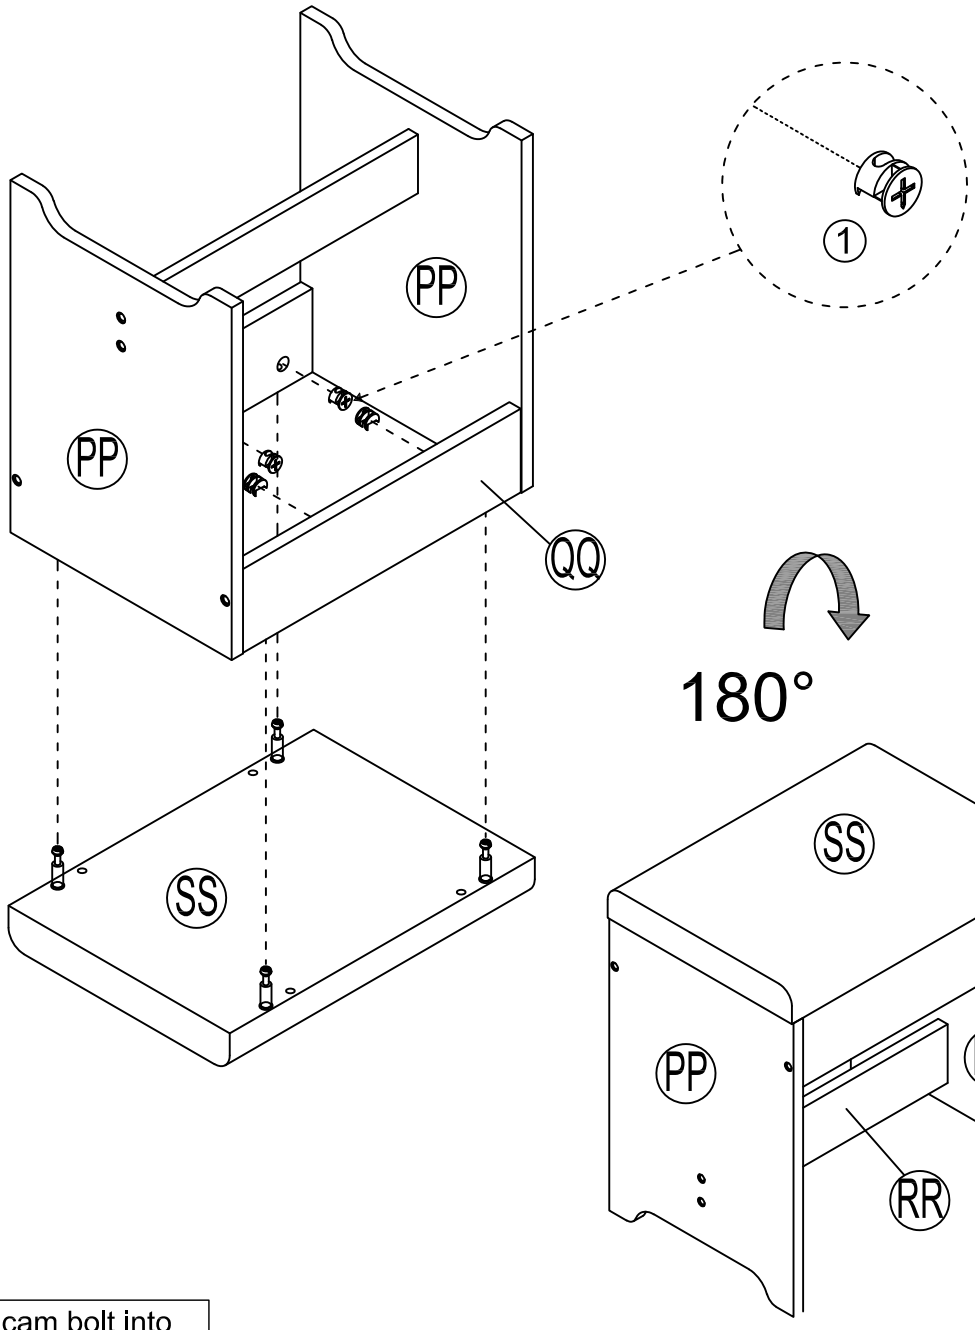


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

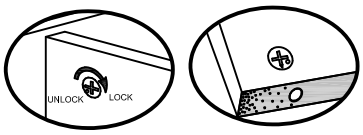

Proper orientation of CAM LOCK

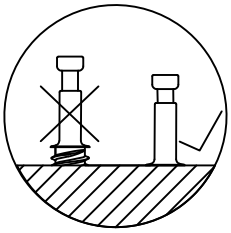

STEP4

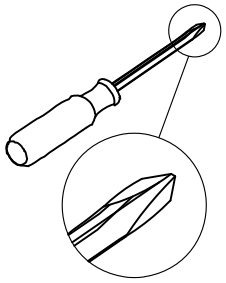


Ø15X9.5mm	
①	X5

Ø6.5X35mm	
②	X5


Ø4X35mm	
⑤	X6

130X20X23mm	
⑯	X1

M4X6mm	
⑰	X2

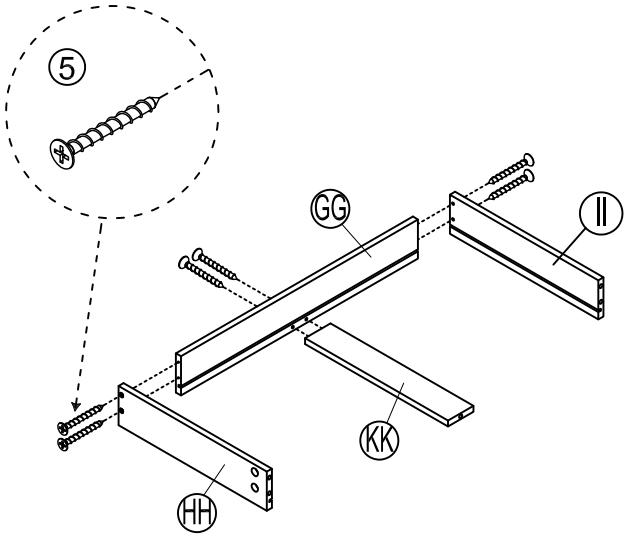


Step 1

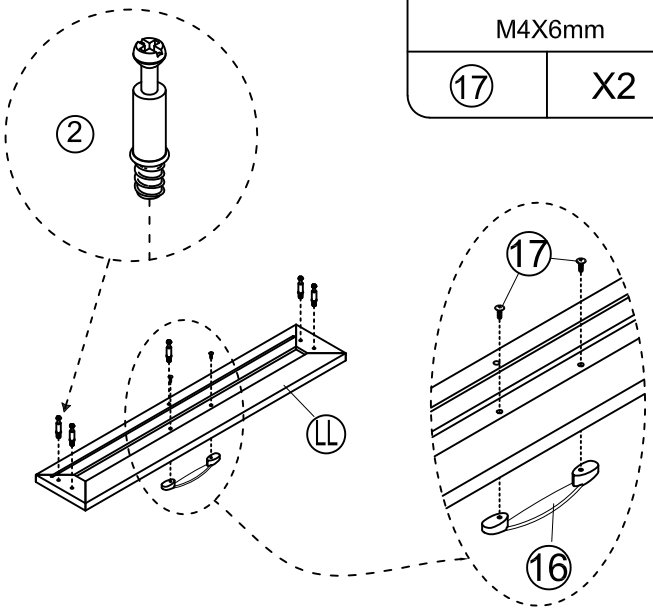


Step 3


Step 2

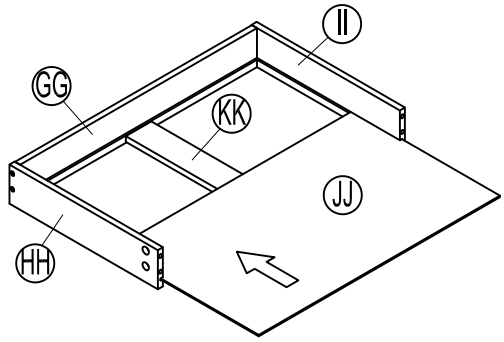

Step 4

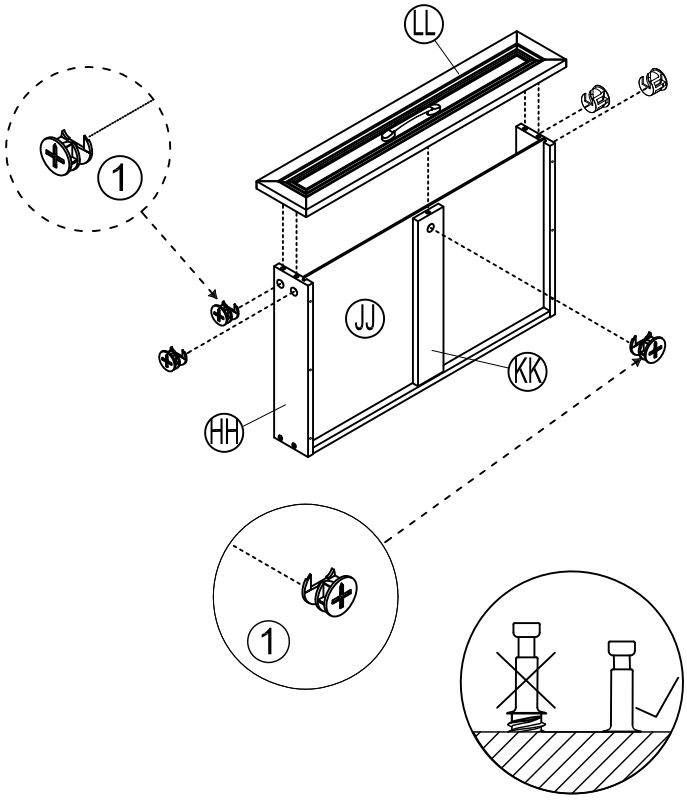


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

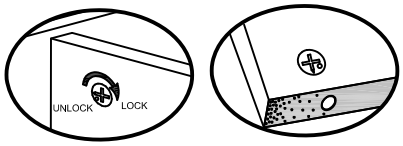

Proper orientation of CAM LOCK


STEP5

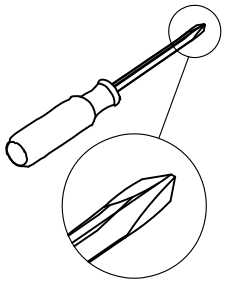


Ø3.5X12mm	
⑥	X6

14" 350mm	
13DL	X1

14" 350mm	
13DR	X1

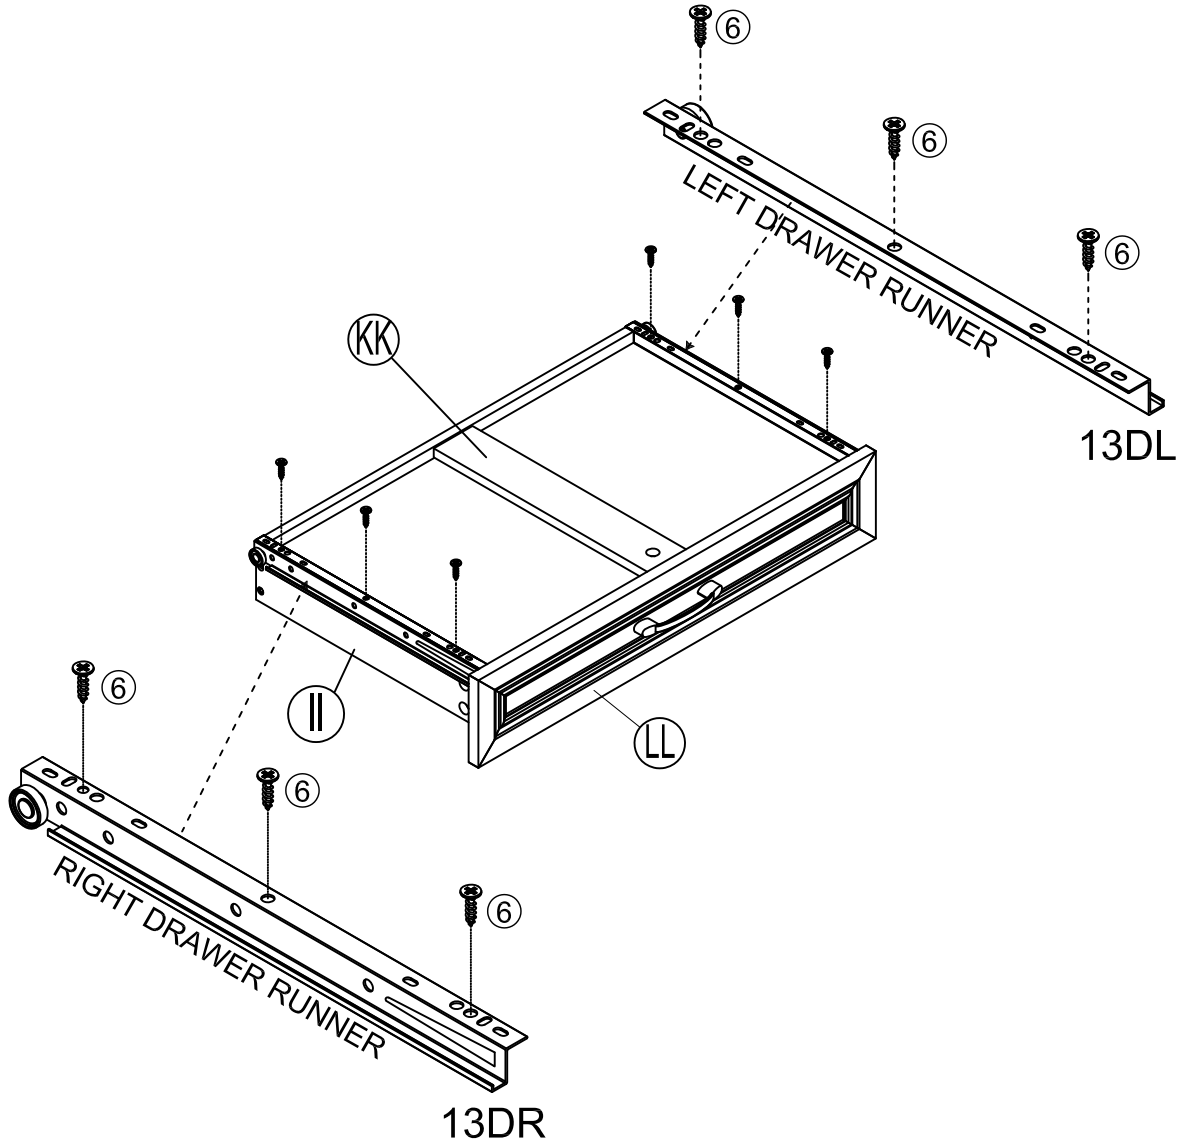

STEP6

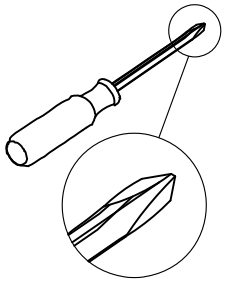


Ø15X9.5mm	
①	X8

Ø6.5X35mm	
②	X8


Ø4X35mm	
⑤	X8

130X20X23mm	
⑯	X2

M4X6mm	
⑰	X4

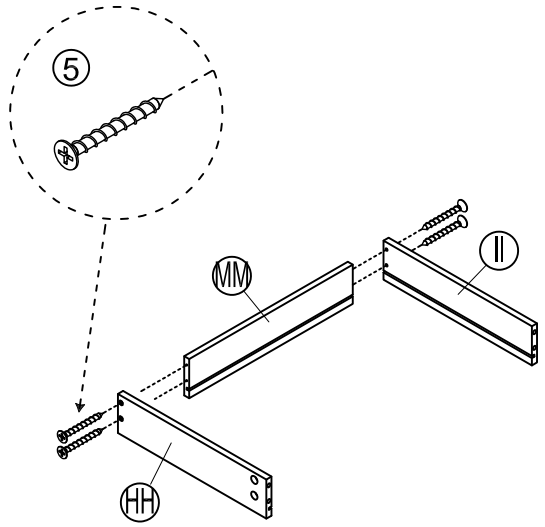


Step 1

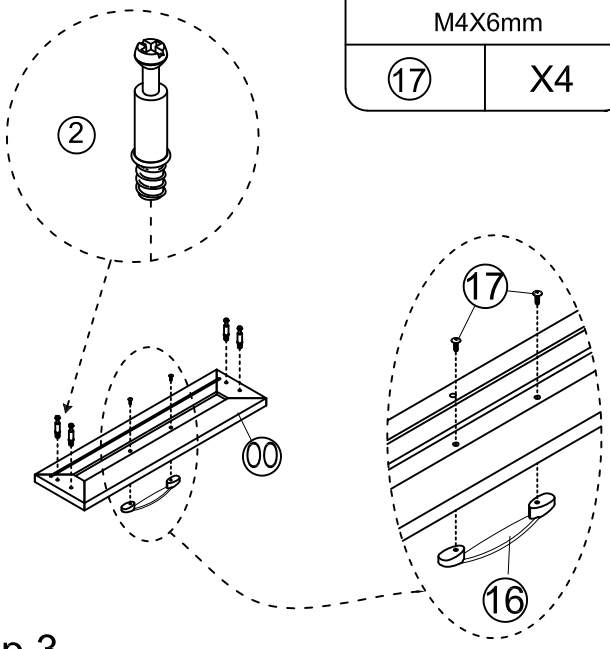


Step 3


Step 2

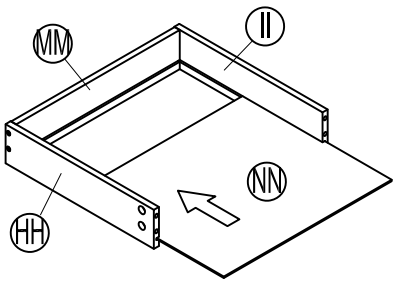

Step 4

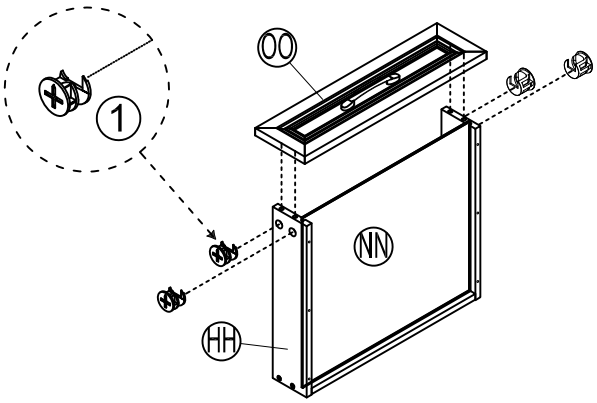


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

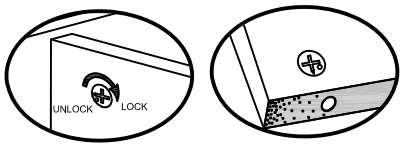


Proper orientation of CAM LOCK


X2

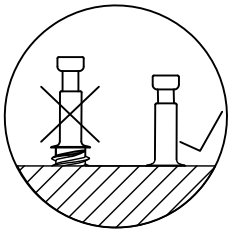


STEP7

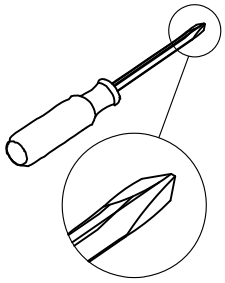


Ø3.5X12mm	
⑥	X12

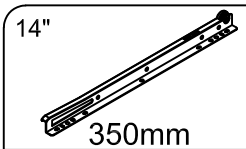

13DL	X2

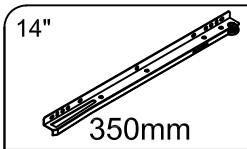


13DR	X2

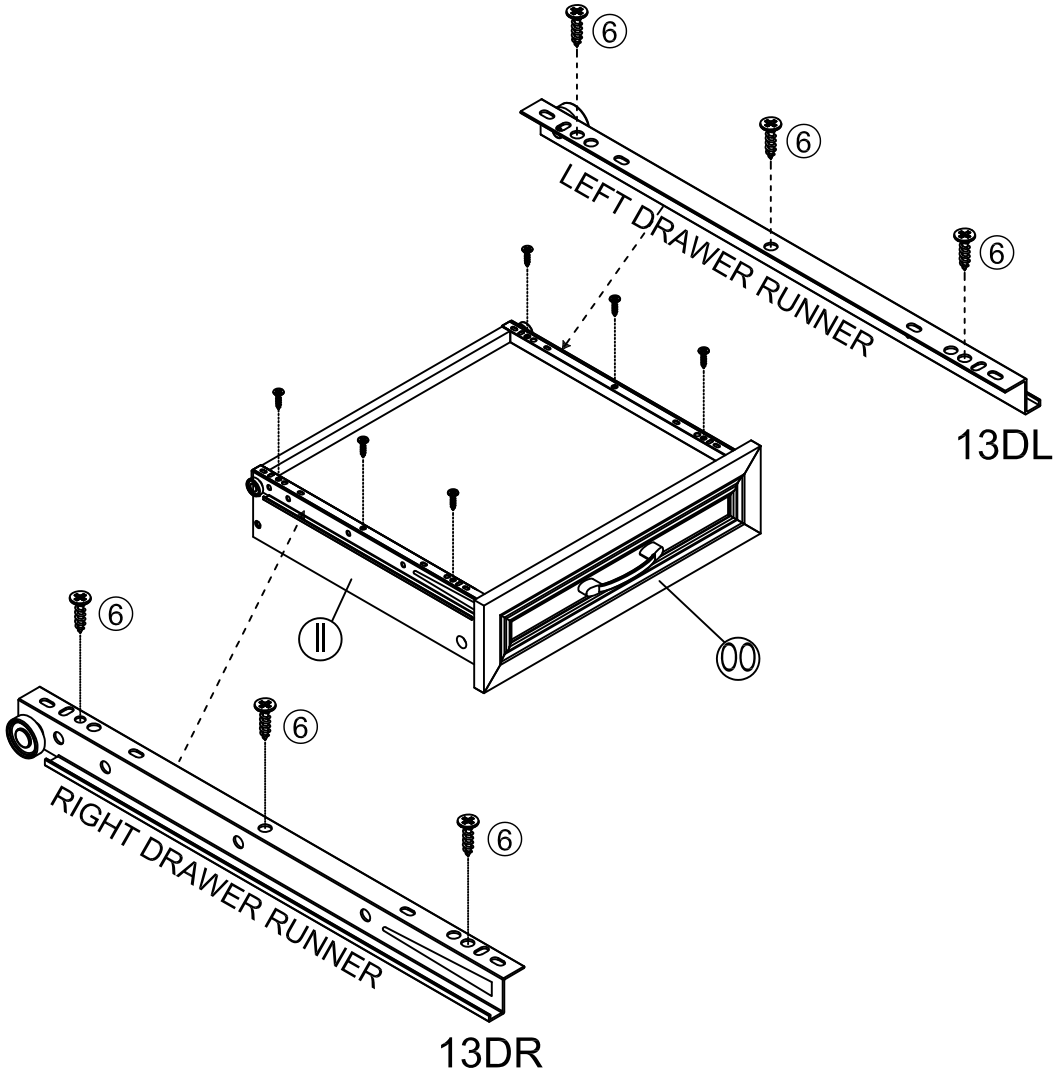

X2


STEP8

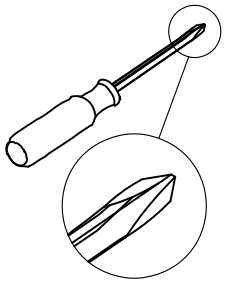


Ø3.5X12mm	
⑥	X6


14" 350mm	
13CL	X1


14" 350mm	
13CR	X1

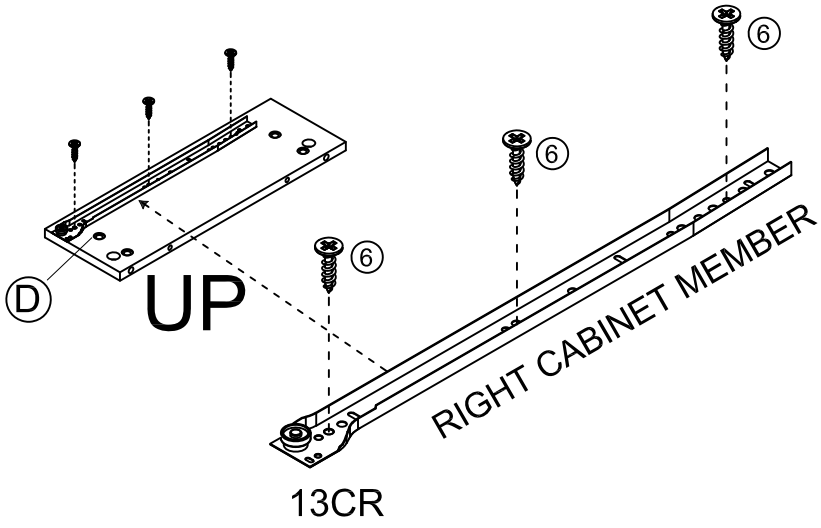


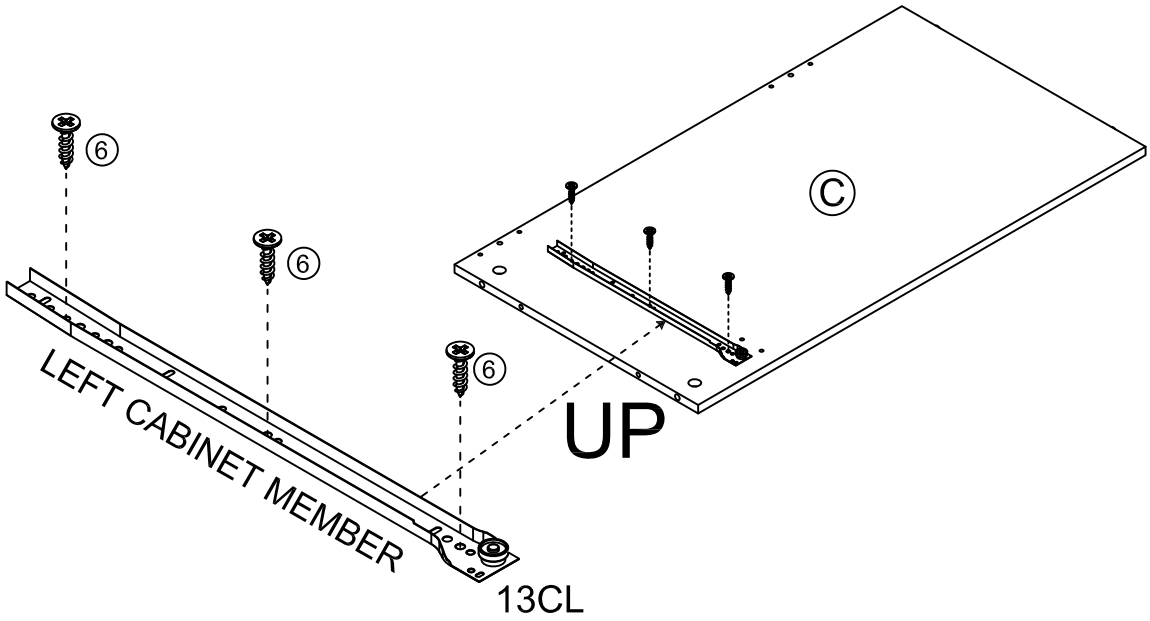


STEP9

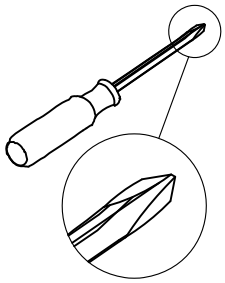


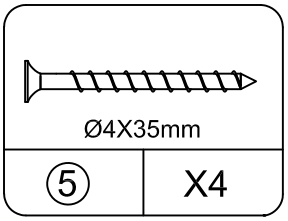


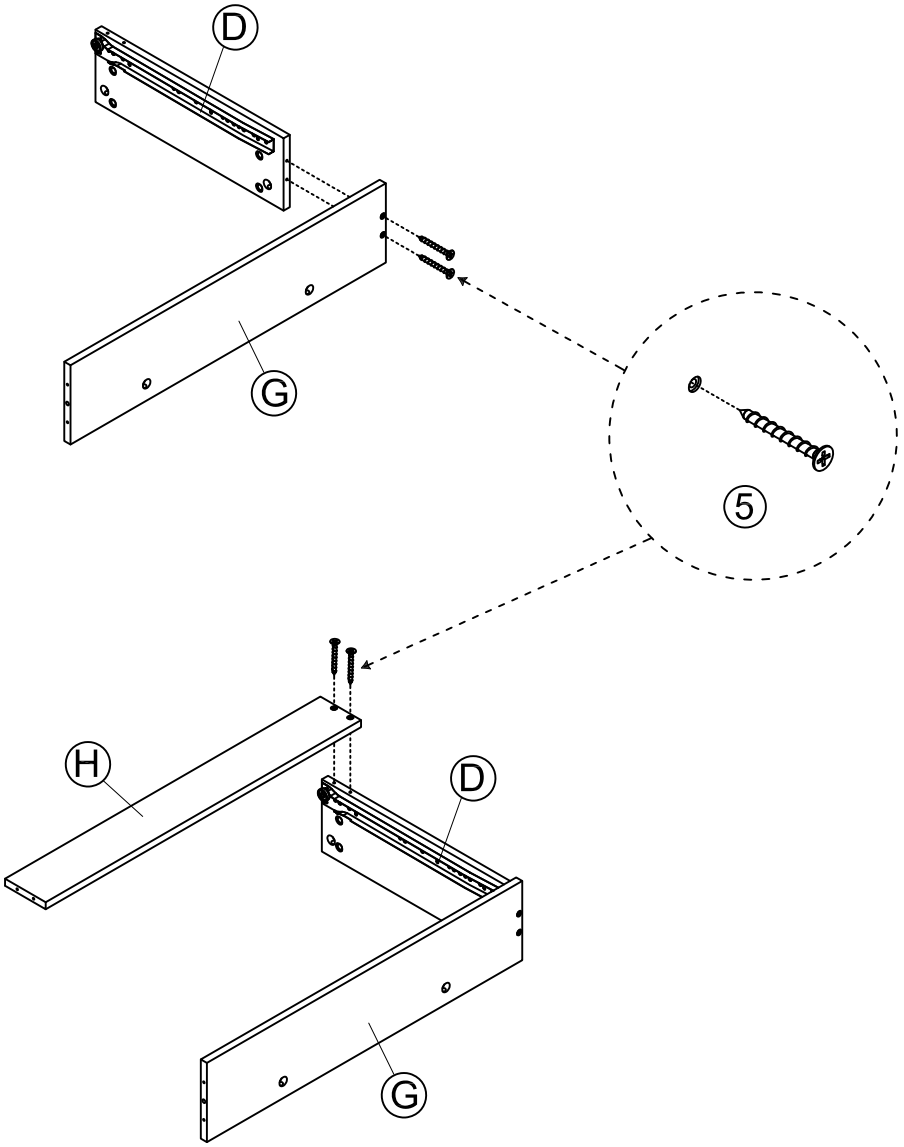


STEP10

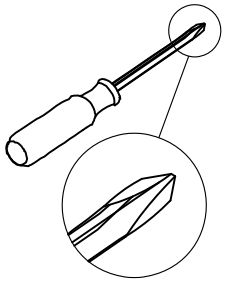

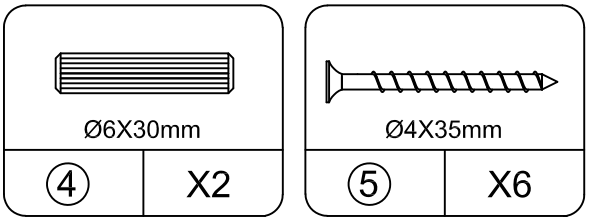

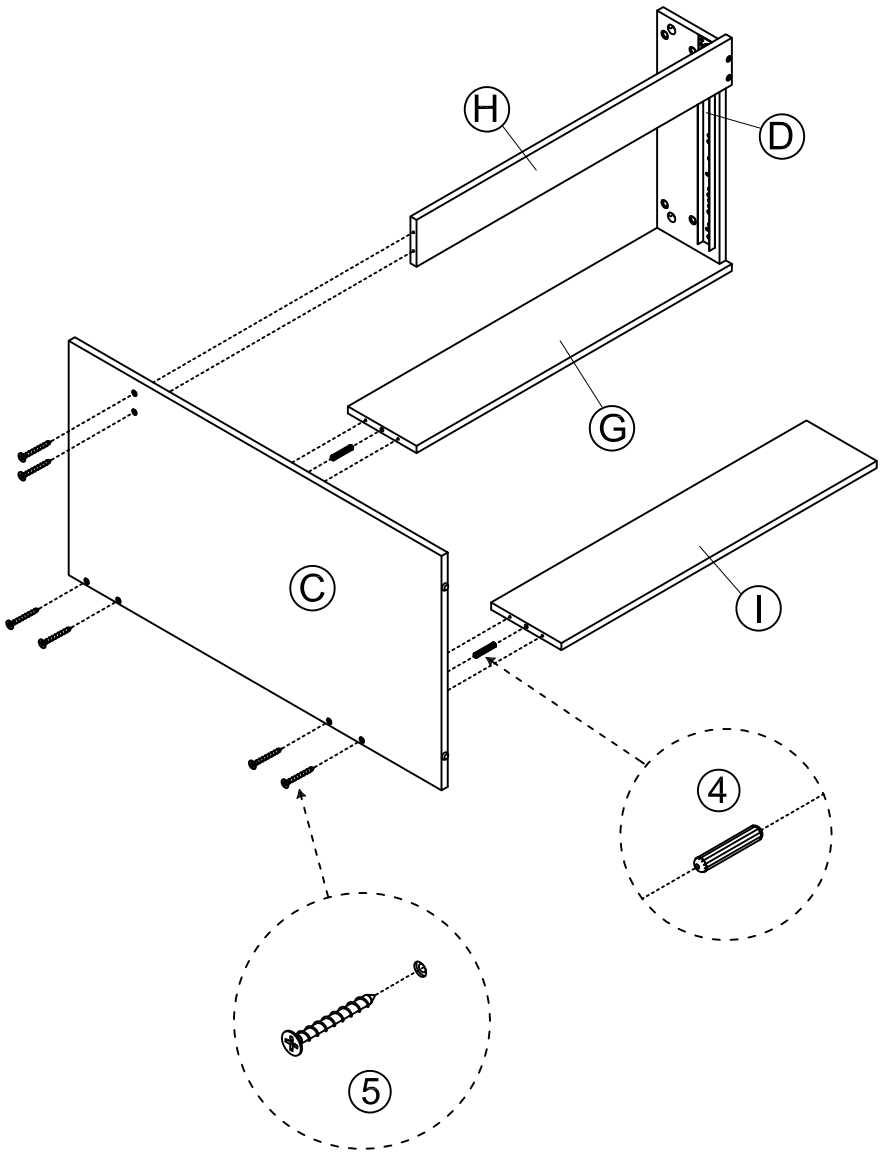

STEP11

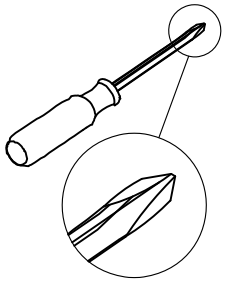



Ø6.5X35mm	
②	X10

Ø3.5X12mm	
⑥	X12


14" 350mm	
13CL	X2


14" 350mm	
13CR	X2

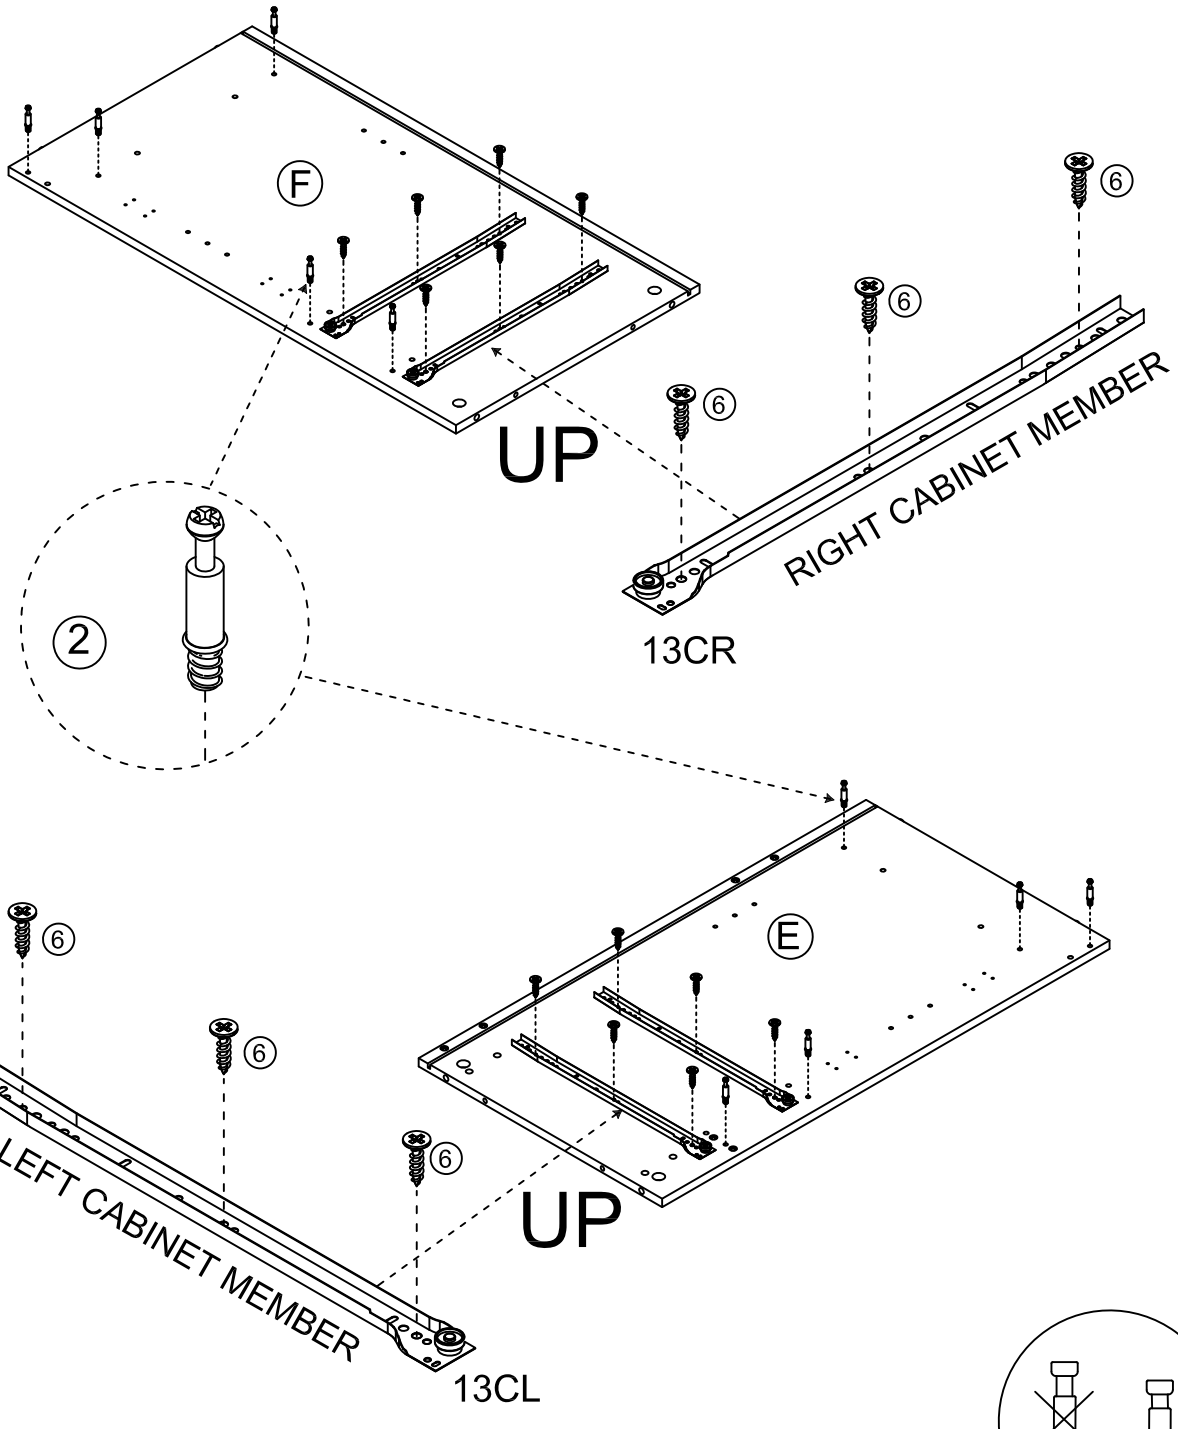

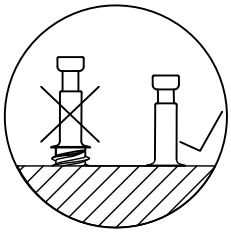


STEP12

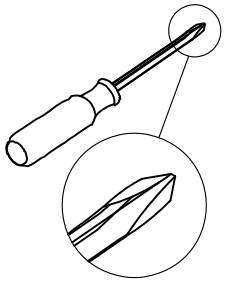


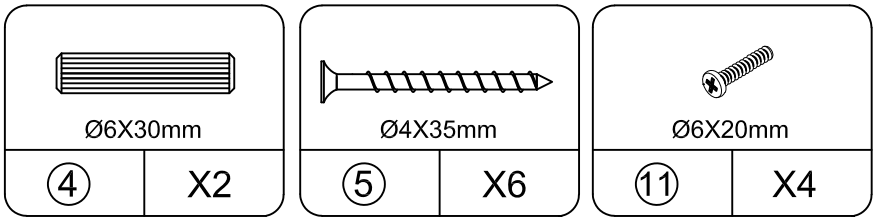

First Install NO. 4 and NO. 5, finally install NO.11.

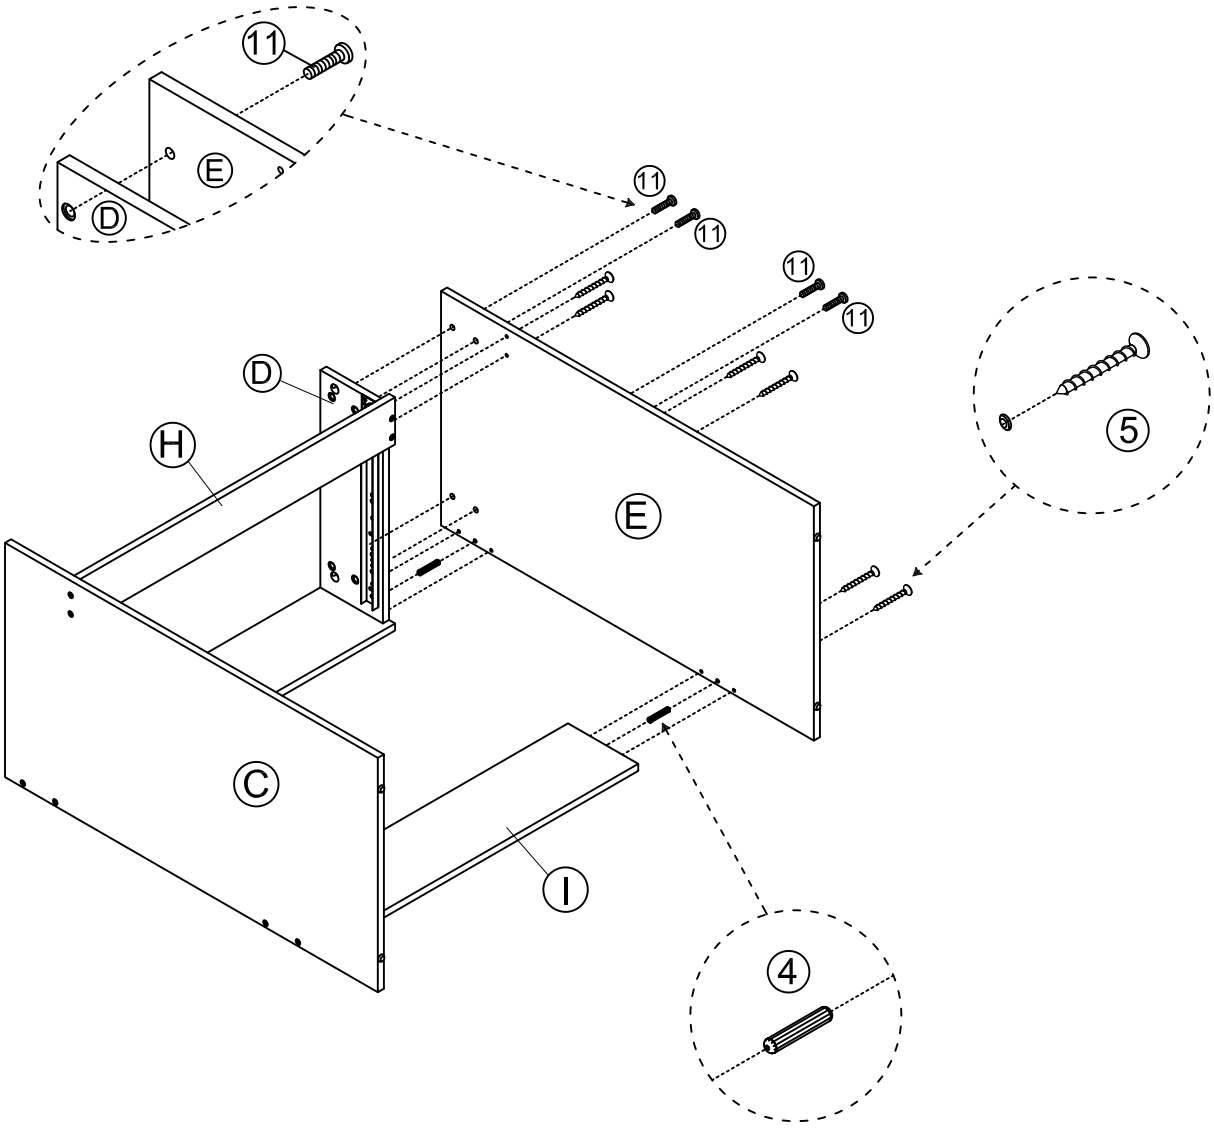



STEP13

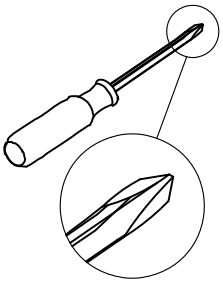


Ø15X9.5mm	Ø6.5X35mm	Ø6X30mm	Ø3X12mm
① X2	② X2	④ X2	⑦ X2


30X16X10mm
㉒ X1

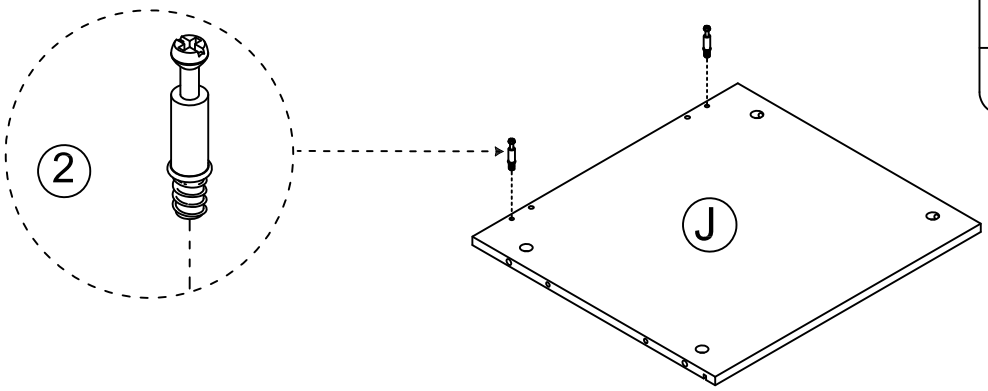

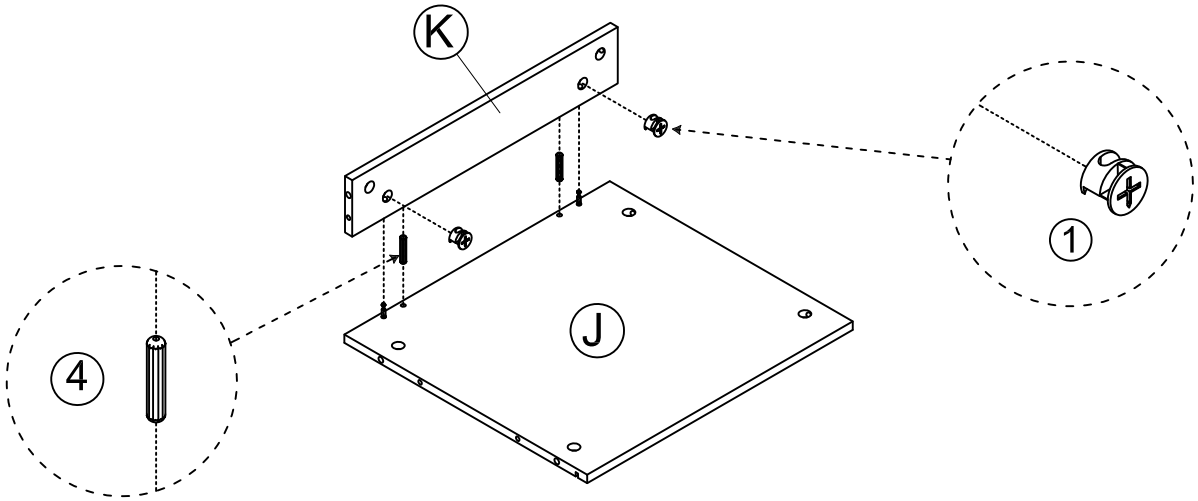


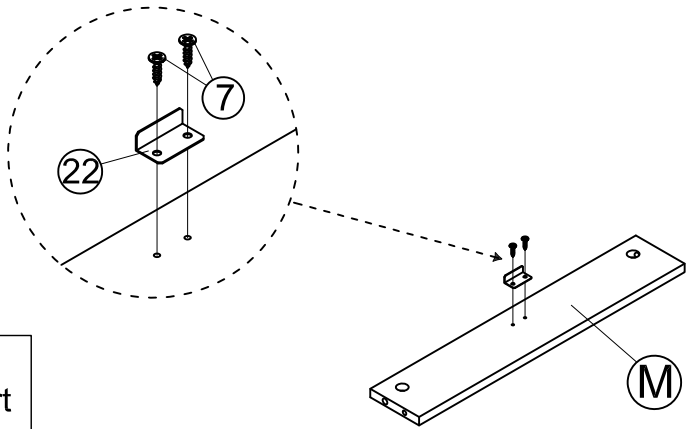


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

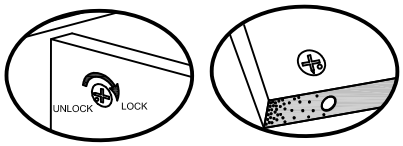



Proper orientation of CAM LOCK

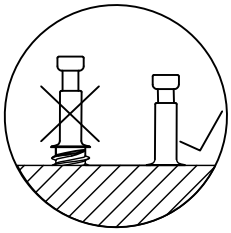


STEP14

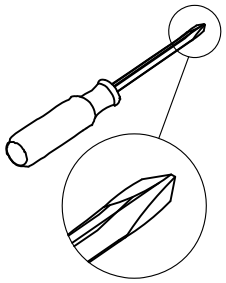


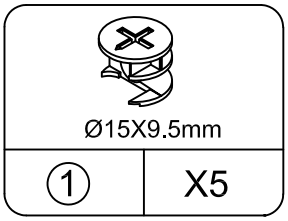

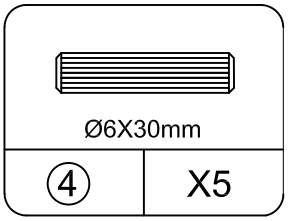

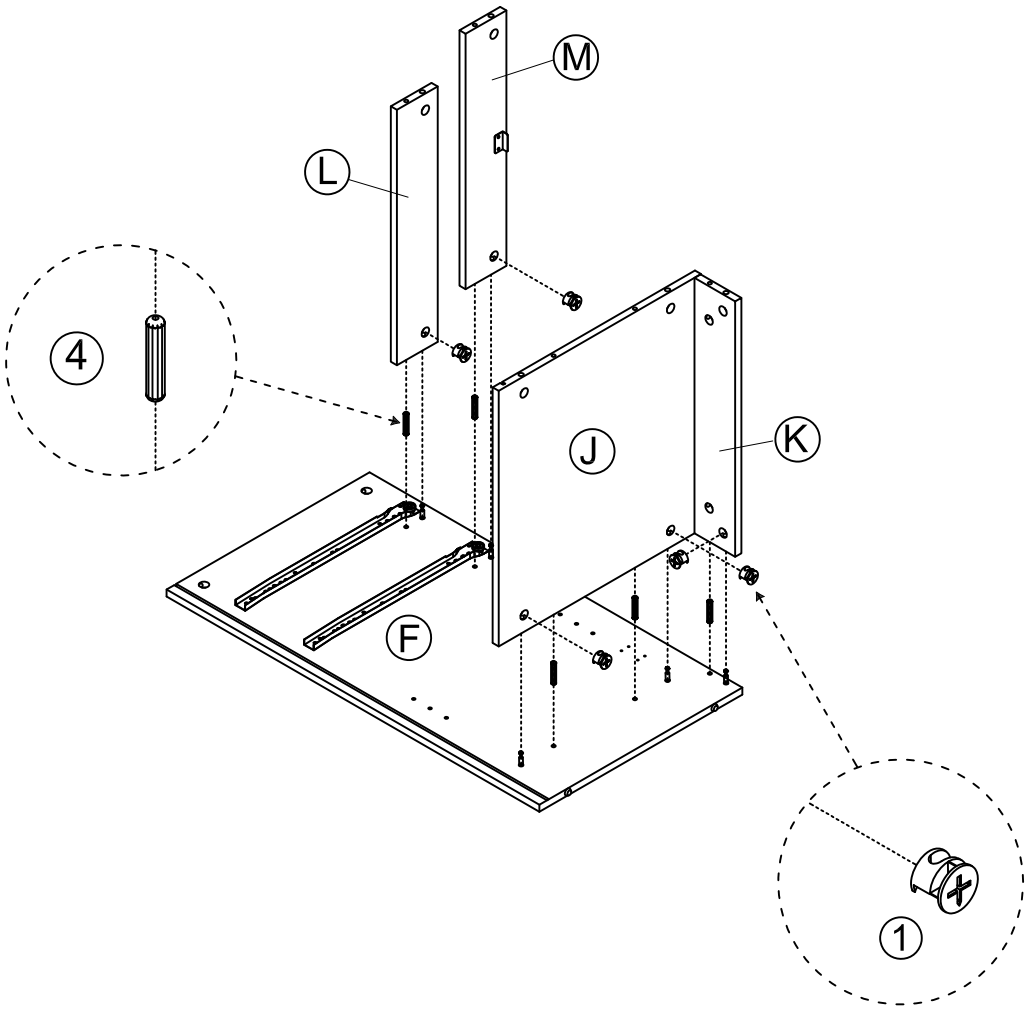


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

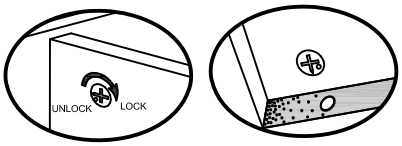

Proper orientation of CAM LOCK


STEP15

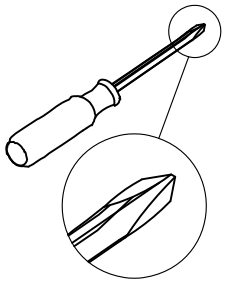


Ø15X9.5mm	
①	X5

Ø6X30mm	
④	X5

70X30X5mm	
⑮	X1

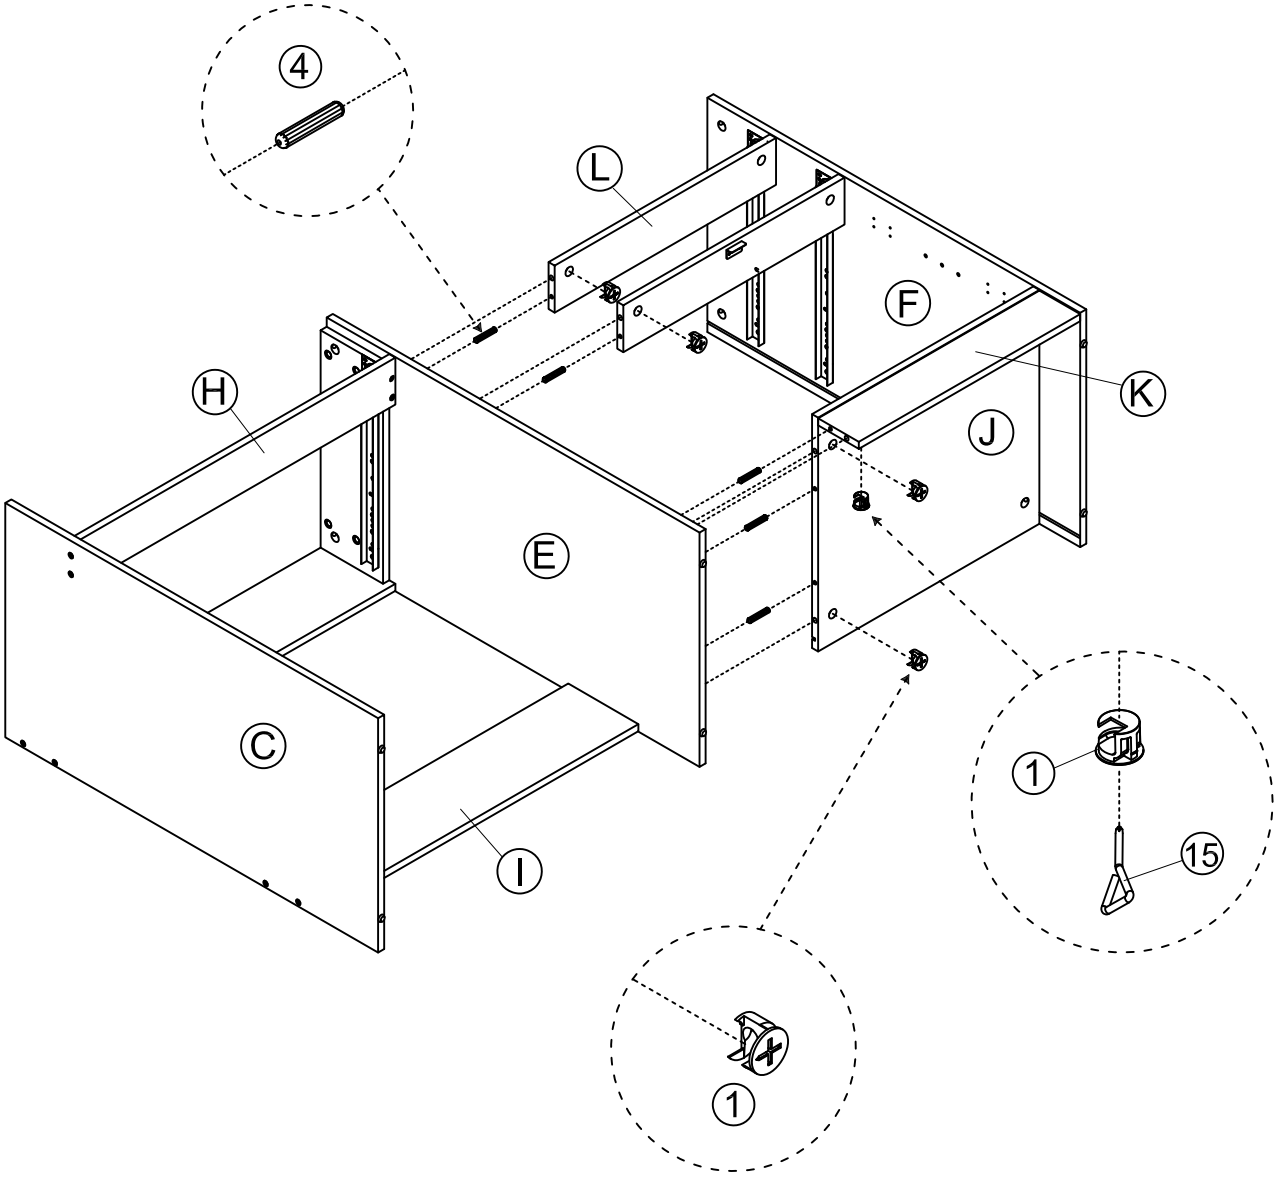



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

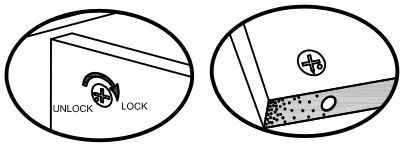


Proper orientation of CAM LOCK


STEP16

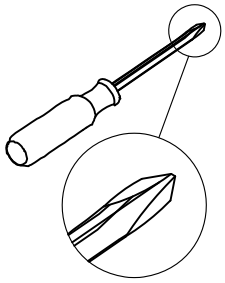

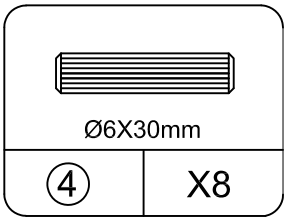


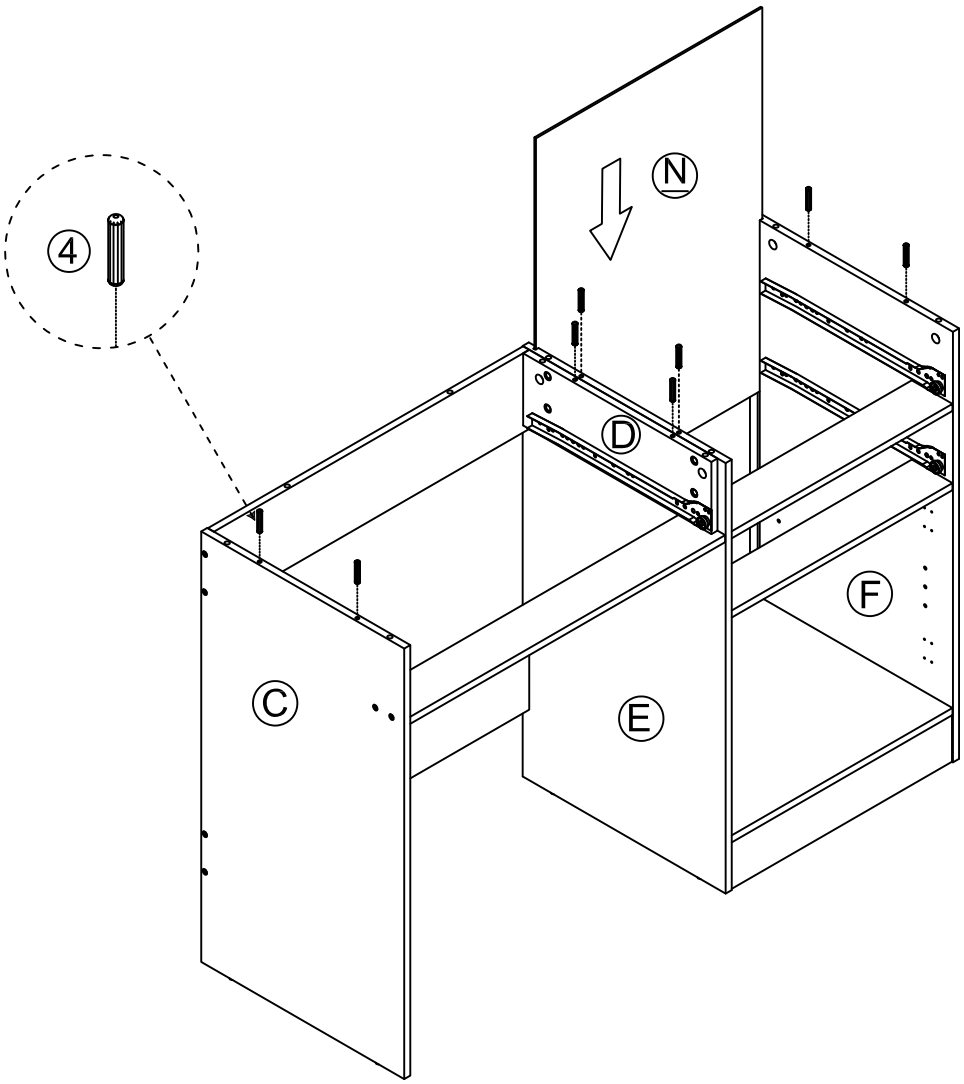


STEP17

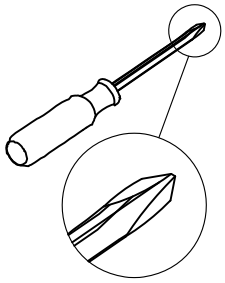


Ø15X9.5mm	Ø6.5X35mm	Ø6X30mm	Ø21mm
① X4	② X4	④ X2	㉔ X4

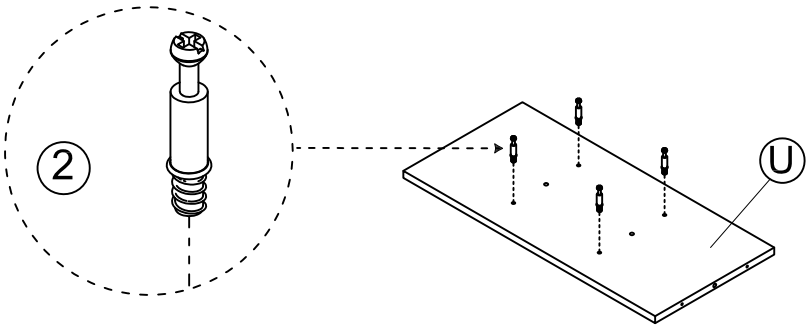


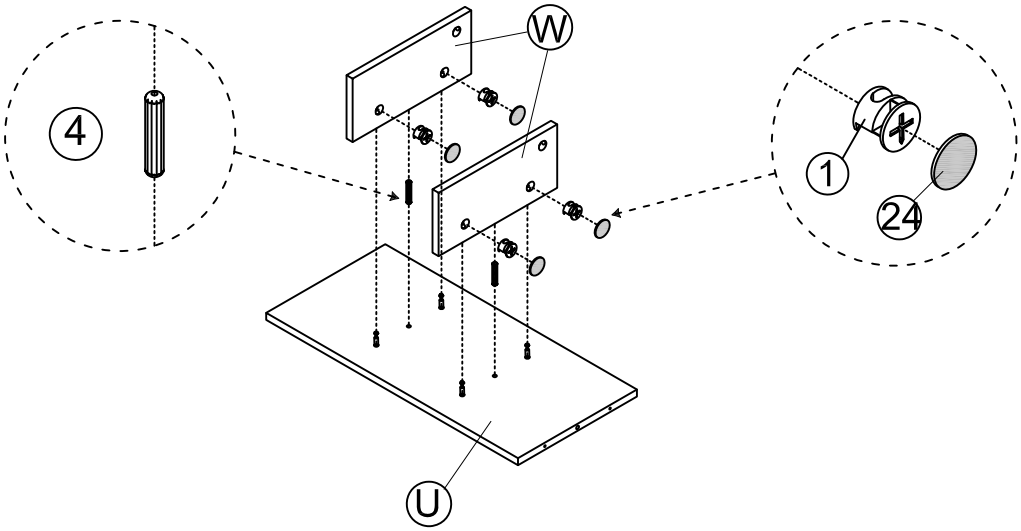


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

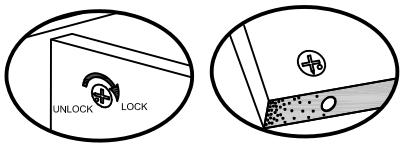



Proper orientation of CAM LOCK

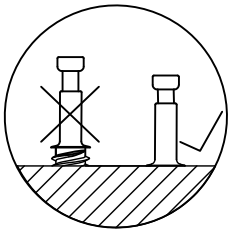



STEP18

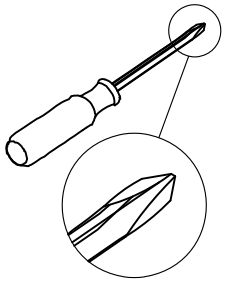


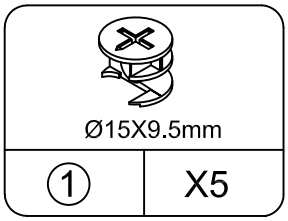


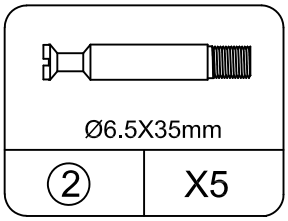


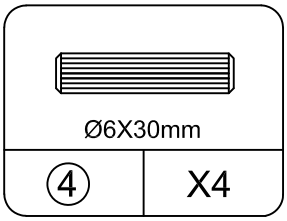


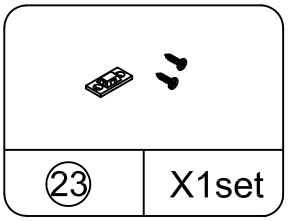

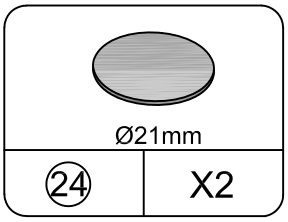


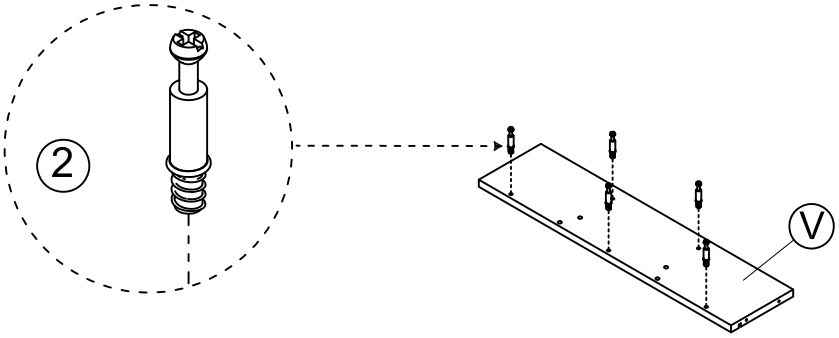

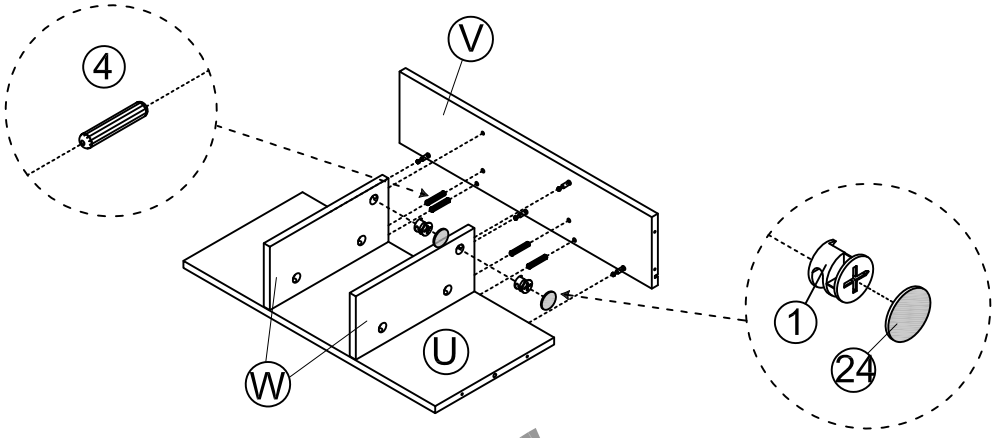


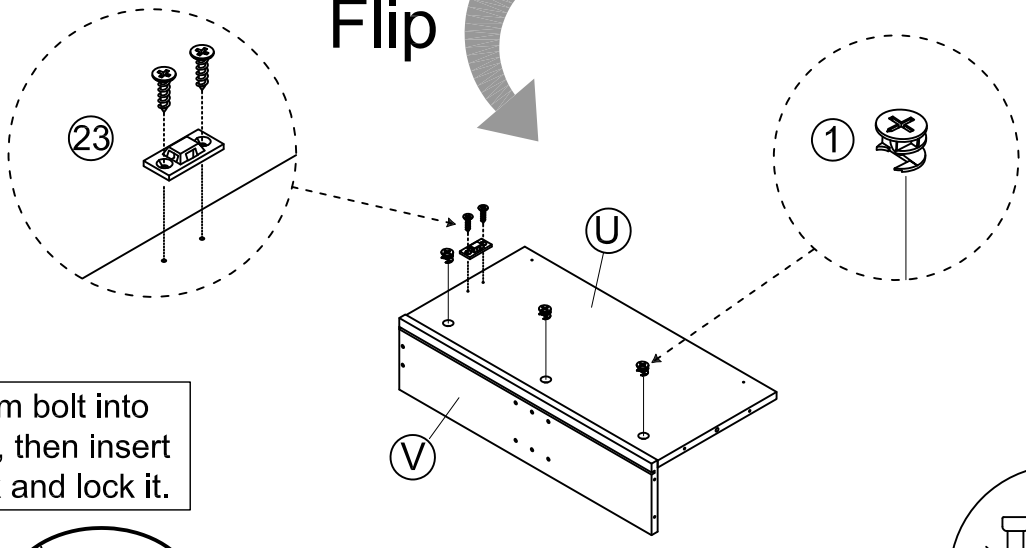


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

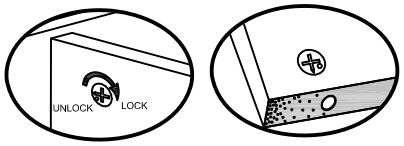



Proper orientation of CAM LOCK

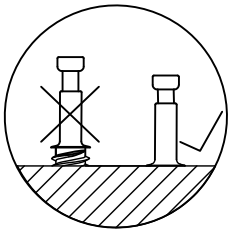


STEP19

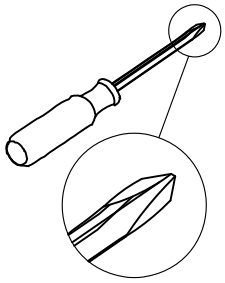


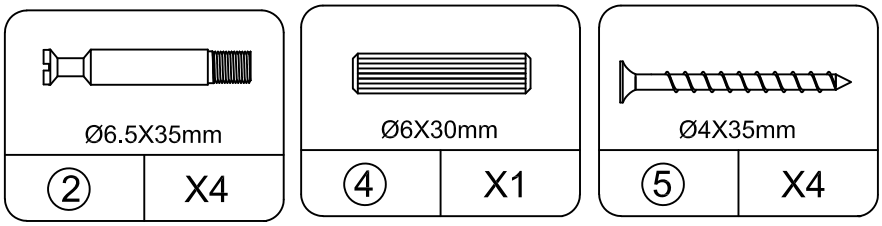

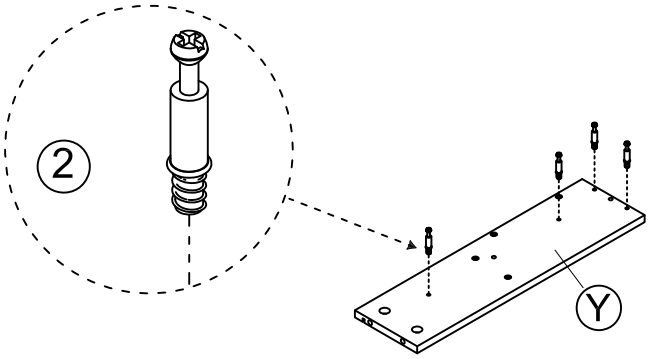

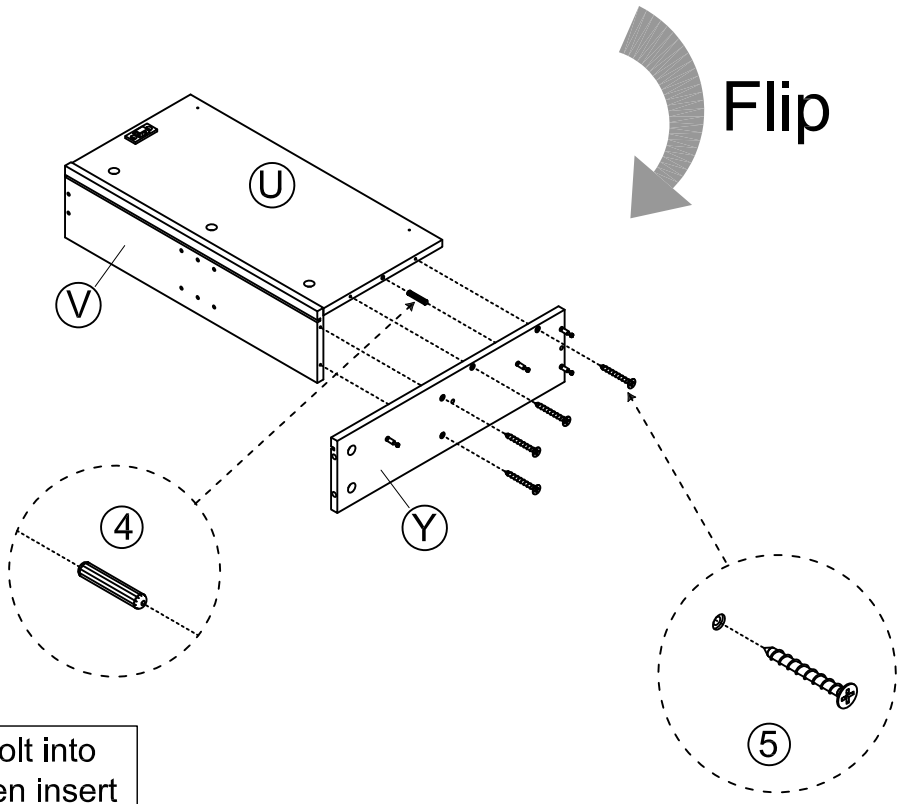


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

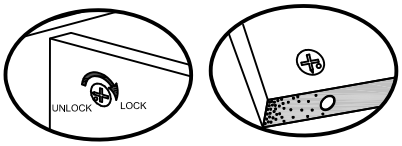


Proper orientation of CAM LOCK


STEP20

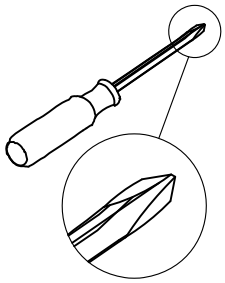


Ø15X9.5mm	Ø6.5X35mm	Ø6X30mm	Ø21mm
① X4	② X3	④ X1	㉔ X2

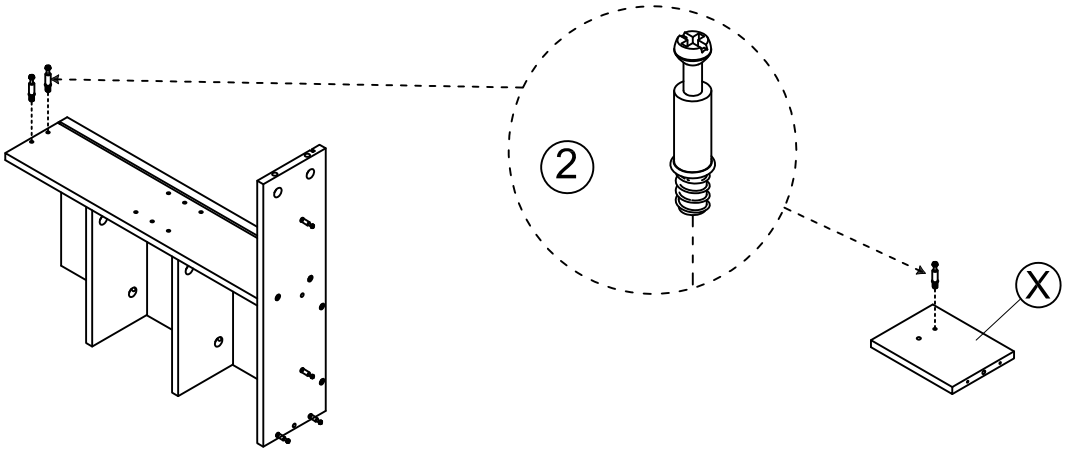


Flip

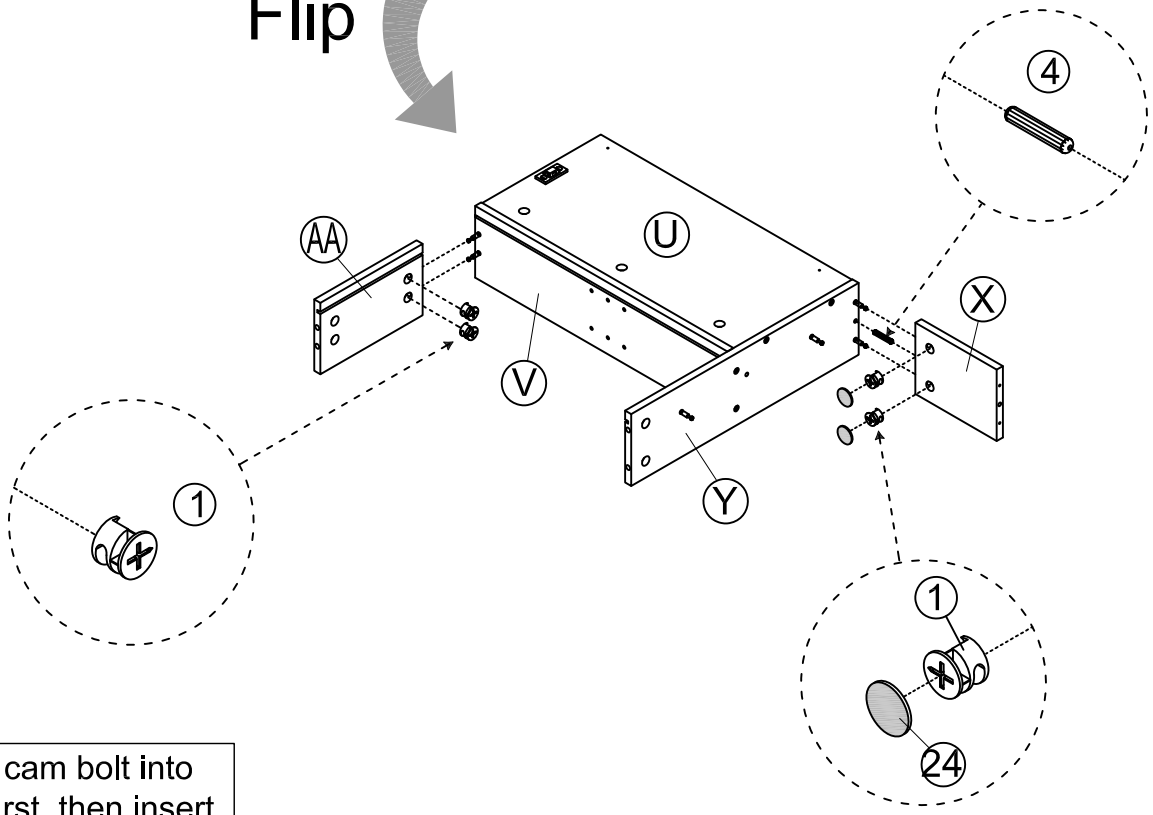


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

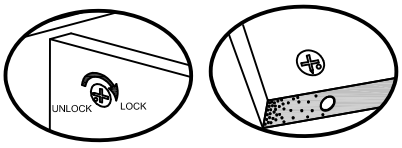


Proper orientation of CAM LOCK

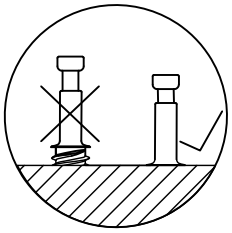


STEP21

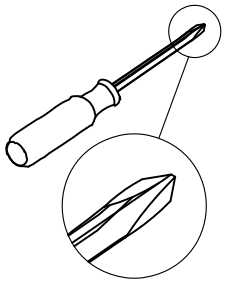


Ø15X9.5mm	Ø6.5X35mm	Ø6X30mm
① X2	② X4	④ X1

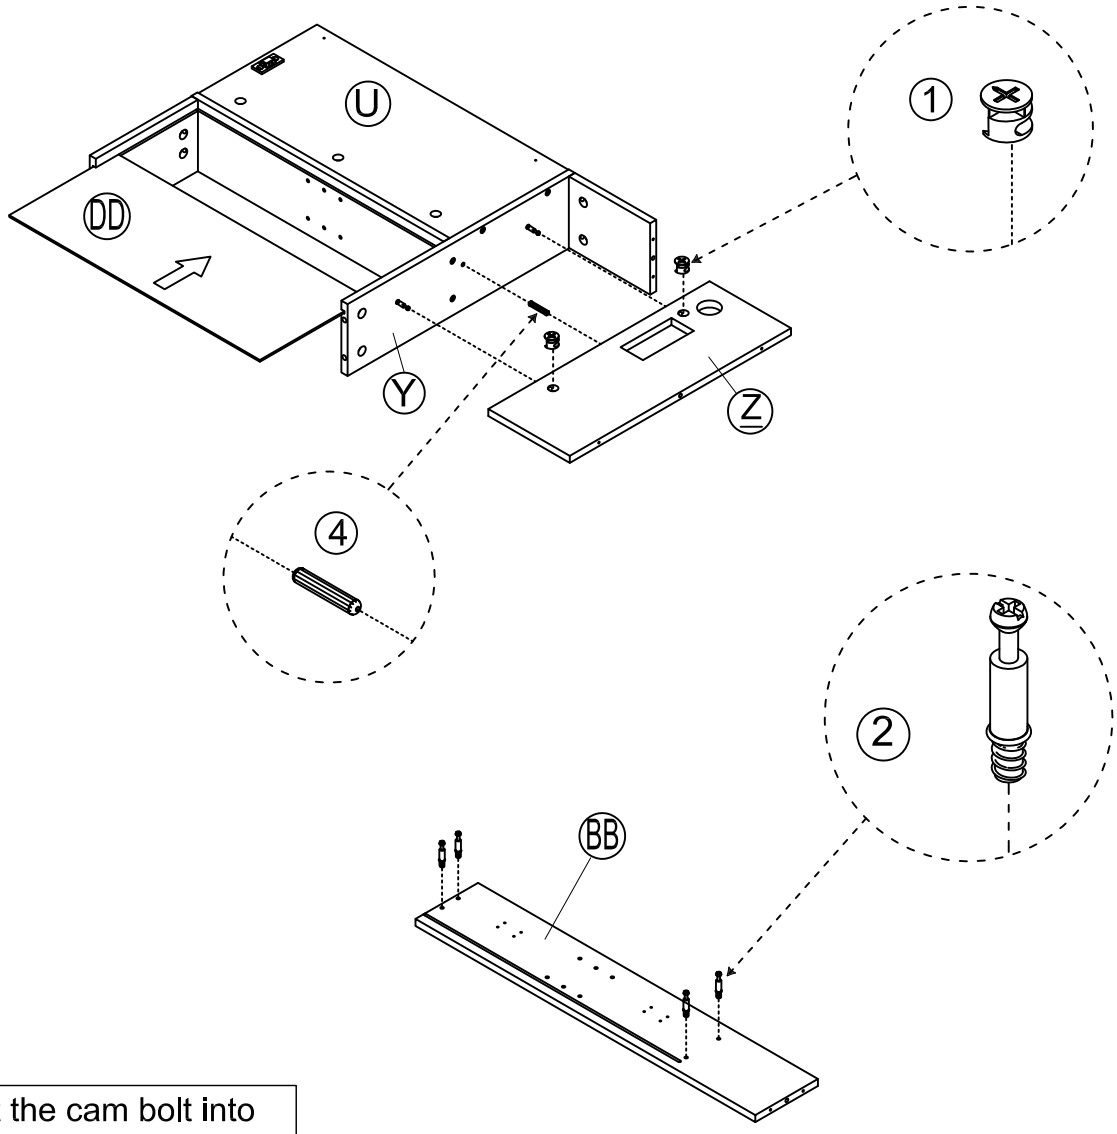


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

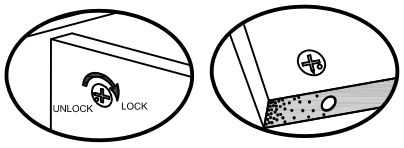



Proper orientation of CAM LOCK

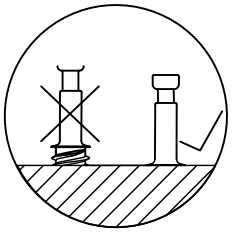



STEP22

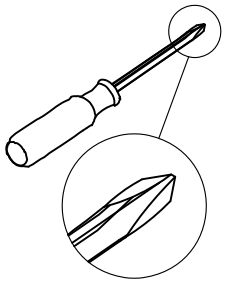

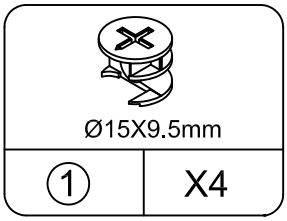


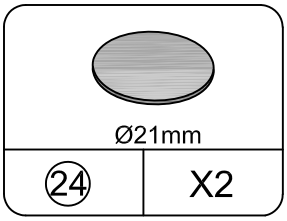

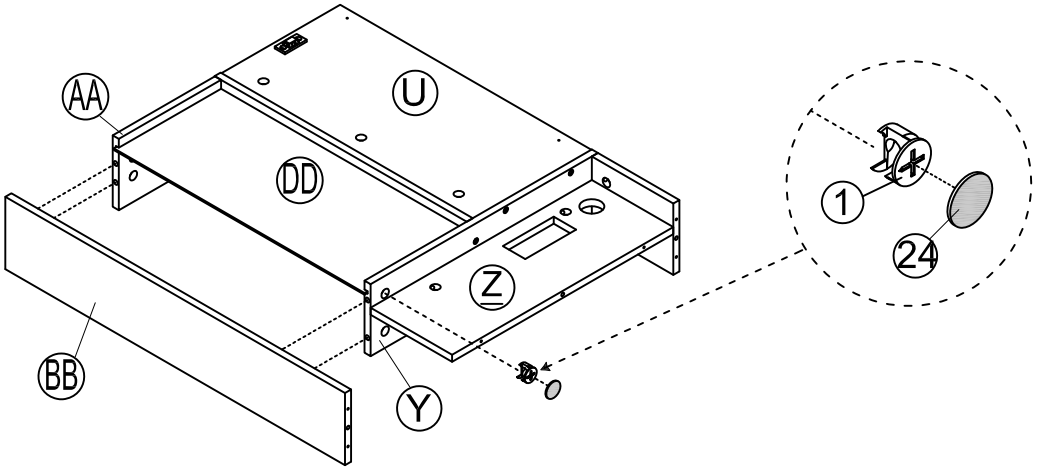

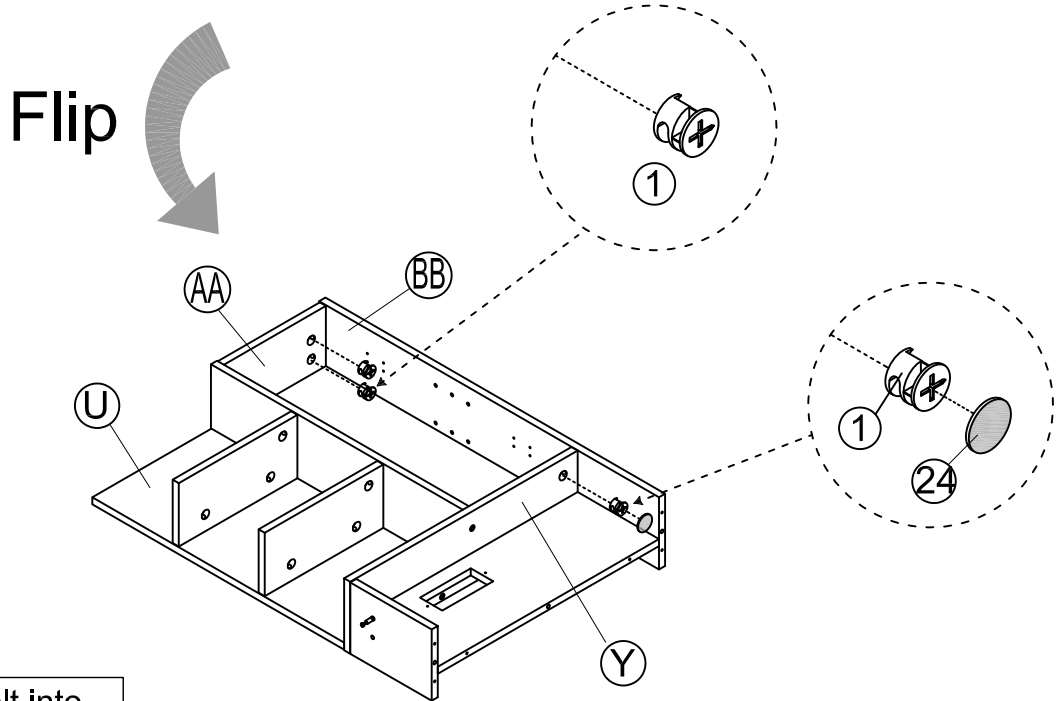


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

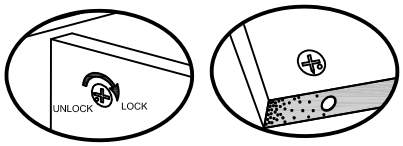

Proper orientation of CAM LOCK


STEP23

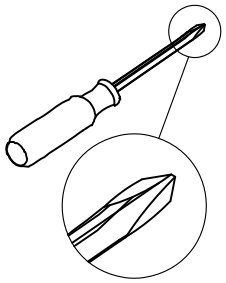


Ø6X30mm	
④	X6


Ø3.5X12mm	
⑥	X8

12X45mm	
⑨	X4

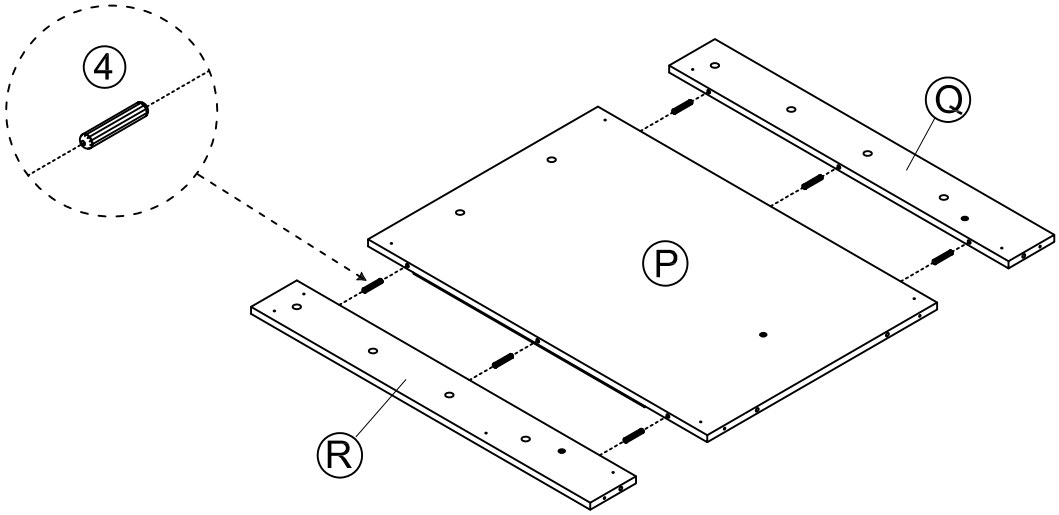


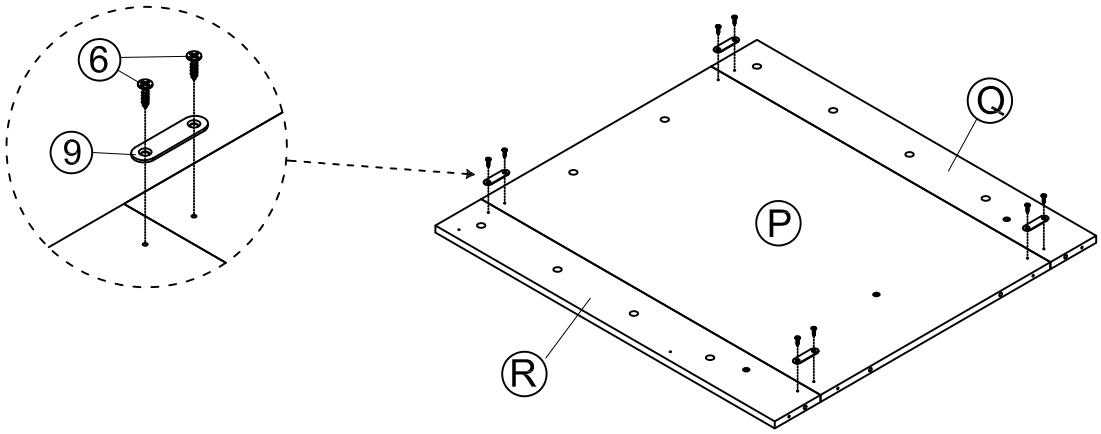


STEP24

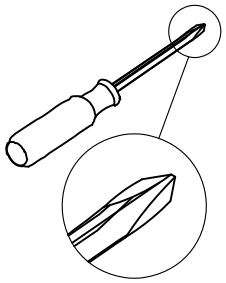


Ø15X9.5mm	Ø6.5X35mm	Ø6X30mm	Ø21mm
① X1	② X1	④ X1	㉔ X1

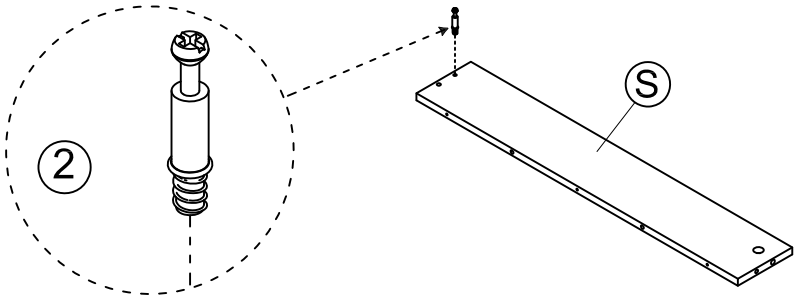


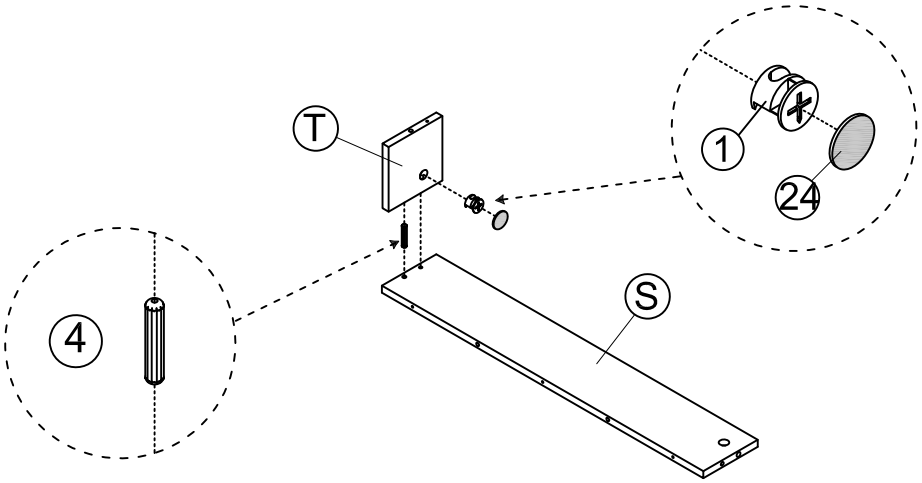


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

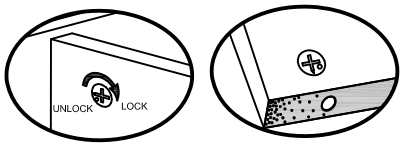


Proper orientation of CAM LOCK

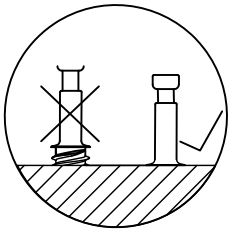


STEP25

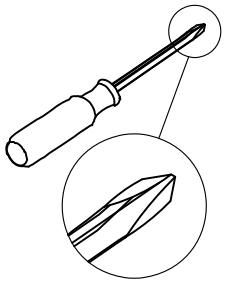


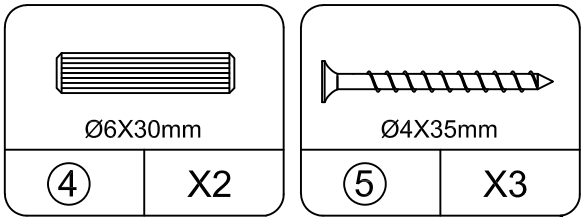

For this step,you need one helper.

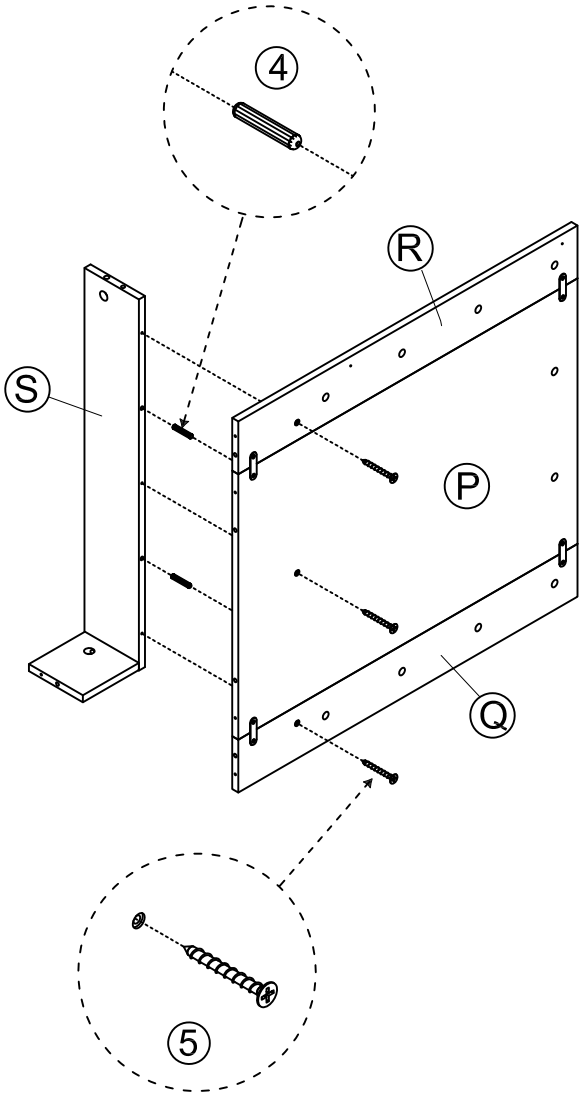


STEP26

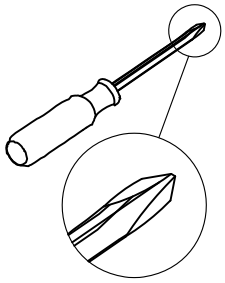


Ø15X9.5mm	Ø6X30mm	Ø3.5X12mm	12X45mm
① X1	④ X1	⑥ X4	⑨ X2


Ø21mm
㉔ X1

For this step,you need one helper.

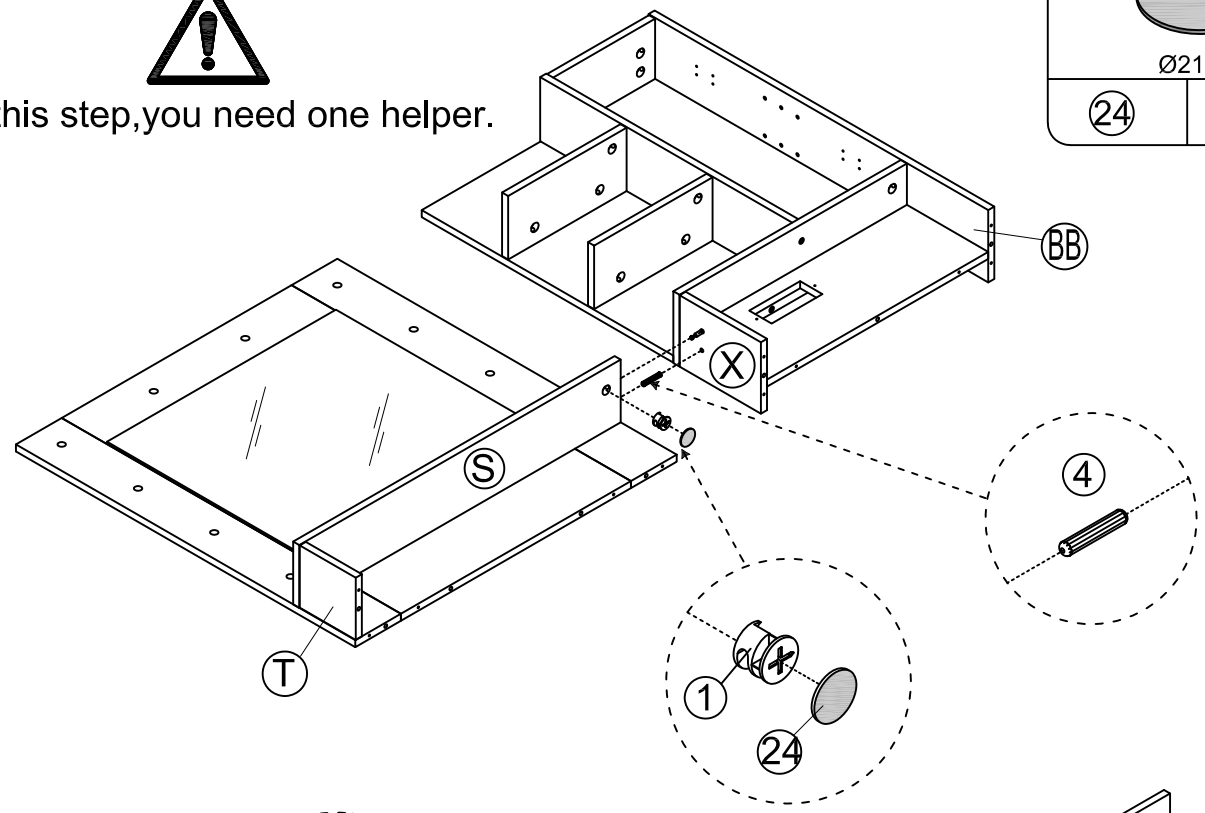

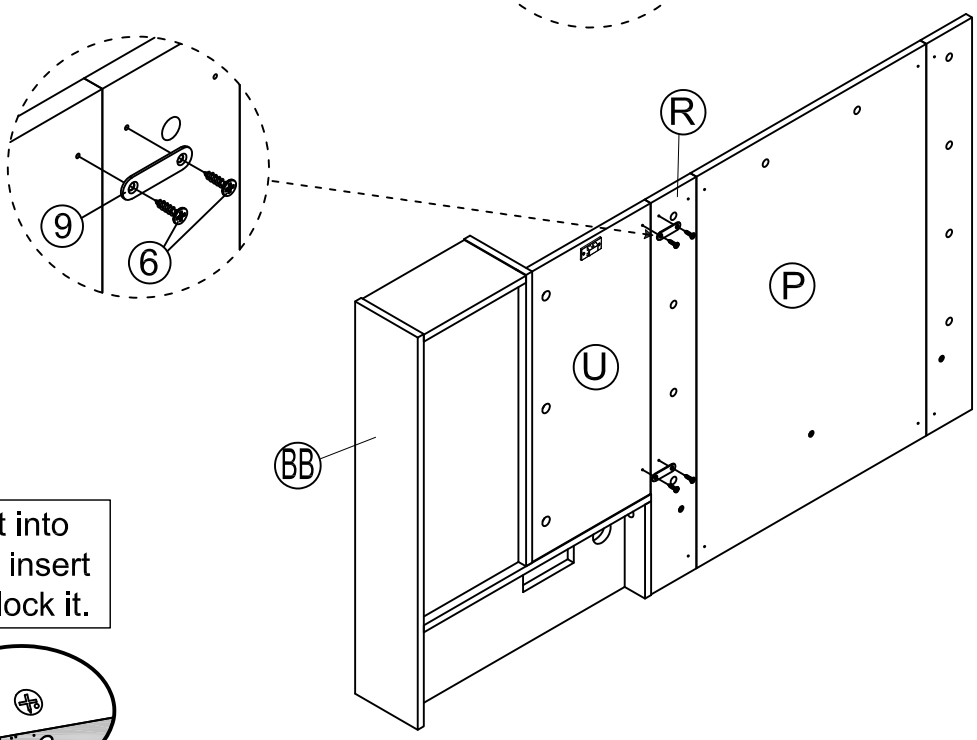



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

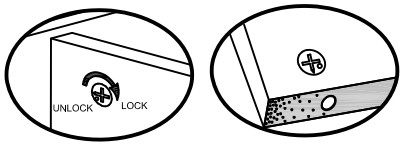



Proper orientation of CAM LOCK


STEP27

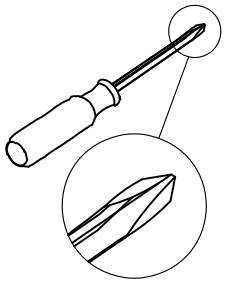


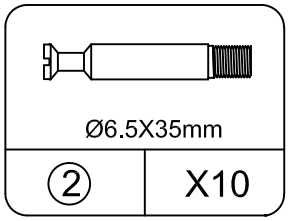

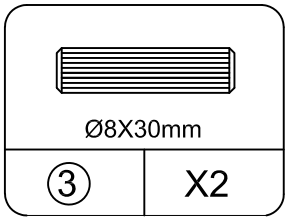


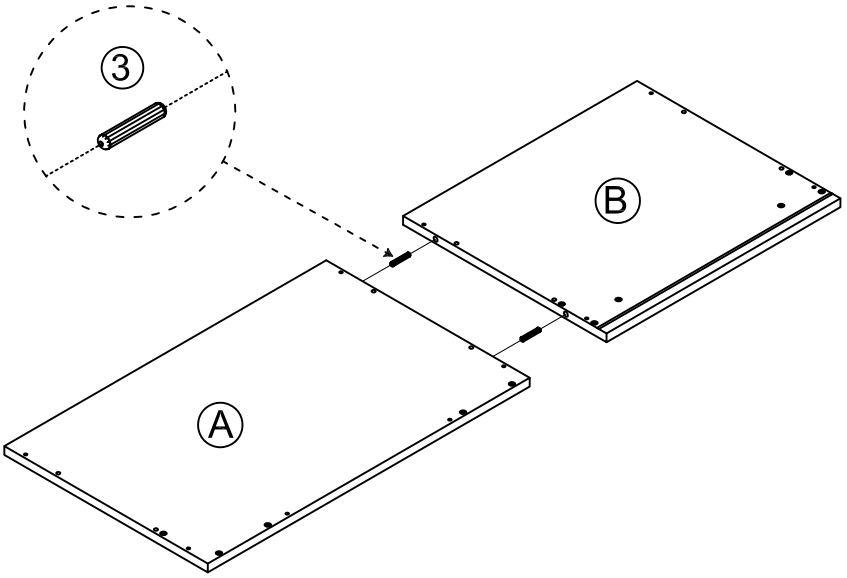


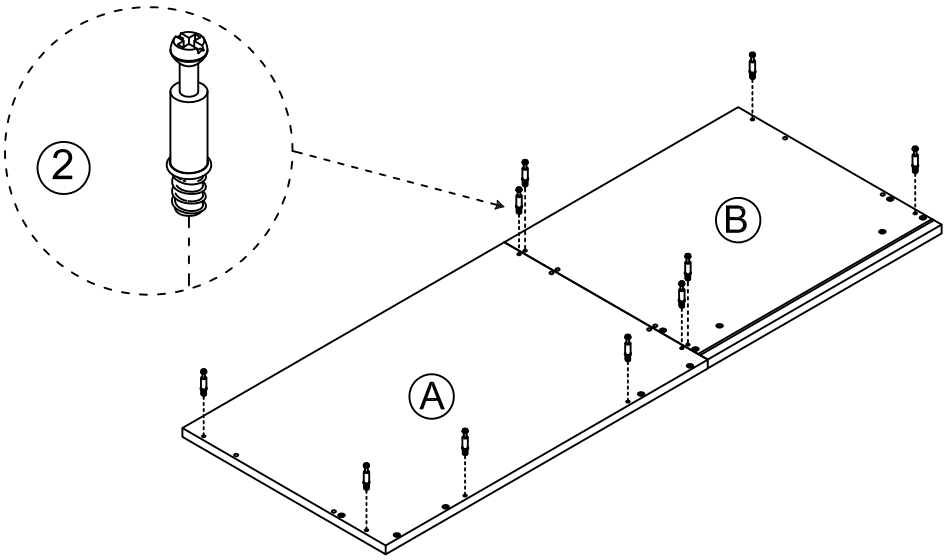


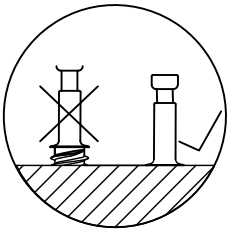

STEP28

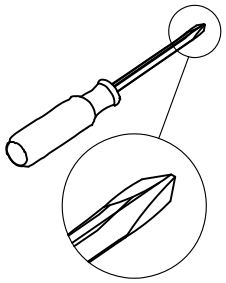


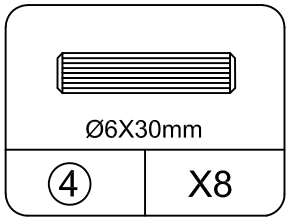

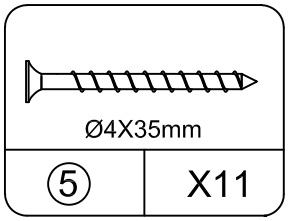





For this step,you need one helper.

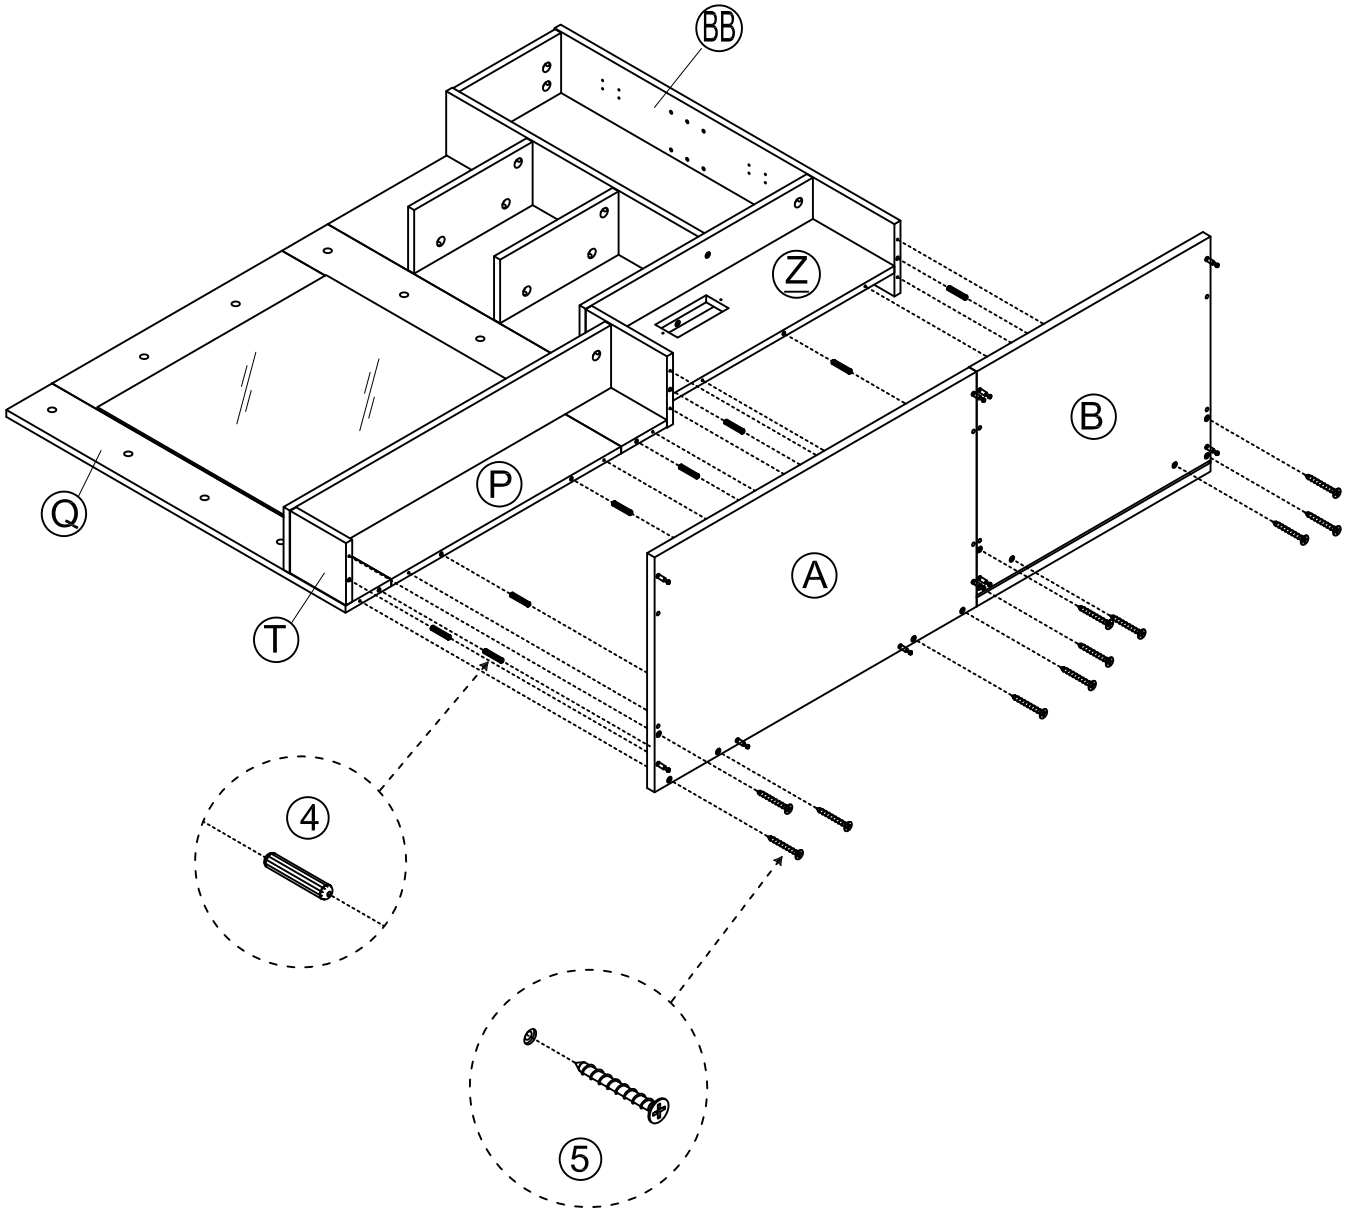


STEP29

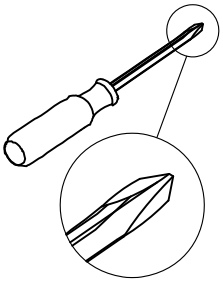


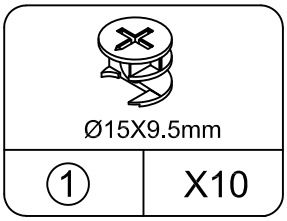

For this step,you need one helper.

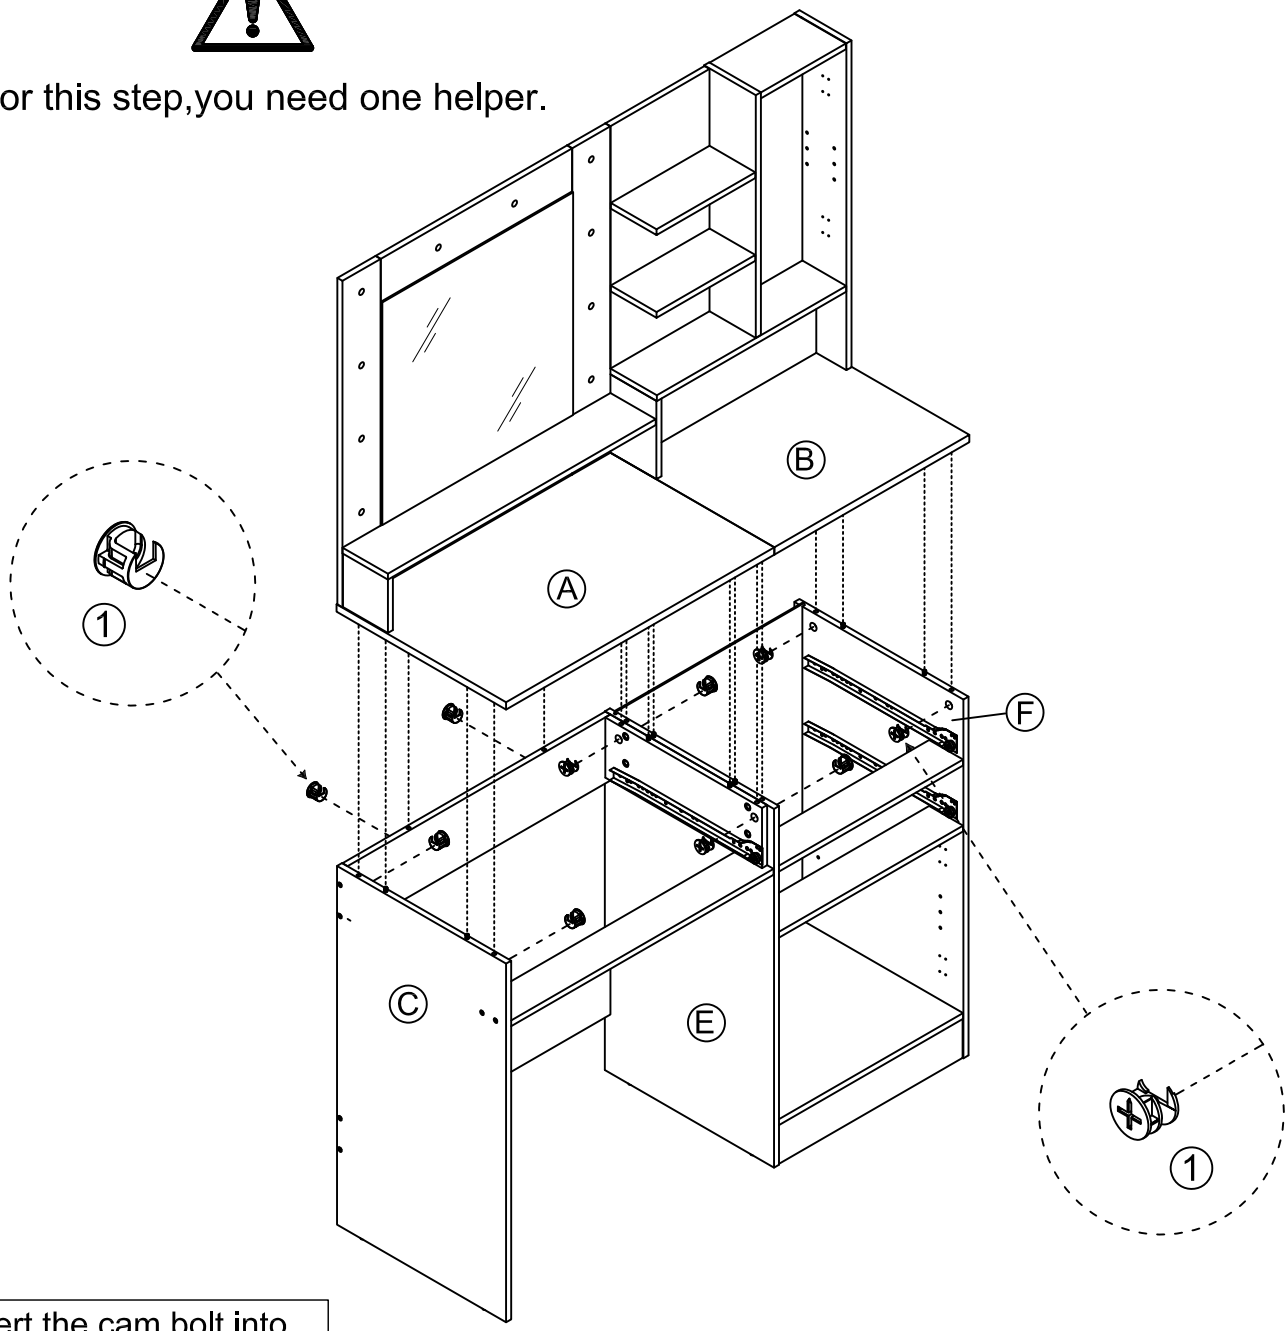



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

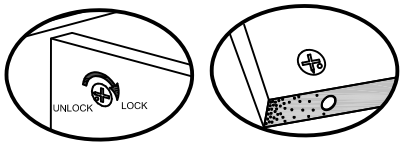


Proper orientation of CAM LOCK


STEP30

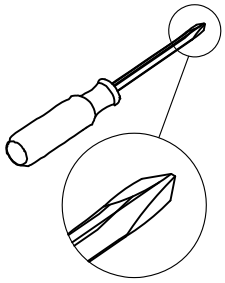

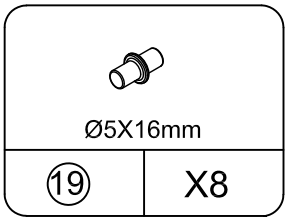


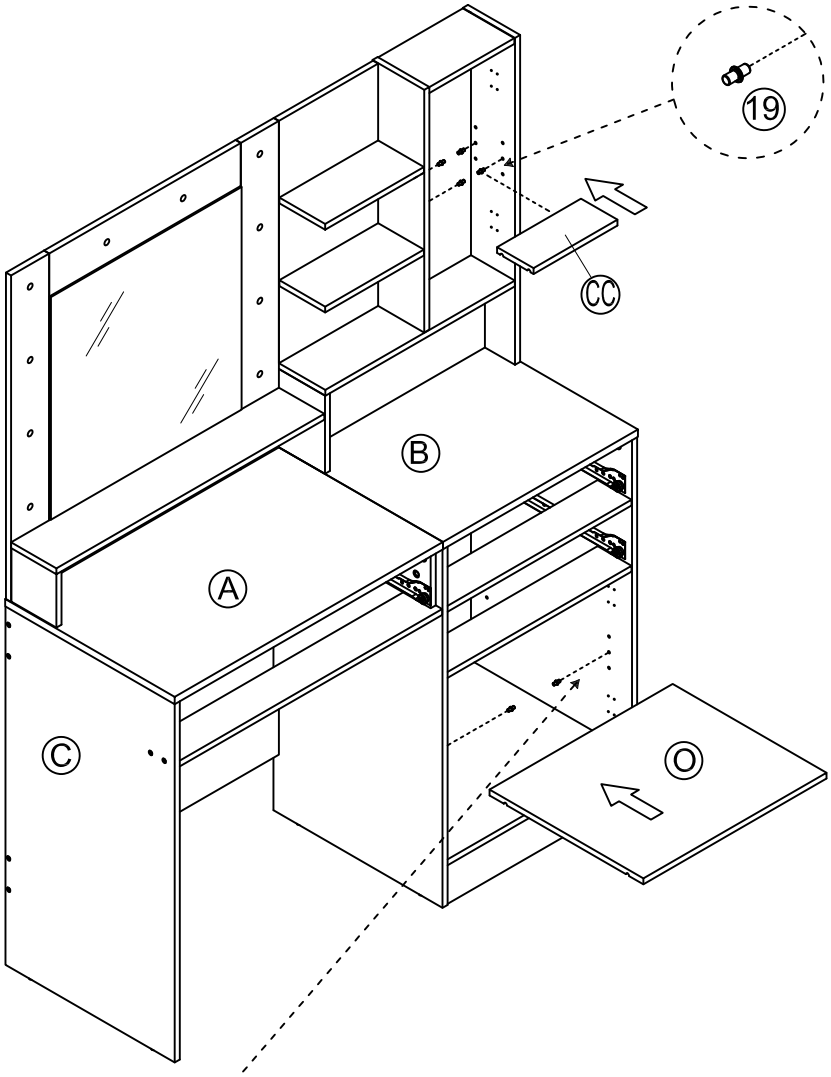


Step 1
Select the desired height and put it in

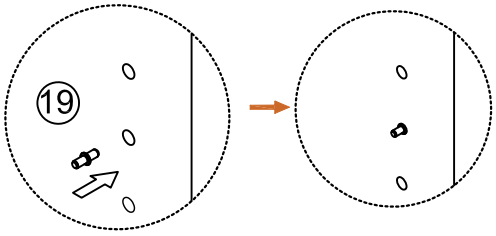


Step 2
Aim the board gaps down

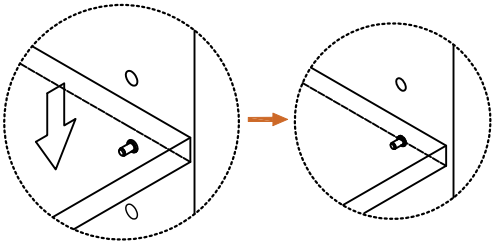


STEP31

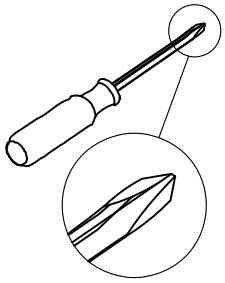


Ø3.5X12mm		Ø35mm		130X20X23mm		M4X19mm	
6	X12	8	X6	16	X3	18	X6

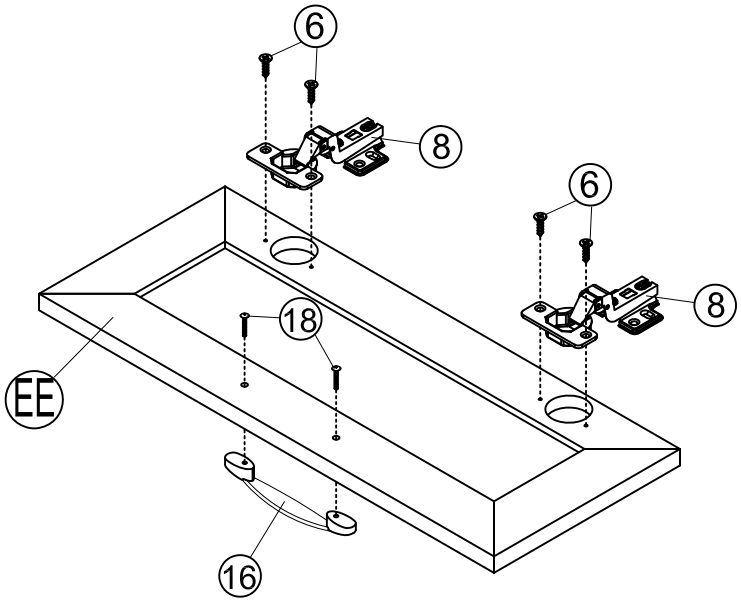


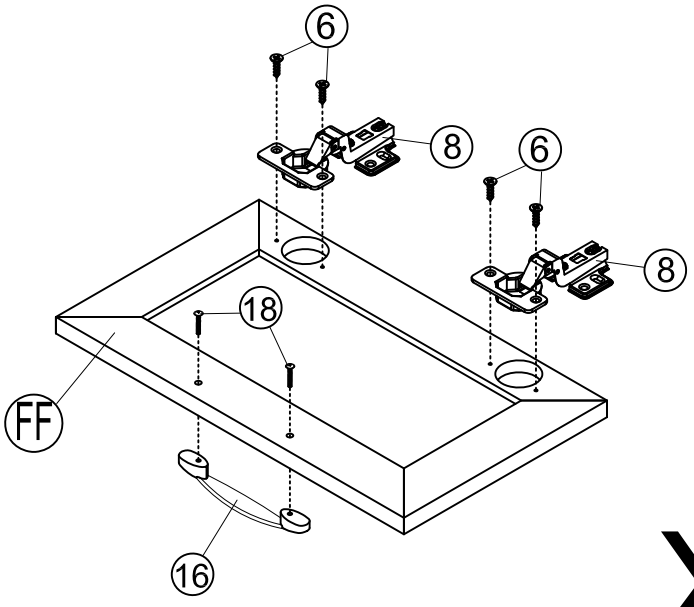


X2


STEP32

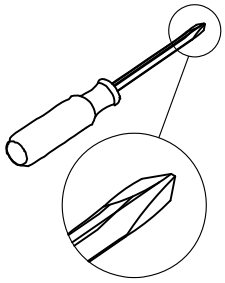


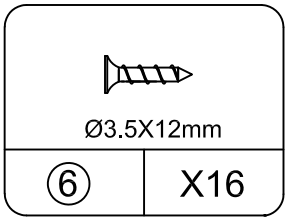


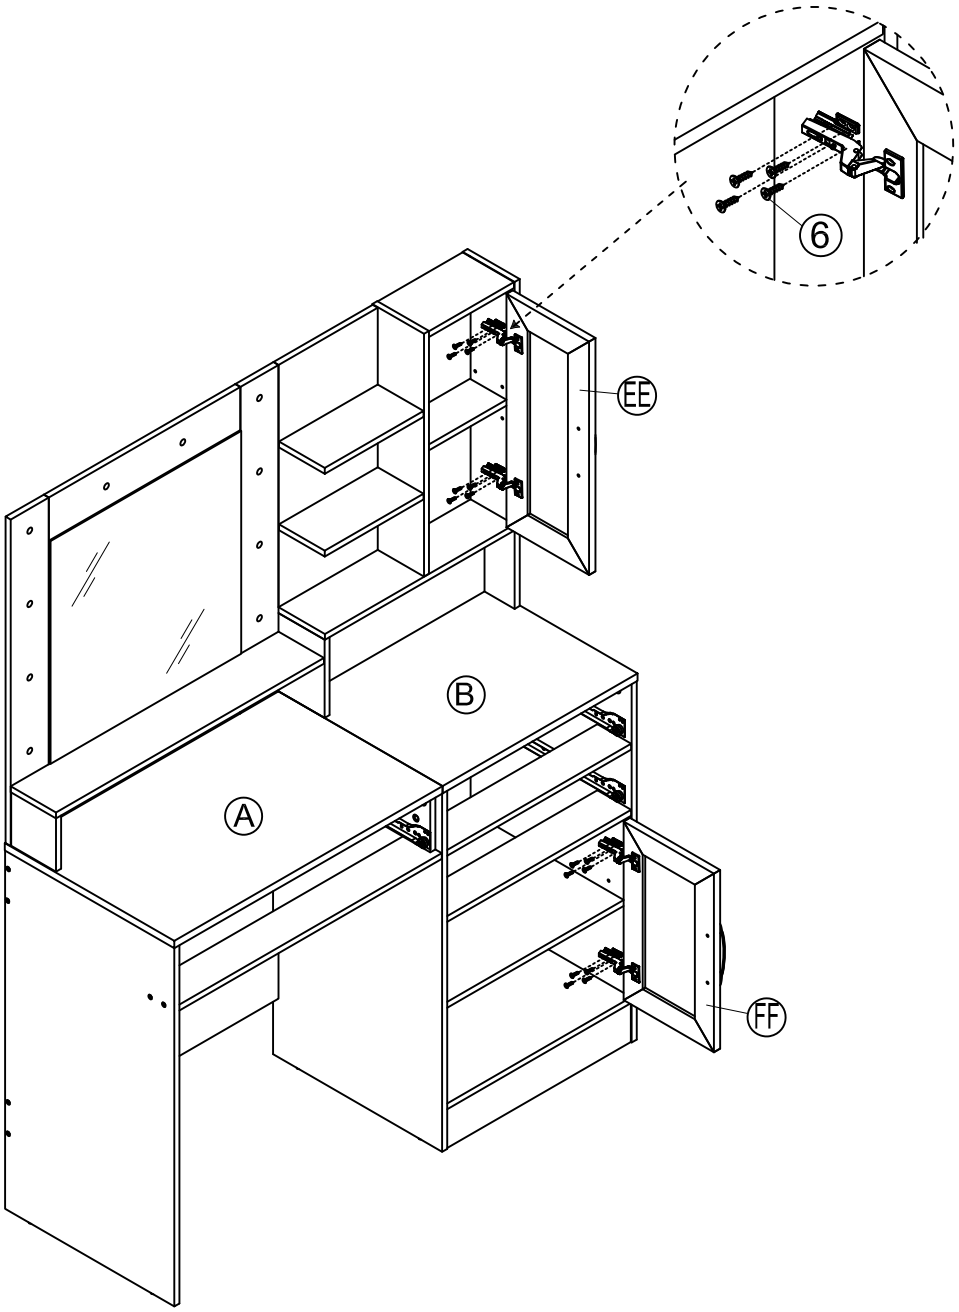


STEP33

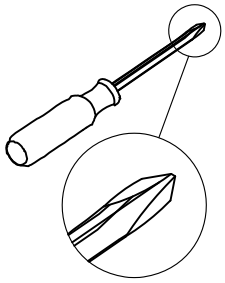


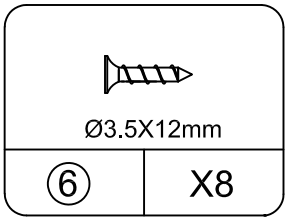

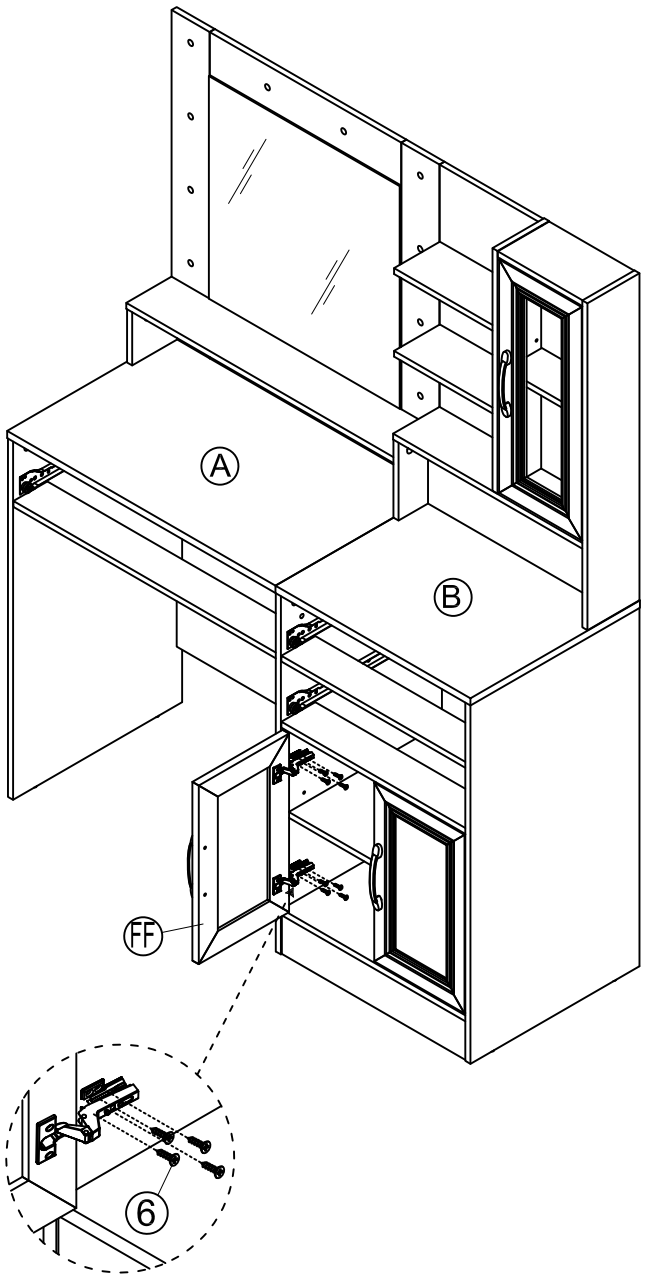


STEP34

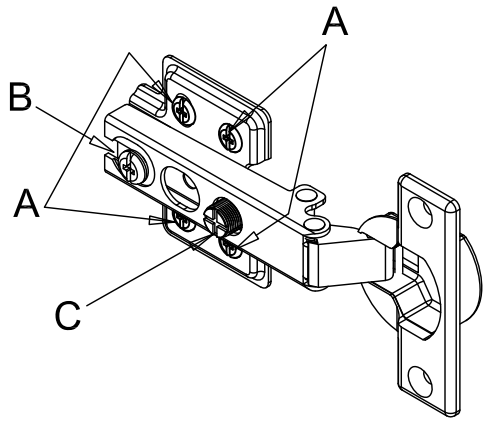


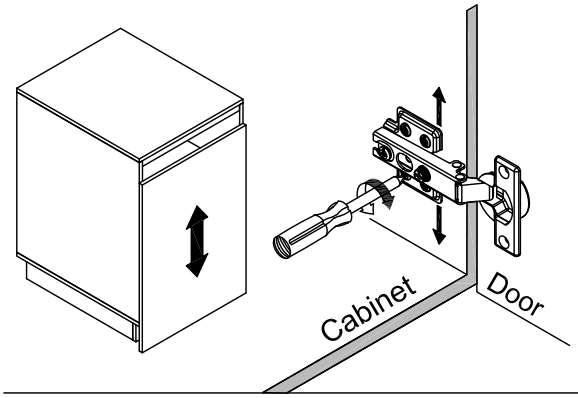

To adjust the vertical height.
Loosen the four screws "A" on both hinges.
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.
Then tighten back up.

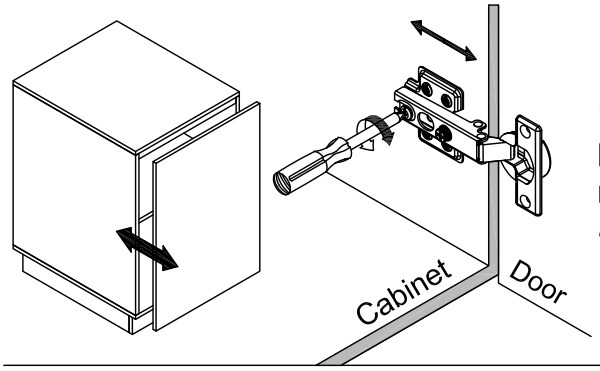


To adjust depth.
Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

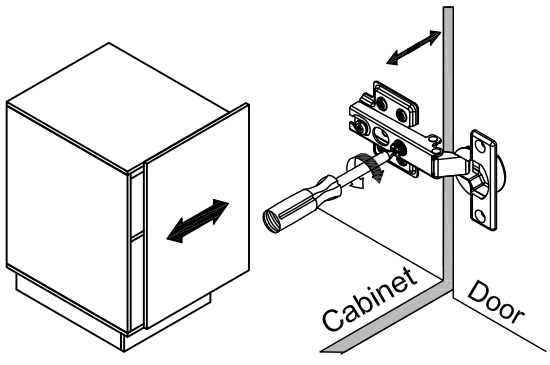


To adjust side ways.
Turning the screw "C" on BOTH hinges on each door.


STEP35

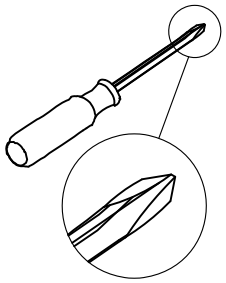

Ø3X12mm		Ø44(Ø35)X16mm		70X30X5mm	
⑦	X2	⑩	X1	⑭	X1set	⑮	X1

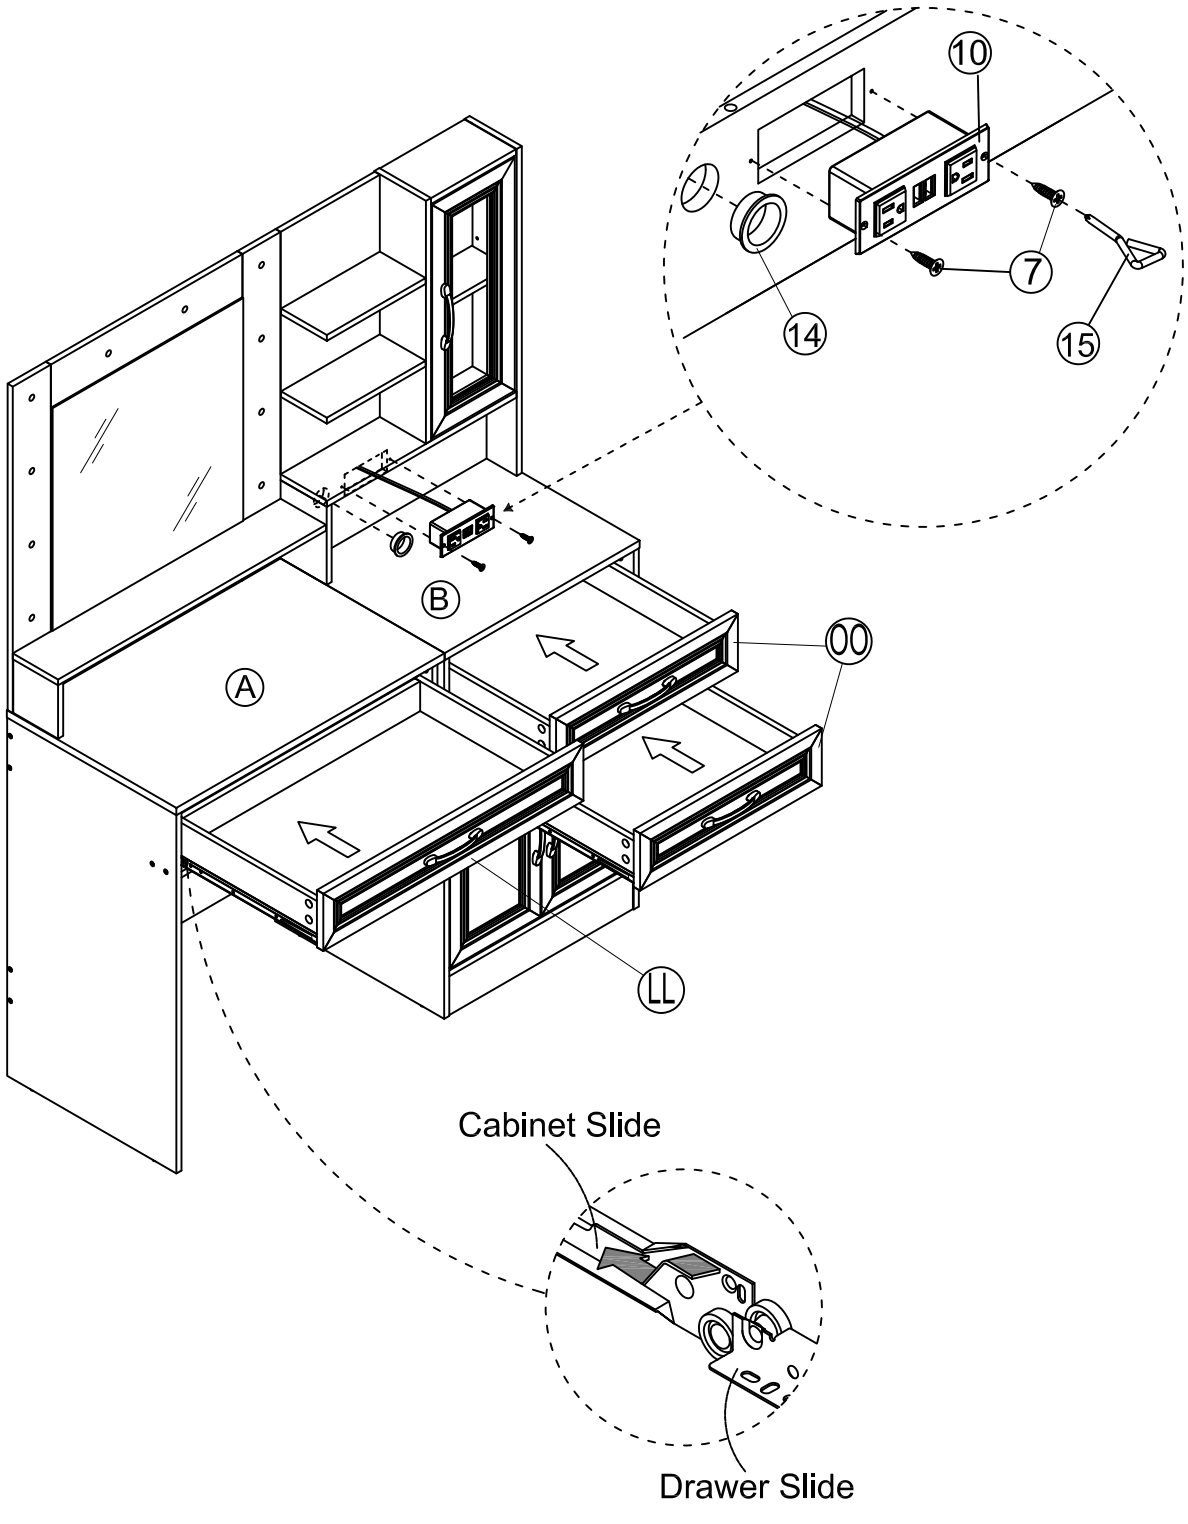


STEP36

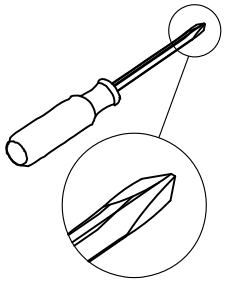


Ø44(Ø35)X16mm	
⑭	X1set


Ø50mm	
㉑	X10set

Pass the bulb wire through the pre punched plate.

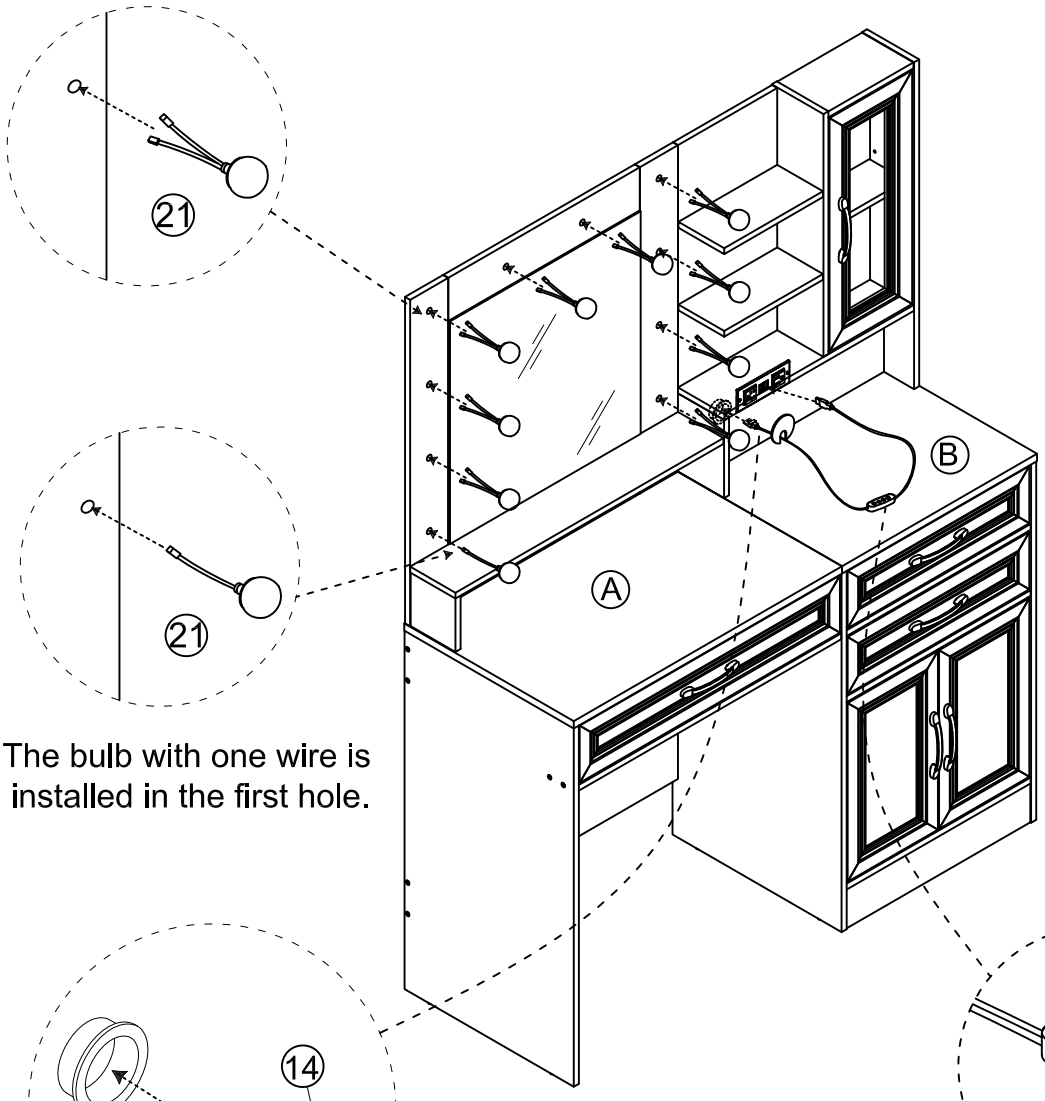

The bulb with one wire is installed in the first hole.

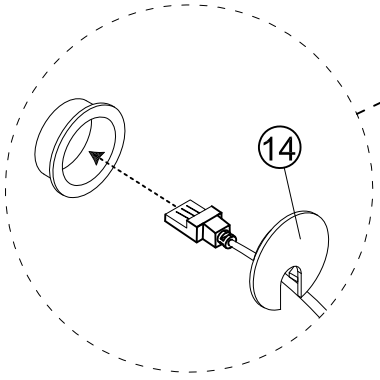

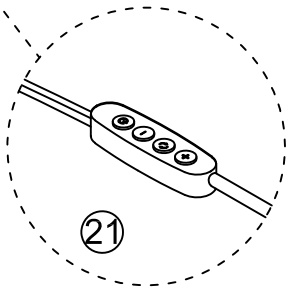



Switch regulator


Pass Light bulb connector through the pre punched plate.

STEP37

Pass the bulb wire through the pre punched plate, then Fix It ,and then connect the adjacent bulbs successively through the wire head slot on the opposite side (corresponding to the line of the same color).

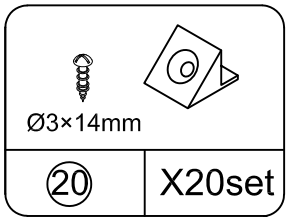


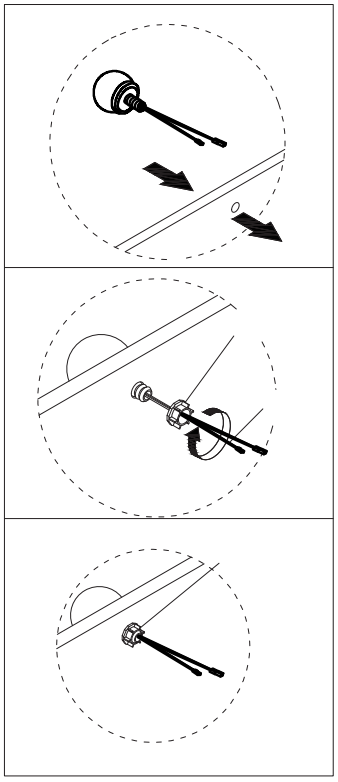


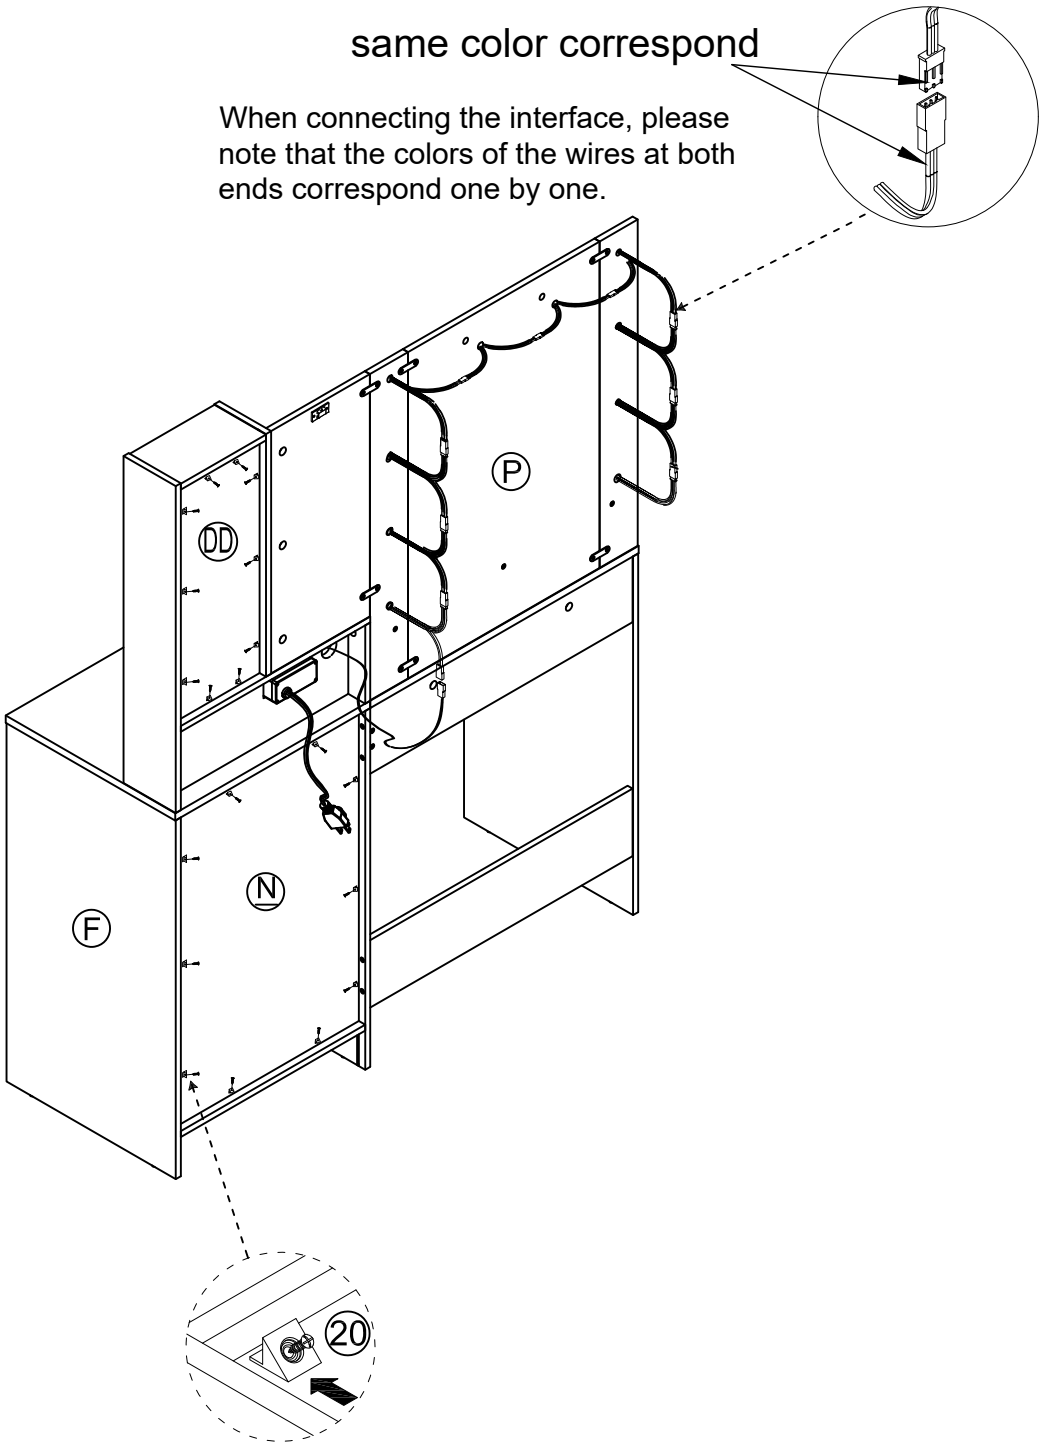

Insert the plastic buckle into the back plate slot , screw through the hole in the plastic buckle and lock it in place.

STEP38

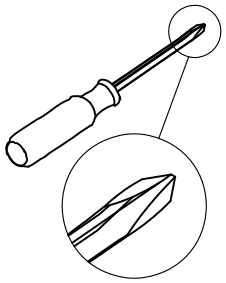


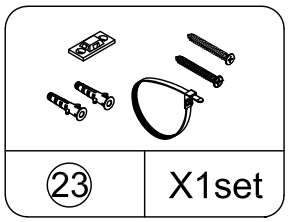


NOTE:The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.




Install the tipping restraint hard ware

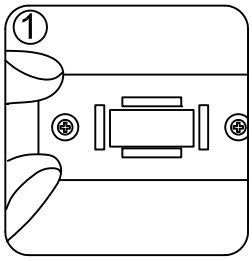


1.make mark on the wall

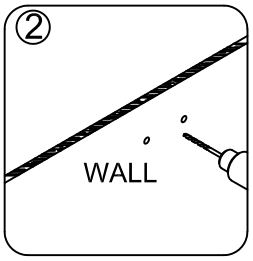


2.drill two Ø6 holes on the wall

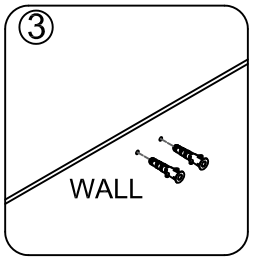

3.put two anchors in the holes

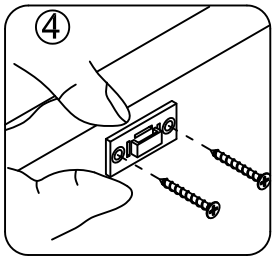

4.fix the device on the wall by the long screws

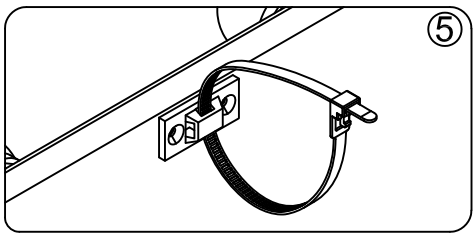

5.Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

