
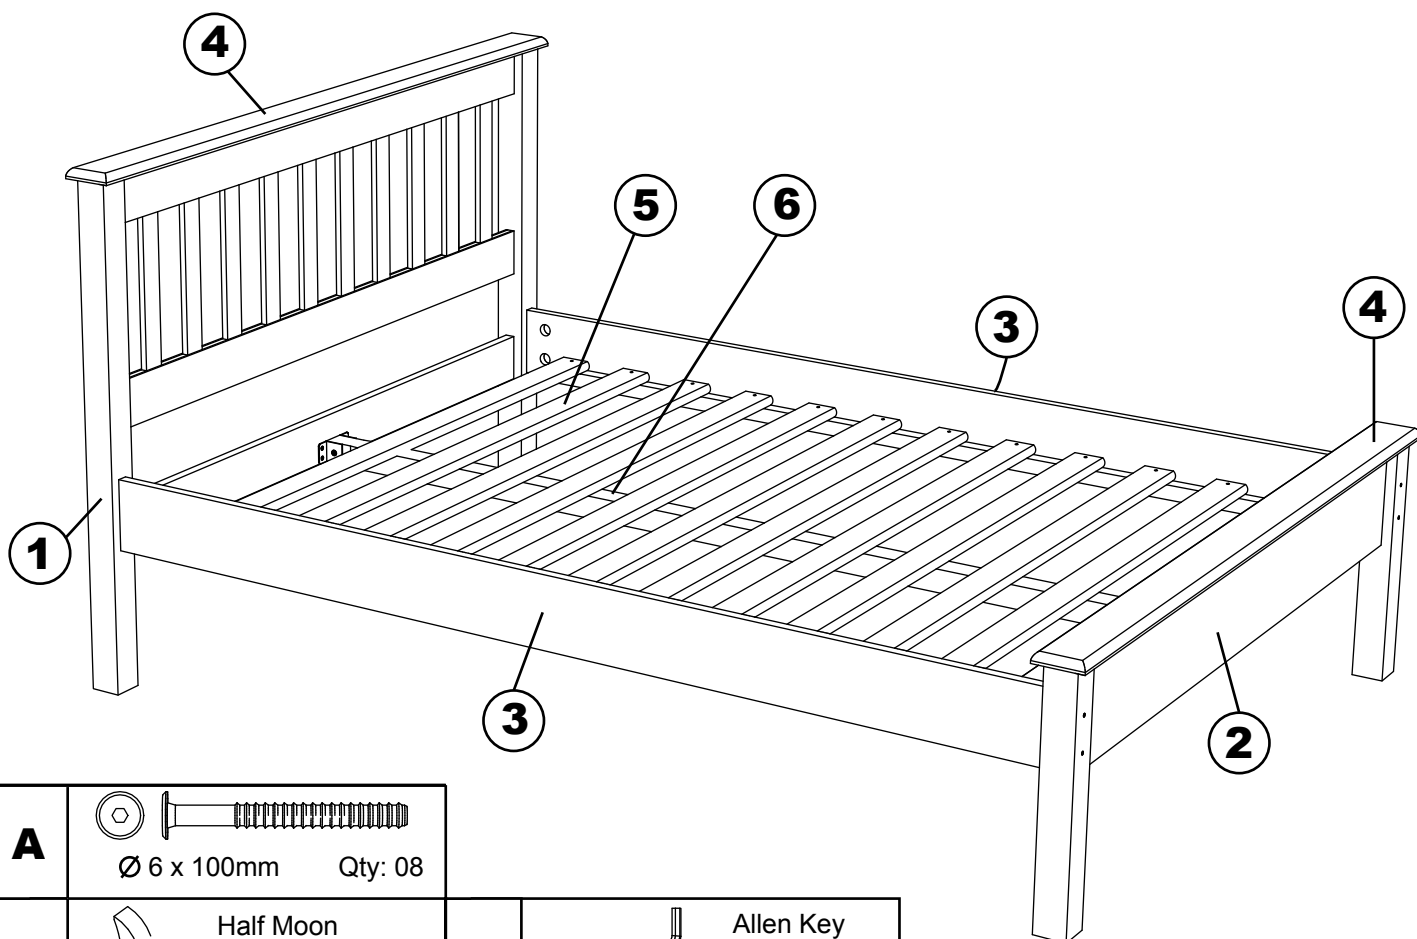



# ASSEMBLY INSTRUCTION - FULL BED



|          |                                                                                   |             |         |
|----------|-----------------------------------------------------------------------------------|-------------|---------|
| <b>A</b> |  | Ø 6 x 100mm | Qty: 08 |
|----------|-----------------------------------------------------------------------------------|-------------|---------|


|          |                                                                                     |           |         |
|----------|-------------------------------------------------------------------------------------|-----------|---------|
| <b>B</b> |  | Half Moon | Qty: 08 |
|----------|-------------------------------------------------------------------------------------|-----------|---------|

|          |                                                                                     |           |          |
|----------|-------------------------------------------------------------------------------------|-----------|----------|
| <b>C</b> |  | Allen Key | Qty : 01 |
|----------|-------------------------------------------------------------------------------------|-----------|----------|


|          |                                                                                     |            |        |
|----------|-------------------------------------------------------------------------------------|------------|--------|
| <b>D</b> |  | Ø10 x 40mm | Qty:10 |
|----------|-------------------------------------------------------------------------------------|------------|--------|

|          |                                                                                     |            |         |
|----------|-------------------------------------------------------------------------------------|------------|---------|
| <b>E</b> |  | Ø 4 x 30mm | Qty: 32 |
|----------|-------------------------------------------------------------------------------------|------------|---------|


|          |                                                                                       |            |         |
|----------|---------------------------------------------------------------------------------------|------------|---------|
| <b>F</b> |  | Ø 3 x 15mm | Qty: 08 |
|----------|---------------------------------------------------------------------------------------|------------|---------|

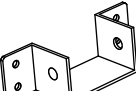
|          |                                                                                     |               |         |
|----------|-------------------------------------------------------------------------------------|---------------|---------|
| <b>G</b> |  | Support Metal | Qty: 02 |
|----------|-------------------------------------------------------------------------------------|---------------|---------|

|          |                                                                                     |            |         |
|----------|-------------------------------------------------------------------------------------|------------|---------|
| <b>H</b> |  | Ø 6 x 45mm | Qty: 02 |
|----------|-------------------------------------------------------------------------------------|------------|---------|

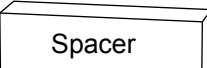
|          |                                                                                       |        |         |
|----------|---------------------------------------------------------------------------------------|--------|---------|
| <b>I</b> |  | Spacer | Qty: 02 |
|----------|---------------------------------------------------------------------------------------|--------|---------|

## Step: 1

|          |                                                                                       |             |         |
|----------|---------------------------------------------------------------------------------------|-------------|---------|
| <b>D</b> |  | Ø 10 x 40mm | Qty: 06 |
|----------|---------------------------------------------------------------------------------------|-------------|---------|

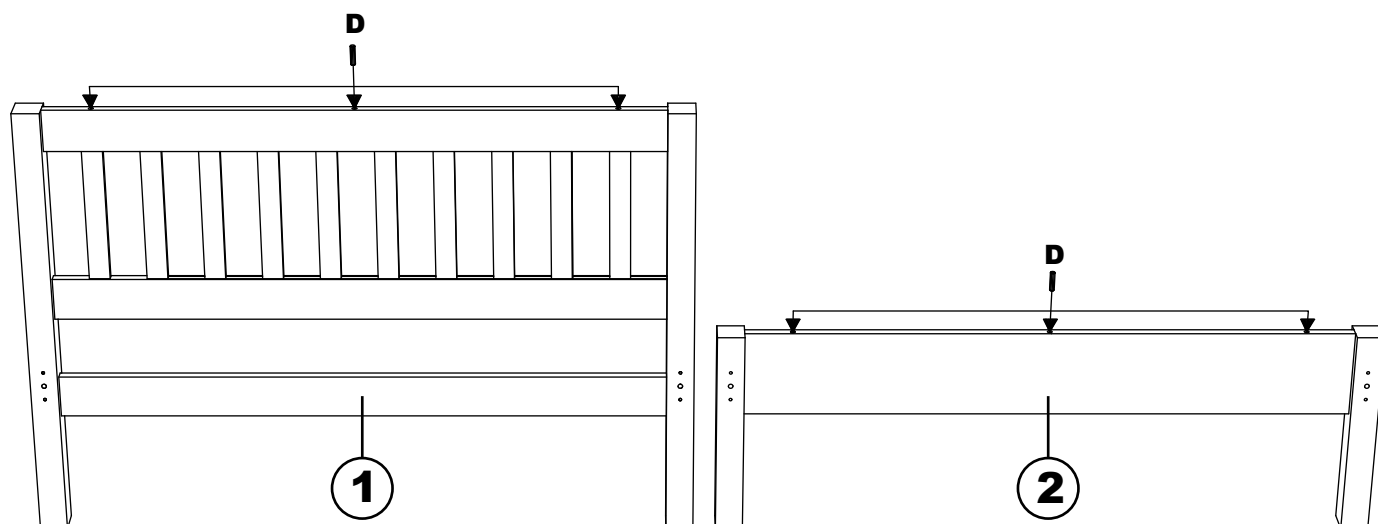

## Step: 2

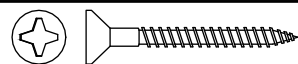
**E**

Ø 4 x 30mm


Qty: 08

### Observation:

Place cardboard underneath for protection.

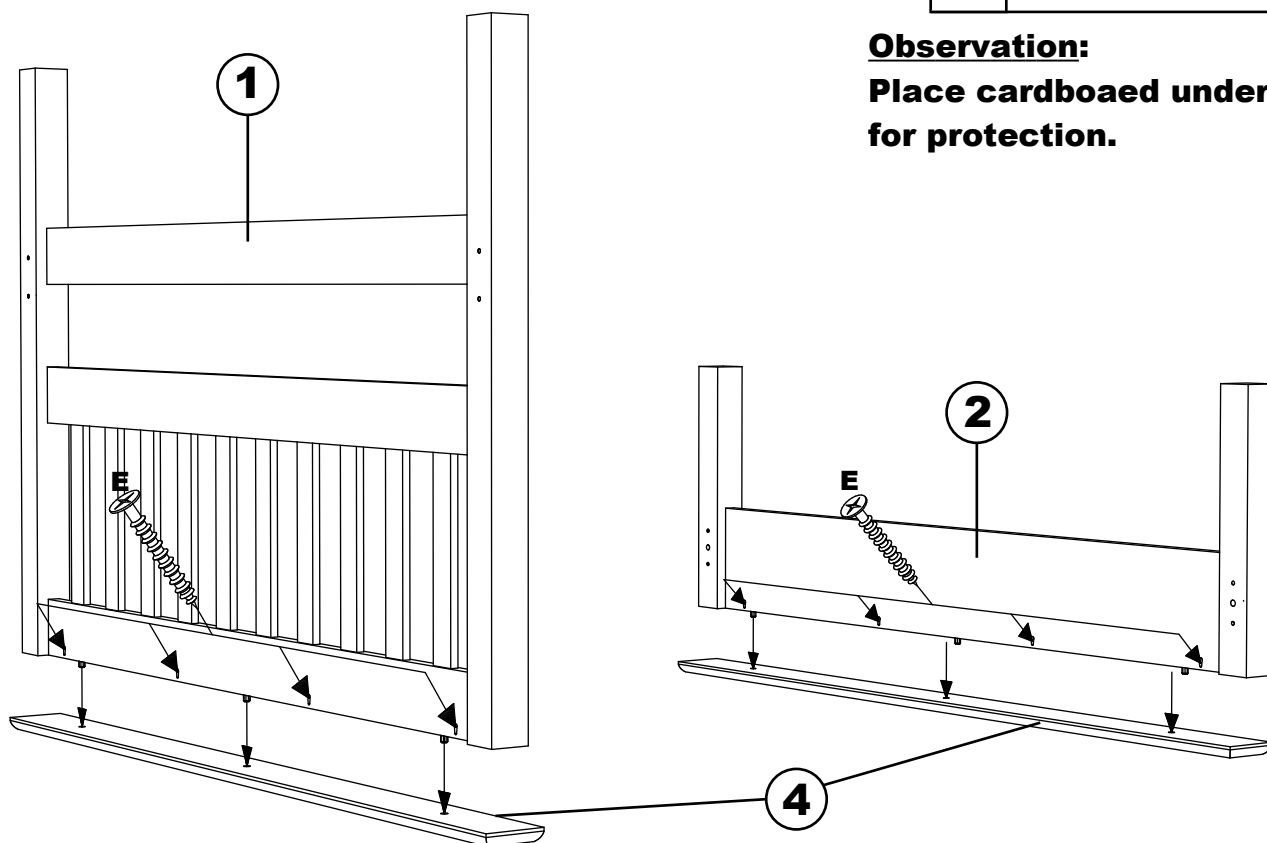


## Step: 3





**D**


Ø10 x 40mm

Qty: 04

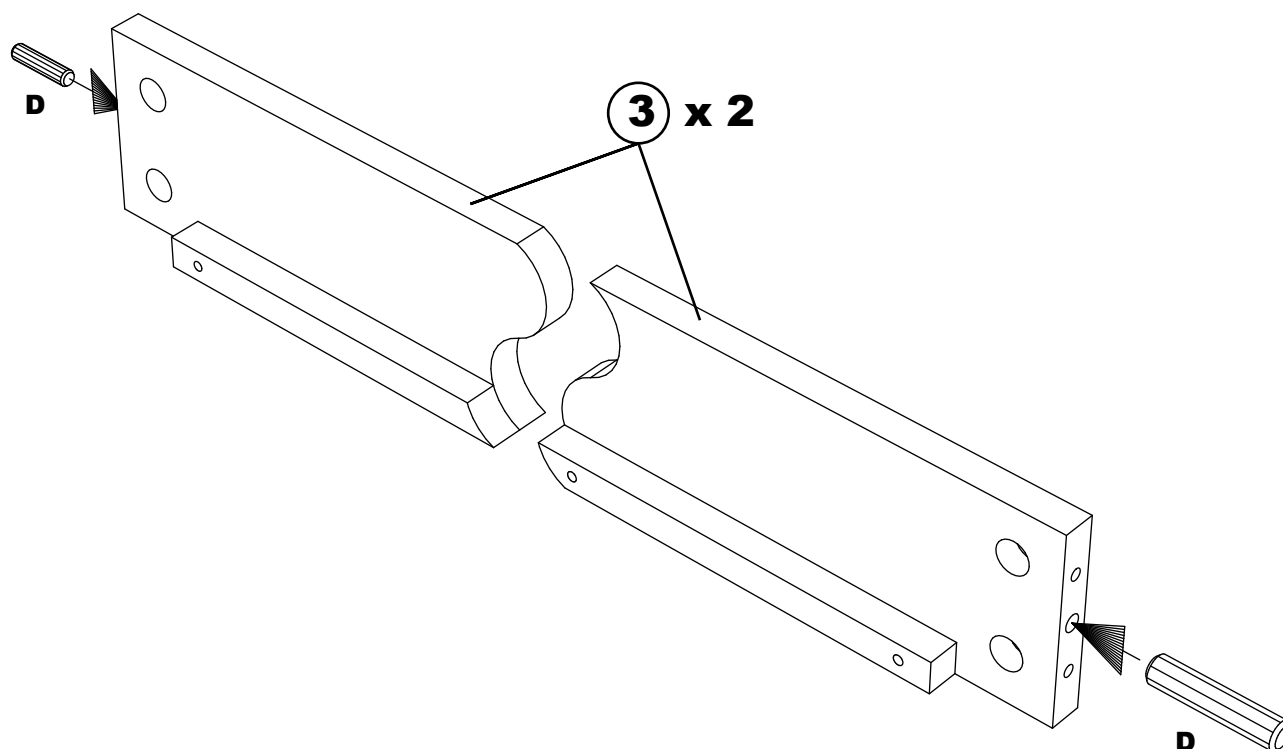


Step: 4
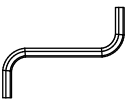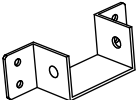
|          |                                                                                   |                      |          |                                                                                                             |          |                                                                                                                 |
|----------|-----------------------------------------------------------------------------------|----------------------|----------|-------------------------------------------------------------------------------------------------------------|----------|-----------------------------------------------------------------------------------------------------------------|
| <b>C</b> |  | Allen Key<br>Qty: 01 | <b>A</b> | <br>Ø 6 x 100mm    Qty: 08 | <b>B</b> | <br>Half Moon<br>Qty: 08      |
|          |                                                                                   |                      | <b>F</b> | <br>Ø 3 x 15mm    Qty: 08  | <b>G</b> | <br>Support Metal<br>Qty: 02 |

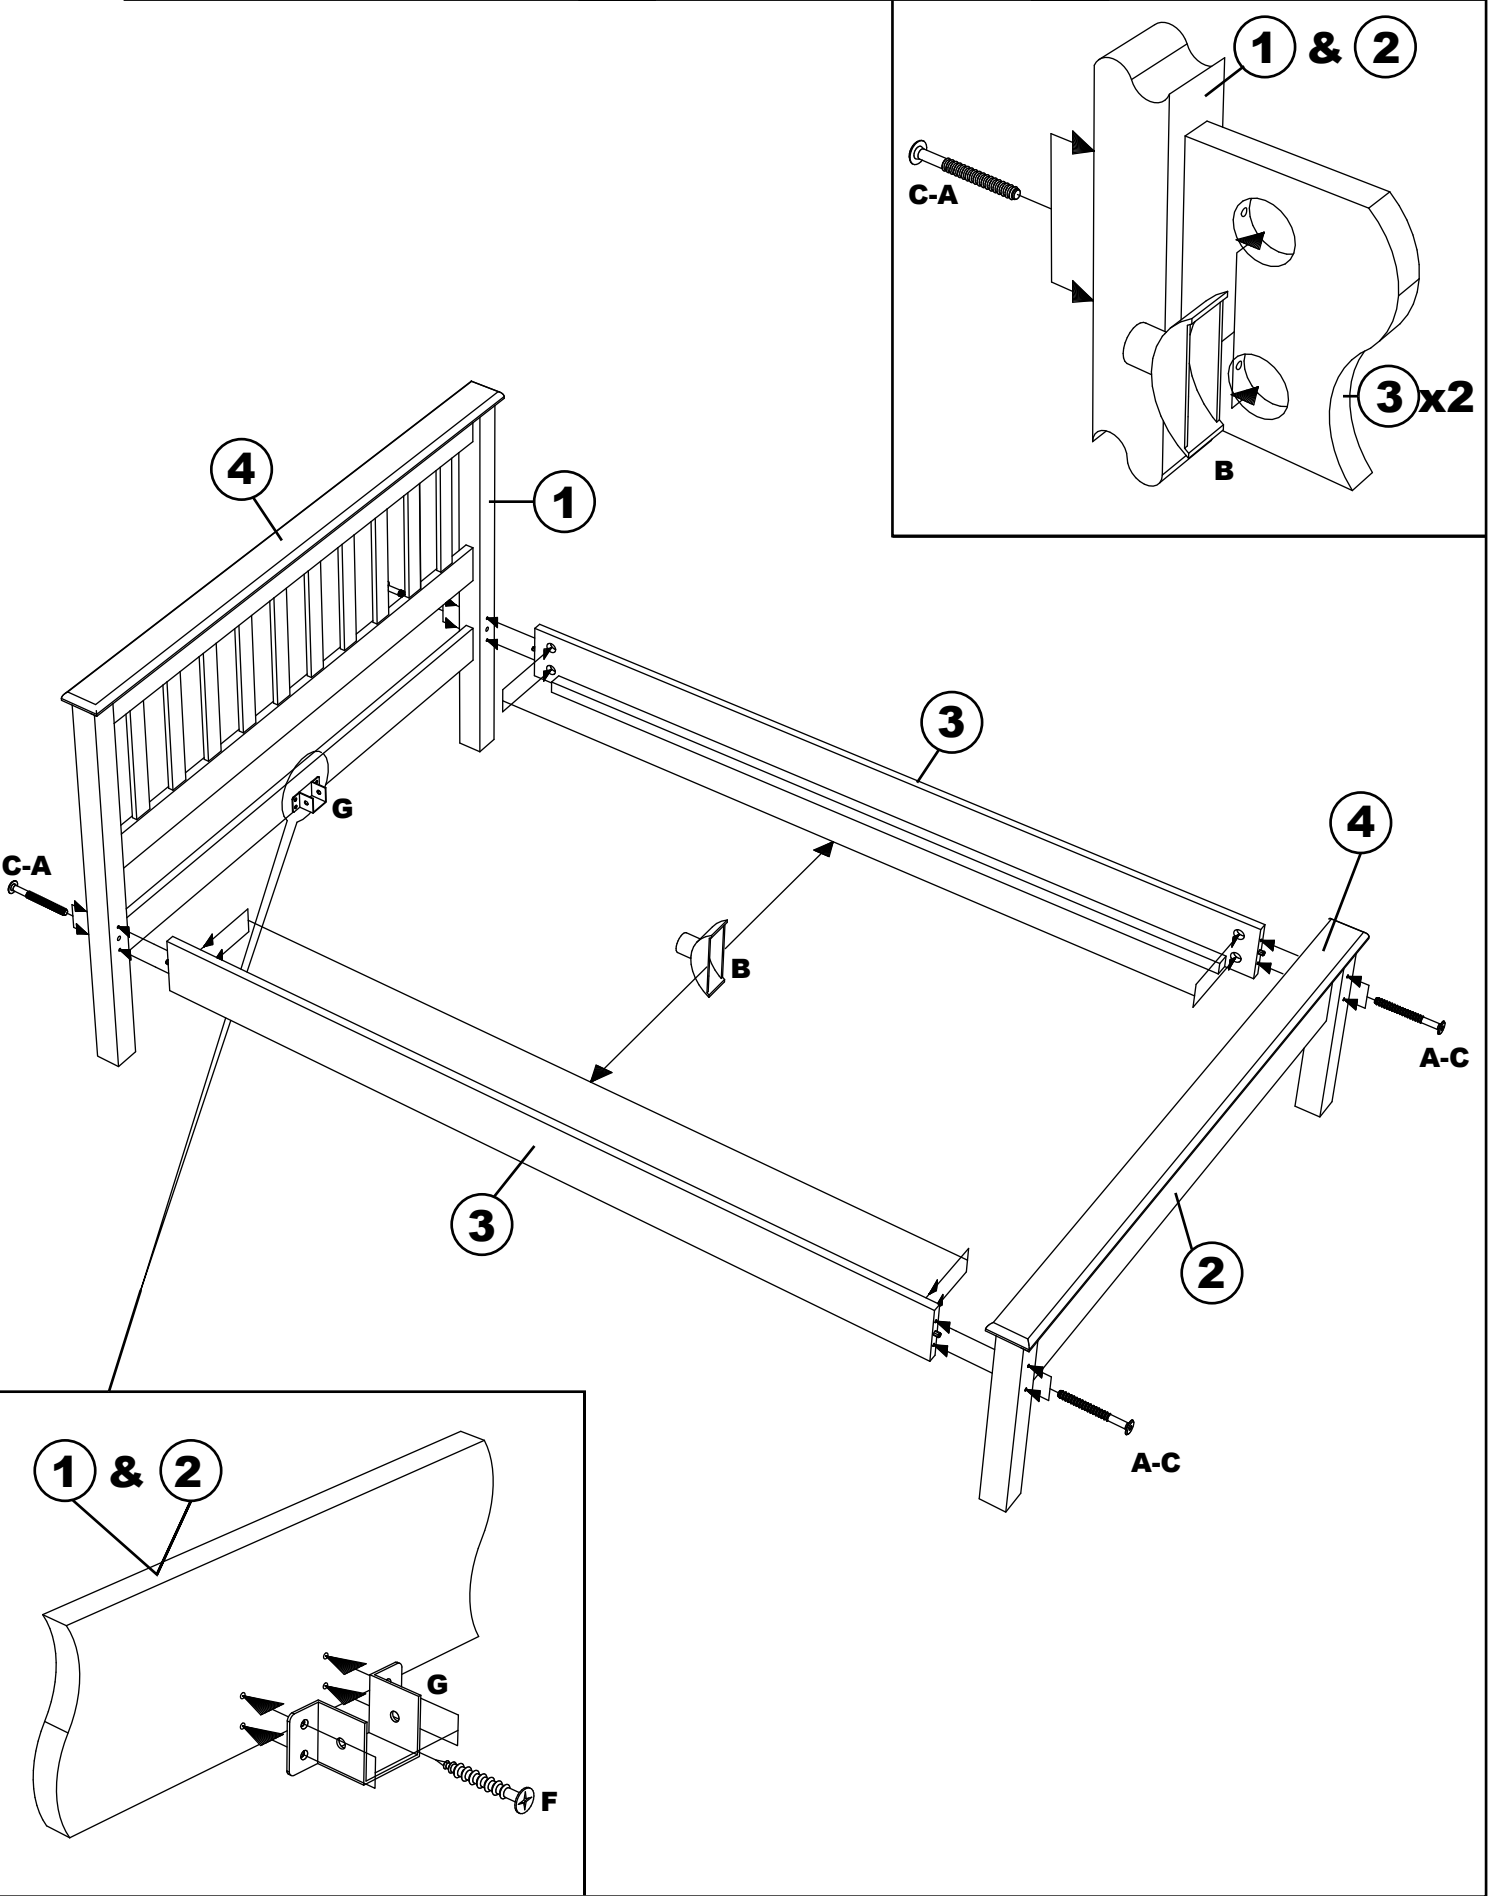

## Step: 5

**C**

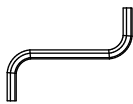

Allen Key


Qty: 01

**H**




Ø 6 x 45mm

Qty: 02

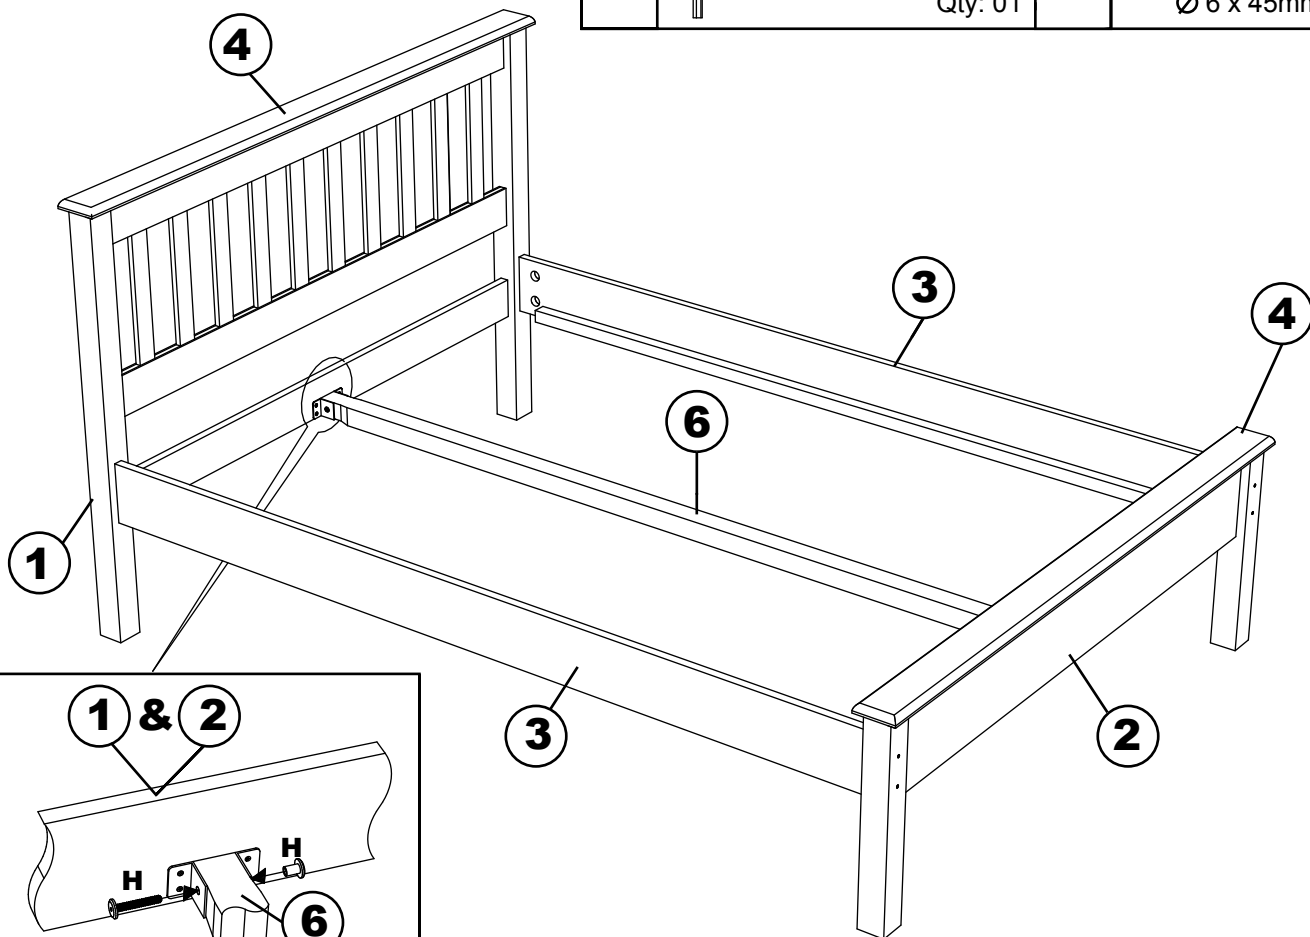

## Step: 6


**E**



Ø 4 x 30mm

Qty: 24

**I**



Spacer

Qty: 02

