


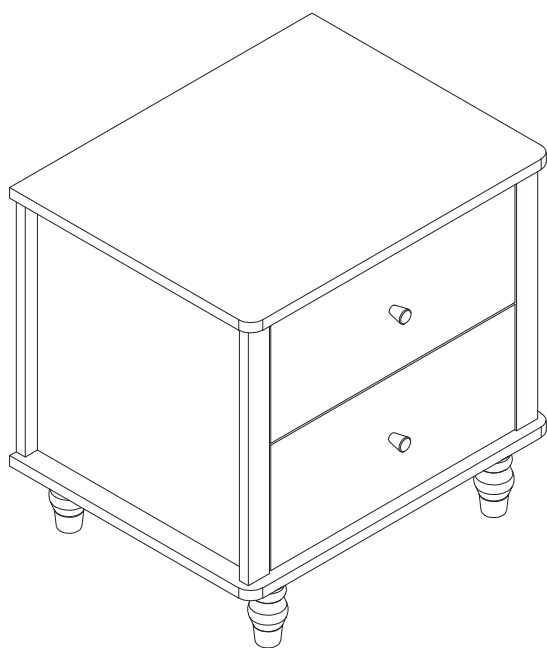
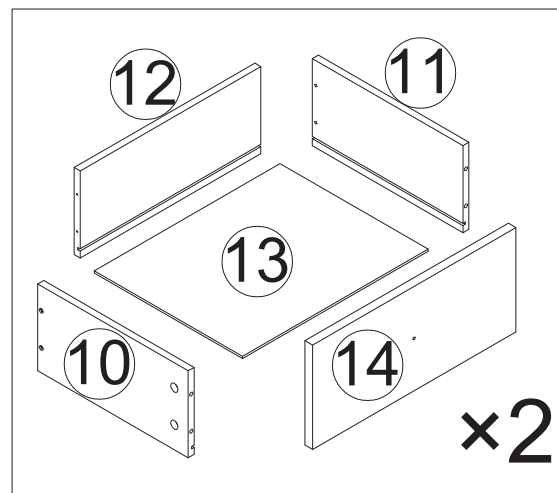
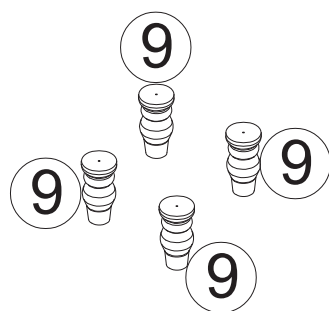
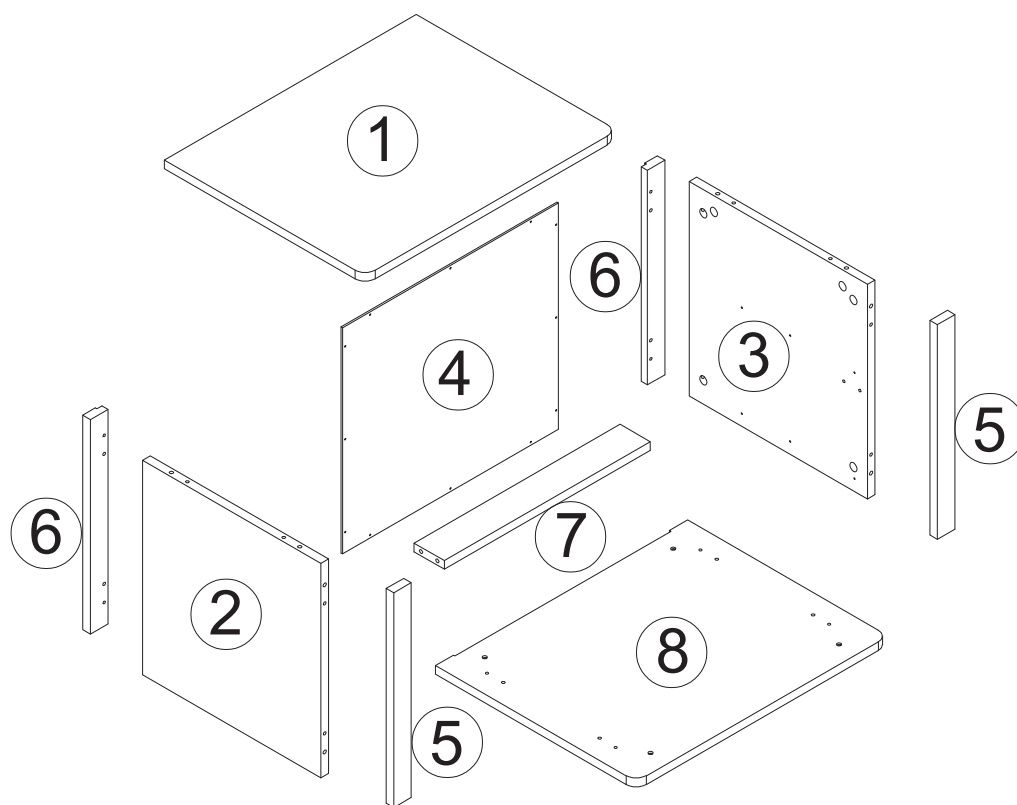








|                                                                                         |                                                                                                   |                                                                                          |                                                                                                    |                                                                                           |                                                                                                      |                                                                                                     |
|-----------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------|
|  A×24 |  B×24          |  C×16 |  D×24<br>3×12mm |  E×2   |  F×12<br>4×35mm |  G×4<br>4×40mm |
|  H×1  |  I×2<br>4×18mm |  J×12 |  CL×2           |  DL×2 |  CR×2           |  DR×2          |






## STEP 1

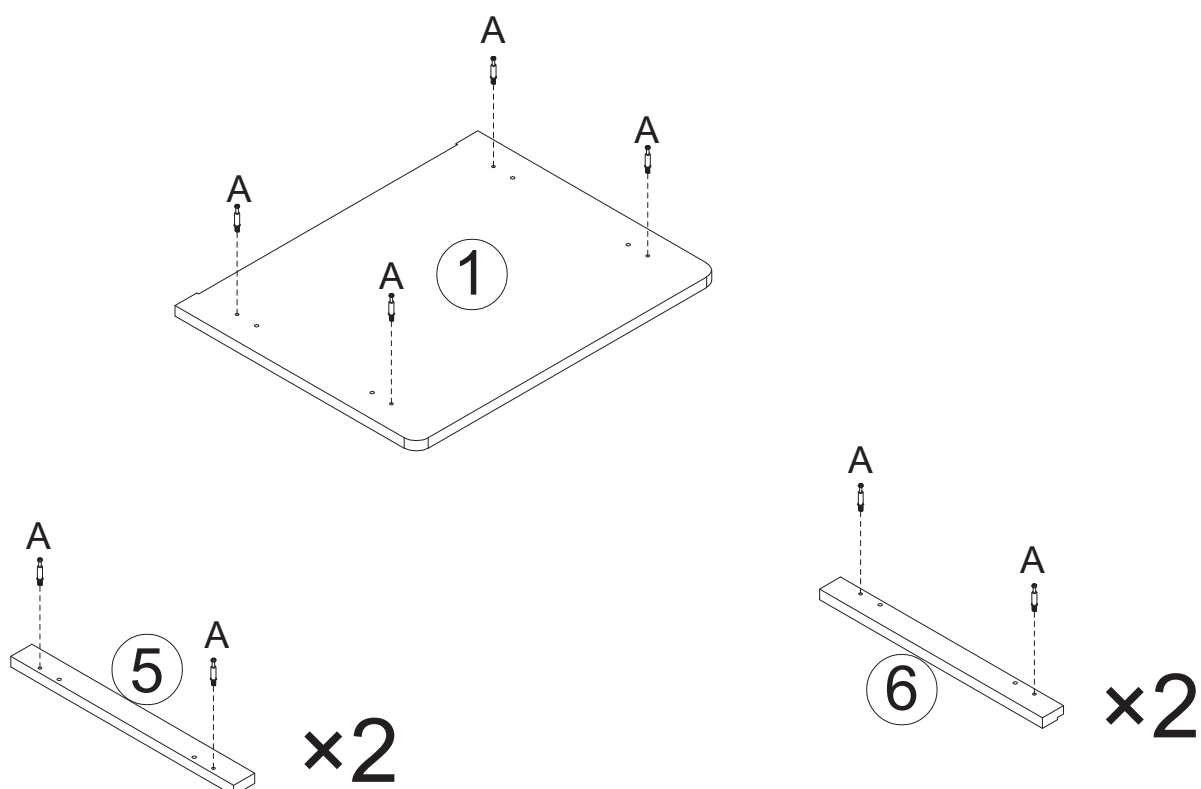


## STEP 2

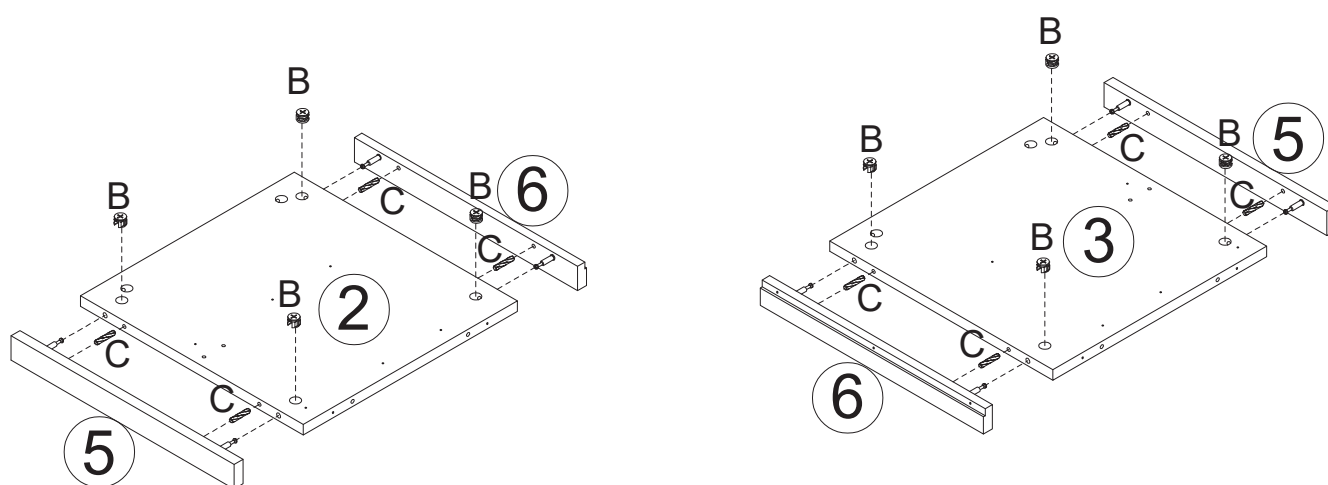



## STEP 3

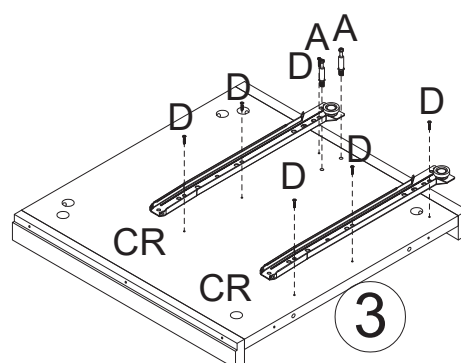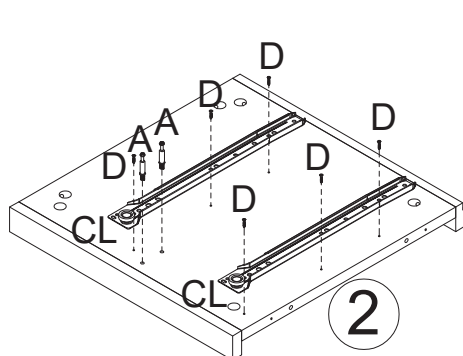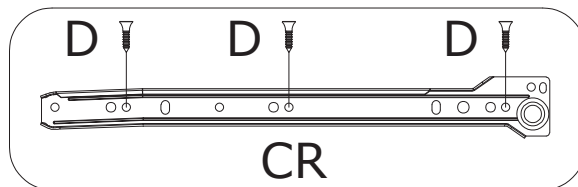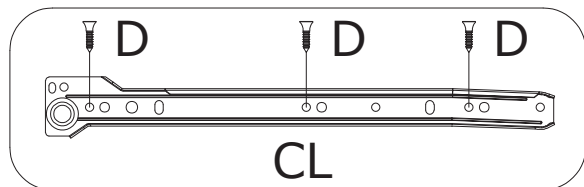



## STEP 4

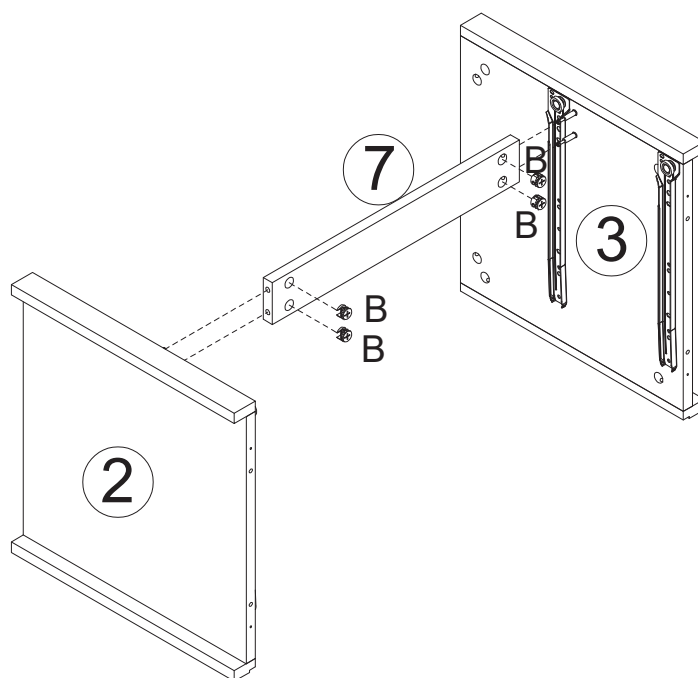



## STEP 5

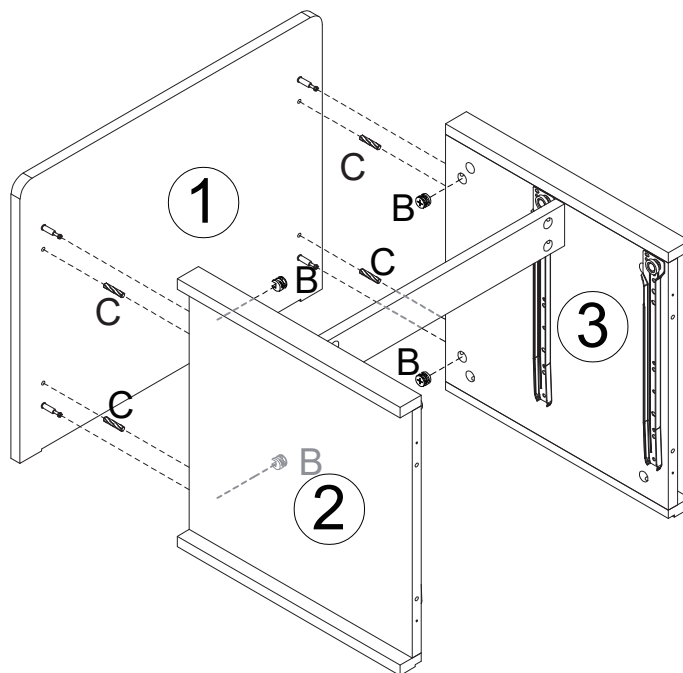



## STEP 6

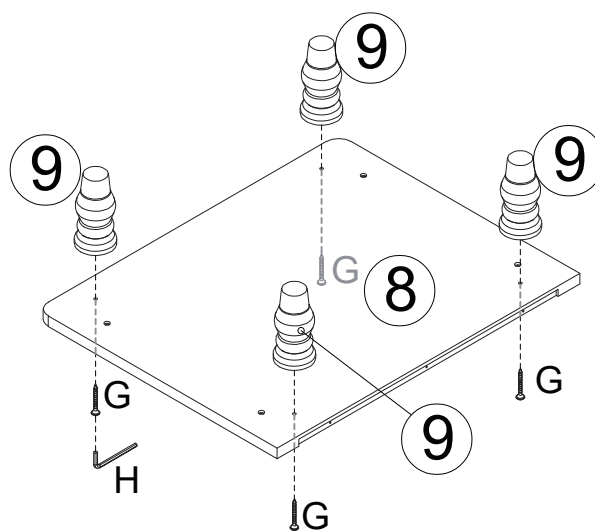

## STEP 7

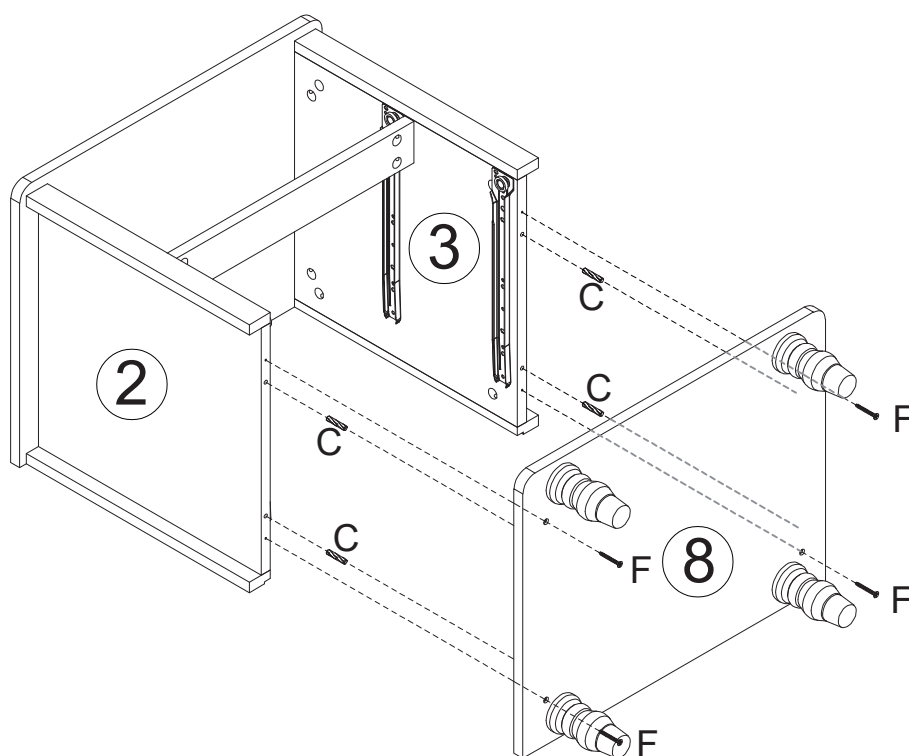



## STEP 8

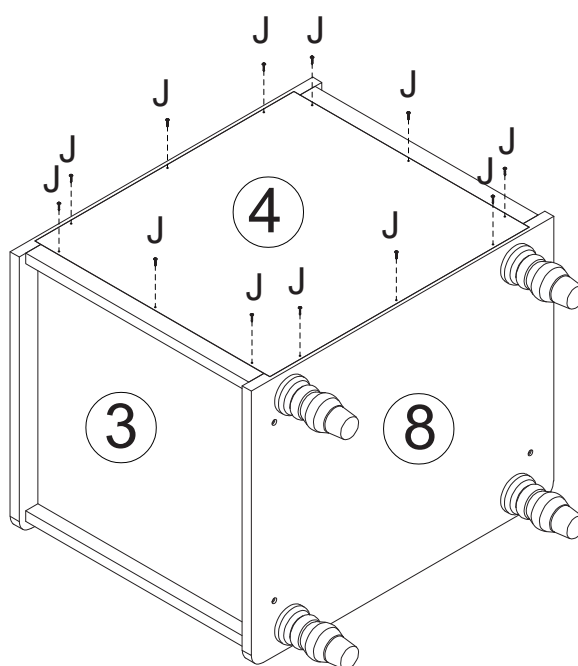



## STEP 9

|                                                                                       |                                                                                       |                                                                                                 |                                                                                                  |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|
|  A×8 |  E×2 |  F×8<br>4×35mm |  I×2<br>4×18mm |
|---------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------|


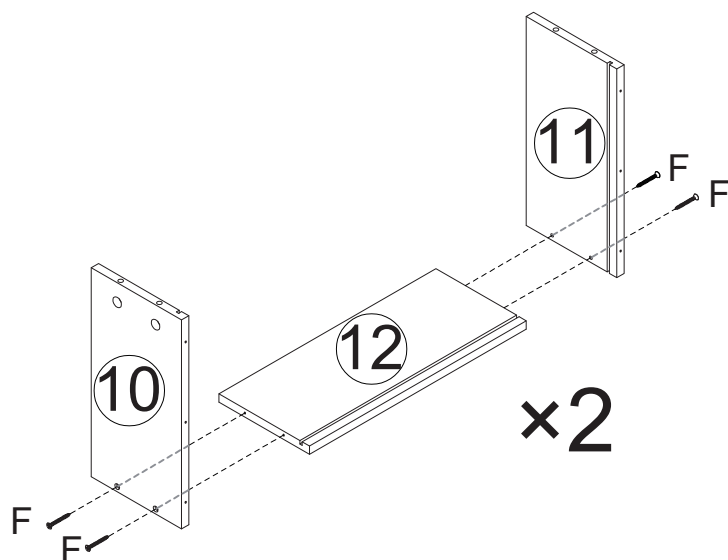
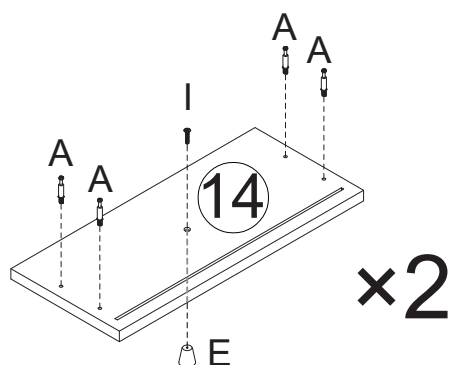


## STEP 10

|                                                                                         |
|-----------------------------------------------------------------------------------------|
|  B×8 |
|-----------------------------------------------------------------------------------------|

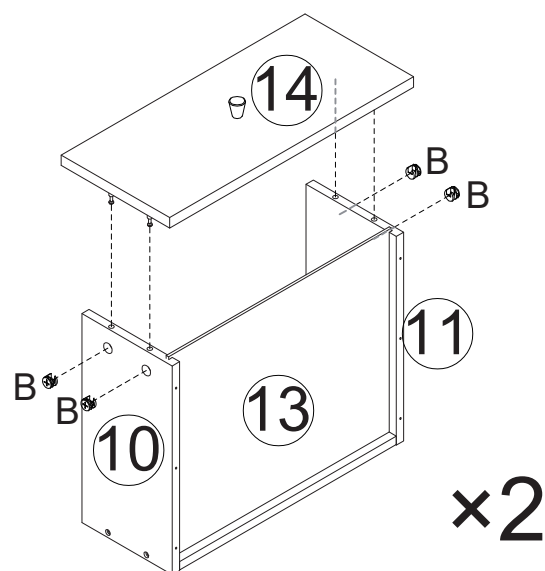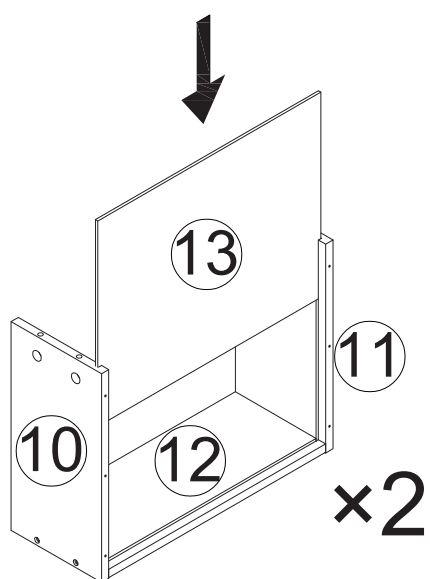

## STEP 11

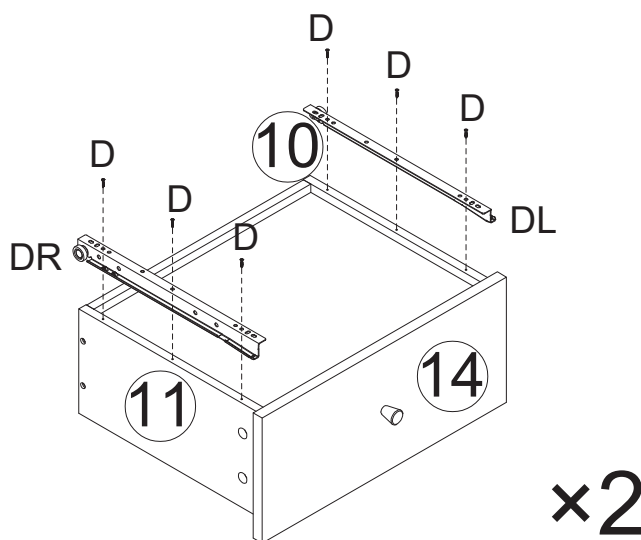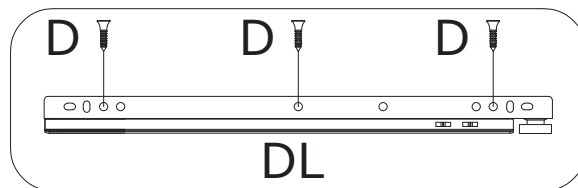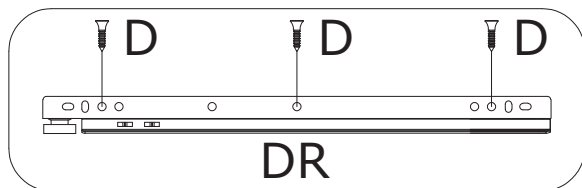

## STEP 12

### Drawer Installation Tip

Tilt the drawer downward toward the cabinet to align the rollers, then push it in smoothly. Adjust if the panel looks uneven.

