

(KING BED)

ASSEMBLY INSTRUCTION

MODEL : G98BD-KB-FB


10-MAY-14

STEP 1

NO	PART LIST	QTY
1	FOOT BOARD	1pc
2	LEG	2pcs
3	CROWN	1pc

HARDWARE PART 1

NO	HARDWARE DESCRIPTION	QTY
A.	Wood Dowel M12 x 50mm	2PCS
B.	70mm Bolt	2PCS
C.	35mm Bolt	4PCS
D.	Allen Key	1PC
E.	Wood Button M15x8mm	2PCS

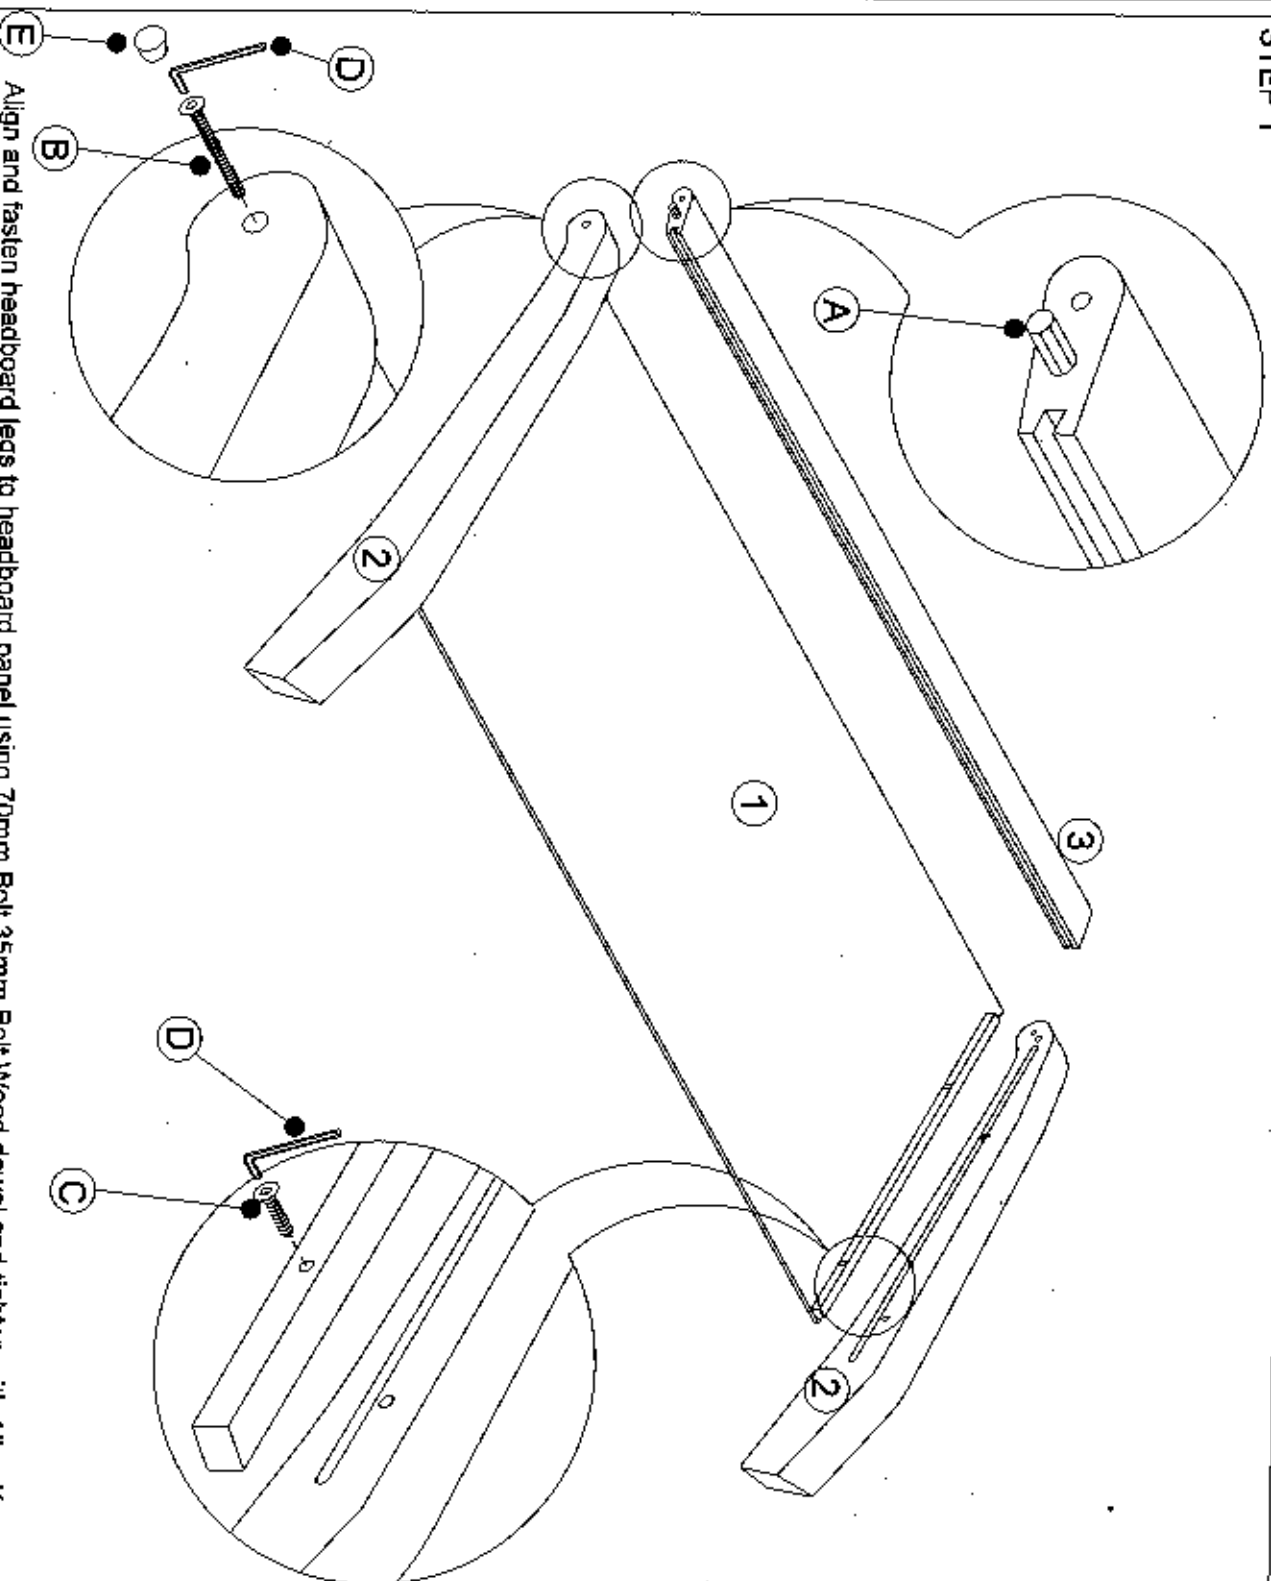

(KING BED)

ASSEMBLY INSTRUCTION


MODEL : G6800-KG-HB

NO	PART LIST	QTY
1	HEAD BOARD	1pc
2	LEG	2pcs
3	SUPPORT PANEL	1pc

HARDWARE PART 1

NO	HARDWARE DESCRIPTION	QTY
A.	25mm Bolt 	6PCS
B.	70mm Bolt 	2PCS
C.	35mm Bolt 	2PCS
D.	Allen Key 	1PC
E.	Wood Dowel 18 x 30mm 	4PCS
F.	Wood Botton M15 x 9mm 	2pcs

STEP 1

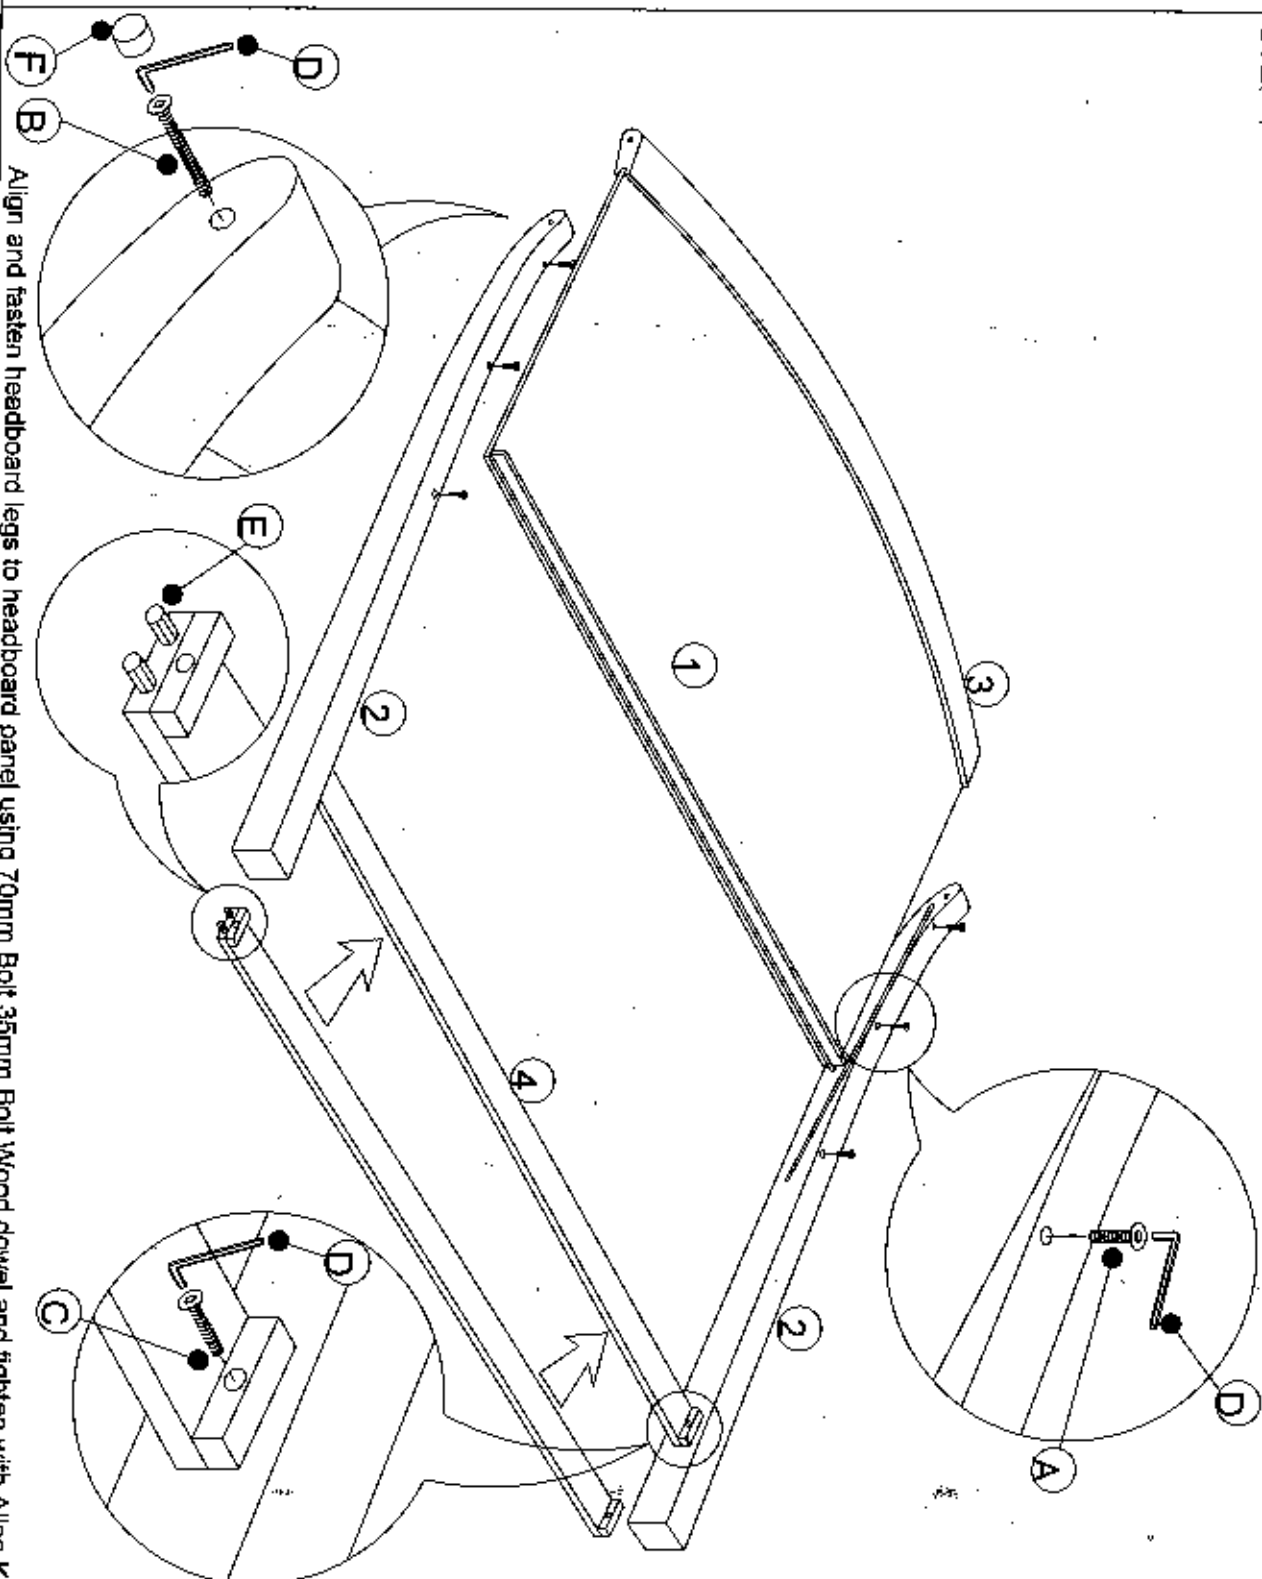

Align and fasten headboard legs to headboard panel using 70mm Bolt, 35mm Bolt, Wood dowel and tighten with Allen Key.

(KING BED)


ASSEMBLY INSTRUCTION

MODEL : G9800-KB-SR

NO	PART LIST	QTY
1	HEAD BOARD	1pc
2	FOOT BOARD	1pc
3	SIDE RAIL	2pcs
4	SLAT	5pcs
5	SLAT SUPPORT	10pcs
NO	HARDWARE PART 3	QTY
A	SCREW M4 x 32mm	10pcs
B	ADJUSTER M8 x 23mm	10pcs
C	SCREW M8	8pcs
D	35mm BOLT	10pcs
E	ALLEN KEY	1pc


STEP 1

Attach the bed rails to Head Board and tighten with screw driver (not included).

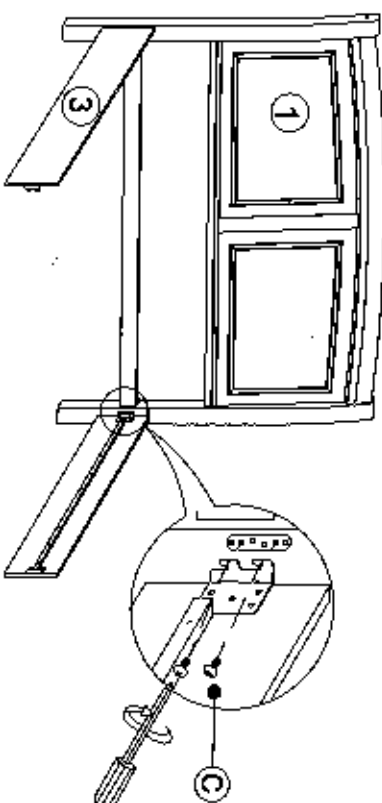


STEP 2

Repeat Step 1 to joint Foot Board.

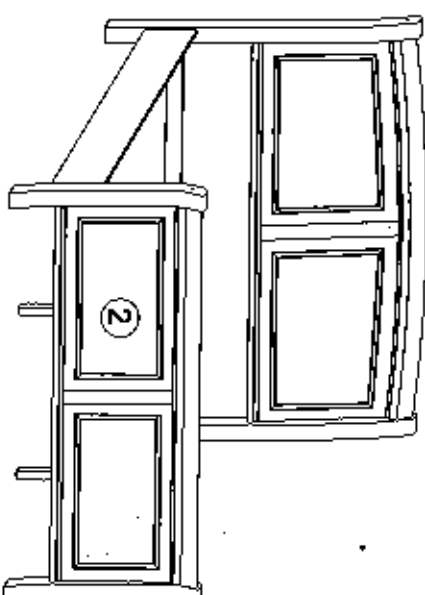


STEP 3

Align and fasten bed slats support to bed slat using 35mm Bolt and tighten with Allen Key. Align & fasten bed slat to bed rails using screw and tighten with screw driver (not included).

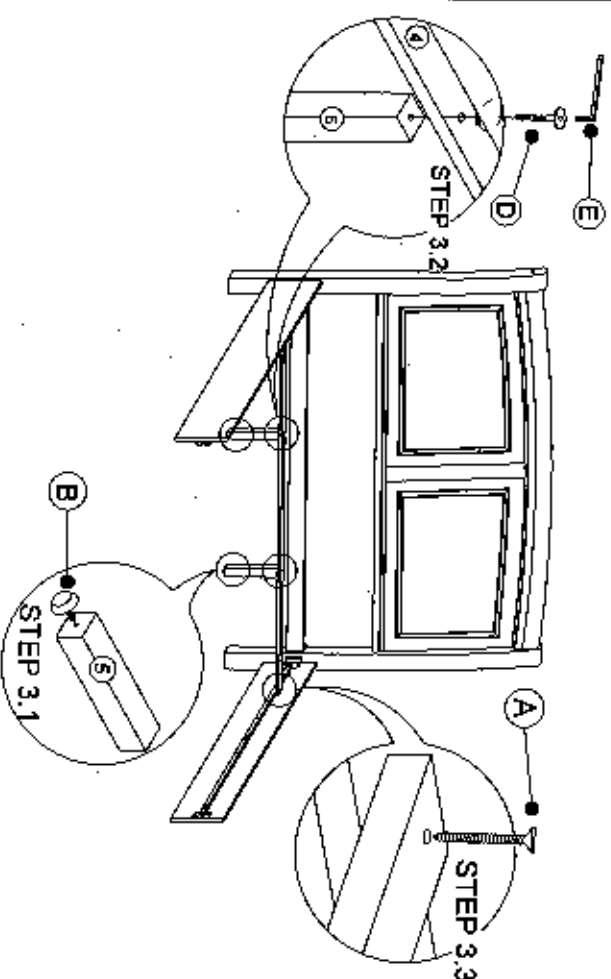

STEP 4

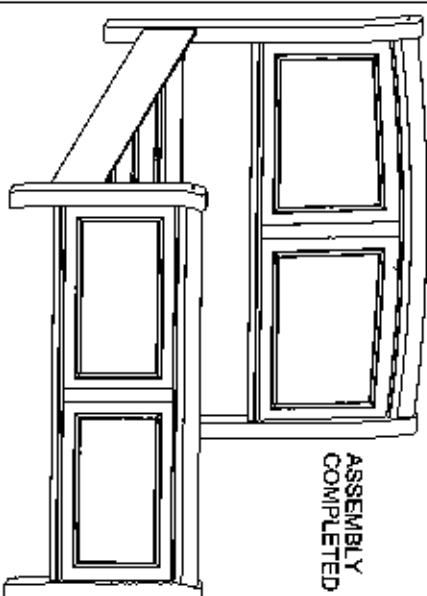

ASSEMBLY
COMPLETED

* TOTAL SLAT : 5PCS (WITH JOBC HOLE) + 10PCS (SLATS SUPPORT)